

Product information

A: Scroll-wheel and third button Battery-low LED (lit flashing)	F: Connection button G: Motion sensor	J: Charging LED Red steady: charging
B: Left button	H: Battery compartment	Green steady: fully charged
C: Right button	I: Status LED Blue flashing: mouse movement	K: Connection button
D: Browser forward button		L: Power adapter jack
E: Browser backward button		M: USB to PS/2 converter

UK

Installation

1 Insert batteries

1 Connect power to cradle

Charge batteries

PC off

⚠ If use PS/2: connect USB to PS/2 converter to receiver; connect receiver to PC; PC on; go to 5!

2 Connect USB

Windows 98SE: go to 3; Windows ME/2000/XP/2003: go to 4

PC on

3 Press [Enter] key

Follow Hardware Wizard to finish

4

⚠ Windows98SE: Need Windows 98SE CD!

5 Press connection button; Status LED flashing

Press connection button

6 Mouse is ready to use

To configure the buttons: install software. Go to 7

Install Trust Easy Configuration Software

7 Computer on; Place CD in CD-ROM

8 Click "Install software"; Follow on screen instructions to finish

⚠ Restart system when prompt!

Reminder

))) Less performance

 
⚠ Metal objects close to or between the device

⚠ Material of the surface which may cause sensor imprecision. Use a mousepad to avoid it

⚠ Follow step 5 and 6 to change channel in case of disturbance

⚠ Batteries (almost) empty

⚠ Another wireless device is close by

**General usage**

⚠ Adjust the speed of mouse pointer: (1) Open Windows Help (Start → Help). (2) Search "adjust the speed of mouse pointer". (3) Follow instructions.

⚠ Keep mouse on cradle no longer than 48 hours

⚠ Read the manual on CD for the use of the configuration program

⚠ Do not use old and new batteries at the same time, because the old batteries may deplete the new ones

⚠ "MI7200L" in Startup remembers the settings; do not remove it

Safety

- Do not open or repair this device.
- Keep this device away from liquids, such as water.
- Never throw the batteries onto an open fire. The batteries may explode.
- Do not attempt to recharge alkaline batteries. There is a danger of them exploding.
- Keep the batteries out of the reach of small children.



- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/14420/ce

Wireless

- This wireless device works at a frequency of 27MHz. It meets the essential requirements and other relevant conditions of R&TTE Directive 1999/5/EC and can be used in EU countries plus: EU candidates and NO/CH/RU/HR/IS/UA. There are no limitations per channel for the above-mentioned countries. Go to www.trust.com/14420 for an updated list of the countries where the use of this device is permitted.
- There may be restrictions for the use of this device outside of the EU. If this device is used outside of the EU, check whether this device meets local regulations. Frequency: 26.995~27.245MHz, Bandwidth: 50KHz, Power: < 1mW.
- Nowadays, there are an increasing number of wireless products (video, audio, computer, etc.) which work in the same frequency range as this device. It may, therefore, be possible that the functionality of this product is limited by or is limiting for other wireless products. This can only be avoided by paying attention to the distance between products and, where possible, by changing channels.
- Be careful when using wireless devices if you have a pacemaker or are dependent on other life-saving, sensitive electronic equipment, because this product transmits radio signals.

Warranty & copyright

- This product has a two-year manufacturer's warranty which is effective from the date of purchase. For more information see www.trust.com/warranty
- Reproduction of this manual or any part of it is prohibited without permission from Trust International B.V.