

Meovo

THE DISPLAY CHOICE OF PROFESSIONALS

**DF-55 Dual-Sided Display** 

<u>User Manual</u>

www.agneovo.com

# **TABLE OF CONTENTS**

<b>Import</b>	ant Safety Instructions	1
1.1	Safety precautions and maintenance	1
1.2	Use	4
1.3	Installation Notes	6
Packa	ge Content	9
2.1	Unpacking	9
2.2	Accessories	11
2.3	Overview	13
Setting	g Up the Display	15
3.1	Step1 : Tear down the downside covers	15
3.2	Step2: Place the upside part into downside part	16
3.3	Step3 : Connect the LVDS and 24V	18
3.4	Step4 : Reinstall the downside covers	19
3.5	Step5: Open the user door, Connect by HDMI connector	20
3.6	DF-55 Full Size Stand installation	21
3.7	DF-55 Full Size Stand counterweight mounting position	23
3.8	Using the Remote Control	24
3.9	OSD Setting Menu	25
Troubl	e shooting	29
Specif	ications	30
Produ	ct Dimensions	31

#### 1.1 Safety precautions and maintenance



#### **WARNING:**

Use of control, adjustments or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

# Read and follow these instructions when connecting and using your display:

#### **Operation:**

- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Remove any object that could fall into ventilation holes of power box or prevent proper cooling of the display's electronics.
- Don't block the ventilation holes on the power box.
- When positioning the display, make sure the power plug and outlet are easily accessible.
- When turning off the display by detaching the power cord, wait 6 seconds before re-attaching the power cord for normal operation.
- Ensure the use of an approved power cord provided by AUO at all times. If your power cord is missing, please contact your local service center.
- Don't subject the display to severe vibration or high impact conditions during operation.
- Don't knock or drop the display during operation or transportation.
- Provide an earthing connection before the mains plug is connected to the mains. And, when disconnecting the earthing connection, be sure to disconnect after pulling out the mains plug from the mains.

#### **Maintenance:**

- To protect your display from possible damage, do not put excessive pressure on the display.
- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your display.
- To avoid the risk of shock or permanent damage to the set, do not expose the display to dust, rain, water or an excessively moist environment.
- If your display becomes wet, wipe it with dry cloth as soon as possible.
- If a foreign substance or water gets in your display, turn the power off immediately and disconnect the power cord. Then remove the foreign substance or water.
- Don't store or use the display in locations exposed to heat, direct sunlight or extreme cold.

# Read and follow these instructions when connecting and using your display:

- Unplug the display if you are not going to use it for an extensive period of time.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use alcohol, solvents or ammonia-based liquids.
- Consult a service technician if the display does not operate normally after having followed the instructions in this manual.
- Keep the display out of direct sunlight and away from stoves or any other heat sources.
- Remove any object that could fall into the vents or prevent proper cooling of the display's electronics.
- Don't block the ventilation holes on the power box.
- Keep the display dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- When turning off the display by detaching the power cable or DC power cord, wait for 6 seconds before re-attaching the power cable or DC power cord for normal operation.
- To avoid the risk of shock or permanent damage to the set do not expose the display to rain or excessive moisture.
- When positioning the display, make sure the power plug and outlet are easily accessible.

#### 1.2 Use

#### **Remote Controller Precautions:**

 This product requires remote switch (ON/OFF) from Front Side; the Back Side only has OSD function operated by remote controller.

#### Front Side (700 nits)



The Front Side have a user door.


#### Back Side(700 nits)



#### **Disconnect devices:**


 For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

#### 1.3 Installation Notes

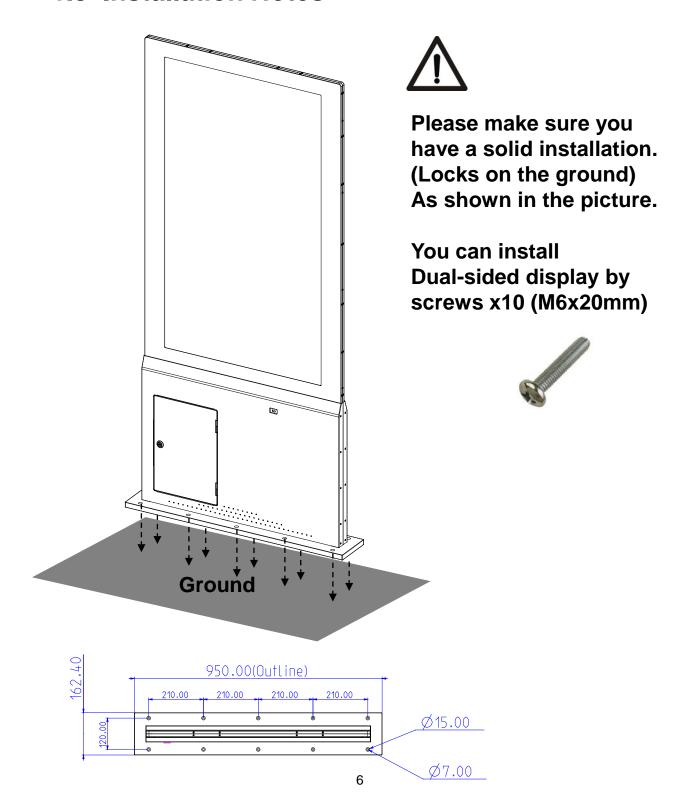


#### **IPC** installation:

- Dual-sided display (DF-55) contains a metal plat, it is used to fix your IPC.
- The relative position of the screw holes is shown below. You can choose the suitable screw holes to use.
- The dimensions of IPC space: 270\*181\*26.5mm

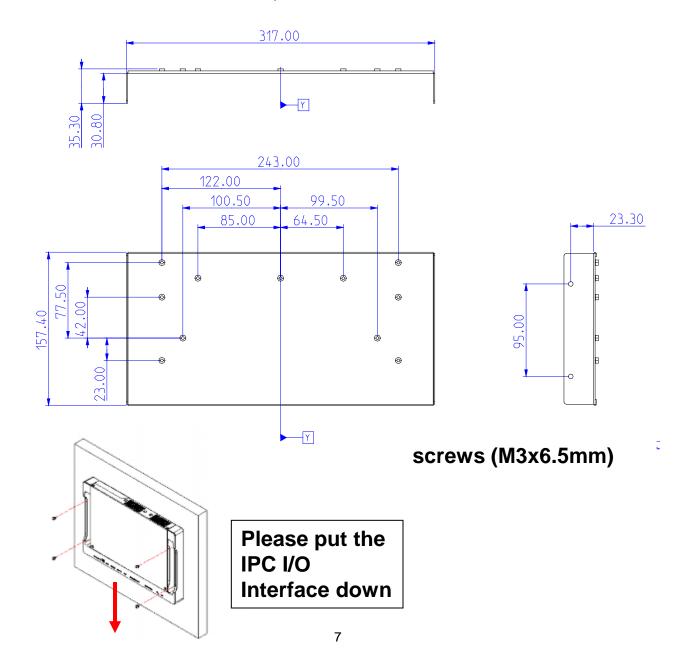



#### **IPC** installation:

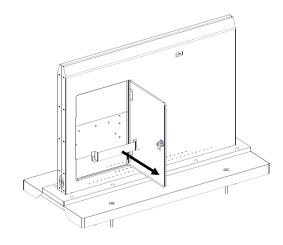



Tear down the IPC fixed sheet metal first

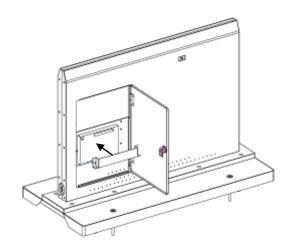

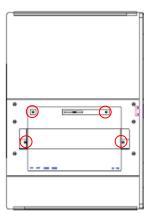





#### IPC01

Set & fix the IPC & Reinstall the IPC fixed sheet metal

By screws x 4 (M3x6.5mm)

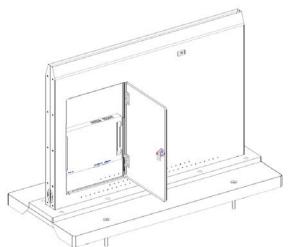

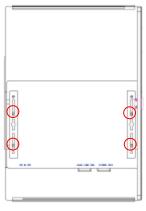


#### IPC02


Set & fix the IPC (Don't need reinstall the IPC fixed sheet metal)

By screws x 4 (M3x6.5mm)


#### 2.1 Unpacking

- This product is packed in a carton, together with the standard accessories.
- Due to the size and weight of this display it is recommended for two people to move it.
- After opening the carton, ensure that the contents are complete and in good condition.

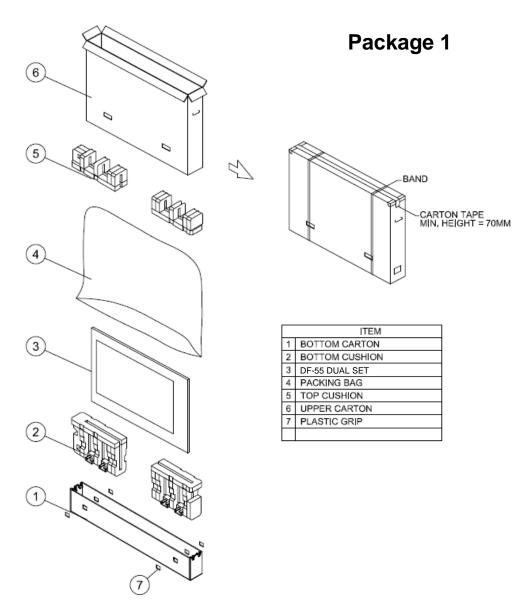


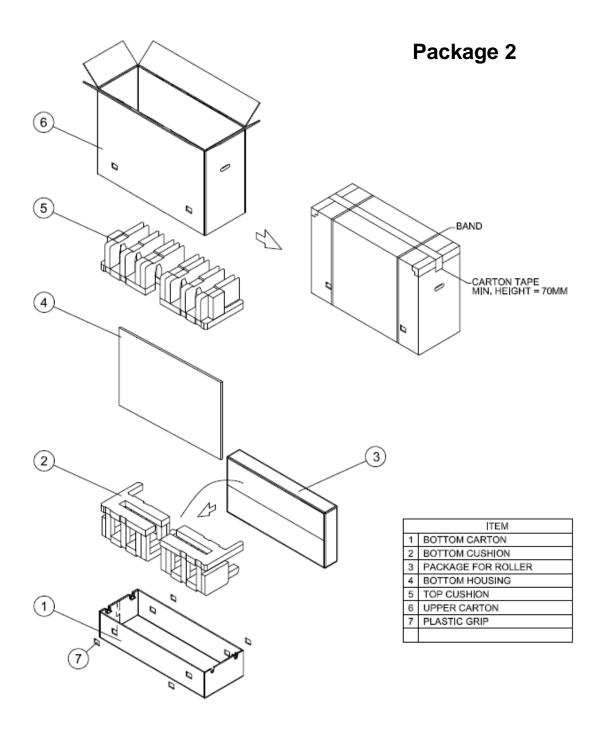

#### 2.2 Accessories

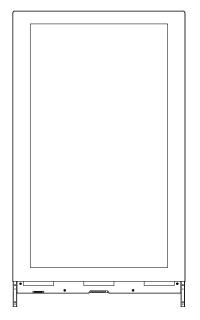

Dual-Sided Display (upside part : DF-55 dual set)

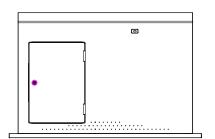

Dual-Sided Display (downside part : Bottom housing)



**Power Cord x1** 



Key x1




M5x30mm screw x2 M4x8mm screw x8



M6x20mm screw x10



Remote Controller x1 (Battery : CR 2025 3V)

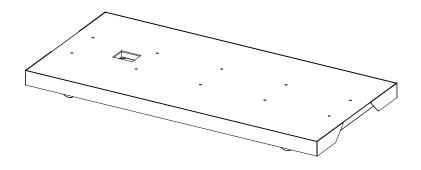

Full Size Stand (with wheels)




M10x100mm screw x4

#### 2.3 Over View

**Top View** 




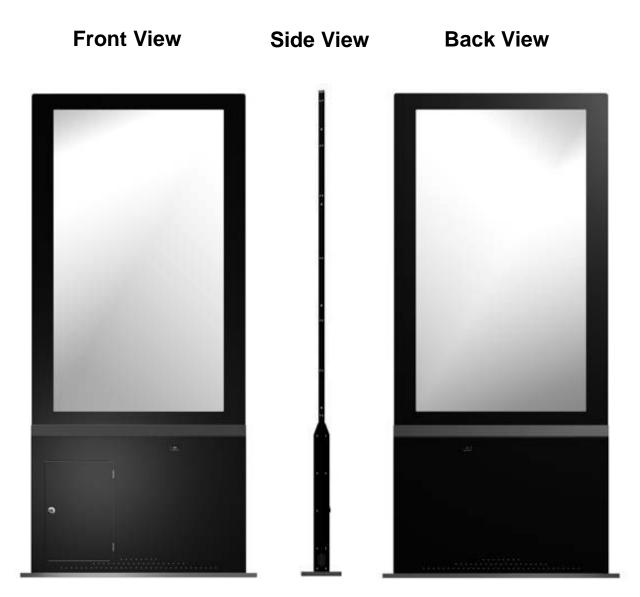




- 1. Display (Dual-sided)
- 2. Display Set
- 3. Remote control sensor (Dual-sided)
- 4. Stand (with use hole x 10)
- 5. User Door (with locker)


#### 3.1 Step1: Tear down the downside covers

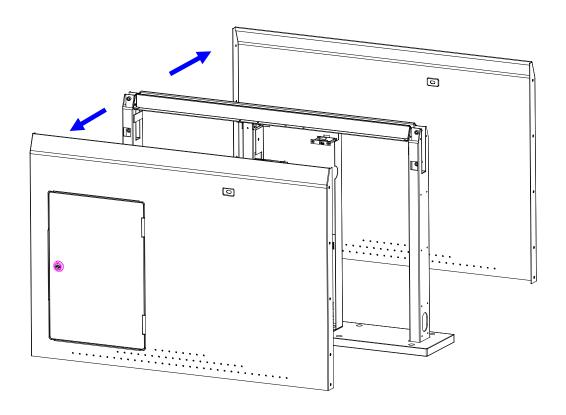


Putting the down half part upside, and tear down the downside covers. screws x 20 (M3x6mm)

# 3.2 Step2: Place the upside part into downside part

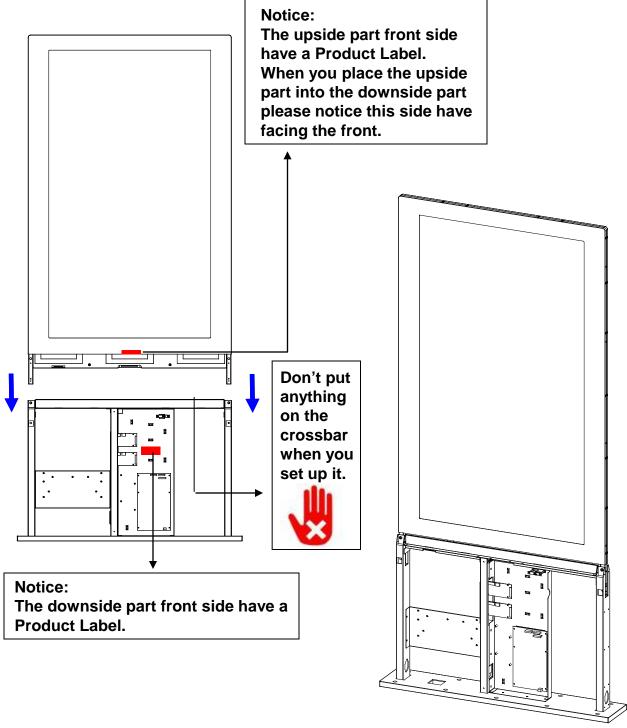


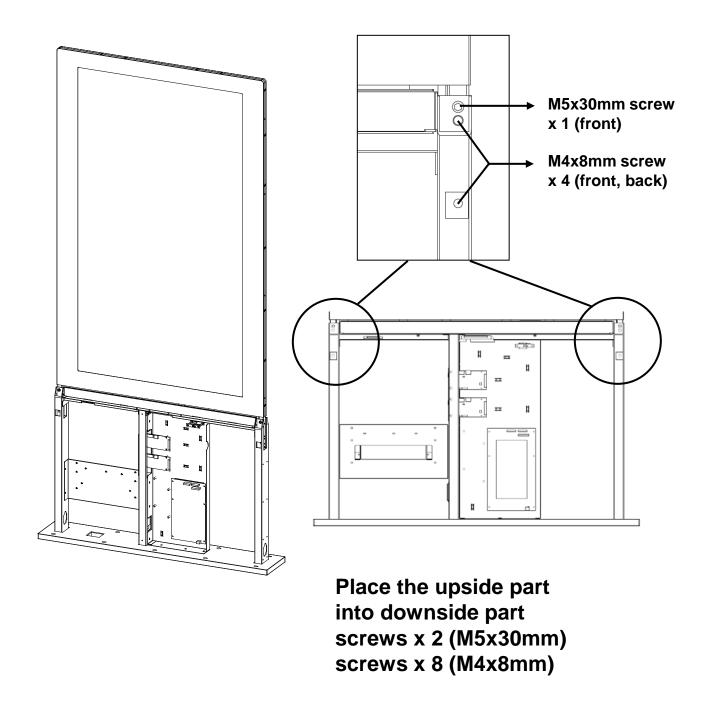


#### 3.3 Step3: Connect the LVDS and 24V

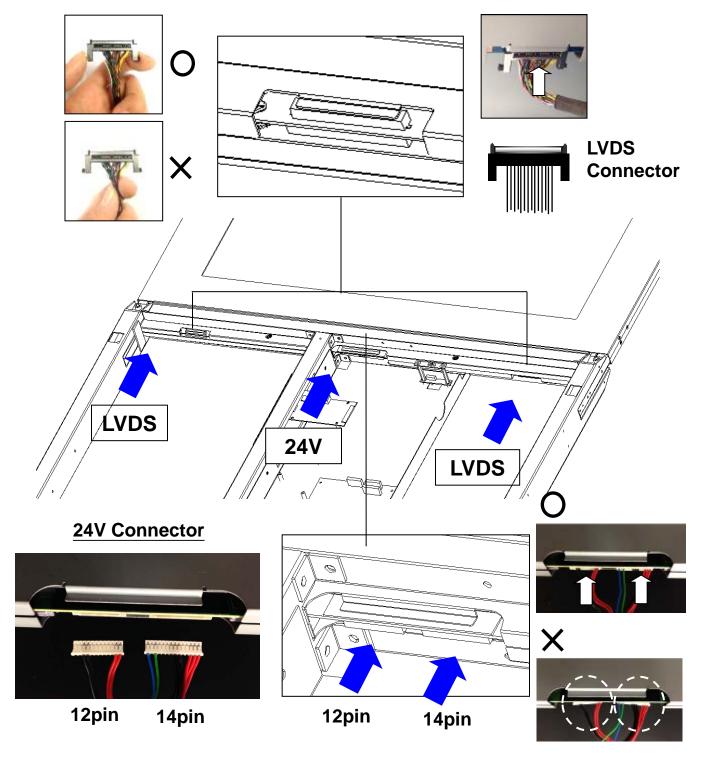


#### 3.4 Step4: Reinstall the downside covers

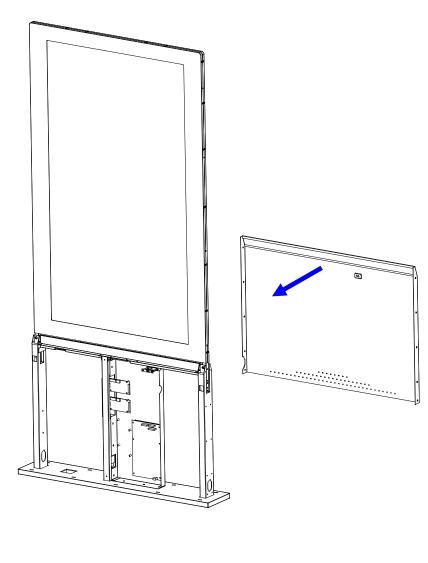

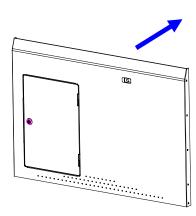



Reinstall the downside covers screws x 20 (M3x6mm)

# 3.5 Step5: Open the user door, Connect by HDMI connector & AC switch (power cord)

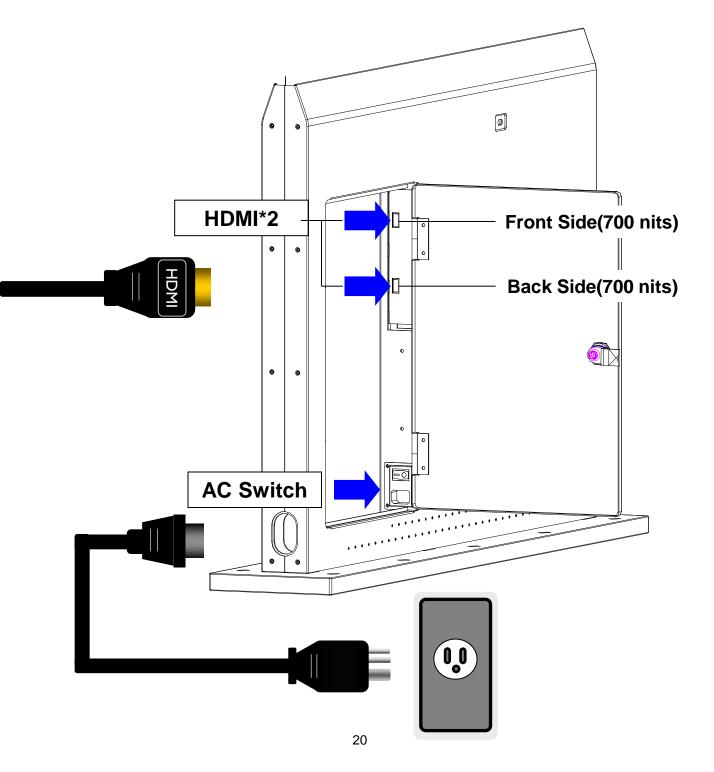


#### 3.6 DF-55 Full Size Stand installation

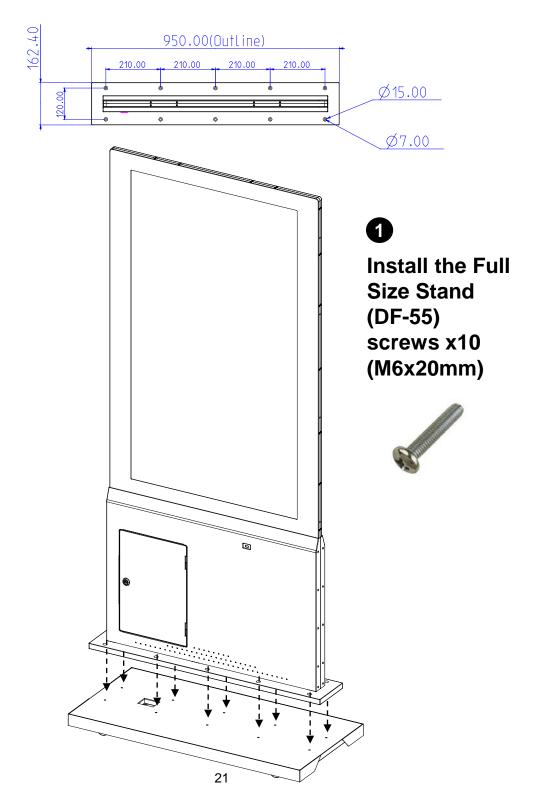


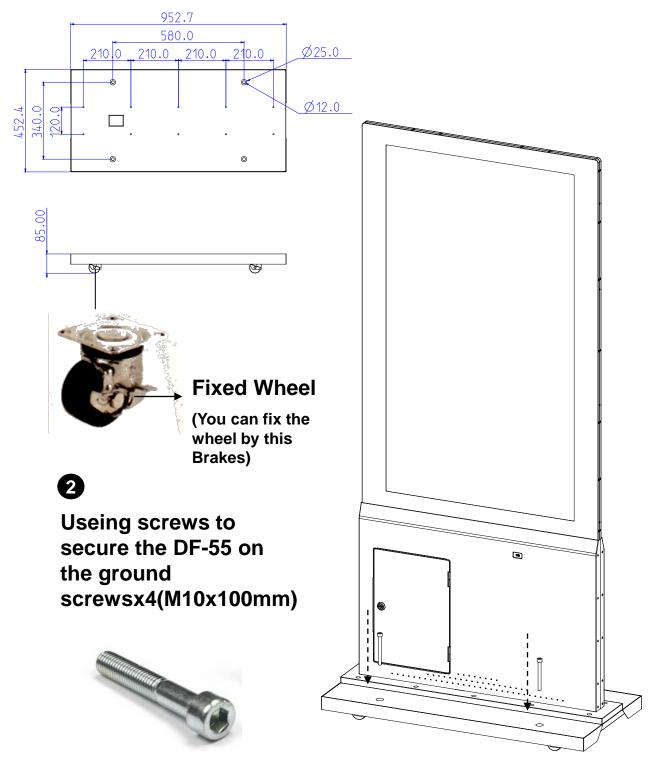

# 3.7 DF-55 Full Size Stand counterweight mounting position

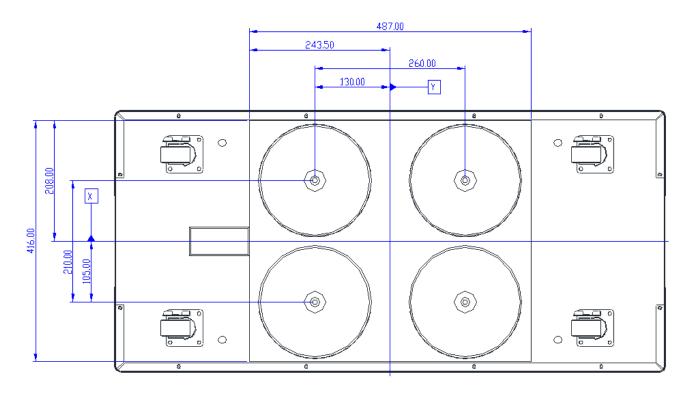

- The dimensions of Counterweight mounting position: 487\*416\*26.5mm
- Use M8 mounting screws x4
- Suggestion: the counterweight diameter of this working drawing is 195mm (as shown below)

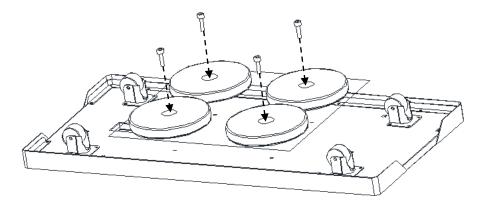


#### 3.8 Step8: Using the Remote Control



No.	Key	Descriptions	
1	Power	Power on/Power off	
2	Menu	Into OSD module	
3		Menu Up	
4	▼	Menu Down	
5	Exit	Menu/Exit selection	


#### 3.9 OSD Setting Menu

Press "MENU" into the OSD Setting Menu, and then press "UP" or "DOWN" to select the item, at last press "EXIT" to leave menu:

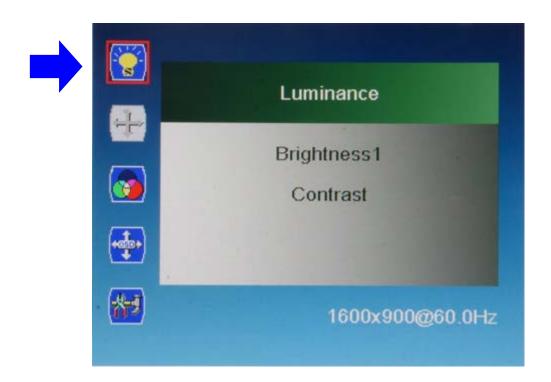

# Luminance Press MENU to select one of the following, and then press "UP" or "DOWN" to select the desired level, ---Brightness1: Range: 0~100; Default: : 100 ---Contrast: Range: 0~100; Default : 50

Press "MENU" into the OSD Setting Menu, and then press "UP" or "DOWN" to select the item, at last press "EXIT" to leave menu:

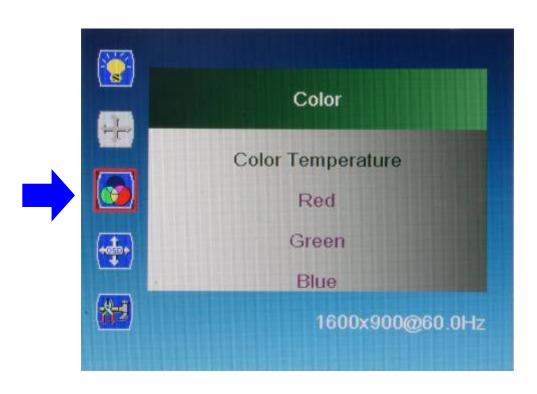


# Color Press MENU to select one of the following, and then press "UP" or "DOWN" to select the desired level, ---Color Temperature: Range: 6500K, 9300K, 11500K, User Define Default:: 9300K If you choose the User Define, you can adjusts red, green, blue gain and red, green blue offset; ---Red: 0~100; Default: 70 ---Green: 0~100; Default: 70 ---Blue: 0~100; Default: 70

Press "MENU" into the OSD Setting Menu, and then press "UP" or "DOWN" to select the item, at last press "EXIT" to leave menu:



OSD	Press MENU to select one of the following, and then press "UP" or
Settings	"DOWN" to select the desired level,
	Horizontal: 0~100 ; Default : 50
	Vertical: 0~100 ; Default : 50
	Transparency: 0~4 ; Default : 0
	OSD Time Out: 0~60; Default: 5
	OSD Rotation: 0(0°),1(90°),2(180°),3(270°); <b>Default</b> : 0(0°); <b>Setting Mode</b> : 3(270°) Portrait

Press "MENU" into the OSD Setting Menu, and then press "UP" or "DOWN" to select the item, at last press "EXIT" to leave menu:

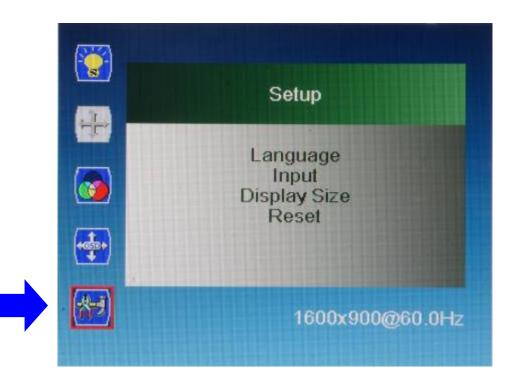

# Setup Press MENU to select one of the following, and then press "UP" or "DOWN" to select the item, ---Language: English / Español / Français / Deutsch / Italiano / Português / Русский /简体中文 / 日本語 / 繁體中文; Default :English ---Input: HDMI1 / HDMI2; Default :HDMI2 ---Display Size: Full Screen / Smart Fit / 4:3 / Smart4:3; Default : Full Screen ---Reset: No / Yes; Default : No

# **Trouble shooting**

Symptom	Possible Cause	Remedy
No picture is displayed	<ol> <li>The power cord is disconnected.</li> <li>The main power switch on the back of the display is not switched on.</li> <li>The selected input has no connection.</li> <li>The display is in standby mode.</li> </ol>	<ol> <li>Plug in the power cord.</li> <li>Make sure the power switch is switched on.</li> <li>Connect a signal connection to the display.</li> </ol>
Interference displayed on the display or audible noise is heard	Caused by surrounding electrical appliances or fluorescent lights	Move the display to another location to see is the interference is reduced.
Color is abnormal	The signal cable is not connected properly.	Make sure that the signal cable is attached firmly to the back of the display.
Picture is distorted with abnormal patterns	The signal cable is not connected properly.     The input signal is beyond the capabilities of the display.	1. Make sure that the signal cable is attached 2. Check the video signal source to see if it is beyond the range of the display. Please verify its specifications with this display's specification section.
After-Images can still be seen on the display after the display is powered off.	A still picture is displayed for an over extended period of time.	Do not allow a still image to be displayed for an extended period of time as this can cause a permanent after-image to remain on the display.

# Specifications

		<u> </u>	
	Model name	DF-55	
	Screen size	55 inch (diagonal)	
	Resolution	1920 x1080 (Pixel)	
	Display Area	1209.6(H) x 680.4(V)	
LCD Display 55"	Contrast Ratio	3000:1	
	Brightness	700 nits / 700 nits	
	View angle	178° (H); 178° (V)	
	Color Gamut	72 (%)	
	Surface Treatment	Haze 11%,3H	
Input Connectivity	HDMI*2		
	Input	AC100-240V,50-60Hz,2.7A	
Power	Power Consumption	230 W (typ.)	
	Light source	LED	
	Dimension	2029.7 x 861.9 x 23.4(U)/ 62.4(D) mm Stand: 452.4 x 952.7mm (Top view)	
SET	Weight	94.5 KG	
	Material	SECC	
	Surface Treatment	Painting in Black color	
	Dimension	1609*176*968 mm (box1)	
Packing		1068*400*735 mm (box2)	
	Weight	48 KG (box1), 62KG (box2)	
Environmental	Operating Temp.	0 ~ 40°C	
Conditions	Operating Humidity	20% ~ 80%	

# **Product Dimensions**

