

SALORA




WEKKERRADIO MET USB OPLADER 2 - 4
GEBRUIKERSHANDLEIDING


RADIO REVEIL AVEC CHARGEUR USB 5 - 7
MANUEL D' INSTRUCTIONS

ALARM CLOCK RADIO WITH 8 - 10
USB CHARGING
USER MANUAL

CR606USB

LOCATION OF CONTROL

1. Alarm 1 indicator
2. Alarm 2 indicator
3. USB charging port
4. DC5V jack
5. MINUTE / TUNING ◀◀ button
6. TIME / MEMORY button
7.  POWER ON/OFF / ALARM OFF / MODE button
8. HOUR / TUNING ▶▶ button
9. VOLUME - / ALARM 2 button
10. VOLUME + / ALARM 1 button
11. SLEEP button
12. SNOOZE button
13. AC adaptor (not shown)

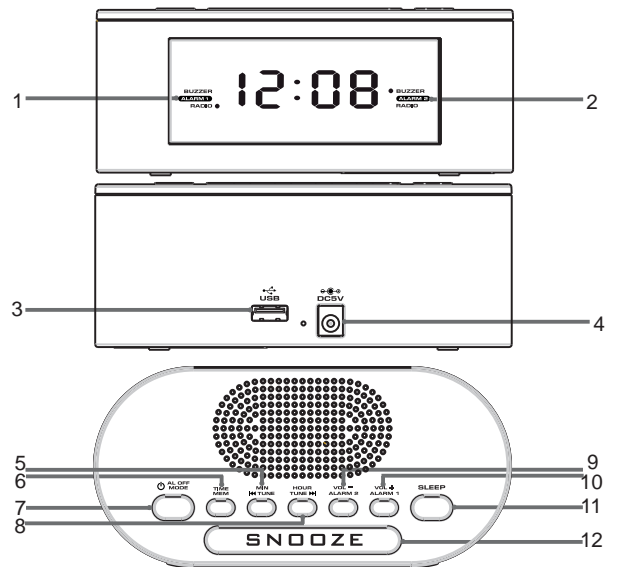

POWER SUPPLY

Mains supply : Insert the AC adaptor into a 230V AC ~ 50Hz mains outlet and the other end of the cord into the DC 5V jack (4) on the back of the unit.

Battery back up : The clock time and alarm (if set) can be maintained during a power failure by 2 x AAA/ LR03 batteries (not supplied).

Once the power is restored, check the time to make sure it is accurate and re-set if necessary.

Inserting the Batteries

1. Open the battery compartment at the bottom of the unit by pressing on the catch and removing the cover.
2. Insert 2 x AAA/ LR03 batteries (preferably alkaline batteries) into the battery compartment, following the polarity as shown on the diagram inside the compartment.
3. Replace the battery compartment cover

SETTING THE CLOCK AND ALARM

Setting the clock

1. Press and hold the **TIME** button (6) and the hour/minute digits will flash.
2. Use the **HOUR** button (8) to set the hours.
3. Use the **MINUTE** button (5) to set the minutes.
4. Press the **TIME** button (6) to confirm.

Setting the alarm

Before setting the alarm time, make sure the Clock has been set.

1. In standby mode, press and hold **AL1 (10) / AL2 (9)** until "0:00" flashes on the display.
2. While "0:00" is flashing, set the alarm time by repeatedly pressing **HOUR / MIN**.
 - Press and hold **HOUR (8) / MIN (5)** respectively for fast advance.
3. Repeatedly press **AL1 (10) / AL2 (9)** to select the desired alarm mode (1) (2) (buzzer or radio).

Using the Alarm Function

1. To enable the alarm function, use the **ALARM 1/2** buttons (9) (10) to select buzzer or radio. The selected alarm mode indicator will light up.
2. The buzzer or radio will come on at the set time.
3. To stop the alarm, press the **AL OFF** button (7). The alarm will sound again the next day.


Note: While the buzzer alarm volume is fixed and cannot be adjusted, the radio alarm volume can be adjusted to your desired level using the **VOLUME** buttons (9) (10). To select a radio station to wake up to, see the section on **“USING THE RADIO”**.

Snooze function



When the alarm sounds, press the **SNOOZE** button (12). The alarm mode indicator will flash and the alarm will sound again after 9 minutes. To cancel the SNOOZE function and repeat the alarm the next day, press the **AL OFF** button (7).

Sleep Function

With this function, you can listen to the radio for up to 90 minutes, after which it will turn off automatically.

1. When the unit is switched on, press the **SLEEP** button (11) repeatedly to select the duration: 90, 80, 70, 60, 50, 40, 30, 20, 10 minutes or OFF.
2. At the end of the set time, the radio turns off automatically.
3. To cancel the sleep function before the end of the set time, press the  button to turn off the radio immediately.

USING THE RADIO

1. Press the  button (7) to turn on the radio.
2. Press and hold one of the **<TUNING>** buttons (5) (8) to start automatic tuning up/down. Release the button when the unit is receiving a station you would like to listen to. For manual fine-tuning, you can press it briefly to adjust the frequency step by step.
3. Press the  button (7) to turn off the radio.

For optimum reception

Extend and position the FM antenna to achieve optimum reception.

Preset radio stations

You can store up to 10 stations.

1. Use the **<TUNING>** buttons (5) (8) to search for a station. Press and hold the **MEMORY** button to store the station and a number to be assigned for the preset will be flash.
2. Press the **<TUNING>** buttons to change the number.
3. Press the **<MEMORY>** button again to confirm the setting.



Listening to a preset station

While listening to the radio, press the **MEMORY** button to select a preset station. The current time is always displayed. When you change to Radio mode, the frequency will be displayed for 5 seconds and then the unit will go back to displaying the time.

USB CHARGING FUNCTION

To charge, connect your USB device like smartphone to the USB port of this clock. Use only with devices that require 5V USB power. USB port provides 1000mA recharging

current. Devices requiring more than 1000mA should not be used. Charging time may vary for difference devices.

Note:

- **Charging function may not be supported for all phones or electronic devices.**
- **Charging output would be around 80% in radio mode.**

WARNINGS

- This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Ventilation
Allow at least a 10 cm gap all around the product.
- This apparatus is not suitable for use in a tropical climate.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To protect the environment, use local recycling facilities for battery disposal.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- The marking plate is located on bottom of the enclosure.

SPECIFICATIONS

FM: 87.5-108 MHz

Power supply: AC 230V~ 50 Hz

Back-up batteries: 2 X 1.5V "AAA" size batteries or equivalent (not included)



Electrical products should not be disposed of with household waste.
We kindly ask that you use the recycle collection points provided for this purpose.
Consult with your local authorities or dealer for advice on recycling.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.