



SA6125

SA6145

SA6185

www.philips.com/welcome

Digital audio video player



Need help?

Please visit www.philips.com/welcome

where you can access to a full set of supporting materials such as user manual, flash tutorial, the latest software upgrades and answers to frequently asked questions.

Contents

1	Important safety information	3
2	Your new player	7
2.1	What's in the box	7
2.2	Register your product	7
3	Getting started	8
3.1	Overview of controls and connections	8
3.2	Main menu	9
3.3	Install	9
3.4	Connect and charge	10
3.4.1	Use the supplied USB cable	10
3.4.2	Battery level indication	11
3.5	Transfer music and pictures	11
3.6	Transfer videos	12
3.7	Enjoy	13
3.7.1	Power on and off	13
3.7.2	Navigate the menu	13
3.7.3	Lock slider	13
4	Organize and transfer music and pictures with	า
	Windows Media Player 11	14
4.1	About Windows Media Player 11	14
4.1.1	Before installing Windows Media Player 11 (optional)	15
4.1.2	Installing Windows Media Player 11	16
4.1.3	Rolling back to a previous version of Windows Media Player	. 19
4.1.4	Player	lia 20
4.2	Music and pictures transfer	20
4.2.1	Add music and picture files to Windows Media Player library	21
4.2.2	Switch between music and pictures library in Windows Media P	layer
423	and your player Bin songs from a CD	22
4.2.4	Buy music online	25
4.3	Sync your Windows Media contents to your player	26
4.3.1	Set up your player	26
4.3.2	Switch between automatic and manual sync	27
4.3.3	Select and prioritise what syncs automatically	27
4.3.4 4.2 E	Select files and playlists for manual sync	28
4.3.6	Copy files from your player to your computer	31
4.4	Manage your Windows Media Player Playlist	31
4.4.1	Create a regular Playlist	31
4.4.2	Create an Auto Playlist	32
4.4.3	Edit playlist	33
4.4.4	Transfer playlists to your player	34

Contents

4.5	Manage your files and playlists in Windows Media Pla	yer 35
4.5.1	Search for music or pictures via Windows Media Player	35
4.5.2	Delete files and playlists from Windows Media Player library	35
4.5.3	Delete files and playlists from your player	35
4.5.4	Add or change album art	36
4.5.5	Edit song information via Windows Media Player	3/
ч.э.о С	Detailed operation	30
51	Music mode	20
511	Controls	30
512	Eind your music	40
5.1.3	Play mode	41
5.2	Equalizer (sound settings)	41
5.3	Playlist on the go	42
5.3.1	Add songs to playlist on the go	42
5.3.2	Play back playlist on the go	42
5.3.3	Add playlist on the go	42
5.3.4	Clear playlist on the go	42
5.4	Other playlists	43
5.4.1	Delete playlist from your player	43
5.4.2	Now playing / Last played	43
5.5	Videos	44
5.5.1	Find your videos	44
5.5.2	Controls	45
5.5.3	Resume play	45
5.6	Pictures	46
5.6.1	I ransfer pictures from your computer to your player	46
5.6.2	Find pictures on your player to your computer	46
5.0.5	Delete medie	47
5.0	Radio	49
5.8.1	Select your FM region	48
5.8.2	Auto tune	48
5.8.3	Play a preset radio station and tune the station	49
5.9	Recordings	49
5.9.1	Play back recordings	50
5.9.2	Delete your recordings	50
5.9.3	Upload your recordings to the computer	50
5.10	Settings	51
5.11	Use your player to store and carry data files	52
6	Update your player	53
6.1	Manually verify whether your firmware is up to date	53
7	Frequently asked questions	54
8	Technical data	57
0	Clossen	57
1	Glussaly	57

I Important safety information

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome

General maintenance

To avoid damage or malfunction:

- Do not expose the player to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your player or allow objects to fall on your player.
- Do not allow your player to be submerged in water. Do not expose headphone socket or battery compartment to water, as water entering the set may cause major damage.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- · Active mobile phones in the vicinity may cause interference.
- Backup your files. Please ensure that you retain the original files you have downloaded to your device. Philips is not responsible for any loss of data if the product becomes damaged or not readable / legible.
- Manage (transfer, delete, etc.) your music files only with the supplied music software to avoid problems!

About operating and storage temperatures

- Operate in a place where temperature is always between 0 and 35°C (32 to 95°F)
- Store in a place where temperature is always between -20 and 45°C (-4 to 113°F)
- Battery life may be shortened in low temperature conditions.

Replacement parts/accessories

Visit www.philips.com/support or contact our Customer Care Helpline (the telephone number can be found on the first page of this manual) to order replacement parts/accessories.

Hearing Safety

Listen at a moderate volume.

 Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.



• Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.
- · Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Important (for models supplied with headphones):

Philips guarantees compliance with the maximum sound power of its audio players as determined by relevant regulatory bodies only with the original model of provided headphones. In case this one needs replacement, we recommend that you contact your retailer to order a model identical to that of the original, provided by Philips.

Copyright information

All other brands and product names are trademarks of their respective companies or organizations.

Unauthorized duplication of any recordings whether downloaded from the Internet or made from audio CDs is a violation of copyright laws and international treaties.

The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, Microsoft may revoke (either on its own or upon the request of the owners of Secure Content ("Secure Content Owners")) the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation may also prevent your device's ability to transfer, store, copy, display and/or play Secure Content which you have previously stored on your Device. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content. Owners, which may disable your device's ability to copy, display and/or play Secure Content.

In the event of revocation, Philips will attempt to make available software updates to restore some or all of your device's ability to transfer, store, access, copy, display and/or play Secure

Content. However, the ability to make such updates available does not rest solely with Philips. Philips does not guarantee that, after revocation, such software updates will be available. If such updates are not available, your device will not have the ability to transfer, store, copy, display and/or play Secure Content - even Secure Content which you have previously stored on your device.

In addition, even if such software updates are available, they may not enable your Device to transfer, store, copy, display, and/or play Secure Content which was previously stored on your Device. In some cases you may be able to transfer the content from the PC. In other cases, you may have to repurchase previously obtained Secure Content.

To summarize - Microsoft, Secure Content Owners, and Secure Content distributors may deny you access, or restrict your access, to Secure Content. They may also disable your device's ability to transfer, store, copy, display and/or play Secure Content even after you have paid for and obtained it. Neither your consent nor the consent or approval of Philips is necessary for any of them to deny, withhold or otherwise restrict your access to Secure Content or to disable your device's ability to transfer, store, access, copy, display, and/or play Secure Content. Philips does not guaranty that you will be able to transfer, store, access, copy, display, and/or play Secure Content.

The Windows Media and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Data logging

Philips is committed to improving the quality of your product and enhancing the Philips user experience. To understand the usage profile of this device, this device logs some info / data to the non-volatile memory region of the device. These data are used to identify and detect any failures or problems you as a user may experience while using the device. The data stored, for example, will be the duration of playback in music mode, duration of playback in turner mode, how many times battery low was encountered, etc. The data stored do not reveal the content or media used on the device or the source of downloads. The data stored on the device are retrieved and used ONLY if the user returns the device to the Philips service centre and ONLY to simplify error detection and prevention. The data stored shall be made available to user on user's first request.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.

Please be informed about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old product with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences to the environment and human health.

Modifications

Modifications not authorized by the manufacturer may void user authority to operate this device.

Notice for USA

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses,



and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice for Canada

This Class B digital apparatus complies with Canadian ICES-003.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:

- · This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Notice for the European Union

This product complies with the radio interference requirements of the European Union.

2 Your new player

With your newly purchased player, you can enjoy the following:

- Video (WMV) playback
- MP3 and WMA playback
- Album art
- · Picture viewing
- FM radio
- Voice recording
- · Built-in speakers

2.1 What's in the box

The following accessories are included with your player:







USB cable

Player



Quick start guide

Headphones



CD-ROM containing Windows Media Player 11, Philips Device Manager, MediaConverter for Philips, User Manual and Frequently Asked Questions

2.2 Register your product

We strongly recommend that you register your product in order to gain access to free upgrades. To register your product, please log on to www.philips.com/welcome so that we can inform you as soon as new updates become available.

3 Getting started

3.1 Overview of controls and connections



Α	Loud	Active when no
	speaker	headphones connected
В	Microphone	For voice recordings
С		USB connector
D	A	Headphones jack
E	- Vol +	Control volume
F	MENU	Press to access the menu /
		return to previous menu
G	PLAYLIST	Press to add songs to
		Playlist on the go
н	() / ▶Ⅱ	Short press to play/pause
		songs/videos, long press to
		power on/off



3.2 Main menu

Menu	Το
🖀 Video	Watch your videos
o Picture	View your pictures
n Music	Play your digital music tracks
📷 Radio	Listen to FM radio
👲 Recording	Create or listen to recordings
🔅 Settings	Customize the settings of your player
💿 Now playing	Go to the play screen
Last played	Resume play

3.3 Install

Important Make sure to install the software provided in the supplied CD before connecting your player.

System requirements:

- Windows XP (SP2 or above)
- Pentium III 800MHz processor or higher
- 256MB RAM
- 200MB hard disk space
- Internet connection (preferable)
- Microsoft Internet Explorer 6.0 or later
- · CD-ROM drive
- USB port

Important You need Windows XP Service Pack 2 to install and run this software.

In case you do not have this on your PC, you will be asked to install the Service Pack. Please do install this, complete the rest ot your software installation and only then connect your device.

This is critical to ensure the proper working of your player when connected to the PC.

- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the on-screen instructions to complete the installation of Windows Media Player, MediaConverter for Philips and Philips Device Manager.
- 3 If the installation program does not start automatically, browse the CD contents via Windows Explorer and run the program by double clicking on the file ending with .exe.

Lost your CD? Don't worry, you can download the CD contents from www.philips.com/support.

3.4 Connect and charge

Your player will be charged when connected to the PC.

3.4.1 Use the supplied USB cable



Connect the supplied USB cable to PC for charging and data transfer. However, your PC must be switched on and have hi-power capability in order to perform charging.



* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

3.4.2 Battery level indication

The approximate power levels of your battery are indicated as follows:

- Battery is full
 Battery is two-thirds full
 Battery is half full
 Battery is low
- Battery is empty

Note When the batteries are almost empty, the low battery screen blinks. Your player will power down in less than 60 seconds. Your player will save all settings and un-finished recordings before it powers down.

3.5 Transfer music and pictures

You can transfer music and pictures to your player using Windows Media Player. See **Organize and transfer pictures and music with Windows Media Player 11** section of this user manual for more details.

3.6 Transfer videos

Important If you have DRM protected videos on your PC, make sure that you play these at least once in Windows Media Player before transferring them to your player using MediaConverter for Philips.

Use **MediaConverter for Philips** to convert the video files to the correct screen size and transfer videos from your PC to your player. This application will convert your video files to the right format and resolution before transferring them to your player so that they are guaranteed to playback on your player without any problems.

- 1 Connect your player to the PC via the supplied USB cable.
- 2 Start MediaConverter for Philips by clicking this icon on your desktop.

Note Video conversion and transfer is usually a long process and dependent on your PC configuration. Please be patient while this happens.



- 3 In the **Convert to:** option at the bottom of the screen, select **Current Device**, the contents will be stored directly on the connected player.
- 4 Press the Add Media button to select your video files.
- 5 Press OPEN when you have found the video files on your PC that you want to transfer to the player. You may also add additional video files. OR

Select the files in **Windows explorer** and then drag and drop them into the **MediaConverter for Philips** screen.

6 Press Convert.

Note If needed, the files will first be converted to a format that can be played on the player.

> All the converted files will be transferred to the player.

1/6 Files

7 The progress of conversion and transfer is shown.

3.7 Enjoy

3.7.1 Power on and off

To power on, press **I** until the Philips welcome screen appears.

To power off, press and hold **II** until there is no display on the screen.

Tip Your player automatically powers down if there is no operation and no music or video is played for 10 minutes.

3.7.2 Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations.

То	Do this
Return to previous menu	Press or MENU
Return to main menu	Press and hold MENU
Browse through menus	Press < or >
Scroll through a list	Press 🔺 or 🔻
Select an option	Press >

3.7.3 Lock slider

The player has a lock switch to prevent any accidental operation. When you slide the lock slider to the \bigcirc position while the power is on, \bigcirc appears on the screen and all function keys are disabled except for - VOL + to adjust the volume. Slide the lock switch to unlock position and the buttons function as normal.

4 Organize and transfer music and pictures with Windows Media Player 11

4.1 About Windows Media Player 11

While your player will work with **Windows Media Player 10**, we suggest that you use **Windows Media Player 11** for a more enhanced media experience, both on the computer and on your player.

Windows Media Player 11 is an all-in-one playback and recording program that lets you play your CDs, rip CD tracks to your hard disk, transfer media files to your player, etc. This chapter describes the steps that you need to follow to successfully set up and transfer music and pictures to your player. For more information, see Windows Media Player Help on your computer or visit www.microsoft.com/windows/windowsmedia/player/faq/default.mspx

() Important Make sure that you have installed the Windows Media Player 11 software provided in the accompanying CD for music and picture transfer.

Although Windows Media Player also lets you transfer video files from your computer to the player, please use the MediaConverter for Philips provided in the accompanying CD for video transfers. For more information regarding transfer of videos, see 3.6 Transfer video.

Important You must be logged on as an administrator or a member of the Administrators group to perform the following procedures. For more information, please visit www.microsoft.com

4.1.1 Before installing Windows Media Player 11 (optional)

If necessary, before you install **Windows Media Player 11**, go to Windows Update and install any high-priority updates that are available for your computer.

Perform the following steps if you wish to save media information and star ratings to your media file, as well as back up your existing data:

- 1 In Windows Media Player 10, click Tools, and then click Options.
- 2 Click the Library tab, select the Maintain my star ratings as global ratings in the media files check box.
- > The user ratings for your songs will be saved in your media files rather than in your library database file (this may take several minutes).
- 3 Click Tools, and then click Process media information now.
- > This ensures that your ratings (and any changes that you have made to other media information) are saved to your media files immediately.
- 4 Select Start > All Programs > Accessories > System Tools > Backup to backup your existing data.

4.1.2 Installing Windows Media Player 11

1 Insert the accompanying CD into the CD ROM drive of your computer.

Note If the installation program does not start automatically, browse the CD contents via **Windows Explorer** and run the program by double clicking on the file ending with **.exe**.

2 Follow the onscreen instructions to complete the installation of **Windows Media** Player 11.

Note If the following dialog boxes appear during installation, read through the texts before you proceed with the installation:

🕞 Windows Media Player 11	×
Validate your copy of Windows	
To get Windows Media Player 11, you must verify that Microsoft® Windows® is genuine. After successful validation your system will have access to the latest features, updates, and support. Microsoft will not use the information oldected during the validation process to identify or contact you. For more details about what information is collected and how it is used click on the link below.	
Microsoft Genuine Advantage Privacy Ratement.	
Cancel Vaildat	e

3 Click Validate to continue.



4 Click I Accept to continue.



5 Select EXPRESS and click Finish.

🕒 Windows I	Wedia Player 11	
2	Migrating Windows Media Player Library	
	Importing Media Library	

➡ Note Your existing media library is currently migrating to Windows Media Player 11. This may take several minutes depending on the size of your existing media library.



6 Click on the checkboxes to select the file types that you want **Windows Media Player** to play by default or click **Select all** and then click **Finish**.



7 Click on the checkboxes to select your privacy options and then click **Next** to complete the necessary settings.

4.1.3 Rolling back to a previous version of Windows Media Player

If you encounter some problems with **Windows Media Player 11**, you can simply roll back to the version that was previously on your computer.

- 1 Disconnect your player from your computer.
- 2 Select Start, and then click Control Panel.
- 3 In the Control Panel, select Add or Remove Programs.
- 4 Select Windows Media Player 11, and then click Remove.
- > A confirmation dialog box appears.
- 5 Click OK.
- 6 When the rollback process is completed (this may take several minutes), click Restart.
- 7 Select Start, and then click Control Panel.
- 8 In the Control Panel, select Add or Remove Programs.
- 9 Select Windows Media Format 11 Runtime, and then click Remove.
- > A confirmation dialog box appears.
- 10 Click OK.
- > A second confirmation dialog box appears.
- 11 Click OK.

- 12 When the rollback process is completed (this may take several minutes), click Restart.
- 13 Select Start, and then click Control Panel.
- 14 In the Control Panel, select Add or Remove Programs.
- 15 Select Microsoft User-Mode Driver Framework Feature Pack 1.0, and then click Remove.
- 16 Follow the instructions that appear in the Software Update Removal Wizard.
- 17 If the Wudf01000 confirmation dialog box appears, click **Yes** to continue. When the software removal process is completed (this might take several minutes), click **Finish**.

4.1.4 More about rolling back to a previous version of Windows Media Player

If you roll back to a previous version of **Windows Media Player**, and your player becomes undetectable by Windows or **Windows Media Player**, perform the following procedures:

- 1 Switch on your player and connect it to your computer using the supplied USB cable.
- 2 Right-click My Computer, and then click Manage.
- 3 In the left pane, click **Device Manager**.
- 4 In the right pane, click on the "+" sign beside **Portable Devices**.
- 5 Right-click GoGear SA61xx, and then click Uninstall.
- 6 In the confirmation dialog box, click **OK** to uninstall the player.
- 7 Disconnect your player from your computer, make sure it is still switched on, and then connect it to your computer again.
- > Windows will detect your device and automatically re-install it. Within a minute or two, GoGear SA61xx will reappear in the Portable Devices section of Device Manager.

4.2 Music and pictures transfer

You can view and manage your music and picture files using Windows Media Player.

Important We recommend that you always use **Windows Media Player** to transfer music and pictures to your player.

4.2.1 Add music and picture files to Windows Media Player library

By default, **Windows Media Player** automatically loads all the music and picture files stored in your **My Music** and **My Pictures** folders into the library. If you add new files to these folders, they will also be automatically added to the library.

Add music and picture files that are stored elsewhere on your computer or computer network

- 1 Select Start > All Programs > Windows Media Player to launch Windows Media Player program.
- 2 Click the down arrow beneath the Library tab and select Add to Library ...



> Add to Library dialog box appears.



3 Click <<Advanced Options to expand the dialog box.

4 Click Add...

- > Add folder dialog box appears.
- 5 Select a folder in which you have kept your music or picture files and click OK.
- 6 Return to Add to library dialog box and click **OK**.
- > **Windows Media Player** will start scanning the folder and add available music or picture files to the library.
- 7 Click Close when done.

Tip Windows Media Player is configured to skip audio files that are smaller than 100KB. To include files smaller than 100KB, you can change the default settings within the Add to library dialog box.

4.2.2 Switch between music and pictures library in Windows Media Player and your player

To switch between music and pictures library, simply click the arrow on the top left of Windows Media Player and select the category you want to view.



4.2.3 Rip songs from a CD

If you want to transfer music from a CD to your player, you need to create a digital copy of the music on your computer first. This is called ripping.

- 1 Start Windows Media Player.
- 2 Click the down arrow beneath the **Rip** tab and select **Format** to choose the format you want.



3 Click the down arrow beneath the **Rip** tab and select **Bit Rate** to choose the bit rate you want.

+ Music + Library +	Recently Added		Forme	st i	•		ρ.	
Playlists JLbrary Recently Added	Abum		Bit Ra	te	48 8	bps (Smallest Size) bps	nbu 🔺	
	Barbra Streisand		Rip Cl Eject	O Automatically When Inserted I CD After Ripping	erted • 96 Kbps			
 Artist Album Songs 		Barbra Streisand Easy Listening	More Help v	Options with Ripping	160	Kbps Kbps (Best Quality)	ra S ra S ra S	
Genre		1980	4	Promises	4:23		Barbra S	
vear			5	The Love Inside	5:08	ដាជាដ ាជាជ	Barbra S	Listitian Disolat
E0 FOOTIN			6	What Kind Of Pool	4:37	100000	Barbra S	
			8	Never Gve Lip	3:44		Barbra S	
			9	Make It Like A Memory	7:32		Barbra S	Drag items here
	Seattle Sympho	ny Orchestra						or or
		Beethoven's Symphony Orch Seattle Symphony Orch Classical Uniknown Year	1	Symphony No. 9 (Scherzo)	1:15	666633	Ludwiq v	Play favorites from 'Recently Added'.
	刘若英							
	-	一整夜	1	序	0:21	0000000	刘君英	
		刘诺英	2	董雪以后天亮以前	4:47	100000	刘君英	
	Paste Art Here	流行音乐 Unknown Year	3 4	光 一次牽握的机会	3:57 3:55	1999	刘若英 刘若英	
							_	Save Playlist

Tip A higher bit rate produces a better sound quality, but the file size will be larger. The recommended format for your player is 128kbps MP3 or 64kbps WMA.

- 4 Insert the Audio CD into your computer's CD drive.
- > All the tracks from the CD are listed. By default, Windows Media Player will start to rip all the songs in the CD. To modify this option, click the down arrow beneath the Rip tab and select Rip CD Automatically When Inserted > Never.

Windows Media Player							_ • ×
Now Playing	Library	Rip	Bum	Sync	- 🏄 M	edia Guide	
🞵 + Music + Jazz FM - The Album (2CDs OF S	mooth	Rip 'Jazz FM - The	Album (2CDs Of Smo	oth Jazz & Class	ic [UK] Disc 1' (F:)		E
Jazz FM - The Albu Album Audio CD (F:)		Format Bit Rate				hbuting Artist	Composer
	Jazz FM - The Album Various Artists Jazz Instrument	Rip CD Autometic Eject CD After Rip More Options	ally When Inserted ping	Only When in t Always Never	he Rip Tab		
	2003	Help with Ripping	y (parc 17 - 1sley	5:30		us Artists various Artists	
	V	7 Family Al 8 Beyond 1	fair - Jazoulster fair - Jazoulster fhe Rains (origina	5:51 6:03 4:03		various Artists Various Artists Various Artists	
	v v	9 Lovely D 10 I'm Still In	ay - Withers, Bill h .ove With You	4:07 3:12		Various Artists Various Artists	
	V V V	11 Killing Me 12 One Mon 13 Ventura	Softly With His S e Time - Kenny G Highway - Herdca	5:07 4:12 3:57		Various Artists Various Artists Various Artists	
	V	14 Cab Driv 15 If You Be	er - Hall, Daryl lieve - Nite Flyte	5:22 5:17		Various Artists Various Artists	
		16 Too Hot 17 Still Have	- Kool & The Gang n't Found (What	5:02 5:30 Rij	oped to library	Various Artists Various Artists	
							🚯 Start Rip
				۵			2
Jazz FM - The Album (2CD 00:43	× 0			a.	2/		3

Dimportant Make sure that you are connected to the Internet before you start ripping so that Windows Media Player can download the album and track information from an online music database. If your computer is not connected to the Internet, you will have to enter the album and track information manually and the player may not show any album art.

As Windows Media Player may not always identify the right song on the CD and the online music database may not always have the correct information (especially for new album releases or albums from lesser-known artists), you may need to manually edit or enter the album and track information. See **Edit song information via Windows Media Player**.

5 Select the songs that you want to rip by clicking on the checkboxes.

😑 Windows Media Player								- • ×
@ >	Now Playing	Library		Rip Burn	Sync	-	Media Guide	
🎵 + Music + Jazz FM - The	Album (2CDs Of Smo	oth						E • % •
Jazz FM - The Albu	Abum			Title	Length	Rip Status	Contributing Artist	Composer
	Audio CD (F:)							
			-					
		Jacc PPI - The Abum.		 Lecis Get it On - Gaye, Ma 	3055	Ripped to library	Various Artists	
		Tanious Proses	1 2	 Wish Luidh t Miss You - St Bala (and anis), Small 	4130 9-4E	Ripped to library	Various Artists	
		2002		 Cash Cabina Orth Of Mar. 	4.94	Ripped to library	Various Artists	
				 Carriellor od od or hy. That Lack (nart 1) - Iday 	5-96	ropped to lor ary	Various Artists	
			2 6	6 In The Mood - Tasky Den	3-31		Various Artists	
			7	 Family Affair - Jazoulster - 	. 6:03		Various Artists	
			V 8	B Beyond The Bains (original	4:03		Various Artists	
			1 9	9 Lovely Day - Withers, Bill	4:07		Various Artists	
			V 1	10 Thi Still In Love With You -	3:12		Various Artists	
			7 1	11 Killing Me Softly With His S	5:07		Various Artists	
			V 1:	12 One More Time - Kenny G	4:12		Various Artists	
			V 1	13 Ventura Highway - Hardca	3:57		Various Artists	
			V 1-	14 Cab Driver - Hall, Daryl	5:22		Various Artists	
			V 1	15 If You Believe - Nite Flyte	5:17		Various Artists	
			V 1	16 Too Hot - Kool & The Gang	5:02		Various Artists	
			1	17 Still Haven't Found (What	5:30	Ripped to library	Various Artists	
2			_	~				🚯 Start Rip
l efs Get It On - Gay	e, Marvin 01:13	<u>x o</u>			49	-		

- 6 Click Start Rip.
- > The selected tracks will be converted and added to Windows Media Player library.

4.2.4 Buy music online

If you want to buy music online, you need to select a music store.

- 1 Start Windows Media Player.
- 2 Click the down arrow beneath the **Media Guide** tab and select **Browse all Online Stores**.
- 3 Choose a store and follow the on-screen instructions.

😑 Windows Media Player								×
3	Now Playing	Library	R	p Burn	Sync		Media Guide	
🎵 + Music + Jazz FM - The	Album (2CDs OF Smo	oth						E • 85 •
Jazz FM - The Albu	Album			Title	Length	Rip Status	Contributing Artist	Composer
	Audio CD (F:)							
	_	June FM. The Aller of				AL 14 1		
		Various Artists		Let's Get X Un - Gaye, Ma	4:30	Ripped to library	Various Arcists	
		latt locks ment	2	Wish Loidh t Miss You - St	9:30	Ripped to library	Various Artists	
		2003		Can't Get You Out Of My	4-94	Ripped to library	Various Artists	
		~~~~	<b>x</b> 5	That Lack (nart 1) - Idey	5/36	ropped to an ary	Various Artists	
			6	In The Mood - Taylor, Den	3:31		Various Artists	
			7	Family Affair - Jazouister	6:03		Various Artists	
			8	Beyond The Rains (origina	4:03		Various Artists	
			9	Lovely Day - Withers, Bill	4:07		Various Artists	
			10	The Still In Love With You	3:12		Various Artists	
			11	Killing Me Softly With His S	5:07		Various Artists	
			12	One More Time - Kenny G	4:12		Various Artists	
			13	Ventura Highway - Hardca	3:57		Various Artists	
			7 14	Cab Drive: - Hall, Daryl	5:22		Various Artists	
			15	If You Believe - Nite Flyte	5:17		Various Artists	
			16	Too Hot - Kool & The Gang	5:02		Various Artists	
			17	Still Haven't Found (What	5:30	Ripped to library	Various Artists	
								🚷 Start Rip
u			_	~	_			
		AA						
I et's Get It On - Gaye	Marvin 01:13	V O			0	-•) /		1

**Note** Depending on where you are and the language used, the list of stores may differ from what is shown here.

> After you have bought a song or an album, it will appear in Windows Media Player library.

# 4.3 Sync your Windows Media contents to your player

You can sync your music and pictures to your player using **Windows Media Player**. Simply connect your player to your computer using the supplied USB cable, set up sync, and you will be ready to sync your media library to the player.

When you connect your player to the computer for the first time, **Windows Media Player** automatically selects the sync method (automatic or manual) that works best for your player.

**Automatic**: If your player has sufficient storage space (at least 4GB of free space) and your entire media library can fit on your player, your entire media library will be automatically copied to your player as soon as you connect it to your computer.

**Manual**: If your entire media library cannot fit on the player, then you will be prompted to manually select specific files or playlists that you want to transfer to your player.

# 4.3.1 Set up your player

- 1 Start Windows Media Player.
- 2 Switch on your player and then connect it to your computer using the supplied USB cable.
- > If prompted, select the option to sync the device using Windows Media Player.
- 3 If Windows Media Player selects to sync your device automatically, click Finish.
- Your entire library will sync to your player. Thereafter, every time you connect your player to your computer, your player will sync automatically. You can also select and prioritise what syncs automatically (see Select and prioritise what syncs automatically).
- 4 If Windows Media Player selects to sync your device manually, click Finish.
- > You then need to click the **Sync** tab and select the files and playlists you want to sync manually (see **4.3.4 Select files and playlists for manual sync**).

Important Do not disconnect your player while transferring is in progress. If you disconnect your player, the transfer will not be complete and Windows might not be able to recognize your player afterwards. To rectify this problem, perform steps 1 - 7 in
 4.1.3 More about rolling back to a previous version of Windows Media Player.

### 4.3.2 Switch between automatic and manual sync

After your player is set up the first time, depending on your preference, you can switch between automatic and manual sync.

- Click the down arrow beneath the Sync tab, select Philips GoGear SA61xx > Set Up Sync.
- 2 Select or clear the Sync this device automatically check box.

### 4.3.3 Select and prioritise what syncs automatically

If **Windows Media Player** has selected to sync your device automatically, you can choose not to sync your entire media library. You can choose what you wish to sync from existing playlists or create new playlists. These playlists you have selected will then sync to your player every time you connect it to your computer.

 Click the down arrow beneath the Sync tab and select Philips GoGear SA61xx > Set Up Sync.



- > The **Device Setup** dialog box appears.
- 2 In the **Available playlists** pane, select the existing playlists you want to sync and then click **Add**.



- 3 To create a playlist, click **New Auto Playlist** and follow the steps on the screen to specify criteria for files in the auto playlist (for details on how to create an auto playlist, see **4.4.2 Create an Auto Playlist**).
- 4 To remove a playlist, click the playlist in the list of **Playlists to sync**, and then click **Remove**.
- 5 In the **Playlists to sync** pane, select a playlist and click the **Priority** arrows to arrange them in the order that you want them to sync.



> If your player is full before sync is complete, then the files and playlists that are lower in priority on the list will not sync.

Tip If your player has limited storage capacity, or if your media library has grown too large to fit on your player, you can shuffle the files that are in the playlists you have selected to sync. To do so, select the **Shuffle what syncs** check box. Thereafter, every time you connect your player to the computer, the files on your player are removed and a new set of files (from the **Playlists to sync** pane) are added to the device.

### 4.3.4 Select files and playlists for manual sync

If you sync manually, you must create a list of files and playlists you want to sync. You can also shuffle which files from your playlists to sync to your player.

#### 1 Start Windows Media Player.

- **2** Switch on your player and then connect it to your computer using the supplied USB cable.
- 3 Click the **Sync** tab.
- 4 Drag the files and playlists that you want to sync from the Contents pane to the Sync List pane. You can also right-click on the file or playlist and select **Add to "Sync List"**.

Solution To switch between music and pictures library, simply click the arrow on the top left of Windows Media Player and select the category you want to view.

<u> </u>	Now Playing	Library	R	p Burn	Sync		Online Stor	es
🕽 + Music + Library + :	Songs			🛄 • 📴 • 🔙	sarch		ρ.	-0
Playlists	Album			Title	Length	Rating	Contribu	
📄 Create Playist	Barbra Streisar	d						
Auto Playist	-	aite		0.00	4.26	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	Ruber C	
<ul> <li>avnist</li> </ul>		Barbra Streisand	2	Woman In Love	3:53	- Marina	Barbra S	
Library		Easy Listening	3	Run Wild	4:08	00000	Barbra S	-
Recently Added	100	1980	4	Promises	4:23	500000	Barbra S	Connect a device
Artist			5	The Love Inside	5:08		Barbra S	
<ul> <li>Abum</li> </ul>			6	What Kind Of Fool	4:07		Barbra S	Sync List •
J) Songs			7	Life Story	4:37		Barbra S	
Co Genre			8	Never Give Up	3:44	-	Barbra S	
📄 rear			9	Make It Like A Memory	7:32	-	Barbra S	Drag items here to create a list to syn
	The Carpenters							
	Paste Alt Here	As Time Goes By The Carpenters Pop 2001	13	The Rainbow Connection	4:36	111111	The Car	
	José Carreras							
	Paste Art Hore	Passion José Carreras Classical Unknown Year	6	If tomorrow comes	3:09	66660	José Car	
								🖉 Start Sync

5 In the Sync List pane, verify that the items you have selected to sync will all fit on your player. If necessary, remove items from the list.



- 6 To remove items, right-click on the item in the Sync List pane, and then select **Remove** from List.
- 7 Click **Start Sync** button to transfer the Sync List items to your player.
- > The progress is displayed on the bottom right of Windows Media Player.

Stip If the track you are trying to sync is a protected file, you will be prompted to upgrade the security components on your computer. When this happens, play the track in Windows Media Player and when prompted, follow the steps on the screen to upgrade the security components. After you have upgraded your security components, sync the file to your player again.

#### 8 If you wish to stop the transfer, click **Stop Sync**.

Solution Tip To select multiple files, click on one file, then press and hold the **CTRL** key on your computer keyboard and click the other files that you want to select.

To select consecutive files, click on the first file, then press and hold the **SHIFT** key on your computer keyboard and click the last file in the list that you want to select.

To select all files, click on any file to highlight it, then press and hold **CTRL + A** key on your computer keyboard.

### 4.3.5 Shuffle manual sync items on your player

The Shuffle Sync feature in **Windows Media Player** is able to detect the amount of space in your player and load your player with a random sampling of files.

- 1 Start Windows Media Player.
- **2** Switch on your player and then connect it to your computer using the supplied USB cable.
- 3 Click the down arrow beneath the Sync tab and select Shuffle "Philips GoGear SA61xx".



- 4 If prompted, click **Yes** button to start synchronization. Otherwise synchronization starts immediately.
- > The progress is displayed on the bottom right of Windows Media Player.
- 5 To stop Sync, click the down arrow beneath the Sync tab and select Stop Sync to "Philips GoGear SA61xx".

### 4.3.6 Copy files from your player to your computer

Your player supports reverse sync, which lets you copy files from your player to your computer via **Windows Media Player**.

- 1 Start Windows Media Player.
- **2** Switch on your player and then connect it to your computer using the supplied USB cable.
- 3 Click on Philips GoGear SA61xx in the left Navigation pane.
- > You can browse your player's contents in a variety of views, such as Recently Added, Artist, Album, Songs, etc.

The contents on your player will be listed in the Contents pane.

Tip To switch between music and pictures library in your player, simply click the arrow on the top left of Windows Media Player and select the category you want to view.

- 4 Navigate to the file or playlist you wish to copy from your player to your computer.
- 5 Right-click on the file or playlist and select Copy from Device.

# 4.4 Manage your Windows Media Player Playlist

Playlists allow you to mix any combination of songs or pictures you want so that you can enjoy hours of listening or viewing. You can create regular or auto playlists containing songs, pictures or both using **Windows Media Player 11**.

### 4.4.1 Create a regular Playlist

- 1 Click the down arrow beneath the Library tab and select Create Playlist.
- > Untitled Playlist appears on the List pane

2 Click on Untitled Playlist and enter a new name for the playlist.

😑 Windows Media Player								×
<u>(</u>	Now Playing	Library	Rip	Bum	Sync		Online Stores	_
🎵 + Music → Library → S	iongs			🛄 • 📲 • St	sarch		ρ.	•
Playlists     Create Playlist	Abum Barbra Streisand			Tide	Length	Rating	Conkribu	
	Grand Control of Contr	alty Irbra Streisand Isy: Listening 180	1 2 4 5 6 7 8 9	Guiky Woman In Love Run Wild Promises The Love Inside What Kind Of Fool Life Story Never: Give Up Make It Like A Memory	4:26 3:53 4:08 4:23 5:08 4:07 4:37 3:44 7:32		Barbra S Barbra S Barbra S Barbra S Barbra S Barbra S Barbra S Barbra S Barbra S	No items
	Paste Alt Piere 20	: Time Goes By le Carpenters lp 01	13	The Rainbow Connection	4:36	00000	The Car	or <u>Bav favorites</u> from 'Songs'.
	José Carreras							
	Paste Aft Pere	ission sé Carreras assical iknown Year	6	If tomorrow comes	3:09		José Car	
							-	Save Playlist
		0 2	• (	144 💽 757	• –			۔ ۲۵ بر

**3** To add items to your playlist, drag them from the Contents pane onto the List pane. Your playlist can contain both songs and pictures.

Tip To switch between music and pictures library in your player, simply click the arrow on the top left of Windows Media Player and select the category you want to view.

4 When you have finished adding items to the playlist, click Save Playlist.

### 4.4.2 Create an Auto Playlist

Windows Media Player can automatically generate playlists based on various criteria.

- 1 Click the down arrow beneath the Library tab and select Create Auto Playlist.
- > A New Auto Playlist dialog box appears.

2 Enter a name for the auto playlist.

😔 Windows Media Player			= = ×
<b>3</b>	Now Playing Library	Rip Burn Sync Online Stores	
J         + Nusk + Lbrary + S           B         Phylotics           B         Faylets           B         Locator Rhyldr           B         Strong           B         Strong           G         - Mith (r-)	Abun Earlar Stressand Earlar Stressand Dark Stressand Earl Lawreng Hot Carporters Af The Goos By The Carporters	Image: Source of the source	Notified Playlet • X Drog terms here: or ensues a playlet or ensues here: Car favortes from Songer.
	And Arrow 2001	Remove CK Cancel Heb	Save Playlet

- 3 Click the first green plus sign and select your first criteria from the pull-down list.
- > Your criteria is listed.
- 4 Click on the underlined words to further define your criteria.
- 5 Click the second and third green plus signs to select and define more criteria for your auto playlist.
- 6 Click **OK** button when done.

### 4.4.3 Edit playlist

You can edit your existing playlists at any time.

- 1 Click on **Playlists** in the left Navigation pane.
- > All your playlists will be displayed in the Contents pane.

2 Right-click on the playlist you wish to edit and select **Edit in List Pane** from the pop-up menu.

😔 Windows Media Player								×
<b>@</b> @	Now Playing	Library	Rip	Bum	Sync	Online Store:	8	
J         Mat. + Reylets           Implement         Implement           Implement         Implement	Telo All Playliets	Court Court Market Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow Allow		Sam	ά h	P	And the second s	•
Barbra Streisand	00:27	<b>x</b> 0 +		•			Sove Playlist	

- > The contents in the playlist appears on the List pane.
- 3 To remove an item from the playlist, right-click on the item and select Remove from List.



- **4** To change the order of the items in the playlist, click and drag any item to a new position within the List pane.
- 5 To add a new item to the playlist, select it from the library and drag it to the List pane.
- 6 When you have finished editing the playlist, click Save Playlist button.

### 4.4.4 Transfer playlists to your player

Refer to 4.3.4 Select files and playlists for Manual Sync.

# 4.5 Manage your files and playlists in Windows Media Player

### 4.5.1 Search for music or pictures via Windows Media Player

- 1 Click the Library tab.
- 2 To search for music files, click the arrow on the top left of Windows Media Player and select Music. To search for picture files, select Pictures.
- **3** Type a few keywords of the file, such as song title, artist, etc in the search box.
- > The results of your search appear in the Contents pane as you type, and are updated as you enter each new letter of your search.
- 3 Keep entering keywords to fine-tune the results of your search.

# 4.5.2 Delete files and playlists from Windows Media Player library

- 1 Click the Library tab.
- 2 To delete music files, click the arrow on the top left of **Windows Media Player** and select **Music**. To delete picture files, select **Pictures**.
- 3 Navigate to the file or playlist you wish to delete.
- 4 Right-click on the file or playlist and select **Delete**.
- 5 Select **Delete from library only** or **Delete from library and my computer** and click **OK**.

### 4.5.3 Delete files and playlists from your player

You can also use **Windows Media Player** to manage the files stored on your player. When you connect your player to the computer, the contents on your player will be displayed in **Windows Media Player**. You can then delete files or playlists, just as you would any other files displayed in **Windows Media Player**.

- 1 Click on **Philips GoGear SA61xx** in the left Navigation pane.
- You can browse your player's contents in a variety of views, such as Recently Added, Artist, Album, Songs, etc.

The contents on your player will be listed in the Contents pane.

2 To delete music files, click the arrow on the top left of **Windows Media Player** and select **Music**. To delete picture files, select **Pictures**.

- 3 Navigate to the file or playlist you wish to delete.
- 4 Right-click on the file or playlist and select **Delete**.
- 5 Click OK.



### 4.5.4 Add or change album art

- 1 Locate and store your album art (preferably in JPG format) on your computer.
- 2 Right-click on the album art and select **Copy**.
- **3** Go to **Windows Media Player** and locate the album that you wish to add or change the album art.
- 4 Right-click on the album and select **Paste**.
- > The new album art now appears on your album in Windows Media Player.

**Solution** Tip You can search for album art using Google Image Search (images.google.com)

# 4.5.5 Edit song information via Windows Media Player

- 1 Click the **Library** tab.
- 2 Navigate to the song you wish to edit.
- 3 Right-click on the song and select **Advanced Tag Editor** from the pop-up menu.

Windows Nedia Player								¢,
<b>G D</b>	Now Playing	R	tip Burn	Sync		Media Guide		
<i>"</i> ] → Music → Library → S	Songs		E • 📲 •	the		× •		٠
Playlists     Now Playing	Album Barbra Streisand		Title	Length	Rating	Contribu		
Group     Group	Guity Barbra Streisand Easy Listening 1980	5	The Love Inside	5:08	<u></u>	Barbra S	No items	
iii Year ☆ Rating							Unitited Playlist •	×
	The Carpenters						Drag items here	
	As Time Goes By	13	The Rainbow Connection	4:36	*****	The Car	to create a prayest	
	Paste AR Here Pop 2001		Play A Play Add to	<b>//</b> Unotiled Playlist			Bay favorites from 'Songs'.	
			Edit					
	Various Artists		Advance Field All	ed Tag Editor				
	Jazz FM - The Album (2	1	Let's Get It On Delate		- 2000	Various		
	Vanous Artists Jazz Instrument	2	Fake (radio mi: Propert	ies	-	Various		
	2003	4	Can't Get You That Lady (an Open F	le Location	1000	Various		
		17	Still Haven't Found (What	5:29	100000	Various		
							Save PlayIst	
			~			6		2
	x 0	- (	144 💽 191	40				E
								-

- > The Advanced Tag Editor dialog box appears.
- 4 Select the appropriate tab and enter or edit the information.

The Rainbow Co	nnection	Genre: Pop	•
Subtitle:		Mood:	-
Track number:	Beats per	minute: K	ey:
Album:			
As Time Goes By			
Original album:		Set:	
Subgenre:		Language:	
Gabgerile.		Edinguago.	-

5 Click **OK** to save your changes.

# 4.5.6 Format your player via Windows Media Player

You can reformat the hard disk on your player to erase all data.

- 1 Start Windows Media Player.
- **2** Switch on your player and then connect it to your computer using the supplied USB cable.
- 3 Click the down arrow beneath the Sync tab and select Philips GoGear SA61xx > Format.



# 5 Detailed operation

# 5.1 Music mode

Your player is preloaded with some songs. You can transfer your digital music and picture collection from your computer to your player using **Windows Media Player**. More information on music transfer can be found in section **Organize and transfer pictures and music with Windows Media Player** in this user manual.

# 5.1.1 Controls

During music playback, you can do the following:

То	Do this
Play / Pause music	Press 🔰
Skip to next song	Press >
Return to previous song	Press <
Fast forward	Press and hold >
Fast rewind	Press and hold <
Return to browsing menu	Long/short press MENU
Increase volume	Press VOL +
Decrease volume	Press VOL -

# 5.1.2 Find your music



1 From the main menu, select **1** to enter music mode. You can search from the following music options:

All songs	<ul> <li>Alphabetically listed tracks</li> </ul>	
Artists	<ul> <li>Alphabetically listed artists</li> </ul>	<ul> <li>Alphabetically</li> <li>Tracks listed in album order</li> </ul>
Albums art	<ul> <li>Alphabetically listed album art</li> </ul>	
Albums	Alphabetically listed albums	Tracks listed in album order
Genres	<ul> <li>Alphabetically listed genres</li> </ul>	AlphabeticallyAlphabeticallyTracks listed in album order
Playlists	<ul> <li>Playlists collections</li> </ul>	Tracks listed in play order

- 2 Press  $\blacktriangle$  or  $\checkmark$  to scroll through the list.
- 3 Press ► to select or press < to return to previous level.
- 4 Press ►II to play your selection.

**Tip Superplay™** allows you to playback the selected music or album immediately at any point by pressing **▶II** on the selection.

# 5.1.3 Play mode

You can set your player to play songs randomly (Shuffle All 🙁) or repeatedly (Repeat One 🗠 or Repeat All 🖘).

- 1 From the main menu, select 🔅 > Play mode.
- 2 Press  $\blacktriangle$  or  $\checkmark$  to scroll up or down the options.
- **3** Press ► to select an option.

While you are playing music, you can see the above active play mode screen.

#### **Note** Digital Rights Management (DRM) Information

If you have songs that have been bought online stored on your player, from time to time you may see a message pop up "**Licence problem**". This is because the license for the song on the player may have expired and synchronizing with the computer will help to update this license with the latest information.

# 5.2 Equalizer (sound settings)

Set your player to play songs with different EQ (equalizers) settings.



- 1 From the main menu, select 🗱 > Sound settings.
- 2 Press ▲ or ▼ to scroll through the list of options: Rock, Funk, Jazz, Classical, HipHop, Techno, Custom, or Off. You can select one of them.

**Note** Custom settings allow you to specify your desired equalizer settings by adjusting the individual settings for bass (B), low (L), mid (M), high (H) and treble (T).

3 Press ► to select.

# 5.3 Playlist on the go

**Playlist on the go** is a playlist that can be created on the player while on the move. You can create up to 3 different Playlists on the go.

All songs will be displayed and listed in play order in the playlist. New songs are automatically added to the end of the playlist.

### 5.3.1 Add songs to playlist on the go

Press PLAYLIST to select the song to be added to the playlist on the go. If you have created more than one playlist on the go, the playlists on the go will be displayed in numerical order. Use the  $\blacktriangle$  /  $\checkmark$  keys to select the playlist on the go to which you wish to add the song and press  $\triangleright$  to confirm.

### 5.3.2 Play back playlist on the go

- Select **?** > **Playlists** > **Playlist on the go 1** (or Playlist on the go 2 / Playlist on the go 3, if available).
- 2 Select your playlist and press >II.

### 5.3.3 Add playlist on the go

You can create up to 3 playlists on the go.

1 Select 7 > Playlists > Create playlist on the go.

### 5.3.4 Clear playlist on the go

You can clear the playlist completely.

- 1 Press PLAYLIST and select **Clear 'Playlist on the go 1'?** (or 'Playlist on the go 2' / 'Playlist on the go 3').
- 2 Select Clear 'Playlist on the go'.
- 3 Select **Clear** to confirm clearing all the songs in the selected playlist on the go, or select **Cancel** to return to the previous menu.
- > A message Cleared! will be displayed.

So Tip This will empty playlist on the go but will not delete those songs from your player.

# 5.4 Other playlists

You can transfer playlists to the player using **Windows Media Player**. See section **Manage** your Windows Media Player playlist - Transfer playlists in this user manual for details.

# 5.4.1 Delete playlist from your player

You can only delete your player's playlists (except for Playlist on the go) via **Windows Explorer**.

- **1** Connect the player to your computer.
- > Your player will be identified as Philips or Philips GoGear in Windows Explorer.
- 2 Go to Music (Windows Media Player 10) or Playlists (Windows Media Player 11).
- 3 Delete playlist.

**Note** Any playlist you delete will not have its associated songs removed from your player.

### 5.4.2 Now playing / Last played

You can browse your music and video library or pictures while you are listening to your music or the radio.



To return to the play screen, press < to navigate back to the main menu and select **Now playing**.

# 5.5 Videos

1

You can play the videos that are loaded from the PC using the MediaConverter software.

### 5.5.1 Find your videos

In the root menu of your player, select [™] by pressing ▲ or ▼.
 You can search from the following video options:



3 Press ▲ or ▼ to select the video you want to watch, then press ►II or ► to play your selection.



**Note** The video will playback in landscape mode to give you a full screen viewing experience.

**Tip** To better organize your videos, you can create folders for your player via **Windows Explorer**.

- **1** Connect it to your computer.
- > Your player will be identified as Philips or Philips GoGear in Windows Explorer.
- 2 Go to Videos folder.
- 3 In Windows Explorer, right click to create and name a folder in your player.
- 4 Drag and drop converted video files (.wmv) to the newly created folder.
- 5 The video folders you have just created will be displayed under the Videos menu.

# 5.5.2 Controls

During video playback, you can do the following:

То	Do this
Play / pause video	Press 🔰
Search forward and backward	Use the $\triangleleft$ and $\triangleright$ keys to forward and rewind within a playing video
Go to previous / next video	Press < and <a>keys</a>
Adjust volume	Use the + and - keys
Go back to previous menu	Press MENU

# 5.5.3 Resume play

The video function has a "resume play" feature. When returning to a previously viewed video, you can "resume" viewing the video right where you stopped last time you played the video. If you wish to view the video from the beginning again, just press  $\triangleleft$  to start playback from the beginning.

**Note** The resume play feature also stores the last viewed frame of the video as background video art, so finding your videos is even easier.

# 5.6 Pictures

You can view your favorite pictures on your player. While you are browsing your pictures, you can listen to music at the same time.

### 5.6.1 Transfer pictures from your computer to your player



You can transfer pictures from your computer to your player using Windows Media Player. See section Organize and transfer pictures and music with Windows Media Player 11 in this user manual for details.

### 5.6.2 Transfer pictures from your player to your computer

- **1** Connect the player to your computer.
- > Your player will be identified as Philips or Philips GoGear in Windows Explorer.
- 2 Go to Media > Pictures (Windows Media Player 10) or Pictures (Windows Media Player 11).
- 3 Drag and drop your pictures to any desired location on your computer.

# 5.6.3 Find pictures on your player

Pictures on your player are organized in albums which are similar to the way they are organized in **Windows Media Player**.



Fig1



From the main menu, select o using ▲ or ▼.
 You can search from the following options:



- 2 Select the picture album folder you wish to view.
- > You will see a thumbnail view (Fig1) of all pictures in that album folder.
- 3 To start a slide show, select , press ►II. If you wish to see a particular picture in its full view, select the thumbnail, press ►II / ►, to start slide show, press ►II again.
- 4 When you are viewing the picture in full view, press < / ► to go to previous / next picture. To return to previous menu, press MENU.

# 5.7 Delete media

You can delete music, videos and pictures via Windows Explorer on your computer.

**Note** The delete option is also available in the menu to delete Artists, Albums, Genres etc. This will permanently remove the entry including all content from your library. In case this content is also contained in a playlist, the entry will continue to be contained in the playlist and on playing back this playlist, the missing content will be skipped.

# 5.8 Radio

From the main menu, select to enter radio mode.

#### **Connect the headphones**

The supplied pair of headphones serves as a radio antenna. Make sure that it is properly connected to ensure optimal reception.

### 5.8.1 Select your FM region

From the main menu, select 🗱 > Radio settings.

Region	Frequency range	Tuning steps
Europe	87.5 - 108MHz	0.05 MHz
USA	87.5 - 108MHz	0.1 MHz
Asia	87.5 - 108MHz	0.1 MHz

### 5.8.2 Auto tune



- 1 Select Auto tune under Radio menu 📷.
- > The player will search for the stations with the strongest signals and automatically save them up to 20 preset channels.

**Tip** Stop auto tune by pressing any key except volume key.

### 5.8.3 Play a preset radio station and tune the station

- 1 From the Radio menu 📷, select **Presets**.
- **2** Press  $\blacktriangle$  or  $\checkmark$  to browse and select the preset stations.

108	3/10	(
In the second	95.3 FM	
87.5	Preset	

- 3 After you select a preset station, short press  $\triangleleft$  /  $\triangleright$  can change to another preset stations.
- 4 You can also tune the frequency of selected preset station by long pressing  $\blacktriangle$  /  $\bigtriangledown$ .
- 5 Short press ▲ or ▼ to move one tuning step, long press ▲ or ▼ to search next nearest strongest signal.
- 6 The frequency bar indicates the change in frequency.
- 7 To confirm and save the signal, press **II**.

# 5.9 Recordings

You can make voice recordings using your player. See sections **Overview of controls and connections** for the location of recording microphone.



- 1 From the main menu, select 👱.
- 2 Select **Start recording** to start recording a voice.
- > Your player will display the voice recording screen and voice recording starts automatically.
- 3 Press **I** to pause.
- 4 Press < to stop and save the voice recording.
- Your voice recording will be saved on your player. (Filename format: VOICEXXX.WAV where XXX is the recording number which will be automatically generated.)
- 5 You can find this file under  $\mathbf{Q}$  > **Recordings library**.

# 5.9.1 Play back recordings

Start recording  Recordings library  Clear library	Start recording  Recordings library  Clear library	<b>9</b>	2/2	(==
Recordings library     Clear library	Recordings library	Start reco	rding	
Clear library	Clear library	Recording	is library	
		Clear libr	ary	

From the main menu, select  $\mathbf{Q}$  > **Recordings library**.

- 1 Select the recording you want to hear.
- 2 Press **I** to confirm.

### 5.9.2 Delete your recordings

The player provides the option to delete all the recordings files of your player.

- 1 From the main menu, select **9** > **Clear library**.
- 2 Press II to confirm.

Your can also delete the recordings on the computer.

- **1** Connect your player to your computer.
- 2 Select your player in Windows Explorer.
- 3 Double click the VOICE folder
- 4 Select the files your want to delete and press **Delete** on your computer keyboard.

### 5.9.3 Upload your recordings to the computer

- **1** Connect your player to your computer.
- 2 Select your player in Windows Explorer.
- > You will find a Voice folder. This folder contains the recordings.
- 3 Copy and paste the recordings to any desired location on the computer.

# 5.10 Settings

The settings menu allows you to make adjustments and personal preferences on your player.



- 1 From the main menu, select 🔅.
- **2** Use  $\blacktriangle$  or  $\checkmark$  to select an option.
- 3 Press ▶ to go to the next level or ◀ to return to previous level.
- 4 Press ► to confirm your selection.
- **5** Press **4** to exit the Settings menu.

In the **Settings** menu, the following options are available:

Settings	Options	More options	Description
Play mode	Off / Repeat 1 Repeat & Shuff	/ Repeat all / Shuffle all / fle	Choose the play mode option for all / selected songs.
Sound settings	Off, Rock, Fun Techno, Custo	k, Jazz, Classical, HipHop, om	Choose the equalizer for best music experience.
Slideshow settings	3 secs / 5 secs	/ 10 secs	Choose to set time between slides
Language	English, French Portuguese, Po Italian, Dutch, S Finnish, Hungar Simplified Chin Japanese, Kore	n, German, Spanish, (Br) ortuguese (European), Swedish, Norwegian, rian, Russian, Polish, nese, Traditional Chinese, ean	Choose the language for display on screen.
Backlight	Always on / 10	) Sec. / 20 Sec. / 30 Sec.	Choose the time for backlight display.
Brightness	6 levels		Choose the contrast level to adjust the brightness.
Screen saver	Off / Clock		Choose clock as screen saver.
Album art	On / Off		Choose the display of music album art.

Settings	Options	More options	Description
Date and time	Set date format	MM/DD/YY DD/MM/YY	Set your player's date format
	Set date	Day / Month / Year	Enter day, month and year to set the date in your player.
	Set time format	12-hrs / 24-hrs	Set your player's time format
	Set time	Hour / Minute / Second	Enter hour, minute and second to set the time in your player.
	Show time in header	Check box	Enable check box to display the time at the top of the screen.
Radio settings	Select frequency region	Europe / USA / Asia	Choose the region in which you operate the FM
Factory settings	Restore factory settings	Restore / Cancel	Choose <b>Restore</b> to clear your player's current settings and restore to default factory settings.
Information summary	Capacity, Free s	oace, Firmware version	Display information of your player.

# 5.11 Use your player to store and carry data files

You can use your player to store and carry data files by copying data files into your player via **Windows Explorer**.



# 6 Update your player

Your player is controlled by an internal program called firmware. New versions of the firmware may be released after you have purchased your player.

A software program called **Philips Device Manager** will monitor the firmware status of your player and notify you if new firmware is available. You need an Internet connection for this.

Install **Philips Device Manager** from the supplied CD or download the latest version from www.philips.com/support.

After the installation of **Philips Device Manager**, every time you connect your player to your computer, **Philips Device Manager** will automatically connect to the Internet and check for updates.

# 6.1 Manually verify whether your firmware is up to date

Make sure your player is charged fully.

- 1 Connect your player to the computer.
- 2 Launch Philips Device Manager from Start > Programs > Philips Device Manager.
- 3 Select your device.
- 4 Click Update.
- Philips Device Manager will check whether a new firmware is available on the Internet and install it on your player.
- 5 When **Update completed** appears on the screen, click **OK** and disconnect the player.
- > A message Updating firmware will be displayed. The player will automatically restart after firmware is completely updated. Your player is now ready to use again.

# 7 Frequently asked questions

If you encounter problems with your player, go through the following points listed in the next section. Please also check out FAQs at www.philips.com/support for further help and other troubleshooting tips.

Consult your dealer or service center if you are unable to find a solution by following these hints.

**Warning** Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

#### My player skips songs.

The skipped song may be protected. You may not have sufficient rights to play the skipped song on your player. Check the music rights with the song provider.

#### My player is not recognized by Windows.

Make sure your computer is running Windows XP (SP2 or higher).

#### My player cannot power on.

Your device battery may be out of power due to long period of non-usage. Please charge your player.

In case of device error, connect your player to the computer and use **Philips Device Manager** to restore your player.

**Important** All your contents will be erased from your player after completion of repair process. After repair, simply synchronize your player again to transfer music to your player.

- 1 Reset your player first by inserting a pin or sharp object into the reset hole at the back of the player.
- 2 Launch Philips Device Manager from Start > Programs > Philips Device Manager. Select the Repair Tab.

	PHILIPS
Philips Device	
hers F5 to check for newly conne	cried devices.
Update Repair	
To repair your player :	
Connect it while pressing the 1	VOL+ Key
Release the key often acked	10
Note : If your device is already re-connect using the above p	y connected, disconnect and rocedure

- 3 While pressing the Vol + on your device, connect it to the PC.
- 4 Confirm Yes when you see the following screen , you can release the Vol + now.

Philips Device Manager 2
PHILIPS
9 Ships Device Philips Streamium SA92xx
Helps Device Nanager
Repair completed, you may continue using your device as usual
Vick www.p4c.philps.com/lor/latest-updates
Cicce

5 Choose your device name (SA61xx) in the box.



6 After the repair is completed, click **OK** and continue using your player as usual.



#### There is no music on my player after transfer.

If you cannot find the songs that you have transferred to your player, check the following:

- Did you transfer using **Windows Media Player**? Files transferred via other means will only be recognized as data files. They will neither appear in the music library of your player nor can the songs be played.
- Are your songs in MP3 or WMA format? Other formats will not play back on the player.

#### My player hangs.

1 In the unlikely event that your player hangs, do not panic. Insert a small pin or other sharp object into the reset hole located at the back of the player. Hold until the player shuts down. Power on again after the player has shut down.

**Solution** Note The existing contents on your player will not be erased.

2 If nothing happens, recharge the battery for at least 4 hours and try to power on or reset again. If this does not work, you might have to repair your player with Philips Device Manager. (See Updade your player section in this user manual for details.)

#### My player is full and I have fewer songs on my player than I expected.

Your player has an internal memory to store songs. Check your model number to see the actual memory size. You will be able to store more songs on your player if you use WMA formatted songs in 64kbps+ with variable bitrate.

+Storage capacity based on 4 minutes per song and 64kbps WMA encoding.

# 8 Technical data

#### Power

- Battery capacity 1000mAh
- Battery type Li-Polymer
- Playtime on internal battery Up to 20 hours audio or 5 hours video
- Rechargeable via USB

#### Dimensions

124 x 74 x 12.7mm

### Weight

153g

### Picture / Display

• White backlight LCD 320 x 240 pixels 65K colors

#### Sound

- Channel separation 45dB
- Equalizer settings Rock, Funk, Jazz, Classical, HipHop, Techno, Custom
- Frequency response 60-18000Hz
- Signal to noise ratio > 85dB
- Output Power (RMS) 2x3mW (16Ω) (European Union countries) 2x12mW (16Ω) (non-European Union countries)

### Speakers

- Built-in speakers
- Speaker type
   2 x full range speakers
- Output power 2 x 0.3 W
- Signal-to-noise ratio
   > 60 dB

### Audio playback

- Play time 15 hours*
- Compression format MP3 (8-320kbps and VBR; Sample rates: 8, 11.025, 16, 22.050, 24, 32, 44.1, 48kHz) WMA (5-320kbps; Sample rates: 8, 11.025, 16, 22.050, 24, 32, 44.1, 48kHz)
- ID3-tag support Album title and artist name

### Video playback

- Play time 4 hours*
- Compression format WMV9 (30fps, 384kbps; 320 x 240 pixels)

#### Still picture display

 Format support JPEG

#### Tuner / Reception / Transmission

• Tuner band FM stereo

#### Storage media

 Built-in memory capacity SA612X 2GB NAND Flash+ SA614X 4GB NAND Flash+ SA618X 8GB NAND Flash+

#### Connectivity

• Headphone 3.5mm, USB 2.0++

#### Software

- Device manager To restore and upgrade
- MediaConverter for Philips Converts following formats to player: AVI (Microsoft video I format), MPEG-1, 2, 4, DVD (*.vob), MOV, WMV, RM etc. Needs Quicktime (for MOV) and Windows Media Player 10 or above (for WMV) installations.
- Windows Media Player 11

#### System requirements

- Windows® XP (SP2 or above) or Vista
- Pentium III 800MHz processor or higher
- 256MB RAM
- 200MB hard disk space or more
- Internet connection (preferable)
- Microsoft Internet Explorer 6.0 or later
- CD-ROM drive
- USB port

- * Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.
- + 1MB = 1 million bytes; available storage capacity will be less.
   1GB = 1 billion bytes; available storage capacity will be less.
   Full memory capacity may not be available as some memory will be reserved for the player.
   Storage capacity based on 4 minutes per song and 64kbps WMA encoding.
- ++ Actual transfer speed may vary based on your operating system and software configuration.

# 9 Glossary

#### A

#### Album

A collection list of songs / pictures.

#### D

### Digital Rights Management (DRM)

A technology that provides a persistent level of protection to digital content by encrypting it with a cryptographic key. Authorized recipients (or end users) must acquire a license in order to unlock and consume the content.

#### G

#### Genres

A particular style or type of music.

#### Μ

#### MP3

An audio compression format known as MPEG-1 Audio Layer 3.

#### Ρ

#### Picture

Image, picture and picture in JPEG file format.

#### Playlist

A list of digital media contents.

#### Playlist on the go

A playlist that can be created on the player by adding favorite songs, albums, artists and genres during music playback.

#### R

#### Rip

To copy digital media content from an audio CD. Content may be converted to a different format during a ripping process.

#### Root menu

The main menu that sits on top of the user interface structure tree.

#### S

#### Songs

An individual track or a discrete piece of audio content.

#### Superscroll™

A Philips trademark user interface navigator feature to enhance the speed of browsing long lists of content.

#### Synchronization

The process of maintaining digital media files on a portable device based on the rules specified by the users. This may require copying digital media files from a computer to a device, updating information on the device or deleting files from the device.

### Т

#### Thumbnail

A small version of the main image, used for indexing and browsing.

#### Title

The largest unit of digital media content. For CD, it may be the name of the CD.

#### W

### WAV

A digital media file format for storing sound.

### Windows Media Audio (WMA)

An audio file in Windows Media Format. The audio content of the file is encoded with one of the Windows Media Audio codecs.

 $\ensuremath{\mathsf{PHILIPS}}$  reserves the right to make design and specification changes for product improvement without prior notice.





Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners © 2007 Koninklijke Philips Electronics N.V. All rights reserved. www.philips.com



Printed in China wk7291