

## English

### Battery precautions

1. Do not use rechargeable batteries.
2. Use only alkaline AA batteries of the same or equivalent type.
3. Insert batteries with the correct polarity.
4. Keep batteries away from children.
5. Dispose of exhausted batteries according to local legal requirements. Do not dispose them by throwing away with normal household rubbish.
6. Avoid short circuiting the contacts in the battery compartment and battery terminals.
7. Remove batteries from the unit if it will not be used for a long period of time.
8. Exhausted batteries should be removed from the battery compartment to prevent over-discharging, which can cause leakage and may cause damage to the clock.

### Getting started

1. Insert 2xAA new batteries as indicated in the battery compartment, and press the RESET key to reset the clock.
2. Slide the OFF/US/UK/DE/JP switch to your desired country mode. After 8 seconds, the clock will automatically start scanning for the radio controlled time signal.

### Note:

In some cases, you may not receive the RC signal immediately. Due to the atmospheric disturbance, the best reception often occurs during nighttime.

### Function keys

+ key

- In normal display, press to switch between 12/24 hour format. In setting mode press to increase the setting value. Press and hold to speed up the setting.

- key

- In normal mode, press to switch between Month&Date/ Date&Month display. In setting mode, press to decrease the setting value. Press and hold to speed up the setting.

- In time zone setting mode, press to select the time zone. (US only)

OFF/US/UK/DE/JP switch:

- Slide to switch between OFF/US/UK/DE/JP mode and to turn off the RC function.

ALARM ON/OFF switch

- Slide to turn the alarm on / off.

DATE SET/TIME SET/ALARM SET/LOCK switch

- Slide to "DATE SET" position to set the date.

- Slide to "TIME SET" position to set the time.

- Slide to "ALARM SET" position to set the alarm time.

- Slide to "LOCK" position to return to normal mode.

RCC key

- Press to receive the RC signal in order to test the reception.

°C/F key

- In normal mode, press to switch between °C/F

RESET key

- Press by using a pin to reset all values to default. In case of a malfunction, the unit has to be reset.

### Product description (Image 1)

1. LCD display
2. DATE SET/TIME SET/ ALARM SET/ LOCK switch
3. + key
4. - key
5. ALARM ON/OFF switch
6. OFF/US/UK/DE/JP switch
7. °C/F key
8. RCC key
9. RESET key
10. Wall mounting holder
11. Folding table stand
12. Battery compartment

### Display symbols (Image 2)

- A. Time
- B. Alarm time
- C. Alarm icon
- D. Day of the week
- E. Indoor temperature
- F. Indoor humidity
- G. RC signal strength indicator
- H. US time zone

### Time zone setting (US only)

In US mode, the default time zone is PACIFIC. If your location is not in the Pacific zone, set the time zone as follows:

1. In normal time mode, slide the OFF/US/UK/DE/JP switch to the US position in order to enter the time zone setting mode.
2. Press "+/-" key to select the relevant time zone: P=Pacific M=Mountain C=Central E=Eastern.

### Signal strength indicator (Image 3)

The signal indicator displays signal strength in 3 levels. Wave segment flashing means time signals are being received.

### Note:

You may use the RCC key to receive the time signal manually. The receive mode stops automatically after 6-12 minutes.

### Manual time setting

If the clock does not receive the RC time signal successfully or you turn off the RC function, you can set the time manually. As soon as the signal of the transmitter is received again, the clock will automatically synchronize with the received time.

1. In normal mode, slide the "DATE SET/TIME SET/ ALARM SET/LOCK" switch to "TIME SET" position to enter the time setting mode.
2. Press "+/-" key to adjust the desired value. Press and hold to speed up the setting.
3. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "LOCK" position to save the setting and return to normal mode.

### Calendar setting

1. In normal mode, slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "DATE SET" position to enter the date setting mode.
2. Press "+/-" key to adjust the desired value. Press and hold to speed up the setting.
3. Slide the "DATE SET/TIME SET/ALARM SET/LOCK" switch to "LOCK" position to save the setting and return to normal mode.

### Setting the alarm

1. In normal mode, slide the "DATE SET/ TIME SET/ALARM SET/LOCK" switch to "ALARM SET" position to enter alarm setting mode.
2. Press "+/-" key to adjust the desired value. Press and hold to speed up the setting.
3. Slide "DATE SET/TIME SET/ALARM SET/LOCK" switch to "LOCK" position to save the setting and return to normal mode.

### Using alarm

1. Set the alarm time as described in the previous section.
2. Slide the "ALARM ON/OFF" switch to "ALARM ON" position to turn on the alarm. The bell icon "鳴る" will display on the LCD.
3. Slide the "ALARM ON/OFF" switch to "ALARM OFF" position to turn off the alarm. The bell icon will disappear.

### Note:

1. When the alarm sounds, it will stop automatically without any operation after 60 seconds. The alarm will sound again at the same time the next day unless turned off.

### Battery replacement

When the LCD becomes dim, replace with 2xAA new batteries into the clock compartment at once.

### Important

For best reception performance, please read the following instructions.

1. We strongly recommend you start your clock at night. Allow the clock to receive the signal automatically overnight.
2. Place the unit away from interfering sources such as TV set, computers, microwaves, etc.

### 4.

### 5.

### 6.

### 7.

### 8.

### 9.

### 10.

### 11.

### 12.

### 13.

### 14.

### 15.

### 16.

### 17.

### 18.

### 19.

### 20.

### 21.

### 22.

### 23.

### 24.

### 25.

### 26.

### 27.

### 28.

### 29.

### 30.

### 31.

### 32.

### 33.

### 34.

### 35.

### 36.

### 37.

### 38.

### 39.

### 40.

### 41.

### 42.

### 43.

### 44.

### 45.

### 46.

### 47.

### 48.

### 49.

### 50.

### 51.

### 52.

### 53.

### 54.

### 55.

### 56.

### 57.

### 58.

### 59.

### 60.

### 61.

### 62.

### 63.

### 64.

### 65.

### 66.

### 67.

### 68.

### 69.

### 70.

### 71.

### 72.

### 73.

### 74.

### 75.

### 76.

### 77.

### 78.

### 79.

### 80.

### 81.

### 82.

### 83.

### 84.

### 85.

### 86.

### 87.

### 88.

### 89.

### 90.

### 91.

### 92.

### 93.

### 94.

### 95.

### 96.

### 97.

### 98.

### 99.

### 100.

### 101.

### 102.

### 103.

### 104.

### 105.

### 106.

### 107.

### 108.

### 109.

### 110.

### 111.

### 112.


### 113.

### 114.


### 115.

### 116.</h

1.

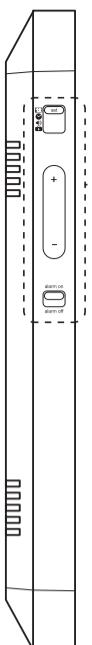

2.


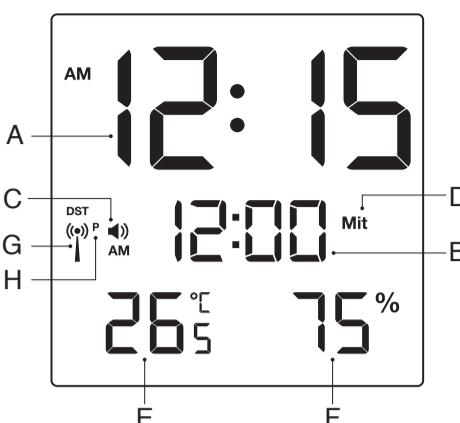


3.

Poor signal quality  
Schlechte Signalqualität  
Signal faible

Acceptable signal quality  
Ausreichende Signalqualität  
Signal acceptable

Excellent signal quality  
Ausgezeichnete Signalqualität  
Signal excellent

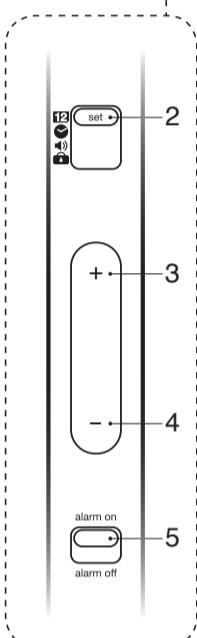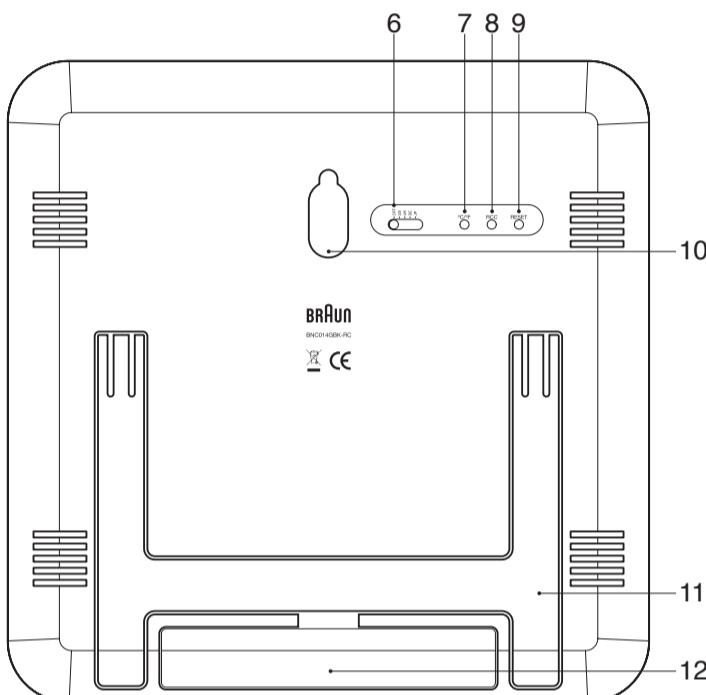

#### Fonctionnement de l'alarme

- Réglez l'heure de réveil selon les indications de la section précédente.
- Déplacez le curseur ALARM ON/OFF en position ALARM ON pour activer l'alarme. Le symbole « ☺ » s'affiche sur l'écran LCD.
- Déplacez le curseur ALARM ON/OFF en position ALARM OFF pour désactiver l'alarme. Le symbole de l'alarme disparaît.

#### Remarque :

Lorsque l'alarme retentit, celle-ci s'interrompt automatiquement au-delà de 60 secondes. Elle retentira à nouveau à la même heure le jour suivant à moins d'être désactivée.

#### Remplacement des piles

Lorsque la luminosité de l'écran LCD s'affaiblit, remplacez immédiatement les piles par deux piles AA neuves.

#### Important

- Pour des performances de réception optimales, veuillez prendre en compte les instructions suivantes.
- Nous vous recommandons vivement de démarrer votre horloge durant la nuit. Cela permettra une bonne réception automatique du signal.
  - Placez l'horloge à l'écart des sources d'interférences telles que les téléviseurs, les ordinateurs, les fours à micro-ondes, etc.
  - Évitez de placez l'horloge sur une surface métallique ou à proximité d'une telle surface.
  - Évitez les espaces fermés tels que les terminaux aéroportuaires, les caves, les bâtiments en ciment ou les usines.

**Remarque:** L'exposition à un environnement chargé en électrostatique peut causer la remise à zéro de l'horloge. Dans cette éventualité, suivez les instructions du présent manuel pour la réinitialiser.

#### Garantie

**2 ans de garantie contre les défauts matériels et de fabrication (à l'exclusion des piles).** Cette garantie est valable dans les pays où ce réveil est officiellement disponible à la vente.

Les écrans cassés ou fissurés ne sont pas couverts par la garantie.



Ligne d'assistance Braun

En cas de problème avec votre produit, veuillez vous adresser au centre d'assistance local renseigné sur le site:

[www.braun-clocks.com](http://www.braun-clocks.com)  
[www.braun-watches.com](http://www.braun-watches.com)

ou composer le +44 208 208 1833

**AVERTISSEMENT ! Ce produit est couvert par la directive relative aux déchets d'équipements électriques et électroniques (DEEE). Il ne doit pas être évacué avec les ordures ménagères. Il convient de le déposer dans un centre de collecte local pour recyclage.**

Braun est une marque de commerce enregistrée par Braun GmbH, Kronberg, Allemagne, sous licence de Zeon Ltd.

**BRAUN**

**BNC014G-RC**  
**Global**  
**radio controlled**  
**wall clock**

**Funkgesteuerte**  
**Wanduhr für den**  
**weltweiten Gebrauch**

**Horloge murale**  
**internationale**  
**radio-pilotée**

**English**  
User instructions  
Guarantee

**Deutsch**  
Gebrauchsanweisung  
Garantie

**Français**  
Mode d'emploi  
Garantie