



Recycle Disassemble Instruction (Dismantled Information)

**Requirements according to ANNEX VII of DIRECTIVE 2012/19/EU
on waste electrical and electronic equipment (WEEE)**

Materials and components with hazardous content

LCDs may contain hazardous substances like Pb and BFRs which are covered by exemptions under the RoHS directive. However, the majority is present in the printed circuit boards assembly. In order to reduce emissions as much as possible, a complete disposal of the old appliance is required. This treatment may only be performed in authorized handling plants.

Product Name: Interactive flat panel

Model No.: RE6503





Disassembly Tools

Tool	picture
Philips Screwdriver for M3 screw	A red-handled Philips screwdriver with a standard flat tip, lying on a light-colored wooden surface.
nosed pliers	A pair of red-handled pliers with curved jaws, designed for working in tight spaces, lying on a light-colored wooden surface.
Diagonal Cutting Pliers	A pair of red-handled pliers with diagonal cutting jaws, lying on a light-colored wooden surface.
Slotted screwdriver	A green-handled slotted screwdriver with a standard flat tip, lying on a light-colored wooden surface.
Six Point Sockets	A yellow-handled screwdriver with a six-point socket head, lying on a light-colored wooden surface.
Philips Screwdriver for M2.5 screw	A red-handled Philips screwdriver with a smaller flat tip, designed for M2.5 screws, lying on a light-colored wooden surface.
knife	A standard kitchen knife with a black handle and a serrated blade, lying on a light-colored wooden surface.



Disassembly process

<p>1、 Remove the rear shell and frame fixing screws with an electric screwdriver.</p> <p>2、 Take down the hand screws at the corners in screwdrivere, and take down the corners;</p> <p>3、 Remove the large and small rear shells.</p>	
<p>1、 Use electric screwdriver to remove all board fixing screws</p> <p>2、 Remove the board.</p>	
<p>1. Remove the wire from the board interface by hand.</p> <p>2. Tear off the acetic acid adhesive tape for thread trimming by hand, open the adjustable wire fixing seat, and unscrew the adhesive thread binding ring.</p>	



1. Remove all wires.


2, Use the electric screwdriver to fix the screws of the sheet metal parts on the back plate, and remove the sheet metal parts.

3. Remove the integrated screen.



1、 Use an electric screwdriver to remove the fixing screw of the glass pressing block and remove the glass pressing block.

2、 Remove the tempered glass.

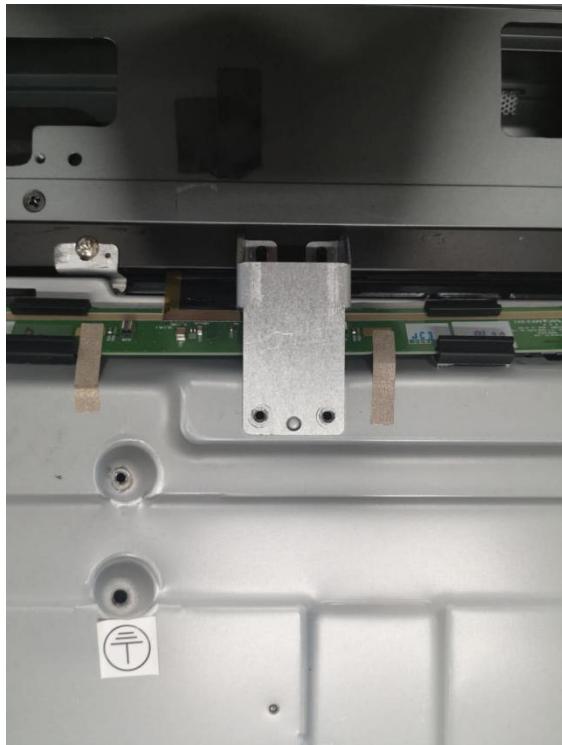



1. Use the electric screwdriver to remove the fixing screws at 4 corners.
2. Disconnect the connection interface of the touch frame.
3. Remove the corner and disconnect the connections between the profiles.
4. Remove the touch frame from the profile.



Disassembly Time

Total time: about 60 minutes