


Quick Setup Guide

AX3000 Dual-band WiFi Range Extender

RP-AX58

Hardware Overview

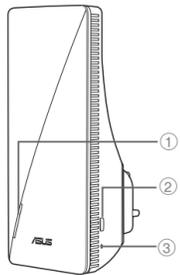

- ① LED
- ② WPS button
- ③ Reset button
- ④ LAN port



④



Specifications:

AC Power board	AC Input: 100V ~240V		
Operating Temperature	0~40°C	Storage	0~70°C
Operating Humidity	50~90%	Storage	20~90%

Service and Support



<https://www.asus.com/support>

Video Tutorials




https://qr.asus.com/wl_videotutorials

PAP 22 COLLEZIONE DI CARTA

BEFORE SETUP WE SUGGEST...

Placing your RP-AX58

Plug your RP-AX58 into a power outlet near your router/AP and wait for the LED to turn solid blue.

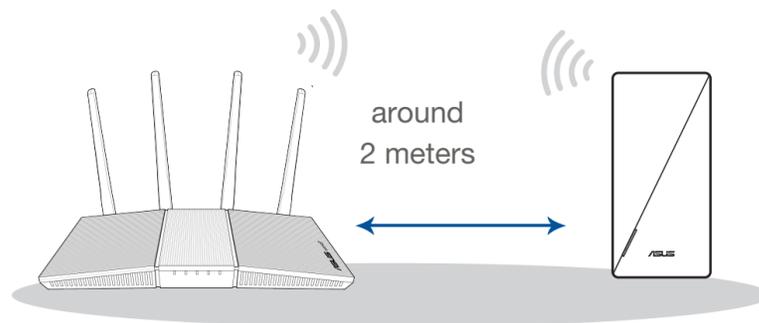

SETUP METHODS Set up RP-AX58 as a WiFi range extender

Download the ASUS Extender App and follow the onscreen instructions for setup.



ASUS Extender APP

SETUP METHODS Set up RP-AX58 as an AiMesh Node

Download the ASUS Router App and follow the onscreen instructions for setup.



ASUS Router APP