



English Important safety information

Important
Read this user manual carefully before you use the machine and save it for future reference.

Danger

- Never immerse the machine in water or any other liquid.
- Warning**
 - Check if the voltage indicated on the bottom of the machine corresponds to the local mains voltage before you connect the machine.
 - Connect the machine to an earthed wall socket.
 - If the mains cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
 - Do not use the machine if the plug, the mains cord or the machine itself is damaged.
 - This machine can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and if they understand the hazards involved.
 - Cleaning and user maintenance shall not be made by children unless they are older than 8 years.
 - Children shall not play with the machine.
 - Only use this appliance for its intended purpose to avoid potential hazard or injury.

Caution

- Always return the machine to a service center authorized by Philips for examination or repair. Do not attempt to repair the machine yourself, otherwise your warranty becomes invalid.
- After unpacking the machine, never put your Senseo machine on its side. Always keep it in upright position, also during transport.
- Do not use the machine in combination with a transformer, as this could cause hazardous situations.
- Always put the machine on a flat and stable surface.
- Do not place the machine on a hotplate or directly next to a hot oven, heater or similar source of heat.
- Do not place the machine in a cabinet when in use.
- Do not leave the machine unattended longer than 15 minutes.
- Do not use the machine at altitudes higher than 1250 meters above sea level.
- Never pour any other liquid than clean cold water into the water reservoir.
- Never flush the machine or let it brew coffee when the spout is not in place.
- Flush the coffee machine with fresh water before you use it for the first time. This causes the system to fill with water, which is essential for the machine to work properly.
- Do not use the machine at a temperature below 0 °C. Water left in the machine may freeze and cause damage.
- Do not use the machine in combination with water softeners based on sodium exchange.
- Descaling your machine regularly. The machine indicates when descaling is needed. Not doing this will make your machine stop working properly. In this case, repair is not covered by your warranty.
- Never use a descaler or acid on your machine such as sulphuric acid, hydrochloric acid, or ammonia acid (eg. vinegar). These descaling agents may damage your coffee machine.
- The machine is intended for normal household use only. It is not designed for use in environments such as staff kitchens of shops, offices, farms or other working environments, nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.

Compliance with standards

This machine complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

The energy consumption of this machine in off mode is less than 0.5 Watt. This means that this machine complies with European Directive 2009/125/EC, which sets the ecological design requirements for energy-using products.

Frost-free storage

Only use and store the machine in a frost-free place.

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories

or to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

Recycling

This symbol means that electrical products shall not be disposed of with normal household waste (Fig. 1).

- Follow your country's rules for the separate collection of electrical products.

- This symbol means that it is necessary to check the recycling provisions of your local municipality (Fig. 2).

- For an explanation of the material symbols, see the separate enclosed leaflet.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the machine. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Philips Consumer Care Center in your country.

Problem**Solution**

The light in the button I pressed flashes quickly.	Fill the water reservoir with water.
The float in the water reservoir may be stuck. Empty the water reservoir and shake it a few times to release the float. Clean the water reservoir with hot water and some washing-up liquid or in the dishwasher.	
The light in the button I pressed continues to flash slowly.	If this takes longer than two minutes, your machine may be defective. Contact the Philips Consumer Care Center in your country.
The lights of the 1-cup and 2-cup button are flashing at the same time before and after brewing coffee.	Limescale has built up. You need to descale the machine.
Water or coffee leaks out of the machine.	You did not close the lid properly.
The coffee pod(s) properly in the center of the pod holder, with the convex side pointing downwards according to picture 3 in chapter 'Brewing coffee'.	Place the coffee pod(s) properly in the center of the pod holder, with the convex side pointing downwards according to picture 3 in chapter 'Brewing coffee'.
The sieve in the center of the pod holder is clogged. Unclog it with a washing-up brush.	Check if the sealing ring of the lid is stuck under the edge of the distribution disk. If it is, pull it out from under the distribution disk carefully.
The coffee volume changed.	Check if you have set the Intensity Select slide to the preferred volume setting.
The sieve in the center of the pod holder is clogged. Unclog it with a washing-up brush.	Descale the machine according to the instructions (see 'Descaling the Senseo').
The coffee is not hot enough.	Limescale has built up. You need to descale the machine.
Tip: before brewing coffee, preheat the cup by rinsing it with hot water or brew a coffee without coffee pod.	
I cannot open the lid.	Switch off the coffee machine. Pull up the lever and wait 24 hours before you open the lid. To prevent this from happening, make sure that the sieve in the pod holder is clean and not clogged.

Latviešu Svarīga informācija par drošību

Svarīgi

Pirms ierīces lietošanas uzmanīgi izlasiet šo lietošanas pamācību un saglabājiet to, ja vajadzības gadījumā varētu iestāties tajā arī turpmāk.

Bistami

- Nekad neiemēriet ierīci ūdeni vai kādā citā skādrumā.
- Brīdinājums**
 - Pirms kafijas automātā pievienošanas elektrotiklām pārbaudiet, vai ierīces apakšdaļā norādītais spriegums ir atlauts vienādā elektrotikla spriegumam.
 - Pievienojiet ierīci tikai lezonētās sienas kontaktais.
 - Ja elektrobris vads ir bojāts, tas jāmaina Philips pilnvara tehniskās apkopes centra darbiniekiem vai līdzīgi kvalificētiem personām, lai izvairītos no briesmām.
 - Neizmantojiet ierīci, ja ir bojāts kontaktpusaudzis, elektrobris vads vai pati pārbaudē.
 - Šo ierīci var lietoztas ātri 8 gadiem un vecumā personas ar ierobežotām fiziskām, uztverēm vai parādījumiem, kas varētu ietekmēt dzīvesveidu un zināšanu, ja šīm personām nēst modrošinātās uzraudzības, vienīgi norādījumi par ierīces droši lietošanai.
 - Bēriņi bez uzraudzības nedrīksti tikt ierīci vai veikt tās tehnisko apkopi, vienīgi, ja viņi vecāki par 8 gadiem ir tiek uzraudzīti.
 - Glābājet ierīci, tās piederumus un strāvas vadu vietas, kuras nav pieejamas bēriņiem vecumā līdz 8 gadiem.
 - Čilīdiņi nedrīksti rotātējiet ierīci.
 - Lai izvairītos no iespējama apdrošinājuma vai traumas, šo ierīci lietojiet tikai pārbaudē.

leverbīti

- Vienmēr lietojiet apakša vai remonta, ierīci nododiet Philips pilnvara tehniskās apkopes centram. Nemēģiniet iebūvi līdzīgi spārniem vai nos spēkā.
- Piešķiriet izšķirošas nekādām ierīcēm Senseo kafijas automātu uz viņiem. Viennēr glābājet to vertikālu stāvotā, ja vienādā garēvītē.
- After unpacking the machine, never put your Senseo machine on its side. Always keep it in upright position, also during transport.
- Never put normal ground coffee or use torn pods in the pod holder, as this causes it to become blocked.
- Do not use the machine in combination with a transformer, as this could cause hazardous situations.
- Always put the machine on a flat and stable surface.
- Do not place the machine on a hotplate or directly next to a hot oven, heater or similar source of heat.
- Do not place the machine in a cabinet when in use.
- Do not leave the machine unattended longer than 15 minutes.
- Do not use the machine at altitudes higher than 1250 meters above sea level.
- Never pour any other liquid than clean cold water into the water reservoir.
- Never flush the machine or let it brew coffee when the spout is not in place.
- Flush the coffee machine with fresh water before you use it for the first time. This causes the system to fill with water, which is essential for the machine to work properly.
- Do not use the machine at a temperature below 0 °C. Water left in the machine may freeze and cause damage.
- Do not use the machine in combination with water softeners based on sodium exchange.
- Descaling your machine regularly. The machine indicates when descaling is needed. Not doing this will make your machine stop working properly. In this case, repair is not covered by your warranty.
- Never use a descaler or acid on your machine such as sulphuric acid, hydrochloric acid, or ammonia acid (eg. vinegar). These descaling agents may damage your coffee machine.
- The machine is intended for normal household use only. It is not designed for use in environments such as staff kitchens of shops, offices, farms or other working environments, nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.

Atbilstība standartiem

Šī ierīce komplīē visus arī eiropeiskās standartās un regulācijām, kas attiecīgiem pārbaudējuma rezultātiem.

The energy consumption of this machine in off mode is less than 0.5 Watt. This means that this machine complies with European Directive 2009/125/EC, which sets the ecological design requirements for energy-using products.

Conformity with standards

This machine complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

The energy consumption of this machine in off mode is less than 0.5 Watt. This means that this machine complies with European Directive 2009/125/EC, which sets the ecological design requirements for energy-using products.

Frost-free storage

Only use and store the machine in a frost-free place.

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories

or to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

Recycling

This symbol means that electrical products shall not be disposed of with normal household waste (Fig. 1).

- Follow your country's rules for the separate collection of electrical products.

- This symbol means that it is necessary to check the recycling provisions of your local municipality (Fig. 2).

- For an explanation of the material symbols, see the separate enclosed leaflet.

Garantija un atbalsts

Šī izstrādājumam uzturējums Versuni ierīci gāvudāgū vāku garantiju kopā tā ieguldītās daļas. Šī garantija nav nemēri ēļā, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās.

Ja ierīcei ir nepieciešams atjaunošanas ierīces mērķās, ja ierīcei ir nepieciešams atja

