



Legion T730/T530 Series User Guide

Machine Type (MT): 90JF, 90JL, 90JU, 90JY, 90K0, 90L3, 90L4, 90JG Energy Star MT: 90JF, 90JL, 90JY, 90L3

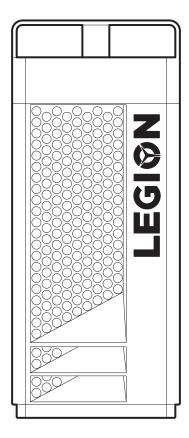

Front and top view of the computer

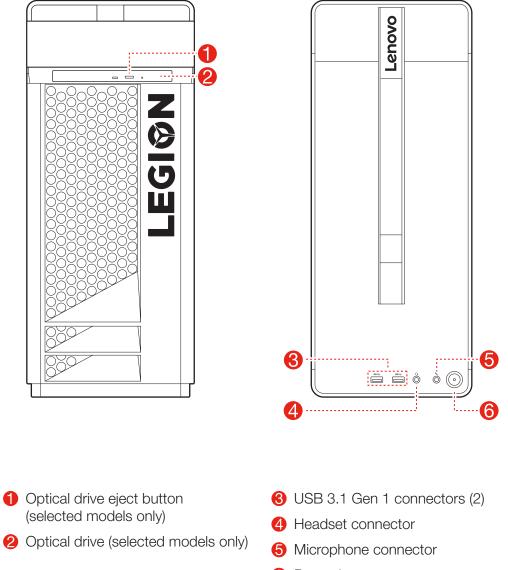


6 Power button

ATTENTION: Be sure not to block any air vents on the computer. Blocked air vents may cause thermal problems.

NOTE: This computer only can be placed in a vertical position.

Rear view of the computer

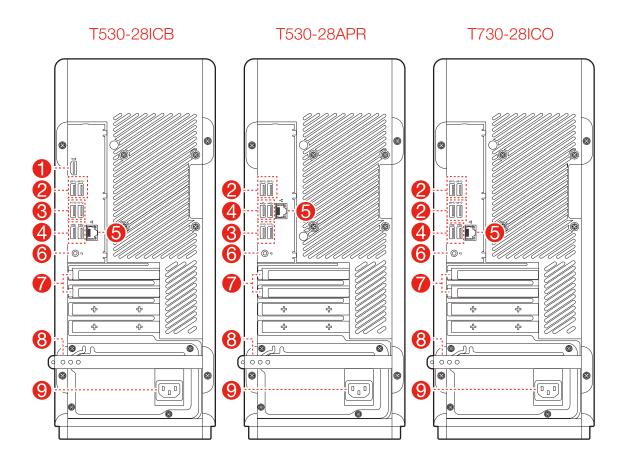

- HDMI-out connector
- **2** USB 3.1 Gen 1 connectors (2)
- **(3)** USB 3.1 Gen 2 connectors (2)
- USB 2.0 connectors (2)
- 6 Ethernet connector

- 6 Headset connector
- Expansion card slots (such as graphic card)
- 8 Rubber cable tie
- 9 Power connector

NOTE: If your model has two VGA monitor connectors, be sure to use the connector on the graphics adapter.

Safety information for replacing CRUs

Do not open your computer or attempt any repairs before reading the "Important safety information" in the *Safety, Warranty, Environment, Recycling Information Guide* and *Important Product Information Guide* that was included with your computer.

If you no longer have this copy of the Safety, Warranty, Environment, Recycling Information Guide and Important Product Information Guide, you can obtain one online from the website at http://www.lenovo.com/UserManuals.

Pre-disassembly instructions

Before proceeding with the disassembly procedure, make sure that you do the following:

- 1. Turn off the power to the system and all peripherals.
- 2. Unplug all power and signal cables from the computer.
- 3. Place the system on a flat, stable surface.


CRUs for your computer include:

- keyboard
- mouse
- power cord
- computer cover
- hard disk drive
- optical drive
- solid state drive
- heat sink and fan assembly
- PCI express adapter
- memory module
- coin-cell battery
- power supply


This part contains instructions for replacing the following parts:

- Hard disk drive (Follow steps: 3 4 6)
- Optical drive (Follow steps: 3 4 7)
- Solid state drive (Follow steps: 3 4 8)
- Heat sink and fan assembly (Follow steps: 3 4 9)
- PCI express adapter (Follow steps: 6) (4) (0)
- Memory module (Follow steps: 3 4 1)
- Coin-cell battery (Follow steps: 3 4 2)
- Power supply (Follow steps: 3 4 3)


Removing the keyboard

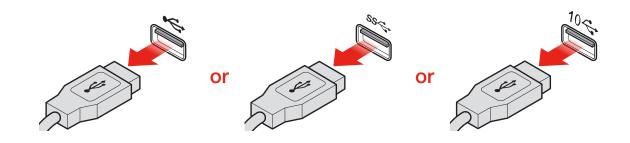


2 Removing the mouse

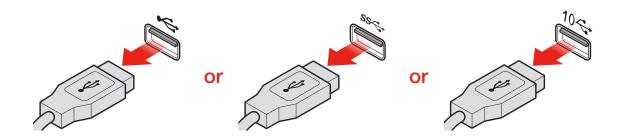


3 Removing the power cord

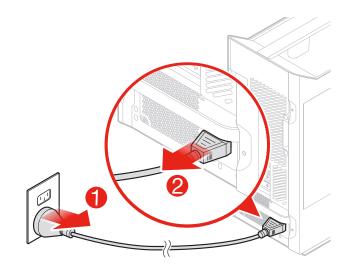


A Removing the computer cover

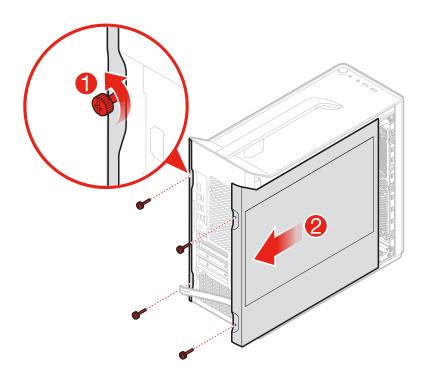


5 Removing the front bezel

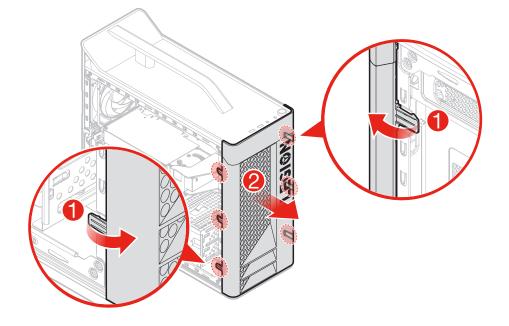


6 Replacing a hard disk drive

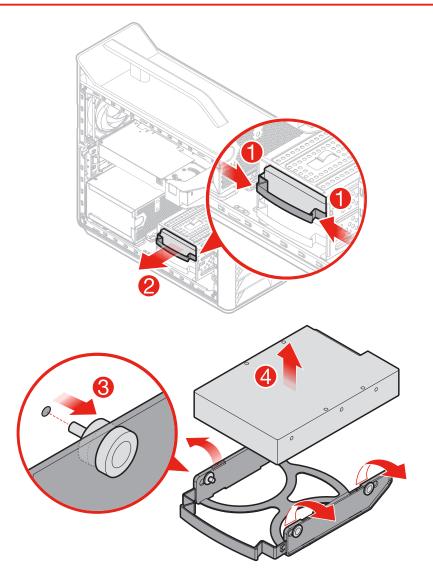


Replacing the optical drive

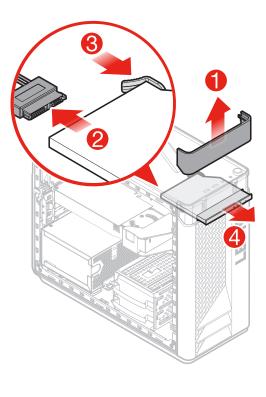

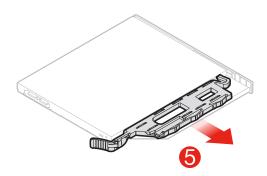


8 Replacing the solid state drive

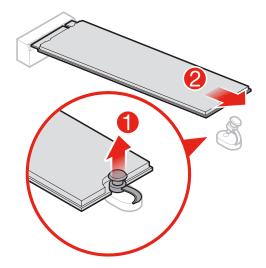


9 Replacing the heat sink and fan assembly


• Type 1

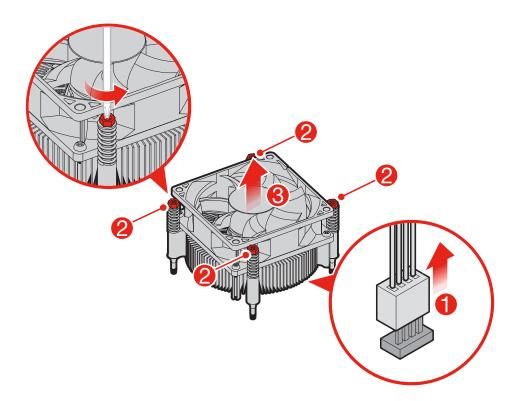


• Type 2

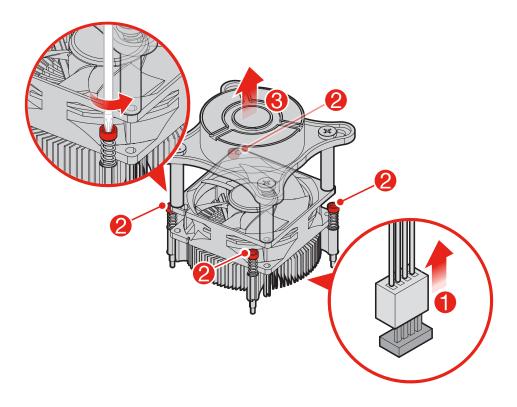


• Type 3

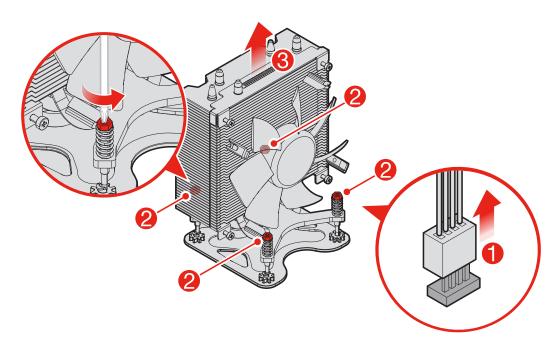


• Type 4

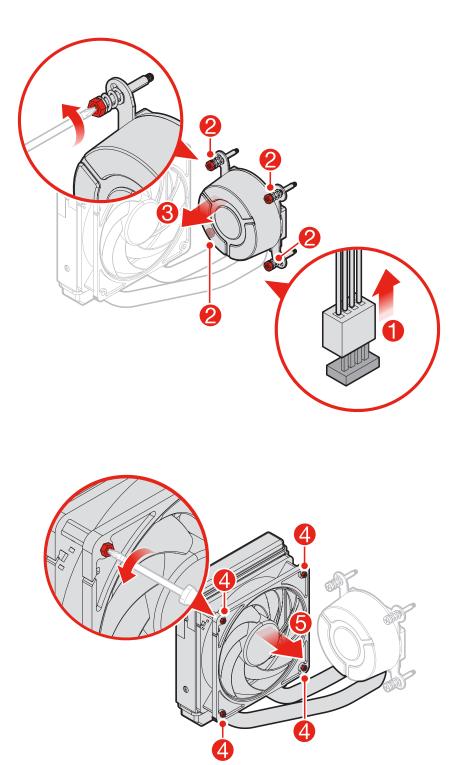


Replacing a PCI express adapter

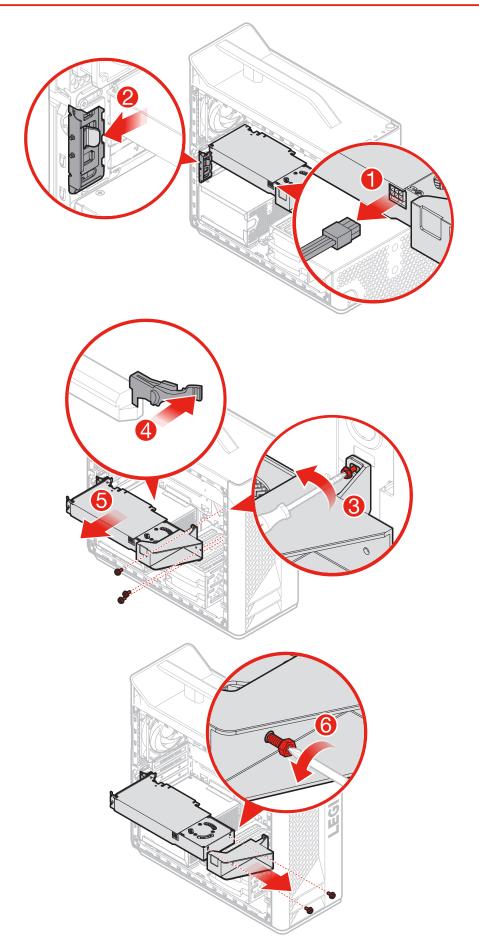

NOTE: When you install the PCI express adapter, place the PCI port area toward the EMI gasket with the correct orientation.

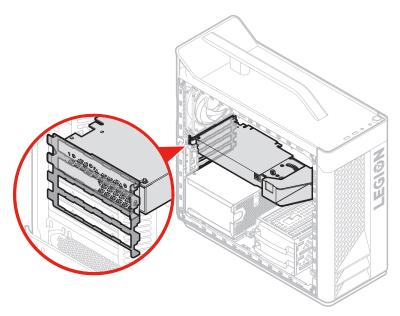

Replacing the memory module

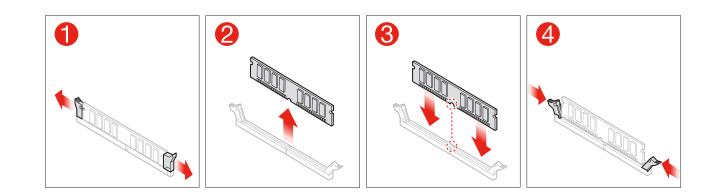

Replacing the coin-cell battery

