


MediaStation Setup Guide

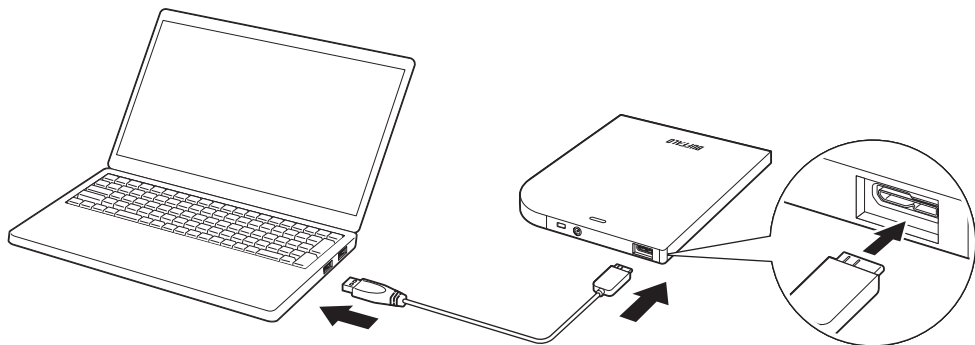

Connecting to a USB Type-C Port on a Computer

If using a BRXL-PUS6U3 unit, use the USB Type-A to Type-C adapter included with the MediaStation.

Using CyberLink Software for Windows

- 1 Go to the appropriate download page below for your model.

You can find the model name on the label at the bottom of the unit.


If "Model" includes BRXL-PUS6U3: <https://d.buffalo.jp/BRXL-PUS6U3/>

If "Model" includes DVSM-PUV8U3: <https://d.buffalo.jp/DVSM-PUV8U3/>

- 2 Download the software from the corresponding page.

Sign in to your CyberLink account (or create one if needed).

You will then need to enter the product key, which is also located on the label at the bottom of the unit.

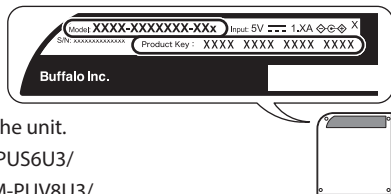

The LED Is Blinking or Glowing Red

The MediaStation may not be receiving enough power from the computer. You will not be able to use the MediaStation while the LED glows red. In such a case, use a USB-A power adapter (output: 2.0 A or higher, 5 V) and the included DC cable to provide additional power. The USB-A power adapter is not included.

Note: Depending on the USB-A power adapter used, the LED may keep blinking red even when the MediaStation is receiving sufficient power.

