

Getting Started Guide for D-Link Network Video Recorder (NVR)



PRODUCT QUICK INSTALLATION GUIDE




DNR-F4432-16P

32CH 4HDD NVR with 16Ch PoE

STEP 1.

Remove screws to open the Network Video Recorder housing and install up to four SATA HDDs.

Connect the SATA cables to the HDDs.

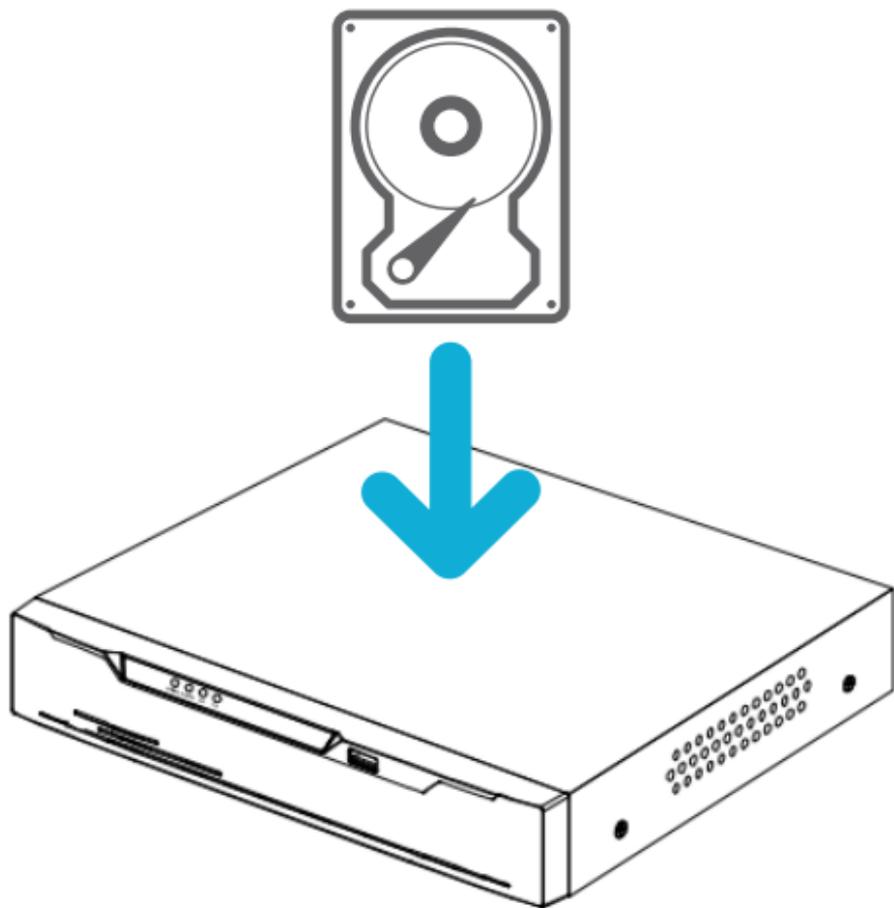

STEP 2.

Connect LAN port to your network.

Connect Cameras to PoE ports on the NVR.

NOTE: If you need to connect more than 16 Cameras please connect them to a PoE switch on your LAN.


Connect your monitor to either VGA or HDMI port.

Power on the NVR.

PoE

LAN

VGA/HDMI

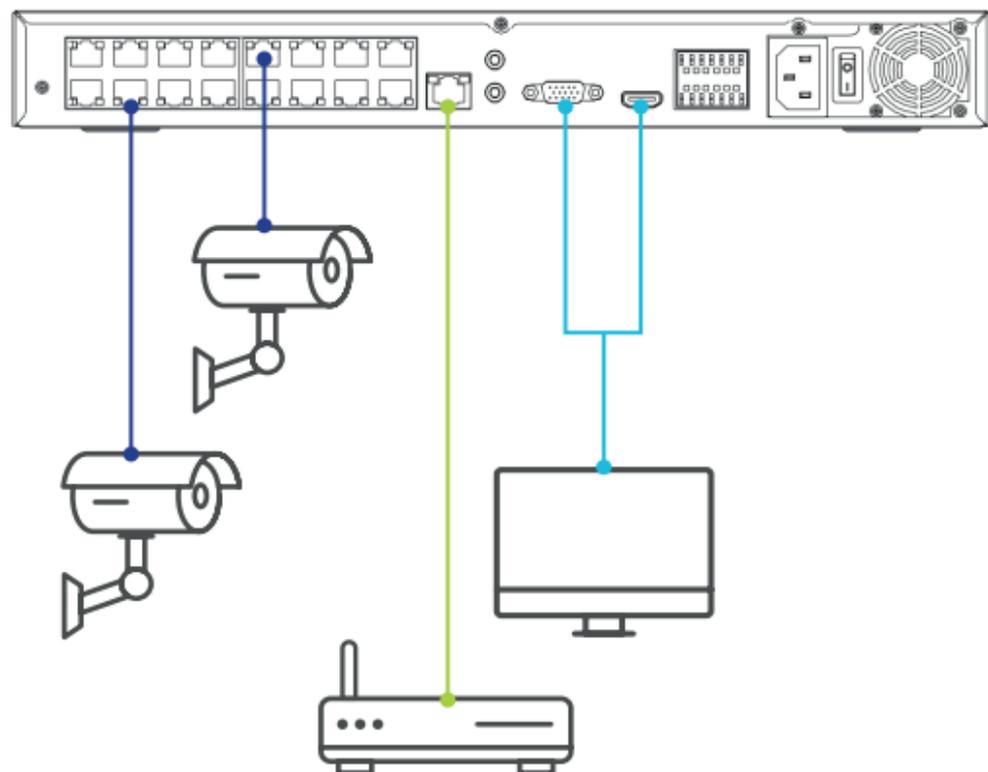


STEP 3.

Wait for on-screen Setup Wizard.

Assign password to your Network Video Recorder.


Type in the channel (camera) password.
Camera's default password is "admin".

Continue the setup following the on-screen instructions.

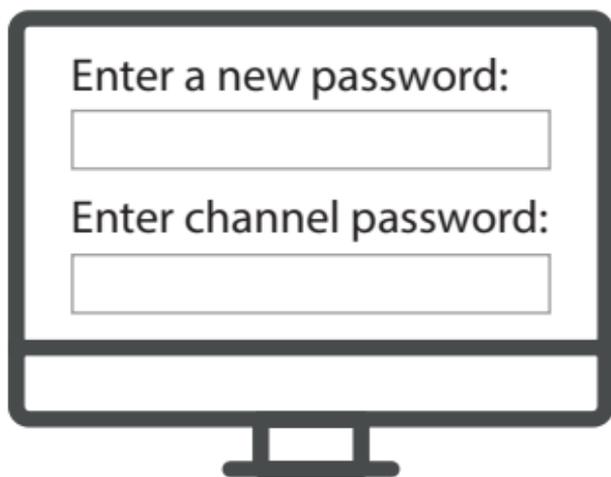


STEP 4.

Under the NVR network settings - enable DHCP.

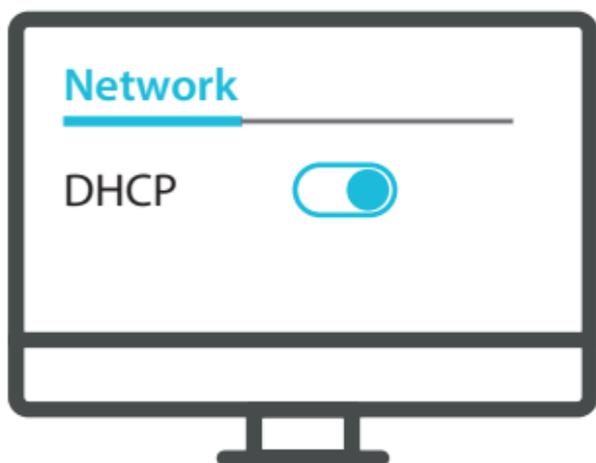

Wait for the NVR to automatically discover and add your cameras. Successfully added cameras will be shown with a green dot.

You can also add cameras manually by selecting them and pressing the **"Add"** button.

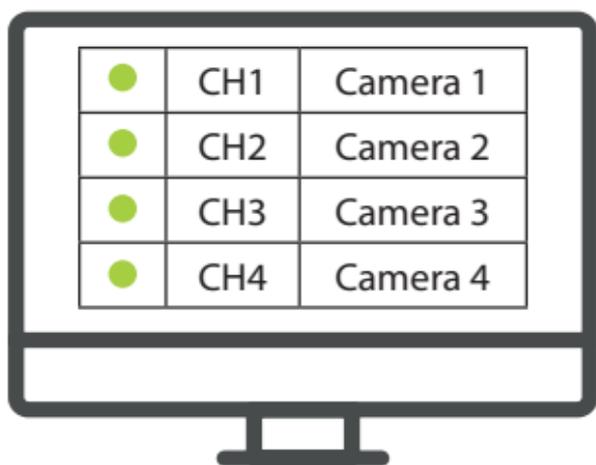

STEP 5.

Install the D-Link CCTV app on your phone and scan the QR code to add your NVR.

You can also find your NVR's unique QR code under Network > P2P.

Download the **free D-Link CCTV** app on your smartphone or tablet



Add "P2P Device" and
Scan QR Code within the app

