




# NetShelter® RX Medium Density Enclosures

## Guide for Receiving, Unpacking, and Moving

AR5340

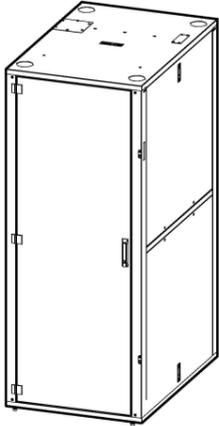

AR5340F



### IMPORTANT SAFETY INSTRUCTIONS

#### ⚠ WARNING

##### HEAVY EQUIPMENT/TIP HAZARD

- The enclosure is easily tipped. Use caution when unpacking or moving.
- At least two people are required to unpack the enclosure.
- Use a pallet jack or forklift to move the enclosure while it is still on its shipping pallet.
- Make sure the leveling feet are up and push the enclosure only from the front or rear when moving it on its casters. Never push the enclosure from the sides.
- Wear appropriate personal protective equipment (PPE) and follow safe work practices.


**Failure to follow these instructions can result in death or serious injury.**

### Receiving



- Before unpacking the shipment, carefully inspect the exterior of the shipment immediately upon receipt.
- Once you have unpacked the enclosure, carefully inspect it for visible signs of shipping damage.
- If you detect shipping damage, contact your shipping company and APC Customer Support at [www.apc.com](http://www.apc.com).

### Storage

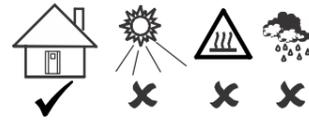

#### NOTICE



Store the enclosure indoors in a temperature controlled environment.

### Unpacking





The shipping materials are recyclable. Save them for later use, or dispose of them appropriately.


1. Cut the plastic outer cover at the CUT HERE label.
2. Cut the bands securing the remaining packaging materials.

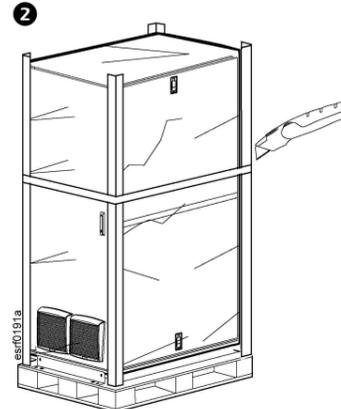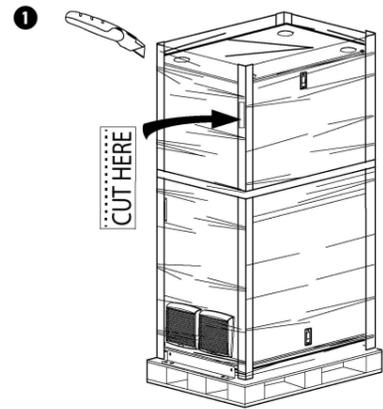


3. Remove the corrugated corner protectors.
4. Remove the plastic bag.

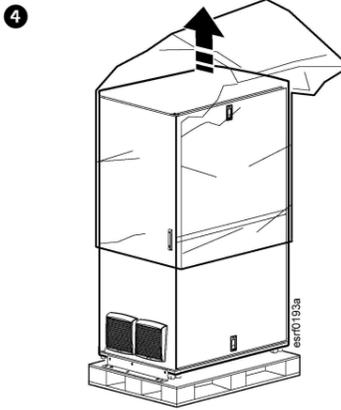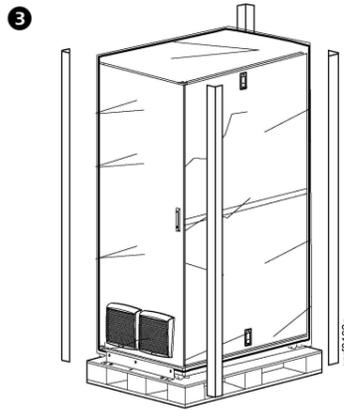


5. Use a forklift or a pallet jack to move the enclosure while it is still on the pallet if possible.

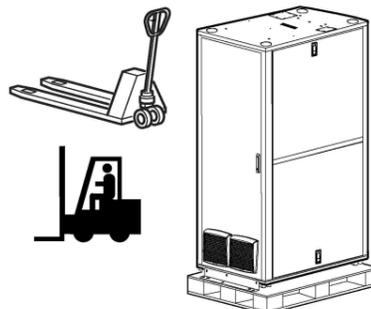

6. Remove the three (3) M8 x 20 mm bolts with captive washers securing each bracket to the enclosure at the front and rear.

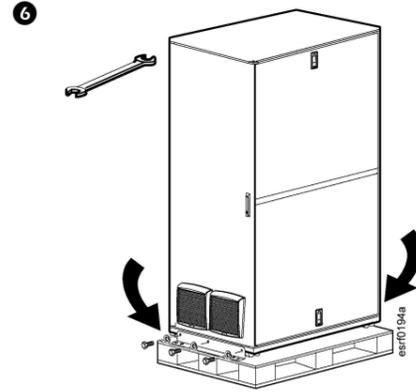

7. Remove the two (2) M8 x 14 mm bolts securing each bracket to the pallet at the front and rear.

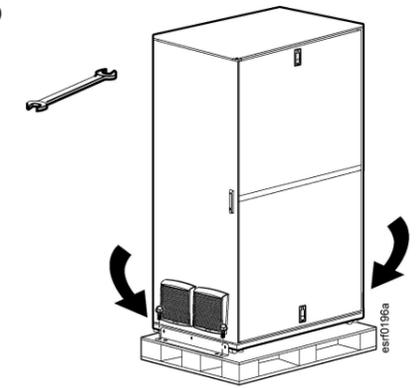

3/2023

990-900001A

© 2023 Schneider Electric. All rights reserved.


**Worldwide Customer Support**  
Customer support and warranty information is available at [www.apc.com](http://www.apc.com)

## NOTICE

Once the pallet brackets have been removed, you can move the enclosure by lifting it using M10 eye bolts and appropriate lifting equipment (not provided).

8. Remove the hole plugs with a flat tipped screwdriver.


**NOTE:** Save the hole plugs. They must be reinstalled following completion of Step 9.

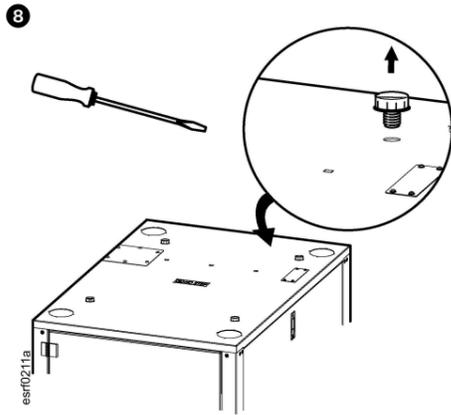

9. Use M10 x 20 mm shoulder eye bolts with a vertical lift rating of at least 181 kg (400 lb).

Use appropriate lifting hardware to assure a straight-line pull on lifting eye bolts.


Lift the enclosure from the pallet.

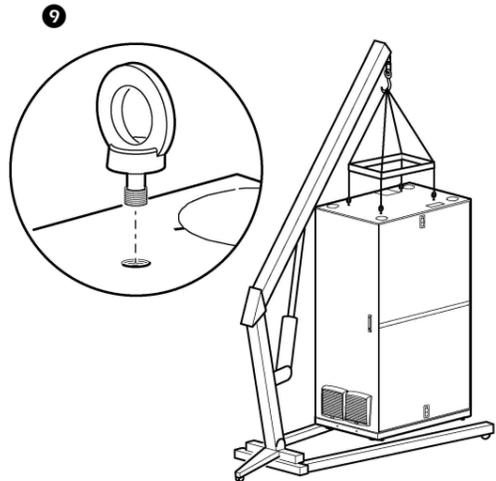

**NOTE:** Remove the eye bolts and replace the hole plugs when the lifting task is complete.

10. When moving the enclosure on its casters, place at least 158 kg (350 lb) in the bottom of the enclosure.

**NOTE:** Do not move a loaded enclosure on its casters if the weight exceeds the Maximum Dynamic Load of 1020 kg (2250 lb).

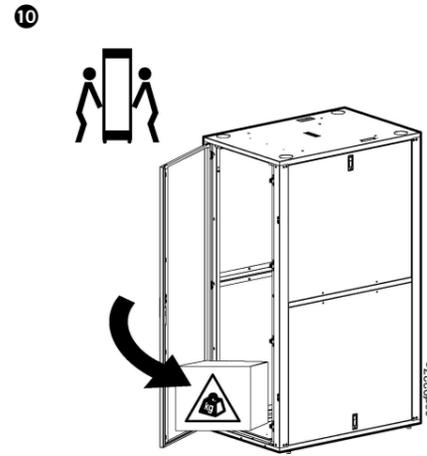


## Level the Enclosure

### NOTICE

Install the enclosure on a relatively flat surface. An uneven floor may cause stability issues. The leveling feet are limited in the extent they can compensate for an uneven floor.


Lower the leveling feet with a 13-mm open-ended wrench and use a level to ensure the enclosure is level and plumb.

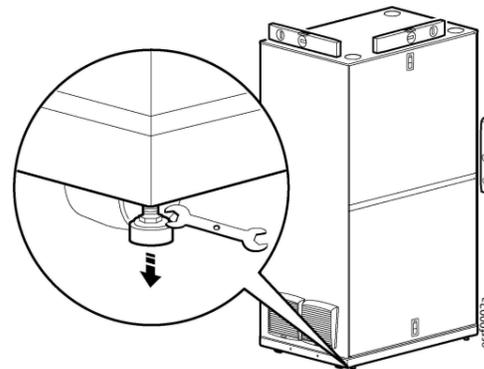


## Labels

Observe the labels on the enclosure.

- 1 Observe the load restrictions for the enclosure. Dynamic load is limited to 1020 kg (2250 lb). This is the maximum load for moving the enclosure on its casters. The Static load is limited to 1361 kg (3750 lb). This is the maximum load for the enclosure while the unit is resting on its leveling feet.
- 2 Only one shelf or piece of equipment on sliding rails should be extended at a time.
- 3 Generic tip hazard notification. Be sure to read all of the instructions for the equipment.

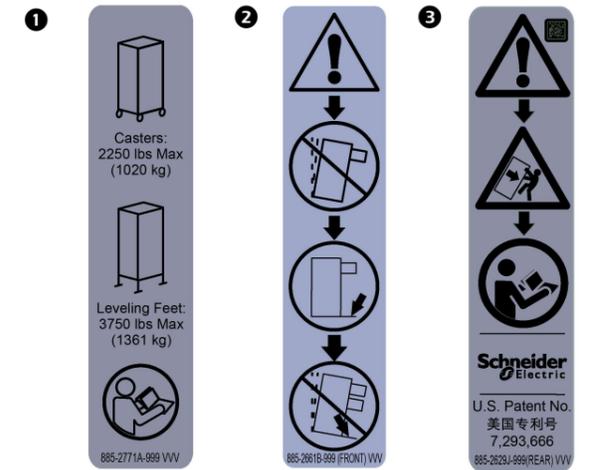

## Specifications

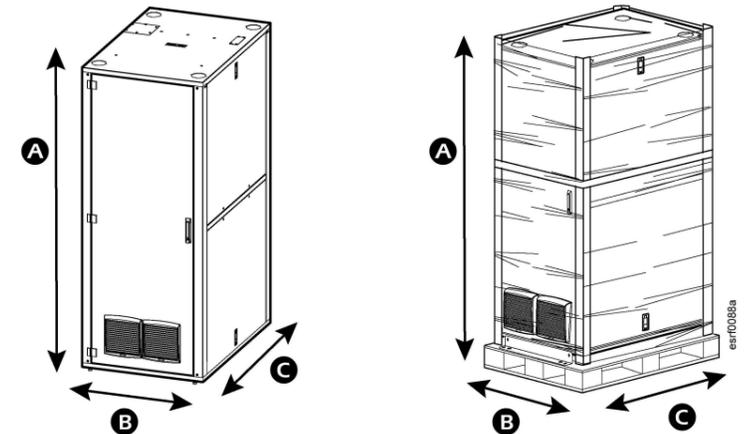

	AR5340	AR5340F
<b>A</b> Height - mm (in) Enclosure only Enclosure With Packaging	2006 (79) 2130 (83.9)	
<b>B</b> Width - mm (in) Enclosure only Enclosure With Packaging	800 (31.5) 946 (37.2)	
<b>C</b> Depth - mm (in) Enclosure only Enclosure With Packaging	1212 (47.7) 1321 (52)	1220 (48) 1321 (52)
<b>Weight - kg (lb)</b> Enclosure only Enclosure With Packaging	258 (568) 286 (631)	260 (575) 289 (638)