



**Introduction**  
Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](#).

**Important note**  
Read this important information carefully before you use the appliance and save it for future reference.  
This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

**Danger**  
- Never immerse the appliance in water.

**Warning**  
- Check if the voltage indicated on the appliance corresponds to the local main voltage before you connect the appliance.

- Do not use the appliance if the plug, the mains cord or the appliance itself shows visible damage, or if the appliance functions abnormally in any way, or if the appliance has been dropped or leaked.

- Do not immerse the iron or (for cordless iron) base in water.

- If the mains cord is damaged, you must have it replaced by Philips, or a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- Never leave the appliance unattended when it is connected to the mains.

- Always unplug the appliance from the socket outlet before you fill the water reservoir.

- For cordless, the iron must not be removed from the base before you fill the water reservoir.

- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the importance of safety.

- Do not allow children to play with the appliance.

- Older children aged 8 over are only allowed to clean the appliance and perform the Clean-Clean procedure under supervision.

- Keep the iron and its base out of reach of children less than 8 years of age when the appliance is switched on or cooling down.

- Always place the iron (for cordless iron) and use the iron on a stable, level and horizontal surface.

- The appliance must be used and placed on a flat, stable, heat-resistant surface. When you place the iron on its heel or its stand, make sure that the surface on which it stands is stable.

- Do not let the mains cord come into contact with the hot soleplate of the iron.

- (For cordless Iron) Do not do ironing with the base attached to the iron. Otherwise, the supply cord will easily get damaged. The steam iron is designed for cordless iron only.

**Warning: For iron models with Quick Calc Release**

- Do not use the iron with the Quick Calc Release collector from the appliance during use.

- Do not use other collectors on the appliance than the Quick Calc Release collector that has been supplied with the appliance.

- Do not fill water at the channel of the Quick Calc Release opening.

- Do not insert your finger or pointed objects into the Quick Calc Release opening.

**CAUTION: Hot surface (Fig. 1)**

- Surfaces are liable to get hot during use (for irons with 'hot' symbol marked on the appliance).

**Caution**

- Only connect the appliance to an earthed wall socket.

- Check the mains cord regularly for possible damage.

- Pull only the mains cord before you plug it in the wall socket.

- These surfaces of the iron can become extremely hot and may cause burns if touched.

- Descal the iron regularly according to the instructions in chapter 'Cleaning and maintenance' in the user manual.

- When you have finished ironing, always turn off the iron, clean the iron and remove the water tank and also when you keep the iron even for a short while set the steam control to the 'dry ironing' position, put the iron on its heel and remove the mains plug from the wall socket.

- Type of water to use: The appliance is suitable to be used with tap water. However, if you live in an area with hard water, we recommend that you mix an equal part of tap water with demineralized or mineralized water. This will prevent scale build-up and prolong the lifetime of the appliance.

- Do not pour vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.

- The plug must only be connected to a socket with the same technical characteristics as plug.

- The filling hole must not be open during operation.

**Before use**  
This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**Recycling**

- This symbol (Fig. 2) means that this product shall not be disposed of with normal household waste.

- Follow your country's rules for the separate collection of electrical and electronic equipment.

**Guarantees and support**

If you need information or support, please visit [www.philips.com/support](#) or read the separate worldwide guarantee leaflet.

**BULGARSKI**

**Външнина**

Поздравления за вашата покупка и добре дошли във Philips! За да се използвате изцяло от Philips преди държавка, регистрирайте продукта си на адрес [www.philips.com/welcome](#).

**Преди да използвате уреда, прочетете внимателно тази важна информация и я запазете за спасителна възможност.**

Приди да използвате уреда само за употреба в домашни условия. При промишлена употреба, неподходяща употреба или неспазване на инструкции при производството не поема отговорност и гаранцията съва сва.

**Опасност**

- никога не поглеждайте чрева под вода.

**Предупреждение**

- Преди да използвате уреда в електрически контакт, проверете дали посоченото време уреда преди напречните спиртове на таблета на местната електрическа мрежа.

- Не използвайте уреда, ако шепселът, захранващият кабел или самия уред са били повредени или ако преди не функционират нормално.

- Не поглеждайте чрева или (за безактивни) основа на вода.

- Ако захранващият кабел е повреден, то трябва да бъде смениен от Philips, оторизиран от Philips сервиз или квалифициран специалист, за да се избегнат опасности.

- Никога не използвайте чрева под вода.

**Регулатор**

- Този символ (обр. 2) означава, че употребятелът не трябва да го използва с бързини комунални определи.

- Реде се правли възм. по сърд. електрически и електронни върхови.

- Ако не се правли възм. по сърд. електрически и електронни върхови.

**Задържка и поддръжка**

Ви съветваме да поддържате на адрес [www.philips.com/support](#) необичайни здравни и лекарски проблеми.

**ESTI**

**Tutvustus**

Olenimme ostuhu puhul ja tervitame Philips poolt! Philips pakutava töötavusele täielikku kasutamisriista jaoks töötavatele veebleile [www.philips.com/welcome](#).

**Faali**

Enne seaduse käimist luguge olemme teave hoolikalt läbi ja hoidke see edaspiduseks alles.

Seade on mõeldud ainult kodukasutuseks. Tootja krediidibastutusest ja tühistab garantiat igasuguse väärikasutuse vältimiseks.

Enne tootja krediidibastutusega saanud vahendeid ei saa kasutada.

(Za bezbeljotnoj ionijai) ostuhu jačine je 100%.

Enne tootja krediidibastutusega saanud vahendeid ei saa kasutada.

Enne tootja