



EN





Video setup instructions:
support.brother.com/videos



The latest manuals are available at the Brother support website:
support.brother.com/manuals

1 Unpack the machine and check the components

Remove the protective tape or film covering the machine and the supplies. The components included in the box may differ depending on your country.

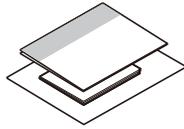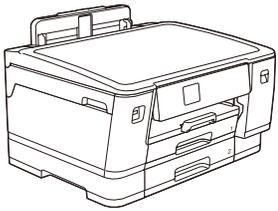

NOTE

- Save all packing materials and the box in case you must ship your machine.
- **You must purchase the correct interface cable for the interface you want to use.**

USB cable

Use a USB 2.0 cable (Type A/B) that is no more than 5 metres long.

Ethernet (Network) cable


Use a straight-through Category 5 (or greater) twisted-pair cable for 10BASE-T or 100BASE-TX Fast Ethernet Network.

- Brother aims to reduce waste and save the raw materials and energy required for their production. Read more about our environmental work at www.brotherearth.com.

The images in this guide are for illustration purposes only and may differ from the actual products.

2 Load plain A4 paper


After finishing the machine setup, you can change the paper type or size. For more information about paper handling, see the *Online User's Guide* at support.brother.com/manuals.

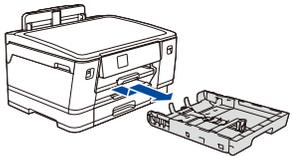

Pull the paper tray completely out of the machine as shown by the arrow.




Fan the paper well.

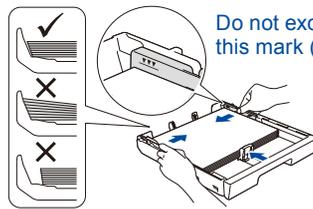


Load the paper in the tray and adjust the paper guides.

Do not exceed this mark (▼▼▼).

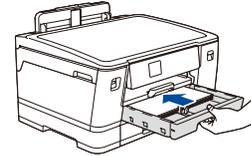

Slowly push the paper tray completely into the machine.

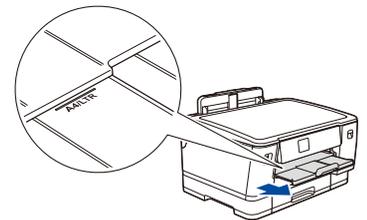

Pull out the paper support until it locks into place.

3 Connect the power cord




NOTE

You can adjust the control panel angle to read the LCD more easily.


4 Select your country or language

After turning the machine on, you may need to set your country or language (depending on your machine). If required, follow the LCD instructions.

5 Install the inbox ink cartridges

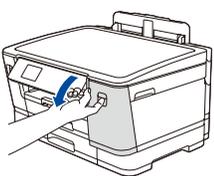

Open the ink cartridge cover.

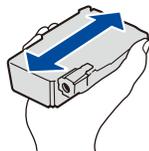

Quickly shake just the **black** ink cartridge horizontally 15 times as shown, before inserting it into the machine.

Follow the LCD instructions to install the ink cartridges. Close the ink cartridge cover. The machine will prepare the ink tube system for printing.

NOTE

The first time you install a set of ink cartridges the machine will use an amount of ink to fill the ink delivery tubes for high quality printouts. This process will only happen once.

6 Set the date and time

Follow the LCD instructions to set the date and time.


After setting the date and time, you can set the Brother LCD Message defaults.

7 Check the print quality




Follow the LCD instructions, and then press [Start]. The machine prints the Print Quality Check Sheet.

OK

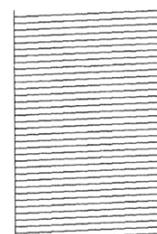

Poor

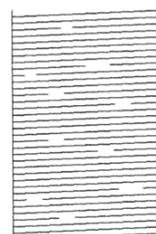

Follow the LCD instructions and check the quality of the four colour blocks on the sheet, and then start the cleaning procedure if required.



8 Machine settings

Follow the LCD instructions to configure the machine settings.

- Configure the tray settings and check the paper orientation information.
- Check the software installation information.


9 Select your language (if needed)

1. Press [Settings] > [All Settings] > [Initial Setup] > [Local Language].
2. Press your language.
3. Press .

10 Connect your computer or mobile device to your machine

Follow these steps to complete the setup using one of the connection types available on your machine.


Visit setup.brother.com to download and install Brother software.

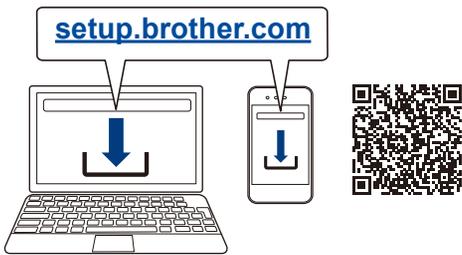

Follow the on-screen instructions and prompts.

NOTE

For Wired Network Connection and USB Connection, locate the correct port (based on the cable you are using) inside the machine as shown.

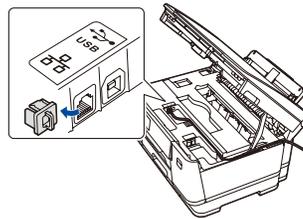


Setup Finished

You can now print using your machine. To check for the latest firmware, visit support.brother.com/up7.

Important Notice for Network Security:
The default password to manage this machine's settings is located on the back of the machine and marked "Pwd". We recommend immediately changing the default password to protect your machine from unauthorised access.

Can't Connect? Check the following:

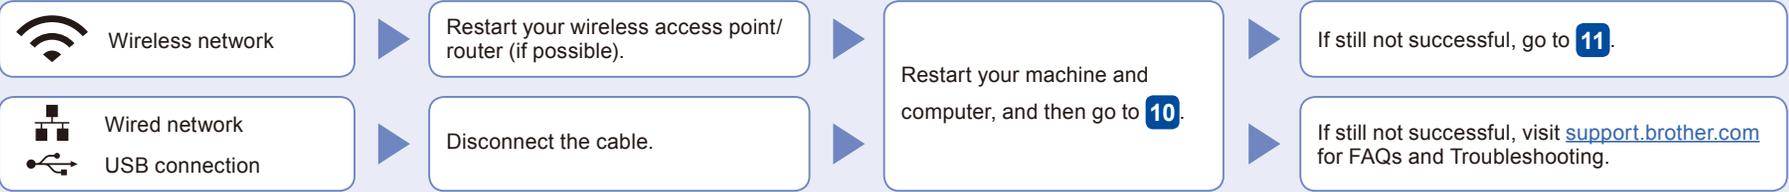


11 Manual wireless setup


If the wireless setup is not successful, try to set up the connection manually.

Find your SSID (Network Name) and Network Key (Password) on your wireless access point/router and write them in the table provided below.

SSID (Network Name)	
Network Key (Password)	

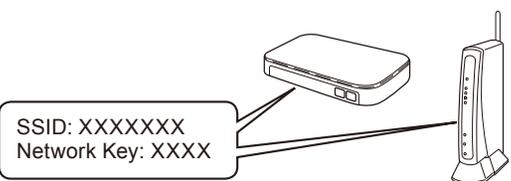

Go to your machine, and press > [Find Wi-Fi Network] > [Yes].

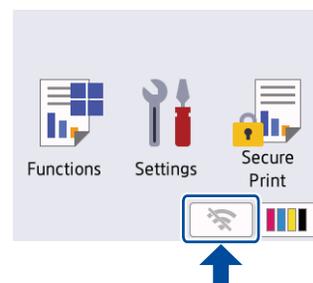

Select the SSID (Network Name) for your access point/router and enter the Network Key (Password). When the wireless setup is successful, the LCD displays [Connected].

Go to **10** to install software.

If setup is not successful, restart your Brother machine and your wireless access point/router, and repeat **11**.

If you cannot find this information, ask your network administrator or wireless access point/router manufacturer.