

Dell PowerEdge R7625

Installation and Service Manual

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Chapter 1: About this document.....	8
--	----------

Chapter 2: System overview.....	9
--	----------

Front view of the system.....	9
Left control panel view.....	13
Right control panel view.....	15
Rear view of the system.....	16
Inside the system.....	21
Locating the Express Service Code and Service Tag.....	24
System information label.....	25
Rail sizing and rack compatibility matrix.....	28

Chapter 3: Technical specifications.....	29
---	-----------

Chassis dimensions	30
System weight.....	30
Processor specifications.....	31
PSU specifications.....	31
Cooling fan specifications.....	32
Supported operating systems.....	33
System battery specifications.....	33
Expansion card riser specifications.....	33
Memory specifications.....	34
Storage controller specifications.....	35
Drives.....	35
Ports and connectors specifications.....	35
NIC port specifications.....	35
Serial connector specifications.....	36
USB ports specifications.....	36
VGA ports specifications.....	36
Video specifications.....	36
Environmental specifications.....	37
Particulate and gaseous contamination specifications.....	39
Thermal air restrictions.....	40
Thermal restriction matrix.....	41

Chapter 4: Initial system setup and configuration.....	48
---	-----------

Setting up the system.....	48
iDRAC configuration.....	48
Options to set up iDRAC IP address.....	48
Options to log in to iDRAC.....	49
Resources to install operating system.....	50
Options to download drivers and firmware	50
Options to download and install OS drivers	50
Downloading drivers and firmware.....	51

Chapter 5: Pre-operating system management applications.....	52
System Setup.....	52
System BIOS.....	53
iDRAC Settings utility.....	70
Device Settings.....	70
Dell Lifecycle Controller.....	70
Embedded system management.....	70
Boot Manager.....	70
PXE boot.....	70
Chapter 6: Minimum to POST and system management configuration validation.....	71
Minimum configuration to POST	71
Configuration validation.....	71
Error messages.....	72
Chapter 7: Installing and removing system components.....	73
Safety instructions.....	73
Before working inside your system.....	74
After working inside your system.....	74
Recommended tools.....	74
Optional front bezel.....	75
Removing the front bezel.....	75
Installing the front bezel.....	76
System cover.....	77
Removing the system cover.....	77
Installing the system cover.....	78
Drive backplane cover.....	79
Removing the drive backplane cover.....	79
Installing the drive backplane cover.....	80
Air shroud.....	82
Removing the air shroud.....	82
Installing the air shroud.....	82
Removing the GPU air shroud top cover.....	83
Installing the GPU air shroud top cover.....	84
Removing the GPU air shroud filler.....	85
Installing the GPU air shroud filler.....	86
Removing the GPU air shroud.....	87
Installing the GPU air shroud.....	88
Removing the 2 x 2.5-inch rear drive module air shroud.....	89
Installing the 2 x 2.5-inch rear drive module air shroud.....	90
Removing the 4 x 2.5-inch rear drive module air shroud.....	91
Installing the 4 x 2.5-inch rear drive module air shroud.....	91
Removing the 4 x EDSFF E3.S rear drive module air shroud.....	92
Installing the 4 x EDSFF E3.S rear drive module air shroud.....	93
Cooling fan.....	93
Removing the cooling fan cage assembly	93
Installing the cooling fan cage assembly.....	94
Removing a cooling fan.....	95

Installing a cooling fan.....	96
Removing a 2 x 2.5-inch rear drive module cooling fan.....	97
Installing a 2 x 2.5-inch rear drive module cooling fan.....	98
Removing a 4 x 2.5-inch rear drive module cooling fan.....	99
Installing a 4 x 2.5-inch rear drive module cooling fan.....	99
Removing a 4 x EDSFF E3.S rear drive module cooling fan.....	100
Installing a 4 x EDSFF E3.S rear drive module cooling fan.....	101
Drives.....	102
Removing a drive blank.....	102
Installing a drive blank.....	103
Removing the drive carrier.....	104
Installing the drive carrier.....	105
Removing the drive from the drive carrier.....	106
Installing the drive into the drive carrier.....	108
Rear drive module.....	109
Removing the 2 x 2.5-inch rear drive module.....	109
Installing the 2 x 2.5-inch rear drive module.....	110
Removing the 4 x 2.5-inch rear drive module.....	111
Installing the 4 x 2.5-inch rear drive module.....	113
Removing the 4 x EDSFF E3.S rear drive module.....	113
Installing the 4 x EDSFF E3.S rear drive module.....	114
Drive backplane.....	116
Drive backplane.....	116
Removing the drive backplane	119
Installing the drive backplane.....	120
Side wall brackets.....	121
Removing the side wall bracket.....	121
Installing the side wall bracket.....	123
PERC module.....	124
Removing the front mounting front PERC module.....	124
Installing the front mounting front PERC module.....	125
Removing the adapter PERC module.....	126
Installing the adapter PERC module.....	128
Removing the EDSFF E3.S PERC module.....	129
Installing the EDSFF E3.S PERC module.....	132
EDSFF E3.S backplane module.....	134
Removing the EDSFF E3.S backplane module.....	134
Installing the EDSFF E3.S backplane module.....	135
Cable routing.....	137
System memory.....	172
System memory guidelines.....	172
General memory module installation guidelines.....	174
Removing a memory module.....	174
Installing a memory module.....	175
Processor and heat sink.....	177
Removing a heat sink.....	177
Removing the Direct Liquid Cooling module.....	178
Removing the processor.....	179
Installing the processor.....	181
Installing the heat sink.....	183

Installing the Direct Liquid Cooling module.....	185
Expansion cards and expansion card risers.....	187
Expansion card installation guidelines.....	187
Removing the expansion card risers.....	220
Installing the expansion card risers.....	223
Removing expansion card from the expansion card riser.....	225
Installing an expansion card into the expansion card riser.....	227
Removing the full length expansion card risers.....	228
Installing the full length expansion card risers.....	231
Removing a GPU.....	234
Installing a GPU.....	236
Optional serial COM port.....	239
Removing the serial COM port.....	239
Installing the serial COM port.....	240
BOSS-N1 module.....	242
Removing the BOSS-N1 module blank.....	242
Installing the BOSS-N1 module blank.....	242
Removing the BOSS card filler.....	243
Installing the BOSS card filler.....	244
Removing the BOSS-N1 controller card module.....	244
Installing the BOSS-N1 controller card module.....	246
System battery	248
Replacing the system battery.....	248
Optional internal USB card.....	250
Removing the internal USB card.....	250
Installing the internal USB card.....	251
Intrusion switch module.....	251
Removing the intrusion switch.....	251
Installing the intrusion switch.....	252
Optional OCP card.....	253
Removing the OCP card.....	253
Installing the OCP card.....	255
Power supply unit.....	256
Hot spare feature.....	256
Removing a power supply unit blank.....	257
Installing a power supply unit blank.....	257
Removing a power supply unit adapter blank.....	257
Installing a power supply unit adapter blank.....	258
Removing a power supply unit.....	259
Installing a power supply unit.....	260
Trusted Platform Module.....	261
Upgrading the Trusted Platform Module.....	261
Initializing TPM for users.....	262
Initializing the TPM 2.0 for users.....	262
System board.....	263
Removing the system board.....	263
Installing the system board.....	264
Restoring Service Tag using Easy Restore.....	265
Manually update the Service Tag.....	266
LOM card, MIC card and rear I/O board.....	266

Removing the LOM card, MIC card and rear I/O board.....	266
Installing the LOM card, MIC card and rear I/O board.....	267
Control panel.....	269
Removing the right control panel.....	269
Installing the right control panel.....	270
Removing the left control panel.....	271
Installing the left control panel.....	271
Chapter 8: Jumpers and connectors.....	273
System board connectors.....	273
System board jumper settings.....	275
Disabling a forgotten password.....	275
Chapter 9: System diagnostics and indicator codes.....	277
Status LED indicators.....	277
System health and system ID indicator codes.....	278
iDRAC Quick Sync 2 indicator codes.....	279
iDRAC Direct LED indicator codes.....	279
LCD panel.....	280
Viewing Home screen.....	281
Setup menu.....	281
View menu.....	281
NIC indicator codes.....	282
Power supply unit indicator codes.....	282
Drive indicator codes.....	283
EDSFF E3.S drive led codes.....	284
Chapter 10: Using system diagnostics.....	286
Dell Embedded System Diagnostics.....	286
Running the Embedded System Diagnostics from Boot Manager.....	286
Running the Embedded System Diagnostics from the Dell Lifecycle Controller.....	286
System diagnostic controls.....	287
Chapter 11: Getting help.....	288
Recycling or End-of-Life service information.....	288
Contacting Dell Technologies.....	288
Accessing system information by using QR code.....	289
QR code for PowerEdge R7625 system.....	289
Receiving automated support with SupportAssist	289
Chapter 12: Documentation resources.....	290
Chapter 13: Documentation resources.....	292

About this document

This document provides an overview about the system, information about installing and replacing components, diagnostic tools, and guidelines to be followed while installing certain components.

System overview

The PowerEdge R7625 system is a 2U server that supports:

- Two AMD EPYC 4th Generation 9004 series processor with up to 128 cores
- Optional Direct Liquid Cooling (DLC) for required CPUs and/or configurations
- Up to 24 RDIMMs, with up to 6 TB of memory and speeds up to 4800 MT/s
- Two redundant AC or DC power supply units
- Up to 8 x 3.5-inch SATA/SAS drives or 8 x 2.5 SATA/SAS/NVMe or 12 x 3.5-inch SATA/SAS or 16 x 2.5-inch SATA/SAS/NVMe 24 x 2.5-inch SATA/SAS/NVMe (HDD/SSD) drives
- Up to 32 x EDSFF E3.S, or 16 x EDSFF E3.S, or 8 x EDSFF E3.S, rear 4 x EDSFF E3.S NVMe Gen5 drives.
- PCI Express® (PCIe) 5.0 enabled expansion slots
- Network interface technologies to cover Network Interface Card (NIC)

i **NOTE:** For more information about how to hot swap NVMe PCIe SSD U.2 device, see the [Dell Express Flash NVMe PCIe SSD User's Guide](#) > [Browse all Products](#) > [Data Center Infrastructure](#) > [Storage Adapters & Controllers](#) > [Dell PowerEdge Express Flash NVMe PCIe SSD](#) > [Documentation](#) > [Manuals and Documents](#).

i **NOTE:** All instances of SAS, SATA drives are referred to as drives in this document, unless specified otherwise.

⚠ CAUTION: Do not install GPUs, network cards, or other PCIe devices on your system that are not validated and tested by Dell. Damage caused by unauthorized and invalidated hardware installation will null and void the system warranty.

Topics:

- Front view of the system
- Rear view of the system
- Inside the system
- Locating the Express Service Code and Service Tag
- System information label
- Rail sizing and rack compatibility matrix

Front view of the system

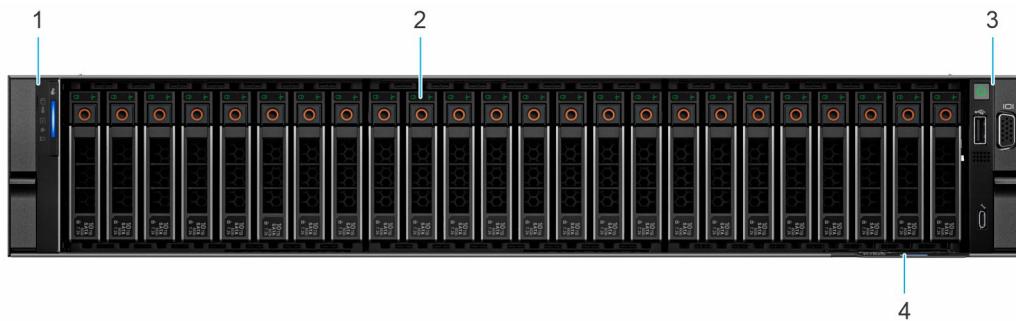


Figure 1. Front view of 24 x 2.5-inch drive system

Table 1. Features available on the front of the system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID and the status LED indicator.

Table 1. Features available on the front of the system (continued)

Item	Ports, panels, and slots	Icon	Description
2	Drive	N/A	Enables you to install drives that are supported on your system.
3	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port and the iDRAC Direct status LED.
4	Information tag	N/A	The Express Service Tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.



Figure 2. Front view of 16 x 2.5-inch drive system

Table 2. Features available on the front of the 16 x 2.5-inch drive system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID, and the status LED indicator.
2	Drive	N/A	Enables you to install drives that are supported on your system.
3	Right control panel	N/A	Contains the power button with integrated power LED, 1 x VGA port, 1 x 2.0 USB port, iDRAC Direct (Micro-AB USB) port, and the iDRAC Direct status LED.
4	Information tag	N/A	The Express Service Tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag also contains the iDRAC secure default password.

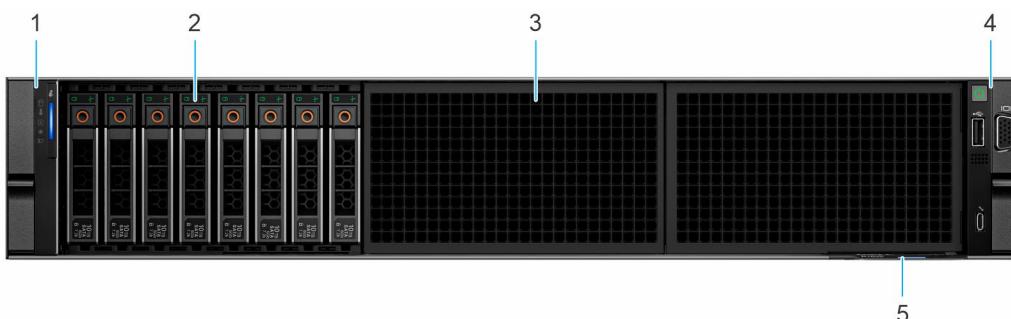


Figure 3. Front view of 8 x 2.5-inch drive system

Table 3. Features available on the front of the system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID and the status LED indicator.

Table 3. Features available on the front of the system (continued)

Item	Ports, panels, and slots	Icon	Description
2	Drive	N/A	Enables you to install drives that are supported on your system.
3	Drive blank	N/A	Enables you to install drive blank.
4	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port and the iDRAC Direct status LED.
5	Information tag	N/A	The Information tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.

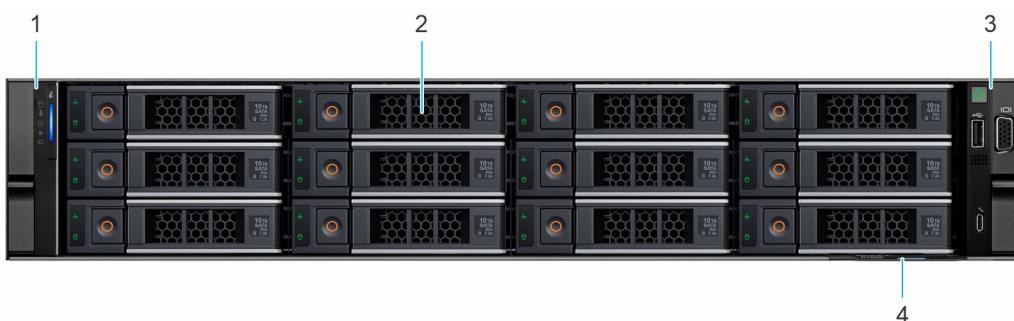


Figure 4. Front view of 12 x 3.5-inch drive system

Table 4. Features available on the front of 12 x 3.5-inch system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID and the status LED indicator.
2	Drive	N/A	Enables you to install drives that are supported on your system.
3	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port and the iDRAC Direct status LED.
4	Information tag	N/A	The Information tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.

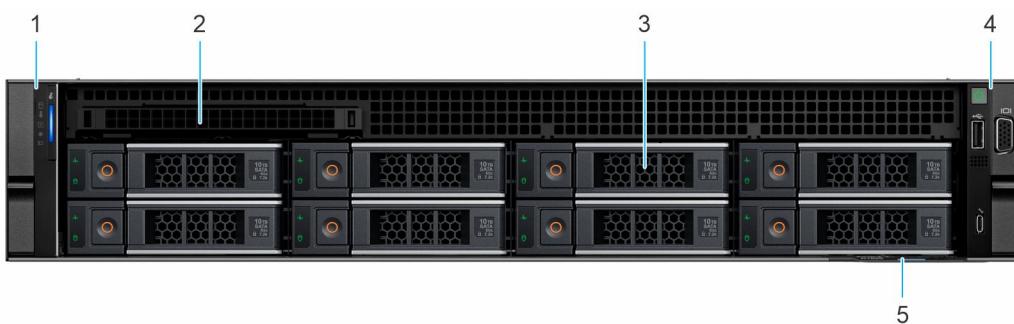


Figure 5. Front view of 8 x 3.5-inch drive system

Table 5. Features available on the front of 8 x 3.5-inch system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID and the status LED indicator.
2	Optical blank (optional)	N/A	One optional slim SATA DVD-ROM or DVD+/-RW blank.
3	Drive	N/A	Enables you to install drives that are supported on your system.
4	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port and the iDRAC Direct status LED.
5	Information tag	N/A	The Information tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.

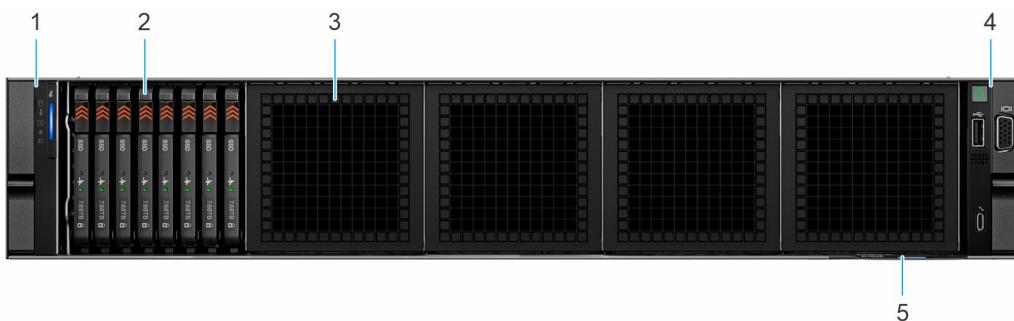


Figure 6. Front view of the of 8 x E3.S drive system

Table 6. Features available on the front of the 8 x E3.S drive system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID and the status LED indicator.
2	E3.S Drive	N/A	Enables you to install E3.S drives that are supported on your system.
3	Drive blank	N/A	Enables you to install drive blank.
4	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port and the iDRAC Direct status LED.
5	Information tag	N/A	The Information tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.

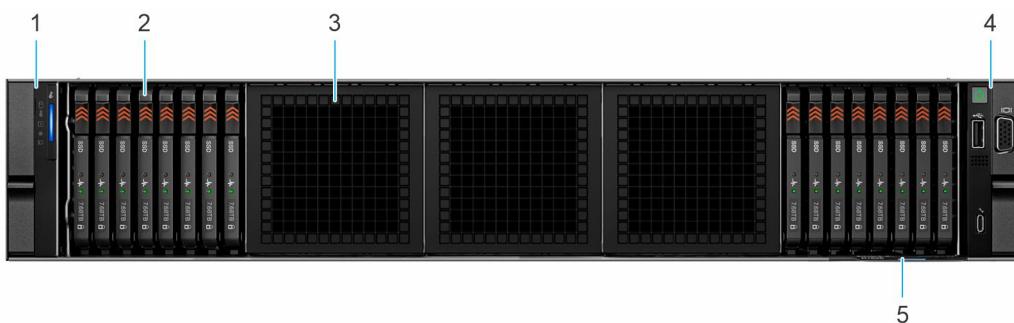


Figure 7. Front view of the of 16 x E3.S drive system

Table 7. Features available on the front of the 16 x E3.S drive system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID and the status LED indicator.
2	E3.S Drive	N/A	Enables you to install E3.S drives that are supported on your system.
3	Drive blank	N/A	Enables you to install drive blank.
4	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port and the iDRAC Direct status LED.
5	Information tag	N/A	The Information tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.



Figure 8. Front view of the of 32 x E3.S drive system

Table 8. Features available on the front of the 32 x E3.S drive system

Item	Ports, panels, and slots	Icon	Description
1	Left control panel	N/A	Contains the system health, system ID and the status LED indicator.
2	E3.S Drive	N/A	Enables you to install E3.S drives that are supported on your system.
3	Right control panel	N/A	Contains the power button, VGA port, USB port, iDRAC Direct (Micro-AB USB) port and the iDRAC Direct status LED.
4	Information tag	N/A	The Information tag is a slide-out label panel that contains system information such as Service Tag, NIC, MAC address, and so on. If you have opted for the secure default access to iDRAC, the Information tag will also contain the iDRAC secure default password.

(i) **NOTE:** For more information about ports, panels, and slots, see the Technical specifications section.

Left control panel view

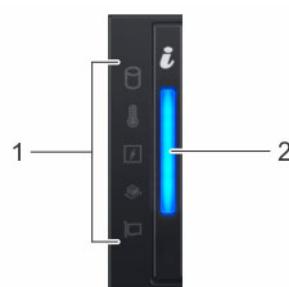
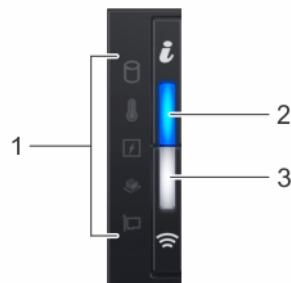


Figure 9. Left control panel

Table 9. Left control panel

Item	Indicator, button, or connector	Icon	Description
1	Status LED indicators	NA	Indicates the status of the system. For more information, see the Status LED indicators section.
2	System health and system ID		Indicates the system health. For more information, see the System health and system ID indicator codes section.

**Figure 10. Left control panel with optional iDRAC Quick Sync 2 indicator****Table 10. Left control panel with optional iDRAC Quick Sync 2 indicator**

Item	Indicator, button, or connector	Icon	Description
1	Status LED indicators	N/A	Indicates the status of the system. For more information, see the Status LED indicators section.
2	System health and system ID indicator		Indicates the system health. For more information, see the System health and system ID indicator codes section.
3	iDRAC Quick Sync 2 wireless indicator (optional)		Indicates if the iDRAC Quick Sync 2 wireless option is activated. The Quick Sync 2 feature allows management of the system using mobile devices. This feature aggregates hardware/firmware inventory and various system level diagnostic/error information that can be used in troubleshooting the system. You can access system inventory, Dell Lifecycle Controller logs or system logs, system health status, and also configure iDRAC, BIOS, and networking parameters. You can also launch the virtual Keyboard, Video, and Mouse (KVM) viewer and virtual Kernel-based Virtual Machine (KVM), on a supported mobile device. For more information, see the Integrated Dell Remote Access Controller User's Guide at PowerEdge manuals .

 **NOTE:** For more information about the indicator codes, see the [System diagnostics and indicator codes](#) section.

Right control panel view

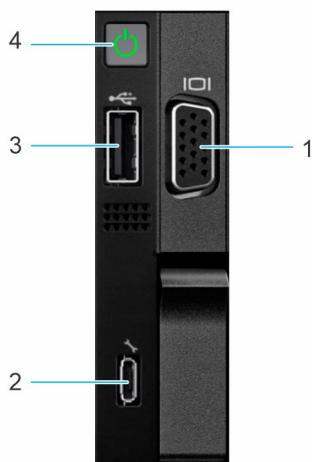


Figure 11. Right control panel view

Table 11. Right control panel

Item	Indicator or button	Icon	Description
1	VGA port	monitor	Enables you to connect a display device to the system. For more information, see the PowerEdge manuals section.
2	iDRAC Direct port (Micro-AB USB)	wrench	The iDRAC Direct port (Micro-AB USB) enables you to access the iDRAC Direct Micro-AB features. For more information, see the Integrated Dell Remote Access Controller User's Guide . NOTE: You can configure iDRAC Direct by using a USB to micro USB (type AB) cable, which you can connect to your laptop or tablet. Cable length should not exceed 3 feet (0.91 meters). Performance could be affected by cable quality.
3	USB 2.0-compliant port	usb	The USB port is a 4-pin connector and 2.0-compliant. This port enables you to connect USB devices to the system.
4	Power button	power	Indicates if the system is powered on or off. Press the power button to manually power on or off the system. NOTE: Press the power button to gracefully shut down the ACPI-compliant operating system.

NOTE: For more information on the ports, see the [PowerEdge manuals](#) section.

Rear view of the system

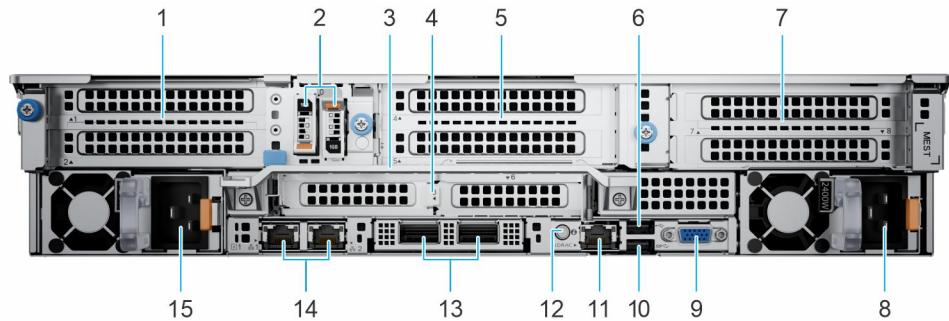


Figure 12. Rear view of the system

Table 12. Rear view of the system

Item	Ports, panels, or slots	Icon	Description
1	PCIe expansion card riser 1 (slot 1 and slot 2)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
2	BOSS blank	N/A	Insert BOSS blank when the BOSS module is not used.
3	Rear Handle	N/A	To lift the system.
4	PCIe expansion card riser 2 (slot 3 and slot 6)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
5	PCIe expansion card riser 3 (slot 4 and slot 5)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
6	USB 2.0 port (1)		The USB port is 4-pin, 2.0-compliant. This port enables you to connect USB devices to the system.
7	PCIe expansion card riser 4 (slot 7 and slot 8)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information about the expansion cards that are supported on your system,
8	Power supply unit (PSU 2)		For more information about the PSU configurations, see PowerEdge manuals section.
9	VGA port	N/A	Enables you to connect a display device to the system. For more information, see PowerEdge manuals section.
10	USB 3.0 port		The USB port is 9-pin and 3.0-compliant. This port enables you to connect USB devices to the system.
11	Dedicated iDRAC9 Ethernet port		Enables you to remotely access iDRAC. For more information, see the <i>Integrated Dell Remote Access Controller User's Guide</i> at PowerEdge Manuals .
12	System Identification (ID) button		The System Identification (ID) button is available on the front and back of the system. Press the button to identify a system in a rack by turning on the system ID button. You can also use the system ID button to reset iDRAC and to access BIOS using the step through mode. When pressed, the system ID LED in the back panel blinks until either the front or rear button is pressed again. Press the button to toggle between on or off mode. NOTE: If the server stops responding during POST, press and hold the System ID button for more than five seconds to enter the BIOS progress mode

Table 12. Rear view of the system (continued)

Item	Ports, panels, or slots	Icon	Description
			NOTE: To reset the iDRAC (if not disabled on the iDRAC setup page by pressing F2 during system boot), press and hold the System ID button for more than 15 seconds.
13	OCP NIC card	N/A	The OCP NIC card supports OCP 3.0. The NIC ports are integrated on the OCP card which is connected to the system board.
14	NIC ports	□□	The NIC ports are embedded on the LOM card that is connected to the system board.
15	Power supply unit (PSU1)	⚡1	PSU1 is the primary PSU of the system. For more information about the PSU configurations, see PowerEdge manuals section.

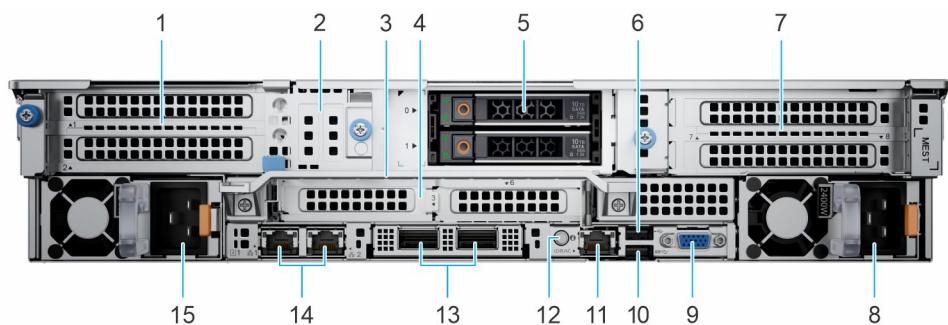


Figure 13. Rear view of the system with 2 x 2.5-inch rear drive module

Table 13. Rear view of the system

Item	Ports, panels, or slots	Icon	Description
1	PCIe expansion card riser 1 (slot 1 and slot 2)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
2	BOSS blank	N/A	Insert BOSS blank when the BOSS module is not used.
3	Rear Handle	N/A	To lift the system.
4	PCIe expansion card riser 2 (slot 3 and slot 6)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
5	Rear drive module	N/A	Enables you to install drives that are supported on your system.
6	USB 2.0 port (1)	USB 2.0	The USB port is 4-pin, 2.0-compliant. This port enables you to connect USB devices to the system.
7	PCIe expansion card riser 4 (slot 7 and slot 8)	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information about the expansion cards that are supported on your system,
8	Power supply unit (PSU 2)	⚡2	For more information about the PSU configurations, see PowerEdge manuals section.
9	VGA port	N/A	Enables you to connect a display device to the system. For more information, see PowerEdge manuals section.
10	USB 3.0 port	USB 3.0	The USB port is 9-pin and 3.0-compliant. This port enables you to connect USB devices to the system.
11	iDRAC9 Ethernet port	Network	Enables you to remotely access iDRAC. For more information, see PowerEdge manuals section.

Table 13. Rear view of the system (continued)

Item	Ports, panels, or slots	Icon	Description
12	System Identification (ID) button	ⓘ	<p>The System Identification (ID) button is available on the front and back of the system. Press the button to identify a system in a rack by turning on the system ID button. You can also use the system ID button to reset iDRAC and to access BIOS using the step through mode. When pressed, the system ID LED in the back panel blinks until either the front or rear button is pressed again. Press the button to toggle between on or off mode.</p> <p> ⓘ NOTE: If the server stops responding during POST, press and hold the System ID button for more than five seconds to enter the BIOS progress mode</p> <p> ⓘ NOTE: To reset the iDRAC (if not disabled on the iDRAC setup page by pressing F2 during system boot), press and hold the System ID button for more than 15 seconds.</p>
13	OCP NIC card	N/A	The OCP NIC card supports OCP 3.0. The NIC ports are integrated on the OCP card which is connected to the system board.
14	NIC ports	ⓘ	The NIC ports are embedded on the LOM card that is connected to the system board.
15	Power supply unit (PSU1)	⚡1	PSU1 is the primary PSU of the system. For more information, see PowerEdge manuals section.

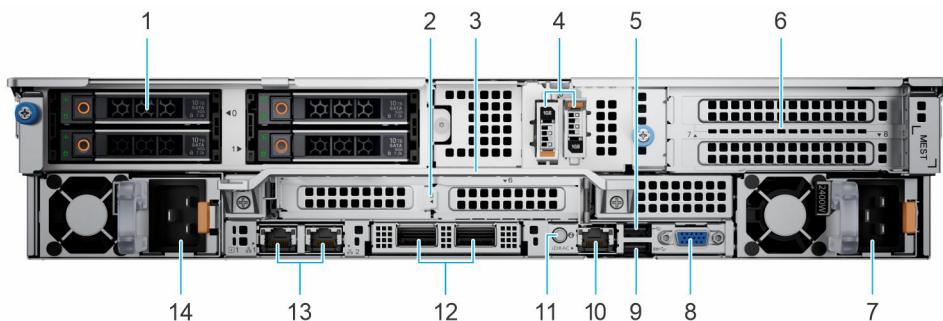


Figure 14. Rear view of the system with 4 x 2.5-inch rear drive module

Table 14. Rear view of the system

Item	Ports, panels, or slots	Icon	Description
1	Drives	N/A	Enables you to install drives that are supported on your system.
2	PCIe expansion card riser 2 blank	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
3	Rear Handle	N/A	To lift the system.
4	BOSS blank	N/A	Insert BOSS blank when the BOSS module is not used.
5	USB 2.0 port	ⓘ	The USB port is 4-pin, 2.0-compliant. This port enables you to connect USB devices to the system.
6	PCIe expansion card riser 4	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
7	Power supply unit (PSU 2)	⚡2	For more information about the PSU configurations, see PowerEdge manuals section.
8	VGA port	N/A	Enables you to connect a display device to the system. For more information, see PowerEdge manuals section.

Table 14. Rear view of the system (continued)

Item	Ports, panels, or slots	Icon	Description
9	USB 3.0 port		The USB port is 9-pin and 3.0-compliant. This port enables you to connect USB devices to the system.
10	Dedicated iDRAC9 Ethernet port		Enables you to remotely access iDRAC. For more information, see the <i>Integrated Dell Remote Access Controller User's Guide</i> at PowerEdge Manuals .
11	System Identification (ID) button		The System Identification (ID) button is available on the front and back of the system. Press the button to identify a system in a rack by turning on the system ID button. You can also use the system ID button to reset iDRAC and to access BIOS using the step through mode. When pressed, the system ID LED in the back panel blinks until either the front or rear button is pressed again. Press the button to toggle between on or off mode. NOTE: If the server stops responding during POST, press and hold the System ID button for more than five seconds to enter the BIOS progress mode NOTE: To reset the iDRAC (if not disabled on the iDRAC setup page by pressing F2 during system boot), press and hold the System ID button for more than 15 seconds.
12	OCP NIC card	N/A	The OCP NIC card supports OCP 3.0. The NIC ports are integrated on the OCP card which is connected to the system board.
13	NIC ports		The NIC ports that are integrated on the LOM card provide network connectivity which is connected to the system board.
14	Power supply unit (PSU1)		PSU1 is the primary PSU of the system.

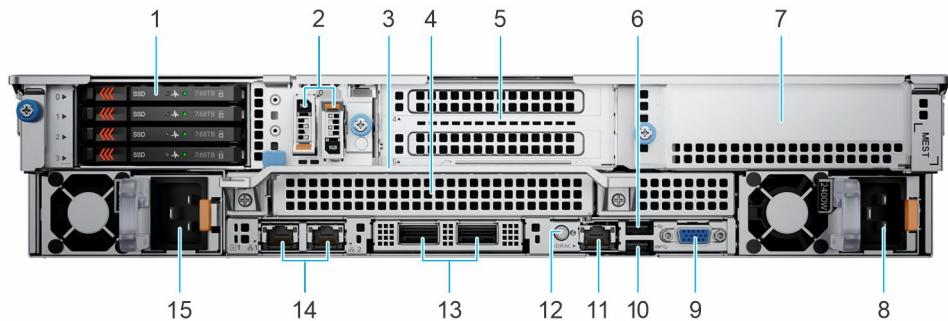


Figure 15. Rear view of the system with E4 x 3.5 rear drive module

Table 15. Rear view of the system

Item	Ports, panels, or slots	Icon	Description
1	E3.5 Drives	N/A	Enables you to install drives that are supported on your system.
2	BOSS blank	N/A	Insert BOSS blank when the BOSS module is not used.
3	Rear Handle	N/A	To lift the system.
4	PCIe expansion card riser 2 blank	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
5	PCIe expansion card riser 3 (slot 4 and slot 5) blank	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information , see the Expansion card installation guidelines section.
6	USB 2.0 port (1)		The USB port is 4-pin, 2.0-compliant. This port enables you to connect USB devices to the system.

Table 15. Rear view of the system (continued)

Item	Ports, panels, or slots	Icon	Description
7	PCIe expansion card riser 4 (slot 7 and slot 8) blank	N/A	The expansion card riser enables you to connect PCI Express expansion cards. For more information about the expansion cards that are supported on your system,
8	Power supply unit (PSU 2)	 2	For more information about the PSU configurations, see PowerEdge manuals section.
9	VGA port	N/A	Enables you to connect a display device to the system. For more information, see PowerEdge manuals section.
10	USB 3.0 port		The USB port is 9-pin and 3.0-compliant. This port enables you to connect USB devices to the system.
11	iDRAC9 Ethernet port		Enables you to remotely access iDRAC. For more information, see PowerEdge manuals section.
12	System Identification (ID) button		<p>The System Identification (ID) button is available on the front and back of the system. Press the button to identify a system in a rack by turning on the system ID button. You can also use the system ID button to reset iDRAC and to access BIOS using the step through mode. When pressed, the system ID LED in the back panel blinks until either the front or rear button is pressed again. Press the button to toggle between on or off mode.</p> <p> NOTE: If the server stops responding during POST, press and hold the System ID button for more than five seconds to enter the BIOS progress mode</p> <p> NOTE: To reset the iDRAC (if not disabled on the iDRAC setup page by pressing F2 during system boot), press and hold the System ID button for more than 15 seconds.</p>
13	OCP NIC card	N/A	The OCP NIC card supports OCP 3.0. The NIC ports are integrated on the OCP card which is connected to the system board.
14	NIC ports		The NIC ports are embedded on the LOM card that is connected to the system board.
15	Power supply unit (PSU1)	 1	PSU1 is the primary PSU of the system. For more information, see PowerEdge manuals section.

 **NOTE:** For more information about ports, panels, and slots, see the Technical specifications section.

Inside the system

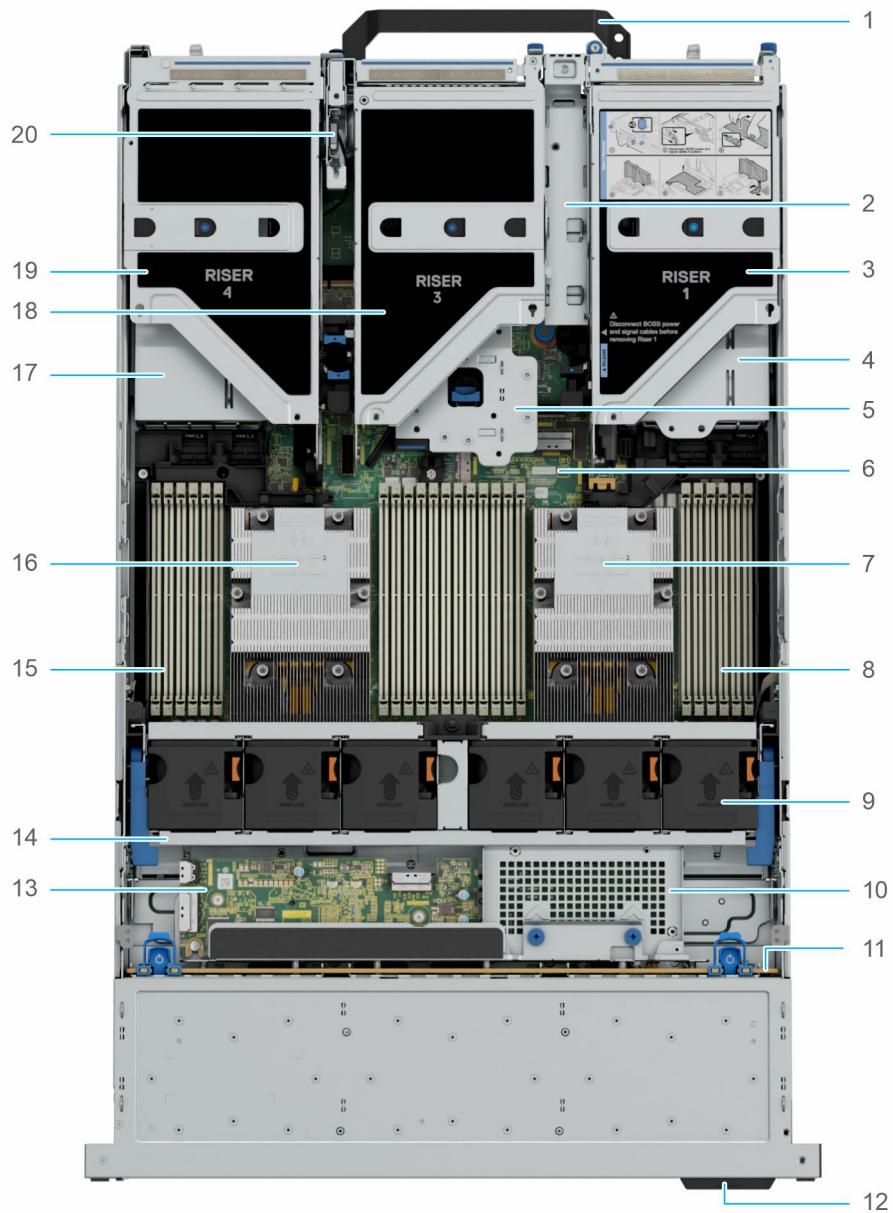


Figure 16. Inside the system

- 1. Rear Handle
- 2. BOSS N1 card slot
- 3. Riser 1
- 4. Power supply unit (PSU 1)
- 5. Riser 2
- 6. System board
- 7. Heat sink for processor 1
- 8. Memory DIMM socket for processor 1
- 9. Cooling fans
- 10. PERC Controller
- 11. Drive backplane
- 12. Service tag
- 13. Expander
- 14. Cooling fan cage assembly
- 15. Memory DIMM socket for processor 2
- 16. Heat sink for processor 2
- 17. Power supply unit (PSU 2)
- 18. Riser 3
- 19. Riser 4
- 20. Intrusion switch

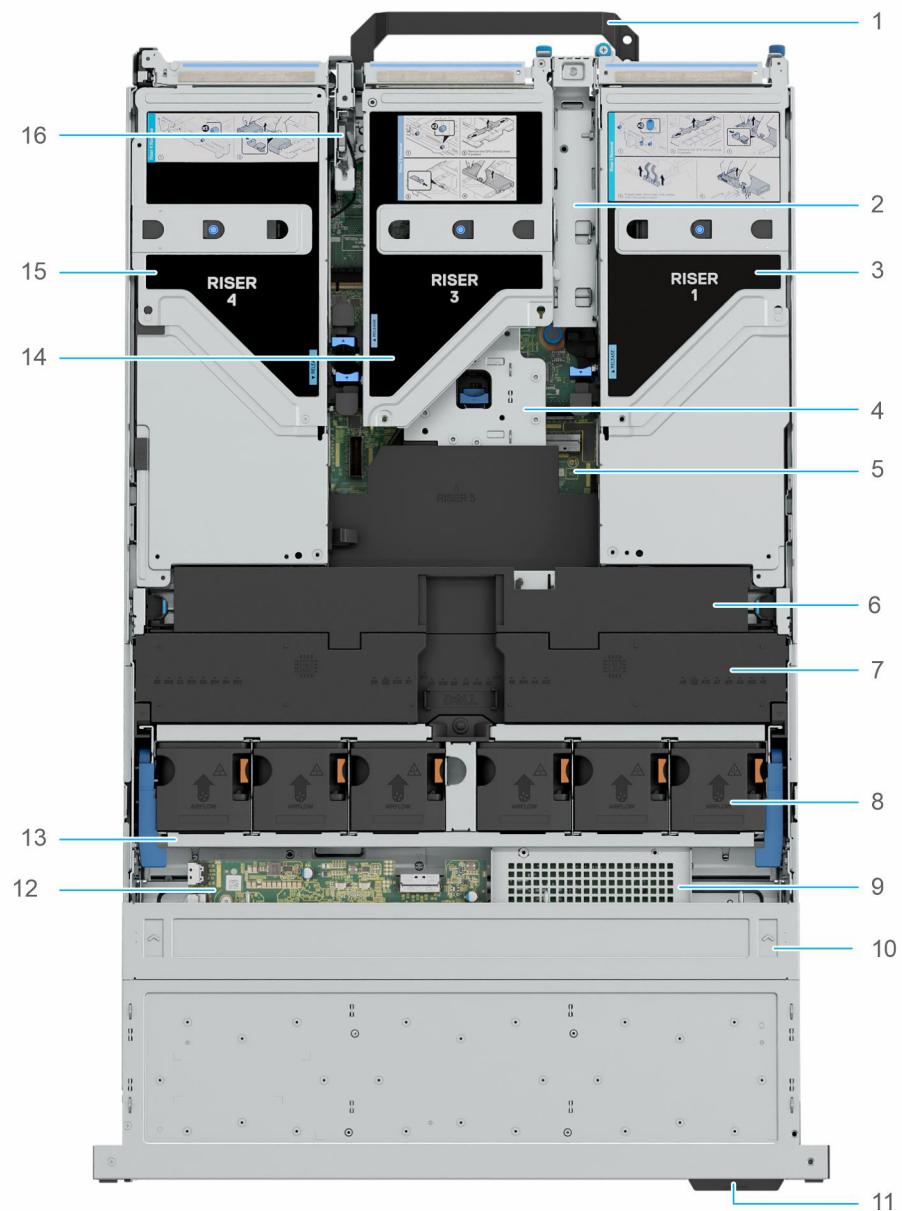


Figure 17. Inside the system with full length risers and GPU shroud

- 1. Rear Handle
 - 3. Riser 1
 - 5. System board
 - 7. GPU air shroud
 - 9. PERC Controller
 - 11. Service tag
 - 13. Cooling fan cage assembly
 - 15. Riser 4
 - 2. BOSS N1 card slot
 - 4. Riser 2
 - 6. GPU top cover
 - 8. Cooling fans
 - 10. Drive backplane cover
 - 12. Expander
 - 14. Riser 3
 - 16. Intrusion switch module

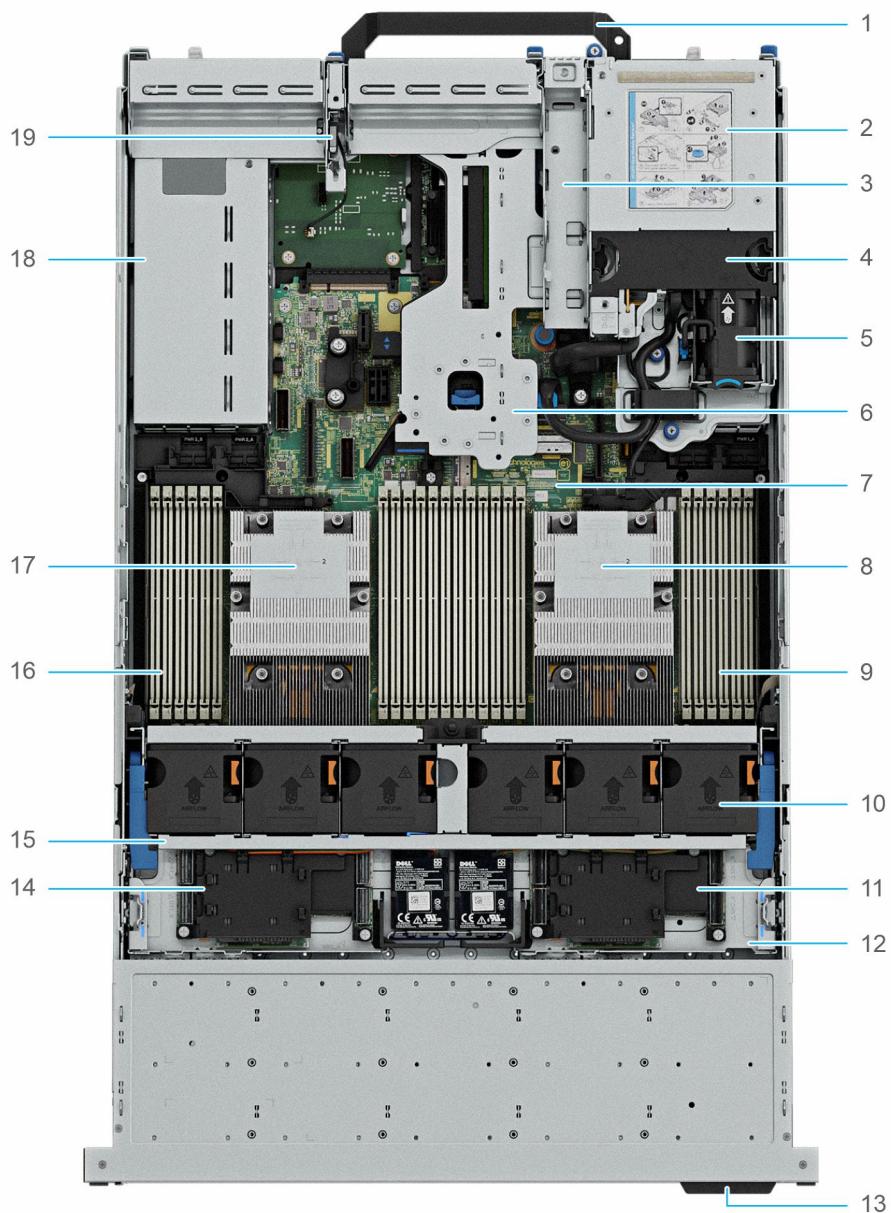


Figure 18. Inside the system with rear E3.S drive module

- | | |
|---------------------------------------|--|
| 1. Rear Handle | 2. Rear EDSFF E3.S module |
| 3. BOSS N1 card slot | 4. Rear EDSFF E3.S module air shroud |
| 5. Rear EDSFF E3.S module cooling fan | 6. Riser 2 |
| 7. System board | 8. Heat sink for processor 1 |
| 9. Memory DIMM socket for processor 1 | 10. Cooling fan |
| 11. EDSFF E3.S PERC module | 12. EDSFF E3.S PERC module tray |
| 13. Service tag | 14. EDSFF E3.S PERC module |
| 15. Cooling fan cage assembly | 16. Memory DIMM socket for processor 2 |
| 17. Heat sink for processor 2 | 18. Power supply unit (PSU) |
| 19. Intrusion switch module | |

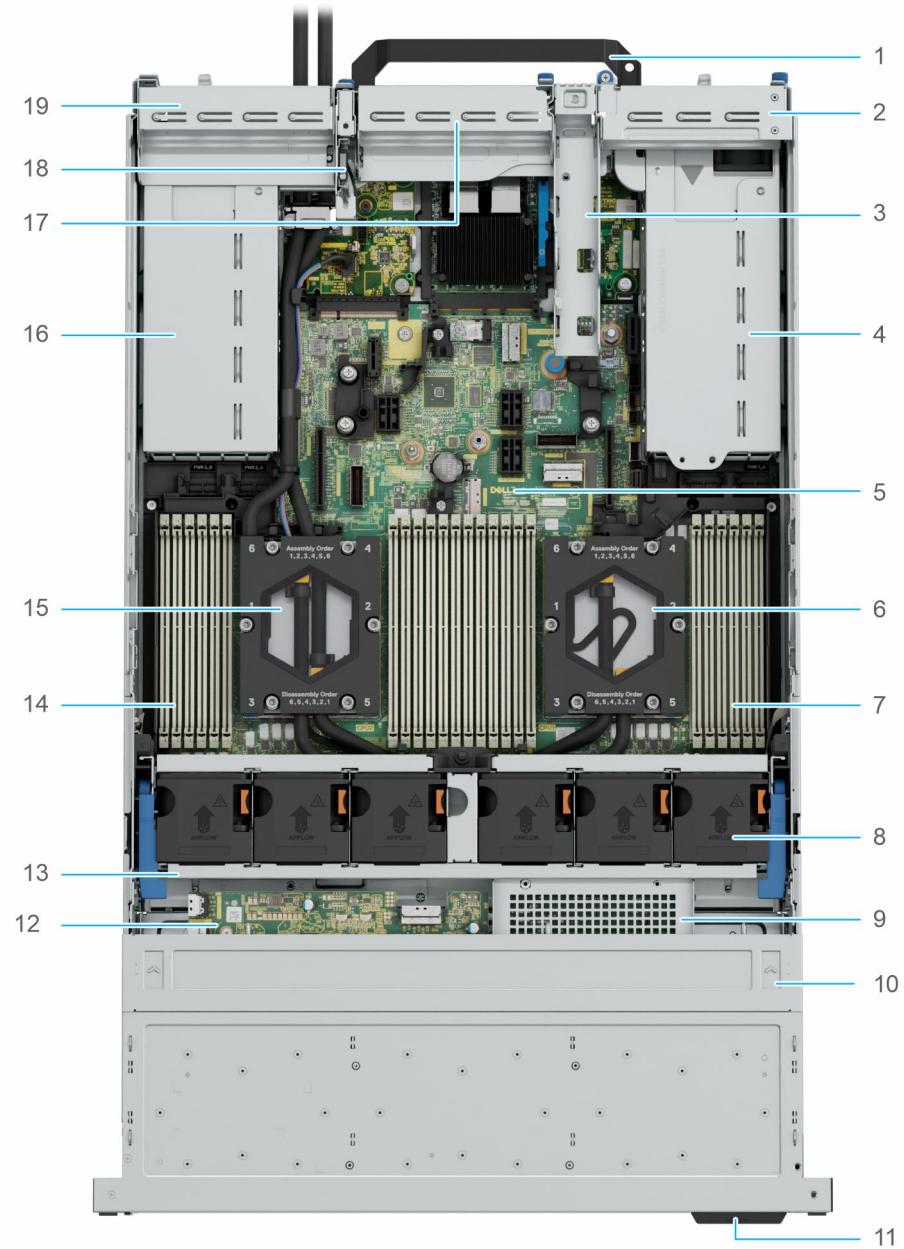


Figure 19. Inside the system with processor liquid cooling module

- | | |
|--|--|
| 1. Rear Handle | 2. Riser 1 filler |
| 3. BOSS N1 card slot | 4. Power supply unit (PSU 1) |
| 5. System board | 6. Processor 1 Liquid Cooling modules |
| 7. Memory DIMM socket for processor 1 | 8. Cooling fans |
| 9. PERC Controller | 10. Drive backplane cover |
| 11. Service tag | 12. Expander |
| 13. Cooling fan cage assembly | 14. Memory DIMM socket for processor 2 |
| 15. Processor 2 Liquid Cooling modules | 16. Power supply unit (PSU 2) |
| 17. Riser 3 filler | 18. Intrusion switch module |
| 19. Riser 4 filler | |

Locating the Express Service Code and Service Tag

The unique Express Service Code and Service Tag is used to identify the system. The information tag is located on the front of the system that includes system information such as Service Tag, Express Service Code, Manufacture date, NIC, MAC address,

QR code, and so on. If you have opted for the secure default access to iDRAC, the Information tag also contains the iDRAC secure default password. If you have opted for iDRAC Quick Sync 2, the Information tag also contains the OpenManage Mobile (OMM) label, where administrators can configure, monitor, and troubleshoot the PowerEdge servers.

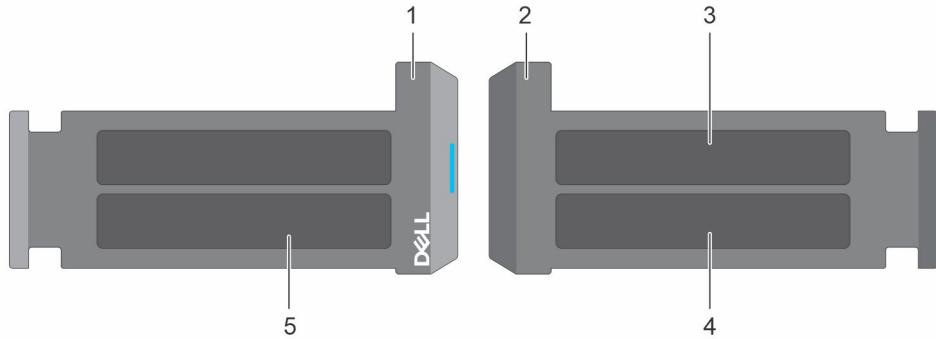


Figure 20. Locating the Express Service Code and Service tag

1. Information tag (front view)
2. Information tag (back view)
3. OpenManage Mobile (OMM) label
4. iDRAC MAC address and iDRAC secure password label
5. Service Tag, Express Service Code, QR code

The Mini Enterprise Service Tag (MEST) label is located on the rear of the system that includes Service Tag (ST), Express Service Code (Exp Svc Code), and Manufacture Date (Mfg. Date). The Exp Svc Code is used by Dell to route support calls to the appropriate personnel.

Alternatively, the Service Tag information is located on a label on left wall of the chassis.

System information label

The system information label is located on the back side of the system cover.

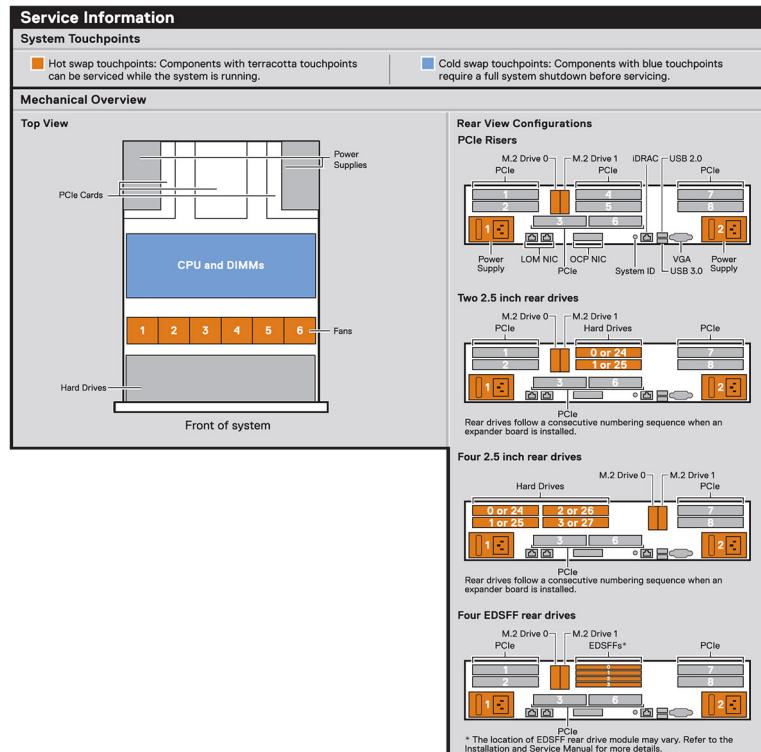


Figure 21. Service information: Touchpoints

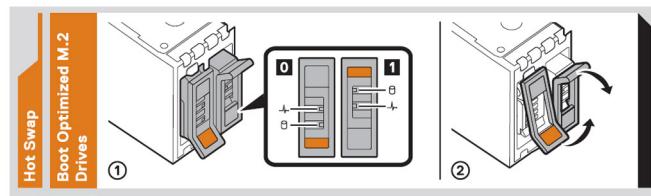


Figure 22. Service information: Hot Swap

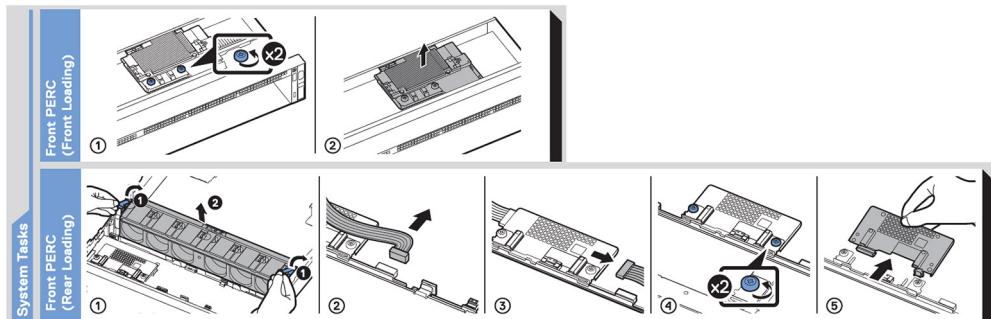


Figure 23. Service information: System Tasks

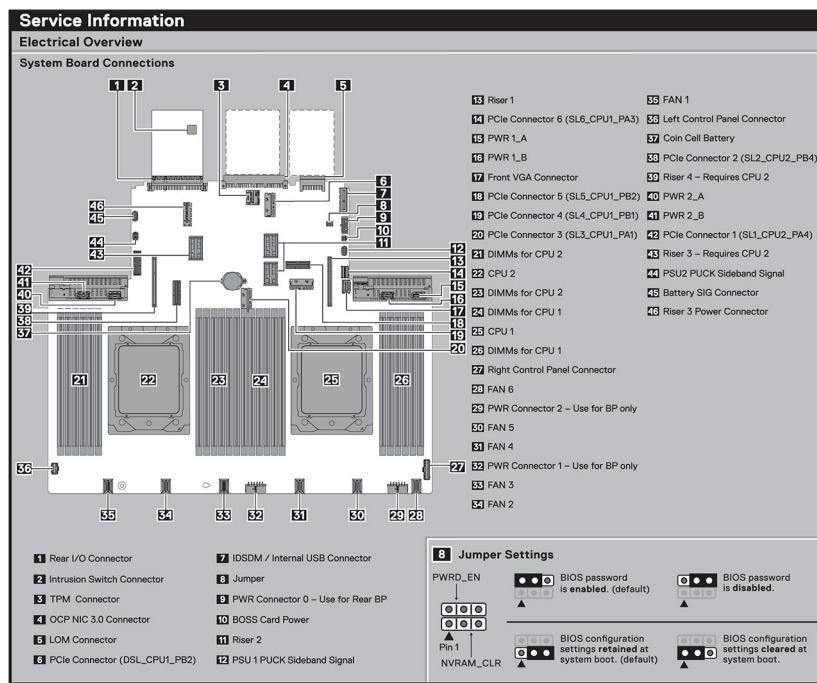


Figure 24. System board connectors

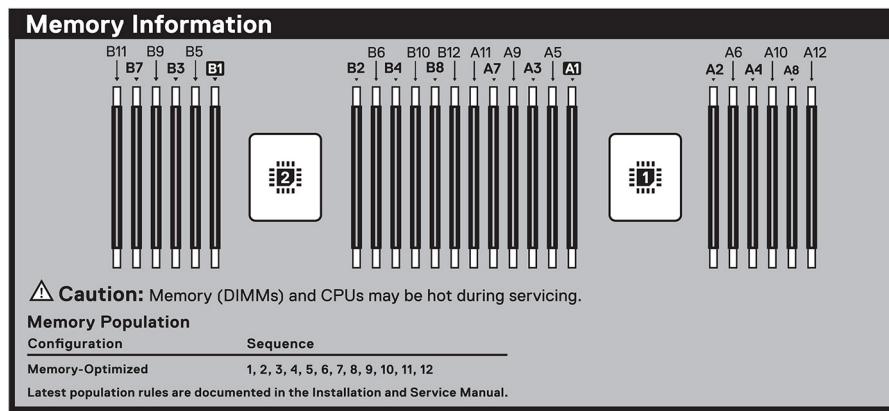


Figure 25. Memory Information

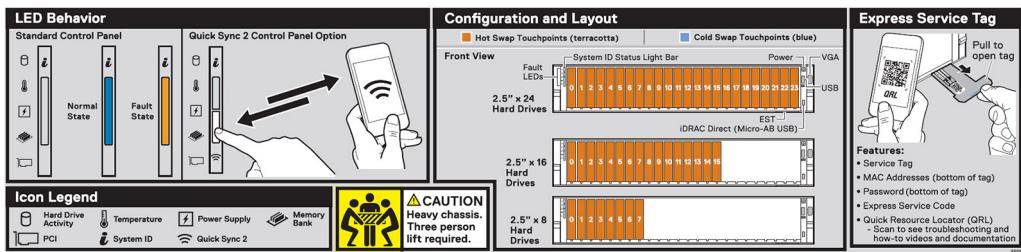


Figure 26. LED behavior, configuration and layout, express service tag for 2.5-inch HDD system

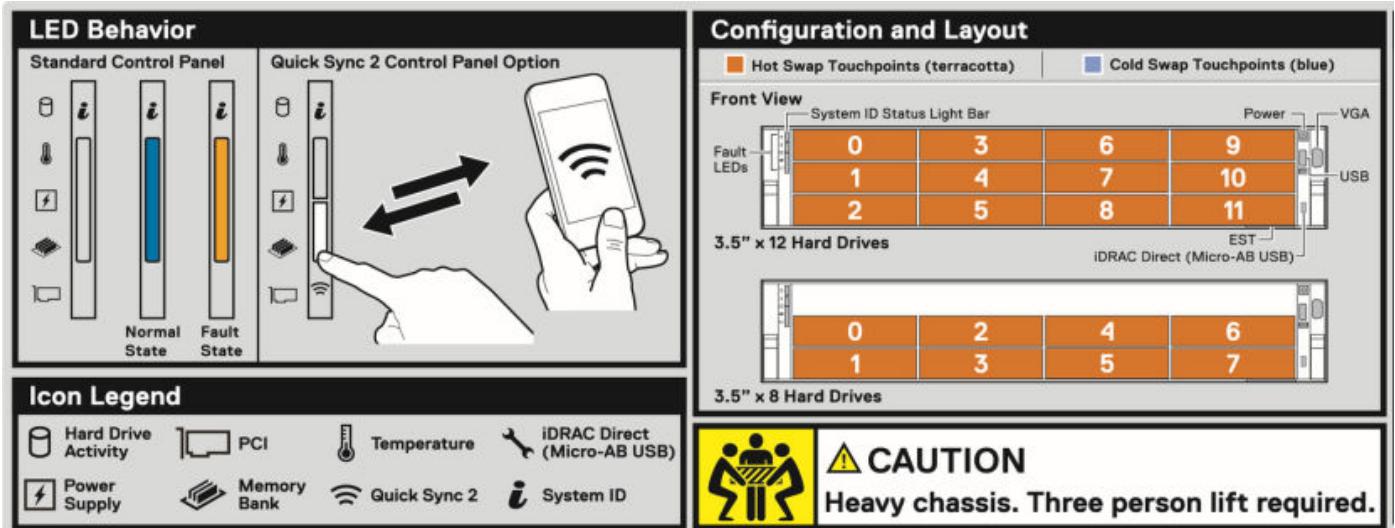


Figure 27. LED behavior, configuration and layout, express service tag for 3.5-inch HDD system

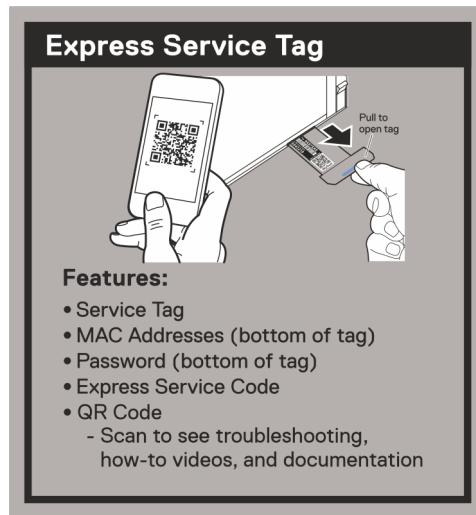


Figure 28. Express Service Tag

Rail sizing and rack compatibility matrix

For specific information about the rail solutions compatible with your system, see the available at [Dell Enterprise Systems Rail Sizing and Rack Compatibility Matrix](#).

The document provides the information that is listed below:

- Specific details about rail types and their functionalities.
- Rail adjustability range for various types of rack mounting flanges.
- Rail depth with and without cable management accessories.
- Types of racks supported for various types of rack mounting flanges.

Technical specifications

The technical and environmental specifications of your system are outlined in this section.

Topics:

- Chassis dimensions
- System weight
- Processor specifications
- PSU specifications
- Cooling fan specifications
- Supported operating systems
- System battery specifications
- Expansion card riser specifications
- Memory specifications
- Storage controller specifications
- Drives
- Ports and connectors specifications
- Video specifications
- Environmental specifications

Chassis dimensions

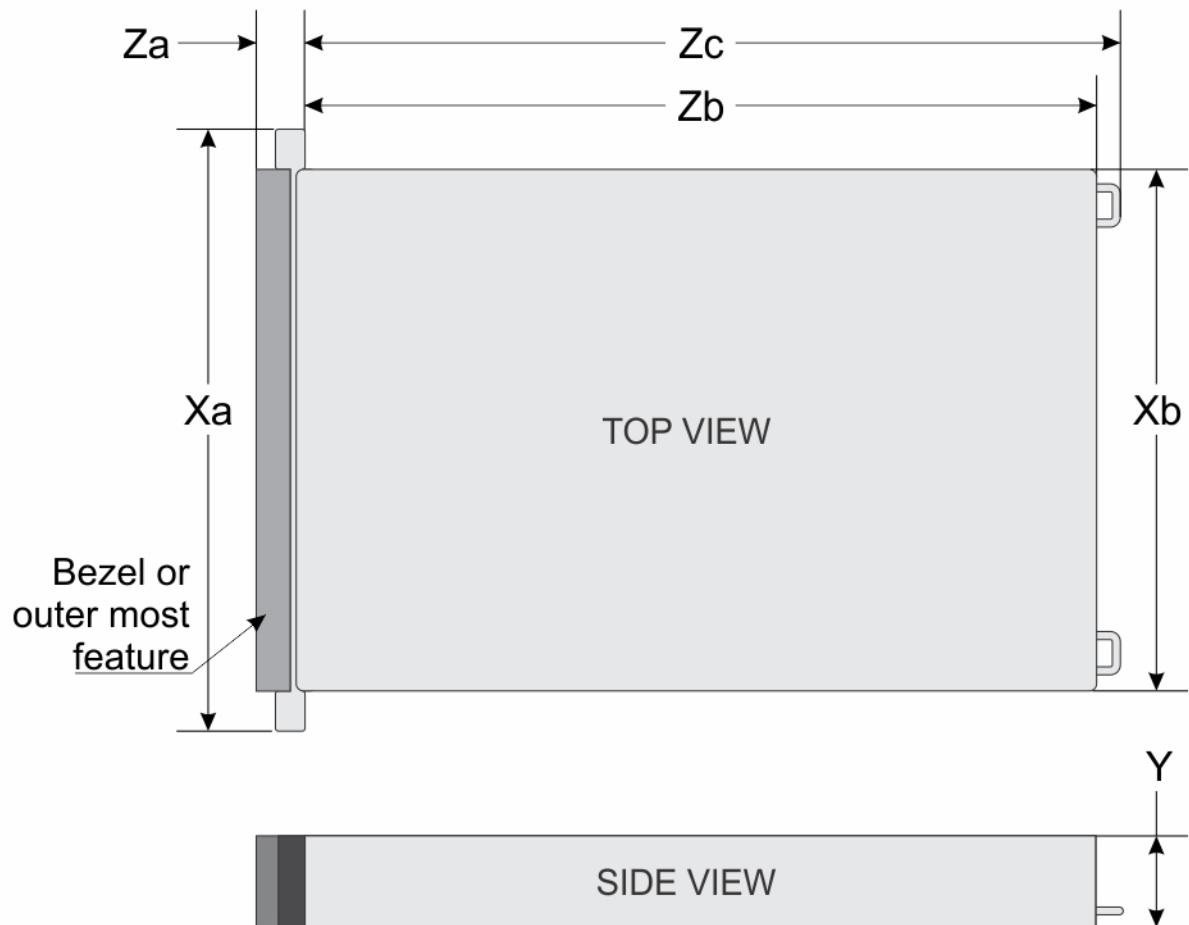


Figure 29. Chassis dimensions

Table 16. PowerEdge R7625 chassis dimensions

Xa	Xb	Y	Za	Zb	Zc
482.0 mm (18.97 inches)	434.0 mm (17.08 inches)	86.8 mm (3.41 inches)	35.84 mm (1.4 inches) With bezel 22.0 mm (0.87 inches) Without bezel	700.7 mm (27.58 inches) Ear to Rear wall	736.29 mm (28.98 inches) Ear to PSU handle

i **NOTE:** Zb is the nominal rear wall external surface where the system board I/O connectors reside.

System weight

Table 17. PowerEdge R7625 system weight

System configuration	Maximum weight (with all drives/SSDs)
A server with fully populated drives	34.4 kg (75.84 pound)
A server without drives and PSU installed	23.3 kg (51.37 pound)

Processor specifications

Table 18. PowerEdge R7625 processor specifications

Supported processor	Number of processors supported
AMD EPYC 4 th Generation 9004 Series processor	Up to two

PSU specifications

The PowerEdge R7625 system supports up to two AC or DC power supply units (PSUs).

Table 19. PSU specifications

PSU	Class	Heat dissipation (maximum) (BTU/hr)	Frequency (Hz)	Voltage	AC		DC	Current (A)
					High line wattage	Low line wattage		
800 W Mixed Mode	Platinum	3000	50/60	100-240 V AC	800 W	800 W	N/A	9.2-4.7
		3000	N/A	240 V DC	N/A	N/A	800 W	3.8
1100 W Mixed Mode	Titanium	4125	50/60	100-240 V AC	1100 W	1050 W	N/A	12-6.3
		4125	N/A	240 V DC	N/A	N/A	1100 W	5.2
1400 W Mixed Mode	Platinum	5250	50/60	100-240 V AC	1400 W	1050 W	N/A	12-8
		5250	N/A	240 V DC	N/A	N/A	1400 W	6.6
	Titanium	5250	50/60	100-240 V AC	1400 W	1050 W	N/A	12-8
		5250	N/A	240 V DC	N/A	N/A	1400 W	6.5
	Titanium	5250	50/60	277 V AC	1400 W	1050 W	N/A	5.8
		5250	N/A	336 V DC	N/A	N/A	1400 W	5.17
1800 W Mixed Mode	Titanium	6610	50/60	200-240 V AC	1800 W	N/A	N/A	10
		6610	N/A	240 V DC	N/A	N/A	1800 W	8.2
2400 W Mixed Mode	Platinum	9000	50/60	100-240 V AC	2400 W	1400 W	N/A	16-13.5
		9000	N/A	240 V DC	N/A	N/A	2400 W	11.2
2800 W Mixed Mode	Titanium	10500	50/60	200-240 V AC	2800 W	N/A	N/A	15.6
		10500	N/A	240 V DC	N/A	N/A	2800 W	13.6
3200 W Mixed Mode	Titanium	12000	50/60	277 V AC	3200 W	N/A	N/A	13
		12000	N/A	336 V DC	N/A	N/A	3200 W	11.5
1100 W DC	N/A	4265	N/A	-48—(-60) V DC	N/A	N/A	1100 W	27

i **NOTE:** Heat dissipation is calculated using the PSU wattage rating.

i **NOTE:** When selecting or upgrading the system configuration, to ensure optimum power utilization, verify the system power consumption with the Enterprise Infrastructure Planning Tool available at [calc](#).

i **NOTE:** If a system with AC 1400W/1100W PSUs operates at low line 100-120 V AC, then the power rating per PSU is derated to 1050W.

i **NOTE:** If a system with AC 2400W PSUs operates at low line 100-120 V AC, then the power rating per PSU is derated to 1400W.

(i) NOTE:

- HLAC stands for High-Line AC, with a range of 200 - 240 V AC.
- HVDC stands for High-Voltage DC, with 336 V DC.



Figure 30. PSU power cords

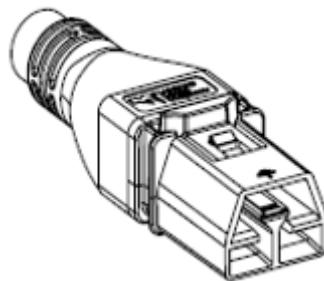


Figure 31. APP 2006G1 power cable

Table 20. PSU power cords

Form factor	Output	Power cable
Redundant 60 mm	800 W mixed mode	C13
	1100 W mixed mode	C13
	1400 W mixed mode	C13
	1400 W mixed mode 277 Vac and HVDC	APP 2006G1
	1800 W mixed mode HLAC	C15
Redundant 86 mm	2400 W mixed mode	C19
	2800 W mixed mode HLAC	C21
	3200 W mixed mode 277 Vac and HVDC	APP 2006G1

(i) NOTE: C19 power cord combined with C20 to C21 jumper power cord can be used to adapt 2800 W PSU.

(i) NOTE: C13 power cord combined with C14 to C15 jumper power cord can be used to adapt 1800 W PSU.

Cooling fan specifications

The PowerEdge R7625 system supports up to six High Performance Silver and High Performance Gold fans based on configurations.

Table 21. Cooling fan specifications

Fan type	Abbreviation	Label color	Label image
High performance Silver fans	HPR Silver	Silver	
High performance Gold fans	HPR Gold	Gold	

Supported operating systems

The PowerEdge R7625 system supports the following operating system:

- Canonical Ubuntu Server LTS
- Microsoft Windows Server with Hyper-V
- RedHat Enterprise Linux
- SUSE Linux Enterprise Server
- VMware ESXi
- Citrix XenServer

For more information, go to [OS support](#).

System battery specifications

The PowerEdge R7625 system uses one CR 2032 3.0-V lithium coin cell battery.

Expansion card riser specifications

The PowerEdge R7625 system support up to 6 Full Height or 2 low profile riser slots with up to 6 x16 slots.

Table 22. Expansion card slots supported on the system board

Expansion card riser	PCIe slots	Processor connection	Height	Length	Slot width
Riser 1B	Slot 1	Processor 1	Full Height	Half Length	x8
	Slot 2				
Riser 1P	Slot 2	Processor 1	Full Height	Half Length / Full Length	x16

Table 22. Expansion card slots supported on the system board (continued)

Expansion card riser	PCIe slots	Processor connection	Height	Length	Slot width
Riser 1Q	Slot 1	Processor 1	Full Height	Half Length	x8
	Slot 2				
Riser 1S	Slot 1	Processor 1	Full Height	Half Length / Full Length	x16
	Slot 2				
Riser 2A	Slot 3	Processor 1	Low Profile	Half Length	x16
	Slot 6	Processor 2			
Riser 3A	Slot 5	Processor 2	Full Height	Half Length / Full Length	x16
Riser 3B	Slot 4	Processor 2	Full Height	Half Length	x8
	Slot 5				
Riser 4B	Slot 7	Processor 2	Full Height	Half Length	x8
	Slot 8				
Riser 4Q	Slot 7	Processor 2	Full Height	Half Length	x8
	Slot 8				
Riser 4P	Slot 7	Processor 2	Full Height	Half Length / Full Length	x16

Memory specifications

The PowerEdge R7625 system supports the following memory specifications for optimized operation.

Table 23. Memory specifications

DIMM type	DIMM rank	DIMM capacity	Single Processor		Dual Processor	
			Minimum system capacity	Maximum system capacity	Minimum system capacity	Maximum system capacity
RDIMM	Single Rank	16 GB	16 GB	192 GB	32 GB	384 GB
		32 GB	32 GB	384 GB	64 GB	768 GB
		64 GB	64 GB	768 GB	128 GB	1.5 TB
	Dual Rank	96 GB	96 GB	1.15 TB	192 GB	2.3 TB
		128 GB	128 GB	1.5 TB	256 GB	3 TB
	Octa Rank	256 GB	256 GB	3 TB	512 GB	6 TB

Table 24. Memory module sockets

Memory module sockets	Speed
24, 288-pin	4800 MT/s

i **NOTE:** DDR4 DIMM memory is not supported.

i **NOTE:** Memory DIMM slots are not hot pluggable.

i **NOTE:** Do not mix DIMM module types within a memory channel. All must be RDIMM or 3DS RDIMM module types with same ECC configuration.

(i) NOTE: Do not mix x4 and x8 DIMMs with a memory channel.

Storage controller specifications

The PowerEdge R7625 system supports the following controller cards:

Table 25. Storage controller cards

Supported storage controller cards
Internal controllers <ul style="list-style-type: none">• PERC H965i• PERC H755• PERC H755N• PERC H355
External controllers <ul style="list-style-type: none">• HBA355e• PERC H965e• HBA465e
Internal Boot <ul style="list-style-type: none">• Boot Optimized Storage Subsystem (BOSS-N1): HWRAID 2 x M.2 NVMe SSD• USB
Software RAID <ul style="list-style-type: none">• S160
SAS Host Bus Adapters (HBA) <ul style="list-style-type: none">• HBA355i• HBA465i

Drives

The PowerEdge R7625 system supports:

- 8 x 3.5-inch hot-swappable SAS, SATA drives
- 8 x 2.5-inch hot-swappable SAS, SATA, NVMe drives
- 12 x 3.5-inch hot-swappable SAS, SATA drives
- 16 x 2.5-inch hot-swappable SAS, SATA, NVMe drives
- 24 x 2.5-inch hot-swappable SAS, SATA, NVMe drives
- 32 x EDSFF E3.S hot-swappable NVMe Gen5 drives
- 16 x EDSFF E3.S hot-swappable NVMe Gen5 drives
- 8 x EDSFF E3.S hot-swappable NVMe Gen5 drives
- 2 x 2.5-inch (rear) hot-swappable SAS/SATA/NVMe drives
- 4 x 2.5-inch (rear) hot-swappable SAS/SATA/NVMe drives

(i) NOTE: For more information about how to hot swap NVMe PCIe SSD U.2 device, see the *Dell Express Flash NVMe PCIe SSD User's Guide* at [Dell Support](#) page >**Browse all Products > Data Center Infrastructure > Storage Adapters & Controllers > Dell PowerEdge Express Flash NVMe PCIe SSD > Documentation > Manuals and Documents.**

Ports and connectors specifications

NIC port specifications

The PowerEdge R7625 system supports up to two 10/100/1000 Mbps Network Interface Controller (NIC) ports embedded on the LAN on Motherboard (LOM) and integrated on the Open Compute Project (OCP) cards.

Table 26. NIC port specification for the system

Feature	Specifications
LOM card (optional)	1 GbE x 2
OCP card 3.0 (optional)	1 GbE x 4, 10 GbE x 2, 10 GbE x 4, 25 GbE x 2, 25 GbE x 4
Management Interface Card (MIC) to support Dell Data Processing Unit (DPU) card (optional)	25 GbE x 2 or 100 GbE x 2

i **NOTE:** The system allows either LOM card or an OCP card or both to be installed in the system.

i **NOTE:** On the system board, the supported OCP PCIe width is x8; when x16 PCIe width is installed, it is downgraded to x8.

i **NOTE:** The system allows either LOM card or MIC card to be installed in the system.

Serial connector specifications

The PowerEdge R7625 system supports one optional card type serial connector, which is a 9-pin connector, Data Terminal Equipment (DTE), 16550-compliant.

The optional serial connector card is installed similar to an expansion card filler bracket.

USB ports specifications

Table 27. PowerEdge R7625 USB specifications

Front		Rear		Internal (optional)	
USB port type	No. of ports	USB port type	No. of ports	USB port type	No. of ports
USB 2.0-compliant port	One	USB 3.0-compliant port	One	Internal USB 3.0-compliant port	One
iDRAC Direct port (Micro-AB USB 2.0-compliant port)	One	USB 2.0-compliant ports	One		

i **NOTE:** The micro USB 2.0 compliant port can only be used as an iDRAC Direct or a management port.

VGA ports specifications

The PowerEdge R7625 system supports two DB-15 VGA port one each on the front and rear panel (optional for liquid cooling).

Video specifications

The PowerEdge R7625 system supports integrated Matrox G200 graphics controller with 16 MB of video frame buffer.

Table 28. Supported video resolution options

Resolution	Refresh rate (Hz)	Color depth (bits)
1024 x 768	60	8, 16, 32
1280 x 800	60	8, 16, 32
1280 x 1024	60	8, 16, 32
1360 x 768	60	8, 16, 32

Table 28. Supported video resolution options (continued)

Resolution	Refresh rate (Hz)	Color depth (bits)
1440 x 900	60	8, 16, 32
1600 x 900	60	8, 16, 32
1600 x 1200	60	8, 16, 32
1680 x 1050	60	8, 16, 32
1920 x 1080	60	8, 16, 32
1920 x 1200	60	8, 16, 32

Environmental specifications

Table 29. Continuous Operation Specifications for ASHRAE A2

Temperature	Specifications
Allowable continuous operations	
Temperature range for altitudes <= 900 m (<= 2953 ft)	10–35°C (50–95°F) with no direct sunlight on the equipment
Humidity percent range (non-condensing at all times)	8% RH with -12°C minimum dew point to 80% RH with 21°C (69.8°F) maximum dew point
Operational altitude de-rating	Maximum temperature is reduced by 1°C/300 m (1.8°F/984 Ft) above 900 m (2953 Ft)

Table 30. Continuous Operation Specifications for ASHRAE A3

Temperature	Specifications
Allowable continuous operations	
Temperature range for altitudes <= 900 m (<= 2953 ft)	5–40°C (41–104°F) with no direct sunlight on the equipment
Excursion Limited Operation	5-35°C (41-95°F) Continuous Operation
	35-40°C (95-104°F) 10% Annual Runtime
Humidity percent range (non-condensing at all times)	8% RH with -12°C minimum dew point to 85% RH with 24°C (75.2°F) maximum dew point
Operational altitude de-rating	Maximum temperature is reduced by 1°C/175 m (1.8°F/574 Ft) above 900 m (2953 Ft)

Table 31. Continuous Operation Specifications for ASHRAE A4

Temperature	Specifications
Allowable continuous operations	
Temperature range for altitudes <= 900 m (<= 2953 ft)	5–45°C (41–113°F) with no direct sunlight on the equipment
Excursion Limited Operation	5-35°C (41-95°F) Continuous Operation
	35-40°C (95-104°F) 10% Annual Runtime
	40-45°C (104-113°F) 1% Annual Runtime
Humidity percent range (non-condensing at all times)	8% RH with -12°C minimum dew point to 90% RH with 24°C (75.2°F) maximum dew point

Table 31. Continuous Operation Specifications for ASHRAE A4 (continued)

Temperature	Specifications
Operational altitude de-rating	Maximum temperature is reduced by 1°C/125 m (1.8°F/410 Ft) above 900 m (2953 Ft)

Table 32. Common Environmental Specifications for ASHRAE A2, A3 and A4

Temperature	Specifications
Allowable continuous operations	
Maximum temperature gradient (applies to both operation and non-operation)	20°C in an hour* (36°F in an hour) and 5°C in 15 minutes (9°F in 15 minutes), 5°C in an hour* (9°F in an hour) for tape hardware (i) NOTE: * - Per ASHRAE thermal guidelines for tape hardware, these are not instantaneous rates of temperature change.
Non-operational temperature limits	-40 to 65°C (-40 to 149°F)
Non-operational humidity limits	5% to 95% RH with 27°C (80.6°F) maximum dew point
Maximum non-operational altitude	12,000 meters (39,370 feet)
Maximum operational altitude	3,048 meters (10,000 feet)

Table 33. Maximum vibration specifications

Maximum vibration	Specifications
Operating	0.21 G _{rms} at 5 Hz to 500 Hz for 10 minutes (all operation orientations)
Storage	1.88 G _{rms} at 10 Hz to 500 Hz for 15 minutes (all six sides tested)

Table 34. Maximum shock pulse specifications

Maximum shock pulse	Specifications
Operating	Six consecutively executed shock pulses in the positive and negative x, y, and z axis of 6 G for up to 11 ms
Storage	Six consecutively executed shock pulses in the positive and negative x, y, and z axis (one pulse on each side of the system) of 71 G for up to 2 ms

Particulate and gaseous contamination specifications

The following table defines the limitations that help avoid any equipment damage or failure from particulates and gaseous contamination. If the levels of particulates or gaseous pollution exceed the specified limitations and result in equipment damage or failure, you may need to rectify the environmental conditions. Remediation of environmental conditions is the responsibility of the customer.

Table 35. Particulate contamination specifications

Particulate contamination	Specifications
Air filtration	Data center air filtration as defined by ISO Class 8 per ISO 14644-1 with a 95% upper confidence limit (i) NOTE: This condition applies to data center environments only. Air filtration requirements do not apply to IT equipment designed to be used outside a data center, in environments such as an office or factory floor. (i) NOTE: Air entering the data center must have MERV11 or MERV13 filtration.
Conductive dust	Air must be free of conductive dust, zinc whiskers, or other conductive particles

Table 35. Particulate contamination specifications (continued)

Particulate contamination	Specifications
	<p>NOTE: This condition applies to data center and non-data center environments.</p>
Corrosive dust	<ul style="list-style-type: none"> Air must be free of corrosive dust Residual dust present in the air must have a deliquescent point less than 60% relative humidity <p>NOTE: This condition applies to data center and non-data center environments.</p>

Table 36. Gaseous contamination specifications

Gaseous contamination	Specifications
Copper coupon corrosion rate	<300 Å/month per Class G1 as defined by ANSI/ISA71.04-2013
Silver coupon corrosion rate	<200 Å/month as defined by ANSI/ISA71.04-2013

Particulate and gaseous contamination specifications

The following table defines the limitations that help avoid any equipment damage or failure from particulates and gaseous contamination. If the levels of particulates or gaseous pollution exceed the specified limitations and result in equipment damage or failure, you must rectify the environmental conditions. Remediation of environmental conditions is the responsibility of the customer.

Table 37. Particulate contamination specifications

Particulate contamination	Specifications
Air filtration: Conventional Data Center only	<p>Data center air filtration as defined by ISO Class 8 per ISO 14644-1 with a 95% upper confidence limit</p> <p>NOTE: Filtering room air with a MERV8 filter, as specified in ANSI/ASHRAE Standard 127, is a recommended method for achieving the necessary environmental conditions.</p> <p>NOTE: Air entering the data center must have MERV11 or MERV13 filtration.</p> <p>NOTE: This condition applies to data center environments only. Air filtration requirements do not apply to IT equipment designed to be used outside a data center, in environments such as an office or factory floor.</p>
Walk-Up Edge Data Center or Cabinet (sealed, closed loop environment)	<p>Filtration is not required for cabinets that are anticipated to be opened six times or less per year. Class 8 per ISO 14661 filtration as defined above is required otherwise.</p> <p>NOTE: In environments commonly above ISA-71 Class G1 or that may have known challenges, special filters may be required.</p>
Conductive dust: data center and non-data center environments	<p>Air must be free of conductive dust, zinc whiskers, or other conductive particles.</p> <p>NOTE: Conductive dust, which can interfere with equipment operation, can originate from various sources, including manufacturing processes and zinc whiskers that may develop on the plating of raised floor tiles.</p> <p>NOTE: This condition applies to data center and non-data center environments.</p>
Corrosive dust: data center and non-data center environments	<ul style="list-style-type: none"> Air must be free of corrosive dust.

Table 37. Particulate contamination specifications (continued)

Particulate contamination	Specifications
	<ul style="list-style-type: none"> Residual dust present in the air must have a deliquescent point less than 60% relative humidity. <p>(i) NOTE: This condition applies to data center and non-data center environments.</p>

Table 38. Gaseous contamination specifications

Gaseous contamination	Specifications	Notes
Copper coupon corrosion rate	ISA-71 Class G1: <300 Å/month	Per ANSI/ISA71.04
Silver coupon corrosion rate	ISA-71 Class G1: <200 Å/month	Per ANSI/ISA71.04

Thermal air restrictions

ASHRAE A3 environment

- Two PSUs are required in redundant mode, however single PSU failure is not supported.
- PCIe SSD is not supported.
- DIMMs greater than 32 GB are not supported.
- Both SW and DW GPGPU/FPGA are not supported.
- CPU TDP greater than 200W are not supported.
- Rear drives are not supported.
- PCIe card TDP more than 25 W is not supported.
- OCP is supported with 85C active optic cable.

ASHRAE A4 environment

- Two PSUs are required in redundant mode, however single PSU failure is not supported.
- PCIe SSD is not supported.
- DIMMs greater than 32 GB are not supported.
- Both SW and DW GPGPU/FPGA are not supported.
- CPU TDP greater than 200W are not supported.
- Rear drives are not supported.
- PCIe card TDP more than 25 W is not supported.
- OCP is supported with 85C active cable and cards Tier<=4
- BOSS N1 is not supported.

Liquid cooling: ASHRAE A3 environment

- Two PSUs are required in redundant mode, however single PSU failure is not supported.
- PCIe SSD is not supported.
- DIMMs greater than 32 GB are not supported.
- Both SW and DW GPGPU/FPGA are not supported.
- Rear drives are not supported.
- PCIe card TDP more than 25 W is not supported.
- OCP is supported with 85C active optic cable.

Liquid cooling: ASHRAE A4 environment

- Two PSUs are required in redundant mode, however single PSU failure is not supported.
- PCIe SSD is not supported.

- DIMMs greater than 32 GB are not supported.
- Both SW and DW GPGPU/FPGA are not supported.
- Rear drives are not supported.
- PCIe card TDP more than 25 W is not supported.
- OCP is supported with 85C active cable and cards Tier<=5
- BOSS N1 is not supported.

Other Restrictions

High temp spec(85C) active optics cable is required for cards,

- 25Gb and above PCIe/OCP cards require DAC or 85C active optics cable.

Thermal restriction matrix

Table 39. Air cooling: Thermal restriction matrix(non-GPU)

Configuration		No BP	8 x 2.5" U.2	16 x 2.5" SAS (SmartFlow)	16 x 2.5" U.2 (SmartFlow)	24 x 2.5" SAS				16x2.5" SAS + 8x2.5" U.2	8x3.5"	12x3.5"		
Rear storage		No Rear Drives	No Rear Drives	No Rear Drives	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5" w/ 3x Rear-Fan	No Rear Drives	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5" w/ 3x Rear-Fan	
CPU cTDP Max	CPU TDP													
CPU TDP / cTDP	240 W	210 W	HPR SILVER Fan + 2U STD HSK								HPR SILVER Fan [75%] + 2U STD HSK	HPR GOLD Fan [70%] + 2U EXT HSK		
		200 W												
	300 W	290 W	HPR SILVER Fan + 2U EXT HSK								HPR SILVER Fan [75%] + 2U EXT HSK	HPR GOLD Fan [70%] + 2U EXT HSK (Note 1)		
		280 W												
	400 W	360 W	HPR SILVER Fan + 2U EXT HSK				HPR GOLD Fan + 2U EXT HSK				HPR GOLD Fan [75%] + 2U EXT HSK	Requires LC		
		320 W												
		340 W												
Memory	16 GB RDIMM	HPR SILVER Fan				HPR GOLD Fan				HPR SILVER Fan [75%]	HPR GOLD Fan [70%]			
	32 GB RDIMM													
	64 GB RDIMM													
	96 GB RDIMM													

Table 39. Air cooling: Thermal restriction matrix(non-GPU) (continued)

Configuration		No BP	8 x 2.5" U.2	16 x 2.5" SAS (SmartFlow)	16 x 2.5" U.2 (SmartFlow)	24 x 2.5" SAS			16x2.5" SAS + 8x2.5" U.2	8x3.5"	12x3.5"		
Rear storage		No Rear Drives	No Rear Drives	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5" w/ 3x Rear-Fan	No Rear Drives	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5" w/ 3x Rear-Fan	
CPU cTDP Max	CPU TDP												
	128 GB RDIMM				Not supported								
	256 GB RDIMM (Note 2)		HPR GOLD Fan		HPR GOLD Fan (Note 1)								Not supported

Note 1: Supported ambient temperature is 30°C.

Note 2: Support SKHYNIX RDIMM only

Table 40. Air cooling: Thermal restriction matrix(GPU Configuration)

Configuration			No BP	8 x 2.5" U.2	16 x 2.5" SAS (SmartFlow)	16 x 2.5" U.2 (SmartFlow)	24 x 2.5" SAS	16x2.5" SAS + 8x2.5" U.2	8x3.5"
Rear storage			No Rear Drives						
CPU cTDP Max	CPU TDP	Model							
CPU TDP/ cTDP	240 W	210 W	9334						
			9254						
		200 W	9224						
			9124						
	300 W	290 W	9634						
			280 W	9534					
		290 W	9454						
			280 W	9354					
	400 W	360 W	9654	HPR GOLD Fan + 1U EXT HSK					
			9554	HPR GOLD Fan					
		320 W	9474F	+ 1U EXT HSK (Note 1)					
			9374F						
			9274F	HPR GOLD Fan					
			9174F	+ 1U EXT HSK					
Memory	16 GB RDIMM								
	32 GB RDIMM								
	64 GB RDIMM								
	96 GB RDIMM								

Table 40. Air cooling: Thermal restriction matrix(GPU Configuration) (continued)

Configuration			No BP	8 x 2.5" U.2	16 x 2.5" SAS (SmartFlow)	16 x 2.5" U.2 (Smart Flow)	24 x 2.5" SAS	16x2.5" SAS + 8x2.5" U.2	8x3.5"										
Rear storage			No Rear Drives																
CPU cTDP Max	CPU TDP	Model																	
GPU	128 GB RDIMM			HPR GOLD Fan	Not Supported	Not Supported													
	256 GB RDIMM (Note 3)				HPR GOLD Fan (Note 1)														
GPU	A2 16 GB			HPR GOLD Fan	HPR GOLD Fan [75%] (Note 1)														
	A16 64GB																		
	A30 24GB																		
	A40 48GB																		
	A100 80GB																		
	H100 80 GB																		
	MI210 64GB																		

Note 1: Supported ambient temperature is 30°C.

Note 2: Bergmano CPUs.

Note 3: Support SKHYNIX RDIMM only

i **NOTE:** "High-Performance GOLD Fan" to be supported on all GPU configurations.

i **NOTE:** GPU is not supported on 12x3.5-inch configurations and system configurations with rear module installed.

Table 41. Air Cooling: Thermal Guidance(non GPU)

Configuration			No BP	8 x 2.5" U.2	16 x 2.5" SAS (SmartFlow)	24 x 2.5" SAS	16x2.5" SAS + 8x2.5" U.2	8x3.5"	12x3.5"			
Rear storage			No Rear Drives	No Rear Drives	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear -Fan	4x Rear 2.5" w/ 3x Rear -Fan	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5" w/ 3x Rear-Fan
CPU cTDP Max	Mode I	Core Count #										
CPU TDP / cTDP	240 W	9334	32	35°C					35°C			
		9254	24									
		9224	24									
		9124	16									

Table 41. Air Cooling: Thermal Guidance(non GPU) (continued)

Configuration			No BP	8 x 2.5" U.2	16 x 2.5" SAS (SmartFlow)	16 x 2.5" U.2 (SmartFlow)	24 x 2.5" SAS			16x2.5" SAS + 8x2.5" U.2	8x3.5"	12x3.5"				
Rear storage			No Rear Drives	No Rear Drives	No Rear Drives	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5" w/ 3x Rear-Fan	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5" w/ 3x Rear-Fan			
CPU cTDP Max	Mode I	Core Count #														
300 W	9634	84	35°C								35°C					
	9534	64														
	9454	48														
	9354	32														
	9654	96														
	9554	64														
	9474F	48														
	9374F	32														
	9274F	24														
	9174F	16														
400 W	9734	112	35°C								35°C					
	9754	128														
	9684X	96														
	9384X	32														
	9184X	16														
	16 GB RDIMM															
	32 GB RDIMM															
	64 GB RDIMM															
	96 GB RDIMM															
	128 GB RDIMM															
Memory	256 GB RDIMM (Note 1)		35°C	Not Supported	Not Supported											
				30°C												

Note 1: Support SKHYNIX RDIMM only

i | NOTE: Not all backplanes/risers support liquid cooling; these are listed as "No Support."

i | NOTE: Inlet temperature is determined by lowest degree requirement.

Table 42. Air Cooling: Thermal Guidance (GPU Configuration)

Configuration			No BP	8 x 2.5" U.2	16 x 2.5" SAS (SmartFlow)	16 x 2.5" U.2 (Smart Flow)	24 x 2.5" SAS	16x2.5" SAS + 8x2.5" U.2	8x3.5"															
Rear storage			No Rear Drives																					
CPU cTDP Max	Model	Core Count#																						
CPU TDP/ cTDP	240 W	9334	32	35°C																				
		9254	24																					
		9224	24																					
		9124	16																					
	300 W	9634	84	35°C																				
		9534	64																					
		9454	48																					
		9354	32																					
	400 W	9654	96	35°C	Not Supported																			
		9554	64	30°C	Requires LC																			
		9474F	48	30°C																				
		9374F	32	35°C																				
		9274F	24	35°C																				
		9174F	16	35°C																				
Memory	16 GB RDIMM			35°C							35°C													
	32 GB RDIMM																							
	64 GB RDIMM																							
	128 GB RDIMM			35°C	Not Supported	Not Supported			Not Supported															
	256 GB RDIMM (Note 1)				30°C																			
GPU	A2 16 GB			35°C							30°C													
	A16 64 GB																							
	A30 24 GB																							
	A40 48 GB																							
	A100 80 GB																							
	H100 80 GB																							
	MI210 64 GB																							

Note 1: Support SKHYNIX RDIMM only

i | NOTE: Not all backplanes/risers support liquid cooling; these are listed as "No Support."

i | NOTE: Inlet temperature is determined by lowest degree requirement.

Table 43. Liquid cooling: Thermal restriction matrix(non-GPU)

Configuration		No BP	8 x 2.5" U.2	24 x 2.5" SAS		8x3.5"	12x3.5"										
Rear storage		No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5 w/ 3x Rear-Fan	No Rear Drives	No Rear Drives	2x Rear 2.5" w/ 2x Rear-Fan	4x Rear 2.5 w/ 3x Rear-Fan								
CPU	All CPU TDP SKUs	HPR SILVER Fan			HPR SILVER Fan [75%]		HPR GOLD Fan [70%]										
Memory	16 GB RDIMM	HPR SILVER Fan			HPR SILVER Fan [75%]		HPR GOLD Fan [70%]										
	32 GB RDIMM				HPR SILVER Fan [75%]												
	64 GB RDIMM				HPR SILVER Fan [75%]												
	96 GB RDIMM				HPR SILVER Fan [75%]												
	128 GB RDIMM	HPR GOLD Fan	Not supported														
	256 GB RDIMM (Note 1)																

Note 1: Support SKHYNIX RDIMM only

i | NOTE: Use "High-Performance Silver" fan for all 2.5" and 8x3.5" configurations.

i | NOTE: Use "High-Performance GOLD" fan for all 12x3.5" configurations.

Table 44. Liquid cooling: Thermal restriction matrix(GPU Configuration)

Configuration		No BP	8 x 2.5" U.2	8x3.5"		
Rear storage		No Rear Drives	No Rear Drives	No Rear Drives		
CPU	All CPU TDP SKUs	HPR GOLD Fan		HPR GOLD Fan [75%]		
Memory	16 GB RDIMM	HPR GOLD Fan		HPR GOLD Fan [75%]		
	32 GB RDIMM					
	64 GB RDIMM					
	96 GB RDIMM					
	128 GB RDIMM	HPR GOLD Fan		Not supported		
	256 GB RDIMM (Note 2)					
GPU	A2 16 GB			HPR GOLD Fan [75%] Note 1		
	A16 64 GB					
	A30 24 GB					
	A40 48 GB			HPR GOLD Fan		
	A100 80 GB					
	H100 80 GB					
	MI210 64 GB					

Note 1: Supported ambient temperature is 30°C.

Note 2: Support SKHYNIX RDIMM only

i | NOTE: "High-Performance GOLD Fan" to be supported on all GPU configurations.

(i) NOTE: GPU is not supported on 12x3.5" configurations and system configurations with rear module installed.

Table 45. Label reference

Label	Description
HPR SILVER (Silver)	High performance (silver grade)
HPR GOLD (Gold)	High performance (gold grade)
HSK	Heat sink
LP	Low profile
FH	Full height

Initial system setup and configuration

This section describes the tasks for initial setup and configuration of the Dell system. The section also provides general steps to set up the system and the reference guides for detailed information.

Topics:

- Setting up the system
- iDRAC configuration
- Resources to install operating system

Setting up the system

Perform the following steps to set up the system:

Steps

1. Unpack the system.
2. Install the system into the rack. For more information, see the rail installation and cable management accessory guides relevant to your rail and cable management solution at [PowerEdge manuals](#).
3. Connect the peripherals to the system and the system to the electrical outlet.
4. Power on the system.

For more information about setting up the system, see the *Getting Started Guide* that is shipped with your system.

 **NOTE:** For information about managing the basic settings and features of the system, see the [Pre-operating system management applications](#) chapter.

iDRAC configuration

The Integrated Dell Remote Access Controller (iDRAC) is designed to make you more productive as a system administrator and improve the overall availability of Dell servers. iDRAC alerts you to system issues, helps you to perform remote management, and reduces the need for physical access to the system.

Options to set up iDRAC IP address

To enable communication between your system and iDRAC, you must first configure the network settings based on your network infrastructure. The network settings option is set to **DHCP**, by default.

 **NOTE:** For static IP configuration, you must request for the settings at the time of purchase.

You can set up the iDRAC IP address using one of the interfaces in the table below. For information about setting up iDRAC IP address, see the documentation links provided in the table below.

Table 46. Interfaces to set up iDRAC IP address

Interface	Documentation links
iDRAC Settings utility	Integrated Dell Remote Access Controller User's Guide at iDRAC Manuals or for system specific Integrated Dell Remote Access Controller User's Guide, go to PowerEdge Manuals > Product Support page of your system > Documentation .

Table 46. Interfaces to set up iDRAC IP address (continued)

Interface	Documentation links
	<p>NOTE: To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article KB78115.</p>
OpenManage Deployment Toolkit	<i>Dell OpenManage Deployment Toolkit User's Guide</i> available on the OpenManage manuals page. > Open Manage Deployment Toolkit.
iDRAC Direct	<p>Integrated Dell Remote Access Controller User's Guide at iDRAC Manuals or for system specific Integrated Dell Remote Access Controller User's Guide, go to PowerEdge Manuals > Product Support page of your system > Documentation.</p> <p>NOTE: To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article KB78115.</p>
Lifecycle Controller	<p><i>Dell Lifecycle Controller User's Guide</i> at iDRAC Manuals or for system specific <i>Dell Lifecycle Controller User's Guide</i>, go to PowerEdge Manuals > Product Support page of your system > Documentation.</p> <p>NOTE: To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article Integrated Dell Remote Access Controller 9 Versions and Release Notes.</p>
Server LCD panel	Refer LCD panel section.
iDRAC Direct and Quick Sync 2 (optional)	<p>Integrated Dell Remote Access Controller User's Guide at iDRAC Manuals or for system specific Integrated Dell Remote Access Controller User's Guide, go to PowerEdge Manuals > Product Support page of your system > Documentation.</p> <p>NOTE: To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article KB78115.</p>

NOTE: To access iDRAC, ensure that you connect the Ethernet cable to the iDRAC dedicated network port or use the iDRAC Direct port by using the micro USB (type AB) cable. You can also access iDRAC through the shared LOM mode, if you have opted for a system that has the shared LOM mode enabled.

Options to log in to iDRAC

To log in to the iDRAC Web User Interface, open a browser and enter the IP address.

You can log in to iDRAC as:

- iDRAC user
- Microsoft Active Directory user
- Lightweight Directory Access Protocol (LDAP) user

In the login screen displayed, if you have opted for secure default access to iDRAC, the default username is `root` and enter the iDRAC secure default password available on back of the Information Tag. If you opted for legacy password, use the iDRAC legacy username and password - `root` and `calvin`, the iDRAC default password will be blank on the information tag. Then you will be prompted and required to create a password of your choice before proceeding. You can also log in by using your Single Sign-On or Smart Card.

NOTE: Ensure that you change the default username and password after setting up the iDRAC IP address.

For more information about logging in to the iDRAC and iDRAC licenses, see the latest *Integrated Dell Remote Access Controller User's Guide* at [idrac manuals](#).

***(i)* NOTE:** To determine the most recent iDRAC release for your platform and for latest documentation version, see KB article [KB78115](#).

You can also access iDRAC using command-line protocol - RACADM. For more information, see the [Integrated Dell Remote Access Controller RACADM CLI Guide](#).

You can also access iDRAC using automation tool - Redfish API. For more information, see the [Integrated Dell Remote Access Controller User's Guide Redfish API Guide](#).

Resources to install operating system

If the system is shipped without an operating system, you can install a supported operating system by using one of the resources that are provided in the table below. For information about how to install the operating system, see the documentation links provided in the table below.

Table 47. Resources to install the operating system

Resource	Documentation links
iDRAC	Integrated Dell Remote Access Controller User's Guide at iDRAC Manuals or for system specific Integrated Dell Remote Access Controller User's Guide, go to PowerEdge Manuals > Product Support page of your system > Documentation . <i>(i)</i> NOTE: To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article at KB78115 .
Lifecycle Controller	Dell Lifecycle Controller User's Guide at iDRAC Manuals or for system specific Dell Lifecycle Controller User's Guide , go to PowerEdge Manuals > Product Support page of your system > Documentation . Dell recommends using Lifecycle Controller to install the OS, since all required drivers are installed on the system. <i>(i)</i> NOTE: To determine the most recent iDRAC release for your platform and for the latest documentation version, see KB article at KB78115 .
OpenManage Deployment Toolkit	OpenManage Manuals > OpenManage Deployment Toolkit
Dell certified VMware ESXi	Virtualization solutions

***(i)* NOTE:** For more information about installation and how-to videos for operating systems that are supported on PowerEdge systems, see [Supported Operating Systems for Dell PowerEdge systems](#).

Options to download drivers and firmware

You can download drivers and firmware from the [FTP site](#). For more information about username and password, contact your TAM (Tech Account Manager).

Options to download and install OS drivers

You can choose any one of the following options to download and install OS drivers. For information about how to download or install OS drivers, see the documentation links provided in the table below.

Table 48. Options to download and install OS drivers

Option	Documentation
Dell support site	Downloading drivers and firmware section.
iDRAC virtual media	Integrated Dell Remote Access Controller User's Guide or for system specific, go to Integrated Dell Remote Access Controller User's Guide > Product Support page of your system > Documentation .

Table 48. Options to download and install OS drivers (continued)

Option	Documentation
	<p> NOTE: To determine the most recent iDRAC release for your platform and for latest documentation version, see Integrated Dell Remote Access Controller Release Notes.</p>

Downloading drivers and firmware

It is recommended that you download and install the latest BIOS, drivers, and systems management firmware on the system.

Prerequisites

Ensure that you clear the web browser cache before downloading the drivers and firmware.

Steps

1. Go to [Drivers](#).
2. Enter the Service Tag of the system in the **Enter a Dell Service Tag, Dell Product ID or Model** field, and then press Enter.

 **NOTE:** If you do not have the Service Tag, click **Browse all products**, and navigate to your product.
3. On the displayed product page, click **Drivers & Downloads**.
On the **Drivers & Downloads** page, all drivers that are applicable to the system are displayed.
4. Download the drivers to a USB drive, CD, or DVD.

Pre-operating system management applications

You can manage basic settings and features of a system without booting to the operating system by using the system firmware.

(i) NOTE: When the message, "Please wait while the system is initializing" is displayed during boot-up, the system is primarily in the AMD reference code stage. The duration of this stage may vary depending on system configurations, such as memory population, among other factors. This stage may take a while to complete.

Options to manage the pre-operating system applications

You can use any one of the following options to manage the pre-operating system applications:

- System Setup
- Dell Lifecycle Controller
- Boot Manager
- Preboot Execution Environment (PXE)

Topics:

- System Setup
- Dell Lifecycle Controller
- Boot Manager
- PXE boot

System Setup

Using the **System Setup** option, you can configure the BIOS settings, iDRAC settings, and device settings of the system.

You can access the system setup by using any one of the following interfaces:

- Graphical User interface — To access go to iDRAC Dashboard, click **Configuration**, and click **BIOS Settings**.
- Text browser — The browser is enabled by using Console Redirection.

To view **System Setup**, power on the system, press F2, and click **System Setup Main Menu**.

(i) NOTE: If the operating system begins to load before you press F2, wait for the system to finish booting, and then restart the system and try again.

The **System Setup Main Menu** screen details are described as follows:

Table 49. System Setup Main Menu

Option	Description
System BIOS	Enables you to configure the BIOS settings.
iDRAC Settings	Enables you to configure the iDRAC settings. The iDRAC settings utility is an interface to set up and configure the iDRAC parameters by using UEFI (Unified Extensible Firmware Interface). You can enable or disable various iDRAC parameters by using the iDRAC settings utility. For more information about this utility, see <i>Integrated Dell Remote Access Controller User's Guide</i> at PowerEdge Manuals .
Device Settings	Enables you to configure device settings for devices such as storage controllers or network cards.

System BIOS

To view the **System BIOS** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS**.

Table 50. System BIOS details

Option	Description
System Information	Provides information about the system such as the system model name, BIOS version, and Service Tag.
Memory Settings	Specifies information and options related to the installed memory.
Processor Settings	Specifies information and options related to the processor such as speed and cache size.
SATA Settings	Specifies options to enable or disable the integrated SATA controller and ports.
NVMe Settings	Specifies options to change the NVMe settings. If the system contains the NVMe drives that you want to configure in a RAID array, you must set both this field and the Embedded SATA field on the SATA Settings menu to RAID mode. You might also need to change the Boot Mode setting to UEFI . Otherwise, you should set this field to Non-RAID mode.
Boot Settings	Specifies options to specify the Boot mode (BIOS or UEFI). Enables you to modify UEFI and BIOS boot settings.
Network Settings	Specifies options to manage the UEFI network settings and boot protocols. Legacy network settings are managed from the Device Settings menu. i NOTE: Network Settings are not supported in BIOS boot mode.
Integrated Devices	Specifies options to manage integrated device controllers and ports, specifies related features, and options.
Serial Communication	Specifies options to manage the serial ports, its related features, and options.
System Profile Settings	Specifies options to change the processor power management settings, memory frequency.
System Security	Specifies options to configure the system security settings, such as system password, setup password, Trusted Platform Module (TPM) security, and UEFI secure boot. It also manages the power button on the system
Redundant OS Control	Sets the redundant OS information for redundant OS control.
Miscellaneous Settings	Specifies options to change the system date and time.

System Information

To view the **System Information** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > System Information**.

Table 51. System Information details

Option	Description
System Model Name	Specifies the system model name.
System BIOS Version	Specifies the BIOS version installed on the system.
System Service Tag	Specifies the system Service Tag.
System Manufacturer	Specifies the name of the system manufacturer.
System Manufacturer Contact Information	Specifies the contact information of the system manufacturer.

Table 51. System Information details (continued)

Option	Description
System CPLD Version	Specifies the current version of the system complex programmable logic device (CPLD) firmware.
UEFI Compliance Version	Specifies the UEFI compliance level of the system firmware.
AGESA Version	Specifies the AGESA reference code version.
SMU Version	Specifies the SMU firmware version.
MPIO Version	Specifies the MPIO firmware version.

Memory Settings

To view the **Memory Settings** screen, power on the system, press F2, and click **System Setup Main Menu** > **System BIOS** > **Memory Settings**.

Table 52. Memory Settings details

Option	Description
System Memory Size	Specifies the memory size in the system.
System Memory Type	Specifies the type of memory installed in the system.
System Memory Speed	Specifies the system memory speed.
Video Memory	Specifies the amount of video memory.
System Memory Testing	Specifies whether the system memory tests are run during system boot. The two options available are Enabled and Disabled . This option is set to Disabled by default.
DRAM Refresh Delay	By enabling the CPU memory controller to delay running the REFRESH commands, you can improve the performance for some workloads. By minimizing the delay time, it is ensured that the memory controller runs the REFRESH command at regular intervals. For Intel-based servers, this setting only affects systems configured with DIMMs which use 8 Gb density DRAMs. This option is set to Minimum by default.
DIMM Self Healing(Post Package Repair) on Uncorrectable Memory Error	Enables or disables Post Package Repair (PPR) on Uncorrectable Memory Error. This option is set to Enabled by default.
Correctable Error Logging	Enables or disables correctable error logging. This option is set to Disabled by default.

Processor Settings

To view the **Processor Settings** screen, power on the system, press F2, and click **System Setup Main Menu** > **System BIOS** > **Processor Settings**.

(i) NOTE: In the BIOS setup, a warning prompt has been added to prevent users from setting the processor thread count to less than eight. The prompt reads: *Please ensure that the thread count will not be less than 8. Verify Logical Processor, Number of CCDs per Processor, and Number of Cores per CCD settings.* This prompt is only applicable for 4th Generation AMD EPYC processors and after.

Table 53. Processor Settings details

Option	Description
Logical Processor	Each processor core supports up to two logical processors. If this option is set to Enabled , the BIOS displays all the logical processors. If this option is set to Disabled , the BIOS displays only one logical processor per core. This option is set to Enabled by default.

Table 53. Processor Settings details (continued)

Option	Description
Virtualization Technology	Enables or disables the virtualization technology for the processor. This option is set to Enabled by default.
IOMMU Support	Enable or Disable IOMMU support. It is required to create IVRS ACPI table. This option is set to Enabled by default.
Kernel DMA Protection	When this option is set to Enabled, using IOMMU, BIOS, and the Operating System will enable direct memory access protection for DMA capable peripheral devices. Enable IOMMU Support to use this option. This option is set to Disabled by default. When set to Enabled by using Virtualization Technology, BIOS and Operating System will enable direct memory access protection for DMA capable peripheral devices. Enable Virtualization Technology to use this option.
L1 Stream HW Prefetcher	Enables or disables the L1 stream hardware prefetcher. This option is set to Enabled by default.
L2 Stream HW Prefetcher	Enables or disables the L2 stream hardware prefetcher. This option is set to Enabled by default.
L1 Stride Prefetcher	Enables or disables the L1 stride prefetcher. This option is set to Enabled by default, as it optimizes overall workload. NOTE: This option is only available for 4th Generation AMD EPYC processors.
L1 Region Prefetcher	Enables or disables the L1 region prefetcher. This option is set to Enabled by default, as it optimizes overall workload. NOTE: This option is only available for 4th Generation AMD EPYC processors.
L2 Up Down Prefetcher	Enables or disables the L2 up down prefetcher. This option is set to Enabled by default, as it optimizes overall workload. NOTE: This option is only available for 4th Generation AMD EPYC processors.
MADT Core Enumeration	Specifies the MADT Core Enumeration. This option is set to Linear by default.
NUMA Nodes Per Socket	Specifies the number of NUMA nodes per socket. This option is set to 1 by default.
L3 cache as NUMA Domain	Enables or disables the L3 cache as NUMA Domain. This option is set to Disabled by default.
Secure Memory Encryption	Enables or disables the AMD secure encryption features such as SME and Secure Encrypted Virtualization (SEV) . It also determines if other secure encryption features such as TSME and SEV-SNP can be enabled. This option is set to Disabled by default. NOTE: This option is only available for 4th Generation AMD EPYC processors.
Minimum SEV non-ES ASID	Determines the number of Secure Encrypted Virtualization ES and non-ES available Address Space IDs. This option is set to 1 by default.
Secured Nested Paging	Enables or disables SEV-SNP , a set of additional security protections. This option is set to Disabled by default.
SNP Memory Coverage	This option selects the operating mode of the Nested Paging (SNP) Memory and the reverse Map Table(RMP). The RMP

Table 53. Processor Settings details (continued)

Option	Description
	is used to ensure a one-to-one mapping between system physical addresses and guest physical addresses.
Transparent Secure Memory Encryption	<p>Enables or disables the TSME. TSME is always-on memory encryption that does not require OS or hypervisor support. This option is set to Disabled by default.</p> <ul style="list-style-type: none"> • If the OS supports SME, do not enable this field. • If the hypervisor supports SEV, do not enable this field. <p>Enabling TSME affects the system memory performance.</p>
ACPI CST C2 Latency	<p>Enter in 18 - 1000 microseconds (decimal value). Larger C2 latency values will reduce the number of C2 transitions and reduce C2 residency. Fewer transitions can help when performance is sensitive to the latency of C2 entry and exit. Higher residency can improve performance by allowing higher frequency boost and reduce idle core power. With Linux kernel 6.0 or later, the C2 transition cost is significantly reduced. The best value will be dependent on kernel version, use case, and workload.</p>
Configurable TDP	<p>Allows the reconfiguration of the processor Thermal Design Power (TDP) levels based on the power and thermal delivery capabilities of the system. TDP refers to the maximum amount of power the cooling system is required to dissipate. This option is set to Maximum by default.</p> <p>NOTE: This option is only available on certain SKUs of the processors, and the number of alternative levels varies as well.</p>
x2APIC Mode	<p>Enables or disables x2APIC mode. This option is set to Enabled by default.</p> <p>NOTE: For two CPU 64 cores configuration, x2APIC mode is not switchable if 256 threads are enabled (BIOS settings: All CCD, cores, and logical processors enabled).</p>
Number of CCDs per Processor	<p>Controls the number of enabled CCDs in each processor. This option is set to All by default.</p>
Number of Cores per CCD	<p>Specifies the number of cores per CCD. This option is set to All by default.</p>
Processor Core Speed	<p>Specifies the maximum core frequency of the processor.</p>
Processor Bus Speed	<p>Displays the bus speed of the processor(s).</p>
Processor n	<p>NOTE: Depending on the number of CPUs, there might be up to n processors listed.</p> <p>The following settings are displayed for each processor that is installed in the system:</p>

Table 54. Processor n details

Option	Description
Family-Model-Stepping	Specifies the family, model, and stepping of the processor as defined by AMD.
Brand	Specifies the brand name.
Level 2 Cache	Specifies the total L2 cache.

Table 54. Processor n details (continued)

Option	Description
Level 3 Cache	Specifies the total L3 cache.
Number of Cores	Specifies the number of cores per processor.
Microcode	Specifies the processor microcode version.

SATA Settings

To view the **SATA Settings** screen, power on the system, press F2, and click **System Setup Main Menu** > **System BIOS** > **SATA Settings**.

Table 55. SATA Settings details

Option	Description
Embedded SATA	Enables the embedded SATA option to be set to Off , AHCI mode , or RAID modes . This option is set to AHCI Mode by default. NOTE: <ol style="list-style-type: none"> 1. You might also need to change the Boot Mode setting to UEFI. Otherwise, you should set the field to Non-RAID mode. 2. No ESXi and Ubuntu OS support under RAID mode.
Security Freeze Lock	Sends Security Freeze Lock command to the embedded SATA drives during POST. This option is applicable only for AHCI Mode. This option is set to Enabled by default.
Write Cache	Enables or disables the command for the embedded SATA drives during POST. This option is set to Disabled by default.

NVMe Settings

To view the **NVMe Settings** screen, power on the system, press F2, and click **System Setup Main Menu** > **System BIOS** > **NVMe Settings**

Table 56. NVMe Settings details

Option	Description
NVMe Mode	This option sets the NVMe drive mode. If the system contains NVMe drives that you want to configure in a RAID array, you must set both this field and the Embedded SATA field on the SATA settings menu to RAID Mode. You may also need to change the Boot Mode setting to UEFI. The option is set to Non-RAID mode by default.
BIOS NVMe Driver	Dell Qualified NVMe drives always use the UEFI NVMe driver built into the Dell BIOS. When this option is set to 'All Drives', the BIOS driver will also be used with any NVMe drives in the system that has not been qualified by Dell. The option is set to Dell Qualified Drives by default. NOTE: When this option is set to 'All Drives' and non-Dell qualified NVMe drives are present, you have a configuration that has not been validated which may lead to unexpected behavior.

Boot Settings

You can use the **Boot Settings** screen to set the boot mode to either **BIOS** or **UEFI**. It also enables you to specify the boot order.

- **UEFI:** The Unified Extensible Firmware Interface (UEFI) is a new interface between operating systems and platform firmware. The interface consists of data tables with platform related information, boot and runtime service calls that are available to the operating system and its loader. The following benefits are available when the **Boot Mode** is set to **UEFI**:

- Support for drive partitions larger than 2 TB.
- Enhanced security (e.g., UEFI Secure Boot).
- Faster boot time.

 **NOTE:** You must use only the UEFI boot mode in order to boot from NVMe drives.

- **BIOS:** The **BIOS Boot Mode** is the legacy boot mode. It is maintained for backward compatibility.

To view the **Boot Settings** screen, power on the system, press F2, and click **System Setup Main Menu** > **System BIOS** > **Boot Settings**.

Table 57. Boot Settings details

Option	Description						
Boot Mode	Enables you to set the boot mode of the system. If the operating system supports UEFI, you can set this option to UEFI. Setting this field to BIOS allows compatibility with non-UEFI operating systems. This option is set to UEFI by default.  CAUTION: Switching the boot mode may prevent the system from booting if the operating system is not installed in the same boot mode.  NOTE: Setting this field to UEFI disables the BIOS Boot Settings menu.						
Boot Sequence Retry	Enables or disables the Boot Sequence Retry feature. If this option is set to Enabled and the system fails to boot, the system re-attempts the boot sequence after 30 seconds. This option is set to Enabled by default.						
Hard Disk Failover	Enables or disables the Hard-disk failover. This option is set to Disabled by default.						
Generic USB Boot	Enables or disables the generic USB boot placeholder. This option is set to Disabled by default.						
Hard-disk Drive Placeholder	Enables or disables the Hard-disk drive placeholder. This option is set to Disabled by default.						
Clean all SysPrep variables and order	When set to None , BIOS will do nothing. When set to Yes , BIOS will delete variables of SysPrep ##### and SysPrepOrder this option is a onetime option, will reset to none when deleting variables. This setting is only available in UEFI Boot Mode . This option is set to None by default.						
UEFI Boot Settings	Specifies the UEFI boot sequence. Enables or disables UEFI Boot options.  NOTE: This option controls the UEFI boot order. The first option in the list will be attempted first. Table 58. UEFI Boot Settings <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>UEFI Boot Sequence</td><td>Enables you to change the boot device order.</td></tr> <tr> <td>Boot Option Enable/Disable</td><td>Enables you to select the enabled or disabled boot devices</td></tr> </tbody> </table>	Option	Description	UEFI Boot Sequence	Enables you to change the boot device order.	Boot Option Enable/Disable	Enables you to select the enabled or disabled boot devices
Option	Description						
UEFI Boot Sequence	Enables you to change the boot device order.						
Boot Option Enable/Disable	Enables you to select the enabled or disabled boot devices						

Choosing system boot mode

System Setup enables you to specify one of the following boot modes for installing your operating system:

- UEFI boot mode (the default), is an enhanced 64-bit boot interface. If you have configured your system to boot to UEFI mode, it replaces the system BIOS.
1. From the **System Setup Main Menu**, click **Boot Settings**, and select **Boot Mode**.
 2. Select the UEFI boot mode you want the system to boot into.

 **CAUTION:** Switching the boot mode may prevent the system from booting if the operating system is not installed in the same boot mode.

3. After the system boots in the specified boot mode, proceed to install your operating system from that mode.

(i) NOTE: Operating systems must be UEFI-compatible to be installed from the UEFI boot mode. DOS and 32-bit operating systems do not support UEFI and can only be installed from the BIOS boot mode.

(i) NOTE: For the latest information about supported operating systems, go to [OS support](#).

Changing boot order

About this task

You may have to change the boot order if you want to boot from a USB key or an optical drive. The following instructions may vary if you have selected **BIOS** for **Boot Mode**.

(i) NOTE: Changing the drive boot sequence is only supported in BIOS boot mode.

Steps

1. On the **System Setup Main Menu** screen, click **System BIOS** > **Boot Settings** > **UEFI Boot Settings** > **UEFI Boot Sequence**.
2. Use the arrow keys to select a boot device, and use the plus (+) and minus (-) sign keys to move the device down or up in the order.
3. Click **Exit**, and then click **Yes** to save the settings on exit.

(i) NOTE: You can also enable or disable boot order devices as needed.

Network Settings

To view the **Network Settings** screen, power on the system, press F2, and click **System Setup Main Menu** > **System BIOS** > **Network Settings**.

(i) NOTE: For information about Linux network performance settings, see the *Linux Network Tuning Guide for AMD EPYC Processor Based Servers* at [AMD.com](#).

(i) NOTE: Network Settings are not supported in BIOS boot mode.

Table 59. Network Settings details

Option	Description
UEFI PXE Settings	Enables you to control the configuration of the UEFI PXE device.
Number of PXE Devices	Enables you to choose the number of PXE Devices from 1 to 4, 8, 12, 16.
PXE Device n (n = 1 to 16)	Enables or disables the device. When enabled, a UEFI PXE boot option is created for the device.
PXE Device n Settings (n = 1 to 16)	Enables you to control the configuration of the PXE device.
UEFI HTTP Settings	Enables you to control the configuration of the UEFI HTTP device.
HTTP Device n (n = 1 to 4)	Enables or disables the device. When enabled, a UEFI HTTP boot option is created for the device.
HTTP Device n Settings (n = 1 to 4)	Enables you to control the configuration of the HTTP device.
UEFI iSCSI Settings	Enables you to control the configuration of the iSCSI device.
UEFI NVMe-oF Settings	Enables you to control the configuration of the NVMe-oF device.

Table 60. PXE Device n Settings details

Option	Description
Interface	Specifies NIC interface used for the PXE device.

Table 60. PXE Device n Settings details (continued)

Option	Description
Protocol	Specifies Protocol used for PXE device. This option is set to IPv4 or IPv6 . This option is set to IPv4 by default.
VLAN	Enables VLAN for PXE device. This option is set to Enable or Disable . This option is set to Disable by default.
VLAN ID	Shows the VLAN ID for the PXE device
VLAN Priority	Shows the VLAN Priority for the PXE device.

Table 61. HTTP Device n Settings details

Option	Description
Interface	Specifies NIC interface used for the HTTP device.
Protocol	Specifies Protocol used for HTTP device. This option is set to IPv4 or IPv6 . This option is set to IPv4 by default. The following options will be available when Protocol is set as IPv6: Auto Configuration: IPv6 Auto Configuration Enable/Disabled for this HTTP Device. IPv6 Address: IPv6 Unicast address for this HTTP Device. Prefix Length: IPv6 Prefix Length (0-128) for this HTTP Device.
VLAN	Enables VLAN for HTTP device. This option is set to Enable or Disable . This option is set to Disable by default.
VLAN ID	Shows the VLAN ID for the HTTP device
VLAN Priority	Shows the VLAN Priority for the HTTP device.
DHCP	Enables or disables DHCP for this HTTP device. This option is set to Enable by default.
IP Address	Specifies IP address for the HTTP device.
Subnet Mask	Specifies subnet mask for the HTTP device.
Gateway	Specifies gateway for the HTTP device.
DNS info via DHCP	Enables or disables DNS Information from DHCP. This option is set to Enable by default.
Primary DNS	Specifies the primary DNS server IP address for the HTTP Device.
Secondary DNS	Specifies the secondary DNS server IP address for the HTTP Device.
URI (will obtain from DHCP server if not specified)	The URI will be obtained from the DHCP server if not specified.
TLS Authentication Configuration	View and/or modify this device's boot TLS authentication configuration.

Table 62. UEFI ISCSI Settings screen details

Option	Description
ISCSI Initiator Name	Specifies the name of the ISCSI initiator in IQN format.
ISCSI Device1	Enables or disables the ISCSI device. When disabled, a UEFI boot option is created for the ISCSI device automatically. This is set to Disabled by default.
ISCSI Device1 Settings	Enables you to control the configuration of the ISCSI device.

Table 63. iSCSI Device1 Settings screen details

Option	Description
Connection 1	Enables or disables the iSCSI connection. This option is set to Disable by default.
Connection 2	Enables or disables the iSCSI connection. This option is set to Disable by default.
Connection 1 Settings	Enables you to control the configuration for the iSCSI connection.
Connection 2 Settings	Enables you to control the configuration for the iSCSI connection.
Connection Order	Enables you to control the order for which the iSCSI connections will be attempted.
iSCSI F1/F2 Prompt on Error	This field determines whether the BIOS stops and displays a prompt when iSCSI connection errors occur during POST. The BIOS will display the prompt when this setting is Enabled; otherwise, the BIOS will continue through POST and attempt to boot an operating system. (i) NOTE: This setting will be grayed out if F1/F2 Prompt on Error in the Miscellaneous Settings menu is Disabled.

Table 64. UEFI NVMe-oF Settings screen details

Option	Description
NVMe-oF	Enables or disables the NVMe-oF device. When disabled, a UEFI boot option is created for the NVMe-oF device automatically. This is set to Disabled by default.
NVMe-oF Host NQN	Specifies Host NQN of the NVMe-oF device.
NVMe-oF Host Id	Specifies Host Id of the NVMe-oF device.
Host Security Key Path	Specifies Host Security Key Path of the NVMe-oF device.
NVMe-oF SubSystem Settings	Enables you to control the configuration of the NVMe-oF device.

Table 65. NVMe-oF SubSystem Settings screen details

Option	Description
NVMe-oF SubSystem1	Controls the parameters of NVMe-oF subsystem1 connection. This is set to Disabled by default.
NVMe-oF SubSystem2	Controls the parameters of NVMe-oF subsystem2 connection. This is set to Disabled by default.
NVMe-oF SubSystem3	Controls the parameters of NVMe-oF subsystem3 connection. This is set to Disabled by default.
NVMe-oF SubSystem4	Controls the parameters of NVMe-oF subsystem4 connection. This is set to Disabled by default.

Integrated Devices

To view the **Integrated Devices** screen, power on the system, press F2, and click **System Setup Main Menu** > **System BIOS** > **Integrated Devices**.

Table 66. Integrated Devices details

Option	Description
User Accessible USB Ports	Configures the user accessible USB ports. Selecting Only Back Ports On disables the front USB ports; selecting All Ports Off disables all front and back USB ports; selecting All Ports Off (Dynamic) disables all front and back USB ports during POST. This option is set to All Ports On by default. When user accessible USB ports is set to All Ports Off (Dynamic) the Enable Front Ports Only option is enabled.

Table 66. Integrated Devices details (continued)

Option	Description
	<ul style="list-style-type: none"> Enable Front Ports Only: Enables or disables the front USB ports during the OS runtime. The USB keyboard and mouse still function in certain USB ports during the boot process, depending on the selection. After the boot process is complete, the USB ports will be enabled or disabled as per the setting.
Internal USB Port	Enables or disables the Internal USB Port . This option is set to On or Off . This option is set to On by default.
iDRAC Direct USB Port	The iDRAC Direct USB port is managed by iDRAC exclusively with no host visibility. This option is set to ON or OFF . When set to OFF , iDRAC does not detect any USB devices installed in this managed port. This option is set to On by default. Enables or disables the integrated RAID controller. When set to Disabled , the device is not visible to the operating system(OS). Enables or disables the integrated RAID controller. When set to Disabled , the device is not visible to the operating system(OS).
Integrated RAID Controller	Enables or disables the integrated RAID controller. When set to Disabled , the device is not visible to the operating system(OS).
Embedded NIC1 and NIC2	Enables or disables the Embedded NIC1 and NIC2 options. If set to Disabled (OS) , the NIC may still be available for shared network access by the embedded management controller. Configure the Embedded NIC1 and NIC2 option by using the NIC management utilities of the system.
Embedded Video Controller	<p>Enables or disables the use of Embedded Video Controller as the primary display. When set to Enabled, the Embedded Video Controller will be the primary display even if add-in graphic cards are installed. When set to Disabled, an add-in graphics card will be used as the primary display. BIOS will output displays to both the primary add-in video and the embedded video during POST and pre-boot environment. The embedded video will then be disabled right before the operating system boots. This option is set to Enabled by default.</p> <p>NOTE: When there are multiple add-in graphic cards installed in the system, the first card discovered during PCI enumeration is selected as the primary video. You might have to re-arrange the cards in the slots in order to control which card is the primary video.</p>
Current State of Embedded Video Controller	Displays the current state of the embedded video controller. The Current State of Embedded Video Controller option is a read-only field. If the Embedded Video Controller is the only display capability in the system (that is, no add-in graphics card is installed), then the Embedded Video Controller is automatically used as the primary display even if the Embedded Video Controller setting is set to Disabled .
SR-IOV Global Enable	Enables or disables the BIOS configuration of Single Root I/O Virtualization (SR-IOV) devices. This option is set to Disabled by default.
OS Watchdog Timer	If your system stops responding, this watchdog timer aids in the recovery of your operating system. When this option is set to Enabled , the operating system initializes the timer. When this option is set to Disabled (the default), the timer does not have any effect on the system.
Memory Mapped I/O Limit	Controls where MMIO is mapped. The 1 TB option is designed for specific OS which cannot support MMIO over 1 TB. This option is set to 8 TB by default. The default option is the maximum address that the system supports and recommended in most cases.
Slot Disablement	Enables or disables the available PCIe slots on your system. The slot disablement feature controls the configuration of the PCIe cards installed in the specified slot. Slots must be disabled only when the installed peripheral card prevents booting into the operating system or causes delays in system startup. If the slot is disabled, both the Option ROM and UEFI drivers are disabled. Only slots that are present on the system will be available for control. Slot n:

Table 66. Integrated Devices details (continued)

Option	Description
	Enables or disables or only the boot driver is disabled for the PCIe slot n. This option is set to Enabled by default.
Slot Bifurcation	<p>Slot Discovery Bifurcation Settings allows Platform Default Bifurcation and Manual bifurcation Control. The default is set to Platform Default Bifurcation. The slot bifurcation field is accessible when set to Manual bifurcation Control and is grayed out when set to Platform Default Bifurcation.</p> <p>NOTE: This option is only available for 4th Generation AMD EPYC processors.</p>

Serial Communication

To view the **Serial Communication** screen, power on the system, press F2, and click **System Setup Main Menu** > **System BIOS** > **Serial Communication**.

Table 67. Serial Communication details

Option	Description
Serial Communication	Selects serial communication devices (Serial Device 1 and Serial Device 2) in BIOS. BIOS console redirection can also be enabled and the port address can be specified. This option is set to Auto by default.
Serial Port Address	<p>Enables you to set the port address for serial devices.</p> <p>NOTE: You can use only Serial Device 2 for the Serial Over LAN (SOL) feature. To use console redirection by SOL, configure the same port address for console redirection and the serial device.</p> <p>NOTE: Every time the system boots, the BIOS syncs the serial MUX setting that is saved in iDRAC. The serial MUX setting can independently be changed in iDRAC. Loading the BIOS default settings from within the BIOS setup utility may not always revert the serial MUX setting to the default setting of Serial Device 1.</p>
External Serial Connector	<p>Enables you to associate the External Serial Connector to Serial Device 1, Serial Device 2, or the Remote Access Device by using this option. This option is set to Serial Device 1 by default.</p> <p>NOTE: Only Serial Device 2 can be used for Serial Over LAN (SOL). To use console redirection by SOL, configure the same port address for console redirection and the serial device.</p> <p>NOTE: Every time the system boots, the BIOS syncs the serial MUX setting saved in iDRAC. The serial MUX setting can independently be changed in iDRAC. Loading the BIOS default settings from within the BIOS setup utility may not always revert this setting to the default setting of Serial Device 1.</p>
Failsafe Baud Rate	Specifies the failsafe baud rate for console redirection. The BIOS attempts to determine the baud rate automatically. This failsafe baud rate is used only if the attempt fails, and the value must not be changed. This option is set to 115200 by default.
Remote Terminal Type	Sets the remote console terminal type. This option is set to VT100/VT220 by default.
Redirection After Boot	Enables or disables the BIOS console redirection when the operating system is loaded. This option is set to Enabled by default.

System Profile Settings

To view the **System Profile Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > System Profile Settings**.

Table 68. System Profile Settings details

Option	Description
System Profile	Sets the system profile. If you set the System Profile option to a mode other than Custom , the BIOS automatically sets the rest of the options. You can only change the rest of the options if the mode is set to Custom . This option is set to Performance Per Watt (OS) by default. Other options include Performance and Custom .  NOTE: All the parameters on the system profile setting screen are available only when the System Profile option is set to Custom .
CPU Power Management	Sets the CPU power management. This option is set to OS DBPM by default. Other option includes Maximum Performance .
Memory Frequency	Sets the speed of the system memory. You can select Maximum Performance or a specific speed. This option is set to Maximum Performance by default.
Turbo Boost	Enables or disables the processor to operate in the turbo boost mode. This option is set to Enabled by default.
C-States	Enables or disables the processor to operate in all available power states. C States allow the processor to enter lower power states when idle. When set to Enabled (OS controlled) or when set to Autonomous (if hardware controlled is supported), the processor can operate in all available Power States to save power, but may increase memory latency and frequency jitter. This option is set to Enabled by default.
Memory Patrol Scrub	Sets the memory patrol scrub mode. This option is set to Standard by default.
Memory Refresh Rate	Sets the memory refresh rate to either 1x or 2x. This option is set to 1x by default.
Workload Profile	Allows optimization of performance based on the workload type. The Workload Profile setting is not a state .Setting a Workload Profile is a one-time action that in turns modifies various BIOS settings to be optimized for the requested workload type. This option is set to Not Configured by default.
PCI ASPM L1 Link Power Management	Enables or disables the PCI ASPM L1 Link Power Management. This option is set to Enabled by default.
Periodic Directory Rinse (PDR) Tuning	Controls PDR settings that may impact performance by workload and/or processor.  NOTE: The new option (PDR) will be editable only when the System Profile setting on the same page is set to Custom (default is " Performance Per Watt "). If the System Profile is not set to Custom , the PDR option will be grayed out and automatically set to Auto .
Determinism Slider	Set the system determinism by Power Determinism or Performance Determinism . This option is set to Performance Determinism by default.
Power Profile Select	High performance Mode(default): Favors core performance. All DF P-States are available in this mode and the default DF P-State and DLWM algorithms are active. Efficiency Mode: Configures the system for power efficiency. Limits boost frequency available to cores and restricts DF P-States available in the system. Maximum IO Performance Mode: Sets up Date Fabric to maximize IO sub-system performance.
PCIE Speed PMM Control	Reduce link speed when devices are idle. This option is set to Auto by default.
EQ Bypass To Highest Rate	Controls the ability to advertise Equalization Bypass to Highest Rate Support in TSxs sent prior to LinkUp=1r. This option is set to Disabled by default.
DF PState Frequency Optimizer	Disabled: Disabled the DP P-state CCLK effective frequency optimizer. Enabled: Enables the DP P-state CCLK effective frequency optimizer. This option is set to Enabled by default.

Table 68. System Profile Settings details (continued)

Option	Description
DF PState Latency Optimizer	Disabled: Disables the DP P-state latency optimizer. Enabled: Enables the DF P-state latency optimizer. This option is set to Enabled by default.
DF CState	This field enables(0xF)/disables(0x0) DF Cstate. This option is set to Enabled by default.
Host System Management Port(HSMP)Support	This value controls Host System Management Port(HSMP) interface to provide OS-level software with access to system management functions via a set of mail box registers. This option is set to Enabled by default.
Boost FMax	Boost Fmax. This option is set to 0 - Auto by default.
Algorithm Performance Boost Disable (ApbDis)	Enables or disables the Algorithm Performance Boost Disable (ApbDis). This option is set to Disabled by default.
Dynamic Link Width Management (DLWM)	Reduces the xGMI link width between sockets from x16 to x8 (default), when no traffic is detected on the link. This option is set to Unforced by default.

System Security

To view the **System Security** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > System Security**.

Table 69. System Security details

Option	Description
CPU AES-NI	Improves the speed of applications by performing encryption and decryption by using the Advanced Encryption Standard Instruction Set (AES-NI). This option is set to Enabled by default.
Strong Password Status	If enabled, you must set up a password that has at least one character in lowercase, uppercase, digit, and a special character. Also you have the option to set the minimum number of characters in both the new passwords. If disabled, you can set a password that has any character in it but the password must not have more than 32 characters. Changes that are made by enabling or disabling this feature become immediately effective.
Strong Password Minimum Length (8 to 32)	Controls the minimum number of characters that are used when setting a system or setup password. You can specify 8-32 characters.
System Password	Sets the system password. This option is set to Enabled by default and is read-only if the password jumper is not installed in the system.
Setup Password	Sets the setup password. This option is read-only if the password jumper is not installed in the system.
Password Status	Locks the system password. This option is set to Unlocked by default.
TPM Firmware	Indicates the firmware version of a Trusted Platform Module(TPM).
TPM Heirachy	Allows enabling, disabling, or clearing the storage and endorsement hierarchies. When set to Enabled, the storage and endorsement hierarchies can be used. When set to Disabled, the storage and endorsement hierarchies cannot be used. When set to Clear, the storage and endorsement hierarchies are cleared of any values and then reset to Enabled.
TPM Advanced Settings	TPM PPI Bypass Provision When set to Enabled, allows the Operating System to bypass Physical Presence Interface(PPI) prompts when issuing PPI Advanced Configuration and Power Interface (ACPI) provisioning operations. TPM PPI Bypass Clear When set to Enabled, allows the Operating System to bypass Physical Presence Interface(PPI) prompts when issuing PPI Advanced Configuration and Power Interface (ACPI) clear operations. TPM2 Algorithm Selection Allows the user to change the cryptographic algorithms

Table 69. System Security details (continued)

Option	Description
	used in the Trusted Platform Module (TPM). The available options are dependant on the TPM firmware.
AMD DRTM	Enable/Disable AMD Dynamic Root of Trust Measurement (DRTM) To enable AMD DRTM, below configurations must be enabled: 1. TPM2.0 must be enabled and the hash algorithm must be set to SHA256. 2. Transparent SME (TSME) must be enabled.
Power Button	Enables or disables the power button on the front of the system. This option is set to Enabled by default.
AC Power Recovery	Sets how the system behaves after AC power is restored to the system. This option is set to Last by default.
AC Power Recovery Delay	Sets the time delay for the system to power on after AC power is restored to the system. This option is set to Immediate by default.
User Defined Delay (120s to 600s)	Controls the duration for which the power-on process is delayed after the AC power supply is restored. The value is only effective if the AC Power Recovery Delay is set to User Defined . The valid range is between 120s and 600s .
UEFI Variable Access	Provides varying degrees of securing UEFI variables. When set to Standard (the default), UEFI variables are accessible in the operating system per the UEFI specification. When set to Controlled , selected UEFI variables are protected in the environment and new UEFI boot entries are forced to be at the end of the current boot order.
SMM Security Mitigation	This option enables or disables additional UEFI SMM Security Mitigation protections. This option is available only in UEFI boot mode . The operating system can use this feature to help protect the secure environment created by virtualization based security . Enabling this feature provides additional UEFI SMM Security Mitigation protections. However, this feature may cause compatibility issue or loss of functionality with some legacy tools or applications.
Secure Boot	Enables Secure Boot, where the BIOS authenticates each pre-boot image by using the certificates in the Secure Boot Policy. Secure Boot is set to Disabled by default.
Secure Boot Policy	When the Secure Boot policy is set to Standard , the BIOS uses the system manufacturer's key and certificates to authenticate pre-boot images. When the Secure Boot policy is set to Custom , the BIOS uses the user-defined key and certificates. The secure Boot policy is set to Standard by default.
Secure Boot Mode	Configures how the BIOS uses the Secure Boot Policy Objects (PK, KEK, db, dbx). If the current mode is set to Deployed Mode , the available options are User Mode and Deployed Mode . If the current mode is set to User Mode, the available options are User Mode, Audit Mode, and Deployed Mode.

Table 70. Secure Boot Mode

Option s	Descriptions
User Mode	In User Mode , PK must be installed, and BIOS performs signature verification on programmatic attempts to update policy objects. The BIOS allows unauthenticated programmatic transitions between modes.
Deployed Mode	Deployed Mode is the most secure mode. In Deployed Mode , PK must be installed and the BIOS performs signature verification on programmatic attempts to update policy objects. Deployed Mode restricts the programmatic mode transitions.

Table 69. System Security details (continued)

Option	Description				
	<p style="text-align: center;">Table 70. Secure Boot Mode (continued)</p> <table border="1"> <thead> <tr> <th>Options</th><th>Descriptions</th></tr> </thead> <tbody> <tr> <td>Audit Mode</td><td>In Audit mode, PK is not present. The BIOS does not authenticate programmatic updates to the policy objects, and transitions between modes. The BIOS performs a signature verification on pre-boot images and logs the results in the image Execution Information Table, but executes the images whether they pass or fail verification. Audit Mode is useful for programmatic determination of a working set of policy objects.</td></tr> </tbody> </table>	Options	Descriptions	Audit Mode	In Audit mode , PK is not present. The BIOS does not authenticate programmatic updates to the policy objects, and transitions between modes. The BIOS performs a signature verification on pre-boot images and logs the results in the image Execution Information Table, but executes the images whether they pass or fail verification. Audit Mode is useful for programmatic determination of a working set of policy objects.
Options	Descriptions				
Audit Mode	In Audit mode , PK is not present. The BIOS does not authenticate programmatic updates to the policy objects, and transitions between modes. The BIOS performs a signature verification on pre-boot images and logs the results in the image Execution Information Table, but executes the images whether they pass or fail verification. Audit Mode is useful for programmatic determination of a working set of policy objects.				
Secure Boot Policy Summary	Specifies the list of certificates and hashes that secure boot uses to authenticate images.				
Secure Boot Custom Policy Settings	Configures the Secure Boot Custom Policy. To enable this option, set the Secure Boot Policy to Custom option.				

Creating a system and setup password

Prerequisites

Ensure that the password jumper is enabled. The password jumper enables or disables the system password and setup password features. For more information, see the System board jumper settings section.

 **NOTE:** If the password jumper setting is disabled, the existing system password and setup password are deleted and you need not provide the system password to boot the system.

Steps

1. To enter System Setup, press F2 immediately after turning on or rebooting your system.
2. On the **System Setup Main Menu** screen, click **System BIOS > System Security**.
3. On the **System Security** screen, verify that **Password Status** is set to **Unlocked**.
4. In the **System Password** field, type your system password, and press Enter or Tab.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 A message prompts you to reenter the system password.
5. Reenter the system password, and click **OK**.
6. In the **Setup Password** field, type your setup password and press Enter or Tab.
A message prompts you to reenter the setup password.
7. Reenter the setup password, and click **OK**.
8. Press Esc to return to the System BIOS screen. Press Esc again.
A message prompts you to save the changes.

 **NOTE:** Password protection does not take effect until the system reboots.

Using your system password to secure your system

About this task

If you have assigned a setup password, the system accepts your setup password as an alternate system password.

Steps

1. Turn on or reboot your system.
2. Type the system password and press Enter.

Next steps

When **Password Status** is set to **Locked**, type the system password and press Enter when prompted at reboot.

i **NOTE:** If an incorrect system password is typed, the system displays a message and prompts you to reenter your password. You have three attempts to type the correct password. After the third unsuccessful attempt, the system displays an error message that the system has stopped functioning and must be turned off. Even after you turn off and restart the system, the error message is displayed until the correct password is entered.

Deleting or changing system and setup password

Prerequisites

i **NOTE:** You cannot delete or change an existing system or setup password if the **Password Status** is set to **Locked**.

Steps

1. To enter System Setup, press F2 immediately after turning on or restarting your system.
 2. On the **System Setup Main Menu** screen, click **System BIOS > System Security**.
 3. On the **System Security** screen, ensure that **Password Status** is set to **Unlocked**.
 4. In the **System Password** field, alter or delete the existing system password, and then press Enter or Tab.
 5. In the **Setup Password** field, alter or delete the existing setup password, and then press Enter or Tab.
- If you change the system and setup password, a message prompts you to reenter the new password. If you delete the system and setup password, a message prompts you to confirm the deletion.
6. Press Esc to return to the **System BIOS** screen. Press Esc again, and a message prompts you to save the changes.
 7. Select **Setup Password**, change, or delete the existing setup password and press Enter or Tab.
- i** **NOTE:** If you change the system password or setup password, a message prompts you to reenter the new password. If you delete the system password or setup password, a message prompts you to confirm the deletion.

Operating with setup password enabled

If **Setup Password** is set to **Enabled**, type the correct setup password before modifying the system setup options.

If you do not type the correct password in three attempts, the system displays the following message:

```
Invalid Password! Number of unsuccessful password attempts: <x> System Halted! Must power down.
```

```
Password Invalid. Number of unsuccessful password attempts: <x> Maximum number of password attempts exceeded. System halted.
```

Even after you turn off and restart the system, the error message is displayed until the correct password is typed. The following options are exceptions:

- If **System Password** is not set to **Enabled** and is not locked through the **Password Status** option, you can assign a system password. For more information, see the System Security Settings screen section.
- You cannot disable or change an existing system password.

i **NOTE:** You can use the password status option with the setup password option to protect the system password from unauthorized changes.

Redundant OS Control

To view the **Redundant OS Control** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Redundant OS Control**.

Table 71. Redundant OS Control details

Option	Description
Redundant OS Location	Enables you to select a backup disk from the following devices: <ul style="list-style-type: none"> • None • Internal M.2 Drives
Redundant OS State	<p>(i) NOTE: This option is disabled if Redundant OS Location is set to None. When set to Visible, the backup disk is visible to the boot list and OS. When set to Hidden, the backup disk is disabled and is not visible to the boot list and OS. This option is set to Visible by default.</p> <p>(i) NOTE: BIOS disables the device in hardware, so it is not accessed by the OS.</p>
Redundant OS Boot	<p>(i) NOTE: This option is disabled if Redundant OS Location is set to None or if Redundant OS State is set to Hidden.</p> <p>When set to Enabled, BIOS boots to the device specified in Redundant OS Location. When set to Disabled, BIOS preserves the current boot list settings. This option is set to Enabled by default.</p>

Miscellaneous Settings

To view the **Miscellaneous Settings** screen, power on the system, press F2, and click **System Setup Main Menu > System BIOS > Miscellaneous Settings**.

Table 72. Miscellaneous Settings details

Option	Description
System Time	Enables you to set the time on the system.
System Date	Enables you to set the date on the system.
Time Zone	Times offset from UTC.
Daylight Savings Time	Enables or disables the Daylight Savings Time option. This option is set to Disabled by default.
Asset Tag	Specifies the asset tag and enables you to modify it for security and tracking purposes.
Keyboard NumLock	Enables you to set whether the system boots with the NumLock enabled or disabled. This option is set to On by default. (i) NOTE: This option does not apply to 84-key keyboards.
F1/F2 Prompt on Error	Enables or disables the F1/F2 prompt on error. This option is set to Enabled by default. The F1/F2 prompt also includes keyboard errors.
Load Legacy Video Option ROM	Enables or disables the Load Legacy Video Option ROM option. This option is set to Disabled by default.
Dell Wyse P25/P45 BIOS Access	Enables or disables the Dell Wyse P25/P45 BIOS Access. This option is set to Enabled by default.
Power Cycle Request	Enables or disables the Power Cycle Request. This option is set to None by default.

iDRAC Settings utility

The iDRAC settings utility is an interface to set up and configure the iDRAC parameters by using UEFI. You can enable or disable various iDRAC parameters by using the iDRAC settings utility.

(i) NOTE: Accessing some of the features on the iDRAC settings utility needs the iDRAC Enterprise License upgrade.

For more information about using iDRAC, see *Dell Integrated Dell Remote Access Controller User's Guide* at [iDRAC Manuals](#).

Device Settings

Device Settings enables you to configure device parameters such as storage controllers or network cards.

Dell Lifecycle Controller

Dell Lifecycle Controller (LC) provides advanced embedded systems management capabilities including system deployment, configuration, update, maintenance, and diagnosis. LC is delivered as part of the iDRAC out-of-band solution and Dell system embedded Unified Extensible Firmware Interface (UEFI) applications.

Embedded system management

The Dell Lifecycle Controller provides advanced embedded system management throughout the lifecycle of the system. The Dell Lifecycle Controller is started during the boot sequence and functions independently of the operating system.

(i) NOTE: Certain platform configurations may not support the full set of features provided by the Dell Lifecycle Controller.

For more information about setting up the Dell Lifecycle Controller, configuring hardware and firmware, and deploying the operating system, see the Dell Lifecycle Controller documentation at [iDRAC Manuals](#).

Boot Manager

The **Boot Manager** option enables you to select boot options and diagnostic utilities.

To enter **Boot Manager**, power on the system and press F11.

Table 73. Boot Manager details

Option	Description
Continue Normal Boot	The system attempts to boot to devices starting with the first item in the boot order. If the boot attempt fails, the system continues with the next item in the boot order until the boot is successful or no more boot options are found.
One-shot UEFI Boot Menu	Enables you to access boot menu, where you can select a one-time boot device to boot from.
Launch System Setup	Enables you to access System Setup.
Launch Lifecycle Controller	Exits the Boot Manager and invokes the Dell Lifecycle Controller program.
System Utilities	Enables you to launch System Utilities menu such as Launch Diagnostics, BIOS update File Explorer, Reboot System.

PXE boot

You can use the Preboot Execution Environment (PXE) option to boot and configure the networked systems remotely.

To access the **PXE boot** option, boot the system and then press F12 during POST instead of using standard Boot Sequence from BIOS Setup. It does not pull any menu or allows managing of network devices.

Minimum to POST and system management configuration validation

This section describes the minimum to POST system requirement and system management configuration validation of the Dell system.

Topics:

- Minimum configuration to POST
- Configuration validation

Minimum configuration to POST

The components listed below are the minimum configuration to POST:

- One processor in processor socket 1
- One memory modules (DIMM) in slot A1
- One power supply unit
- System board + LOM + RIO card

Configuration validation

The new generation of Dell systems have added interconnect flexibility and advanced iDRAC management features to collect precise system configuration information and report configuration errors.

When the system is powered on, information about installed cables, risers, backplanes, power supplies, floating card (fPERC, BOSS), and processor is obtained from the CPLD and backplane memory maps are analyzed. This information forms a unique configuration, which is compared with one of the qualified configurations that are stored in a table maintained by iDRAC.

One or more sensors are assigned to each of the configuration elements. During POST, any configuration validation error is logged in the System Event Log (SEL)/LifeCycle (LC) log. The reported events are categorized in the configuration validation error table.

Table 74. Configuration validation error

Error	Description	Possible cause and recommendations	Example
Config Error	A configuration element within the closest match contains something that is unexpected and does not match any Dell qualified configuration.	Wrong configuration	Config Error: Backplane cable CTRS_SRC_SA1 and BP-DST_SA1
		The element reported in HWC8010 errors are assembled incorrectly. Verify element (cable, risers, etc) placement in the system.	Config Error : SL Cable PLANAR_SL7 and CTRL_DST_PA1
Config Missing	iDRAC found a configuration element missing within the closest match detected.	Missing or damaged cable, device, or part	Config Missing: Float card front PERC/HBAadapter PERC/HBA
		Missing element or cable is reported in HWC8010 error logs. Install the missing element (cable, risers, etc).	Config Missing : SL cable PLANAR_SL8 and CTRL_DST_PA1

Table 74. Configuration validation error (continued)

Error	Description	Possible cause and recommendations	Example
Comm Error	A configuration element is not responding to iDRAC using the management interface while running an inventory check.	System management sideband communication	Comm Error: Backplane 2
		Unplug AC Power, reseat the element and replace the element if the problem persists.	

Error messages

This section describes the error messages displayed on the screen during POST or captured in the system event log (SEL)/LifeCycle (LC) log.

Table 75. Error message HWC8010

Error code	HWC8010
Message	The System Configuration Check operation resulted in the following issue involving the indicated component type
Arguments	Riser, floating card (fPERClke BOSS), backplane, processor, cable, or other components
Detailed Description	The issue identified in the message is observed in the System Configuration Check operation.
Recommended Response Action	Do the following and retry the operation: 1. Disconnect the input power. 2. Check for proper cable connection and component placement. If the issue persists, contact the service provider.
Category	System Health (HWC = Hardware Config)
Severity	Critical
Trap/EventID	2329

Table 76. Error message HWC8011

Error code	HWC8011
Message	The System Configuration Check operation resulted in multiple issues involving the indicated component type
Arguments	Riser, floating card (fPERClke BOSS), backplane, processor, cable, or other components
Detailed Description	Multiple issues are observed in the System Configuration Check operation.
Recommended Response Action	Do the following and retry the operation: 1. Disconnect the input power. 2. Check for proper cable connection and component placement. If the issue persists, contact the service provider.
Category	System Health (HWC = Hardware Config)
Severity	Critical

Installing and removing system components

Topics:

- Safety instructions
- Before working inside your system
- After working inside your system
- Recommended tools
- Optional front bezel
- System cover
- Drive backplane cover
- Air shroud
- Cooling fan
- Drives
- Rear drive module
- Drive backplane
- Side wall brackets
- PERC module
- EDSFF E3.S backplane module
- Cable routing
- System memory
- Processor and heat sink
- Expansion cards and expansion card risers
- Optional serial COM port
- BOSS-N1 module
- System battery
- Optional internal USB card
- Intrusion switch module
- Optional OCP card
- Power supply unit
- Trusted Platform Module
- System board
- LOM card, MIC card and rear I/O board
- Control panel

Safety instructions

 **NOTE:** To avoid injury, do not lift the system on your own. Get others to assist you.

 **WARNING:** Opening or removing the system cover while the system is turned on may expose you to a risk of electric shock..

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that are shipped with your product.

 **CAUTION:** To ensure proper operation and cooling, all system bays and fans must be always populated with a component or a blank.

i **NOTE:** It is recommended that you always use an antistatic mat and antistatic strap while working on components inside the system.

i **NOTE:** While replacing the hot swappable PSU, after next server boot; the new PSU automatically updates to the same firmware and configuration of the replaced one. For more information about the Part replacement configuration, see the *Lifecycle Controller User's Guide* at [iDRAC Manuals](#)

i **NOTE:** While replacing faulty storage controller/FC/NIC card with the same type of card, after you power on the system; the new card automatically updates to the same firmware and configuration of the faulty one. For more information about the Part replacement configuration, see the *Lifecycle Controller User's Guide* at [iDRAC Manuals](#)

i **NOTE:** Only use certified Optical Fiber Transceiver Class I Laser Products.

i **NOTE:** For detailed information on cabling the PERC 11 cards, see the system-specific owner's manual at Installation and Service Manual available at [PowerEdge Manuals](#)

Before working inside your system

Prerequisites

Follow the safety guidelines listed in [Safety instructions](#).

Steps

1. Power off the system and all attached peripherals.
2. Disconnect the system from the electrical outlet, and disconnect the peripherals.
3. If applicable, remove the system from the rack.
For more information, see the *Rail Installation Guide* relevant to your rail solutions at [PowerEdge Manuals](#).
4. Remove the system cover.

After working inside your system

Prerequisites

Follow the safety guidelines listed in [Safety instructions](#).

Steps

1. Replace the system cover.
2. If applicable, install the system into the rack.
For more information, see the *Rail Installation Guide* relevant to your rail solutions at [PowerEdge manuals](#).
3. Reconnect the peripherals and connect the system to the electrical outlet, and then power on the system.

Recommended tools

You may need some or all the following tools to perform the removal and installation procedures:

- Key to the bezel lock. The key is required only if your system includes a bezel.
- Phillips 1 screwdriver
- Phillips 2 screwdriver
- Torx T8 screwdriver
- Torx T6 screwdriver
- Torx T20 screwdriver
- 5 mm hexadecimal nut screwdriver
- Plastic scribe
- 1/4-inch flat blade screwdriver

- Wrist grounding strap that is connected to the ground
- ESD mat
- Needle-nose pliers

You need the following tools to assemble the cables for a DC power supply unit:

- AMP 90871-1 hand-crimping tool or equivalent
- Tyco Electronics 58433-3 or equivalent
- Wire-stripper pliers to remove insulation from size 10 AWG solid or stranded, insulated copper wire.

 **NOTE:** Use alpha wire part number 3080 or equivalent (65/30 stranding).

 **NOTE:** For information about DC PSU cabling instructions, go to [PowerEdge Manuals](#) > **Rack Servers** > PowerEdge R7625 > **Select This Product** > **Documentation** > **Manuals and Documents** > *Cabling instructions for – 48 – 60 V DC power supply.*

Optional front bezel

Removing the front bezel

The procedure to remove the front bezel with and without the LCD panel is the same.

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Keep the bezel key handy.

 **NOTE:** The bezel key is part of the LCD bezel package.

Steps

1. Unlock the bezel.
2. Press the release button, and disengage the left end of the bezel.
3. Unhook the right end, and remove the bezel.

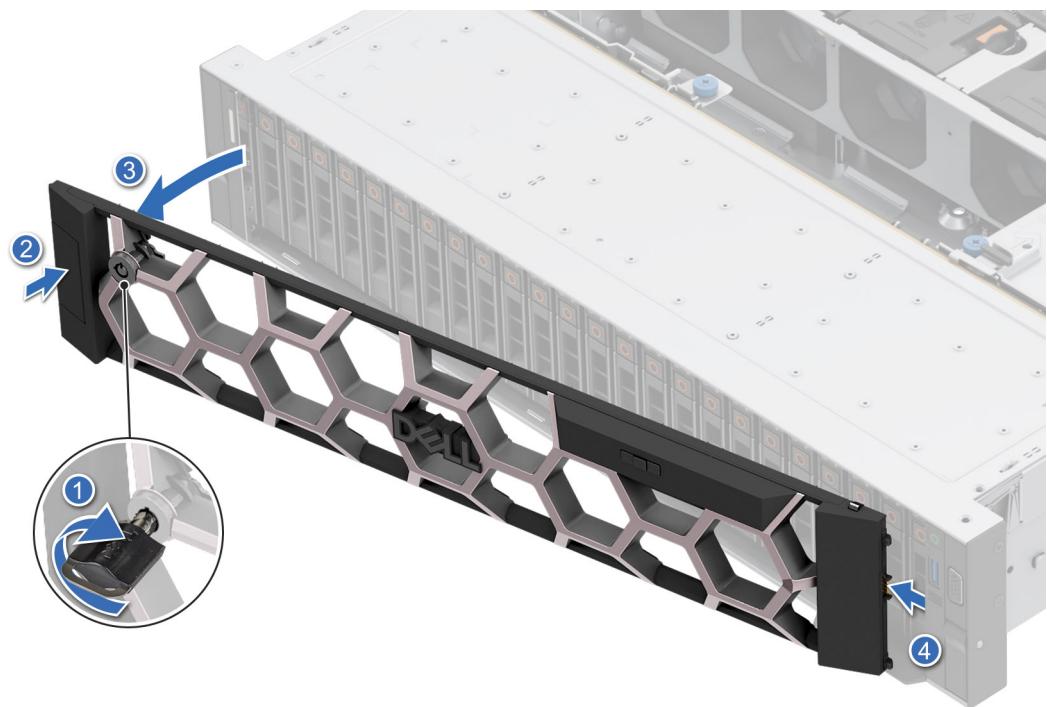


Figure 32. Removing the front bezel

Next steps

1. Replace the front bezel.

Installing the front bezel

The procedure to install the front bezel with and without the LCD panel is the same.

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Locate and remove the bezel key.

i **NOTE:** The bezel key is part of the LCD bezel package.

Steps

1. Align and insert the tabs on the bezel into the slots on the system.
2. Press the bezel until the release button clicks in place.
3. Lock the bezel.

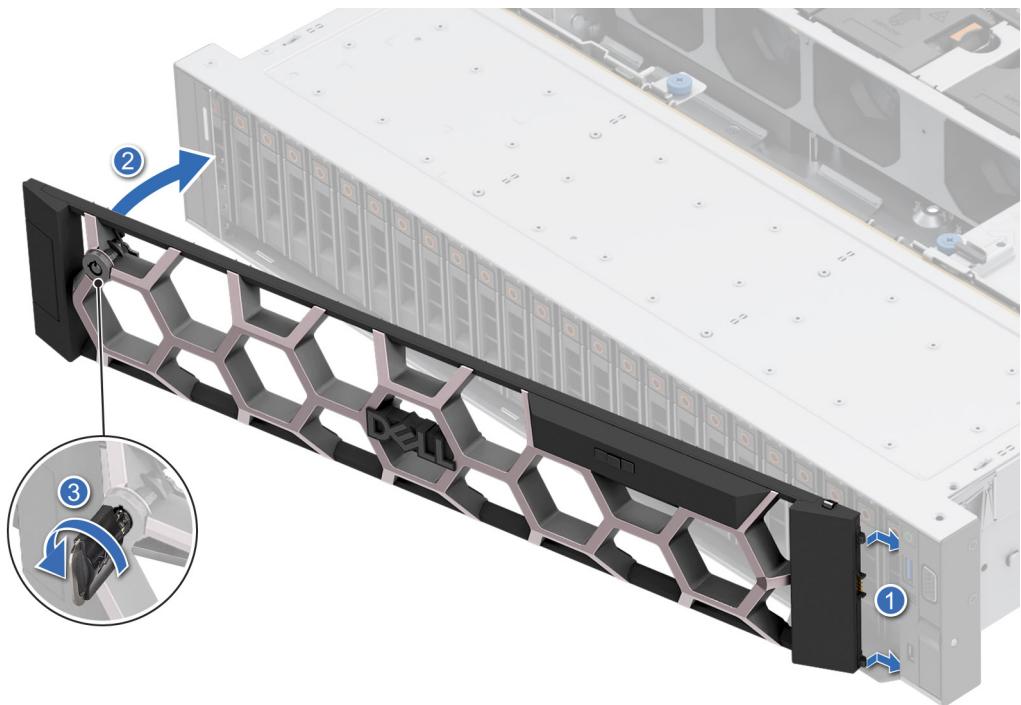


Figure 33. Installing the front bezel

System cover

Removing the system cover

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Power off the system, and any attached peripherals.
3. Disconnect the system from the electrical outlet and peripherals.

Steps

1. Using a 1/4-inch flat head or a Phillips #2 screwdriver rotate the lock counterclockwise to the unlock position.
2. Lift the release latch until the system cover slides back.
3. Lift the cover from the system.



Figure 34. Removing the system cover

Next steps

1. Replace the system cover.

Installing the system cover

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. Ensure that all internal cables are connected and routed properly, and no tools or extra parts are left inside the system.

Steps

1. Align the tabs on the system cover with the guide slots on the system and slide the system cover.
2. Close the system cover release latch.
3. Using a 1/4-inch flat head or Phillips #2 screwdriver, rotate the lock clockwise to the lock position.



Figure 35. Installing the system cover

Next steps

1. Follow the procedure listed in [After working inside your system](#).

Drive backplane cover

Removing the drive backplane cover

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Slide the backplane cover in the direction of the arrows marked on the drive backplane cover.
2. Lift the backplane cover from the system.

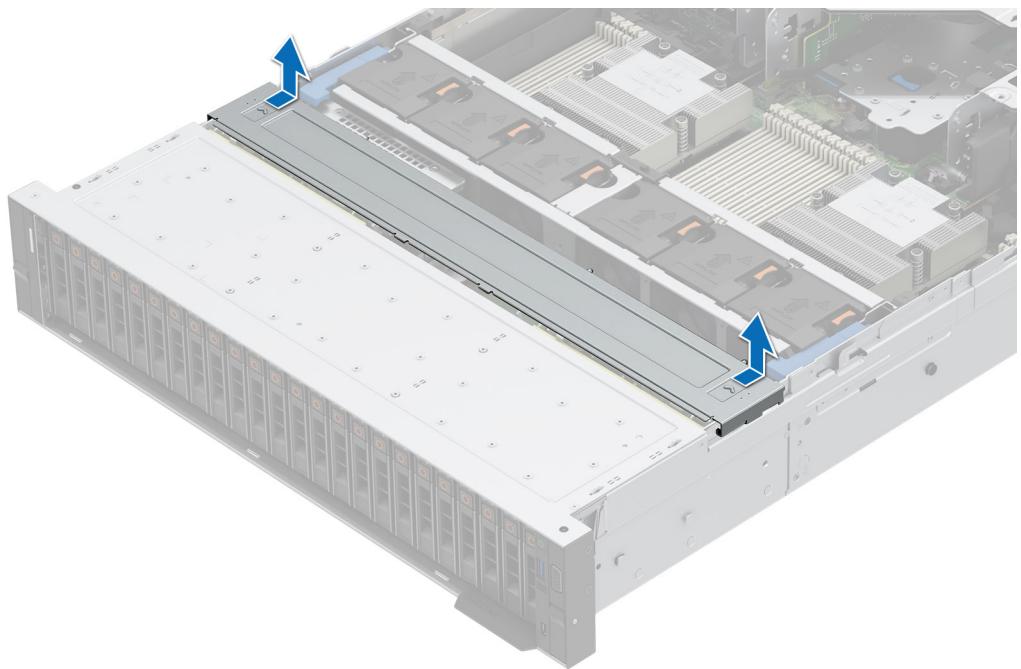


Figure 36. Removing the drive backplane cover

Next steps

1. Replace the drive backplane cover.

Installing the drive backplane cover

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).

Steps

1. Align the drive backplane cover with the guide slots on the system.
2. Slide the drive backplane cover to the front of the system until the drive backplane cover fits into place.

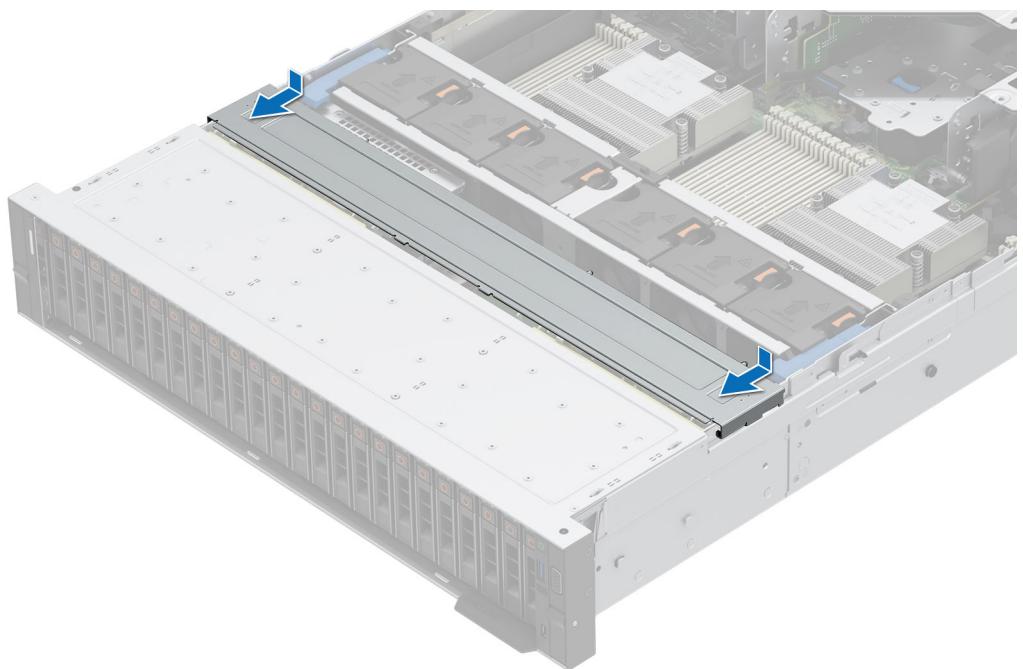


Figure 37. Installing the drive backplane cover

Next steps

1. Follow the procedure listed in [After working inside your system](#).

Air shroud

Removing the air shroud

Prerequisites

 **CAUTION:** Never operate your system with the air shroud removed. The system may get overheated quickly, resulting in shutdown of the system and loss of data.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

Hold the edges of the air shroud, and lift the air shroud out of the system.

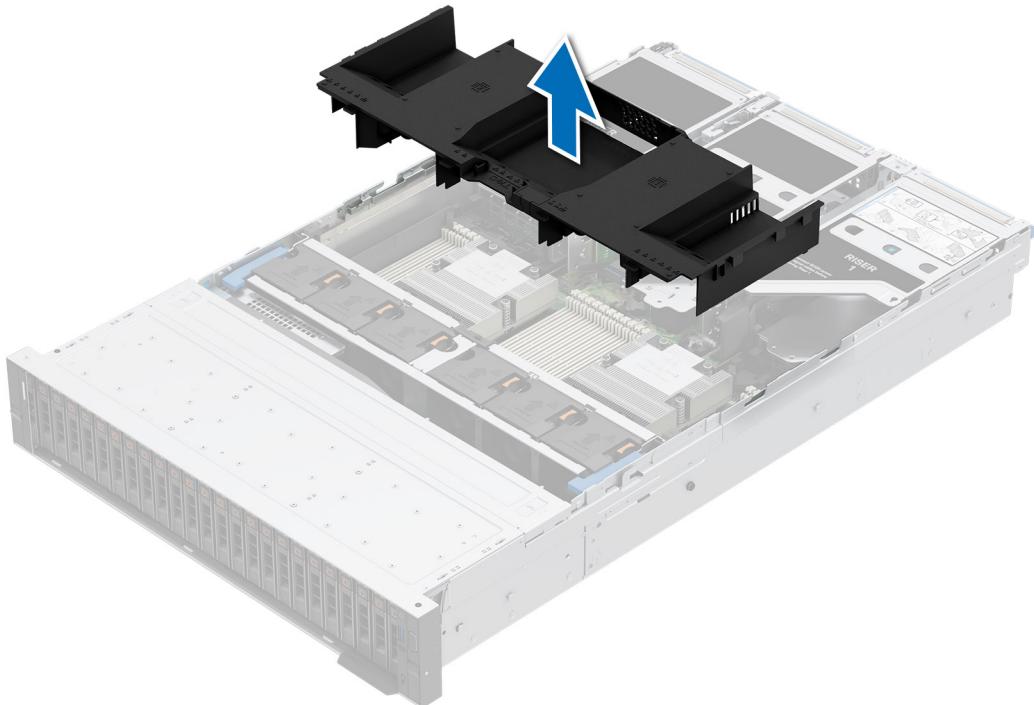


Figure 38. Removing the air shroud

Next steps

1. Replace the air shroud.

Installing the air shroud

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Align the slot on the air shroud with the standoff on the system.

 **NOTE:** Route the cables properly to prevent the cables from being pinched or crimped.

2. Lower the air shroud into the system until it is firmly seated.

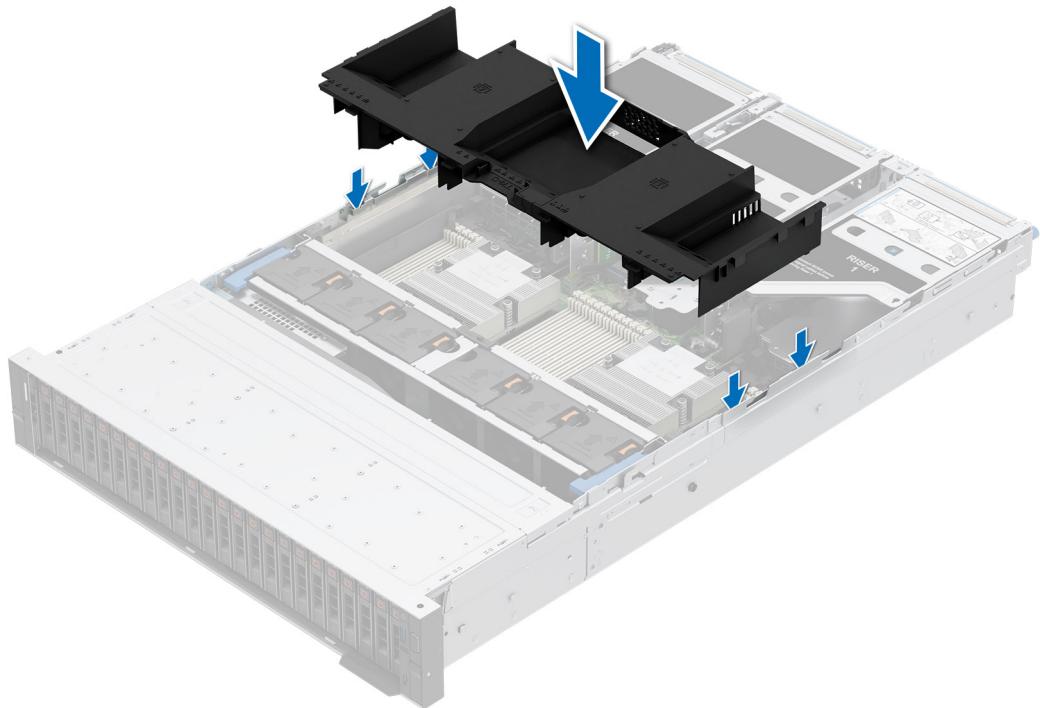


Figure 39. Installing the air shroud

Next steps

1. Follow the procedure listed in [After working inside your system](#).

Removing the GPU air shroud top cover

Prerequisites

 **CAUTION:** Never operate your system with the air shroud removed. The system may get overheated quickly, resulting in shutdown of the system and loss of data.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

Press the blue tabs on either sides of the top cover, and lift the top cover out of the GPU air shroud.

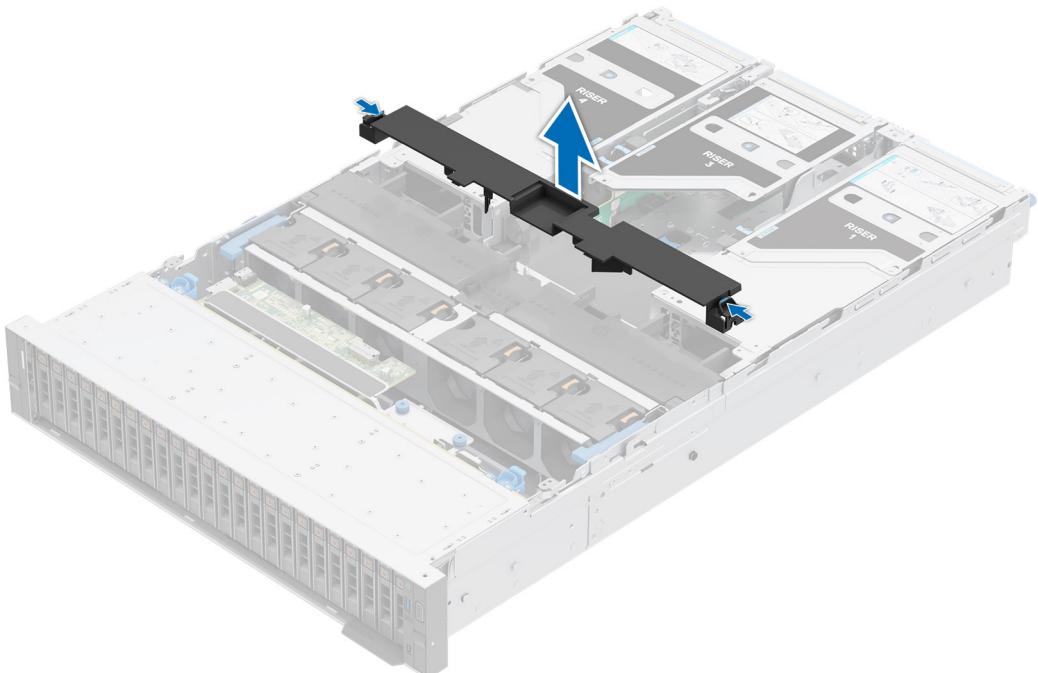


Figure 40. Removing the GPU air shroud top cover

Next steps

1. Replace the GPU air shroud top cover.

Installing the GPU air shroud top cover

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Align the tabs on the top cover with the slots on the GPU air shroud.
2. Lower the top cover into the GPU air shroud until it is firmly seated.

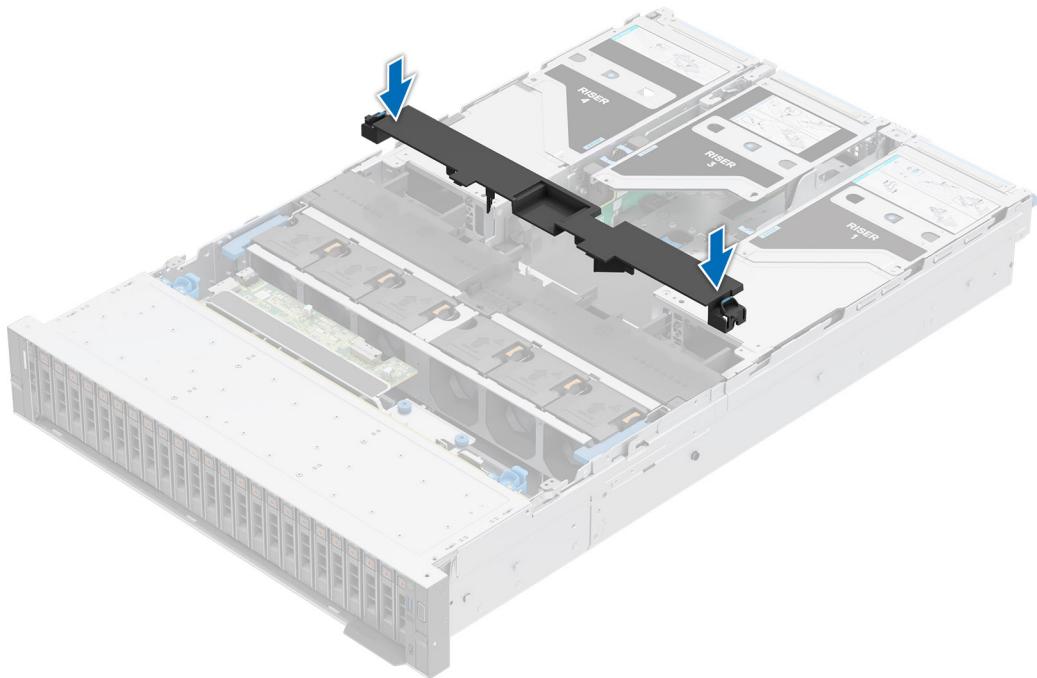


Figure 41. Installing the GPU air shroud top cover

Next steps

1. Follow the procedure listed in [After working inside your system](#).

Removing the GPU air shroud filler

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

⚠ CAUTION: Never operate your system with the air shroud removed. The system may get overheated quickly, resulting in shutdown of the system and loss of data.

3. Remove the GPU air shroud top cover.

ⓘ NOTE: The GPU air shroud filler must be removed to avoid interference with full length double-width GPU card installation.

Steps

Hold and lift the filler from the GPU air shroud.

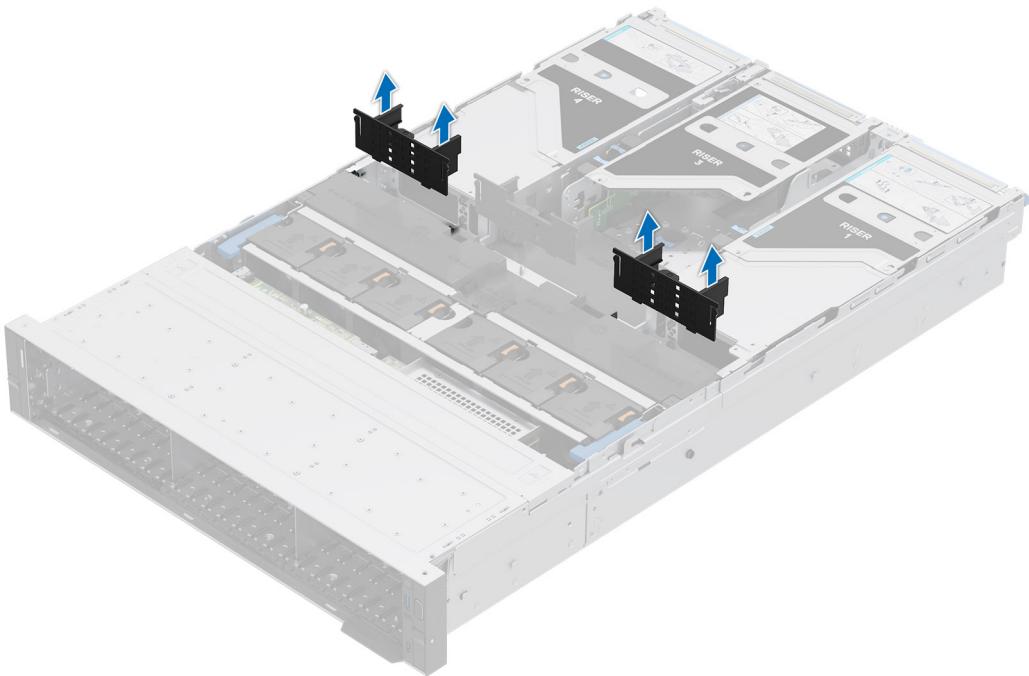


Figure 42. Removing the GPU air shroud filler

Next steps

1. Replace the GPU air shroud filler.

Installing the GPU air shroud filler

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the GPU air shroud top cover](#).
4. If required, [remove the full length expansion card risers](#).

(i) NOTE: The GPU air shroud filler must be installed, if single-width GPU card or empty riser is used.

Steps

Align and install the filler into the slots on the GPU air shroud.

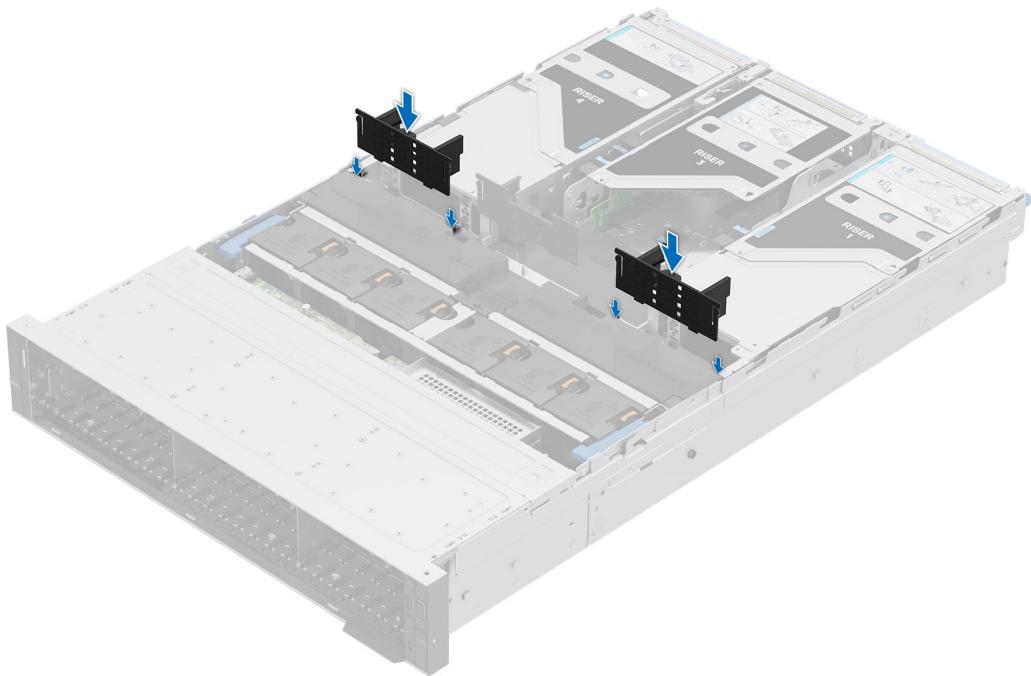


Figure 43. Installing the GPU air shroud filler

Next steps

1. [Install the GPU air shroud top cover](#).
2. Follow the procedure listed in [After working inside your system](#).

Removing the GPU air shroud

Prerequisites

 **CAUTION:** Never operate your system with the air shroud removed. The system may get overheated quickly, resulting in shutdown of the system and loss of data.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the GPU air shroud top cover](#).
4. [Remove the full length expansion card risers](#).

Steps

Hold the edges of the GPU air shroud, and lift the air shroud out of the system.

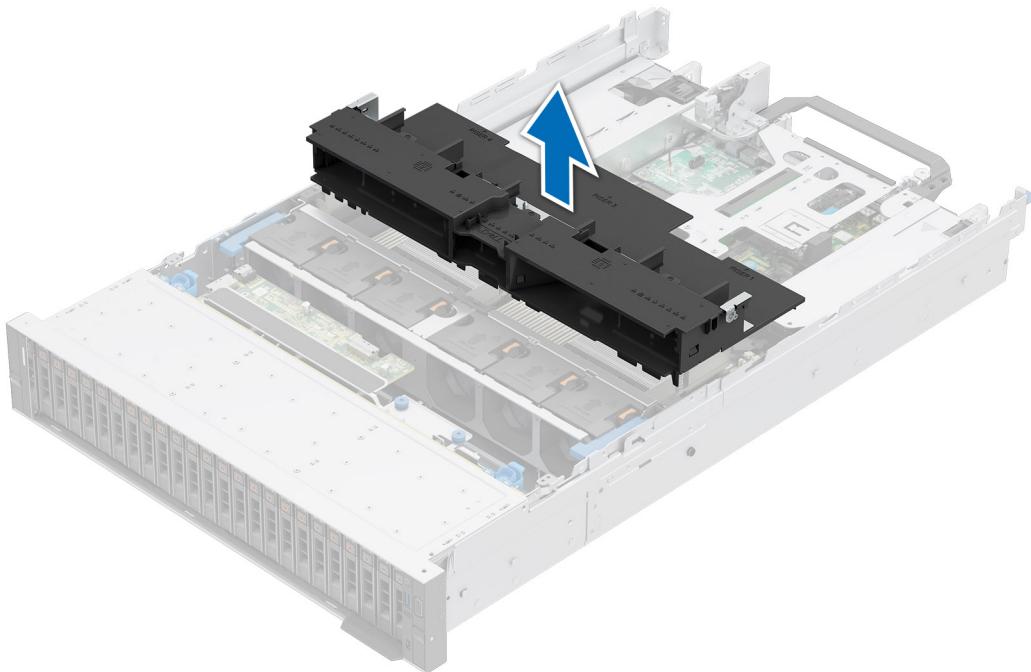


Figure 44. Removing the GPU air shroud

Next steps

1. Replace the GPU air shroud.

Installing the GPU air shroud

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the GPU air shroud top cover](#).
4. [Remove the full length expansion card risers](#).

Steps

1. Align the slot on the GPU air shroud with the standoff on the system.
2. Lower the GPU air shroud into the system until it is firmly seated.

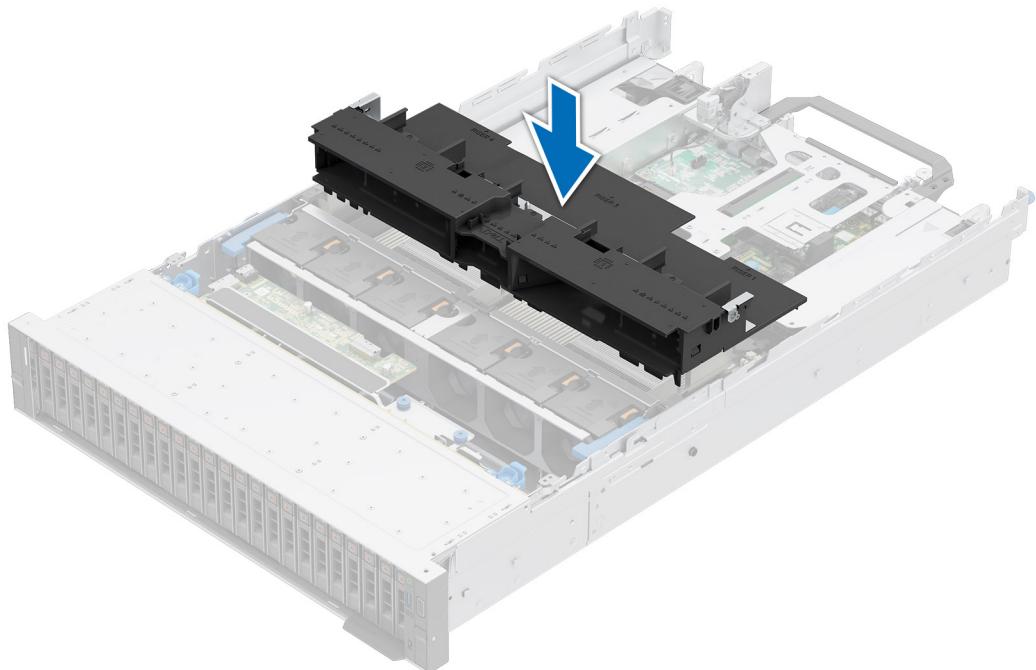


Figure 45. Installing the GPU air shroud

Next steps

1. [Install the full length expansion risers.](#)
2. [Install the GPU air shroud top cover.](#)
3. Follow the procedure listed in [After working inside your system](#).

Removing the 2 x 2.5-inch rear drive module air shroud

Prerequisites

 **CAUTION:** Never operate your system with the air shroud removed. The system may get overheated quickly, resulting in shutdown of the system and loss of data.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

Press the edges and lift the air shroud out of the rear drive module.

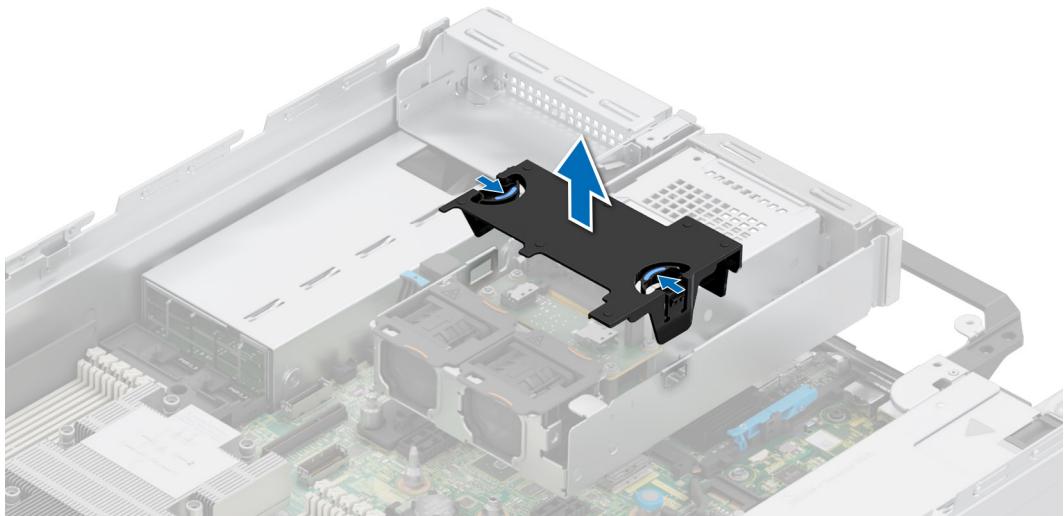


Figure 46. Removing the 2 x 2.5-inch rear drive module air shroud

Next steps

1. Replace the 2 x 2.5-inch rear drive module air shroud.

Installing the 2 x 2.5-inch rear drive module air shroud

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Align the tabs on the air shroud with the slots on the rear drive module.
2. Lower the air shroud into the rear drive module until it is firmly seated.

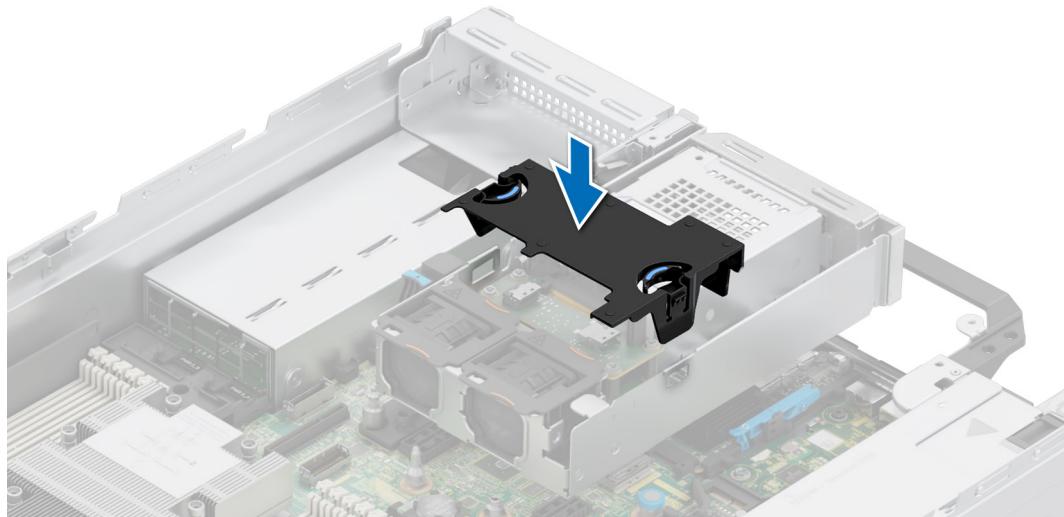


Figure 47. Installing the 2 x 2.5-inch rear drive module air shroud

Next steps

1. Follow the procedure listed in [After working inside your system](#).

Removing the 4 x 2.5-inch rear drive module air shroud

Prerequisites

 **CAUTION:** Never operate your system with the air shroud removed. The system may get overheated quickly, resulting in shutdown of the system and loss of data.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

Press the edges and lift the air shroud out of the rear drive module.

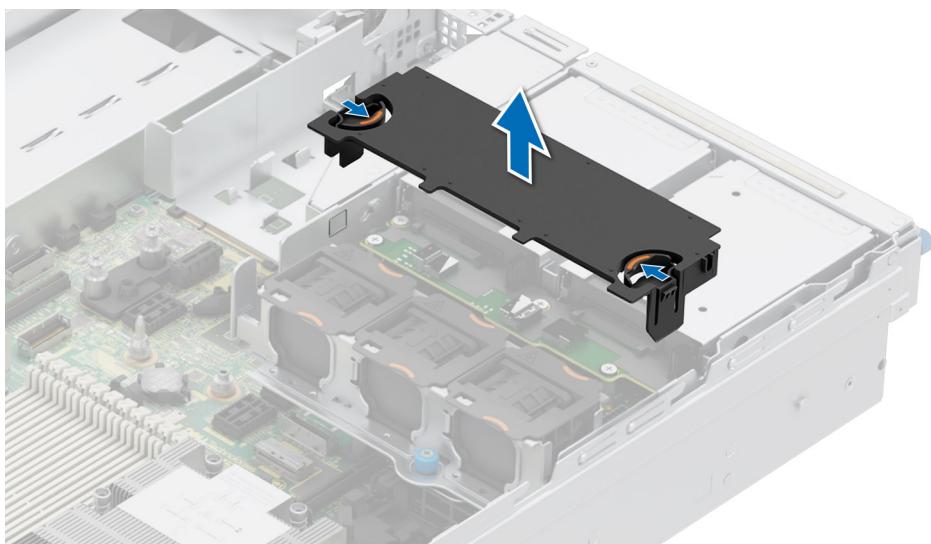


Figure 48. Removing the 4 x 2.5-inch rear drive module air shroud

Next steps

1. Replace the 4 x 2.5-inch rear drive module air shroud.

Installing the 4 x 2.5-inch rear drive module air shroud

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Align the tabs on the air shroud with the slots on the rear drive module.
2. Lower the air shroud into the rear drive module until it is firmly seated.

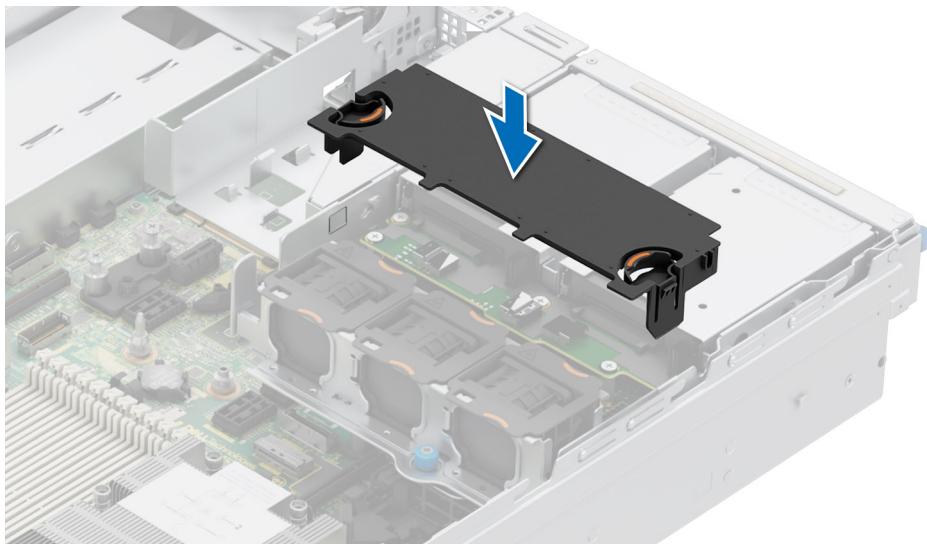


Figure 49. Installing the 4 x 2.5-inch rear drive module air shroud

Next steps

1. Follow the procedure listed in [After working inside your system](#).

Removing the 4 x EDSFF E3.S rear drive module air shroud

Prerequisites

CAUTION: Never operate your system with the air shroud removed. The system may get overheated quickly, resulting in shutdown of the system and loss of data.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

Press the edges and lift the air shroud out of the rear drive module.

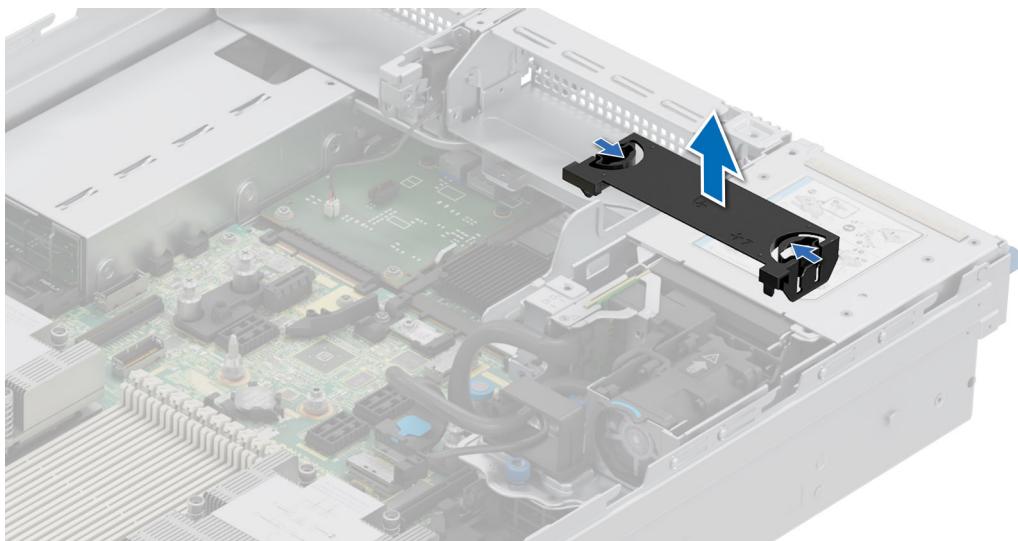


Figure 50. Removing the EDSFF E3.S rear drive module air shroud

Next steps

1. Replace the 4 x EDSFF E3.S rear drive module air shroud.

Installing the 4 x EDSFF E3.S rear drive module air shroud

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Align the tabs on the air shroud with the slots on the rear drive module.
2. Lower the air shroud into the rear drive module until it is firmly seated.

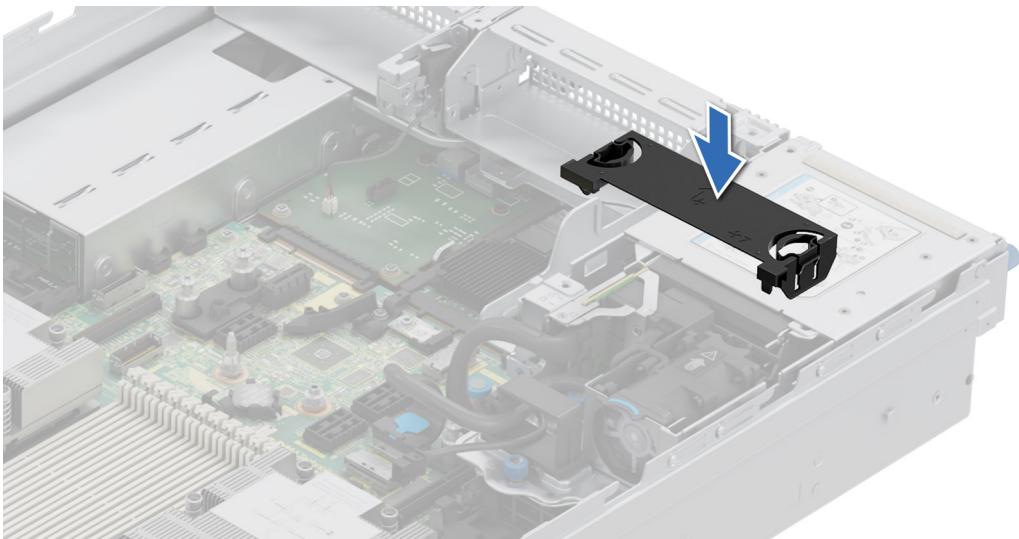


Figure 51. Installing the 4 x EDSFF E3.S rear drive module air shroud

Next steps

1. Follow the procedure listed in [After working inside your system](#).

Cooling fan

Removing the cooling fan cage assembly

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the air shroud](#) or [remove the GPU air shroud](#).

Steps

1. Lift the blue release levers to unlock the cooling fan cage assembly from the system.
2. Hold the release levers, and lift the cooling fan cage assembly away from the system.

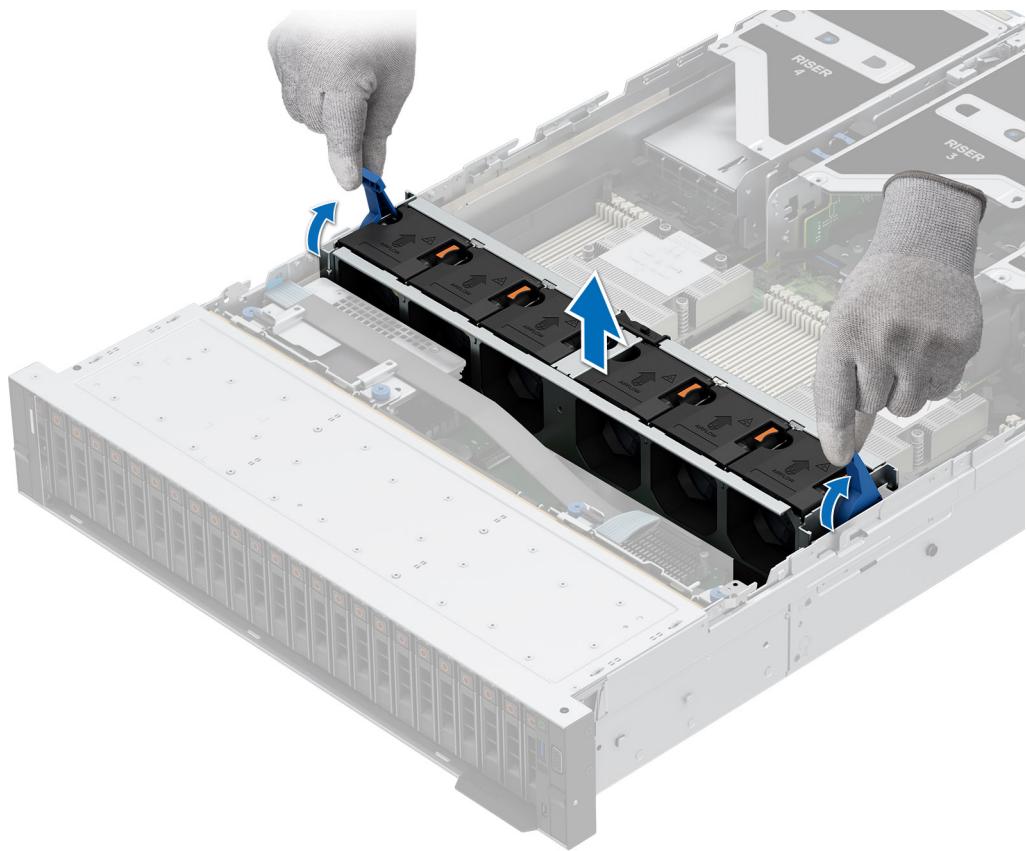


Figure 52. Removing the cooling fan cage assembly

Next steps

1. [Install the cooling fan cage assembly.](#)

Installing the cooling fan cage assembly

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).

CAUTION: Ensure that the cables inside the system are correctly installed and retained by the cable retention bracket before installing the cooling fan cage assembly. Incorrectly installed cables may get damaged.

2. Follow the procedure listed in [Before working inside your system](#).
3. If installed, [remove the air shroud](#) or [remove the GPU air shroud](#).

Steps

1. Align the guide rails on the cooling fan cage assembly with the standoffs on the system.
2. Lower the cooling fan cage assembly into the system until the cooling fan cage connectors engage with the connectors on the system board.
3. Press the release levers to lock the cooling fan cage assembly into the system.

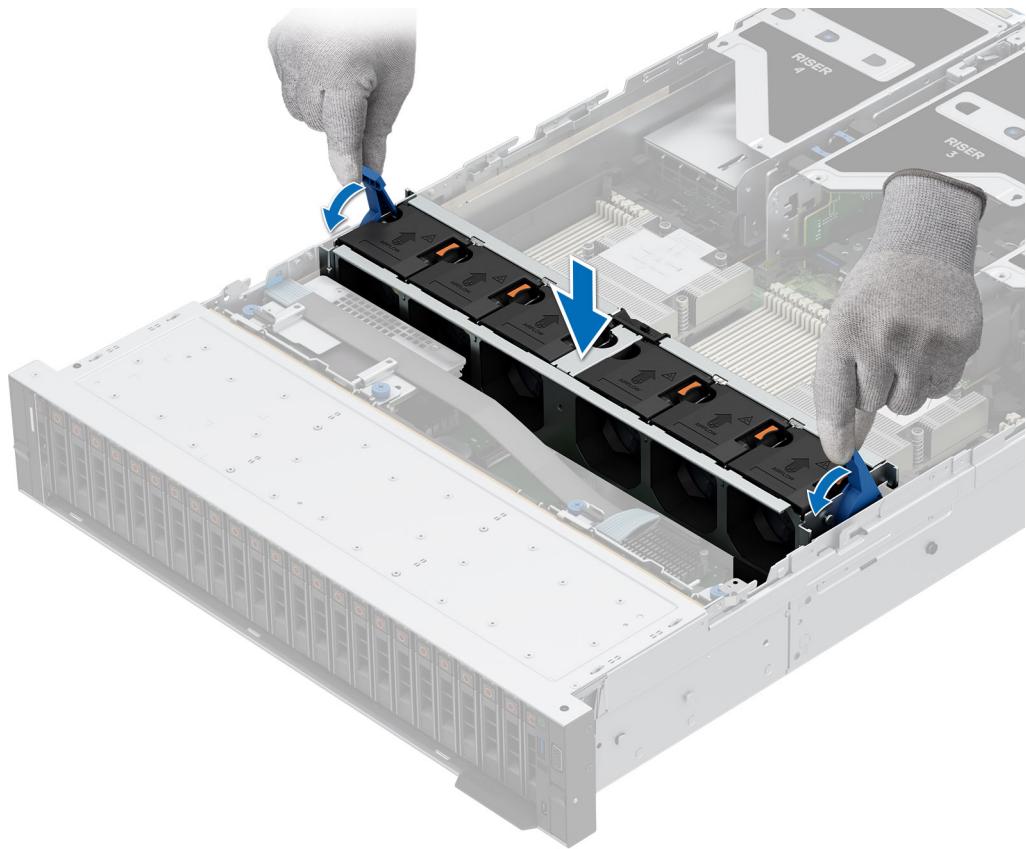


Figure 53. Installing the cooling fan cage assembly

Next steps

1. If removed, [install the air shroud](#) or [install the GPU air shroud](#).
2. Follow the procedure listed in [After working inside your system](#).

Removing a cooling fan

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If installed, [remove the air shroud](#) or [remove the GPU air shroud](#).

Steps

Press the orange release tab and lift the cooling fan to disconnect the fan from the connector on the system board.

i | NOTE: The procedure to remove high-performance (silver grade), or high-performance (gold grade) fan is same.

⚠ | WARNING: Ensure not to tilt or rotate the cooling fan while removing from the system.

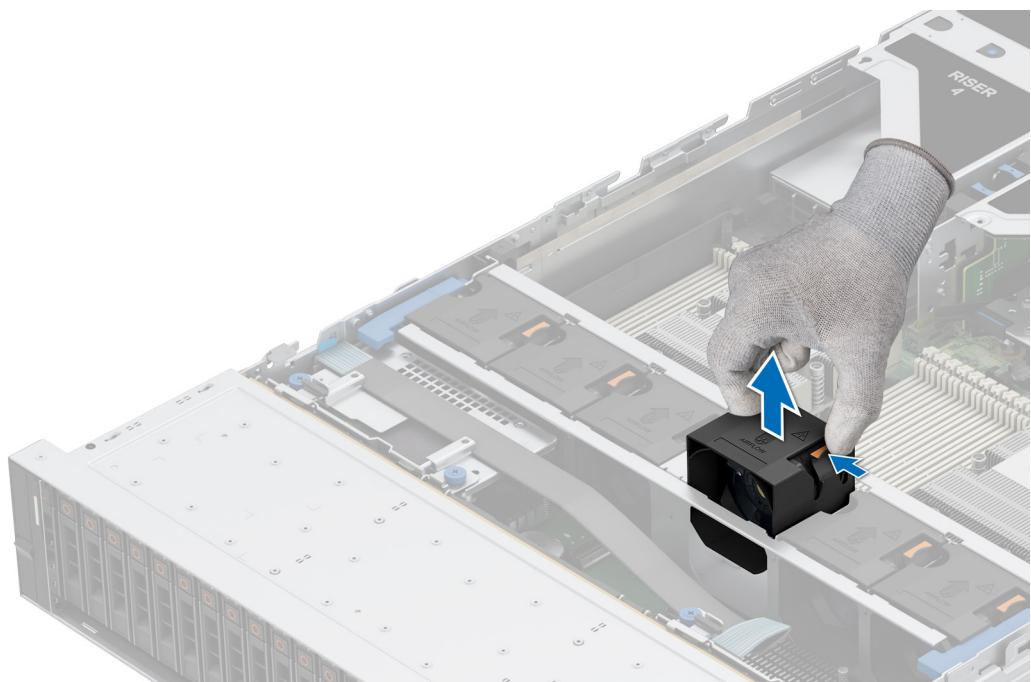


Figure 54. Removing a cooling fan

Next steps

1. Replace a cooling fan.

Installing a cooling fan

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

Align and slide the cooling fan into the cooling fan assembly until the fan clicks into place.

i **NOTE:** The procedure to install high-performance (silver grade), or high-performance (gold grade) fan is same.

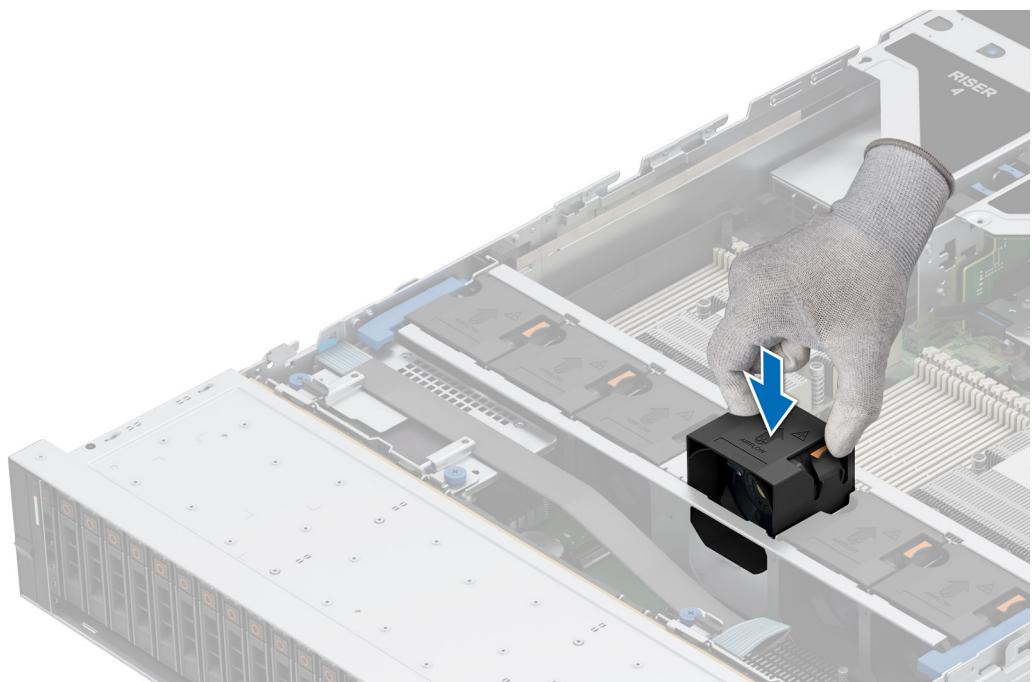


Figure 55. Installing a cooling fan

Next steps

1. If removed, [install the air shroud](#) or [install the GPU air shroud](#).
2. Follow the procedure listed in [After working inside your system](#).

Removing a 2 x 2.5-inch rear drive module cooling fan

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the 2 x 2.5-inch rear drive module air shroud](#).

Steps

Press the orange release tab and lift the rear drive module cooling fan to disconnect from the connector on the rear drive module.

⚠ WARNING: Ensure not to tilt or rotate the cooling fan while removing from the rear drive module.

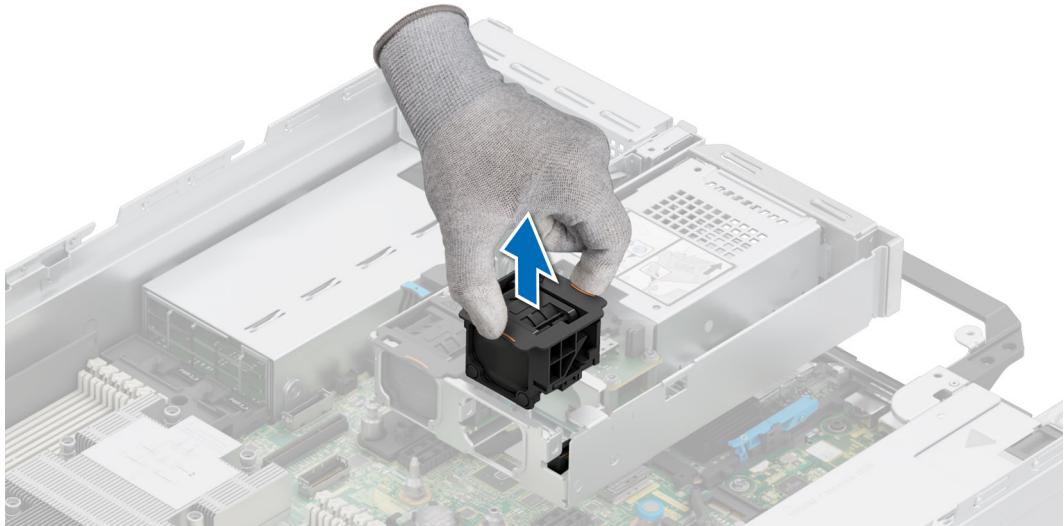


Figure 56. Removing a 2 x 2.5-inch rear drive module cooling fan

Next steps

1. Replace 2 x 2.5-inch rear drive module cooling fan.

Installing a 2 x 2.5-inch rear drive module cooling fan

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the 2 x 2.5-inch rear drive module air shroud](#).

Steps

Align and lower the rear drive module cooling fan into the rear drive module until the fan clicks into place.

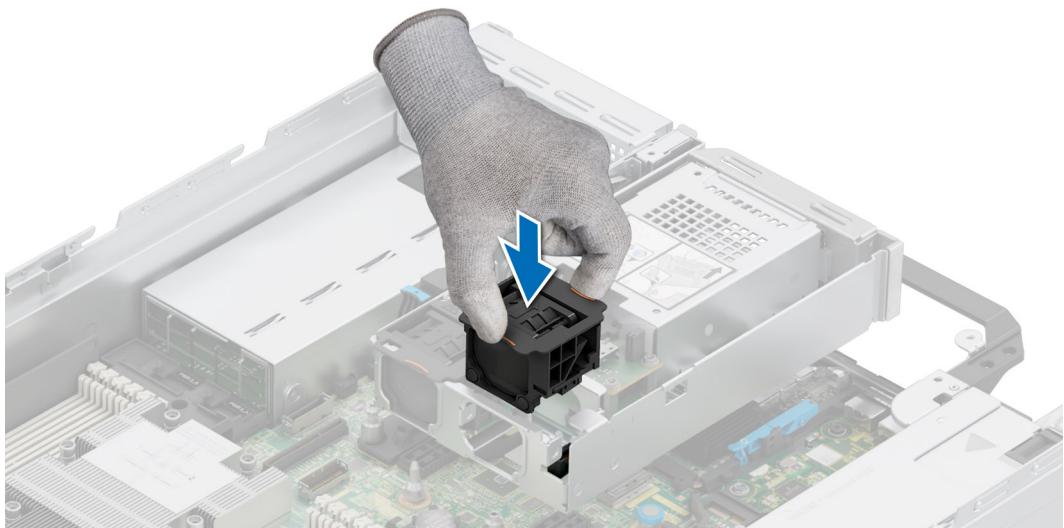


Figure 57. Installing a 2 x 2.5-inch rear drive module cooling fan

Next steps

1. [Install the 2 x 2.5-inch rear drive module air shroud.](#)
2. [Follow the procedure listed in **After working inside your system**.](#)

Removing a 4 x 2.5-inch rear drive module cooling fan

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the 4 x 2.5-inch rear drive module air shroud](#).

Steps

Press the orange release tab and lift the rear drive module cooling fan to disconnect from the connector on the rear drive module.

 **WARNING:** Ensure not to tilt or rotate the cooling fan while removing from the rear drive module.

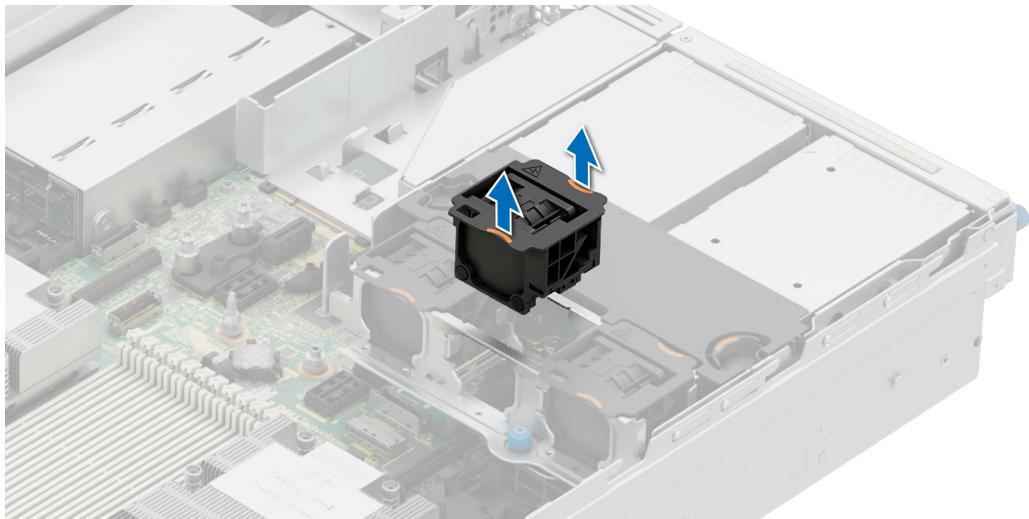


Figure 58. Removing a 4 x 2.5-inch rear drive module cooling fan

Next steps

1. [Replace 4 x 2.5-inch rear drive module cooling fan](#).

Installing a 4 x 2.5-inch rear drive module cooling fan

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the 4 x 2.5-inch rear drive module air shroud](#).

Steps

Align and lower the rear drive module cooling fan into the rear drive module until the fan clicks into place.

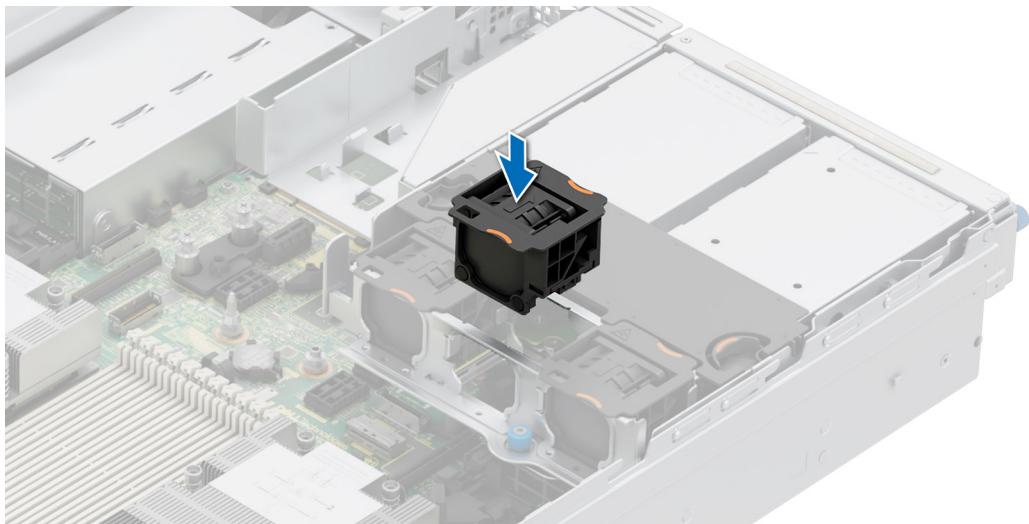


Figure 59. Installing a 4 x 2.5-inch rear drive module cooling fan

Next steps

1. Install the 4 x 2.5-inch rear drive module air shroud.
2. Follow the procedure listed in [After working inside your system](#).

Removing a 4 x EDSFF E3.S rear drive module cooling fan

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the 4 x EDSFF E3.S rear drive module air shroud](#).

Steps

1. Disconnect the fan power cable.
2. Press the release tab and lift the rear drive module cooling fan to disconnect from the connector on the rear drive module.

⚠ | WARNING: Ensure not to tilt or rotate the cooling fan while removing from the rear drive module.

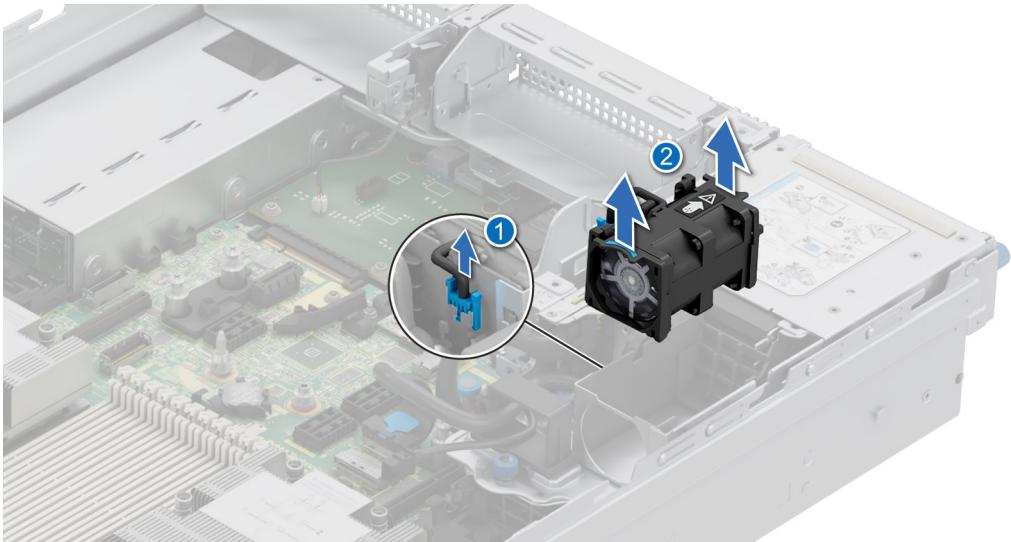


Figure 60. Removing a 4 x EDSFF E3.S rear drive module cooling fan

Next steps

1. Replace 4 x EDSFF E3.S rear drive module cooling fan.

Installing a 4 x EDSFF E3.S rear drive module cooling fan

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. Remove the 4 x EDSFF E3.S rear drive module air shroud.

Steps

1. Align and lower the rear drive module cooling fan into the rear drive module until the fan clicks into place.

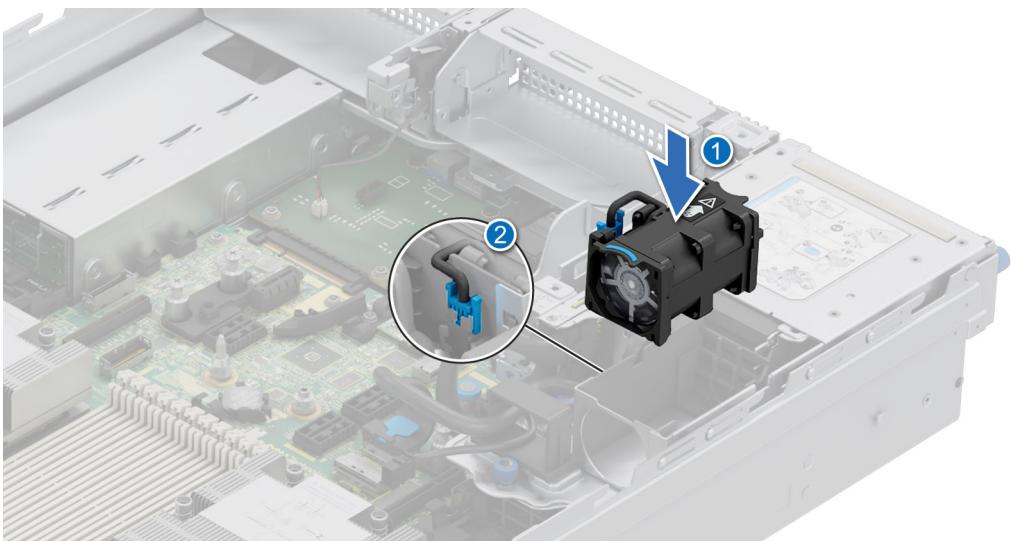


Figure 61. Installing a 4 x EDSFF E3.S rear drive module cooling fan

2. Connect the power cable.

Next steps

1. Install the 4 x EDSFF E3.S rear drive module air shroud.
2. Follow the procedure listed in [After working inside your system](#).

Drives

Removing a drive blank

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. If installed, [remove the front bezel](#).

 **CAUTION:** To maintain proper system cooling, drive blanks must be installed in all empty drive slots.

Steps

1. Press the release button, and slide the drive blank out of the drive slot.

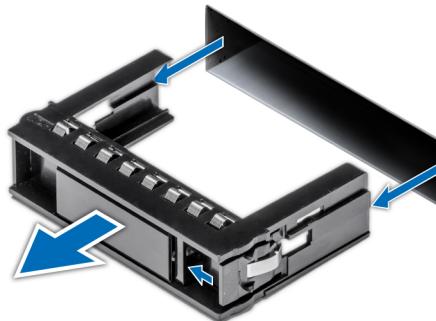


Figure 62. Removing a drive blank

2. For EDSFF E3.S drive blank, Lift the release button, and slide the drive blank out of the drive slot.



Figure 63. Removing an EDSFF E3.S drive blank

Next steps

1. Replace the drive blank.

Installing a drive blank

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. If installed, [remove the front bezel](#).

Steps

1. Insert the drive blank into the drive slot until the release button clicks into place.

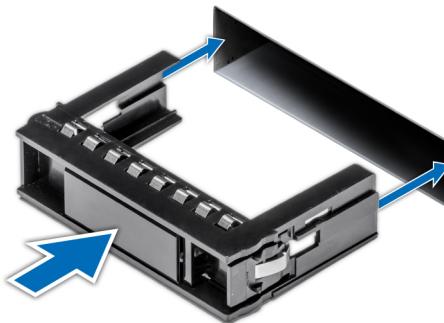


Figure 64. Installing a drive blank

2. For EDSFF E3.S drive blank, slide the drive blank into the drive slot until the release button clicks into place.



Figure 65. Installing an EDSFF E3.S drive blank

Next steps

1. If removed, [install the front bezel](#).

Removing the drive carrier

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. If installed, [remove the front bezel](#).
3. Using the management software, prepare the drive for removal.

NOTE: If the drive is online, the green activity or fault indicator blinks while the drive is powering off. When the drive indicators are off, the drive is ready for removal. For more information, see the documentation for the storage controller.

CAUTION: Before attempting to remove or install a drive while the system is running, see the documentation for the storage controller card to ensure that the host adapter is configured correctly to support drive removal and insertion.

CAUTION: To prevent data loss, ensure that your operating system supports drive installation. For more information about the drives installation or uninstallation requirements, see the operating system's user guide.

Steps

1. Press the release button to open the drive carrier release handle.
2. Holding the drive carrier release handle, slide the drive carrier out of the drive slot.



Figure 66. Removing a drive carrier

3. For EDSFF E3.S drive carrier, Lift the release button to open the drive carrier release handle.
4. Holding the drive carrier release handle, slide the drive carrier out of the drive slot.

NOTE: If you are not replacing the drive immediately, install an EDSFF E3.S drive blank in the empty drive slot to maintain proper system cooling.

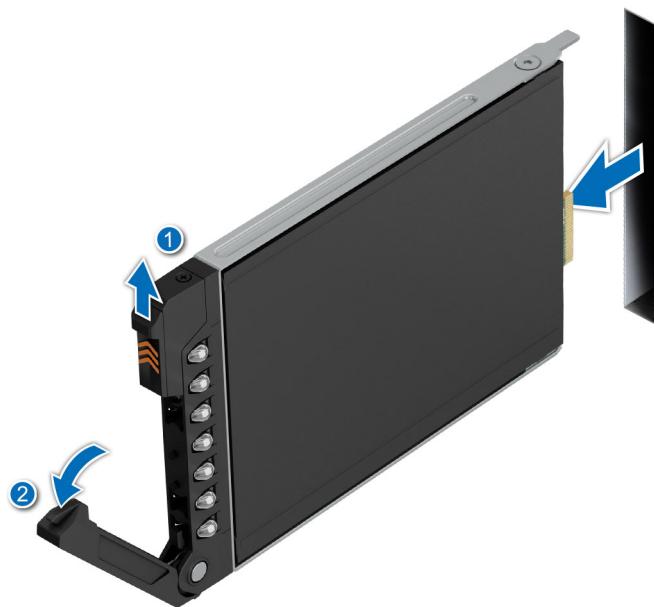


Figure 67. Removing an EDSFF E3.S drive carrier

Next steps

1. Install a drive carrier or drive blank.

Installing the drive carrier

Prerequisites

- ⚠️ **CAUTION:** Before removing or installing a drive while the system is running, see the documentation for the storage controller card to ensure that the host adapter is configured correctly to support drive removal and insertion.
 - ⚠️ **CAUTION:** Combining SAS and SATA drives in the same RAID volume is not supported.
 - ⚠️ **CAUTION:** When installing a drive, ensure that the adjacent drives are fully installed. Inserting a drive carrier and attempting to lock its handle next to a partially installed carrier can damage the partially installed carrier's shield spring and make it unusable.
 - ⚠️ **CAUTION:** To prevent data loss, ensure that your operating system supports hot-swap drive installation. See the documentation supplied with your operating system.
 - ⓘ **NOTE:** When a replacement hot swappable drive is installed while the system is powered on, the drive automatically begins to rebuild. Ensure that the replacement drive is blank. Any data on the replacement drive is immediately lost once the drive is installed.
 - ⓘ **NOTE:** Ensure that the drive carrier's release handle is in the open position before inserting the carrier into the slot.
1. Follow the safety guidelines listed in the [Safety instructions](#).
 2. If installed, [remove the front bezel](#).
 3. Remove the drive carrier or remove the drive blank when you want to assemble the drives in to the system.

Steps

1. Slide the drive carrier into the drive slot.
2. Close the drive carrier release handle to lock the drive in place.



Figure 68. Installing a drive carrier

3. For EDSFF E3.S drive carrier, slide the drive carrier into the drive slot and push until the drive connects with the backplane.
4. Close the drive carrier release handle to lock the drive in place.

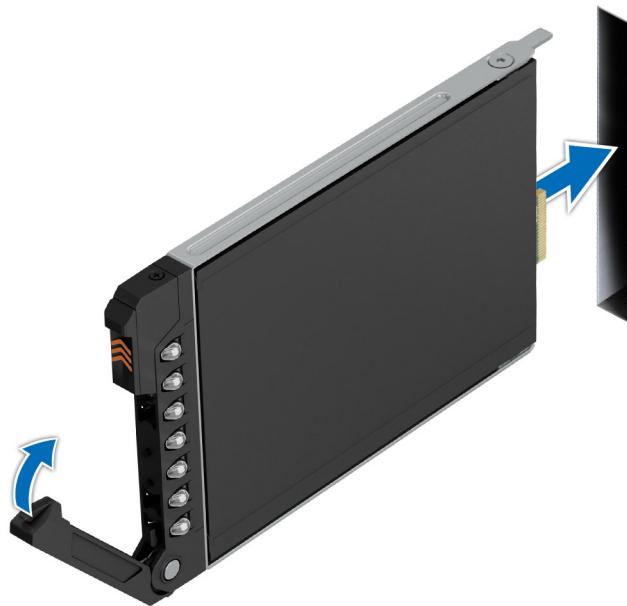


Figure 69. Installing an EDSFF E3.S drive carrier

Next steps

If removed, install the front bezel.


Removing the drive from the drive carrier

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. If installed, [remove the front bezel](#).

Steps

1. Using a Phillips #1 screwdriver, remove the screws from the slide rails on the drive carrier.
- NOTE:** If the hard drive or SSD carrier has Torx screw, use Torx 6 (for 2.5-inch drive) or Torx 8 (for 3.5-inch drive) screwdriver to remove the drive.

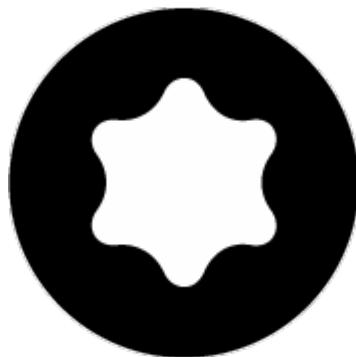

2. Lift the drive out of the drive carrier.



Figure 70. Removing the drive from the drive carrier

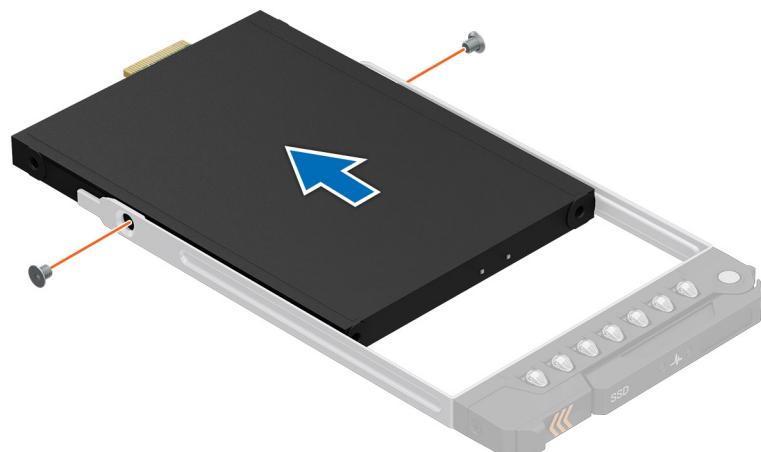


Figure 71. Removing an EDSFF E3.S drive from the drive carrier

Next steps

Install the drive into the drive carrier.

Installing the drive into the drive carrier

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. If installed, [remove the front bezel](#).
3. [Remove the drive blank](#).

Steps

1. Insert the drive into the drive carrier with the drive connector facing towards the rear of the carrier.
2. Align the screw holes on the drive with the screws holes on the drive carrier.
3. Using a Phillips #1 screwdriver, secure the drive to the drive carrier with the screws.

 **NOTE:** When installing a drive into the drive carrier, ensure that the screws are torqued to 4 lbf-in.

 **NOTE:** If the hard drive or SSD carrier has Torx screw, use Torx 6 (for 2.5-inch drive) or Torx 8 (for 3.5-inch drive) screwdriver to install the drive.



Figure 72. Installing a drive into the drive carrier

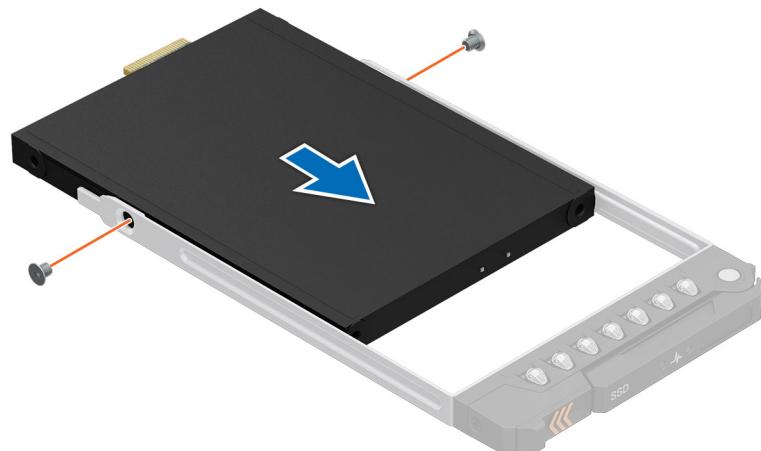


Figure 73. Installing an EDSFF E3.S drive into the drive carrier

Next steps

1. [Install the drive carrier.](#)
2. If removed, [install the front bezel.](#)

Rear drive module

Removing the 2 x 2.5-inch rear drive module

Prerequisites

1. Follow the safety guidelines listed in [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If required, [remove the air shroud](#).
4. [Remove the drives](#).
5. Disconnect the cables from the rear drive module.

(i) NOTE: Refer [cable routing](#) topic for more information.

Steps

1. Using a Phillips #2 screwdriver, loosen the captive screws that secure the rear drive module to the system.
2. Press the blue release tab and holding the edges lift the rear drive module away from the system.

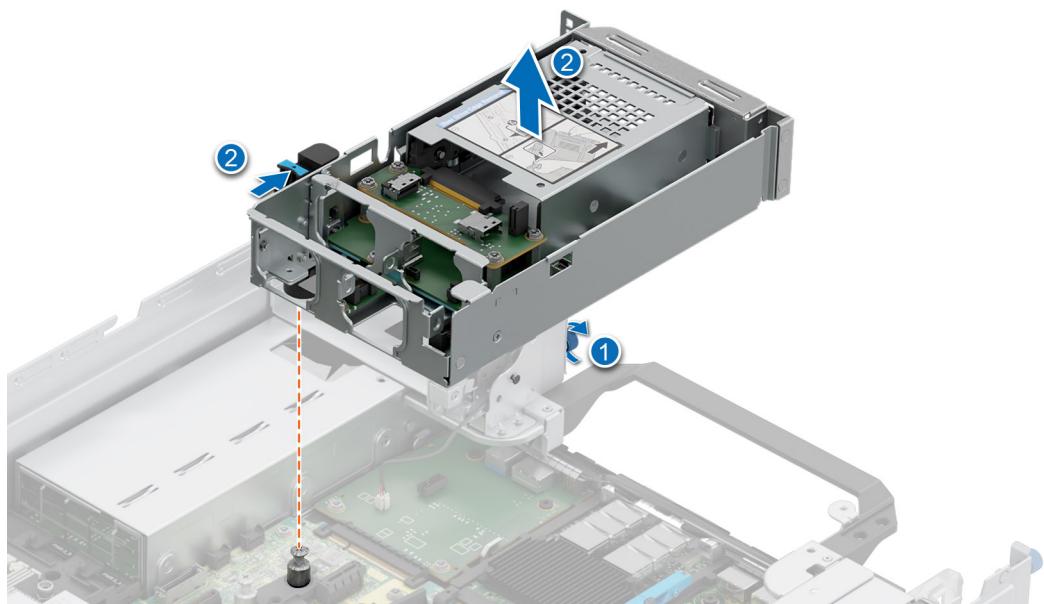


Figure 74. Removing the 2x 2.5-inch rear drive module

Next steps

1. Replace the 2 x 2.5-inch rear drive module.

Installing the 2 x 2.5-inch rear drive module

Prerequisites

1. Follow the safety guidelines listed in [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If required, [remove the air shroud](#).
4. [Remove the drives](#).
5. Disconnect the cables from the rear drive module.

i **NOTE:** Refer [cable routing](#) topic for more information.

Steps

1. Align the slot on the rear drive module with the guide on the system.
2. Lower and press the rear drive module on top of the riser until firmly seated.
3. Using a Phillips #2 screwdriver, tighten the captive screws that secure the rear drive module into the system.

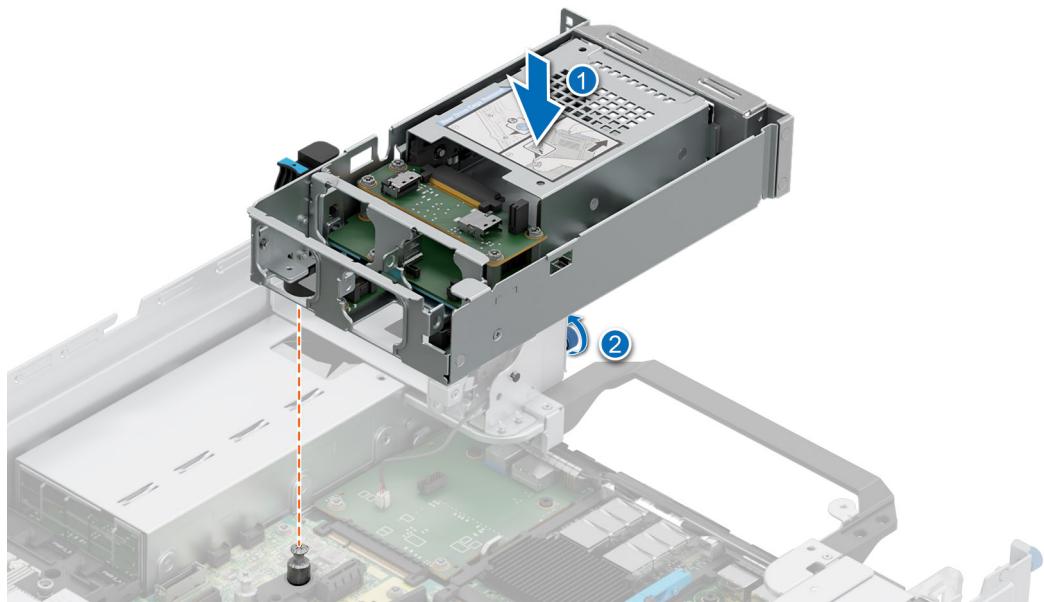


Figure 75. Installing the 2 x 2.5-inch rear drive module

Next steps

1. Connect and route all the cables to the rear drive module.
2. [Install the drives](#).
3. If removed, [install the air shroud](#).
4. Follow the procedure listed in [After working inside your system](#).

Removing the 4 x 2.5-inch rear drive module

Prerequisites

1. Follow the safety guidelines listed in [Safety instructions](#).
 2. Follow the procedure listed in [Before working inside your system](#).
 3. If required, [remove the air shroud](#).
 4. [Remove the drives](#).
- NOTE:** If the BOSS-N1 module is installed, ensure to disconnect the BOSS-N1 power cable and Signal cable before removing the 4 x 2.5-inch rear drive module.

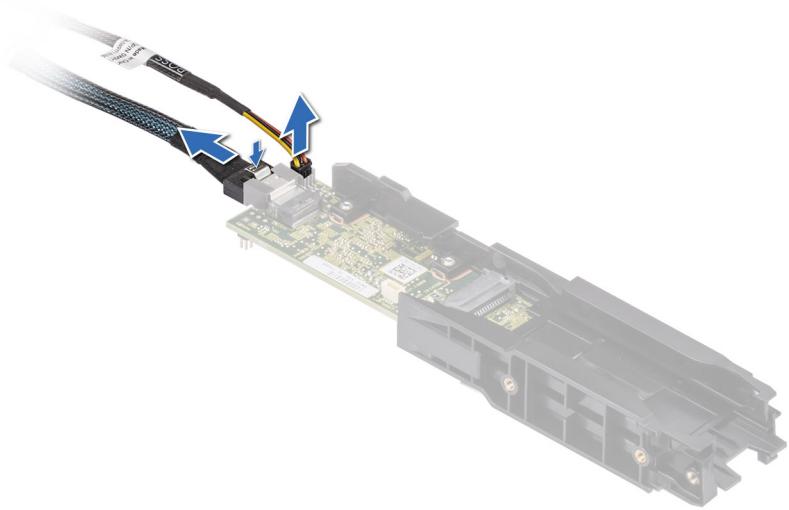


Figure 76. Removing the BOSS-N1 module

6. Disconnect the cables from the rear drive module.

(i) NOTE: Refer [cable routing](#) topic for more information.

Steps

1. Using a Phillips #2 screwdriver, loosen the captive screws that secure the rear drive module to the system.
2. Lift the rear drive module from the system.

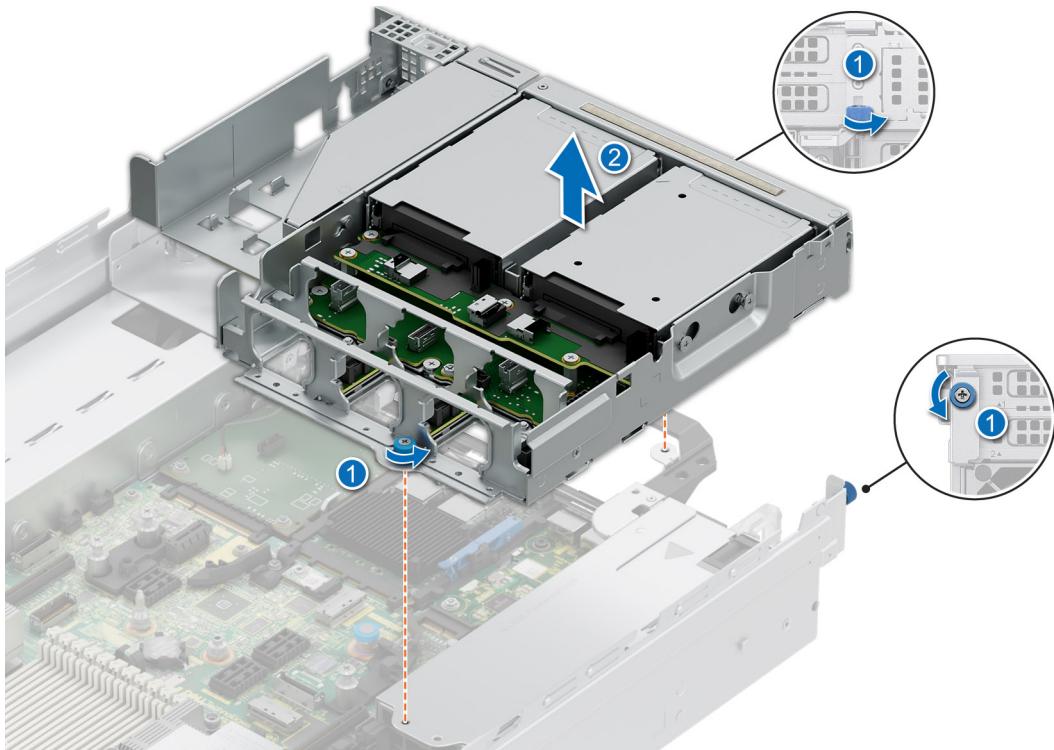


Figure 77. Removing the 4 x 2.5-inch rear drive module

Next steps

1. Replace the 4 x 2.5-inch rear drive module.

Installing the 4 x 2.5-inch rear drive module

Prerequisites

1. Follow the safety guidelines listed in [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If required, [remove the air shroud](#).
4. [Remove the drives](#).
5. If installed, [remove the BOSS-N1 module](#).
6. Disconnect the cables from the rear drive module.

 **NOTE:** Refer [cable routing](#) topic for more information.

Steps

1. Align and lower the rear drive module with the guide on the system.
2. Using a Phillips #2 screwdriver, tighten the captive screws that secure the rear drive module into the system.

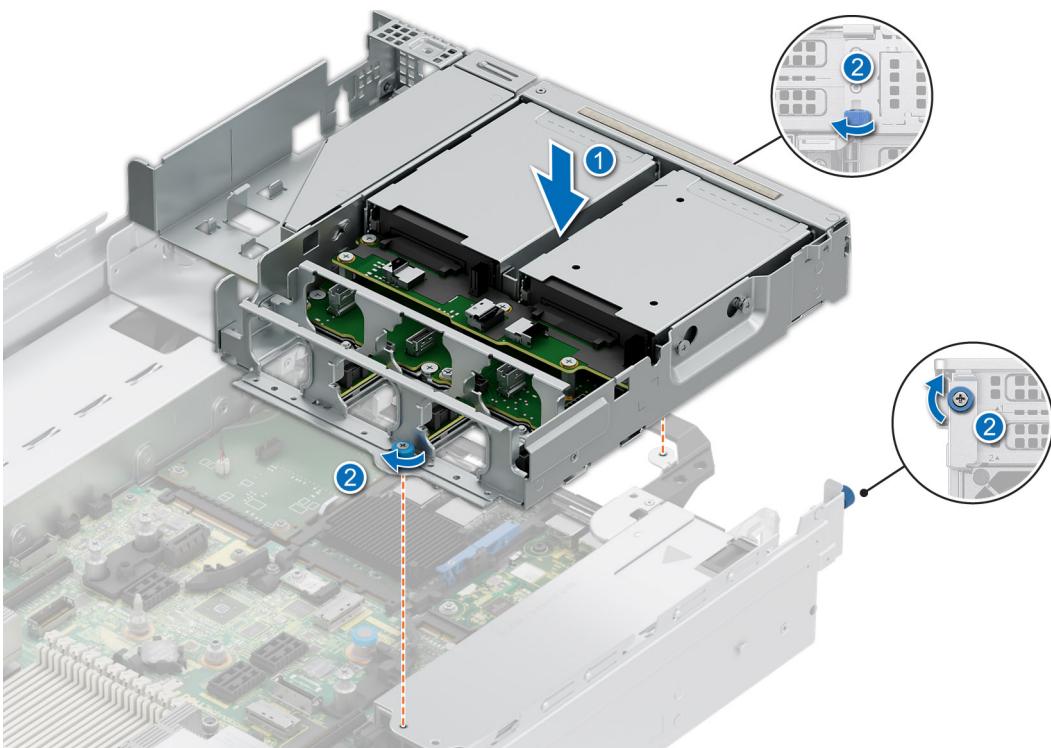


Figure 78. Installing the 4 x 2.5-inch rear drive module

Next steps

1. Connect and route all the cables to the rear drive module.
2. [Install the drives](#).
3. If removed, [install the BOSS-N1 module](#).
4. If removed, [install the air shroud](#).
5. Follow the procedure listed in [After working inside your system](#).

Removing the 4 x EDSFF E3.S rear drive module

Prerequisites

1. Follow the safety guidelines listed in [Safety instructions](#).

2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the 4 x EDSFF E3.S rear drive module air shroud](#).
4. [Remove the 4 x EDSFF E3.S rear drive module cooling fan](#).
5. If installed, [Remove the expansion card riser](#).
6. Disconnect the rear drive cables from the system board.

(i) NOTE: See [Cable Routing](#) section for more information.

Steps

1. Using a Phillips #2 screwdriver, loosen the captive screw that secures the rear drive module to the system.
2. Press the blue release tab and holding the edges lift the rear drive module away from the system.

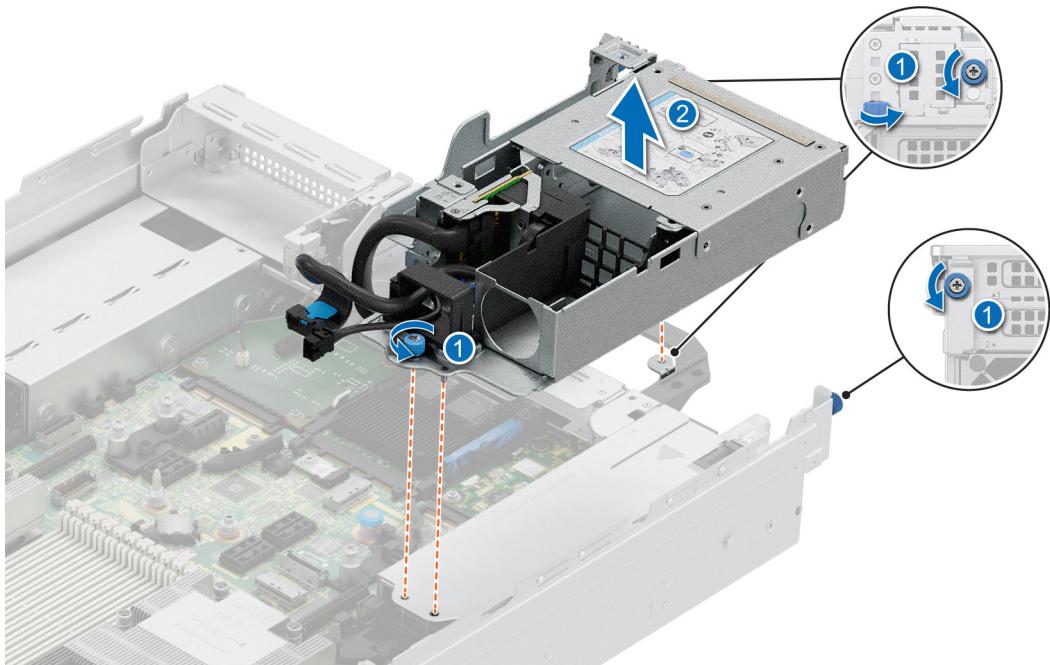


Figure 79. Removing the EDSFF E3.S rear drive module

Next steps

1. [Replace the EDSFF E3.S rear drive module](#).

Installing the 4 x EDSFF E3.S rear drive module

Prerequisites

1. Follow the safety guidelines listed in [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the 4 x EDSFF E3.S rear drive module air shroud](#).
4. [Remove the 4 x EDSFF E3.S rear drive module cooling fan](#).
5. If installed, [Remove the expansion card riser](#).
6. Disconnect the rear drive cables from the system board.

(i) NOTE: See [Cable Routing](#) section for more information.

Steps

1. Align the slot on the rear drive module with the guide on the system.

2. Lower and press the rear drive module on top of the riser until firmly seated.
3. Using a Phillips #2 screwdriver, tighten the captive screws that secure the rear drive module into the system.

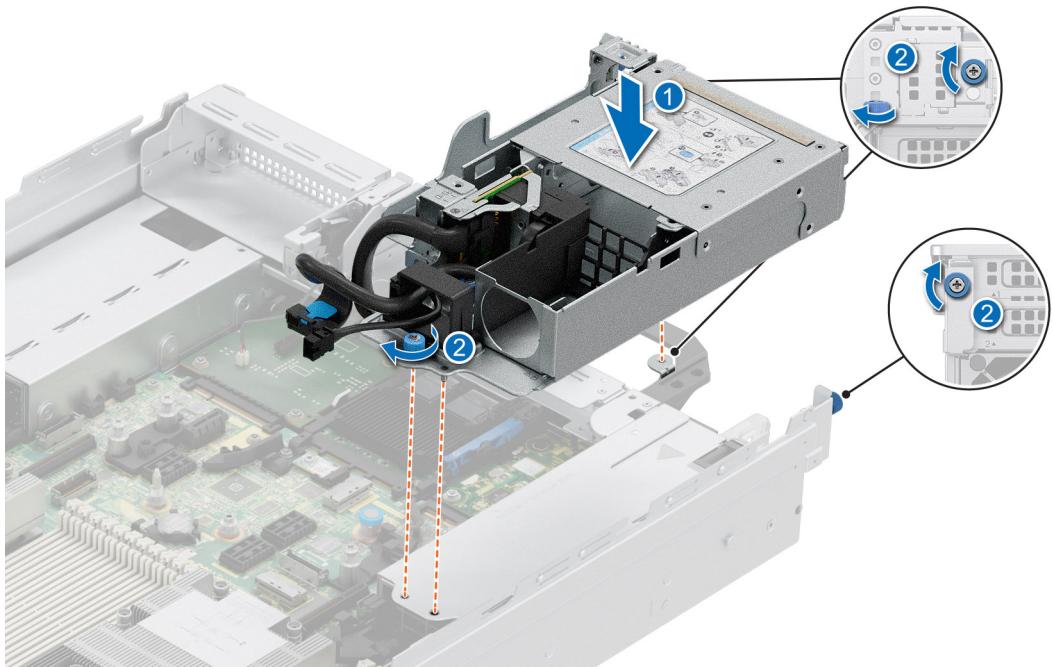


Figure 80. Installing the 4 x EDSFF E3.S rear drive module

Next steps

1. Connect and route all the cables to the rear drive module.
2. [Install the drives](#).
3. [Install the 4 x EDSFF E3.S rear drive module air shroud](#).
4. Follow the procedure listed in [After working inside your system](#).

Drive backplane

Drive backplane

Depending on your system configuration, the drive backplanes that are supported are listed here:

Table 77. Supported backplane options

System	Supported hard drives options
PowerEdge R7625	2.5-inch (x 8) NVMe backplane
	2.5-inch (x 8) SAS, or SATA backplane
	3.5-inch (x 8) SAS, or SATA backplane
	3.5-inch (x 12) SAS or SATA backplane
	2.5-inch (x 24) SAS, SATA, or NVMe backplane
	E3.S (x32) NVMe Gen5 backplane
	E3.S (x16) NVMe Gen5 backplane
	E3.S (x8) NVMe Gen5 backplane

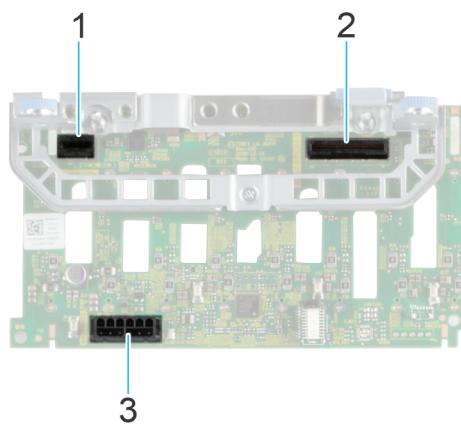


Figure 81. 8 x 2.5-inch NVMe drive backplane

1. BP_PWR_CTRL
2. BP_DST_SA1 (PERC to backplane)
3. BP_PWR_1 (backplane power and signal cable to system board)

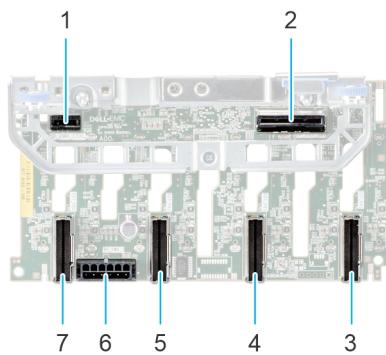


Figure 82. 8 x 2.5-inch drive backplane

1. BP_PWR_CTRL
2. BP_DST_SA1 (PERC to backplane)
3. BP_DST_PA1 (PCIe/NVMe connector)
4. BP_DST_PB1 (PCIe/NVMe connector)

- 5. BP_DST_PA2 (PCIe/NVMe connector)
- 6. BP_PWR_1 (backplane power and signal cable to system board)
- 7. BP_DST_PB2 (PCIe/NVMe connector)

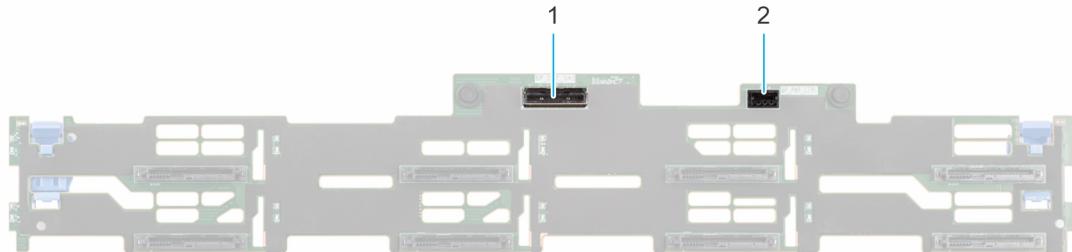


Figure 83. 8 x 3.5-inch drive backplane rear

- 1. BP_DST_SA1 (PERC to backplane)
- 2. BP_PWR_CTRL

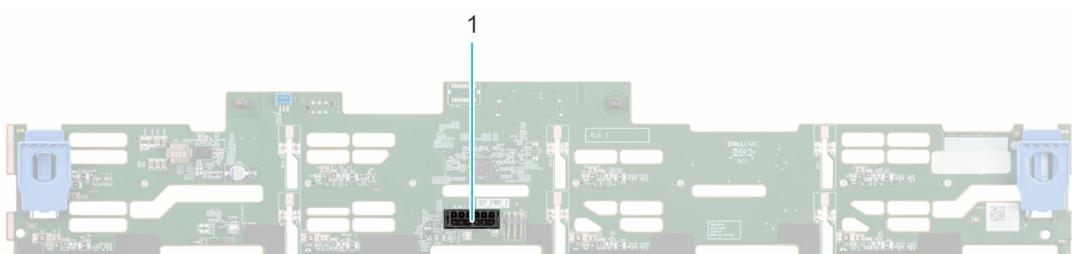


Figure 84. 8 x 3.5-inch drive backplane front

- 1. BP_PWR_1 (backplane power and signal cable to system board)

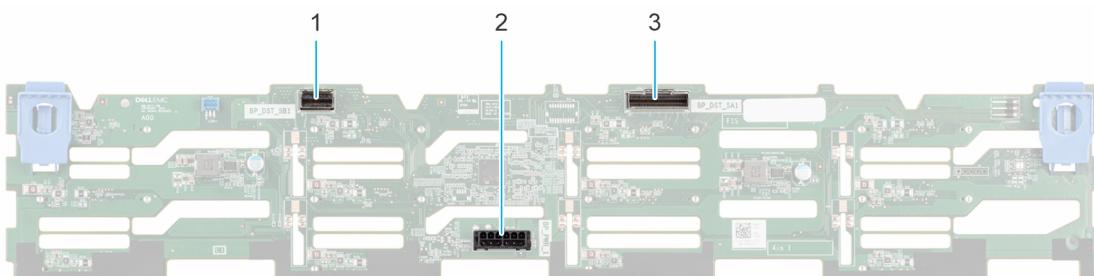


Figure 85. 12 x 3.5-inch drive backplane

- 1. BP_DST_SB1
- 2. BP_PWR_1 (backplane power and signal cable to system board)
- 3. BP_DST_SA1

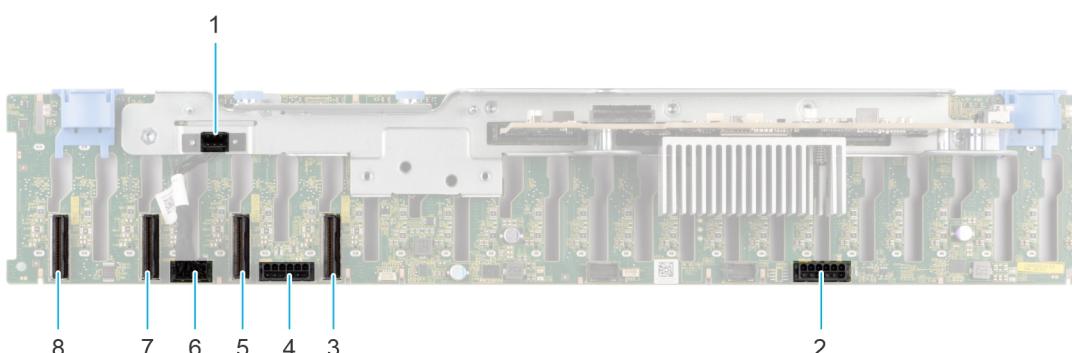


Figure 86. 24 x 2.5-inch drive backplane (front view)

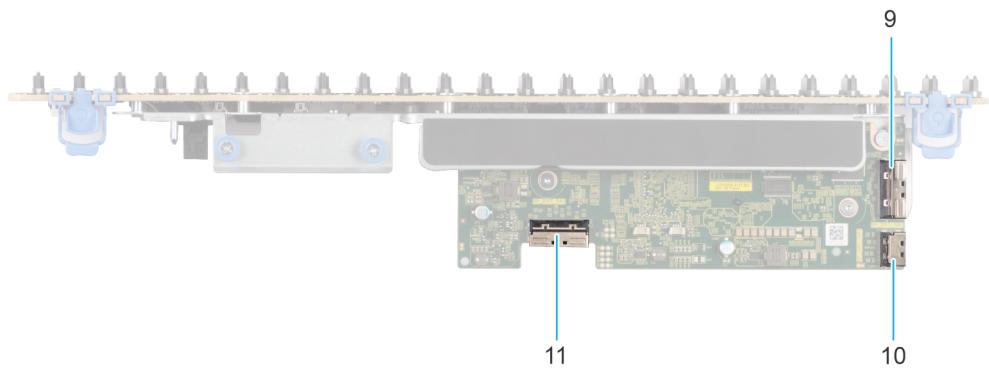


Figure 87. 24 x 2.5-inch drive backplane (top view)

- | | |
|-------------------------------------|--|
| 1. BP_CTRL | 2. BP_PWR_1 (backplane power and signal cable to system board) |
| 3. BP_DST_PA1 (PCIe/NVMe connector) | 4. BP_PWR_2 (backplane power and signal cable to system board) |
| 5. BP_DST_PB1 (PCIe/NVMe connector) | 6. BP_PWR_CTRL |
| 7. BP_DST_PA2 (PCIe/NVMe connector) | 8. BP_DST_PB2 (PCIe/NVMe connector) |
| 9. BP_DST_SB1 | 10. BP_SRC_SA2 |
| 11. BP_DST_SA1 | |

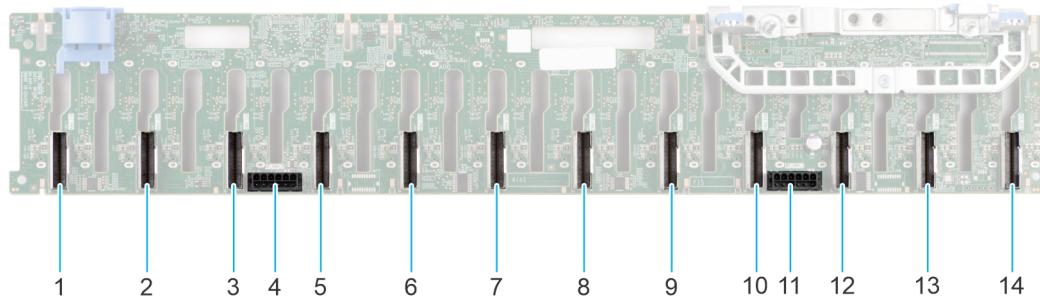


Figure 88. 24 x 2.5-inch NVMe passive backplane

- | | |
|--------------------------------------|--------------------------------------|
| 1. BP_DST_PB6 (PCIe/NVMe connector) | 2. BP_DST_PA6 (PCIe/NVMe connector) |
| 3. BP_DST_PB5 (PCIe/NVMe connector) | 4. BP_PWR_2 |
| 5. BP_DST_PA5 (PCIe/NVMe connector) | 6. BP_DST_PB4 (PCIe/NVMe connector) |
| 7. BP_DST_PA4 (PCIe/NVMe connector) | 8. BP_DST_PB3 (PCIe/NVMe connector) |
| 9. BP_DST_PA3 (PCIe/NVMe connector) | 10. BP_DST_PB2 (PCIe/NVMe connector) |
| 11. BP_PWR_1 | 12. BP_DST_PA2 (PCIe/NVMe connector) |
| 13. BP_DST_PB1 (PCIe/NVMe connector) | 14. BP_DST_PA1 (PCIe/NVMe connector) |

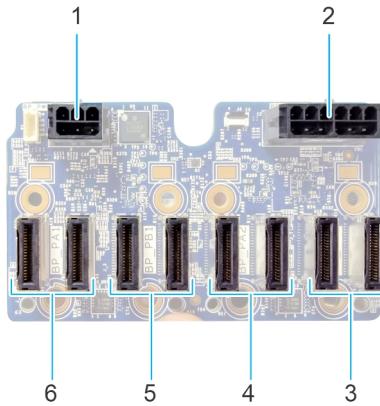


Figure 89. EDSFF E3.S NVMe drive backplane

- | | |
|---------------------------------|---|
| 1. BP_PWR_CTRL | 2. BP_PWR_1 (backplane power cable to system board) |
| 3. BP_PB2 (PCIe/NVMe connector) | 4. BP_PA2 (PCIe/NVMe connector) |
| 5. BP_PB1 (PCIe/NVMe connector) | 6. BP_PA1 (PCIe/NVMe connector) |

Removing the drive backplane

Prerequisites

CAUTION: To prevent damage to the drives and backplane, remove the drives from the system before removing the backplane.

CAUTION: Note the number of each drive and temporarily label them before you remove the drive so that you can reinstall them in the same location.

NOTE: The procedure to remove the backplane is similar for all backplane configurations.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the backplane cover](#).
4. If installed, [remove the air shroud](#) or [remove the GPU air shroud](#).
5. [Remove all the drives](#).
6. [Remove the cooling fan cage assembly](#).
7. Observe and disconnect the drive backplane cables from the connector on the system board and backplane.

NOTE: Refer [cable routing](#) topic for more information.

Steps

1. Press the blue release tabs to disengage the drive backplane from the hooks on the system.
2. Lift and pull the drive backplane out of the system.

NOTE: To avoid damaging the backplane, ensure that you move the control panel cables from the cable routing clips before removing the backplane.

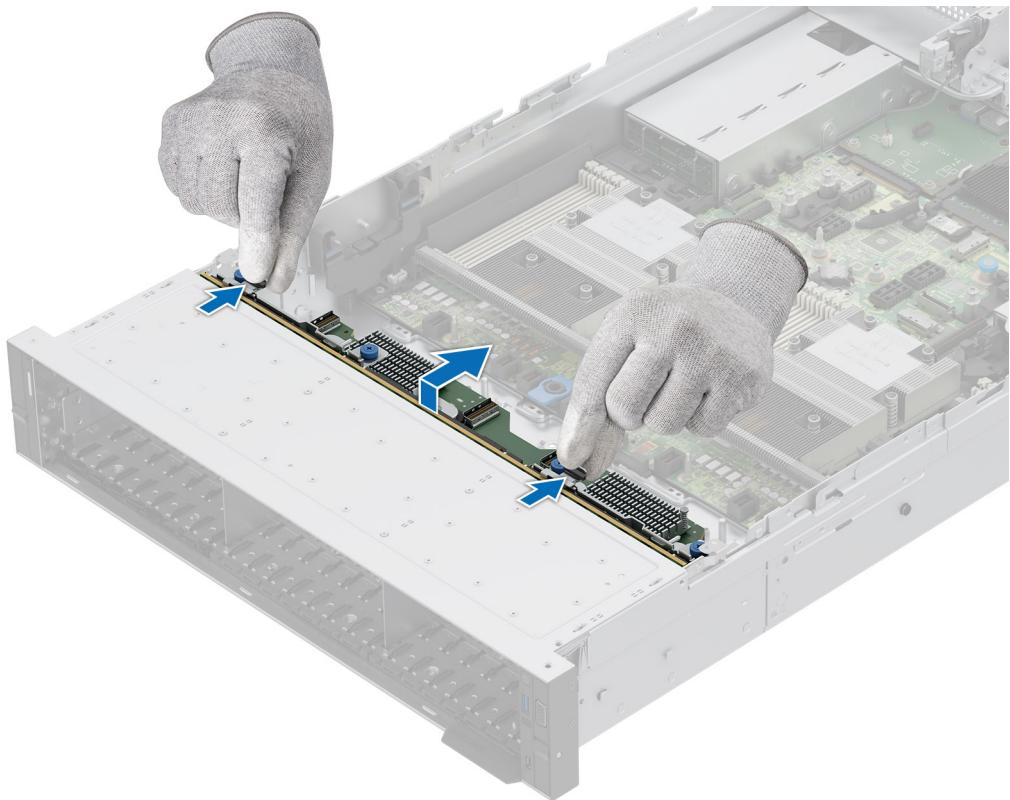


Figure 90. Removing the drive backplane

Next steps

1. Replace the drive backplane.

Installing the drive backplane

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the backplane cover](#).
4. If installed, [remove the air shroud](#) or [remove the GPU air shroud](#).
5. [Remove all the drives](#).
6. [Remove the cooling fan cage assembly](#).
7. Observe and disconnect the drive backplane cables from the connector on the system board and backplane.

i **NOTE:** Refer [cable routing](#) topic for more information.

i **NOTE:** To avoid damaging the backplane, ensure to move the control panel cables from the cable routing clips before removing the backplane.

i **NOTE:** Route the cable properly when you replace it to prevent the cable from being pinched or crimped.

Steps

1. Use the guides on the system as guides to align the slots on the backplane.
2. Insert the backplane into the guides and lower the backplane until the blue release tabs clicks into place.
3. Route the cables properly through the cable guide and connect the cables to the connector on the system board.

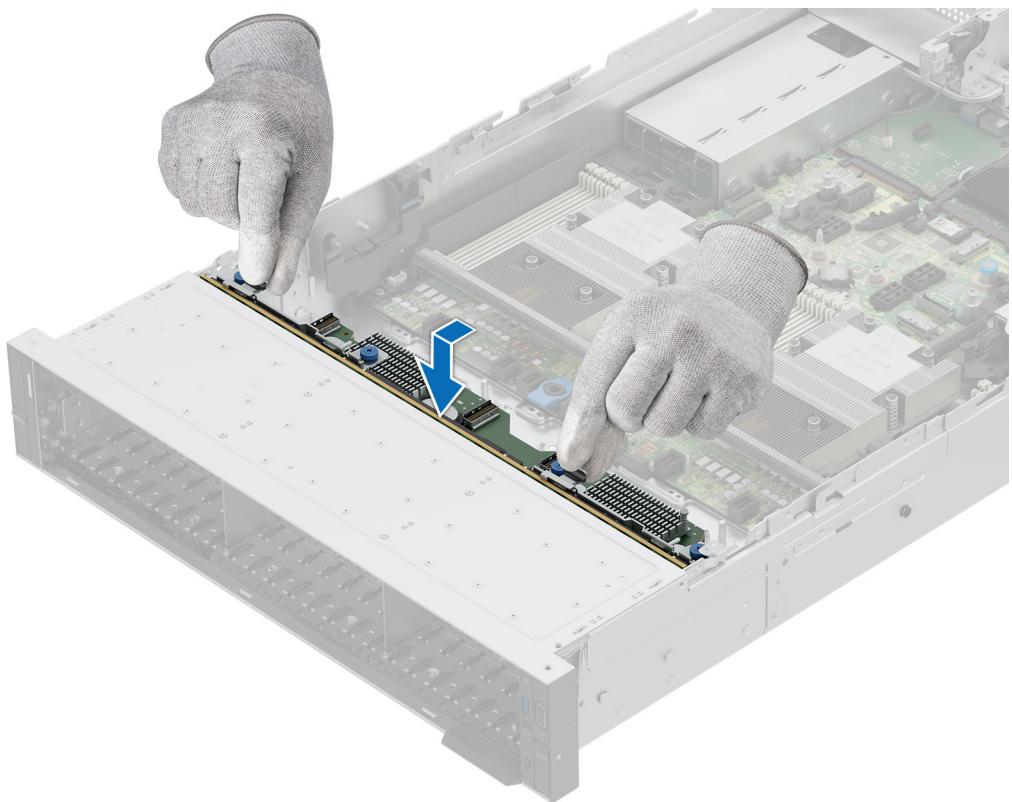


Figure 91. Installing the drive backplane

Next steps

1. [Install the cooling fan cage assembly](#).
2. [Install all the drives](#).
3. If removed, [install the air shroud](#) or [install the GPU air shroud](#).
4. [Install the drive backplane cover](#).
5. Connect the drive backplane cables to the connector on the system board.
6. Connect the drive backplane cables to the connector on the backplane.
7. Follow the procedure listed in [After working inside your system](#).

Side wall brackets

Removing the side wall bracket

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the backplane cover](#).
4. If installed, [remove the air shroud](#).
5. [Remove the cooling fan assembly](#).

(i) NOTE: Ensure that you note the routing of the cables as you remove them from the system board. Route the cable properly when you replace it to prevent the cable from being pinched or crimped.

Steps

1. Press the tab to release the side wall bracket cover.

NOTE: Unroute the cables to release them from the side wall bracket.

2. Release the bracket from the chassis, and lift it away from the system.

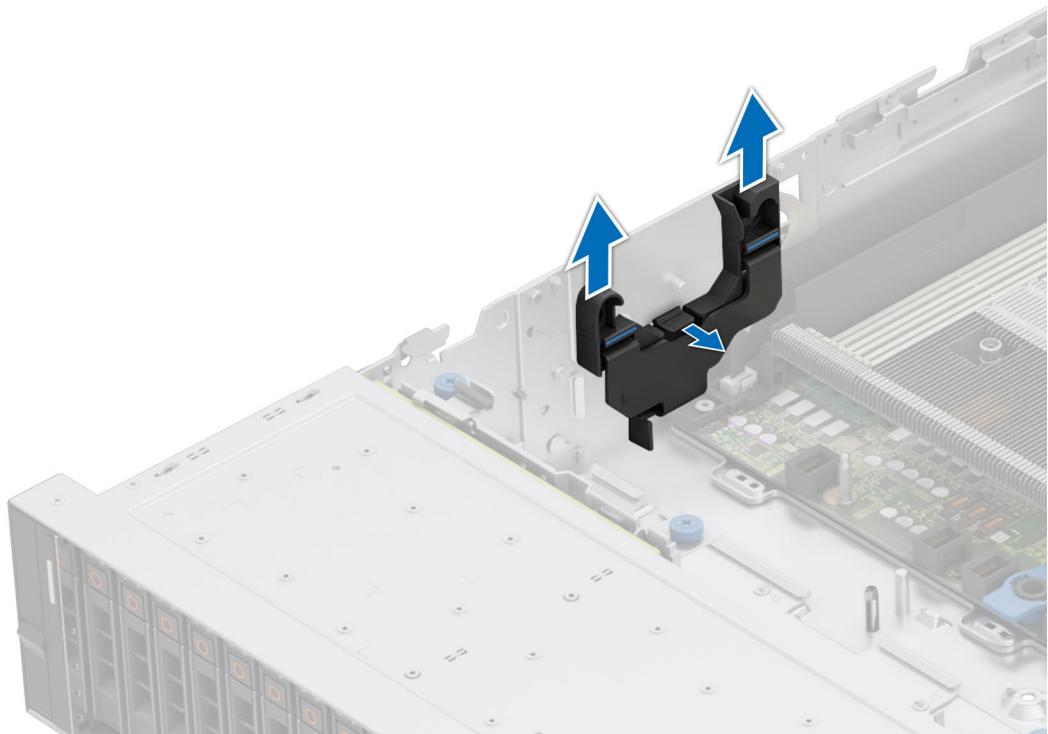


Figure 92. Removing the left side wall bracket

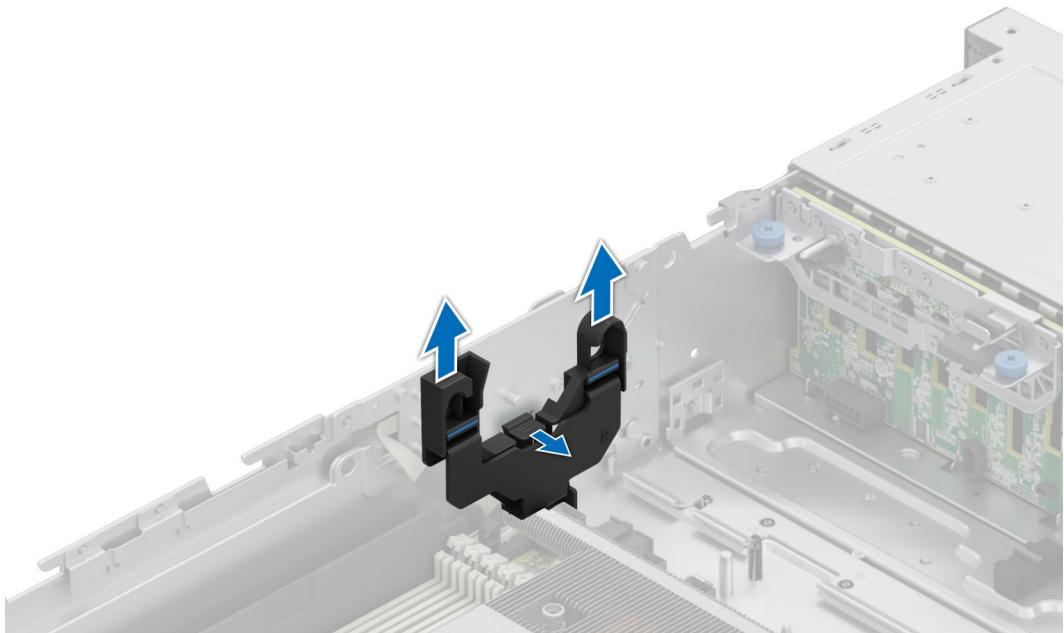


Figure 93. Removing the right side wall bracket

Next steps

1. Replace the side wall bracket.

Installing the side wall bracket

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the backplane cover](#).
4. If installed, [remove the air shroud](#).

(i) NOTE: Ensure that you note the routing of the cables as you remove them from the system board. Route the cable properly when you replace it to prevent the cable from being pinched or crimped.

Steps

1. Align the side wall bracket with the tabs on the chassis.
2. Press the side wall bracket with your thumbs until the bracket firmly clicks into place.
- (i) NOTE:** Route the cables through the side wall bracket.
3. Close the side wall bracket cover with your thumbs until the cover firmly clicks into place.

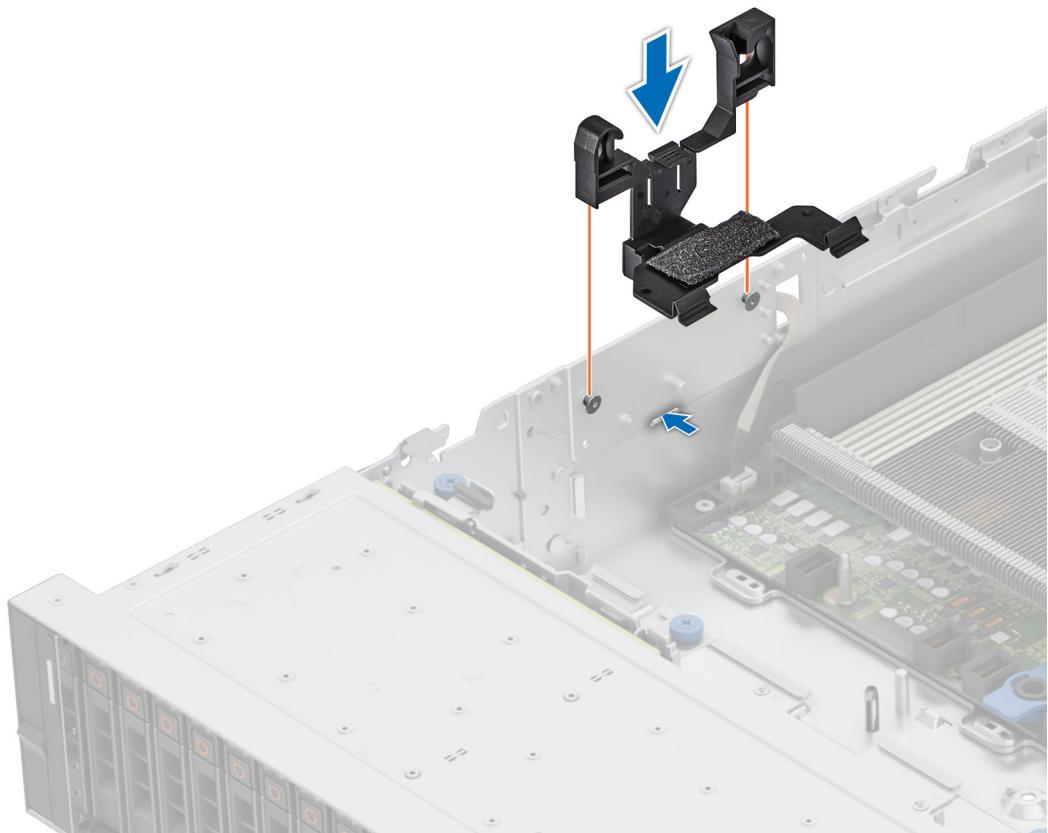


Figure 94. Installing the left side wall bracket

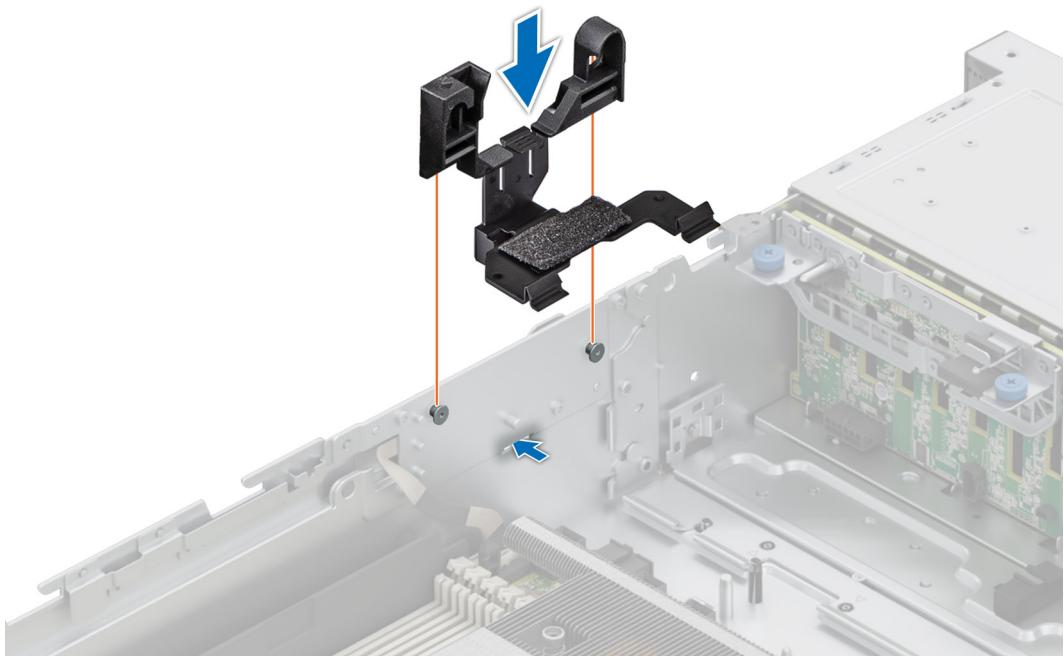


Figure 95. Installing the right side wall bracket

Next steps

1. Replace the cooling fan assembly.
2. If removed, install the air shroud.
3. Install the backplane cover.
4. If installed, install the front bezel.
5. Follow the procedure listed in the [After working inside your system](#).

PERC module

Removing the front mounting front PERC module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [remove the backplane cover](#).
4. If installed, [remove the air shroud](#).
5. Disconnect all the cables, observe the cable routing.

Steps

1. Using a Phillips #2 screwdriver, loosen the captive screws on the front PERC module.
2. Slide and pull the front PERC module to disengage from the connector on the drive backplane.

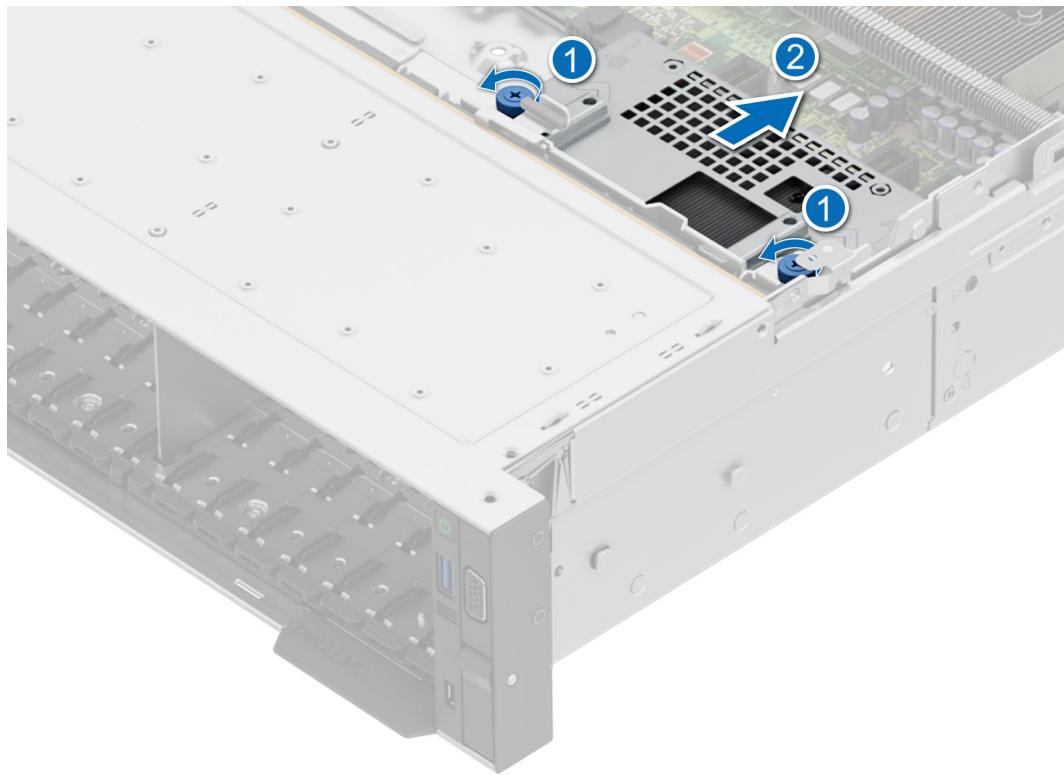


Figure 96. Removing the front mounting front PERC module

Next steps

1. Replace the front mounting front PERC module.

Installing the front mounting front PERC module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the backplane cover](#).
4. If installed, [remove the air shroud](#).
5. Route the cable properly to prevent the cable from being pinched or crimped.

Steps

1. Align the front PERC module at an angle until the tray touches the slot in the system.
2. Slide and press the front PERC module connector with the connector on the drive backplane until firmly seated.
3. Using a Phillips #2 screwdriver, tighten the captive screws on the front PERC module.

(i) NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

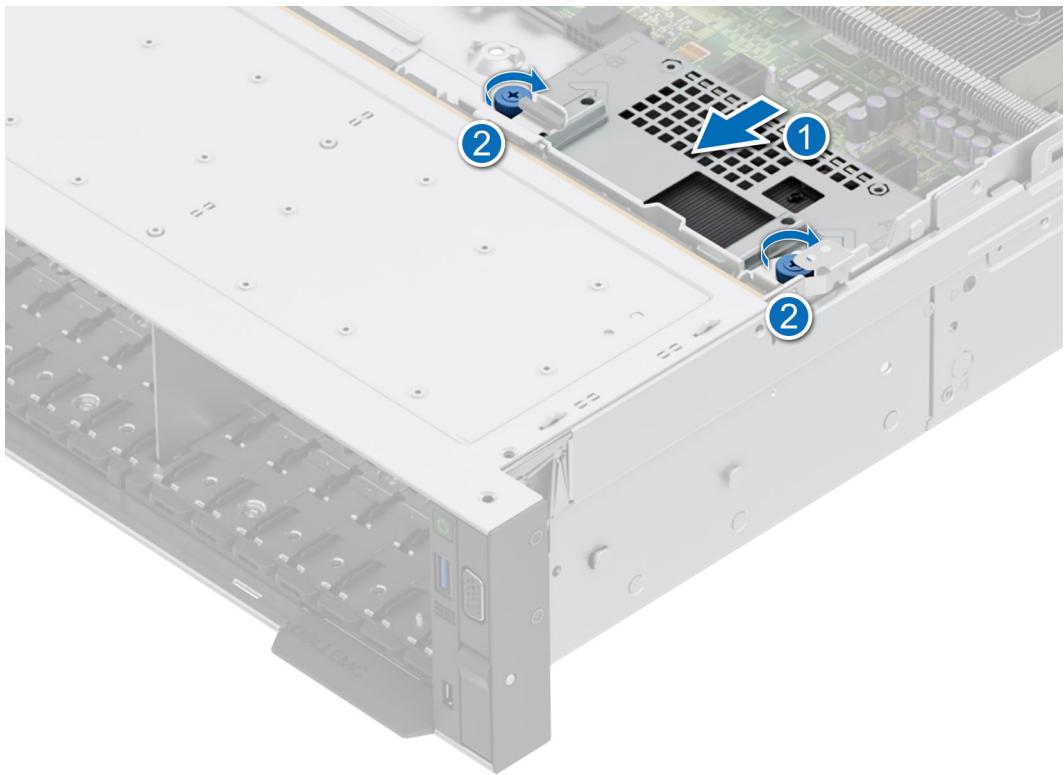


Figure 97. Installing the front mounting front PERC module

Next steps

1. Reconnect all the required cables.
2. If removed, [install the air shroud](#).
3. [Install the drive backplane cover](#).
4. Follow the procedure listed in [After working inside your system](#).

Removing the adapter PERC module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If required, [remove the air shroud](#) or [remove the GPU air shroud](#).
4. If required, [remove the drive backplane cover](#).
5. [Remove the cooling fan cage assembly](#).
6. [Remove the expansion card riser](#).
7. Disconnect all the cables from the Adapter PERC card, observe the cable routing.

i **NOTE:** Refer [cable routing](#) topic for more information.

i **NOTE:** Adapter PERC module must be installed only in expansion card riser 1 or riser 2.

Steps

1. Tilt the expansion card retention latch lock to open.
2. Pull the card holder before removing the card from the riser.
3. Hold the Adapter PERC module by the edges. and pull the module from the expansion card connector on the riser.

NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

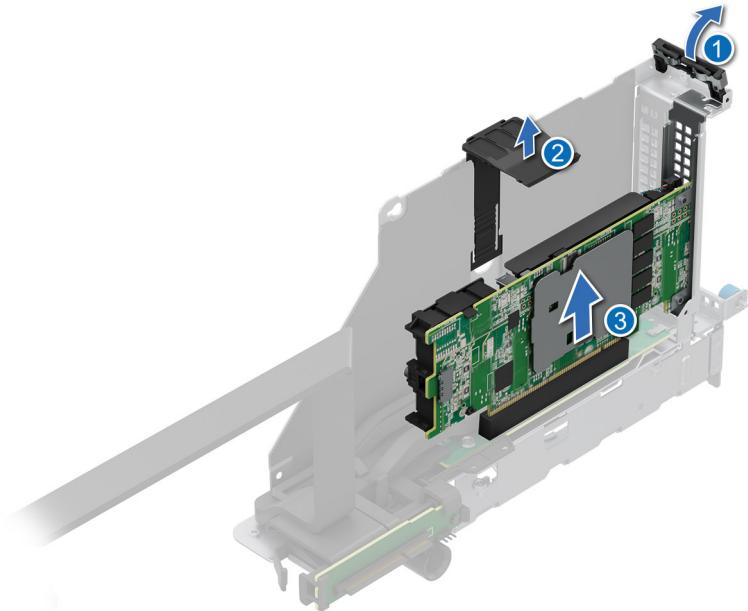


Figure 98. Removing the Adapter PERC module

4. If the Adapter PERC module is not going to be replaced, install a filler bracket and close the card retention latch.

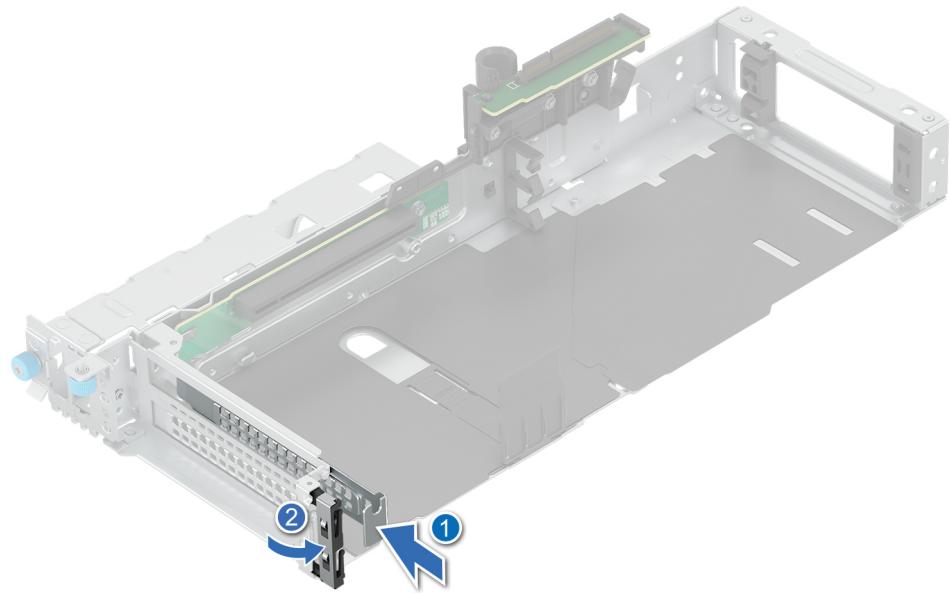


Figure 99. Installing the filler bracket

Next steps

1. Replace the Adapter PERC module.

Installing the adapter PERC module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If required, [remove the air shroud](#) or [remove the GPU air shroud](#).
4. If required, [remove the drive backplane cover](#).
5. [Remove the cooling fan cage assembly](#).
6. [Remove the expansion card riser](#).
7. Disconnect all the cables from the adapter PERC card, observe the cable routing.

i **NOTE:** Refer [cable routing](#) topic for more information.

8. If a new APERC module has to be installed, unpack it and prepare the module for installation.

i **NOTE:** For instructions, see the documentation accompanying the card.

i **NOTE:** APERC module must be installed only in expansion card riser 1 or riser 2.

Steps

1. Pull and lift up the expansion card retention latch lock to open.
2. If installed, remove the filler bracket.

i **NOTE:** Store the filler bracket for future use. Filler brackets must be installed in empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

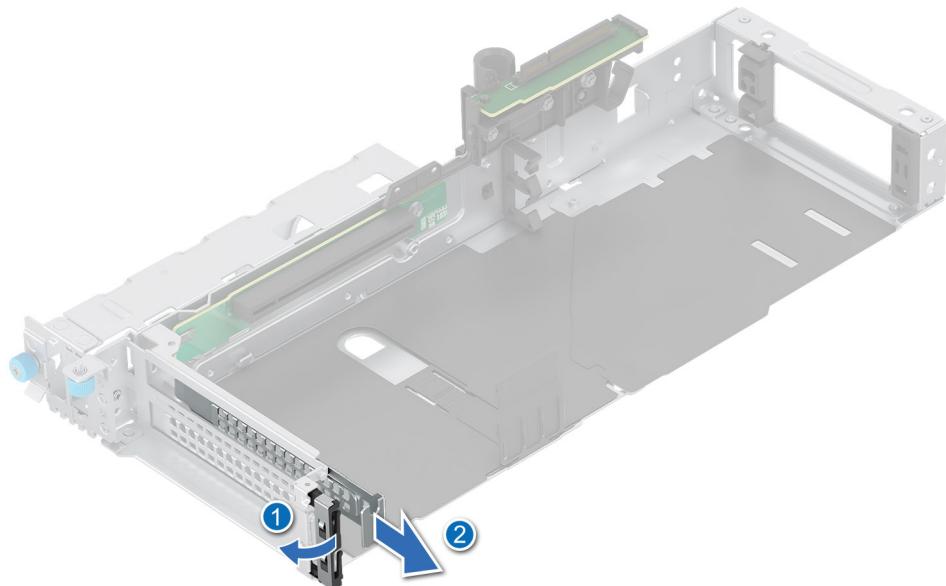


Figure 100. Removing the filler bracket

3. Hold the Adapter PERC module by the edges, and align the module edge connector with the expansion card connector on the riser.
4. Insert the module into the expansion card connector until firmly seated.
5. Close the expansion card retention latch.
6. Push the card holder to hold the module in the riser.

(i) NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

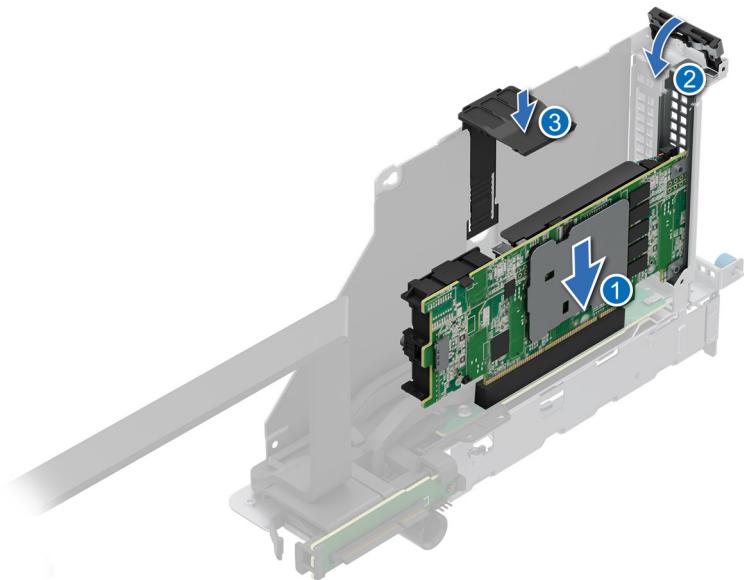


Figure 101. Installing the Adapter PERC module

Next steps

1. Connect the cables to the Adapter PERC module and route the cables properly.
(i) NOTE: Refer [cable routing](#) topic for more information.
2. [Install the cooling fan cage assembly](#).
3. If removed, [install the air shroud](#) or [install the GPU air shroud](#).
4. [Install the drive backplane cover](#).
5. [Install the expansion card riser](#).
6. Follow the procedure listed in [After working inside your system](#).

Removing the EDSFF E3.S PERC module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the backplane cover](#).
4. [Remove the cooling fan cage assembly](#).
5. If required, [remove the air shroud](#) or [remove the GPU air shroud](#).
6. Disconnect all the cables from the PERC, observe the cable routing.

(i) NOTE: See [cable routing](#) section for more information.

Steps

1. Press the release tabs on both the sides of the PERC tray, and lift the PERC tray out of the system.
2. Disconnect the PERC power cable from the EDSFF E3.S backplane module.

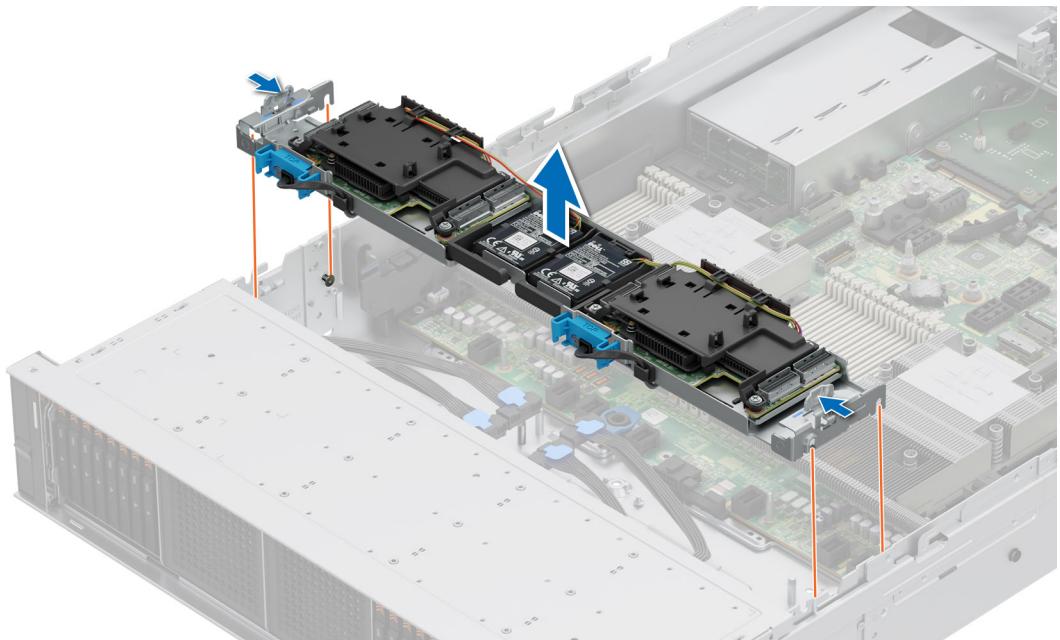


Figure 102. Removing the PERC tray

3. Press the blue tabs and remove the PERC power cable from the PERC card.
4. Disconnect the battery power cable from the PERC card.
5. Tilt and lift the battery holder assembly from the front PERC tray.

NOTE: Remove the battery cable from the front PERC shroud cable holder.

NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

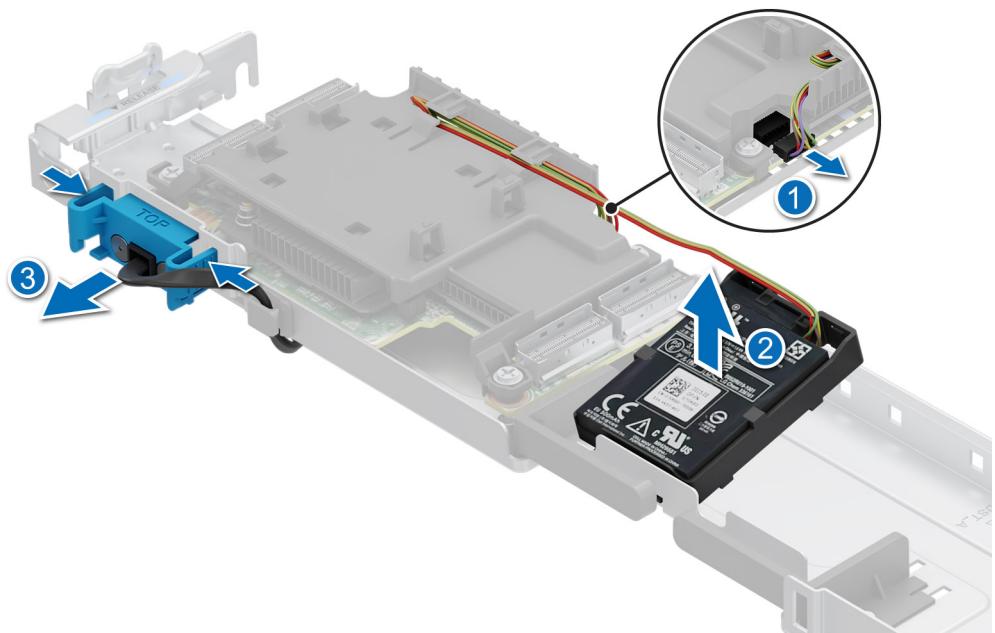


Figure 103. Removing the battery holder assembly from the PERC shroud

6. Press and remove the battery from the battery holder.

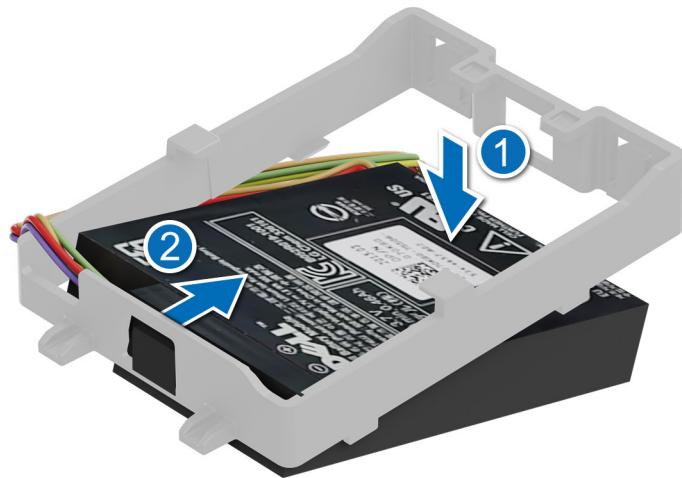


Figure 104. Removing the battery from the battery holder

7. Using a Phillips #2 screwdriver, remove the four screws on the front PERC shroud.
8. Remove the PERC shroud from the PERC.card.
9. Remove the PERC card from the PERC tray.

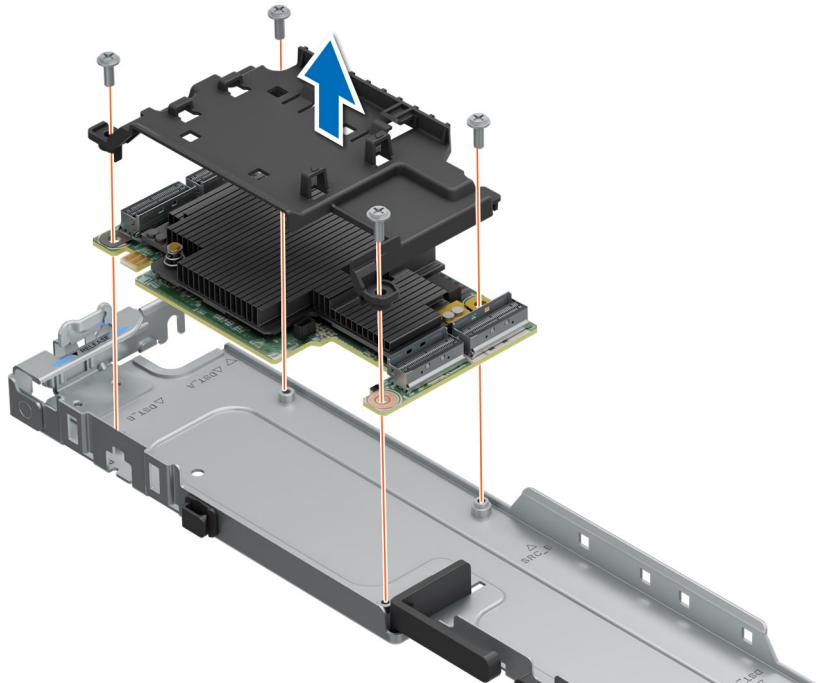


Figure 105. Removing the PERC card from PERC tray

NOTE: The procedure to remove the other PERC card is similar.

Next steps

1. Replace the EDSFF E3.S PERC module.

Installing the EDSFF E3.S PERC module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the cooling fan cage assembly](#).
4. [Remove the backplane cover](#).
5. If required, [remove the air shroud](#) or [remove the GPU air shroud](#).
6. Route the cable properly to prevent the cable from being pinched or crimped.

 **NOTE:** See [cable routing](#) section; configuration 46 for more information.

Steps

1. Align and install PERC card to the guides on the front PERC tray.
2. Align and Install the PERC shroud on the PERC card.
3. Using a Phillips #2 screwdriver, tighten the four screws to secure the PERC shroud to the PERC tray.

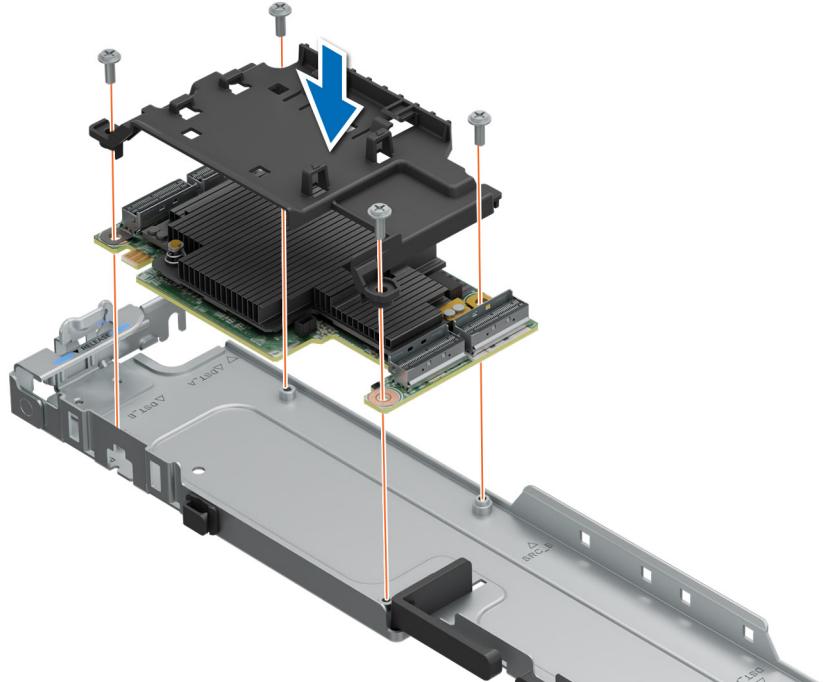


Figure 106. Installing the PERC card into PERC tray

4. Insert the battery tab into the battery holder and ensure the battery that it is firmly seated.

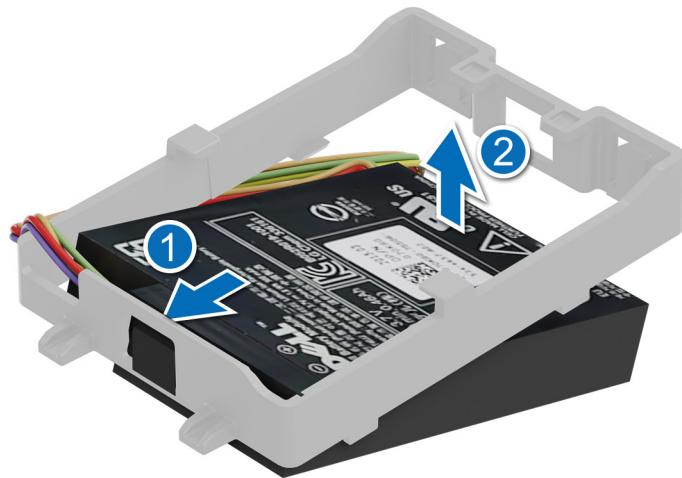


Figure 107. Installing the battery into the battery holder

5. Align and connect the PERC power cable to the PERC card.
6. **(i) NOTE:** Route the PERC cable into the PERC tray cable holder.

Tilt the battery holder assembly to align the tabs with the PERC tray.

7. Press the battery holder assembly on to the PERC tray.
 8. Connect the battery power cable to the front PERC card.
- (i) NOTE:** Route the battery cable into the front PERC shroud cable holder.

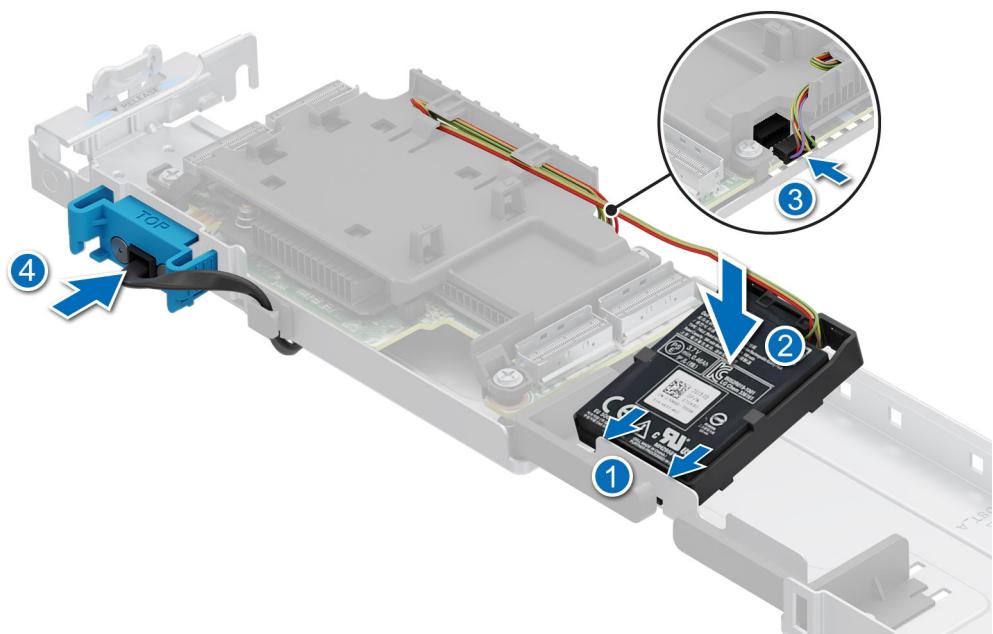


Figure 108. Installing the battery holder assembly into the PERC shroud

(i) NOTE: Procedure to install the other PERC card is similar.

9. Align the guide slots on the PERC tray with the guide pins on the system.

NOTE: Connect all the cables to the PERC card before lowering the tray. See [cable routing](#) section for more information.

10. Lower the PERC tray, until it is firmly seated and secured.

NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

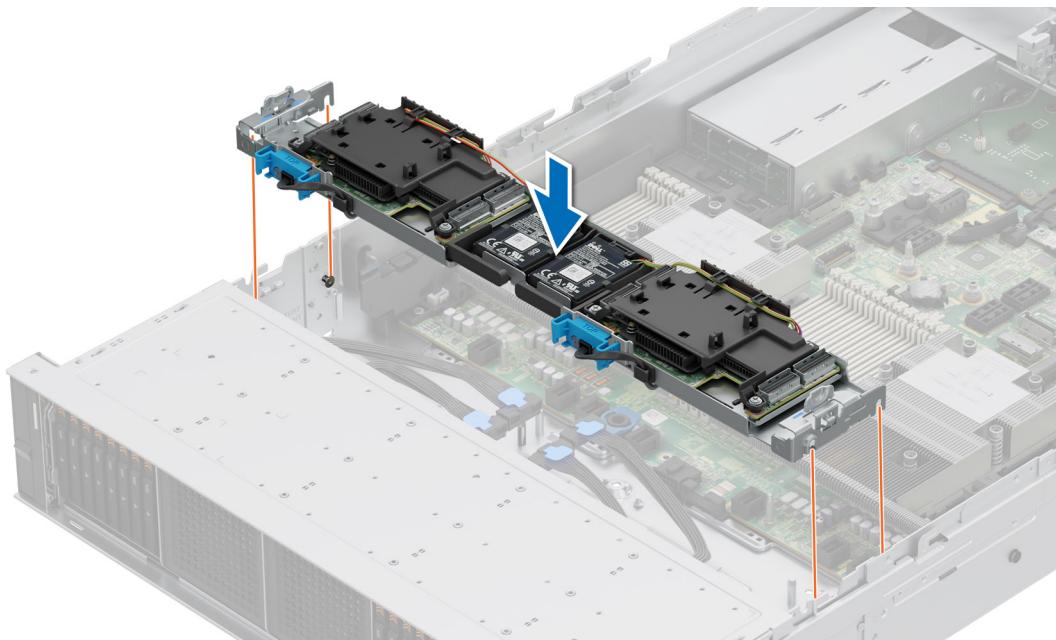


Figure 109. Installing the PERC tray

Next steps

1. Connect all the cables, observe the cable routing.

NOTE: See [cable routing](#) section for more information.

2. Install the cooling fan cage assembly.
3. If removed, [install the air shroud](#) or [install the GPU air shroud](#).
4. [Install the drive backplane cover](#).
5. Follow the procedure listed in [After working inside your system](#).

EDSFF E3.S backplane module

This is a service technician replaceable part only.

Removing the EDSFF E3.S backplane module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the backplane cover](#).
4. If required, [remove the air shroud](#) or [remove the GPU air shroud](#).
5. [Remove the cooling fan cage assembly](#).
6. [Remove the EDSFF E3.S PERC module](#).
7. [Remove the EDSFF E3.S drives](#).

8. Disconnect the cables, observe the cable routing.

(i) NOTE: See [cable routing](#) section for more information.

Steps

1. Using a Phillips #2 screwdriver, loosen the captive screws on the EDSFF E3.S backplane module.
2. Slide and remove the EDSFF E3.S backplane module from the system.

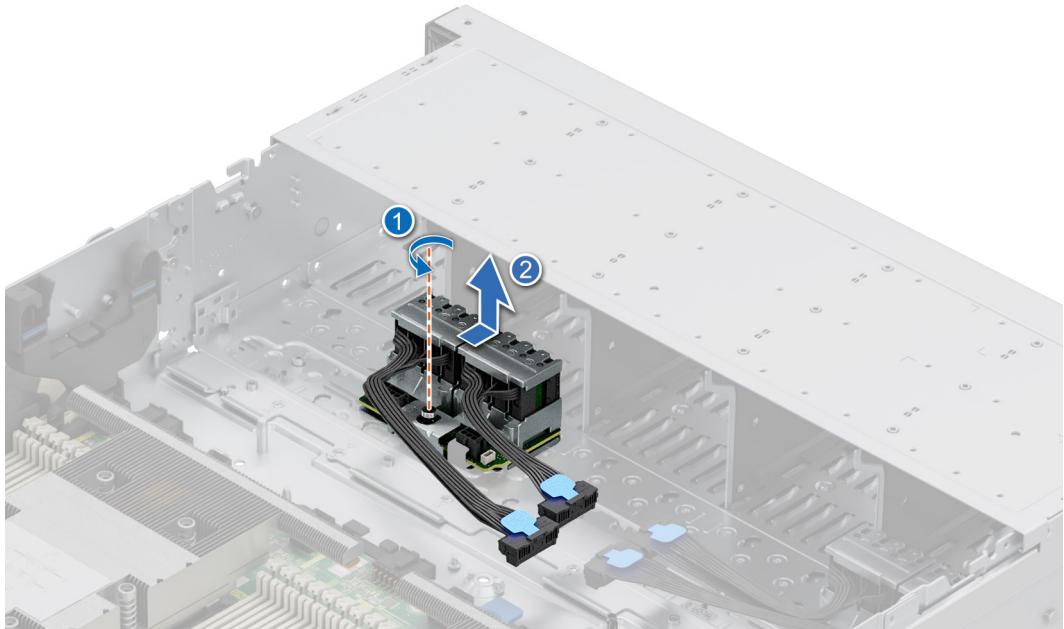


Figure 110. Removing the EDSFF E3.S backplane module

Next steps

1. Replace the EDSFF E3.S backplane module.

Installing the EDSFF E3.S backplane module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the backplane cover](#).
4. If required, [remove the air shroud](#) or [remove the GPU air shroud](#).
5. [Remove the cooling fan cage assembly](#).
6. [Remove the EDSFF E3.S PERC module](#).
7. [Remove the EDSFF E3.S drives](#).
8. Disconnect the cables, observe the cable routing.

(i) NOTE: See [cable routing](#) section for more information.

Steps

1. Align the guides on the EDSFF E3.S backplane module with the slots on the system.
2. Slide the EDSFF E3.S backplane module towards the rear of the system, until it is firmly secured.
3. Using a Phillips #2 screwdriver, tighten the captive screw on the EDSFF E3.S backplane module.

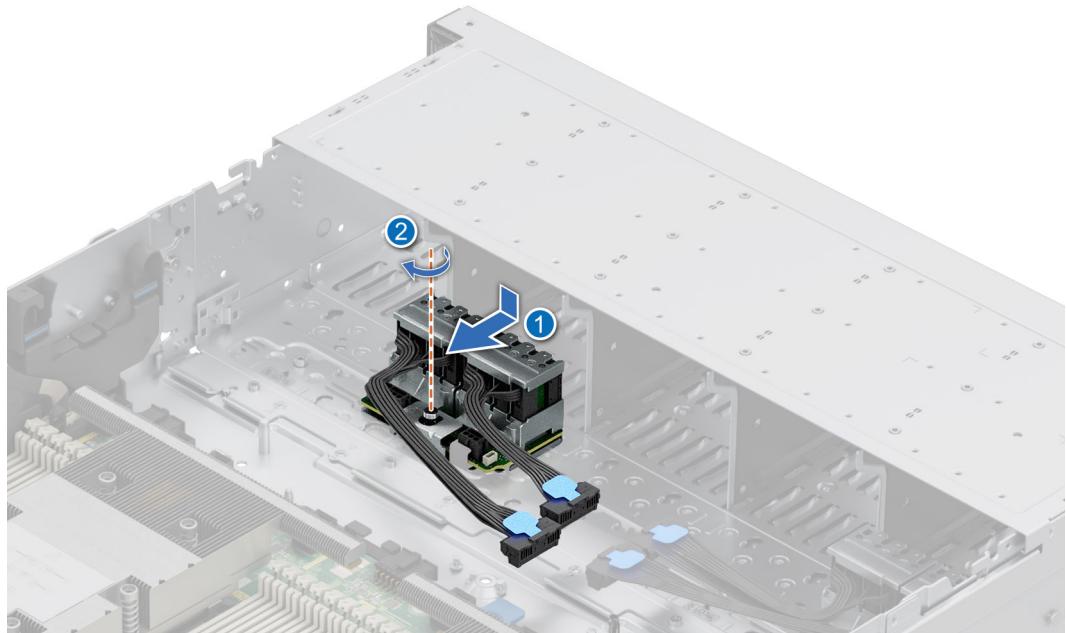


Figure 111. Installing the EDSFF E3.S backplane module

Next steps

1. Connect all the cables, observe the cable routing.
NOTE: See [cable routing](#) section for more information.
2. Install the EDSFF E3.S PERC module.
3. Install the cooling fan cage assembly.
4. If removed, [install the air shroud](#) or [install the GPU air shroud](#).
5. [Install the drive backplane cover](#).
6. [Install the EDSFF E3.S drives](#) .
7. Follow the procedure listed in [After working inside your system](#).

Cable routing

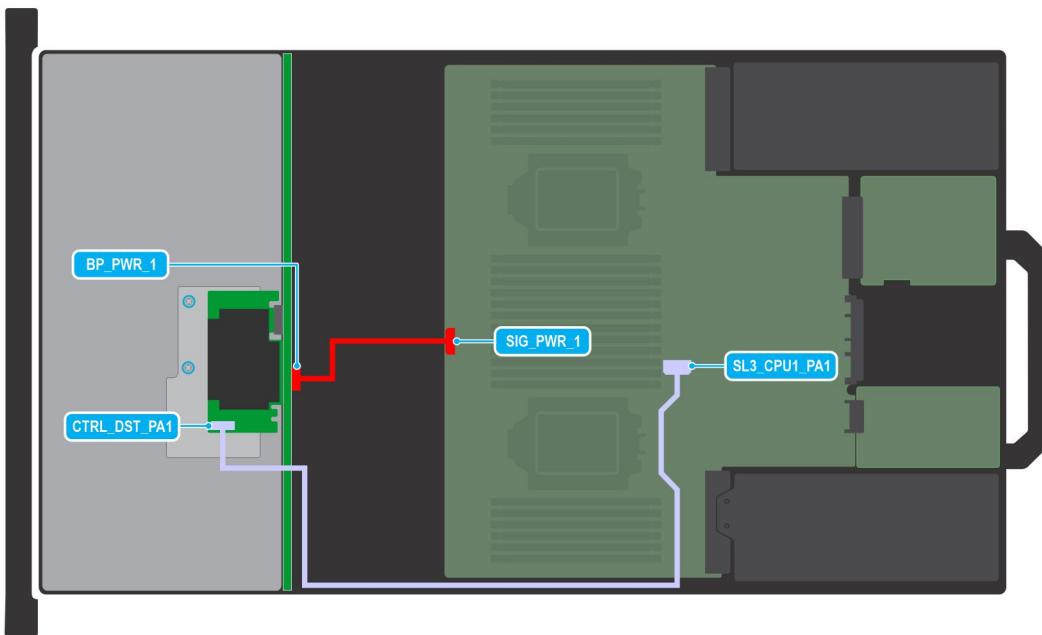


Figure 112. C-1: 8 x 3.5-inch SAS3/SATA RAID (w/ FPERC11)

i **NOTE:** Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 78. 8 x 3.5-inch SAS3/SATA RAID (w/ FPERC11)

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)

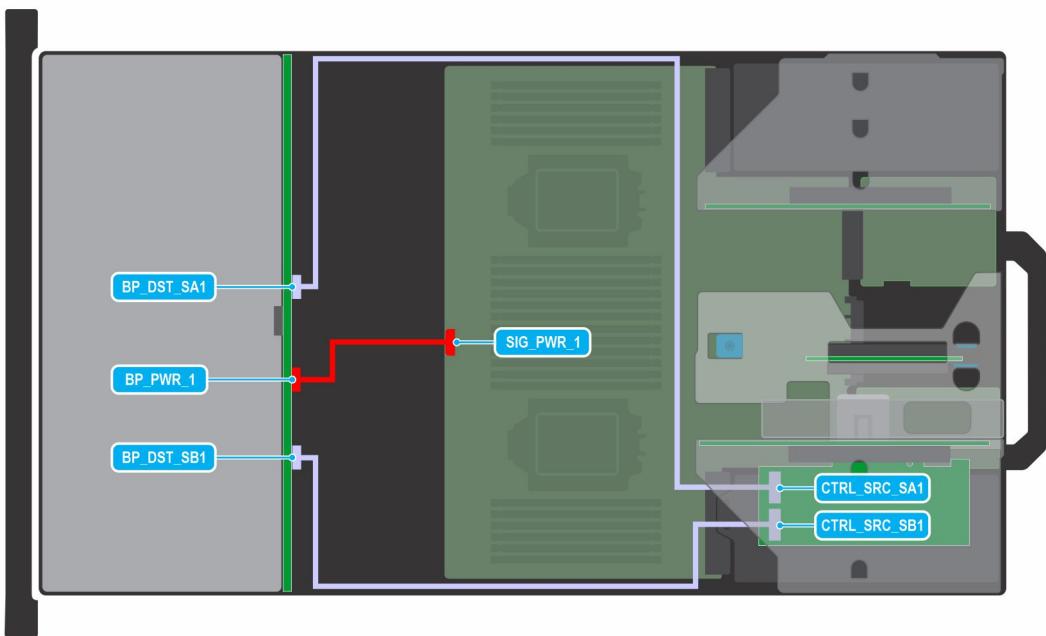


Figure 113. C2-1-R1: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R1)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 79. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R1)

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
3	CTRL_SRC_SB1 (adapter PERC controller connector)	BP_DST_SB1 (backplane signal connector)

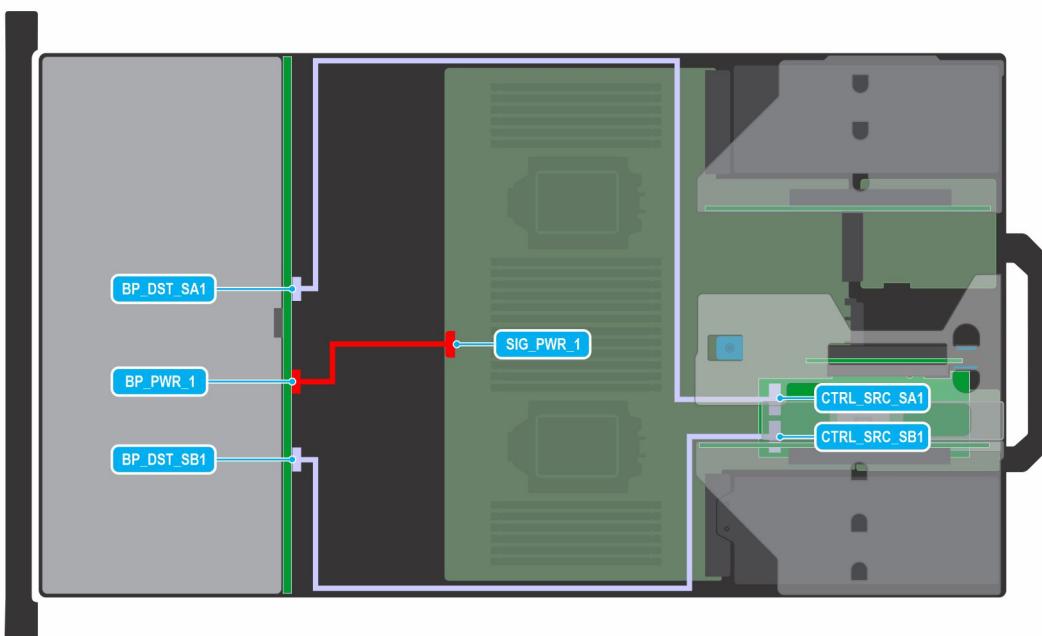


Figure 114. C2-1-R2: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R2)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 80. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R2)

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
3	CTRL_SRC_SB1 (adapter PERC controller connector)	BP_DST_SB1 (backplane signal connector)

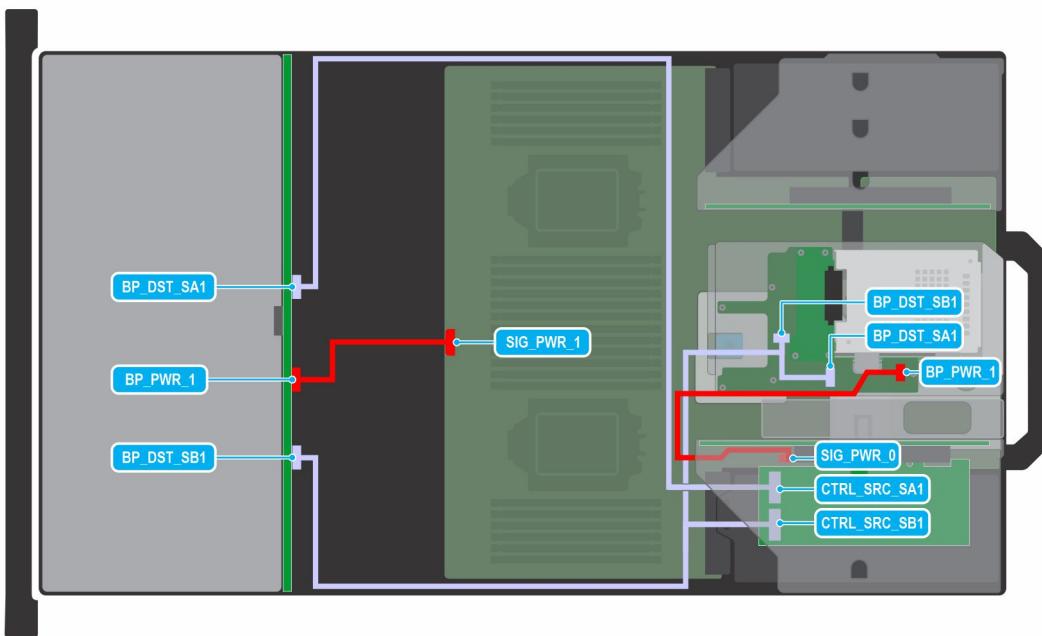


Figure 115. C2-2-R1: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R1) w/ Rear 2 x 2.5-inch

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 81. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R1) w/ Rear 2 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SB1 (adapter PERC controller connector) and BP_DST_SB1 (backplane signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)
3	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
4	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)

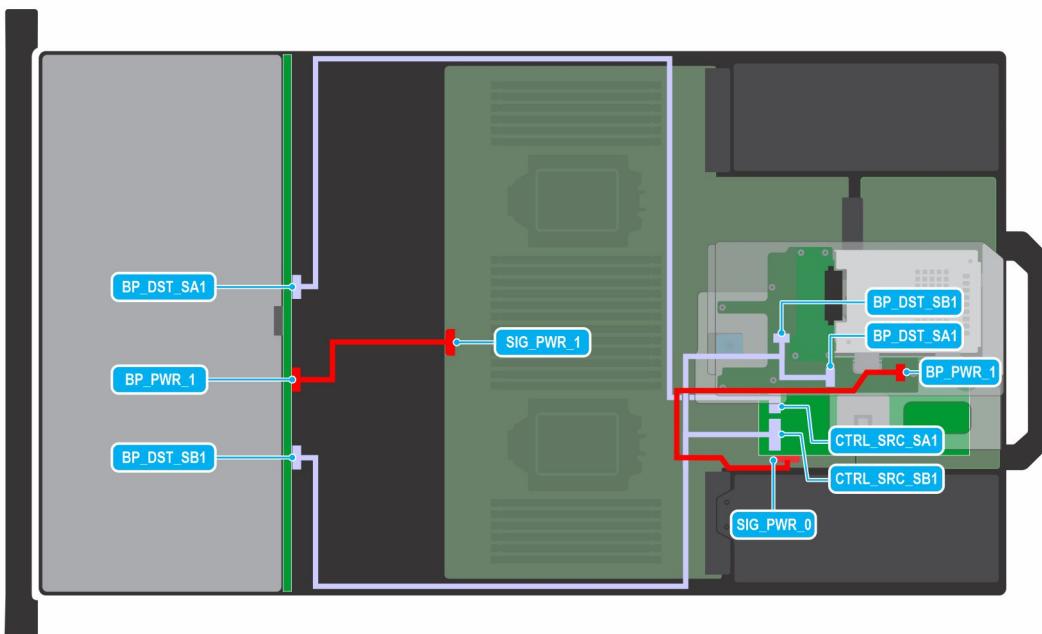


Figure 116. C2-2-R2: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R2) w/ Rear 2 x 2.5-inch

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 82. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R2) w/ Rear 2 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SB1 (adapter PERC controller connector) and BP_DST_SB1 (backplane signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)
3	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
4	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)

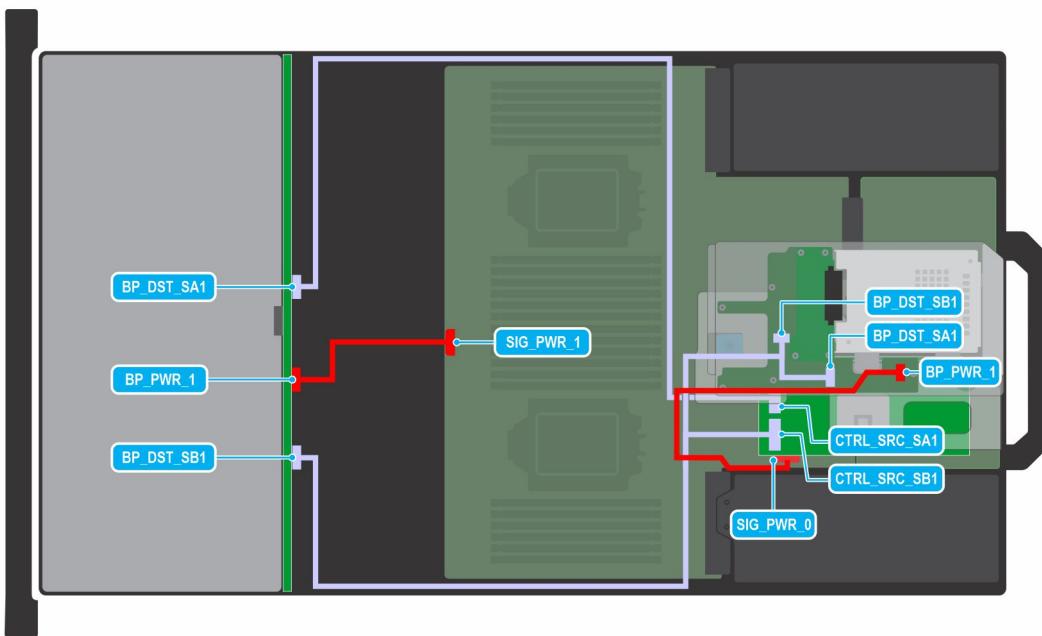


Figure 117. C2-3-R2: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC12_R2) w/ Rear 2 x 2.5-inch

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 83. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC12_R2) w/ Rear 2 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SB1 (adapter PERC controller connector) and BP_DST_SB1 (backplane signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)
3	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
4	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)

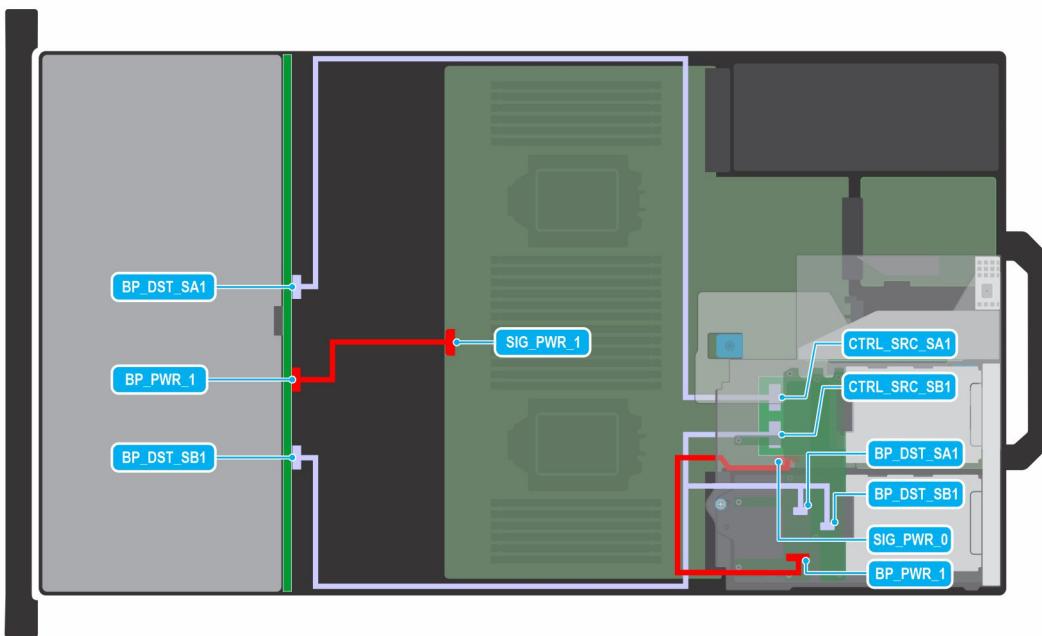


Figure 118. C2-4-R2: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R2) w/ Rear 4 x 2.5-inch

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 84. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R2) w/ Rear 4 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SB1 (adapter PERC controller connector) and BP_DST_SB1 (backplane signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)
3	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
4	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)

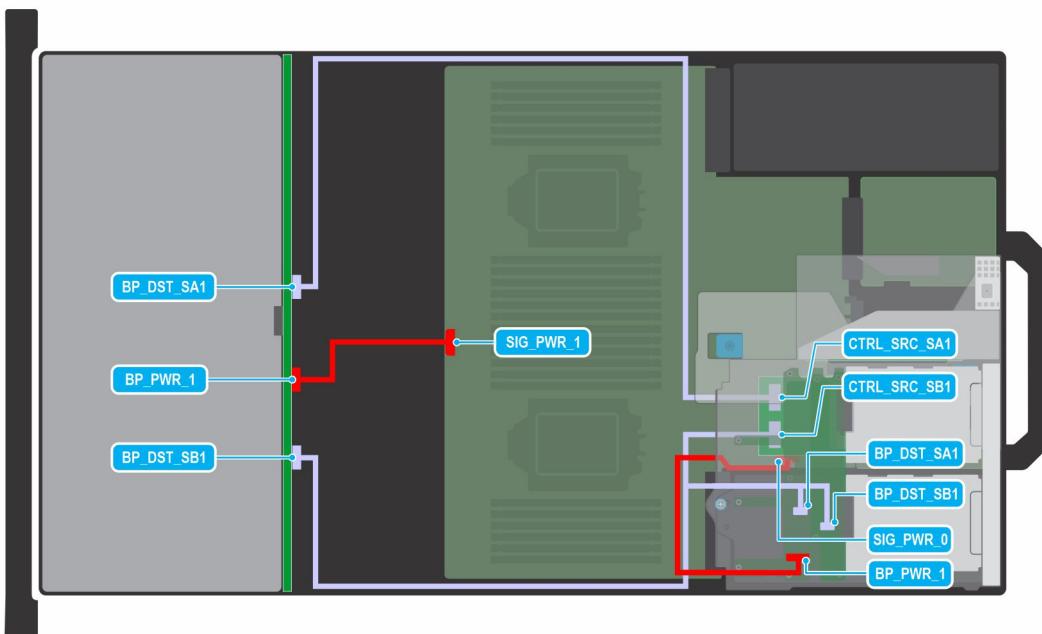


Figure 119. C2-5-R2: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC12_R2) w/ Rear 4 x 2.5-inch

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 85. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC12_R2) w/ Rear 4 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SB1 (adapter PERC controller connector) and BP_DST_SB1 (backplane signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)
3	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
4	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)

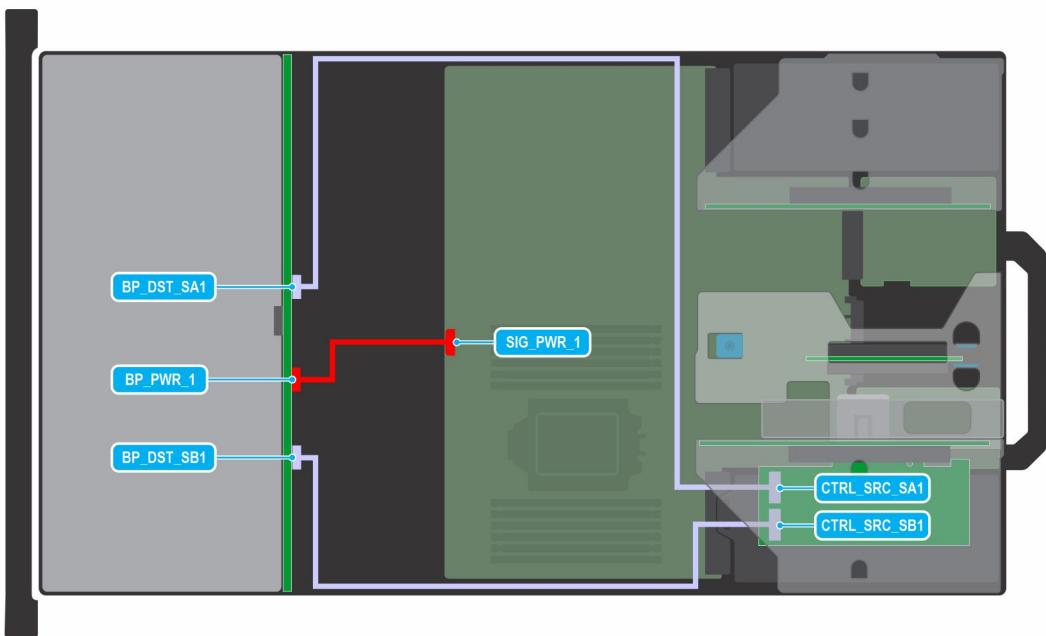


Figure 120. C2-7-R1: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R1) -1 CPU

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 86. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R1) -1 CPU

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
3	CTRL_SRC_SB1 (adapter PERC controller connector)	BP_DST_SB1 (backplane signal connector)

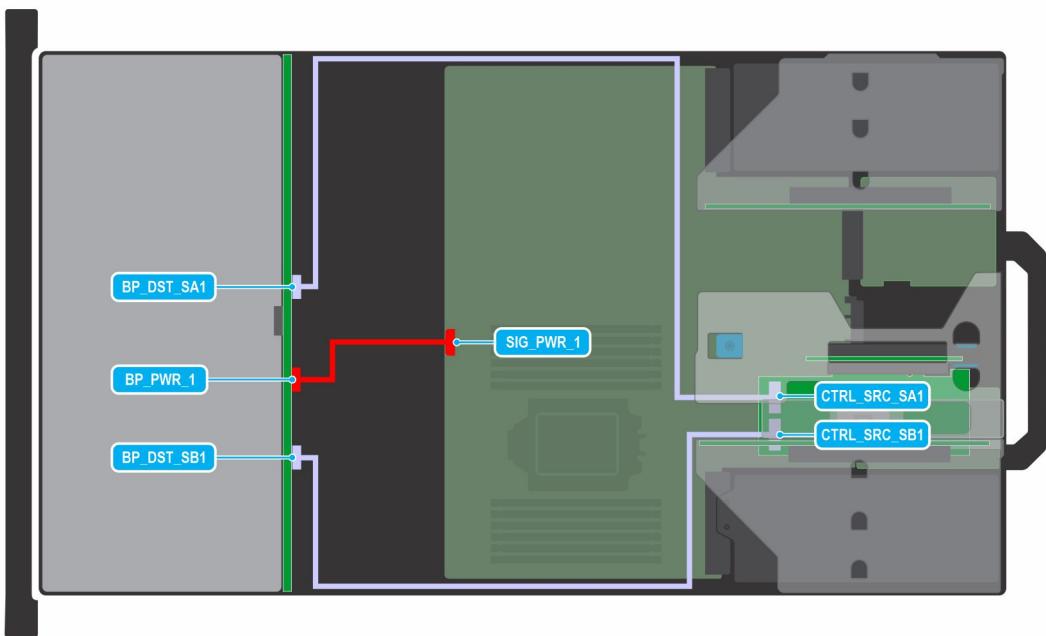


Figure 121. C2-7-R2: 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R2) - 1 CPU

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 87. 12 x 3.5-inch SAS3/SATA RAID (w/ APERC11_R2) - 1 CPU

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	CTRL_SRC_SA1 (adapter PERC controller connector)	BP_DST_SA1 (backplane signal connector)
3	CTRL_SRC_SB1 (adapter PERC controller connector)	BP_DST_SB1 (backplane signal connector)

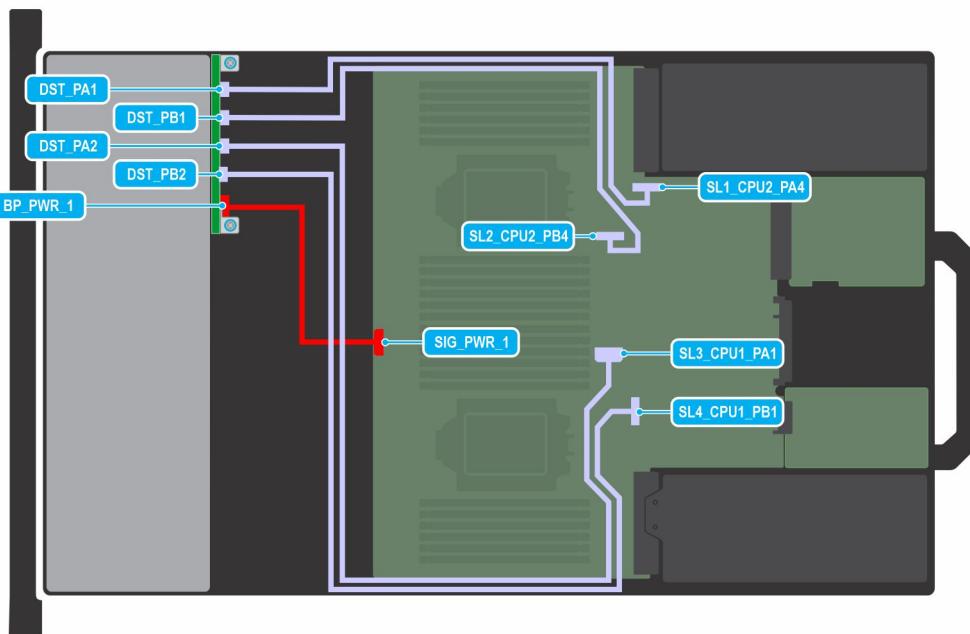


Figure 122. C3-1: 8 x U.2 G4

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 88. 8 x U.2 G4

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	DST_PA1 (backplane signal connector)
2	SL2_CPU2_PB4 (signal connector on system board)	DST_PB1 (backplane signal connector)
3	SL3_CPU1_PA1 (signal connector on system board) and SL4_CPU1_PB1 (signal connector on system board)	DST_PA2 (backplane signal connector) and DST_PB2 (backplane signal connector)
4	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)

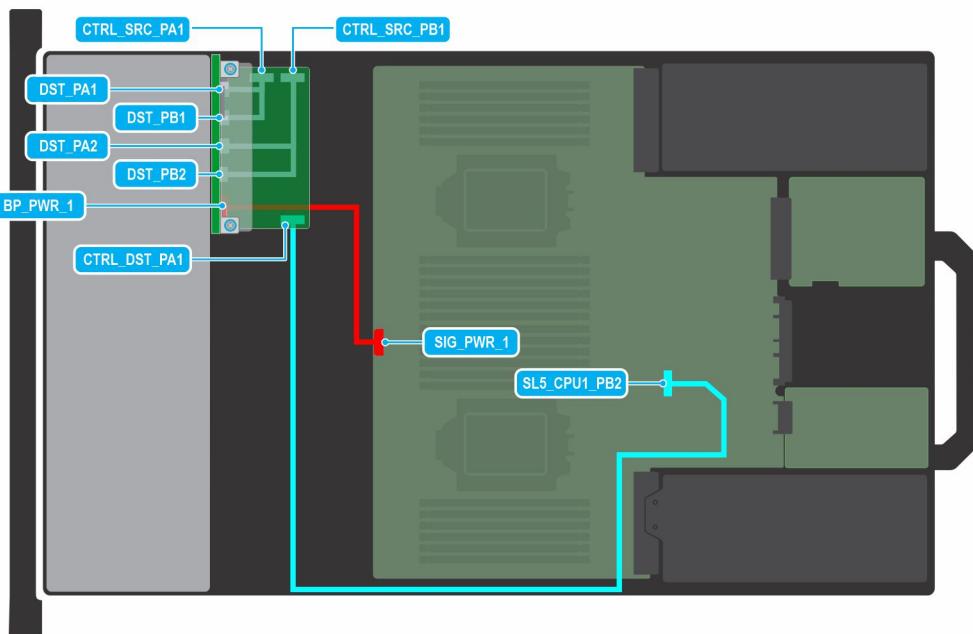


Figure 123. C3-2: 8 x U.2 G4 RAID (w/ fPERC11 N)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 89. 8 x U.2 G4 RAID (w/ fPERC11 N)

Order	From	To
1	SL5_CPU1_PB2 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
2	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
3	CTRL_SRC_PB1 (fPERC controller connector)	DST_PA2 (backplane signal connector) and DST_PB2 (backplane signal connector)
4	CTRL_SRC_PA1 (fPERC controller connector)	DST_PA1 (backplane signal connector) and DST_PB1 (backplane signal connector)

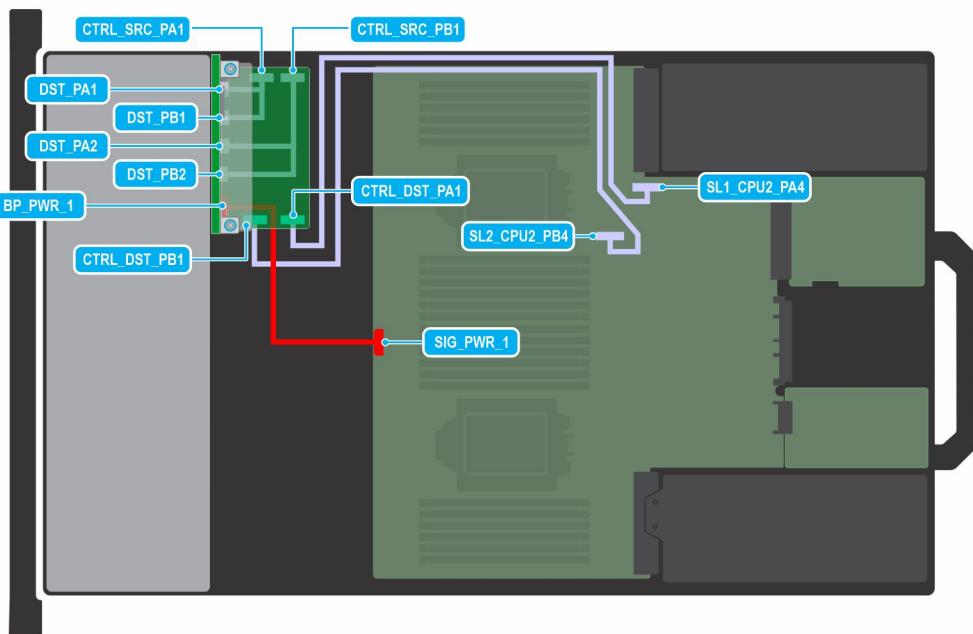


Figure 124. C3-3: 8 x U.2 G4 RAID (w/ FPERC12)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 90. 8 x U.2 G4 RAID (w/ FPERC12)

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
2	SL2_CPU2_PB4 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
3	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
4	CTRL_SRC_PB1 (fPERC controller connector)	DST_PA2 (backplane signal connector) and DST_PB2 (backplane signal connector)
5	CTRL_SRC_PA1 (fPERC controller connector)	DST_PA1 (backplane signal connector) and DST_PB1 (backplane signal connector)

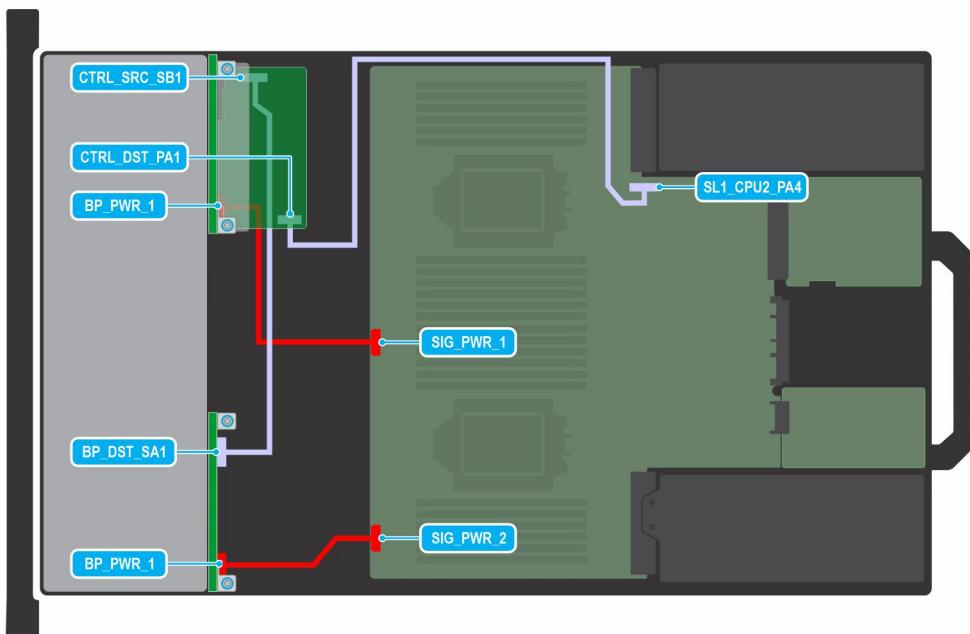


Figure 125. C4-1: 16 x 2.5-inch SAS4/SATA RAID-SmartFlow (w/ FPERC11)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 91. 16 x 2.5-inch SAS4/SATA RAID-SmartFlow (w/ FPERC11)

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
2	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
3	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SA1 (backplane signal connector)
4	SIG_PWR_2 (system board power connector)	BP_PWR_1 (backplane power connector)

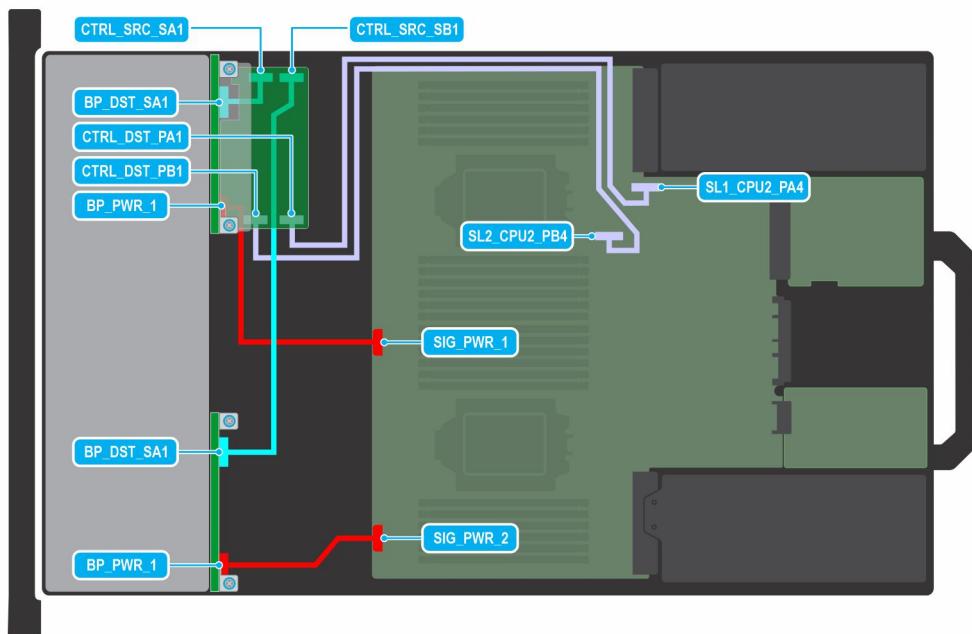


Figure 126. C4-2: 16 x 2.5-inch SAS4/SATA RAID-SmartFlow (w/ FPERC12)

Table 92. 16 x 2.5-inch SAS4/SATA RAID-SmartFlow (w/ FPERC12)

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
2	SL2_CPU2_PB4 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
3	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
4	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane signal connector)
5	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SA1 (backplane signal connector)
6	SIG_PWR_2 (system board power connector)	BP_PWR_1 (backplane power connector)

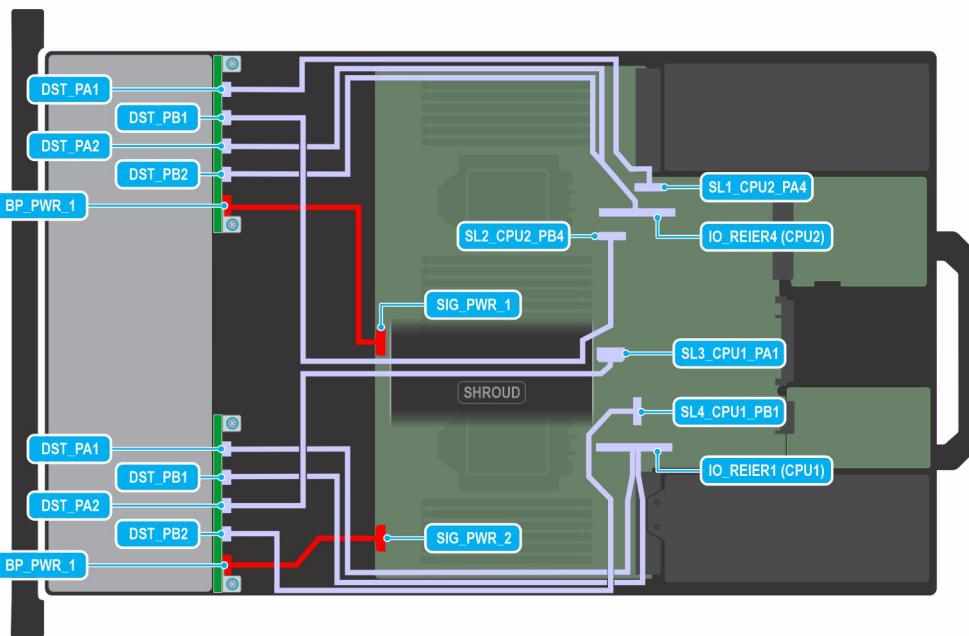


Figure 127. C5-1: 16 x U.2 G4 SmartFlow

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 93. 16 x U.2 G4 SmartFlow

Order	From	To
1	IO_RISER4(CPU2) (Riser 4 connector on system board)	DST_PA2 (backplane signal connector) and DST_PB2 (backplane signal connector)
2	SL1_CPU2_PA4 (signal connector on system board)	DST_PA1 (backplane signal connector)
3	SL2_CPU2_PB4 (signal connector on system board)	DST_PB1 (backplane signal connector)
4	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
5	SL3_CPU1_PA1 (signal connector on system board)	DST_PA2 (backplane signal connector)
6	SL4_CPU1_PB1 (signal connector on system board)	DST_PB2 (backplane signal connector)
7	SIG_PWR_2 (system board power connector)	BP_PWR_1 (backplane power connector)
8	IO_RISER1(CPU1) (Riser 1 connector on system board)	DST_PA6 (backplane signal connector) and DST_PB6 (backplane signal connector)

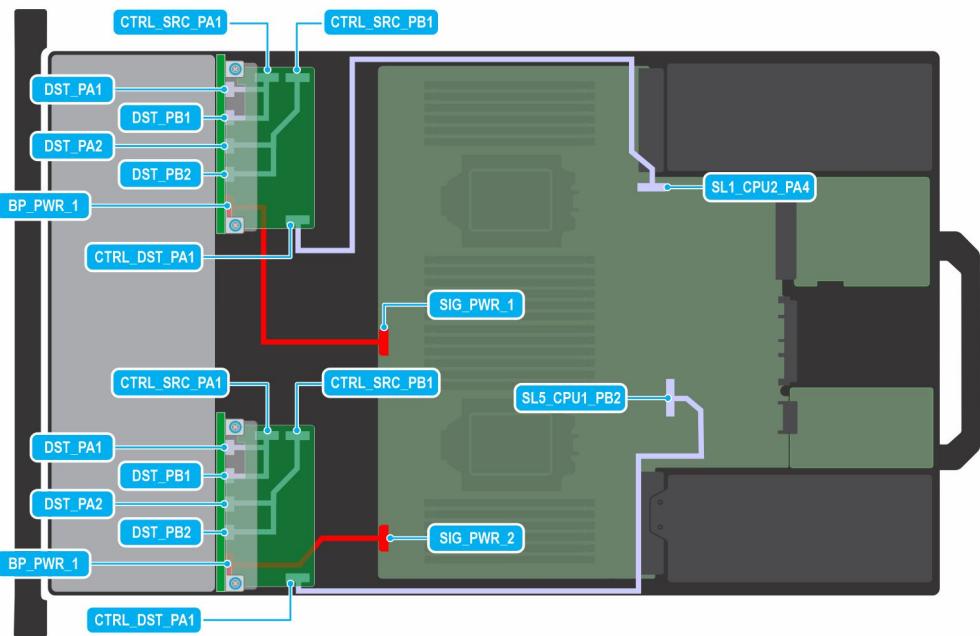


Figure 128. C5-2: 16 x U.2 G4 RAID SmartFlow (Two PERCs) (w/ FPERC11 N)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 94. 16 x U.2 G4 RAID SmartFlow (Two PERCs) (w/ FPERC11 N)

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL1_CPU2_PA4 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	SL5_CPU1_PB2 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
4	SIG_PWR_2 (system board power connector)	BP_PWR_1 (backplane power connector)
5	CTRL_SRC_PB1 (fPERC controller connector)	DST_PA2 (backplane signal connector) and DST_PB2 (backplane signal connector)
6	CTRL_SRC_PA1 (fPERC controller connector)	DST_PA1 (backplane signal connector) and DST_PB1 (backplane signal connector)

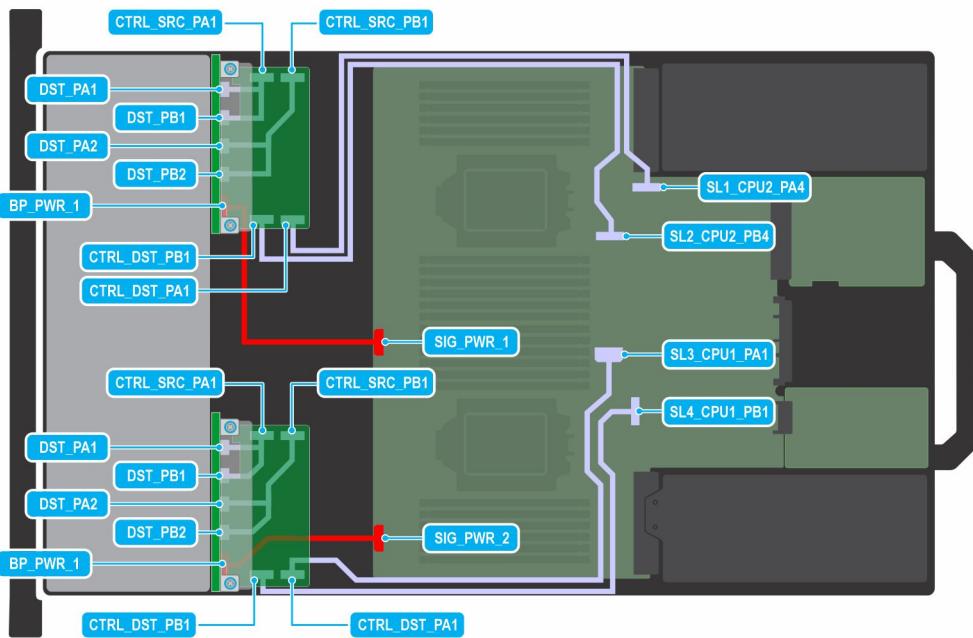


Figure 129. C5-3: 16 x U.2 G4 RAID SmartFlow (Two PERCs) (w/ FPERC12)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 95. 16 x U.2 G4 RAID SmartFlow (Two PERCs) (w/ FPERC12)

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL1_CPU2_PA4 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	SL2_CPU2_PB4 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
4	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)
5	CTRL_SRC_PB1 (fPERC controller connector)	DST_PA2 (backplane signal connector) and DST_PB2 (backplane signal connector)
6	CTRL_SRC_PA1 (fPERC controller connector)	DST_PA1 (backplane signal connector) and DST_PB1 (backplane signal connector)
7	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
8	SL4_CPU1_PB1 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)

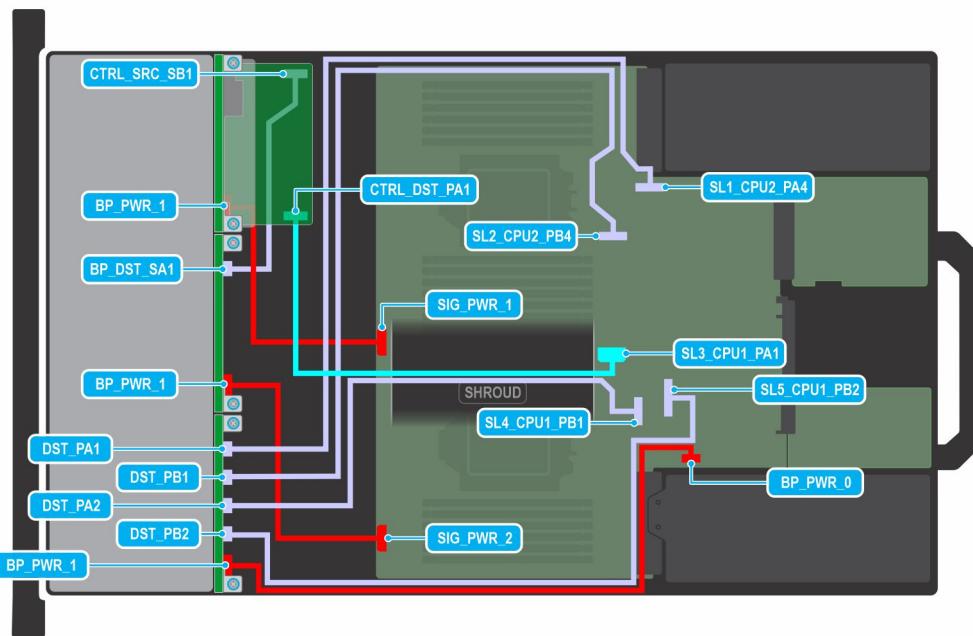


Figure 130. C6-1: 16 x 2.5-inch SAS4/SATA RAID + 8 x U.2 G4 (w/ FPERC11)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 96. 16 x 2.5-inch SAS4/SATA RAID + 8 x U.2 G4 (w/ FPERC11)

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	DST_PA1 (backplane signal connector)
2	SL2_CPU2_PB4 (signal connector on system board)	DST_PB1 (backplane signal connector)
3	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
4	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
5	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
6	SIG_PWR_2 (system board power connector)	BP_PWR_1 (backplane power connector)
7	SL4_CPU1_PB1 (signal connector on system board)	DST_PA2 (backplane signal connector)
8	SL5_CPU1_PB2 (signal connector on system board)	DST_PB2 (backplane signal connector)
9	BP_PWR_0 (rear backplane power connector)	BP_PWR_1 (backplane power connector)

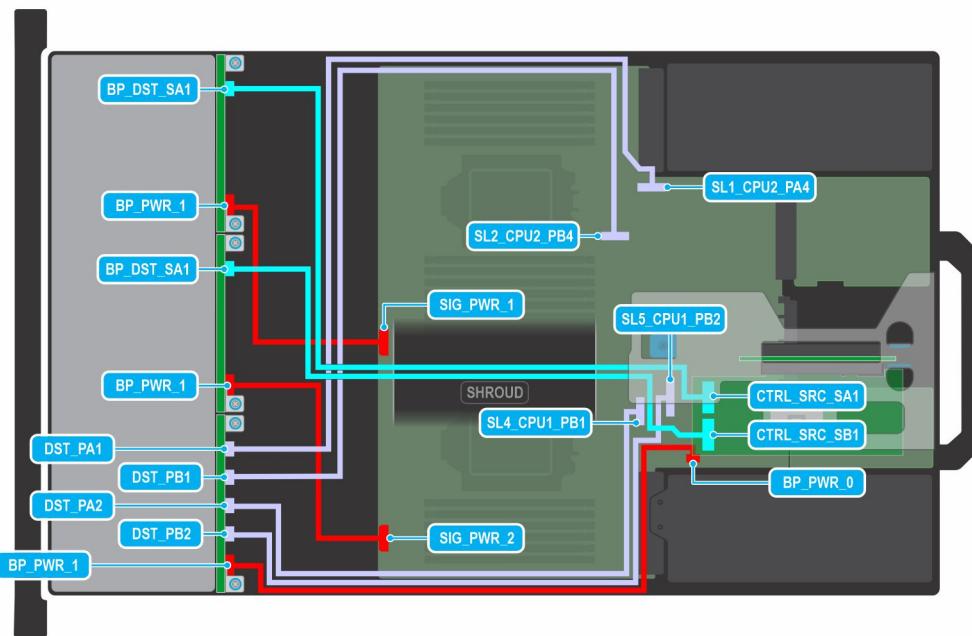


Figure 131. C6-2: 16 x 2.5-inch SAS4/SATA RAID + 8 x U.2 G4 (w/ APERC12)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 97. 16 x 2.5-inch SAS4/SATA RAID + 8 x U.2 G4 (w/ APERC12)

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	DST_PA1 (backplane signal connector)
2	SL2_CPU2_PB4 (signal connector on system board)	DST_PB1 (backplane signal connector)
3	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
4	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane signal connector)
5	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SA1 (backplane signal connector)
6	SIG_PWR_2 (system board power connector)	BP_PWR_1 (backplane power connector)
7	SL4_CPU1_PB1 (signal connector on system board)	DST_PA2 (backplane signal connector)
8	SL5_CPU1_PB2 (signal connector on system board)	DST_PB2 (backplane signal connector)
9	BP_PWR_0 (rear backplane power connector)	BP_PWR_1 (backplane power connector)

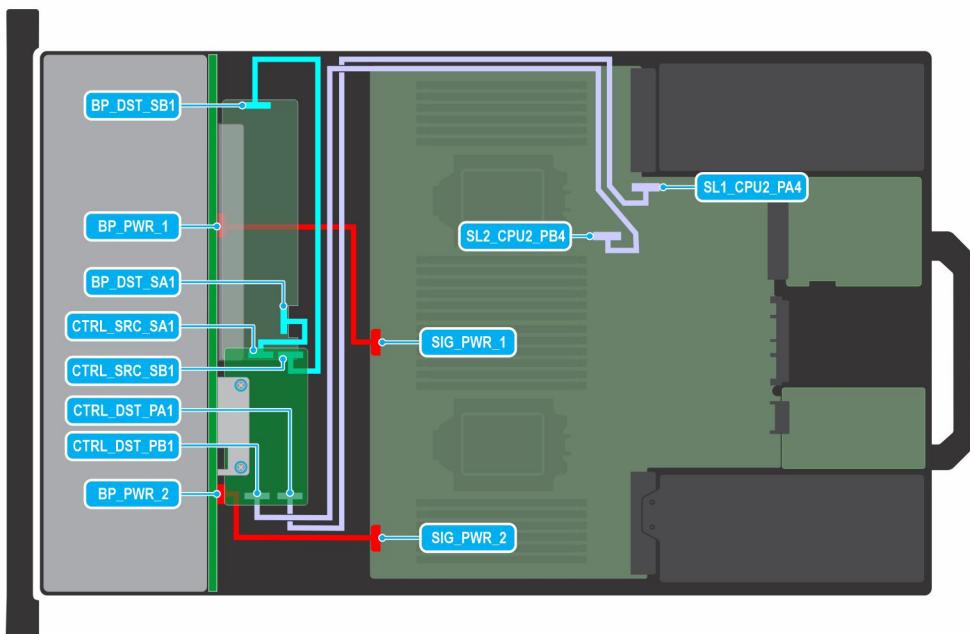


Figure 132. C7-2: 24 x 2.5-inch SAS4/SATA (w/ FPERC12)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 98. 24 x 2.5-inch SAS4/SATA (w/ FPERC12)

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
2	SL2_CPU2_PB4 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
3	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
4	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane expander signal connector)
5	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
6	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)

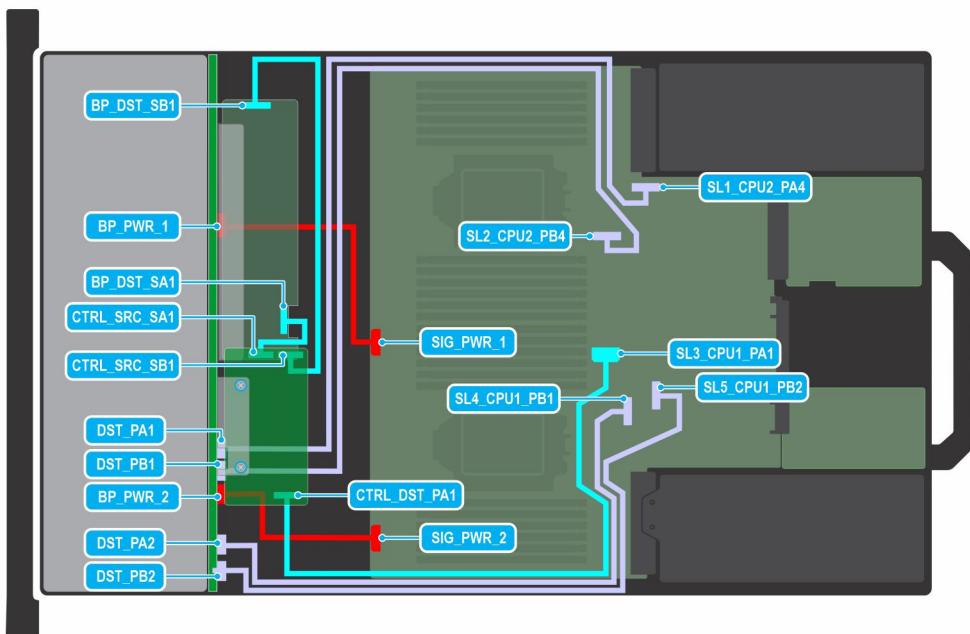


Figure 133. C7-3: 24 x 2.5-inch SAS4/SATA w/ 8 x Uni (w/ FPERC11)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 99. 24 x 2.5-inch SAS4/SATA w/ 8 x Uni (w/ FPERC11)

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	DST_PA1 (backplane signal connector)
2	SL2_CPU2_PB4 (signal connector on system board)	DST_PB1 (backplane signal connector)
3	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
4	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
5	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane expander signal connector)
6	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
7	SL4_CPU1_PB1 (signal connector on system board)	DST_PA2 (backplane signal connector)
8	SL5_CPU1_PB2 (signal connector on system board)	DST_PB2 (backplane signal connector)
9	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)

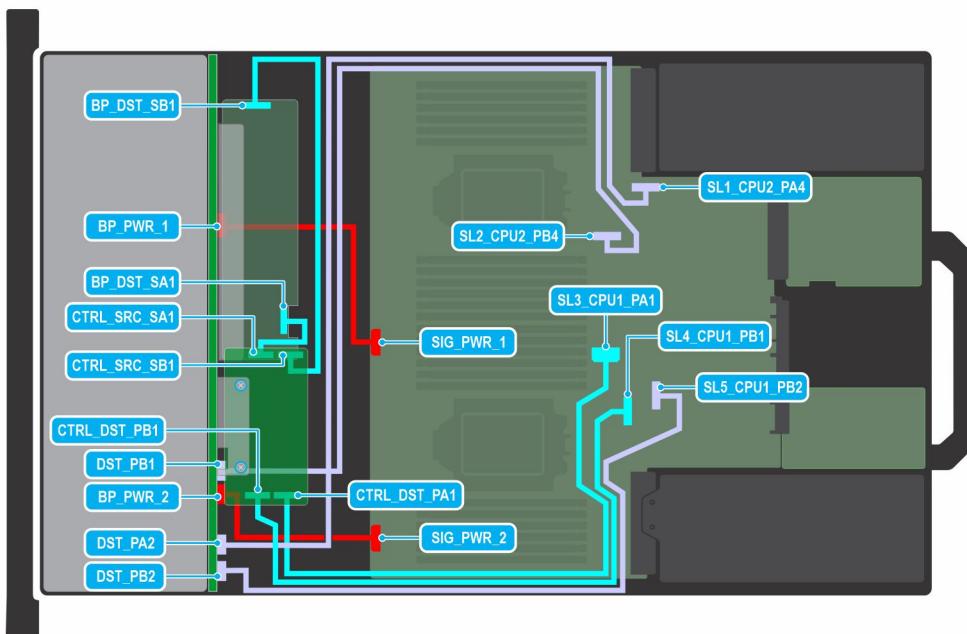


Figure 134. C7-4: 24 x 2.5-inch SAS4/SATA w/ 6 x Uni (w/ FPERC12)

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 100. 24 x 2.5-inch SAS4/SATA w/ 6 x Uni (w/ FPERC12)

Order	From	To
1	SL1_CPU2_PA4 (signal connector on system board)	DST_PA2 (backplane signal connector)
2	SL2_CPU2_PB4 (signal connector on system board)	DST_PB1 (backplane signal connector)
3	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
4	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane signal connector)
5	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane signal connector)
6	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
7	SL4_CPU1_PB1 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
8	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)
9	SL5_CPU1_PB2 (signal connector on system board)	DST_PB2 (backplane signal connector)

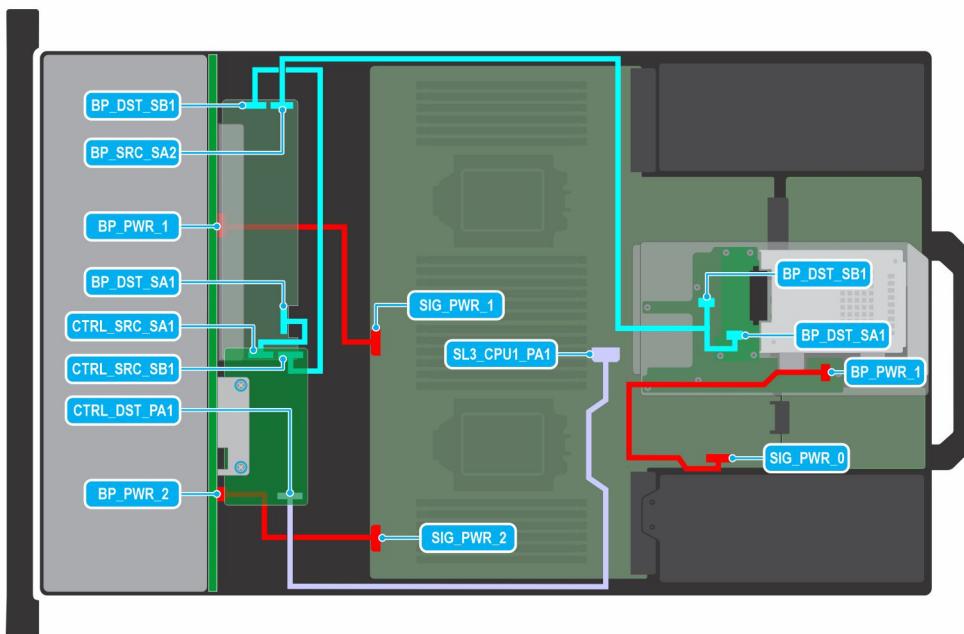


Figure 135. C7-5: 24 x 2.5-inch SAS4/SATA (w/ FPERC11) w/ 2 x 2.5-inch

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 101. 24 x 2.5-inch SAS4/SATA (w/ FPERC11) w/ 2 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane expander signal connector)
4	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
5	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)
6	BP_SRC_SA2 (backplane expander signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)
7	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)

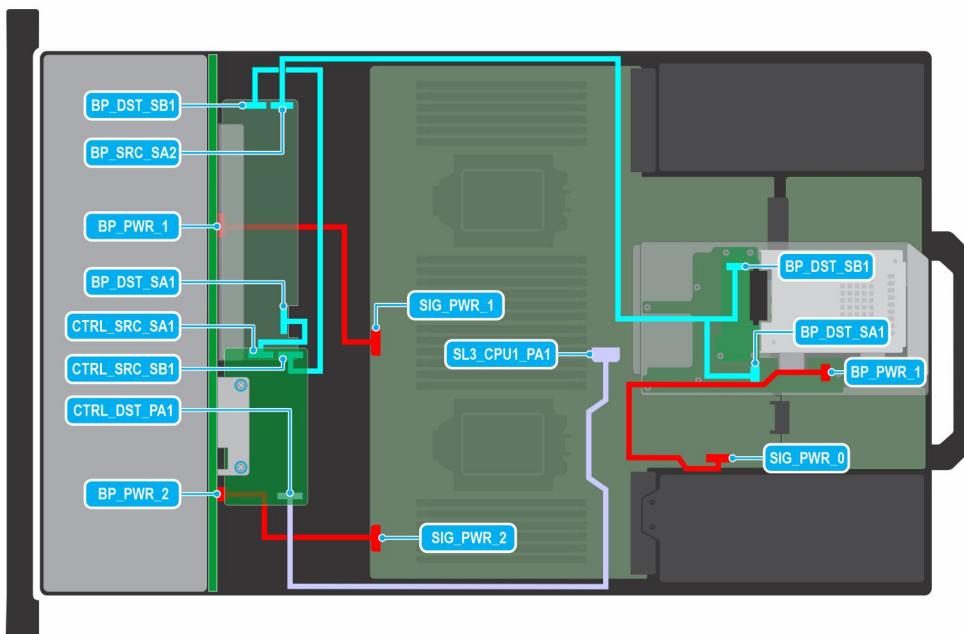


Figure 136. C7-6: 24 x 2.5-inch SAS4/SATA (w/ FPERC12) w/ 2 x 2.5-inch

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 102. 24 x 2.5-inch SAS4/SATA (w/ FPERC12) w/ 2 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	SL4_CPU1_PB1 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
4	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane expander signal connector)
5	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
6	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)
7	BP_SRC_SA2 (backplane expander signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)
8	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)

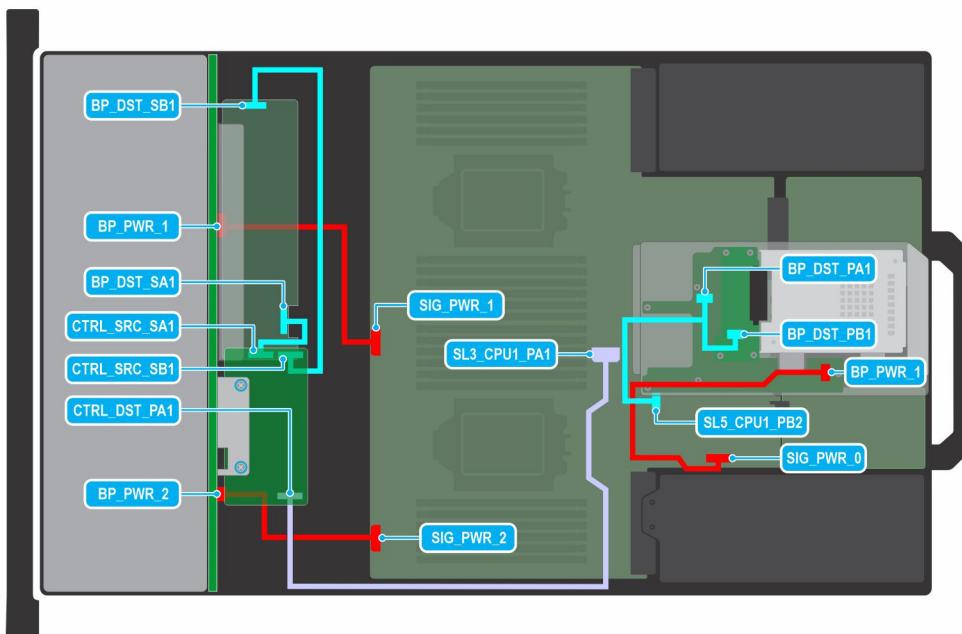


Figure 137. C7-7: 24 x 2.5-inch SAS4/SATA (w/ FPERC11) w/ 2 x U.2

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 103. 24 x 2.5-inch SAS4/SATA (w/ FPERC11) w/ 2 x U.2

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane expander signal connector)
4	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
5	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)
6	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)
7	SL5_CPU1_PB2 (signal connector on system board)	BP_DST_PA1 (rear backplane signal connector) and BP_DST_PB1 (rear backplane signal connector)

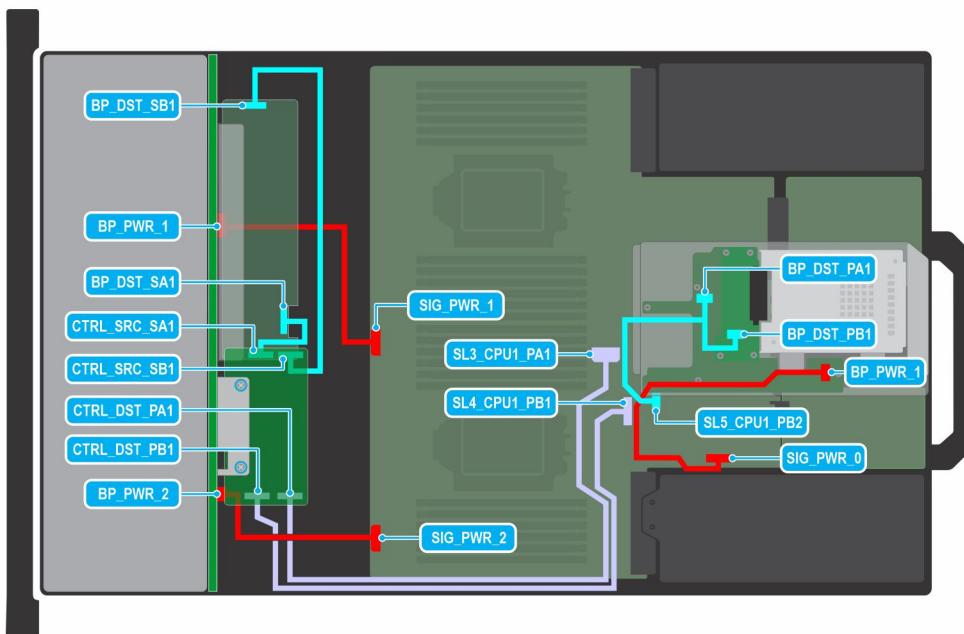


Figure 138. C7-8: 24 x 2.5-inch SAS4/SATA (w/ FPERC12) w/ 2 x U.2

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 104. 24 x 2.5-inch SAS4/SATA (w/ FPERC11) w/ 2 x U.2

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	SL4_CPU1_PB1 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
4	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane expander signal connector)
5	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
6	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)
7	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)
8	SL5_CPU1_PB2 (signal connector on system board)	BP_DST_PA1 (rear backplane signal connector) and BP_DST_PB1 (rear backplane signal connector)

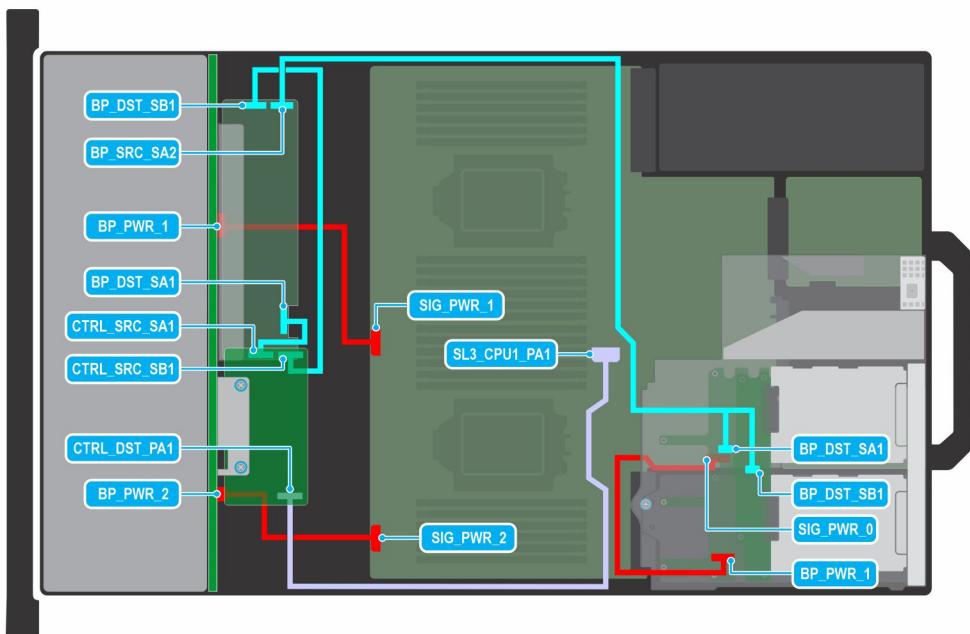


Figure 139. C7-9: 24 x 2.5-inch SAS4/SATA (w/ FPERC11) w/ 4 x 2.5-inch

(i) NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 105. 24 x 2.5-inch SAS4/SATA (w/ FPERC11) w/ 4 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane expander signal connector)
4	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
5	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)
6	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)
7	BP_SRC_SA2 (backplane expander signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)

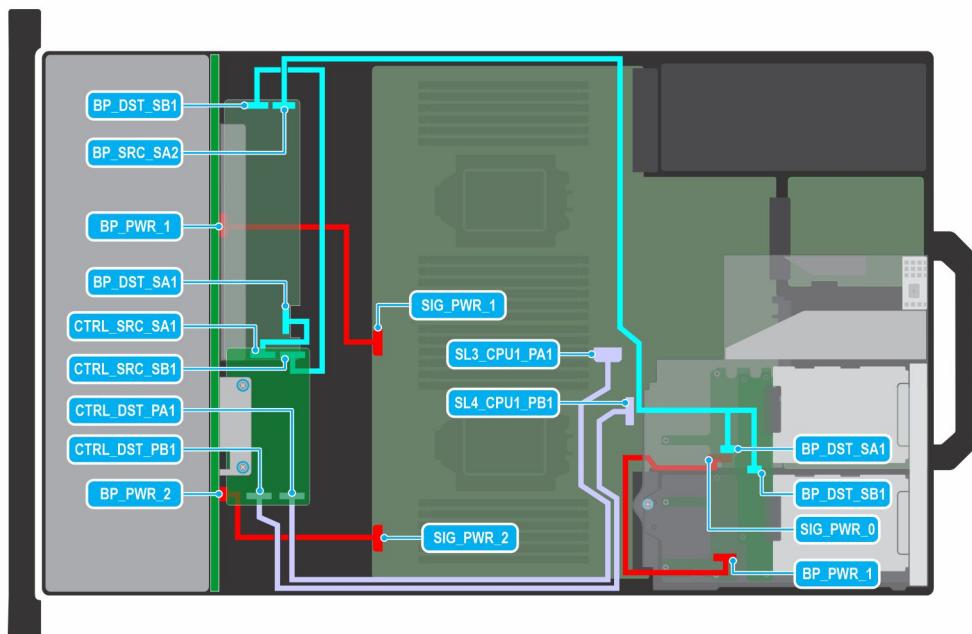


Figure 140. C7-10: 24 x 2.5-inch SAS4/SATA (w/ FPERC12) w/ 4 x 2.5-inch

NOTE: Follow the sequential order as shown in the table to remove the cables, to install the cables follow the reverse sequential order.

Table 106. 24 x 2.5-inch SAS4/SATA (w/ FPERC12) w/ 4 x 2.5-inch

Order	From	To
1	SIG_PWR_1 (system board power connector)	BP_PWR_1 (backplane power connector)
2	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	SL4_CPU1_PB1 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
4	CTRL_SRC_SB1 (fPERC controller connector)	BP_DST_SB1 (backplane expander signal connector)
5	CTRL_SRC_SA1 (fPERC controller connector)	BP_DST_SA1 (backplane expander signal connector)
6	SIG_PWR_2 (system board power connector)	BP_PWR_2 (backplane power connector)
7	SIG_PWR_0 (system board power connector)	BP_PWR_1 (rear backplane power connector)
8	BP_SRC_SA2 (backplane expander signal connector)	BP_DST_SA1 (rear backplane signal connector) and BP_DST_SB1 (rear backplane signal connector)

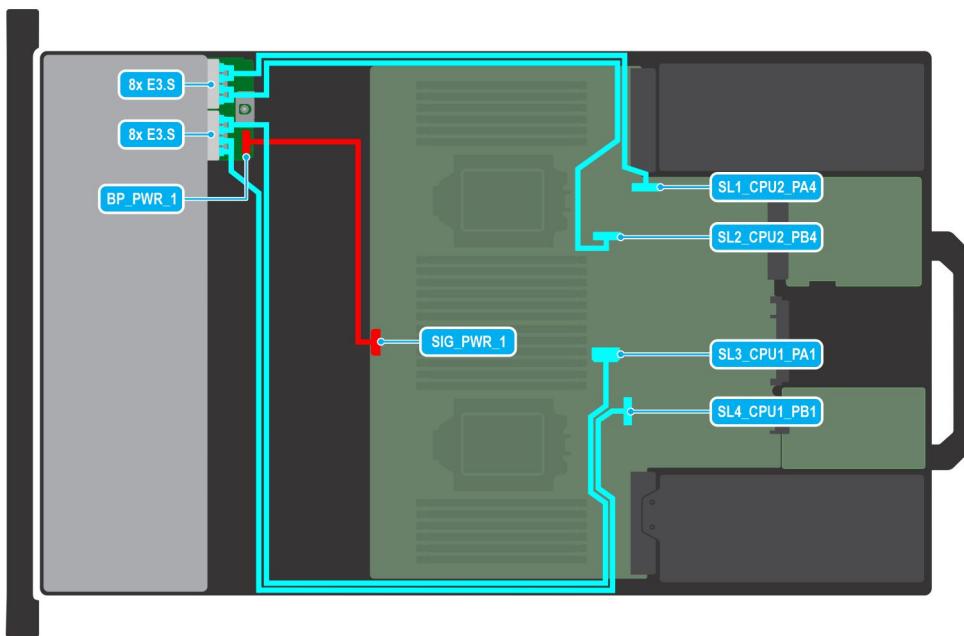


Figure 141. 8 x EDSFF E3.S

Table 107. 8 x EDSFF E3.S

Order	From	To
1	SIG_PWR_1 (system board power connectors)	BP_PWR_1 (backplane power connector)
2	SL1_CPU2_PA4 (signal connector on system board)	8 x E3.S (backplane signal connectors)
3	SL2_CPU2_PB4 (signal connector on system board)	8 x E3.S (backplane signal connectors)
4	SL3_CPU1_PA1 (signal connector on system board)	8 x E3.S (backplane signal connectors)
5	SL4_CPU1_PB1 (signal connector on system board)	8 x E3.S (backplane signal connectors)
6	BP_PWR_CTRL (backplane power control)	POWER connector

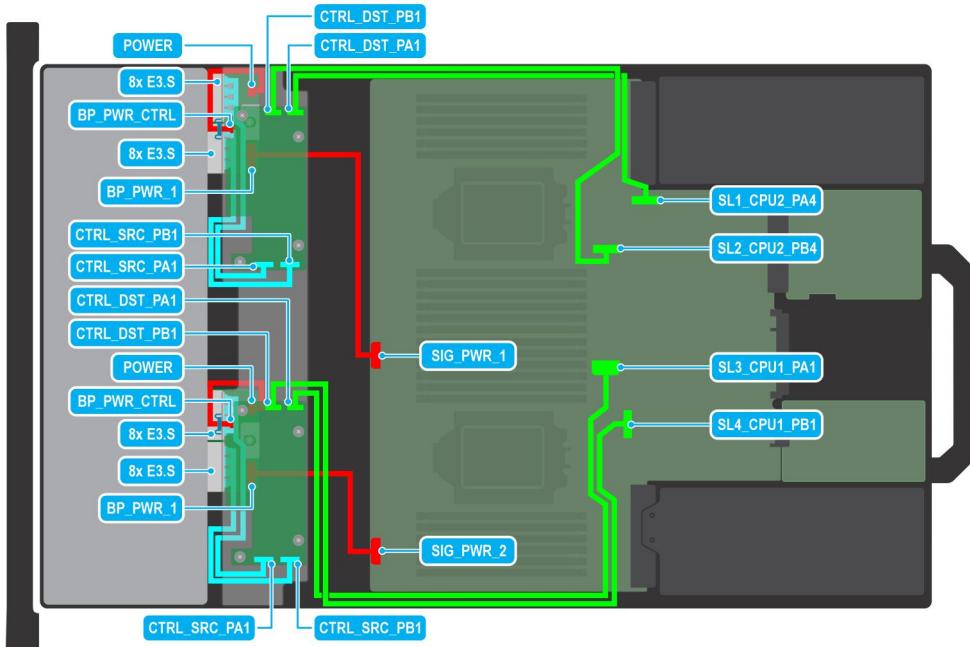


Figure 142. 16 x EDSFF E3.S G5 with dual RAID fPERC 12

Table 108. 16 x EDSFF E3.S G5x2 with dual RAID fPERC 12

Order	From	To
1	SIG_PWR_1 and SIG_PWR_2 (system board power connectors)	BP_PWR_1 (backplane power connectors)
2	SL1_CPU2_PA4 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	SL2_CPU2_PB4 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
4	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
5	SL4_CPU1_PB1 (signal connector on system board)	CTRL_DST_PB1 (fPERC input connector)
6	CTRL_SRC_PB1 (fPERC controller connector)	8 x E3.S (backplane signal connectors)
7	CTRL_SRC_PA1 (fPERC controller connector)	8 x E3.S (backplane signal connectors)

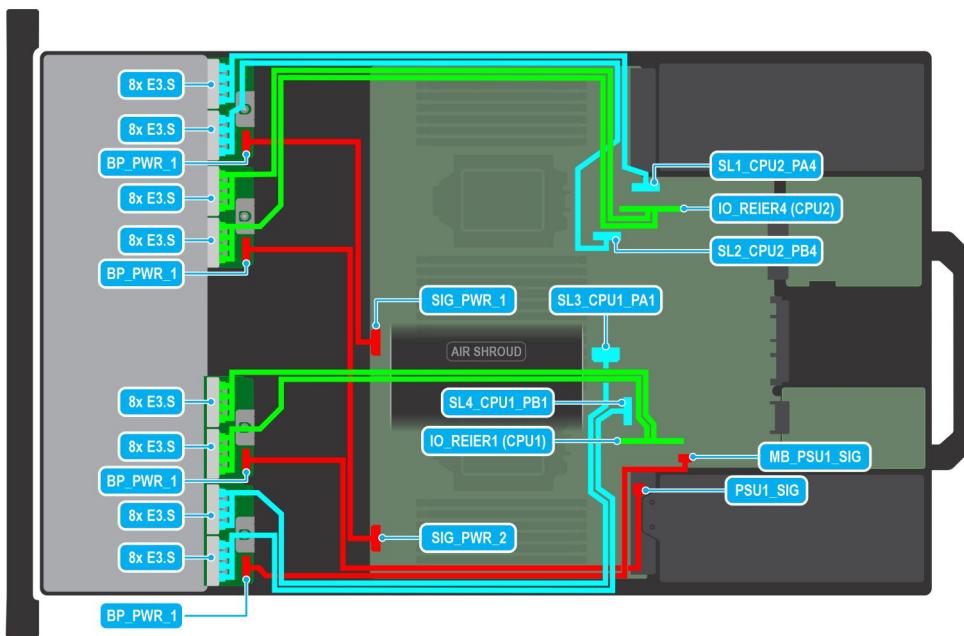


Figure 143. 32 x EDSFF E3.S G5

Table 109. 32 x EDSFF E3.S G5

Order	From	To
1	SIG_PWR_1 and SIG_PWR_2 (system board power connectors)	BP_PWR_1 (backplane power connectors)
2	SL1_CPU2_PA4 (signal connector on system board)	8 x E3.S (backplane signal connectors)
3	SL2_CPU2_PB4 (signal connector on system board)	8 x E3.S (backplane signal connectors)
4	SL3_CPU1_PA1 (signal connector on system board)	8 x E3.S (backplane signal connectors)
5	SL4_CPU1_PB1 (signal connector on system board)	8 x E3.S (backplane signal connectors)
6	IO_REIER1 (CPU1)	8 x E3.S (backplane signal connectors)
7	IO_REIER4 (CPU2)	8 x E3.S (backplane signal connectors)
8	MB_PSU1_SIG	BP_PWR_1 (backplane power connectors)
9	BP_PWR_CTRL (backplane power control)	POWER connector

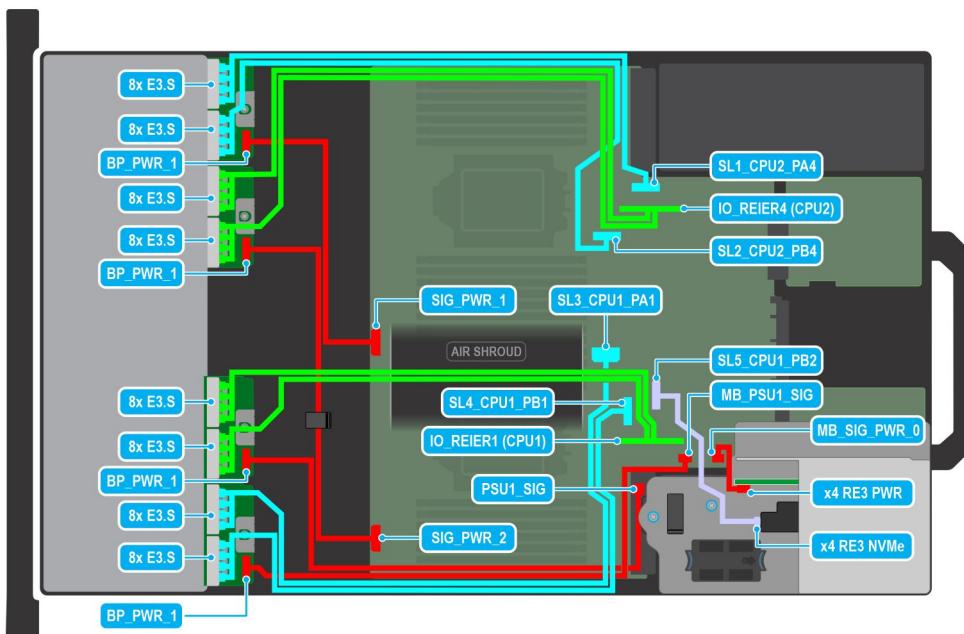


Figure 144. 32 x E3.S with rear 4 x E3.S

Table 110. 32 x E3.S with rear 4 x E3.S

Order	From	To
1	SIG_PWR_1 and SIG_PWR_2 (system board power connectors)	BP_PWR_1 (backplane power connectors)
2	SL1_CPU2_PA4 (signal connector on system board)	8 x E3.S (backplane signal connectors)
3	SL2_CPU2_PB4 (signal connector on system board)	8 x E3.S (backplane signal connectors)
4	SL3_CPU1_PA1 (signal connector on system board)	8 x E3.S (backplane signal connectors)
5	SL4_CPU1_PB1 (signal connector on system board)	8 x E3.S (backplane signal connectors)
6	SL5_CPU1_PB2 (signal connector on system board)	x4 RE3 NVMe (rear backplane signal connectors)
7	IO_REIER1 (CPU1)	8 x E3.S (backplane signal connectors)
8	IO_REIER4 (CPU2)	8 x E3.S (backplane signal connectors)
9	MB_PSU1_SIG	BP_PWR_1 (backplane power connectors)
10	BP_PWR_CTRL (backplane power control)	POWER connector
11	MB_SIG_PWR_0 (rear backplane power connector)	x4 RE3 PWR (rear backplane power)

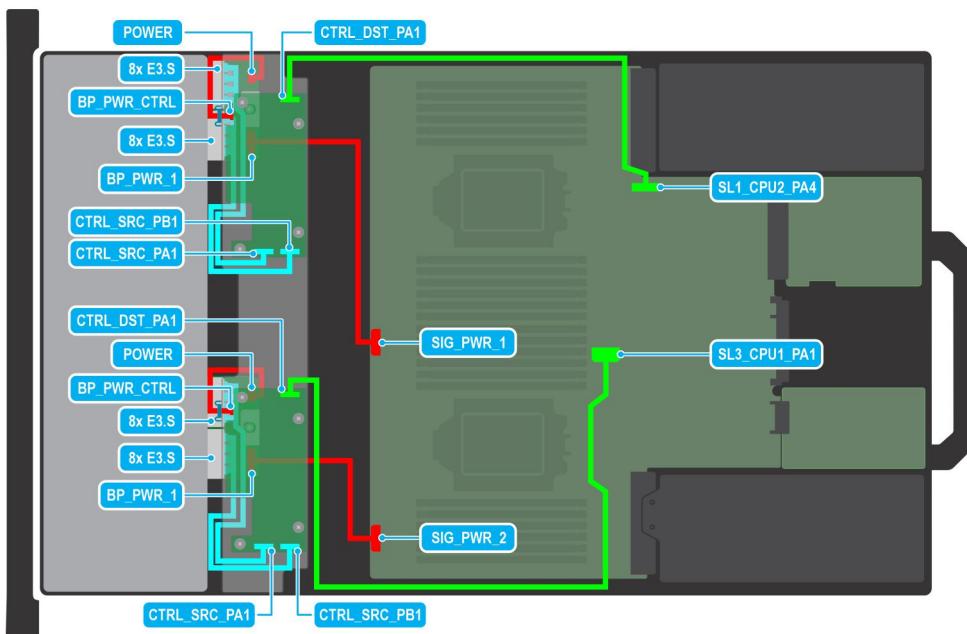


Figure 145. 16 x E3.S with dual Front PERC

Table 111. 16 x E3.S with dual Front PERC

Order	From	To
1	SIG_PWR_1 and SIG_PWR_2 (system board power connectors)	BP_PWR_1 (backplane power connectors)
2	SL1_CPU2_PA4 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
3	SL3_CPU1_PA1 (signal connector on system board)	CTRL_DST_PA1 (fPERC input connector)
4	CTRL_SRC_PA1 (fPERC controller connector)	8 x E3.S (backplane signal connectors)
5	CTRL_SRC_PB1 (fPERC controller connector)	8 x E3.S (backplane signal connectors)
6	BP_PWR_CTRL (backplane power control)	POWER connector

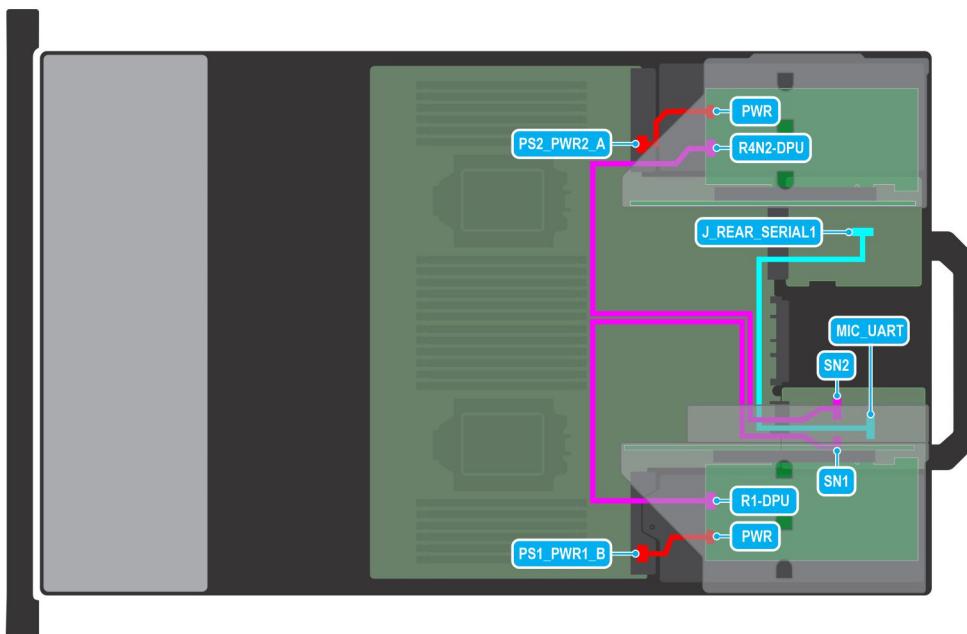


Figure 146. Dell Data Processing Unit (DPU) with R1 and R4 (Pesando 25 Gb/100 Gb, Mellanox: 25 Gb)

Table 112. Dell Data Processing Unit (DPU) with R1 and R4 (Pesando 25 Gb/100 Gb, Mellanox: 25 Gb)

Order	From	To
1	J_REAR_SERIAL1 (UART connector on rear I/O card)	MIC_UART (UART connector on MIC card)
2	SN1 (Connector on MIC card)	R1_SN1 (Connector on DPU card in riser 1)
3	SN2 (Connector on MIC card)	R4_SN2 (Connector on DPU card in riser 4)
4	PS1_PWR1_B (system board power connector)	PWR (Aux power connector on DPU card in riser 1)
5	PS2_PWR2_A (system board power connector)	PWR (Aux power connector on DPU card in riser 4)

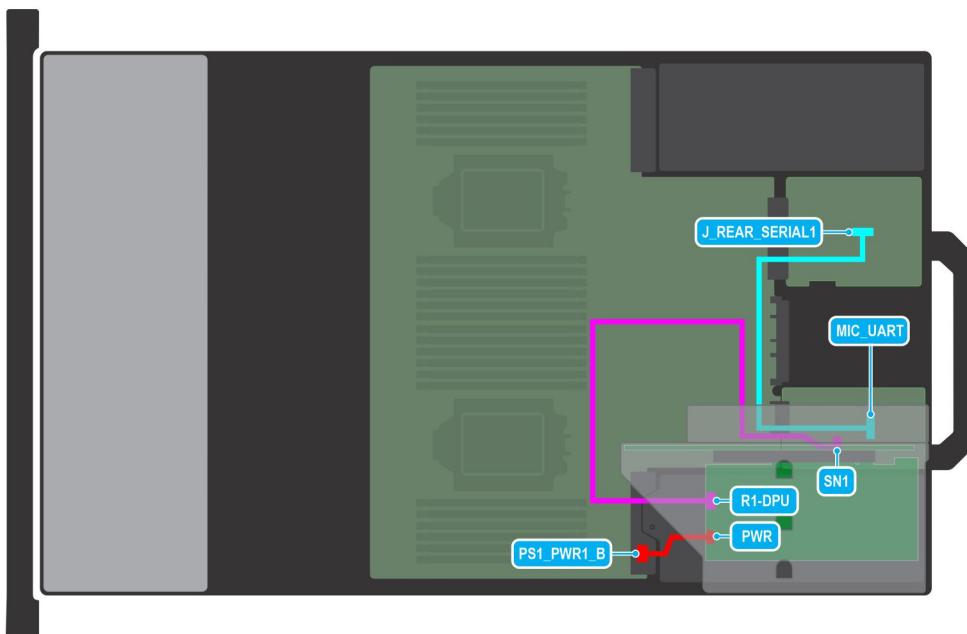


Figure 147. Dell Data Processing Unit (DPU) with R1 (Pesando 25 Gb/100 Gb, Mellanox: 25 Gb)

Table 113. Dell Data Processing Unit (DPU) with R1 (Pesando 25 Gb/100 Gb, Mellanox: 25 Gb)

Order	From	To
1	J_REAR_SERIAL1 (UART connector on rear I/O card)	MIC_UART (UART connector on MIC card)
2	SN1 (Connector on MIC card)	R1-DPU (Connector on DPU card in riser 1)
3	PS1_PWR1_B (system board power connector)	PWR (Aux power connector on DPU card in riser 1)

System memory

System memory guidelines

The PowerEdge R7625 system supports DDR5 registered DIMMs (RDIMMs).

Your system memory is organized into twelve channels per processor (one memory sockets per channel), 12 memory sockets per processor and 24 memory sockets per system.

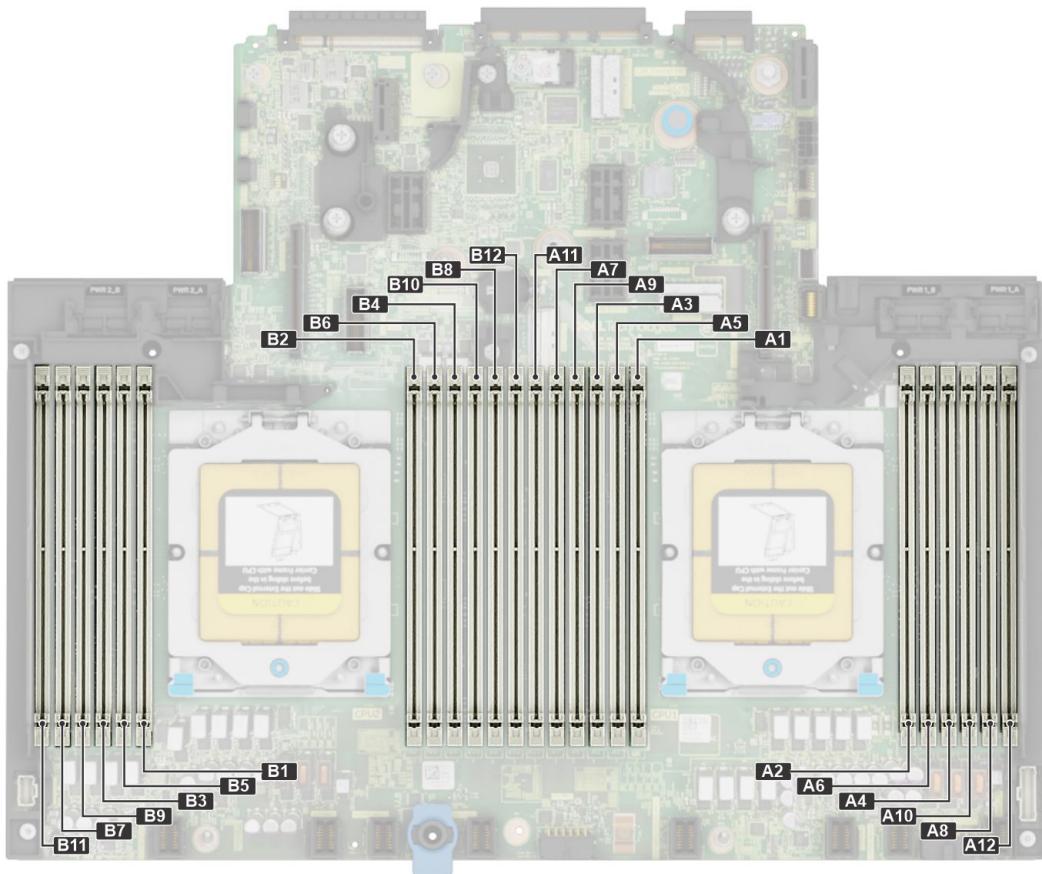


Figure 148. Memory channels

Memory channels are organized as follows:

Table 114. Memory channels

Processor	Channel A	Channel B	Channel C	Channel D	Channel E	Channel F
Processor 1	Slot A1	Slot A5	Slot A3	Slot A9	Slot A7	Slot A11
Processor 2	Slot B1	Slot B5	Slot B3	Slot B9	Slot B7	Slot B11

Table 115. Memory channels

Processor	Channel G	Channel H	Channel I	Channel J	Channel K	Channel L
Processor 1	Slot A2	Slot A6	Slot A4	Slot A10	Slot A8	Slot A12
Processor 2	Slot B2	Slot B6	Slot B4	Slot B10	Slot B8	Slot B12

Table 116. Supported memory matrix

DIMM type	Rank	Capacity	Operating Speed
			1 DIMM per channel (DPC)
DDR5 RDIMM	1 R	16 GB	4800 MT/s
	2 R	32 GB, 64 GB	4800 MT/s
	2 R	96 GB	4800 MT/s
	4 R	128 GB	4800 MT/s
	8 R	256 GB	4800 MT/s

(i) NOTE: DDR4 memory is not supported.

(i) NOTE: The processor may reduce the performance of the rated DIMM speed.

General memory module installation guidelines

To ensure optimal performance of your system, observe the following general guidelines when configuring your system memory. If your system's memory configurations fail to observe these guidelines, your system might not boot, stop responding during memory configuration, or operate with reduced memory. This section provides information on the memory population rules for single or dual processor system.

The memory bus operate at speeds up to 4800 MT/s depending on the following factors:

- System profile selected (for example, Performance Optimized, or Custom [can be run at high speed or lower])
- Maximum supported DIMM speed of the processors
- Maximum supported speed of the DIMMs

(i) NOTE: MT/s indicates DIMM speed in MegaTransfers per second.

The system supports memory configuration enabling the system to be configured and run in any valid chipset architectural configuration. The following are the recommended guidelines for installing memory modules:

- All DIMMs must be DDR5.
- Mixing different DIMM capacities is not supported.
- Mixing module types within a memory channel is not supported. All DIMMs populated must be RDIMM.
- If memory modules with different speeds are installed, they operate at the speed of the slowest installed memory module(s).
- Mixing different widths (x4 & x8) is not supported.
- Populate memory module sockets only if a processor is installed.
 - For single-processor systems, sockets A1 to A12 are available.
 - For dual-processor systems, sockets A1 to A12 and sockets B1 to B12 are available.
 - In Optimizer Mode, the DRAM controllers operate independently in the 64-bit mode and provide optimized memory performance.

Table 117. Memory population rules

Processor	Memory population	Memory population information
Dual processor (Start with processor1. Processor 1 and processor 2 population should match)	A{1}, B{1}, A{2}, B{2}, A{3}, B{3}, A{4}, B{4}, A{5}, B{5}, A{6}, B{6}, A{7}, B{7}, A{8}, B{8}, A{9}, B{9}, A{10}, B{10}, A{11}, B{11}, A{12}, B{12}	1,2,4,6,8,10 and 12 DIMM per processor allowed.

- In a dual-processor configuration, the memory configuration for each processor must be identical. For example, if you populate socket A1 for processor 1, then populate socket B1 for processor 2, and so on.
- Persistent memory will not be supported on Genoa based platforms.
- For best performance, populate all memory channels equally (12 DIMMs per CPU) using identical DIMMs.
- Unbalanced or odd memory configuration results in a performance loss and system may not identify the memory modules being installed, so always populate memory channels identically with equal DIMMs for best performance.
- Minimum recommended configuration is to populate 1, 2, 4, 6, 8, 10, or 12 memory modules per processor.
- Populate twelve equal memory modules per processor (one DIMM per channel) at a time to maximize performance.

(i) NOTE: Equal memory modules refer to DIMMs with identical electrical specification and capacity that may be from different vendors.

Removing a memory module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the air shroud](#).

⚠️ WARNING: The memory modules are hot to touch for some time after the system has been powered off. Allow the memory modules to cool before handling them. Handle the memory modules by the card edges and avoid touching the components or metallic contacts on the memory module.

Steps

1. Locate the appropriate memory module socket.
2. To release the memory module from the socket, simultaneously press the ejectors on both ends of the memory module socket.
⚠️ CAUTION: Handle each memory module only by the card edges, ensuring not to touch the middle of the memory module or metallic contacts.
3. Lift the memory module away from the system.

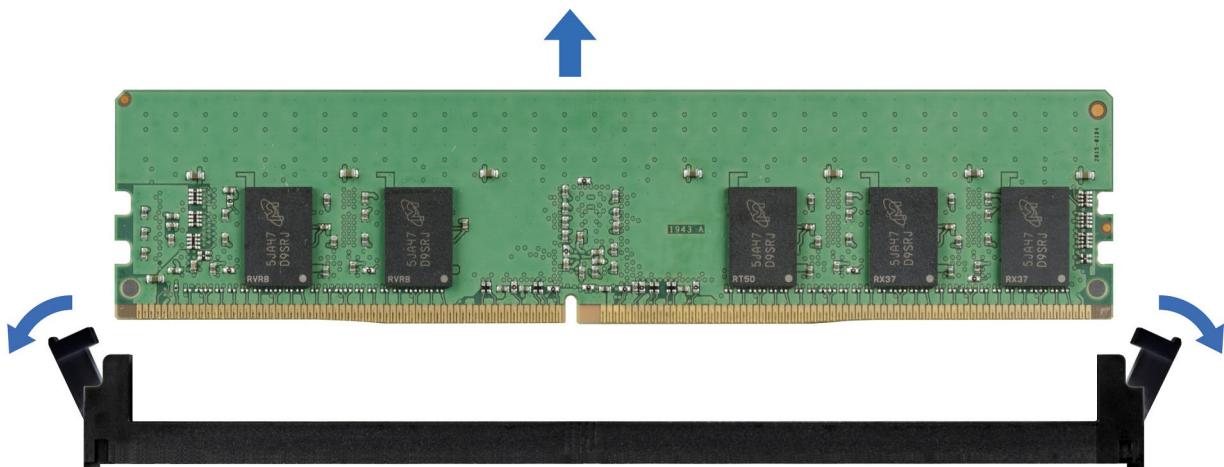


Figure 149. Removing a memory module

Next steps

1. Replace the memory module, if you are removing a memory module permanently, install a memory module blank.

(i) NOTE: The procedure to install a memory module blank is similar to the procedure to install a memory module.

(i) NOTE: To ensure proper system cooling, memory module blanks must be installed in any memory socket that is not occupied. The memory module blanks compatible with the R7625 are DDR5 gray color blanks. Remove the memory module blanks only if you intend to install memory modules in those sockets.

Installing a memory module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If installed, [remove the air shroud](#).
4. If installed, remove a memory module blank.

(i) NOTE: The procedure to remove a memory module blank is similar to the procedure to remove a memory module.

(i) NOTE: Retain the removed memory module blank(s) for future use.

⚠️ WARNING: The memory modules are hot to touch for some time after the system has been powered down. Allow the memory modules to cool before handling them. Handle the memory modules by the card edges and avoid touching the components or metallic contacts on the memory module.

Steps

1. Locate the appropriate memory module socket.

⚠️ CAUTION: Handle each memory module only by the card edges, ensuring not to touch the middle of the memory module or metallic contacts.

2. If a memory module is installed in the socket, remove it.

3. Align the edge connector of the memory module with the alignment key of the memory module socket, and insert the memory module in the socket.

ⓘ NOTE: Ensure the memory socket ejectors are fully open.

ⓘ NOTE: The memory module socket has an alignment key that enables you to install the memory module in the socket in only one orientation.

⚠️ CAUTION: Do not apply pressure at the center of the memory module; apply pressure at both ends of the memory module evenly.

⚠️ CAUTION: To prevent damage to the memory module or the memory module socket during installation, do not bend or flex the memory module; insert both ends of the memory module simultaneously.

4. Press the memory module with your thumbs until the ejectors firmly click into place. When the memory module is properly seated in the socket, the levers on the memory module socket align with the levers on the other sockets that have memory modules installed.

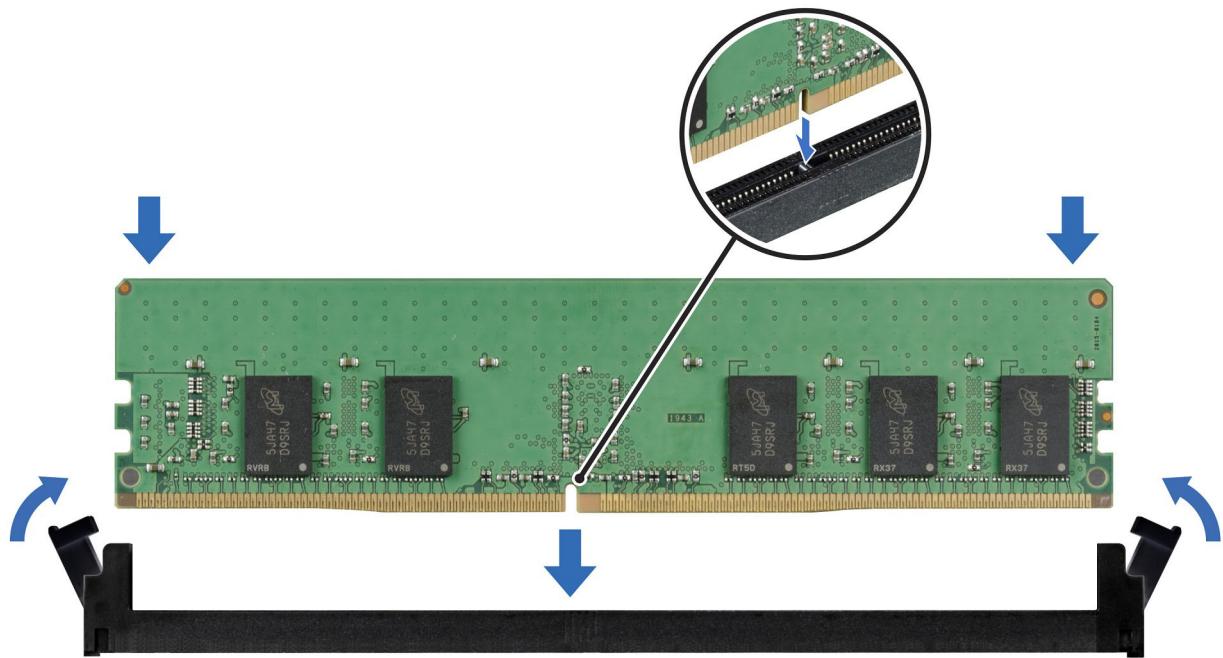


Figure 150. Installing a memory module

Next steps

1. If removed, [install the air shroud](#).
2. Follow the procedure listed in [After working inside your system](#).

3. To verify if the memory module has been installed properly, press F2 and navigate to **System Setup Main Menu > System BIOS > Memory Settings**. In the **Memory Settings** screen, the System Memory Size must reflect the updated capacity of the installed memory.
4. If the System Memory Size is incorrect, one or more of the memory modules may not be installed properly. Ensure that the memory modules are firmly seated in their sockets.
5. Run the system memory test in system diagnostics.

Processor and heat sink

Removing a heat sink

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the air shroud](#).

 **WARNING:** The heat sink and processor are too hot to touch for some time after the system has been powered off. Allow the heat sink and processor to cool down before handling them.

 **NOTE:** The procedure to uninstall standard and L-type heat sink is similar.

Steps

1. Using a Torx #T20 screwdriver, fully loosen the captive screw all the way before moving to the next screw (on one-screw-at-a-time basis).

 **NOTE:** Follow the screw sequence defined on the heat sink label. Disassembly order: 6, 5, 4, 3, 2, 1

 **NOTE:** The captive screw numbers are marked on the heat sink.
2. Lift the heat sink from the system.

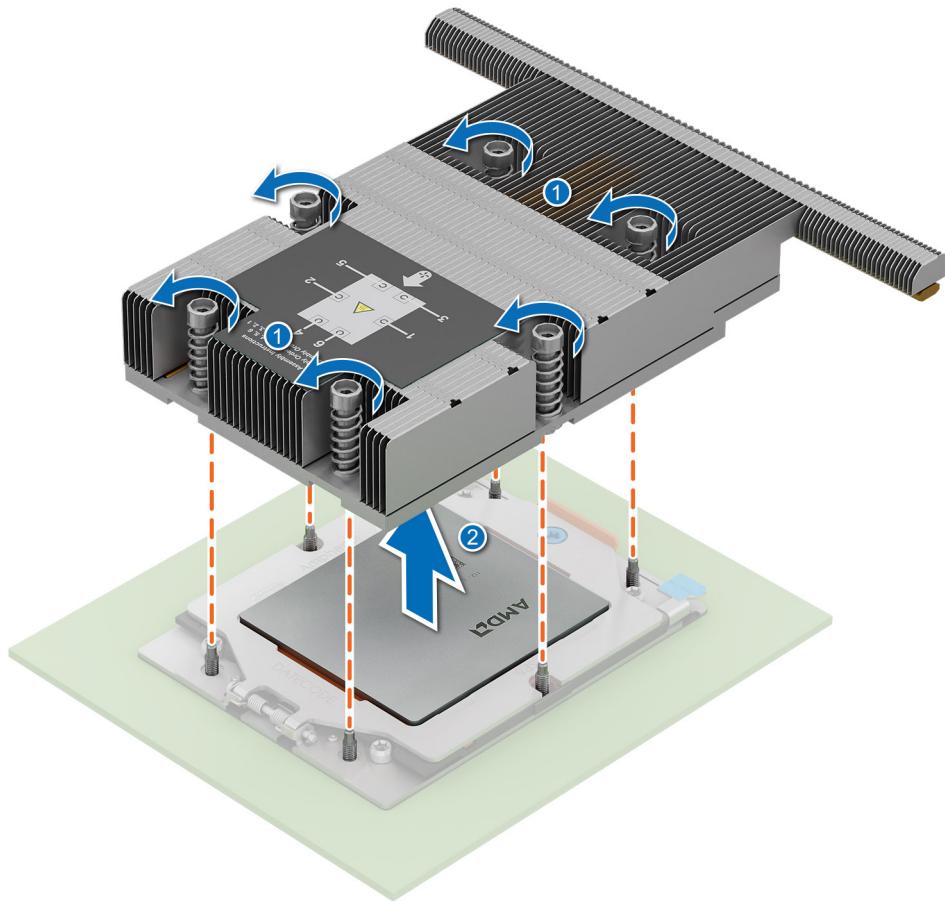


Figure 151. Removing a heat sink

Next steps

1. If you are uninstalling a faulty heat sink, replace the heat sink, else remove the processor.

Removing the Direct Liquid Cooling module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the air shroud](#).

⚠️ WARNING: The Direct liquid cooling (DLC) module and processor are too hot to touch for some time after the system has been powered off. Allow the liquid cooling module and processor to cool down before handling them.

ⓘ NOTE: Rear I/O (RIO) board is different for the system with DLC module.

Steps

1. Using a Phillips #2 screw driver, loosen the captive screw on the DLC ring holder.
2. Tilt the DLC ring holder to loosen the DLC tubes.
3. Disconnect the DLC leak detection cable from the LC RIO board.

ⓘ NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

4. Remove the DLC tubes from the clip and LC RIO board.
5. Slightly lift the DLC tubes surrounding the DIMM slots.

- Using a Torx #T20 screwdriver, fully loosen the captive screw all the way before moving to the next screw (on one-screw-at-a-time basis).

NOTE: Follow the screw sequence defined on the heat sink label. Disassembly order: 6, 5, 4, 3, 2, 1.

NOTE: Ensure the anti-tilt wires on the DLC module are in locked position when loosening the captive screws.

- Set the anti-tilt wires on the DLC module to the unlock position and lift the DLC module from the system.

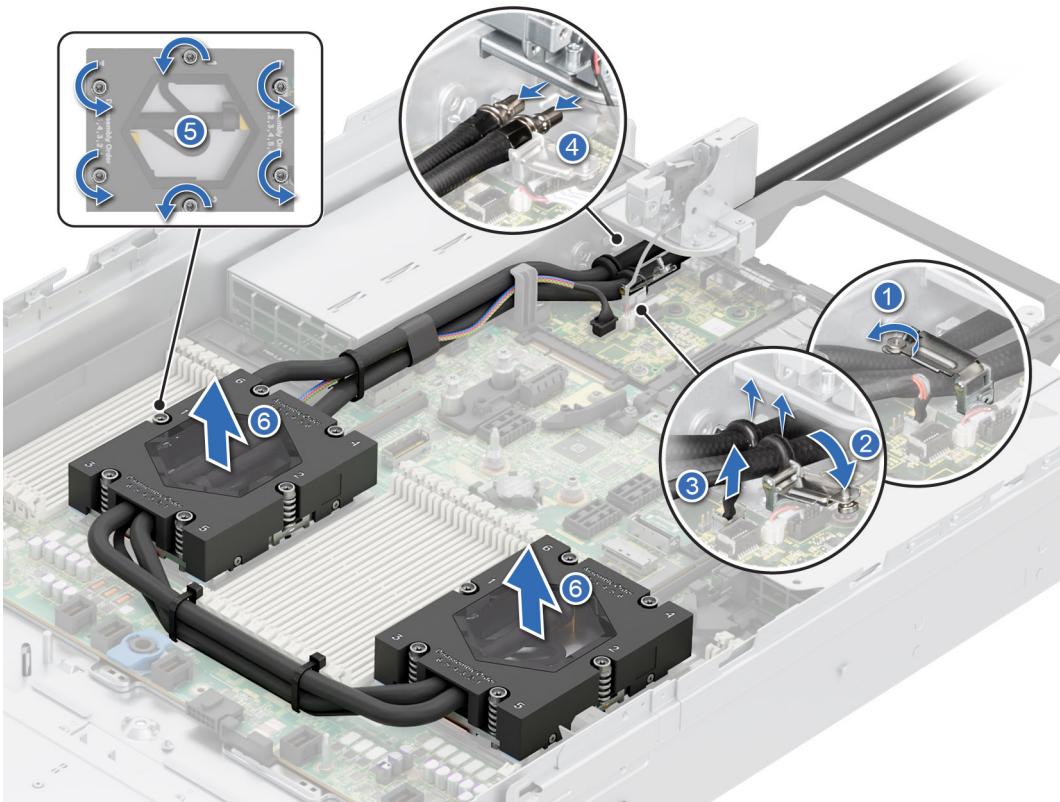


Figure 152. Removing the DLC module

Next steps

- If you are uninstalling a faulty heat sink, [replace the Direct Liquid Cooling module](#), else [remove the processor](#).

Removing the processor

Prerequisites

WARNING: The heat sink may be hot to touch for some time after the system has been powered off. Allow the heat sink to cool before removing it.

- Follow the safety guidelines listed in the [Safety instructions](#).
- Follow the procedure listed in the [Before working inside your system](#).
- [Remove the heat sink](#).

CAUTION: You may find the CMOS battery loss or CMOS checksum error is displayed during the first instance of powering on the system after the processor or system board replacement which is expected. To fix, go to [set up option to configure the system settings](#).

Steps

1. Using a Torx #T20 screwdriver, loosen the middle screw to release the retention frame. Hold and lift the retention frame upwards and rotate it slightly pass the vertical position(105 degrees).

NOTE: The spring loading will keep the retention frame at its "open" position.

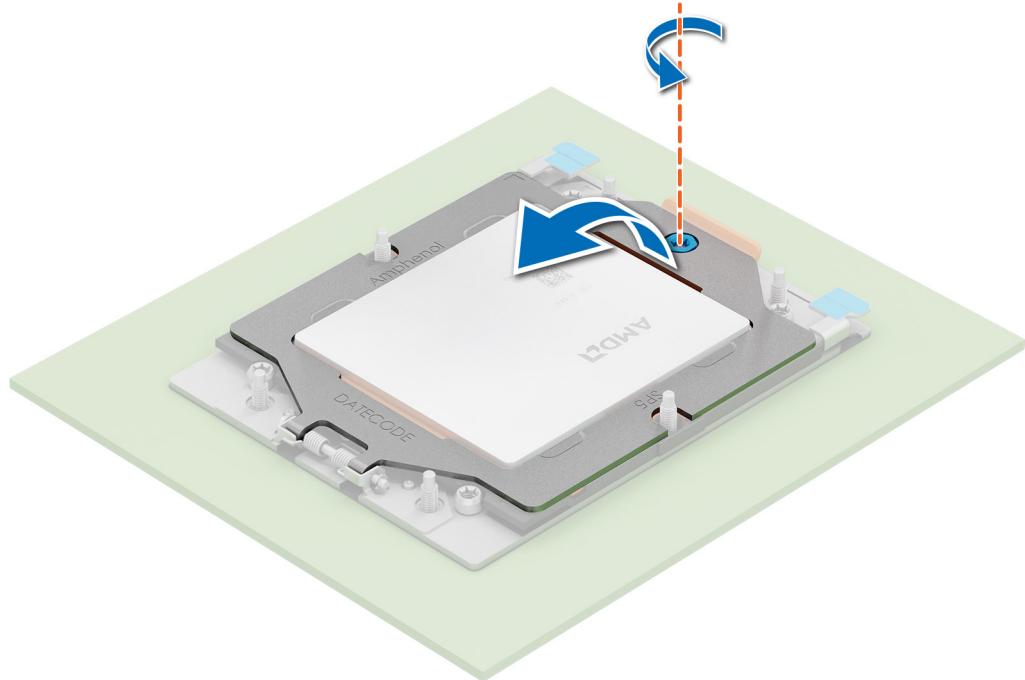


Figure 153. Removing screws on the retention frame

2. Release the processor socket rail frame by holding both blue tabs to lift the blue latches.

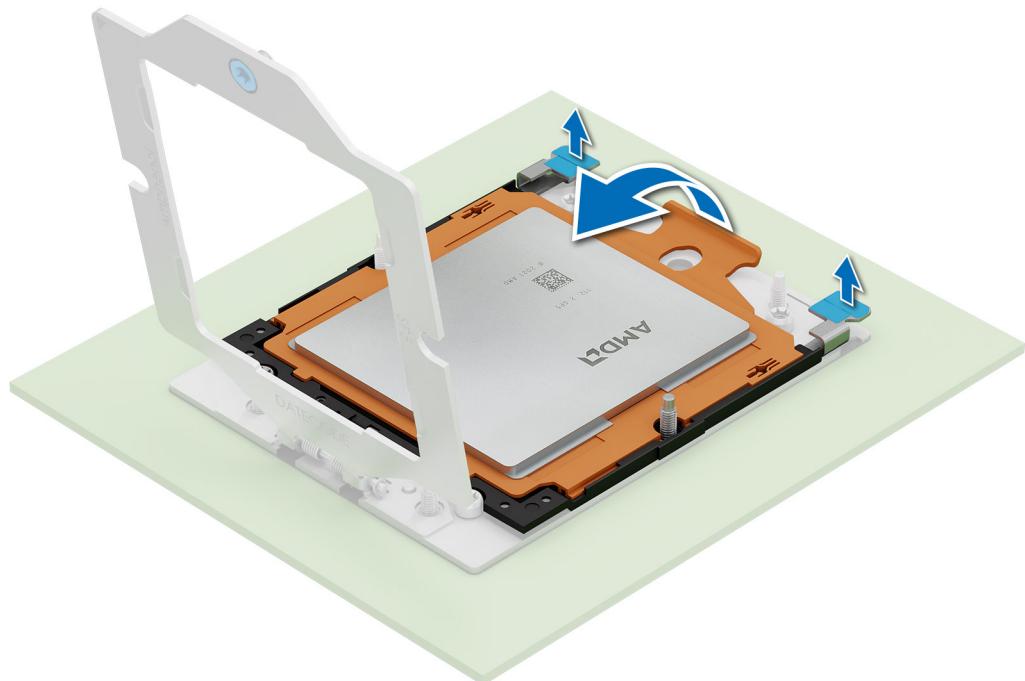


Figure 154. Lifting the rail frame

3. Holding the handle on the carrier frame, slide the tray out of the rail frame.

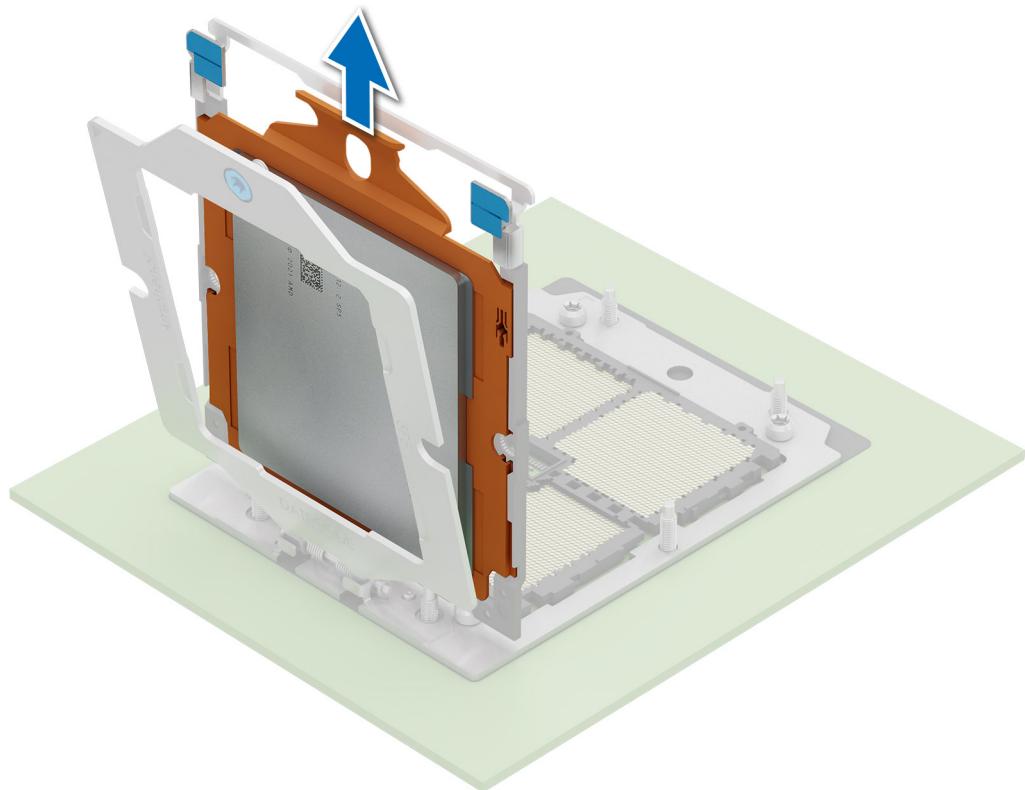


Figure 155. Removing the carrier frame

Next steps

1. Replace the processor.

Installing the processor

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the heat sink](#).

Steps

1. Holding the handle of the carrier frame, slide the tray into the processor socket rail frame until firmly seated.

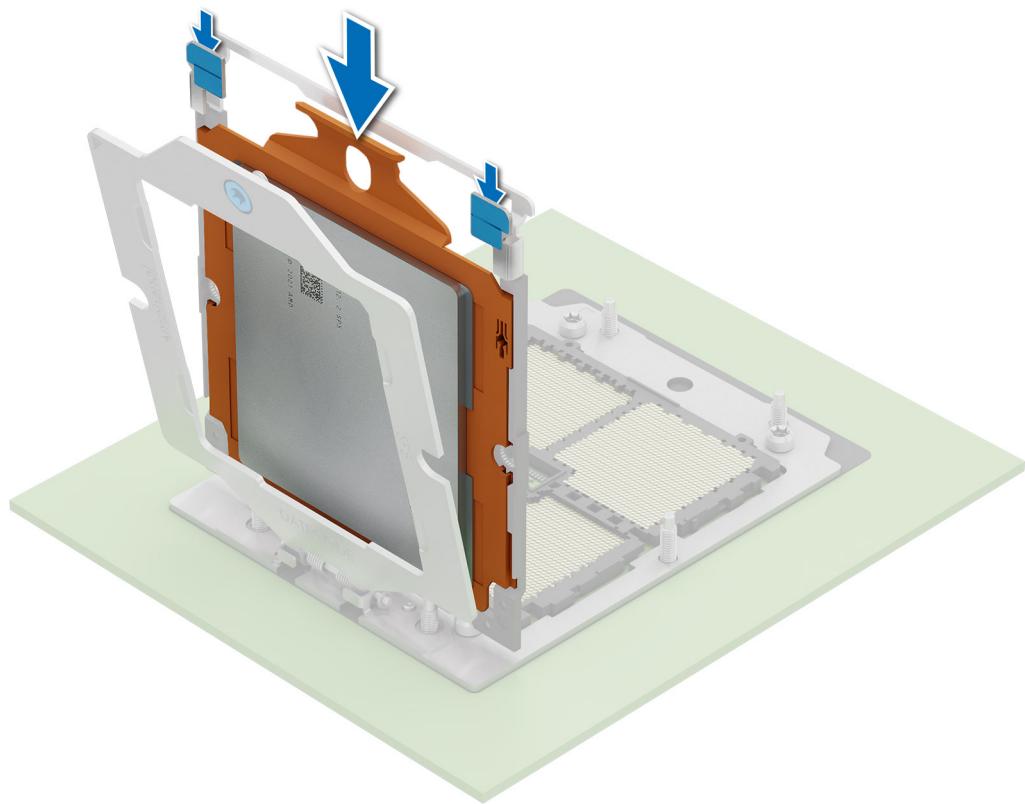


Figure 156. Placing the carrier frame into the rail frame

2. Holding both of blue tabs to push the rail frame down until the blue latches lock into place.

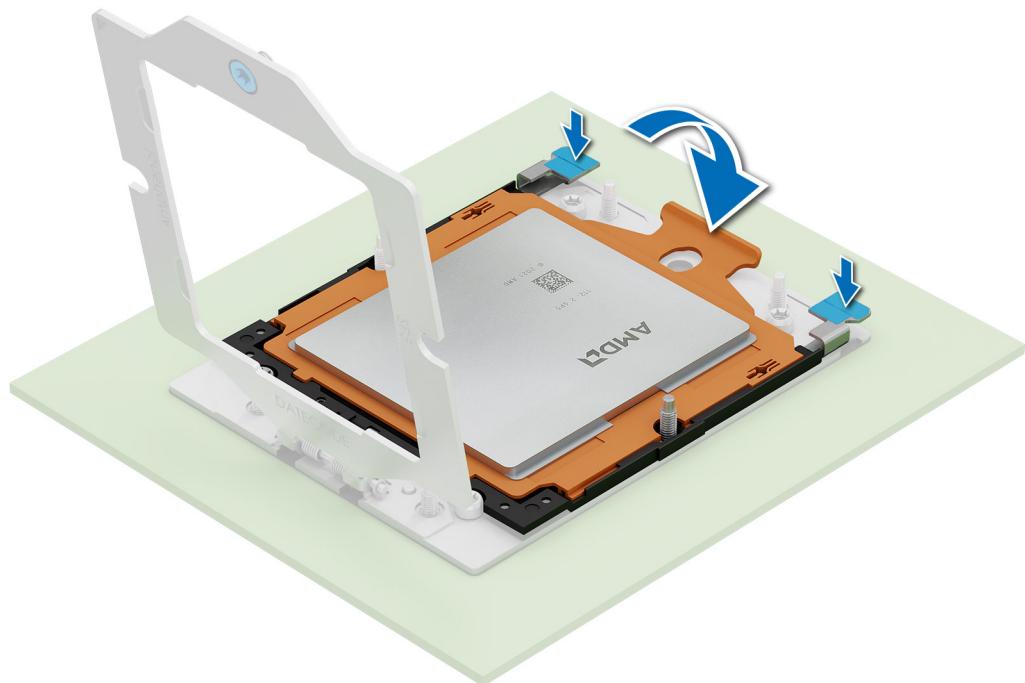


Figure 157. Closing the rail frame

3. Secure the retention frame by holding down the retention frame with one hand while using the other hand to operate the screw driver to engage and tighten screw.

(i) NOTE: Press the retention frame while tightening the screws to avoid tilting of the processor cover out of the processor socket.

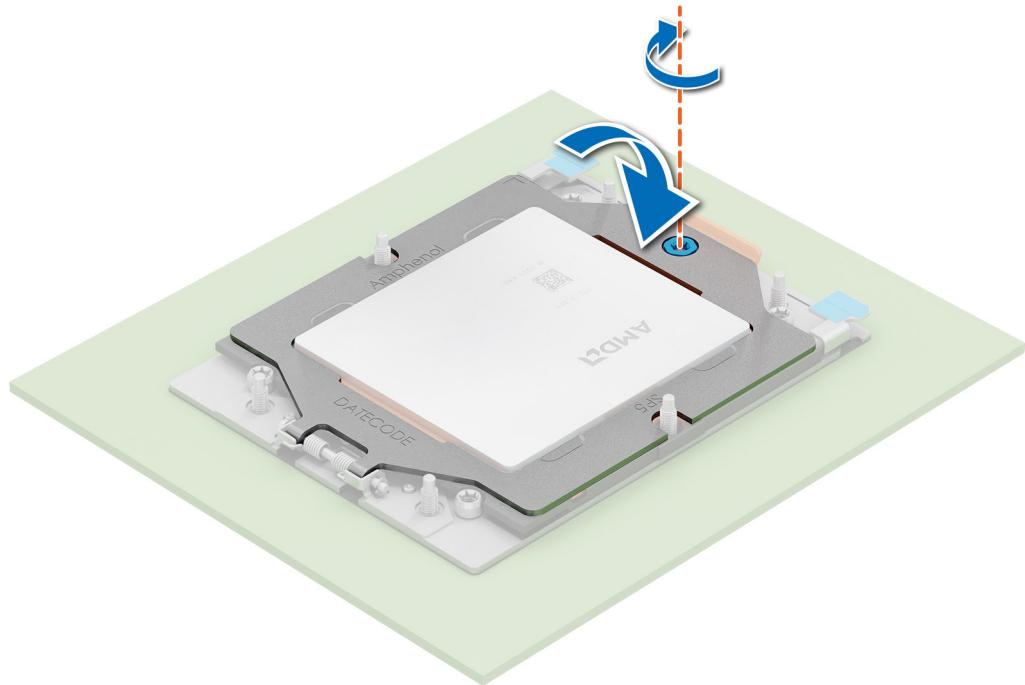


Figure 158. Securing the retention frame

Next steps

1. [Install the heat sink](#).
2. Follow the procedure listed in [After working inside your system](#).

Installing the heat sink

Prerequisites

Never uninstall the heat sink from a processor unless you intend to replace the processor or system board. The heat sink is necessary to maintain proper thermal conditions.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the air shroud](#).
4. If installed, remove the processor dust cover.

(i) NOTE: The procedure to install standard and L-type heat sink is similar.

Steps

1. If you are using an existing heat sink, remove the thermal grease on the heat sink by using a clean lint-free cloth.
(i) NOTE: For a new heat sink, the thermal paste is pre-applied to the heat sink. Remove the protective cover, and install the heat sink.
2. Use the thermal grease syringe included with your processor kit to apply the grease in a thin spiral on the top of the processor.

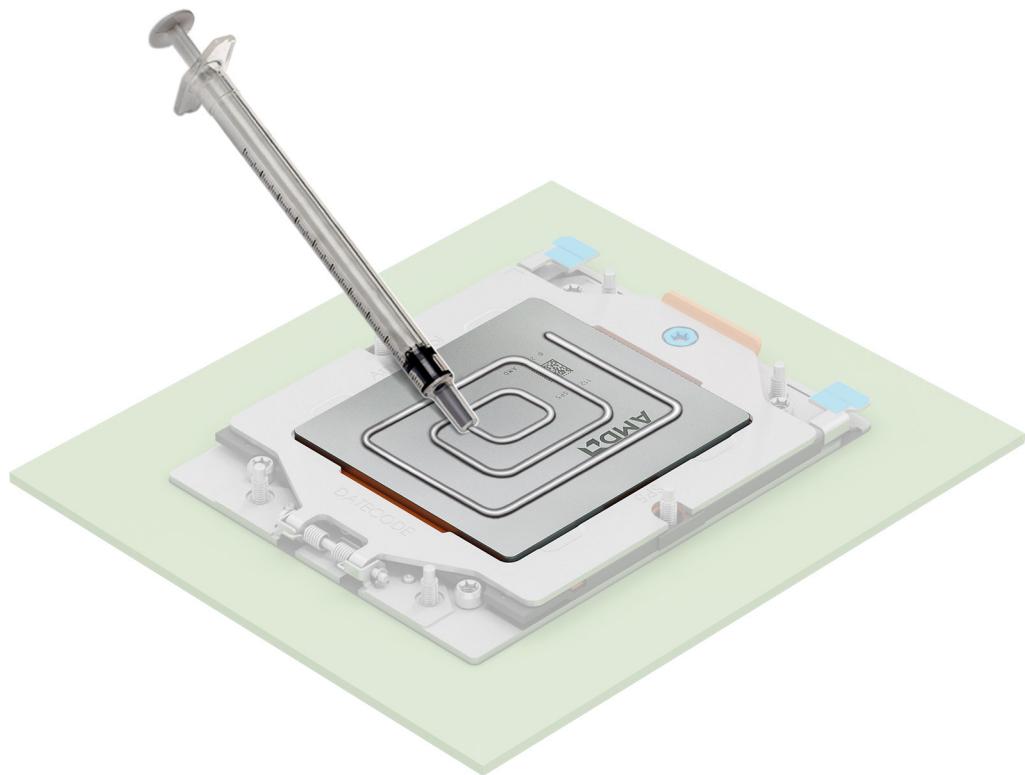


Figure 159. Applying thermal grease

⚠ CAUTION: Applying too much thermal grease can result in excess grease coming in contact with and contaminating the processor socket.

ⓘ NOTE: The thermal grease syringe is intended for single use only. Dispose of the syringe after you use it.

ⓘ NOTE: Refer to the airflow direction on heat sink label as visual hint of heat sink install orientation.

3. Align the screws on the heat sink with the standoff screws on the system board.

ⓘ NOTE: The A1 extrusion on the L-type heat sink should face towards the system side.
4. Using a Torx #T20 screwdriver, fully tighten the captive screw all the way down before moving to the next screw (on one-screw-at-a-time basis).

ⓘ NOTE: Follow the screw sequence defined on heat sink label. Assembly order: 1, 2, 3, 4, 5, 6

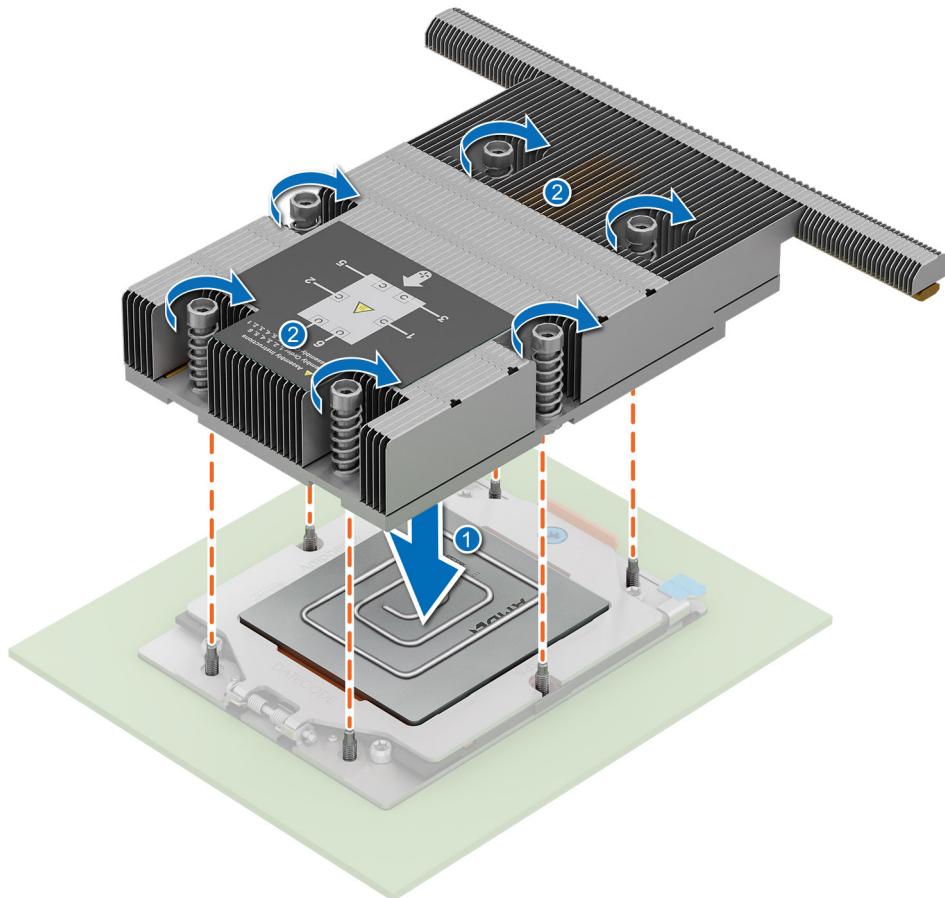


Figure 160. Installing the heat sink

Next steps

1. If removed, [install the air shroud](#).
2. Follow the procedure listed in the [After working inside your system](#).

Installing the Direct Liquid Cooling module

Prerequisites

Never uninstall the heat sink from a processor unless you intend to replace the processor or system board. The heat sink is necessary to maintain proper thermal conditions.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the air shroud](#).
4. If installed, remove the processor dust cover.
5. For new heat sinks, refer to [Installing the heat sink](#) step 1 and 2 for applying the thermal grease.

(i) NOTE: Ensure anti-tilt wires on the DLC module are in the unlocked position.

(i) NOTE: The recommended maximum operating pressure is 15 psi (diverter opens at 15 psi).

Steps

1. Align the DLC module with the standoff screws on the system board.

(i) NOTE: Ensure that the DLC tubes and liquid cooling leak detection cable are placed towards the rear of the system.

2. Place the module on the processor slot and set all the anti-tilt wires to locked position (outward position).
3. Route the DLC tubes to the front of the system and along the DIMM latches.
4. Using a Torx #T20 screwdriver, fully tighten the captive screw all the way down before moving to the next screw (on one-screw-at-a-time basis).

(i) NOTE: Follow the screw sequence defined on heat sink label. Assembly order: 1, 2, 3, 4, 5, 6.

5. The tubes leading towards the rear of the chassis and the DLC leak detection cable are placed in between the PSU 2 and the clip of rear I/O board (RIO).
- (i) NOTE:** Leak detection cable must be placed first into the clip (underneath the cooling tubes), and then place tube 2 and tube 1 into the clip to ensure that cable does not interfere with the PCIe risers.
6. Route the rear end of the DLC tubes through the RIO board.
- (i) NOTE:** Follow the number labels on the DLC tubes and ring holders (1,2).
7. Connect the DLC leak detection cable to the connector on RIO.
8. Align the rubber ring on the tubes with the ring holder.
9. Tilt the DLC ring holder and using a Phillips #2 screwdriver, tighten the captive screw on the DLC ring holder to secure it in place.

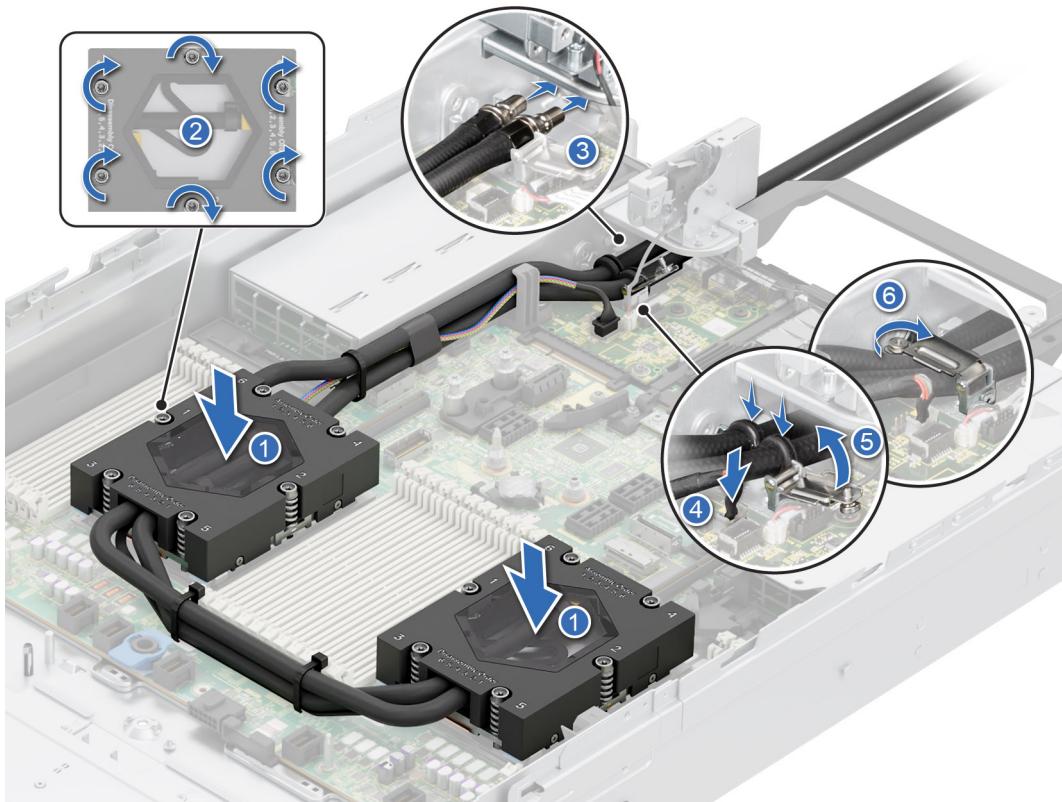


Figure 161. Installing the liquid cooling heat sink

Next steps

1. If removed, [install the air shroud](#).
2. Follow the procedure listed in the [After working inside your system](#).

Expansion cards and expansion card risers

NOTE: A system event entry is logged in the iDRAC Lifecycle Controller if an expansion card riser is not supported or missing. It does not prevent your system from turning on. However, if a F1/F2 pause occurs with an error message, see *Troubleshooting expansion cards* section in the *Dell PowerEdge Servers Troubleshooting Guide* at [PowerEdge manuals](#).

Expansion card installation guidelines

The following table describes the supported expansion cards:

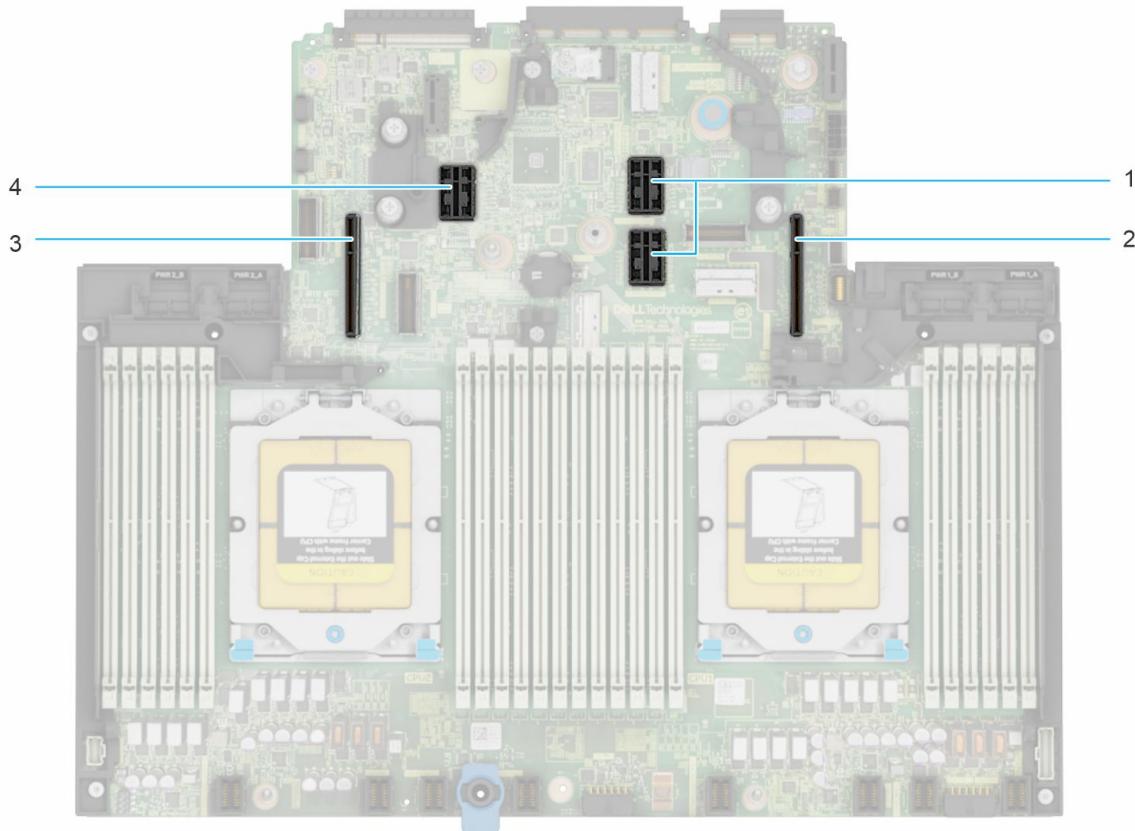


Figure 162. Expansion card riser slot connectors

1. Riser 2
2. Riser 1
3. Riser 4
4. Riser 3

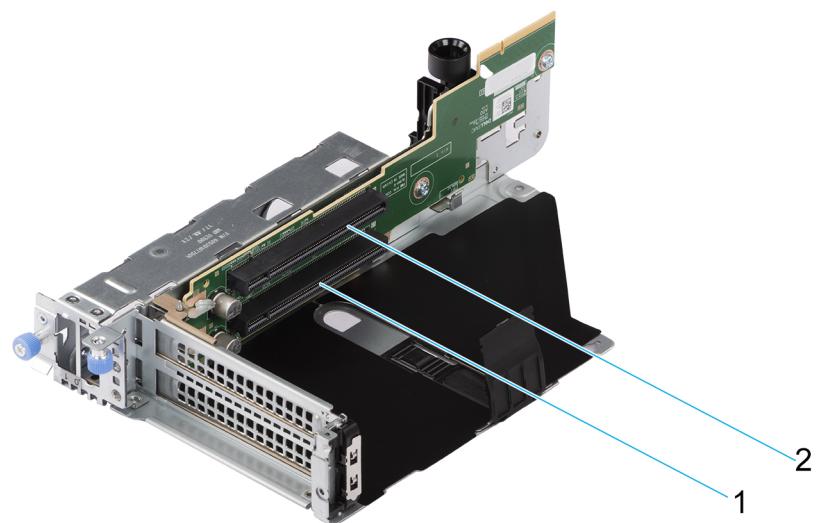


Figure 163. Riser 1B

1. Slot 1
2. Slot 2

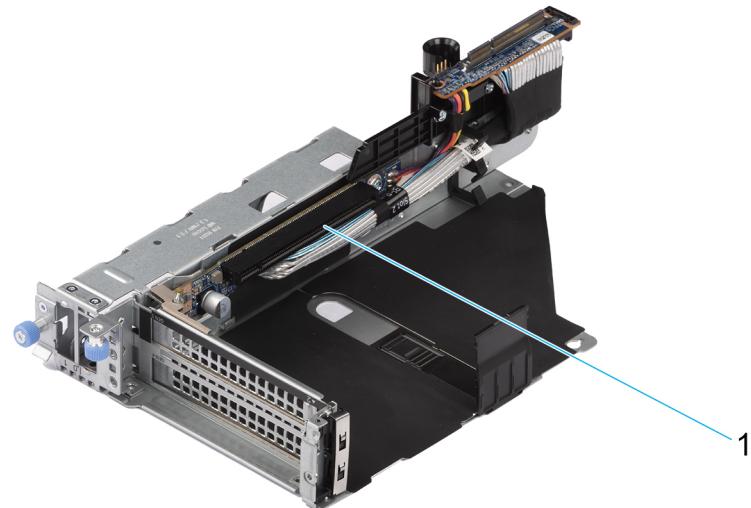


Figure 164. Riser 1P HL

1. Slot 2

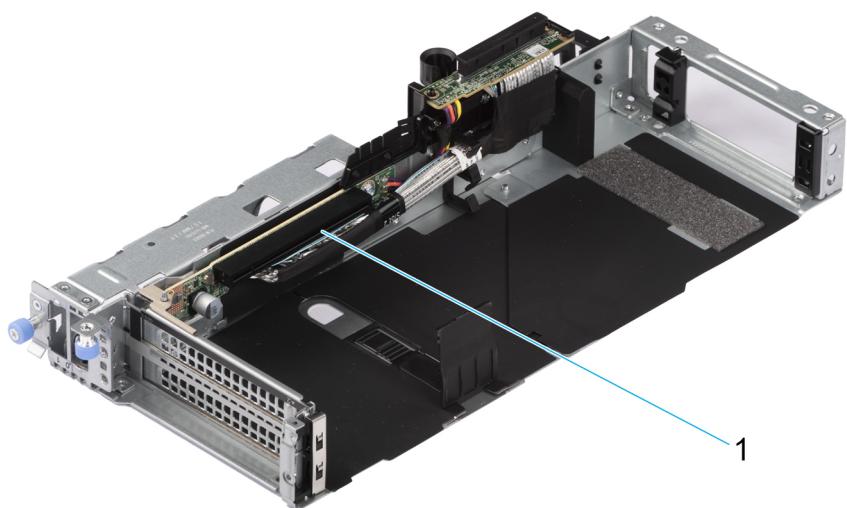


Figure 165. Riser 1P FL

1. Slot 2

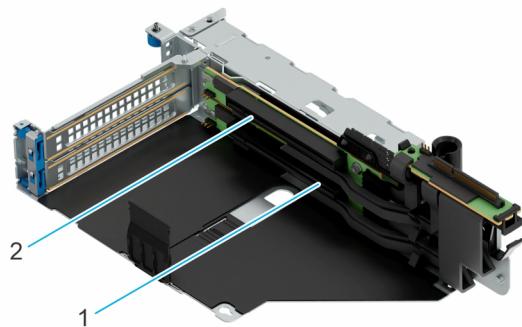


Figure 166. Riser 1Q

1. Slot 1
2. Slot 2

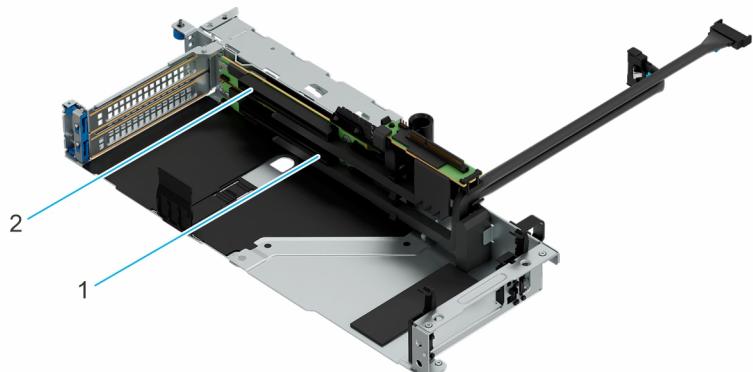


Figure 167. Riser 1S FL

1. Slot 1
2. Slot 2

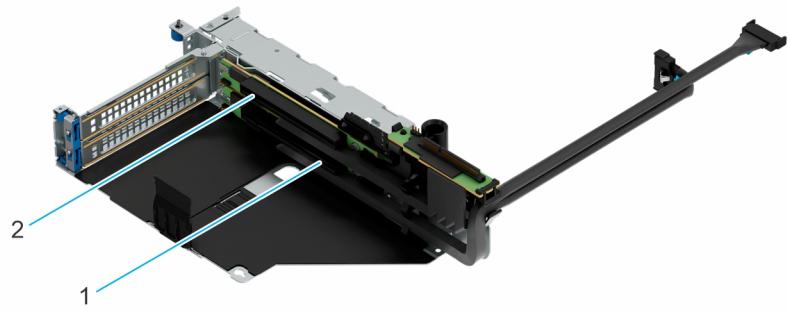


Figure 168. Riser 1S HL

1. Slot 1
2. Slot 2

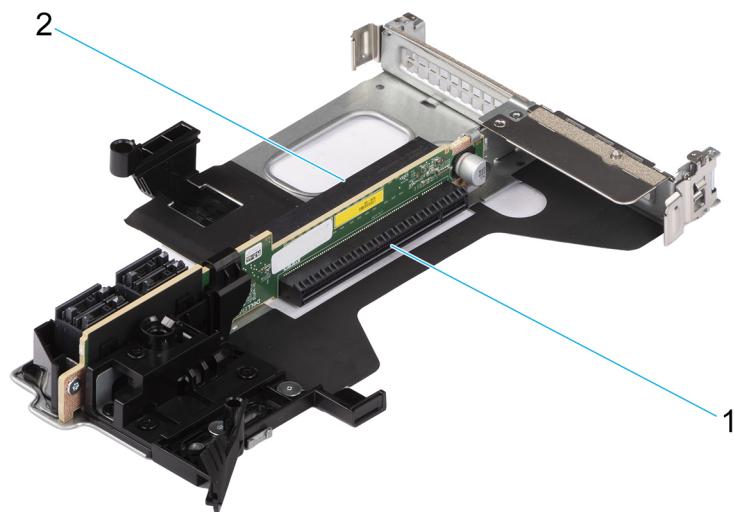


Figure 169. Riser 2A

1. Slot 6
2. Slot 3

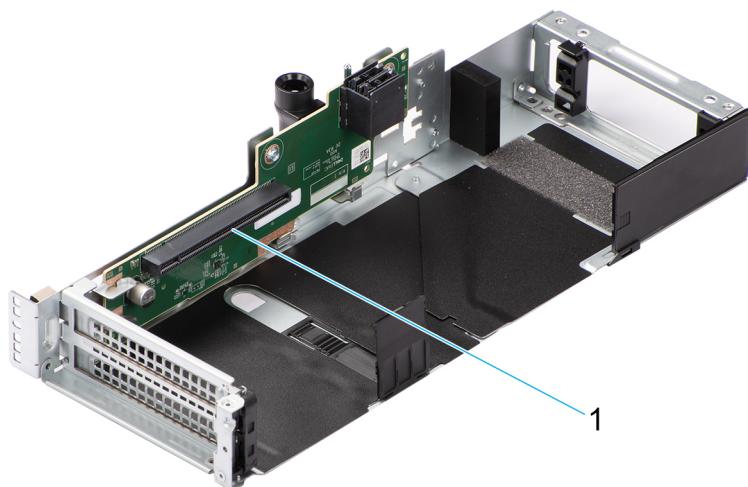


Figure 170. Riser 3A FL

1. Slot 5

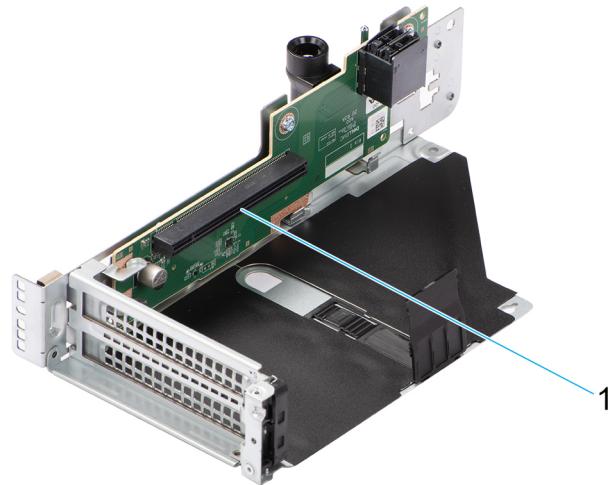


Figure 171. Riser 3A HL

1. Slot 5

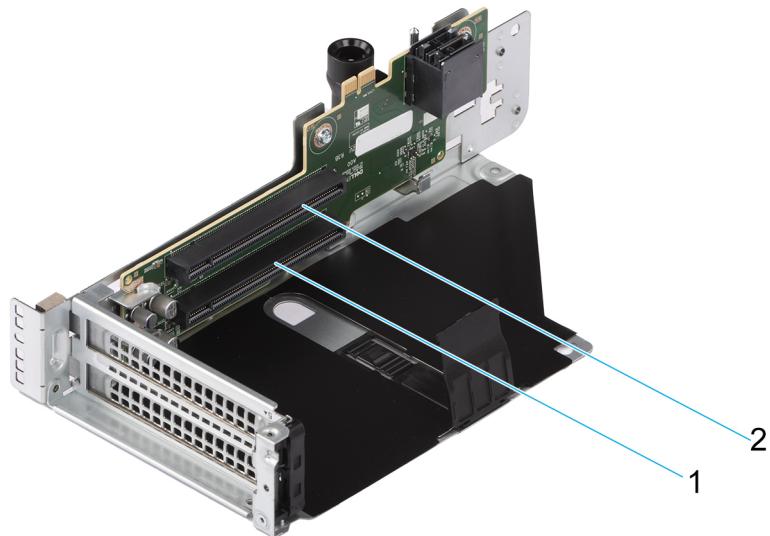


Figure 172. Riser 3B

1. Slot 4
2. Slot 5

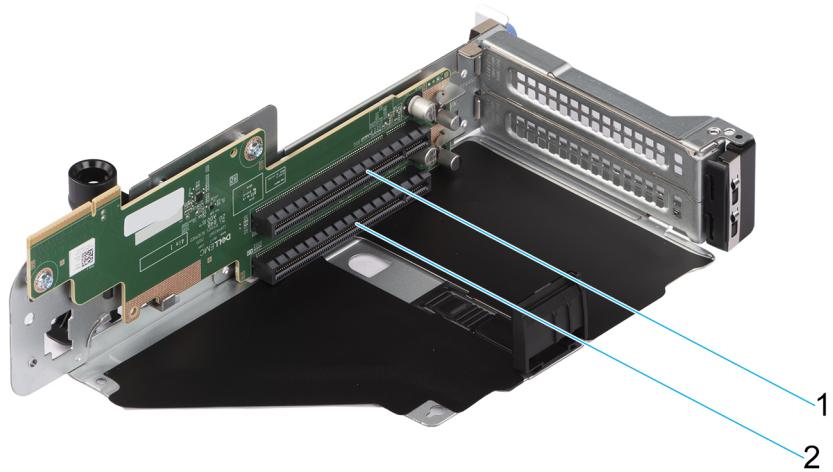


Figure 173. Riser 4B

1. Slot 8
2. Slot 7

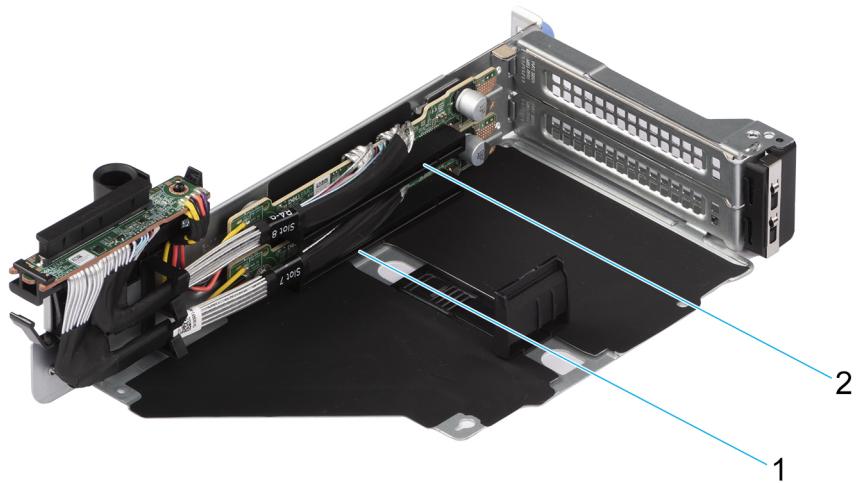


Figure 174. Riser 4Q

1. Slot 7
2. Slot 8

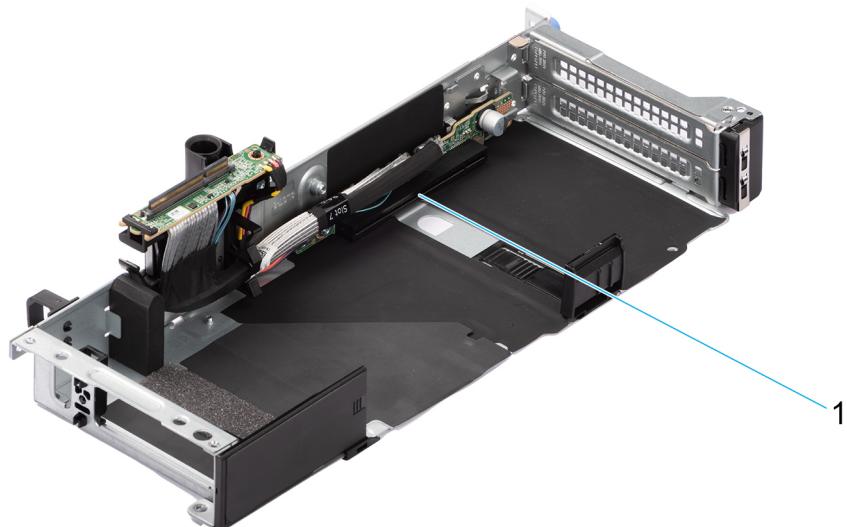


Figure 175. Riser 4P FL

1. Slot 7

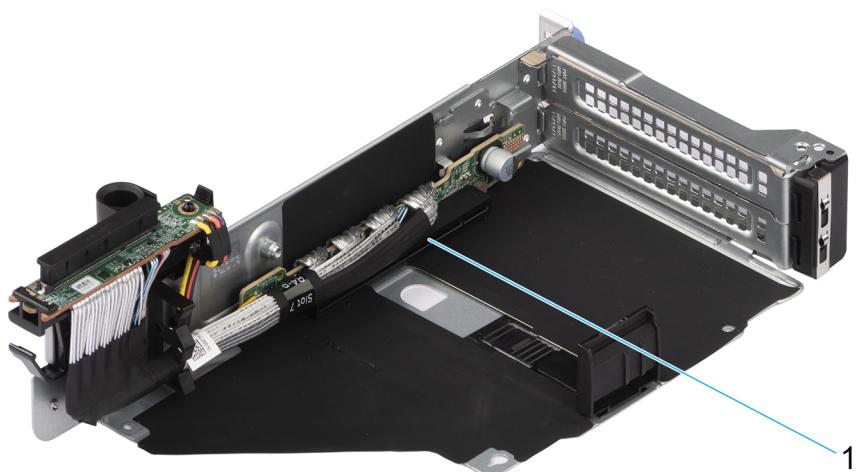


Figure 176. Riser 4P HL

1. Slot 7

i **NOTE:** The expansion-card slots are not hot-swappable.

The following table provides guidelines for installing expansion cards to ensure proper cooling and mechanical fit. The expansion cards with the highest priority should be installed first using the slot priority indicated. All the other expansion cards should be installed in the card priority and slot priority order.

Table 118. Expansion card riser configurations

Expansion card riser	PCIe slots	Processor connection	Height	Length	Slot width
Riser 1B	Slot 1	Processor 1	Full Height	Half Length	x8
	Slot 2				
Riser 1P	Slot 2	Processor 1	Full Height	Half Length / Full Length	x16
Riser 1Q	Slot 1	Processor 1	Full Height	Half Length	x8
	Slot 2				

Table 118. Expansion card riser configurations (continued)

Expansion card riser	PCIe slots	Processor connection	Height	Length	Slot width
Riser 1S	Slot 1	Processor 1	Full Height	Half Length / Full Length	x16
	Slot 2				
Riser 2A	Slot 3	Processor 1	Low Profile	Half Length	x16
	Slot 6	Processor 2			
Riser 3A	Slot 5	Processor 2	Full Height	Half Length / Full Length	x16
Riser 3B	Slot 4	Processor 2	Full Height	Half Length	x8
	Slot 5				
Riser 4B	Slot 7	Processor 2	Full Height	Half Length	x8
	Slot 8				
Riser 4Q	Slot 7	Processor 2	Full Height	Half Length	x8
	Slot 8				
Riser 4P	Slot 7	Processor 2	Full Height	Half Length / Full Length	x16

Table 119. PCIe Riser Configs

Config #	RSR Configuration	# of CPUs	PERC type supported	Rear Storage Possible	x8 CPU 1	x16 CPU 1	x8 CPU 2	x16 CPU 2
0	0	2	Front PERC	No	0	0	0	0
1	R1B + R4B	2	Front PERC	No	2	0	2	0
2	R1B + R2A + R3B + R4B	2	Front PERC / Adaptor PERC	No	2	1	4	1
3	R1Q + R2A + R3B + R4Q	2	Front PERC / Adaptor PERC	No	2	1	4	1
4	R1P + R2A + R3B + R4P	2	Front PERC / Adaptor PERC	No	0	2	2	2
5	R1S + R2A + R3A + R4P	2	Front PERC	No	0	3	0	3
6	R2A + R4Q	2	Front PERC / Adaptor PERC	Yes	0	1	2	1
7	R1Q + R2A + R4Q	2	Front PERC / Adaptor PERC	Yes	2	1	2	1
8	U.2 R1 Paddle card + R2A + R3B + R4D Paddle card	2	No	No	0	2	2	2
9	R1B + R2A	1	Front PERC / Adaptor PERC	No	2	1	0	0
10	R2A + R3B	2	Front PERC / Adaptor PERC	Yes	0	1	2	1
11	R1-E3 Paddle card + R2A + R3B + 2U R4-E3 Paddle card	2	No	Yes	0	2	2	2

Table 119. PCIe Riser Configs (continued)

Config #	RSR Configuration	# of CPUs	PERC type supported	Rear Storage Possible	x8 CPU 1	x16 CPU 1	x8 CPU 2	x16 CPU 2
12	R1-E3X4 Paddle card+R2A+R3B +R4-E3 Paddle card	2	No	No	0	2	2	2
13	R1-E3 Paddle card+R2A+R3B +R4-SCMX4 Paddle card	2	No	No	0	2	2	2
14	R2a+R3a+R1_R4 Paddle card	2	No	No	0	1	0	2
15	R2a+R3a+E3 R1_R4 Paddle Card	2	No	No	0	1	0	2

 **NOTE:** The expansion-card slots are not hot-swappable.

The following table provides guidelines for installing expansion cards to ensure proper cooling and mechanical fit. The expansion cards with the highest priority should be installed first using the slot priority indicated. All the other expansion cards should be installed in the card priority and slot priority order.

Table 120. Config0. No RSR

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (LOM Card)	Integrated slot	1
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS)	Integrated slot	1
FOXCONN (BOSS)	Integrated slot	1

Table 121. Config1. R1B+R4B

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	8	1
NVIDIA (GPU A2, FH)	1,2,7,8	4
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1

Table 121. Config1. R1B+R4B (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
External Adapter HBA465E, LP/FH	1,2,7,8	4
External Adapter H965e, LP/FH	1,2,7,8	4
Inventec (LOM Card)	Integrated slot	1
Intel (NIC: 100Gb, FH)	1,2,7,8	4
Intel (NIC: 25Gb, FH)	1,2,7,8	4
Mellanox (NIC: 25Gb, FH)	1,2,7,8	4
Broadcom (NIC: 25Gb, FH)	1,2,7,8	4
Broadcom (HBA: FC64, FH)	1,2,7,8	4
Broadcom (HBA: FC32, FH)	1,2,7,8	4
Marvell (HBA: FC32, FH)	1,2,7,8	4
Broadcom (NIC: 10Gb, FH)	1,2,7,8	4
Intel (NIC: 10Gb, FH)	1,2,7,8	4
Intel (NIC: 1Gb, FH)	1,2,7,8	4
Broadcom (NIC: 1Gb, FH)	1,2,7,8	4
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 122. Config2. R1B+R2A+R3B+R4B

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4,8	1
NVIDIA (GPU A2, FH)	1,2,4,5,7,8	6
FOXCONN (FPERC H965)	Integrated slot	2
FOXCONN (FPERC H755N)	Integrated slot	2
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (APERC H965, LP/FH)	3	1
FOXCONN (APERC H755, LP/FH)	1,2,3	1
FOXCONN (APERC H355, LP/FH)	1,2,3	1
FOXCONN (APERC HBA355I, LP/FH)	1,2,3	1

Table 122. Config2. R1B+R2A+R3B+R4B (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	1,2,3,4,5,6,7,8	8
External Adapter H965e, LP/FH	1,2,3,4,5,6,7,8	8
Inventec (LOM Card)	Integrated slot	1
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	1,2,4,5,7,8	6
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	1,2,4,5,7,8	6
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	1,2,4,5,7,8	6
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	1,2,4,5,7,8	6
Broadcom (HBA: FC64, FH)	1,2,4,5,7,8	6
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	1,2,4,5,7,8	6
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	1,2,4,5,7,8	6
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	1,2,4,5,7,8	6
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	1,2,4,5,7,8	6
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	1,2,4,5,7,8	6
Broadcom (NIC: 1Gb, FH)	1,2,4,5,7,8	6
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1

Table 122. Config2. R1B+R2A+R3B+R4B (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
FOXCONN (BOSS-N1)	Integrated slot	1

Table 123. Config3. R1Q+R2A+R3B+R4Q

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4,8	1
NVIDIA (GPU A2, FH)	1,2,4,5,7,8	6
FOXCONN (FPERC H965)	Integrated slot	2
FOXCONN (FPERC H755N)	Integrated slot	2
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (APERC H965, LP/FH)	3	1
FOXCONN (APERC H755, LP/FH)	1,2,3	1
FOXCONN (APERC H355, LP/FH)	1,2,3	1
FOXCONN (APERC HBA355I, LP/FH)	1,2,3	1
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	1,2,3,4,5,6,7,8	8
External Adapter H965e, LP/FH	1,2,3,4,5,6,7,8	8
Inventec (LOM Card)	Integrated slot	1
Inventec (Paige Card)	Integrated slot	1
Inventec (Melody Card)	Integrated slot	1
Intel (SmartNIC: 100Gb, FH)	7	1
Mellanox (SmartNIC: 25Gb, FH)	7	1
Intel (SmartNIC: 25Gb, FH)	7	1
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	1,2,4,5,7,8	6
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	1,2,4,5,7,8	6
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	1,2,4,5,7,8	6
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	1,2,4,5,7,8	6
Broadcom (HBA: FC64, FH)	1,2,4,5,7,8	6
Broadcom (HBA: FC64, LP)	3,6	2

Table 123. Config3. R1Q+R2A+R3B+R4Q (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Broadcom (HBA: FC32, FH)	1,2,4,5,7,8	6
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	1,2,4,5,7,8	6
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	1,2,4,5,7,8	6
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	1,2,4,5,7,8	6
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	1,2,4,5,7,8	6
Broadcom (NIC: 1Gb, FH)	1,2,4,5,7,8	6
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 124. Config4-1. R1P+R2A+R3B+R4P(HL)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU A2, FH)	2,4,5,7	4
FOXCONN (FPERC H965)	Integrated slot	2
FOXCONN (FPERC H755N)	Integrated slot	2
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (APERC H965, LP/FH)	3	1
FOXCONN (APERC H755, LP/FH)	2,3	1
FOXCONN (APERC H355, LP/FH)	2,3	1
FOXCONN (APERC HBA355I, LP/FH)	2,3	1
FOXCONN (External Adapter HBA355E, LP)	3,6	2

Table 124. Config4-1. R1P+R2A+R3B+R4P(HL) (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
External Adapter HBA465E, LP/FH	2,3,4,5,6,7	6
External Adapter H965e, LP/FH	2,3,4,5,6,7	6
Inventec (LOM Card)	Integrated slot	1
Inventec (Paige Card)	Integrated slot	1
Inventec (Melody Card)	Integrated slot	1
Pesandro (SmartNIC: 100Gb, FH)	2,7	2
Intel (SmartNIC: 100Gb, FH)	2,7	2
Mellanox (SmartNIC: 100Gb, FH)	2,7	2
Pesandro (SmartNIC: 25Gb, FH)	2,7	2
Mellanox (SmartNIC: 25Gb, FH)	2,7	2
Intel (SmartNIC: 25Gb, FH)	2,7	2
Mellanox (NIC: 400Gb, FH)	2,7	2
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, FH)	2,7	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	2,4,5,7	4
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, FH)	2,7	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	2,4,5,7	4
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	2,4,5,7	4
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	2,7	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	2,4,5,7	4
Broadcom (HBA: FC64, FH)	2,4,5,7	4
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	2,4,5,7	4
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	2,4,5,7	4
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	2,4,5,7	4
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	2,4,5,7	4
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2

Table 124. Config4-1. R1P+R2A+R3B+R4P(HL) (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Intel (NIC: 1Gb, FH)	2,4,5,7	4
Broadcom (NIC: 1Gb, FH)	2,4,5,7	4
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, FH)	2,7	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, FH)	2,7	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 125. Config4-2. R1P+R2A+R3B+R4P(FL)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU A40, FH)	2,7	2
NVIDIA (GPU A100, FH)	2,7	2
NVIDIA (GPU A800, FH)	2,7	2
NVIDIA (GPU A30, FH)	2,7	2
NVIDIA (GPU A16, FH)	2,7	2
AMD (GPU MI210, FH)	2,7	2
NVIDIA (GPU A2, FH)	2,4,5,7	4
FOXCONN (FPERC H965)	Integrated slot	2
FOXCONN (FPERC H755N)	Integrated slot	2
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (APERC H965, LP/FH)	3	1
FOXCONN (APERC H755, LP/FH)	2,3	1
FOXCONN (APERC H355, LP/FH)	2,3	1
FOXCONN (APERC HBA355I, LP/FH)	2,3	1
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	2,3,4,5,6,7	6

Table 125. Config4-2. R1P+R2A+R3B+R4P(FL) (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
External Adapter H965e, LP/FH	2,3,4,5,6,7	6
Inventec (LOM Card)	Integrated slot	1
Inventec (Paige Card)	Integrated slot	1
Inventec (Melody Card)	Integrated slot	1
Pesandro (SmartNIC: 100Gb, FH)	2,7	2
Intel (SmartNIC: 100Gb, FH)	2,7	2
Mellanox (SmartNIC: 100Gb, FH)	2,7	2
Pesandro (SmartNIC: 25Gb, FH)	2,7	2
Mellanox (SmartNIC: 25Gb, FH)	2,7	2
Intel (SmartNIC: 25Gb, FH)	2,7	2
Mellanox (NIC: 400Gb, FH)	2,7	2
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, FH)	2,7	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	2,4,5,7	4
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, FH)	2,7	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	2,4,5,7	4
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	2,4,5,7	4
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	2,7	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	2,4,5,7	4
Broadcom (HBA: FC64, FH)	2,4,5,7	4
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	2,4,5,7	4
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	2,4,5,7	4
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	2,4,5,7	4
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	2,4,5,7	4
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	2,4,5,7	4
Broadcom (NIC: 1Gb, FH)	2,4,5,7	4

Table 125. Config4-2. R1P+R2A+R3B+R4P(FL) (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, FH)	2,7	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, FH)	2,7	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 126. Config5-1. R1S+R2A+R3A+R4P(HL)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
NVIDIA (GPU A2, FH)	1,2,5,7	4
FOXCONN (FPERC H965)	Integrated slot	2
FOXCONN (FPERC H755N)	Integrated slot	2
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	1,2,3,5,6,7	6
External Adapter H965e, LP/FH	1,2,3,5,6,7	6
Inventec (LOM Card)	Integrated slot	1
Inventec (Paige Card)	Integrated slot	1
Inventec (Melody Card)	Integrated slot	1
Pesandro (SmartNIC: 100Gb, FH)	2,7	2
Intel (SmartNIC: 100Gb, FH)	2,7	2
Mellanox (SmartNIC: 100Gb, FH)	2,7	2
Pesandro (SmartNIC: 25Gb, FH)	2,7	2
Mellanox (SmartNIC: 25Gb, FH)	2,7	2
Intel (SmartNIC: 25Gb, FH)	2,7	2
Mellanox (NIC: 400Gb, FH)	1,2,5,7	4
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, FH)	1,2,5,7	4

Table 126. Config5-1. R1S+R2A+R3A+R4P(HL) (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	1,2,5,7	4
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, FH)	1,2,5,7	4
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	1,2,5,7	4
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	1,2,5,7	4
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	1,2,5,7	4
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (HBA: FC64, FH)	1,2,5,7	4
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	1,2,5,7	4
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	1,2,5,7	4
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	1,2,5,7	4
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	1,2,5,7	4
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	1,2,5,7	4
Broadcom (NIC: 1Gb, FH)	1,2,5,7	4
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, FH)	1,2,5,7	4
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, FH)	1,2,5,7	4
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 127. Config5-2. R1S+R2A+R3A+R4P(FL)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
NVIDIA (GPU A40, FH)	7	1
NVIDIA (GPU A100, FH)	7	1
NVIDIA (GPU A800, FH)	7	1
NVIDIA (GPU A30, FH)	7	1
NVIDIA (GPU A16, FH)	7	1
AMD (GPU MI210, FH)	7	1
NVIDIA (GPU A2, FH)	1,2,5,7	4
FOXCONN (FPERC H965)	Integrated slot	2
FOXCONN (FPERC H755N)	Integrated slot	2
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	1,2,3,5,6,7	6
External Adapter H965e, LP/FH	1,2,3,5,6,7	6
Inventec (LOM Card)	Integrated slot	1
Inventec (Paige Card)	Integrated slot	1
Inventec (Melody Card)	Integrated slot	1
Pesandro (SmartNIC: 100Gb, FH)	2,7	2
Intel (SmartNIC: 100Gb, FH)	2,7	2
Mellanox (SmartNIC: 100Gb, FH)	2,7	2
Pesandro (SmartNIC: 25Gb, FH)	2,7	2
Mellanox (SmartNIC: 25Gb, FH)	2,7	2
Intel (SmartNIC: 25Gb, FH)	2,7	2
Mellanox (NIC: 400Gb, FH)	1,2,5,7	4
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, FH)	1,2,5,7	4
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	1,2,5,7	4
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, FH)	1,2,5,7	4
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	1,2,5,7	4
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	1,2,5,7	4
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	1,2,5,7	4

Table 127. Config5-2. R1S+R2A+R3A+R4P(FL) (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (HBA: FC64, FH)	1,2,5,7	4
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	1,2,5,7	4
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	1,2,5,7	4
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	1,2,5,7	4
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	1,2,5,7	4
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	1,2,5,7	4
Broadcom (NIC: 1Gb, FH)	1,2,5,7	4
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, FH)	1,2,5,7	4
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, FH)	1,2,5,7	4
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 128. Config6. R2A+R4Q

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	8	1
NVIDIA (GPU A2, FH)	7,8	2
FOXCONN (FPERC H965)	Integrated slot	2
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (APERC H965, LP)	3	1
FOXCONN (APERC H755, LP)	2,3	1
FOXCONN (APERC H355, LP)	2,3	1

Table 128. Config6. R2A+R4Q (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
FOXCONN (APERC HBA355I, LP)	2,3	1
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	3,6,7,8	4
External Adapter H965e, LP/FH	3,6,7,8	4
Inventec (LOM Card)	Integrated slot	1
Inventec (Paige Card)	Integrated slot	1
Inventec (Melody Card)	Integrated slot	1
Intel (SmartNIC: 100Gb, FH)	7	1
Mellanox (SmartNIC: 25Gb, FH)	7	1
Intel (SmartNIC: 25Gb, FH)	7	1
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	7,8	2
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	7,8	2
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	7,8	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	7,8	2
Broadcom (HBA: FC64, FH)	7,8	2
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	7,8	2
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	7,8	2
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	7,8	2
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	7,8	2
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	7,8	2
Broadcom (NIC: 1Gb, FH)	7,8	2
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2

Table 128. Config6. R2A+R4Q (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 129. Config7. R1Q+R2A+R4Q

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	8	1
NVIDIA (GPU A2, FH)	1,2,7,8	4
FOXCONN (FPERC H965)	Integrated slot	1
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (APERC H965, LP)	3	1
FOXCONN (APERC H755, LP/FH)	1,2,3	1
FOXCONN (APERC H355, LP/FH)	1,2,3	1
FOXCONN (APERC HBA355I, LP/FH)	1,2,3	1
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	1,2,3,6,7,8	6
External Adapter H965e, LP/FH	1,2,3,6,7,8	6
Inventec (LOM Card)	Integrated slot	1
Inventec (Paige Card)	Integrated slot	1
Inventec (Melody Card)	Integrated slot	1
Intel (SmartNIC: 100Gb, FH)	7	1
Mellanox (SmartNIC: 25Gb, FH)	7	1
Intel (SmartNIC: 25Gb, FH)	7	1
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	1,2,7,8	4
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	1,2,7,8	4
Intel (NIC: 25Gb, LP)	3,6	2

Table 129. Config7. R1Q+R2A+R4Q (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Mellanox (NIC: 25Gb, FH)	1,2,7,8	4
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	1,2,7,8	4
Broadcom (HBA: FC64, FH)	1,2,7,8	4
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	1,2,7,8	4
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	1,2,7,8	4
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	1,2,7,8	4
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	1,2,7,8	4
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	1,2,7,8	4
Broadcom (NIC: 1Gb, FH)	1,2,7,8	4
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 130. Config8. R2A+R3B+R1_R4 Paddle

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU A2, FH)	4,5	2
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	3,4,5,6	4
External Adapter H965e, LP/FH	3,4,5,6	4
Inventec (LOM Card)	Integrated slot	1

Table 130. Config8. R2A+R3B+R1_R4 Paddle (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	4,5	2
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	4,5	2
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	4,5	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	4,5	2
Broadcom (HBA: FC64, FH)	4,5	2
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	4,5	2
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	4,5	2
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	4,5	2
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	4,5	2
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 131. Config9. R1B+R2A (1CPU Min Con)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
NVIDIA (GPU A2, FH)	1,2	2
FOXCONN (APERC H355, LP/FH)	1,2,3	1
FOXCONN (External Adapter HBA355E, LP)	3	1
External Adapter HBA465E, LP/FH	1,2,3	3
External Adapter H965e, LP/FH	1,2,3	3
Inventec (LOM Card)	Integrated slot	1
Mellanox (NIC: 400Gb, LP)	3	1
Broadcom (NIC: 100Gb, LP)	3	1
Intel (NIC: 100Gb, FH)	1,2	2
Intel (NIC: 100Gb, LP)	3	1
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	1,2	2
Intel (NIC: 25Gb, LP)	3	1
Mellanox (NIC: 25Gb, FH)	1,2	2
Mellanox (NIC: 25Gb, LP)	3	1
Broadcom (NIC: 25Gb, LP)	3	1
Broadcom (NIC: 25Gb, FH)	1,2	2
Broadcom (HBA: FC64, FH)	1,2	2
Broadcom (HBA: FC64, LP)	3	1
Broadcom (HBA: FC32, FH)	1,2	2
Broadcom (HBA: FC32, LP)	3	1
Marvell (HBA: FC32, FH)	1,2	2
Marvell (HBA: FC32, LP)	3	1
Broadcom (NIC: 10Gb, FH)	1,2	2
Broadcom (NIC: 10Gb, LP)	3	1
Intel (NIC: 10Gb, FH)	1,2	2
Intel (NIC: 10Gb, LP)	3	1
Intel (NIC: 1Gb, LP)	3	1
Intel (NIC: 1Gb, FH)	1,2	2
Broadcom (NIC: 1Gb, FH)	1,2	2
Broadcom (NIC: 1Gb, LP)	3	1
Mellanox (NIC: NDR200, LP)	3	1
Mellanox (NIC: HDRV, LP)	3	1
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1

Table 131. Config9. R1B+R2A (1CPU Min Con) (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 132. Config10. R2A+R3B

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU A2, FH)	4,5	2
FOXCONN (FPERC H965)	Integrated slot	1
FOXCONN (FPERC H755)	Integrated slot	1
FOXCONN (FPERC H355)	Integrated slot	1
FOXCONN (FPERC HBA355I)	Integrated slot	1
FOXCONN (APERC H755, LP/FH)	3	1
FOXCONN (APERC H355, LP/FH)	3	1
FOXCONN (APERC HBA355I, LP/FH)	3	1
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	3,4,5,6	4
External Adapter H965e, LP/FH	3,4,5,6	4
Inventec (LOM Card)	Integrated slot	1
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	4,5	2
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	4,5	2
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	4,5	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	4,5	2
Broadcom (HBA: FC64, FH)	4,5	2
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	4,5	2
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	4,5	2
Marvell (HBA: FC32, LP)	3,6	2

Table 132. Config10. R2A+R3B (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Broadcom (NIC: 10Gb, FH)	4,5	2
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	4,5	2
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 133. Config11. R2A+R3B+E3 R1_R4 Paddle

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU A2, FH)	4,5	2
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	3,4,5,6	4
External Adapter H965e, LP/FH	3,4,5,6	4
Inventec (LOM Card)	Integrated slot	1
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	4,5	2
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	4,5	2
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	4,5	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2

Table 133. Config11. R2A+R3B+E3 R1_R4 Paddle (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Broadcom (NIC: 25Gb, FH)	4,5	2
Broadcom (HBA: FC64, FH)	4,5	2
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	4,5	2
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	4,5	2
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	4,5	2
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	4,5	2
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 134. Config12. R2A+R3B+E3 G5x4 Paddle

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU A2, FH)	4,5	2
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	3,4,5,6	4
External Adapter H965e, LP/FH	3,4,5,6	4
Inventec (LOM Card)	Integrated slot	1
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	4,5	2

Table 134. Config12. R2A+R3B+E3 G5x4 Paddle (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	4,5	2
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	4,5	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	4,5	2
Broadcom (HBA: FC64, FH)	4,5	2
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	4,5	2
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	4,5	2
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	4,5	2
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	4,5	2
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 135. Config13. R2A+R3B+E3_SCM Paddle

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU A2, FH)	4,5	2

Table 135. Config13. R2A+R3B+E3_SCM Paddle (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
FOXCONN (External Adapter HBA355E, LP)	3,6	2
External Adapter HBA465E, LP/FH	3,4,5,6	4
External Adapter H965e, LP/FH	3,4,5,6	4
Inventec (LOM Card)	Integrated slot	1
Mellanox (NIC: 400Gb, LP)	3,6	2
Broadcom (NIC: 100Gb, LP)	3,6	2
Intel (NIC: 100Gb, FH)	4,5	2
Intel (NIC: 100Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	3	1
Intel (NIC: 25Gb, FH)	4,5	2
Intel (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	4,5	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	4,5	2
Broadcom (HBA: FC64, FH)	4,5	2
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	4,5	2
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	4,5	2
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	4,5	2
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 10Gb, FH)	4,5	2
Intel (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, FH)	4,5	2
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: HDRV, LP)	3,6	2
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1

Table 135. Config13. R2A+R3B+E3_SCM Paddle (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 136. Config14. R2A+R3A+R1_R4 Paddle

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU,A2, FH)	5	1
NVIDIA (GPU A2, V2, FH)	5	1
NVIDIA (GPU L4, FH)	5	1
FOXCONN (External Adapter HBA355E, LP)	3,5,6	3
FOXCONN (External Adapter HBA355E, V2, LP)	3,6	2
External Adapter HBA465E, LP/FH	3,5,6	3
External Adapter H965e, LP/FH	3,5,6	3
H965e External RAID Controller	3,5,6	3
Inventec (LOM Card)	Integrated slot	1
Inventec (LOM Card) v2	Integrated slot	1
Broadcom (NIC: 10Gb, FH)	5	1
Broadcom (NIC: 10Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	5	2
Mellanox (NIC: 100Gb, FH)	5	1
Intel (NIC: 100Gb, FH)	3,6	2
Intel (NIC: 100Gb, LP)	5	1
Intel (NIC: 40Gb, LP)	3,6	2
Intel (NIC: 25Gb, LP)	5	1
Intel (NIC: 25Gb, LP)	3,6	2
Intel (NIC: 25Gb, LP)	5	1
Mellanox (NIC: 25Gb, FH)	5	1
Mellanox (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	5	1
Broadcom (NIC: 25Gb, FH)	5	1
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	5	1
Mellanox (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (HBA: FC64, FH)	5	1
Broadcom (HBA: FC64, LP)	3,6	2

Table 136. Config14. R2A+R3A+R1_R4 Paddle (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Broadcom (HBA: FC32, FH)	5	1
Broadcom (HBA: FC32, LP)	3,6	2
Broadcom (HBA: FC32, FH)	5	1
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	5	1
Marvell (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	5	1
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	5	1
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH) V3	5	1
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH) F1	5	1
Broadcom (NIC: 1Gb, FH)	5	1
Broadcom (NIC: 1Gb, LP)	3,6	2
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: NDR200, FH)	5	1
Mellanox (NIC: HDRV, LP)	3,6	2
Mellanox (NIC: HDRV, FH)	5	1
Mellanox (NIC: HDR100 VPI, LP)	3,6	2
Mellanox (NIC: HDR100VPI, FH)	5	1
Intel (OCP: 100Gb)	Integrated slot	1
Mellanox (OCP: 100Gb)	Integrated slot	1
Intel (OCP: 25Gb)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Table 137. Config15. R2A+R3A+E3 G5x4 Paddle

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Inventec (Serial, FH)	4	1
NVIDIA (GPU,A2, FH)	5	1
NVIDIA (GPU A2, V2, FH)	5	1

Table 137. Config15. R2A+R3A+E3 G5x4 Paddle (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
NVIDIA (GPU L4, FH)	5	1
FOXCONN (External Adapter HBA355E, LP)	3,5,6	3
FOXCONN (External Adapter HBA355E, V2, LP)	3,6	2
FOXCONN External Adapter HBA465E, LP/FH	3,5,6	3
FOXCONN External Adapter H965e, LP/FH	3,5,6	3
H965e External RAID Controller	3,5,6	3
Inventec (LOM Card)	Integrated slot	1
Inventec (LOM Card) v2	Integrated slot	1
Broadcom (NIC: 10Gb, FH)	5	1
Broadcom (NIC: 10Gb, LP)	3,6	2
Mellanox (NIC: 100Gb, LP)	5	2
Mellanox (NIC: 100Gb, FH)	5	1
Intel (NIC: 100Gb, FH)	3,6	2
Intel (NIC: 100Gb, LP)	5	1
Intel (NIC: 40Gb, LP)	3,6	2
Intel (NIC: 25Gb, LP)	5	1
Intel (NIC: 25Gb, LP)	3,6	2
Intel (NIC: 25Gb, LP)	5	1
Mellanox (NIC: 25Gb, FH)	5	1
Mellanox (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, FH)	5	1
Broadcom (NIC: 25Gb, FH)	5	1
Broadcom (NIC: 25Gb, LP)	3,6	2
Broadcom (NIC: 25Gb, FH)	5	1
Mellanox (NIC: 25Gb, LP)	3,6	2
Mellanox (NIC: 25Gb, LP)	3,6	2
Broadcom (HBA: FC64, FH)	5	1
Broadcom (HBA: FC64, LP)	3,6	2
Broadcom (HBA: FC32, FH)	5	1
Broadcom (HBA: FC32, LP)	3,6	2
Broadcom (HBA: FC32, FH)	5	1
Broadcom (HBA: FC32, LP)	3,6	2
Marvell (HBA: FC32, FH)	5	1
Marvell (HBA: FC32, LP)	3,6	2

Table 137. Config15. R2A+R3A+E3 G5x4 Paddle (continued)

CARD TYPE	SLOT PRIORITY	MAXIMUM NUMBER OF CARDS
Marvell (HBA: FC32, FH)	5	1
Marvell (HBA: FC32, LP)	3,6	2
Broadcom (NIC: 10Gb, FH)	5	1
Broadcom (NIC: 10Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH) V3	5	1
Intel (NIC: 1Gb, LP)	3,6	2
Intel (NIC: 1Gb, FH) F1	5	1
Broadcom (NIC: 1Gb, FH)	5	1
Broadcom (NIC: 1Gb, LP)	3,6	2
Broadcom (NIC: 1Gb, LP)	3,6	2
Mellanox (NIC: NDR200, LP)	3,6	2
Mellanox (NIC: NDR200, FH)	5	1
Mellanox (NIC: HDRV, LP)	3,6	2
Mellanox (NIC: HDRV, FH)	5	1
Mellanox (NIC: HDR100 VPI, LP)	3,6	2
Mellanox (NIC: HDR100VPI, FH)	5	1
Intel (OCP: 100Gb)	Integrated slot	1
Mellanox (OCP: 100Gb)	Integrated slot	1
Intel (OCP: 25Gb 2P)	Integrated slot	1
Intel (OCP: 25Gb 4P)	Integrated slot	1
Mellanox (OCP: 25Gb)	Integrated slot	1
Broadcom (OCP: 25Gb 2P)	Integrated slot	1
Broadcom (OCP: 25Gb 4P)	Integrated slot	1
Broadcom (OCP: 10Gb)	Integrated slot	1
Intel (OCP: 10Gb 2P)	Integrated slot	1
Intel (OCP: 10Gb 4P)	Integrated slot	1
Broadcom (OCP: 1Gb)	Integrated slot	1
Intel (OCP: 1Gb V2)	Integrated slot	1
Intel (OCP: 1Gb V3)	Integrated slot	1
FOXCONN (BOSS-N1)	Integrated slot	1

Removing the expansion card risers

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. ***(i) NOTE:*** If BOSS N1 module is installed, ensure to disconnect the BOSS N1 power cable and Signal cable before removing the Riser 1 cage.

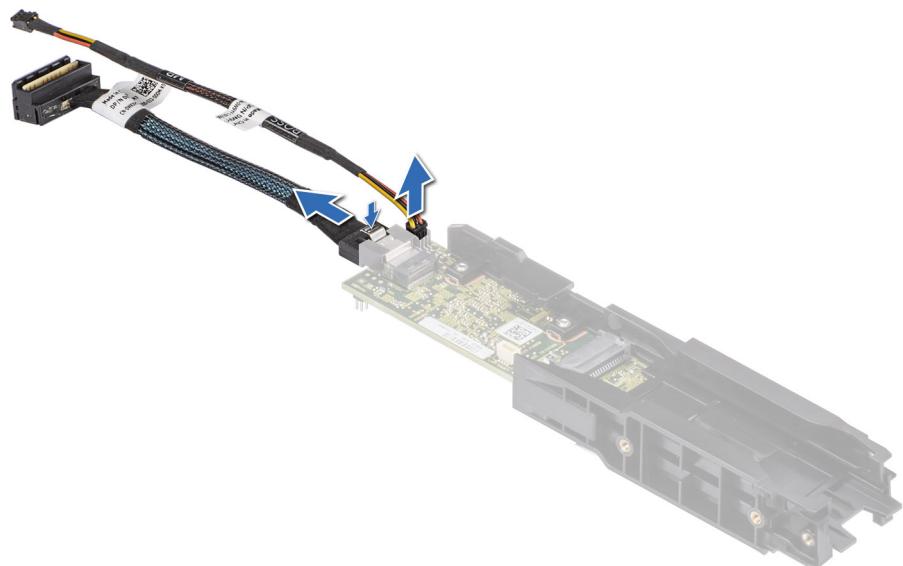


Figure 177. Removing the BOSS power cable and BOSS signal cable from the BOSS N1 controller card module

4. Disconnect any cables that are connected to the expansion card.

Steps

1. For Riser 1, loosen the captive screws on the riser.
 - a. Press the blue release tab and holding the edges lift the expansion card riser from the riser connector on the system board.

i | NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

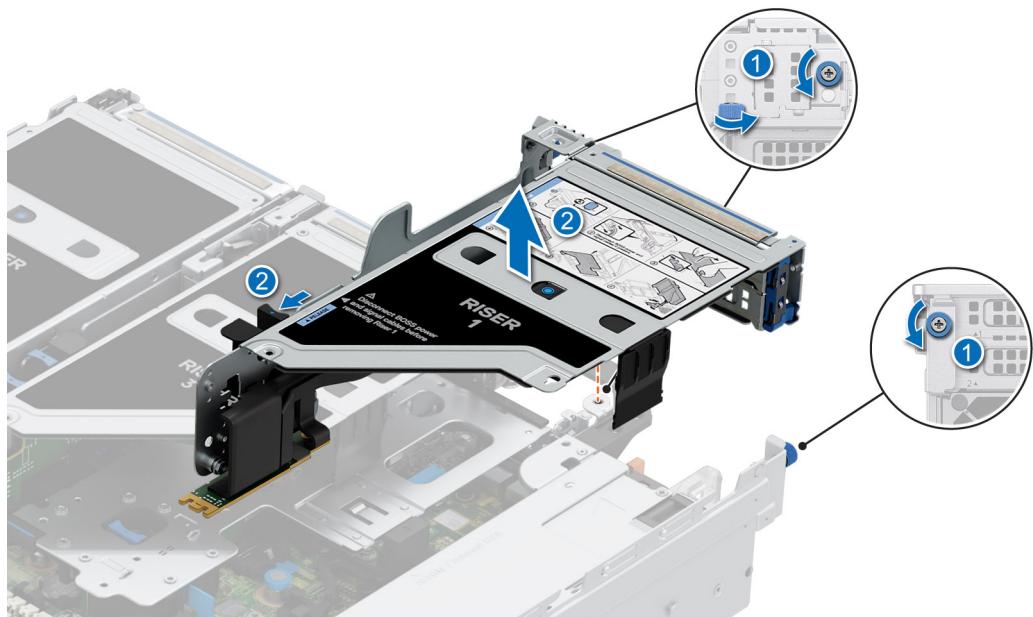


Figure 178. Removing the expansion card riser (Riser 1)

2. For Riser 3, loosen the captive screw, and then press the blue release tab and holding the edges lift the expansion card riser from the riser connector on the system board.

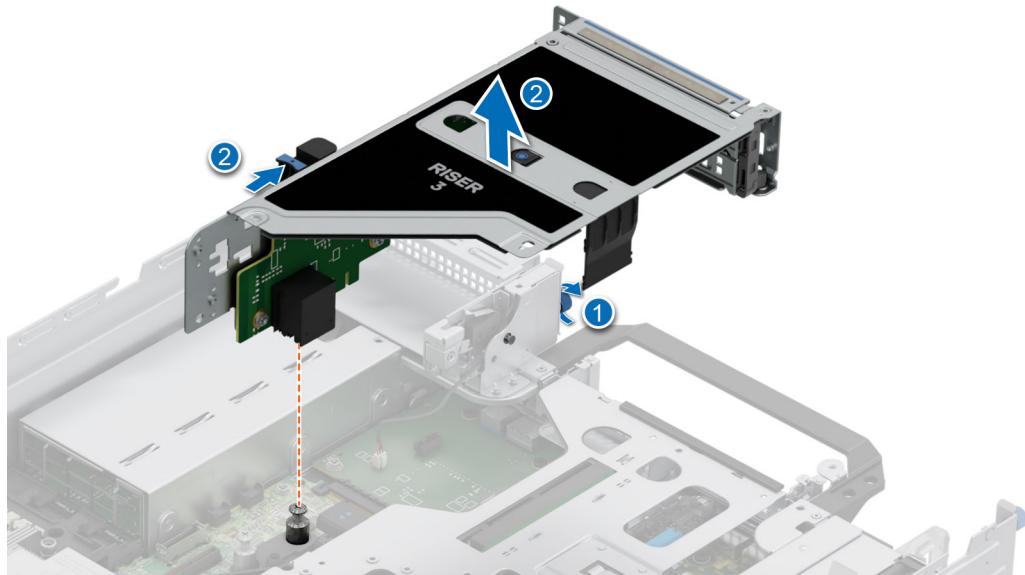


Figure 179. Removing the expansion card riser (Riser 3)

3. For Riser 2, press the blue button on the riser and holding the touch points (two strips on one side; one strip on the other side) lift the expansion card riser from the riser connector on the system board.

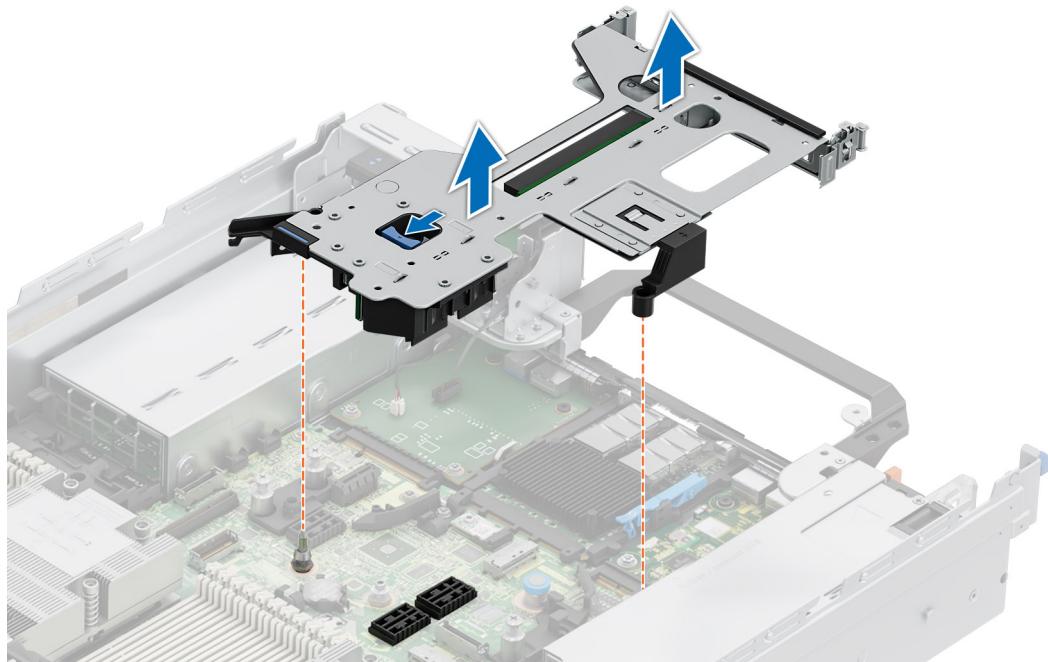


Figure 180. Removing the expansion card riser (Riser 2)

4. For Riser 4, loosen the captive screw on the riser, and then press the blue release tab on the riser, and holding the touch point lift the expansion card riser from the riser connector on the system board.

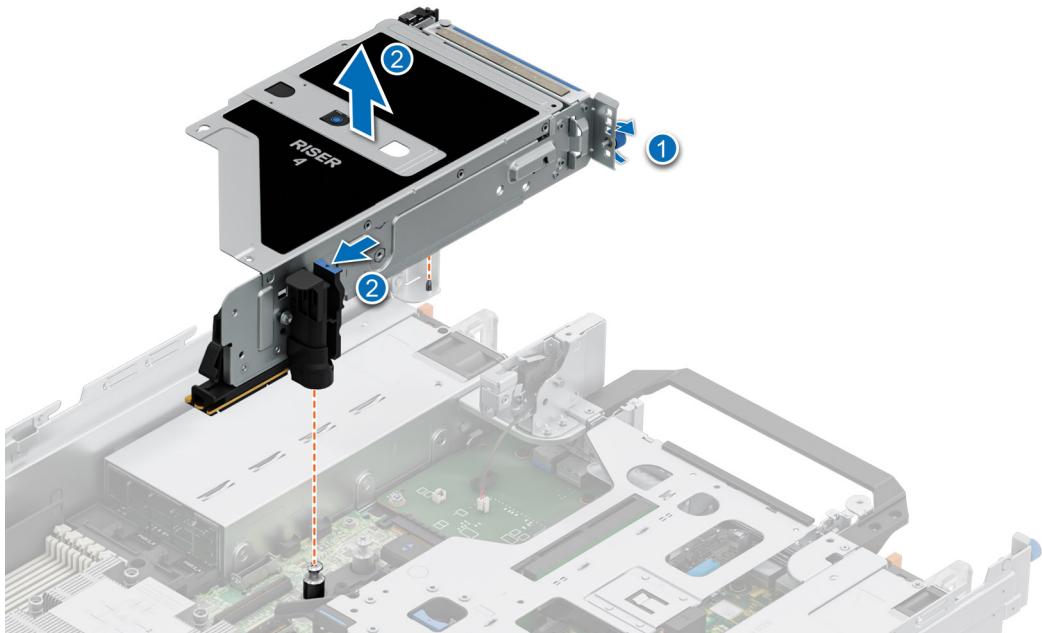


Figure 181. Removing the expansion card riser (Riser 4)

Next steps

1. Replace the expansion card riser.

Installing the expansion card risers

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If removed, [install the expansion cards](#) into the expansion card risers.

Steps

1. Holding the edges or the touch points, align the holes on the expansion card riser with the guides on the system board.
2. Lower the expansion card riser into place and press the touch points until the expansion card riser connector is fully seated on the system board connector.
3. Tighten the captive screws on the risers and system if any.

i **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

i **NOTE:** Riser 2A is installed first as it is seated underneath Riser 1P and Riser 3B.

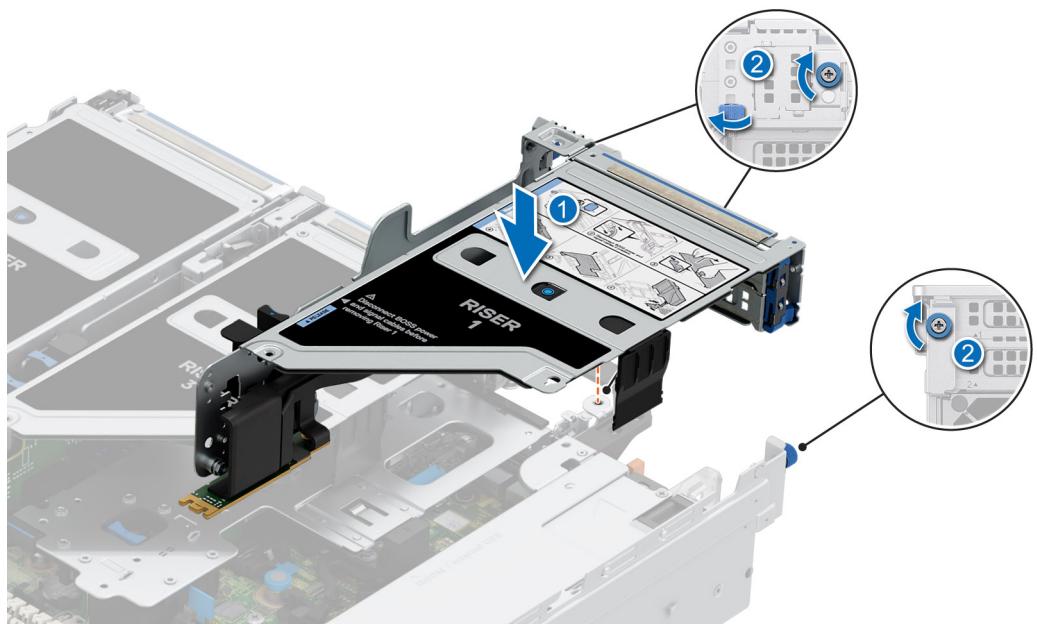


Figure 182. Installing the expansion card riser (Riser 1)

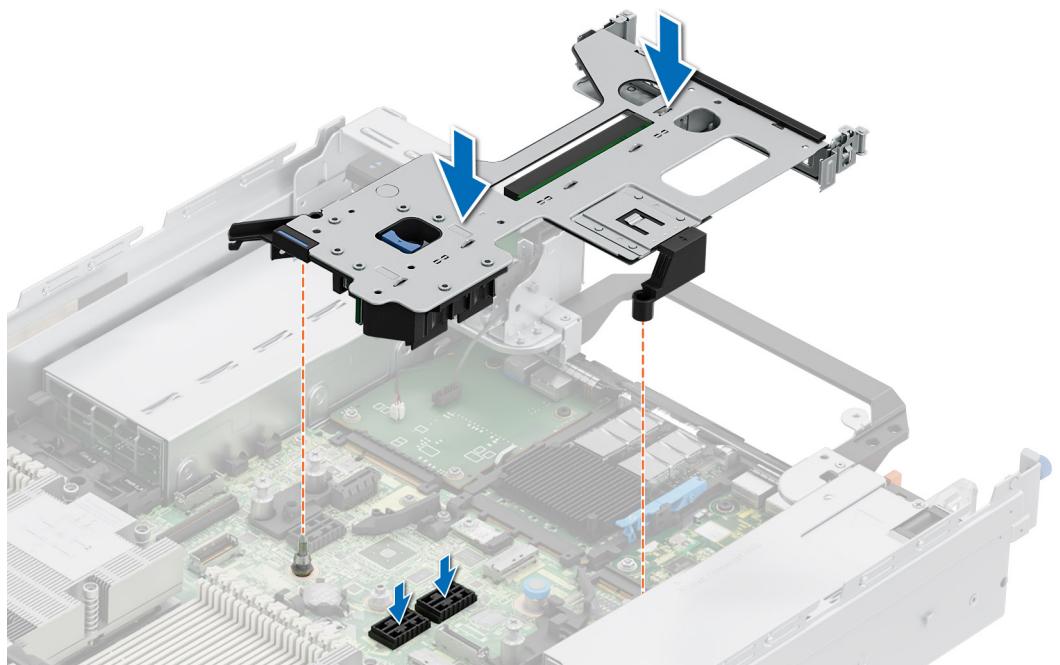


Figure 183. Installing the expansion card riser (Riser 2)

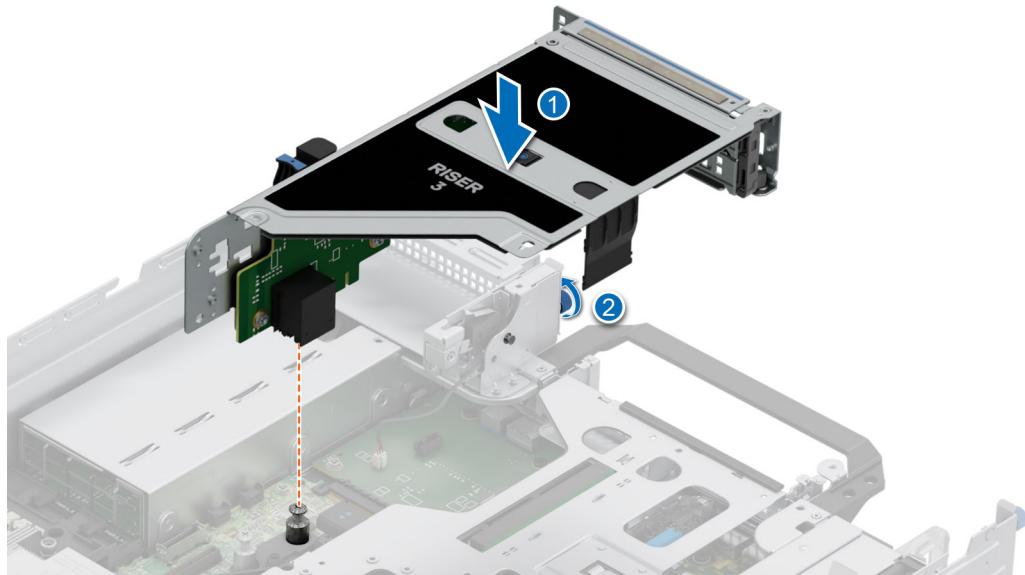


Figure 184. Installing the expansion card riser (Riser 3)

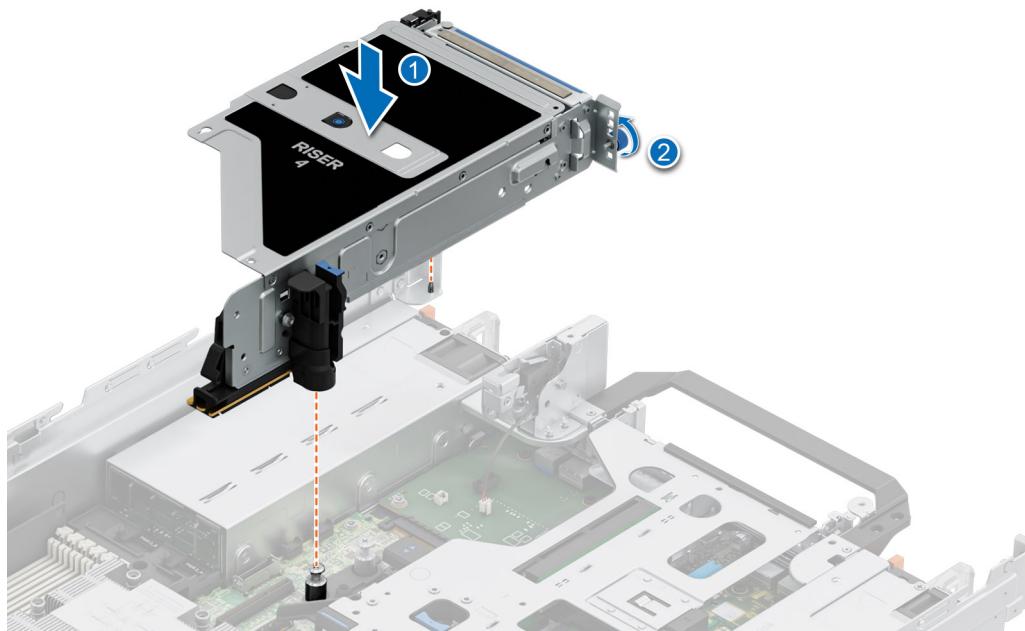


Figure 185. Installing the expansion card riser (Riser 4)

Next steps

1. If required, re-connect the cables to the expansion card.
2. Follow the procedure listed in [After working inside your system](#).
3. Install any device drivers required for the card as described in the documentation for the card.

Removing expansion card from the expansion card riser

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If applicable, disconnect the cables from the expansion card.

4. Remove the expansion card riser.

Steps

1. Pull and lift the expansion card retention latch lock to open.
2. Pull the black card holder before removing the card from the riser.
3. Hold the expansion card by the edges. and pull the card until the card edge connector disengages from the expansion card connector on the riser.

 **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

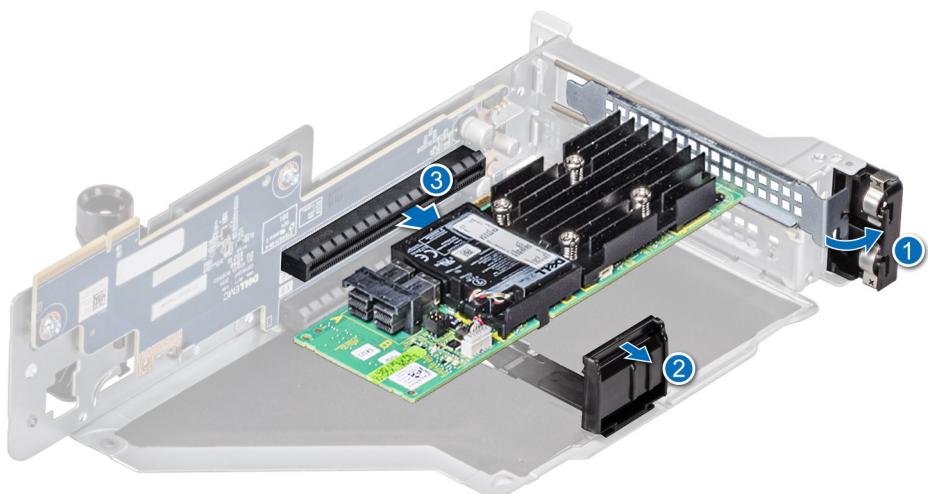


Figure 186. Removing expansion card from the expansion card riser

4. If the expansion card is not going to be replaced, install a filler bracket and close the card retention latch.

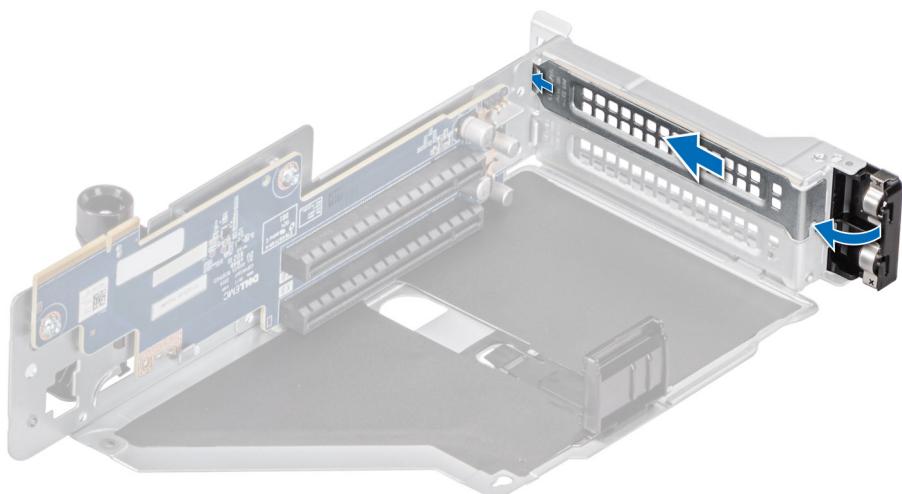


Figure 187. Installing the filler bracket

Next steps

1. If applicable, [install an expansion card into the expansion card riser](#).

Installing an expansion card into the expansion card riser

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If installing a new expansion card, unpack it and prepare the card for installation.

i **NOTE:** For instructions, see the documentation accompanying the card.

Steps

1. Pull and lift up the expansion card retention latch lock to open.
2. If installed, remove the filler bracket.

i **NOTE:** Store the filler bracket for future use. Filler brackets must be installed in empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

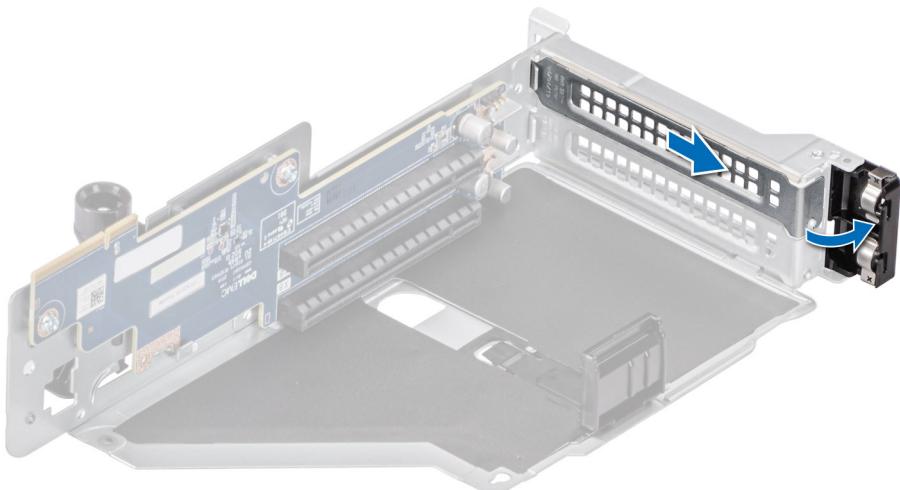


Figure 188. Removing the filler bracket

3. Hold the card by its edges, and align the card edge connector with the expansion card connector on the riser.
4. Insert the card edge connector firmly into the expansion card connector until the card is fully seated.
5. Close the expansion card retention latch.
6. Push the black card holder to hold the card in the riser.

i **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

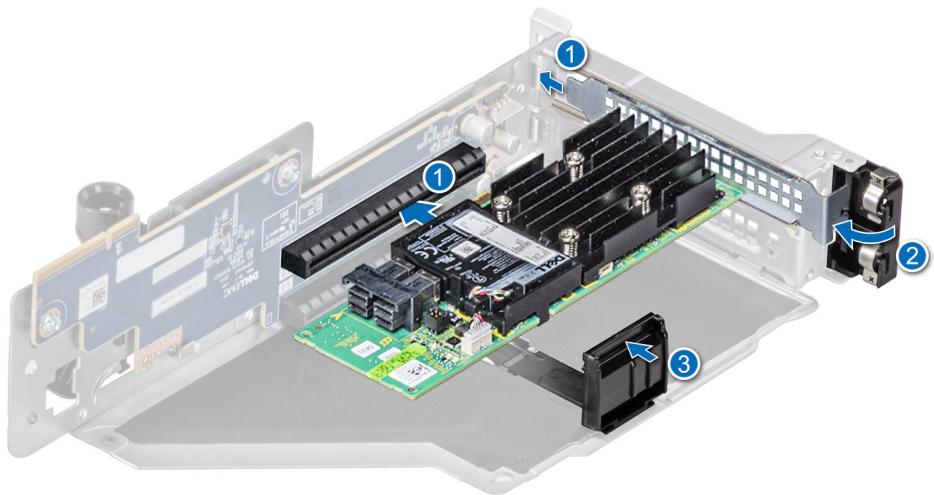


Figure 189. Installing an expansion card into the expansion card riser

Next steps

1. If applicable, connect the cables to the expansion card.
2. Follow the procedure listed in [After working inside your system](#).
3. Install any device drivers required for the card as described in the documentation for the card.

Removing the full length expansion card risers

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the GPU air shroud top cover](#).
4. If applicable, disconnect the cables from the expansion card or system board.
5. **(i) NOTE:** If the BOSS-N1 module is installed, ensure to disconnect the BOSS-N1 power cable and Signal cable before removing the Riser 1 cage.

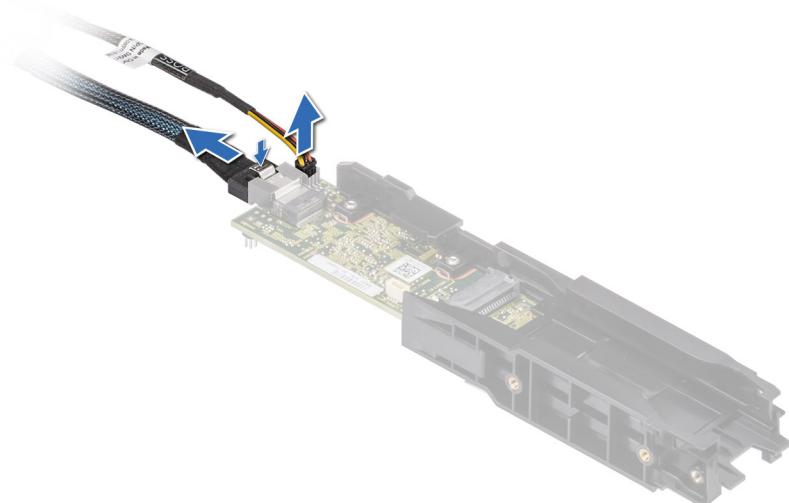


Figure 190. Removing the BOSS-N1 module

Steps

1. To remove full length expansion card riser:
 - a. Loosen the captive screws on the riser.
 - b. Press the blue release tab and holding the edges, lift the expansion card riser from the riser connector on the system board.
 - c. Disconnect the GPU power cable and signal cable from the system board.

 **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

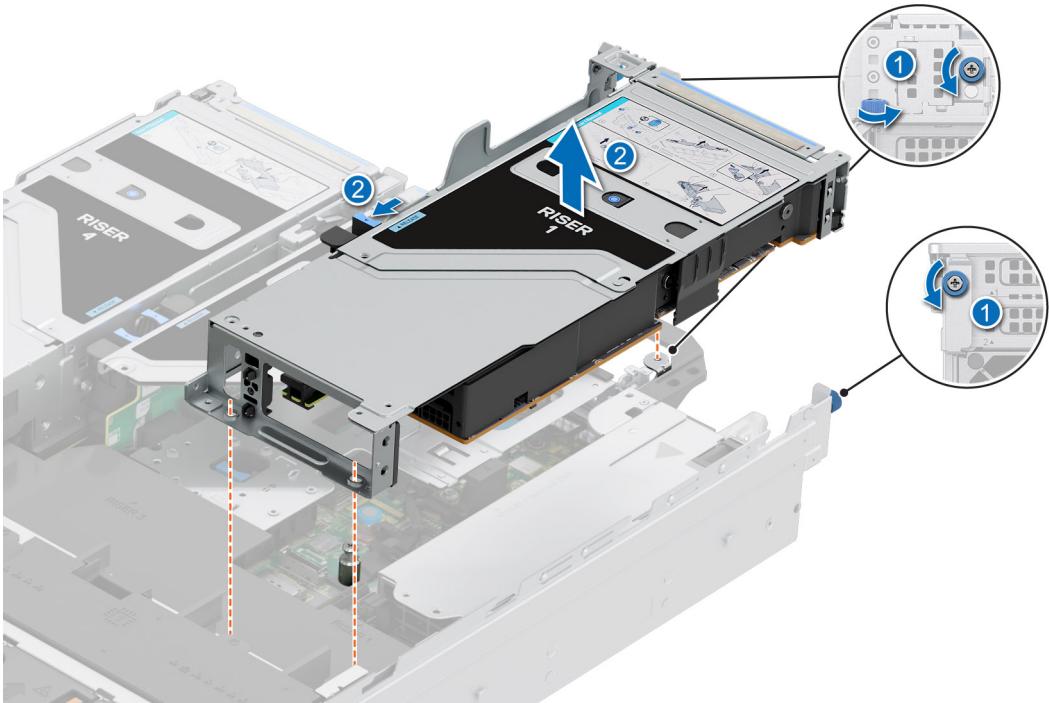


Figure 191. Removing the expansion card riser (Riser 1)

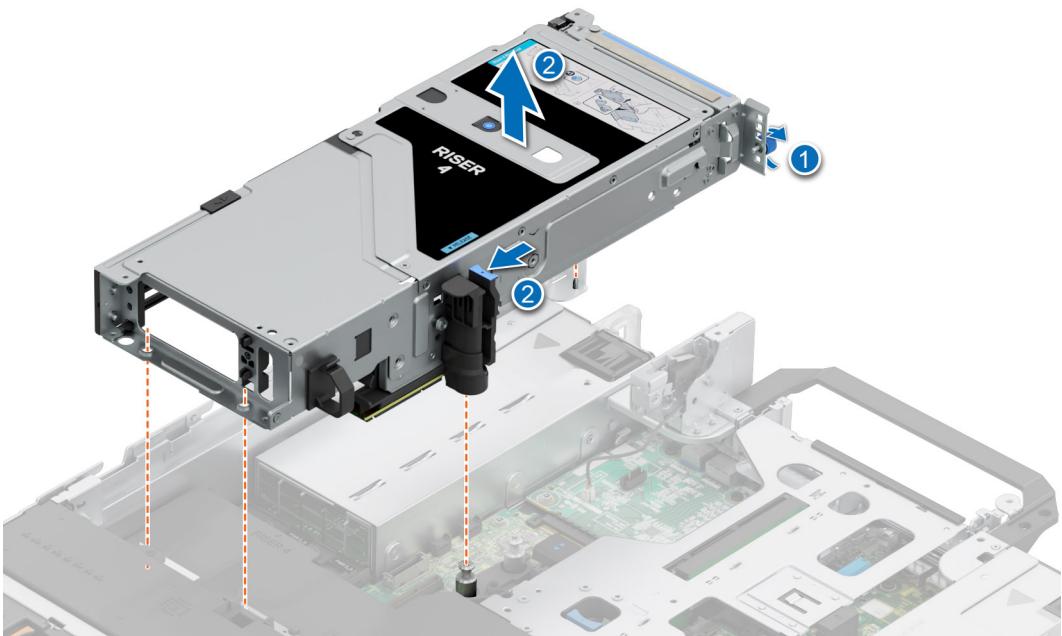


Figure 192. Removing the expansion card riser (Riser 4)

2. If the risers are not going to be replaced, install riser blanks and tighten the captive screws.

NOTE: You must install a filler bracket over an empty expansion card slot to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

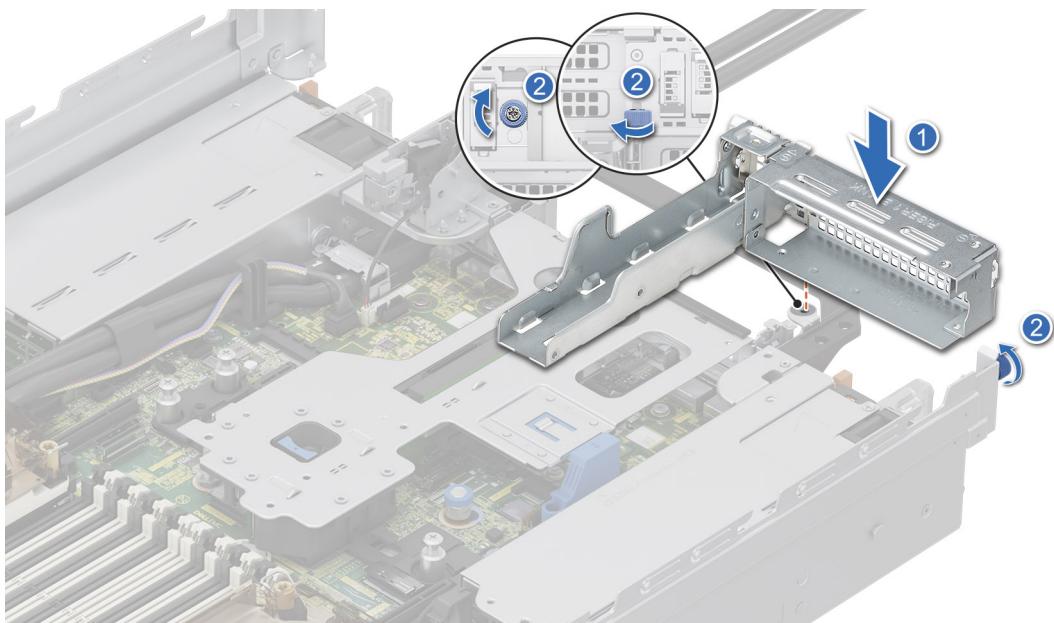


Figure 193. Installing the Riser 1 blank

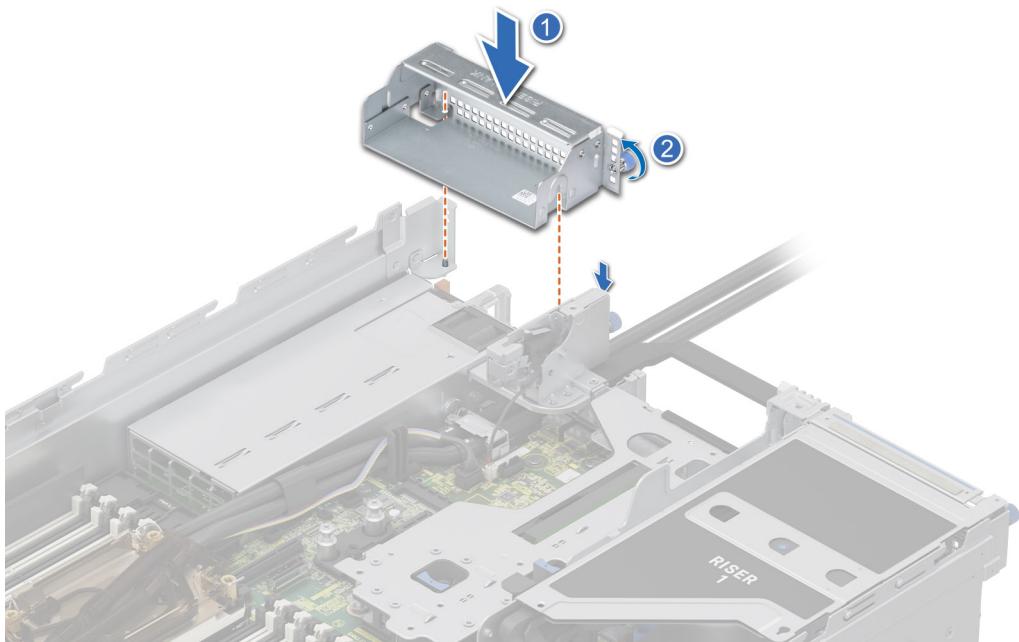


Figure 194. Installing the Riser 4 blank

Next steps

1. Replace the full length expansion card riser.

Installing the full length expansion card risers

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If installing full length expansion card riser for the first time, remove [air shroud](#) and replace it with GPU air shroud.
4. [Remove the GPU air shroud top cover](#).
5. If installed, [remove the GPU air shroud filler](#).
6. If removed, [install the GPU into the expansion card risers](#).

i **NOTE:** Full length risers are supported only in Riser 1 and Riser 4 slot and first install Riser4 and then Riser1.

Steps

1. If installed, remove the riser blanks by loosening the captive screws.

i **NOTE:** Store the Riser blanks for future use. Filler brackets must be installed in empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

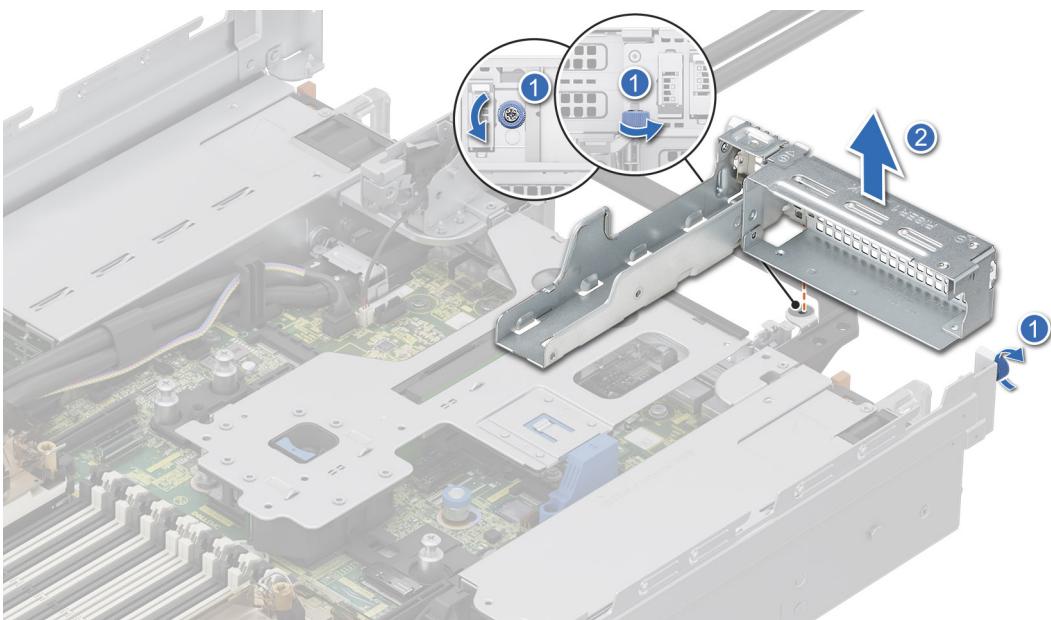


Figure 195. Removing the Riser 1 blank

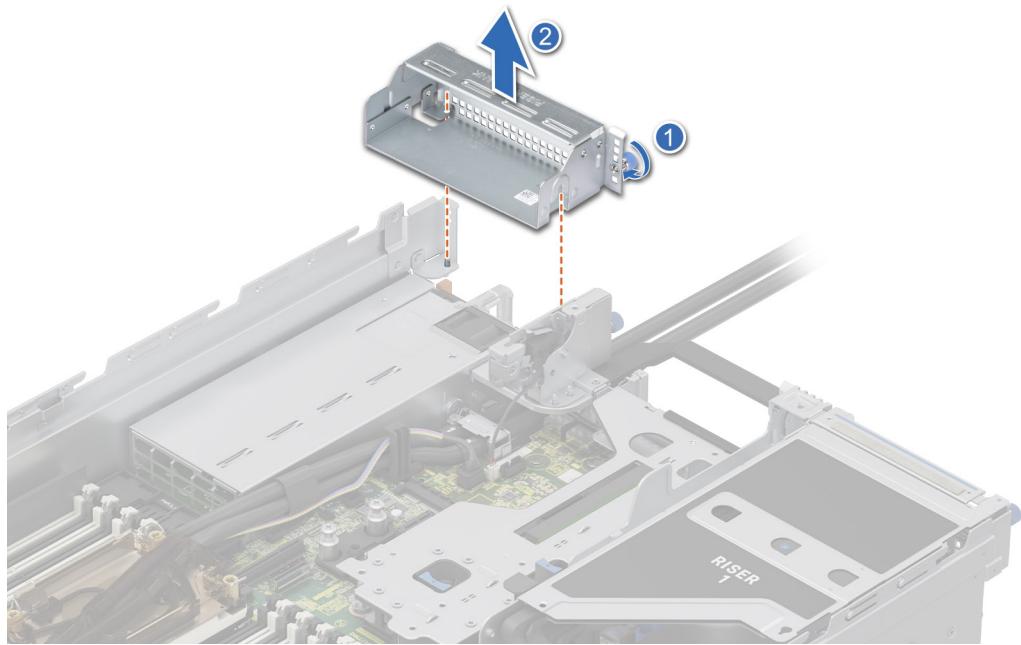


Figure 196. Removing the Riser 4 blank

2. To install the full length expansion card risers:
 - a. Connect the GPU power cable and signal cable to the connectors on the system board.

i | NOTE: Temporarily unplug and plug the VGA cable for making space to connect Riser 1 GPU power cable to system board.
 - b. Holding the edges or the touch points, align the holes on the expansion card riser with the guides on the system board and GPU air shroud.
 - c. Lower the expansion card riser into place and press the touch points until the expansion card riser connector is fully seated on the system board connector.
 - d. Tighten the captive screws on the risers and system if any.

i | NOTE: Route the cables properly through the riser clip.

i | NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

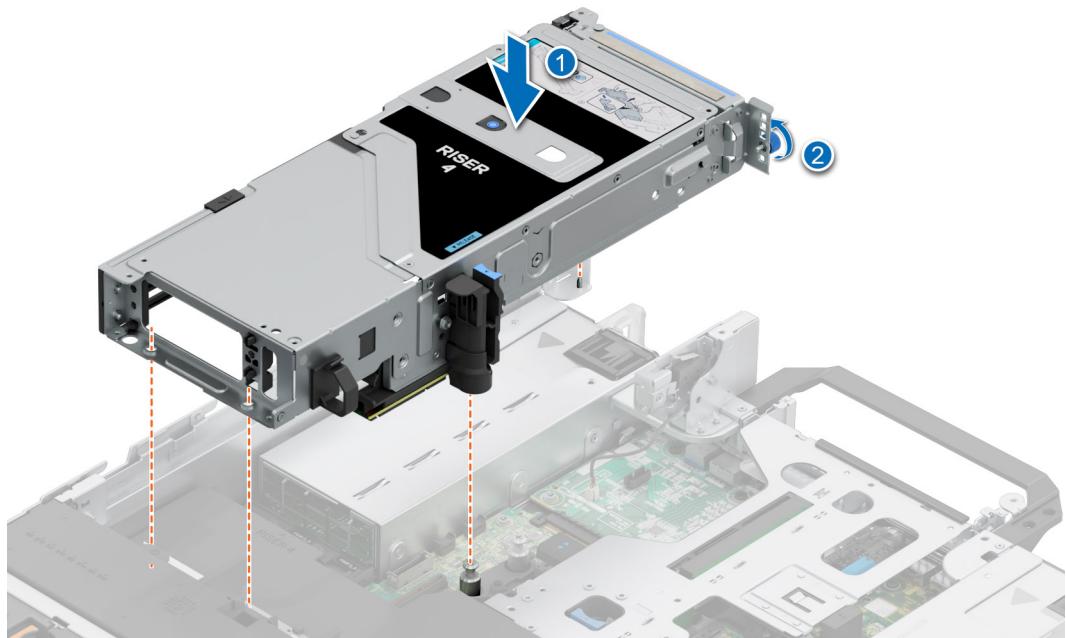


Figure 197. Installing the expansion card riser (Riser 4)

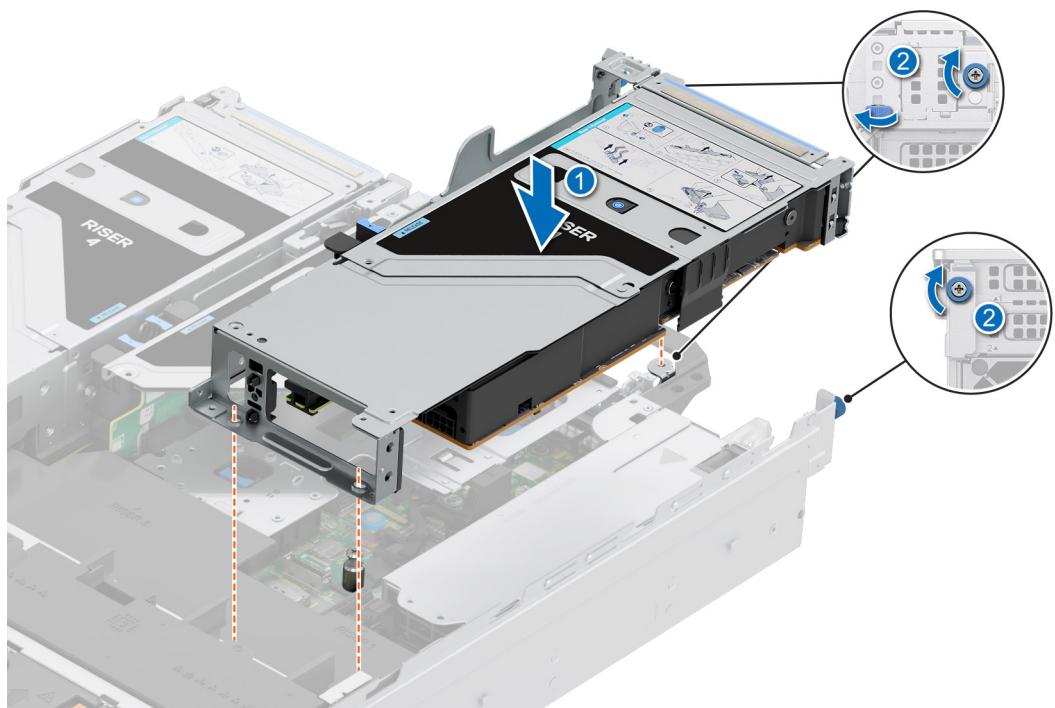


Figure 198. Installing the expansion card riser (Riser 1)

Next steps

1. If applicable, connect the cables to the expansion card or system board.
2. [Install the GPU air shroud top cover](#).
3. Follow the procedure listed in [After working inside your system](#).
4. Install any device drivers required for the card as described in the documentation for the card.

Removing a GPU

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If applicable, disconnect the cables from the expansion card.
4. [Remove the GPU air shroud top cover](#).
5. [Remove the full length expansion card riser](#).

Steps

1. To remove the GPU from Riser 1:
 - a. Tilt the expansion card holder latch on the riser.
 - b. Press the tab, and pull the card holder from the riser.
 - c. Hold the GPU card by the edges and pull the card from the riser.
 - d. Disconnect the GPU power cable from the GPU card.

 **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

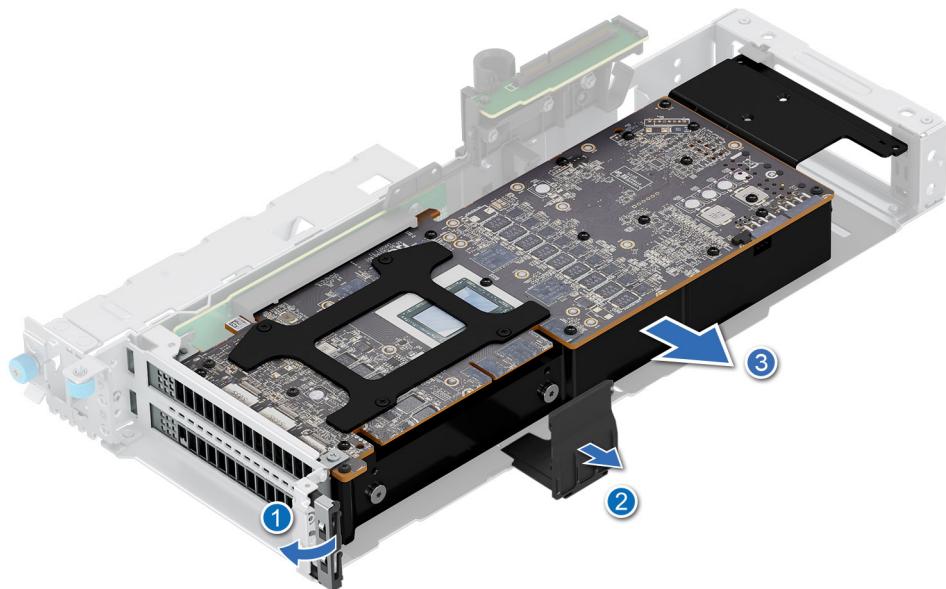


Figure 199. Removing GPU from Riser 1

2. To remove the GPU from Riser 4:
 - a. Slide the expansion card latch on the riser.
 - b. Press the tab, and pull the card holder from the riser.
 - c. Tilt the expansion card holder latch on the riser.
 - d. Hold the GPU card by the edges and pull the card from the riser.
 - e. Disconnect the GPU power cable from the GPU card.

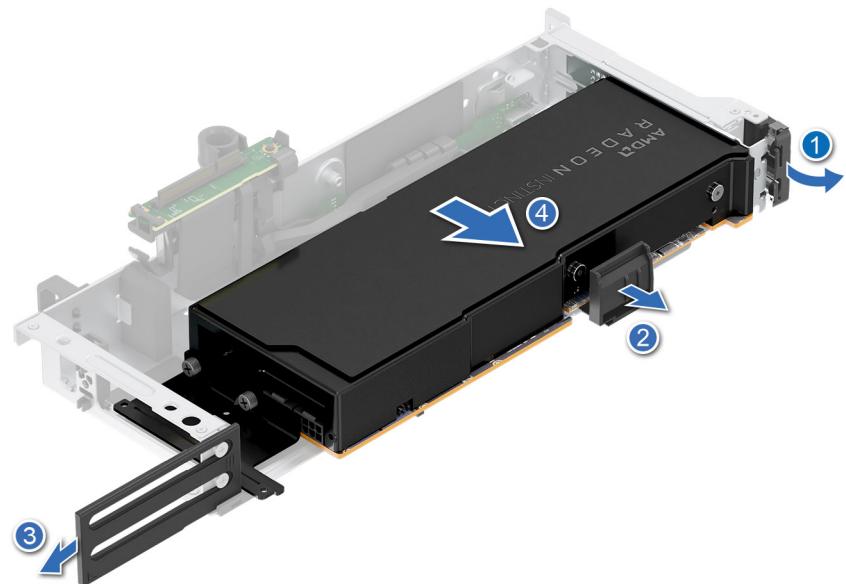


Figure 200. Removing GPU from Riser 4

3. If removing the GPU permanently, install a filler bracket.

NOTE: You must install a filler bracket over an empty expansion card slot to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system. The filler bracket is necessary to maintain proper thermal conditions.

4. Install a metal filler bracket over the empty expansion slot opening and close the expansion card latch.

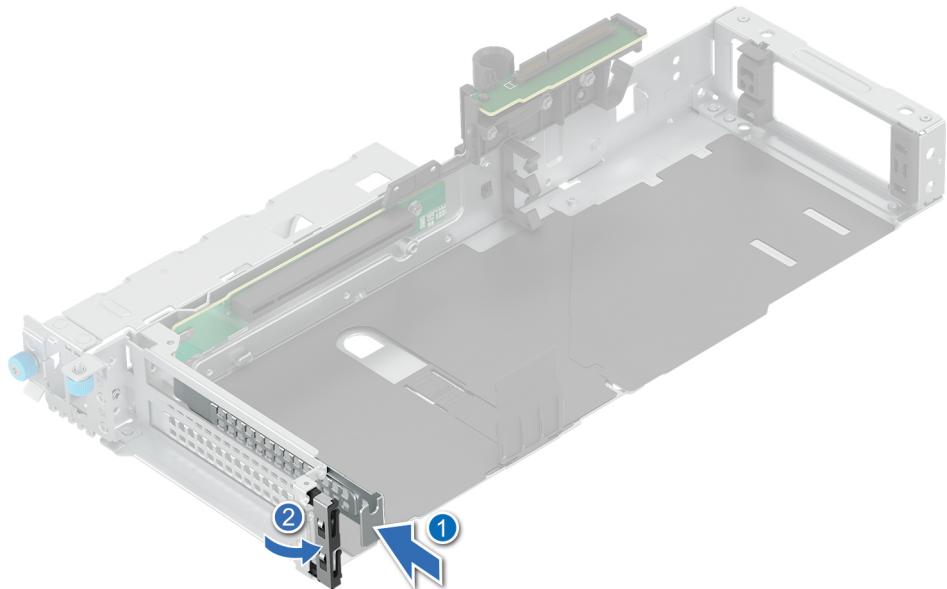


Figure 201. Installing the metal filler bracket (Riser 1)

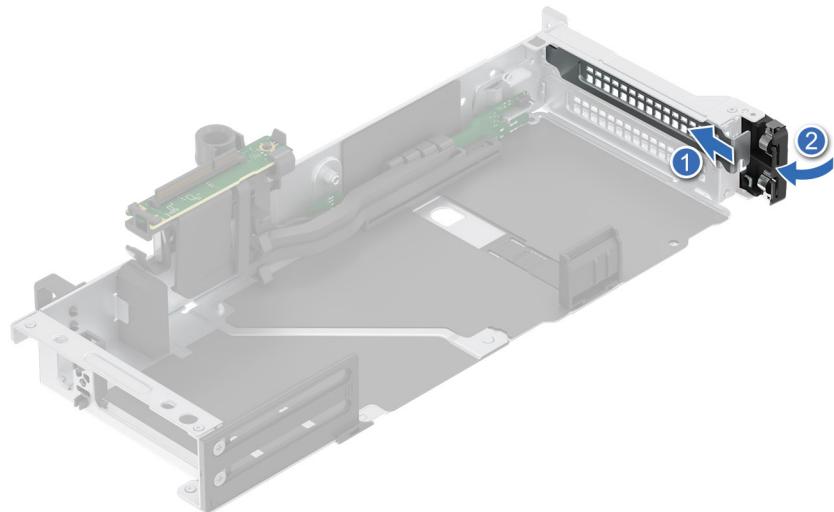


Figure 202. Installing the metal filler bracket (Riser 4)

Next steps

1. Replace the GPU.

Installing a GPU

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If installing a new expansion card, unpack it and prepare the card for installation.

(i) NOTE: For instructions, see the documentation accompanying the card.

4. Remove the GPU air shroud top cover.
5. Remove the GPU air shroud filler.
6. Remove the full length expansion card riser.

⚠ CAUTION: Do not install GPUs, network cards, or other PCIe devices on your system that are not validated and tested by Dell. Damage caused by unauthorized and invalidated hardware installation will null and void the system warranty.

⚠ WARNING: Consumer-Grade GPU should not be installed or used in the Enterprise Server products.

Steps

1. If installed, remove the filler bracket.

(i) NOTE: Store the filler bracket for future use. Filler brackets must be installed in empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

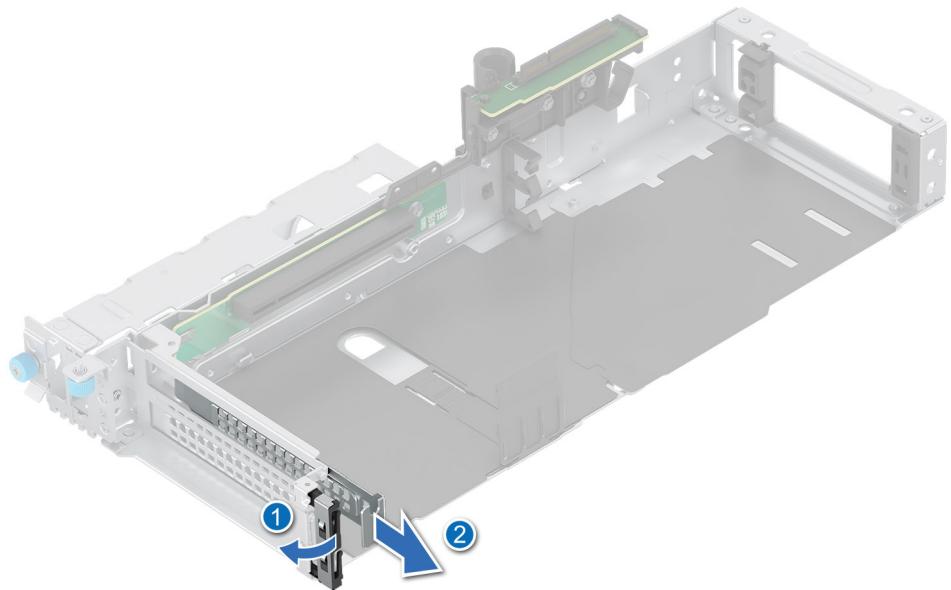


Figure 203. Removing the filler bracket(Riser 1)

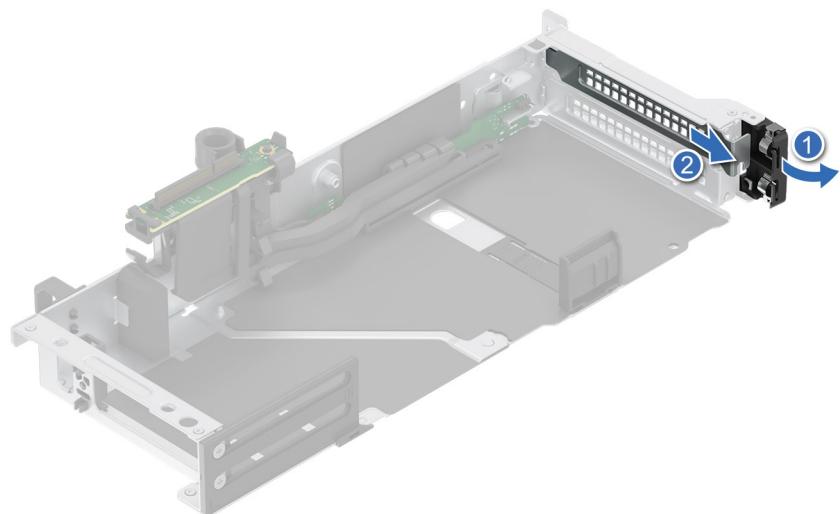


Figure 204. Removing the filler bracket(Riser 4)

2. To install the GPU on Riser 1:
 - a. Connect the GPU power cable to the GPU card.
 - b. Align the connector on the GPU with the connector on the riser.
 - c. Insert the GPU into the riser until firmly seated.
 - d. Tilt the expansion card holder latch.
 - e. Press the card holder latch to secure the GPU card to the riser.

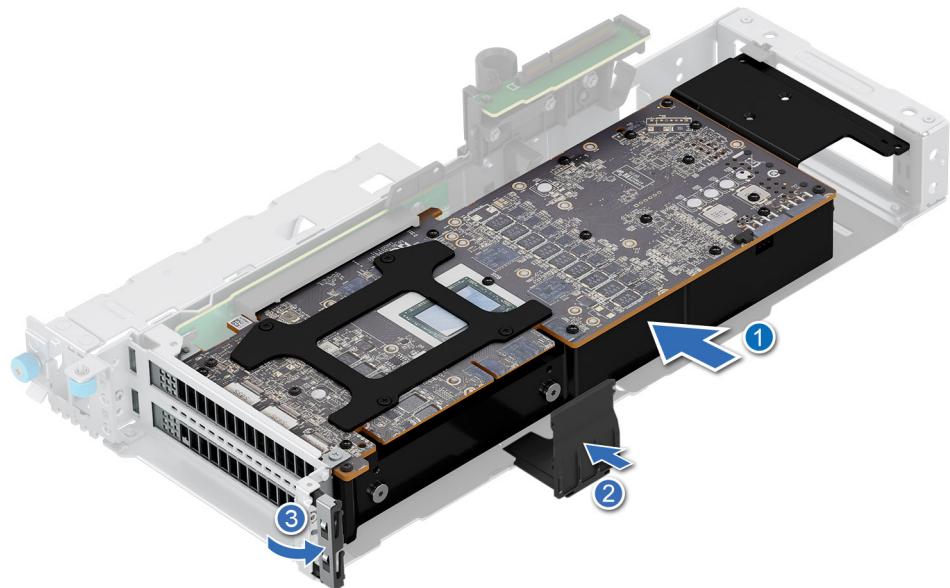


Figure 205. Installing GPU on Riser 1

3. To install the GPU on Riser 4:

- a.** Connect the GPU power cable to the GPU card.
- b.** Align the connector on the GPU with the connector on the riser.
- c.** Insert the GPU into the riser until firmly seated.
- d.** Tilt the expansion card holder latch.
- e.** Press the card holder latch to secure the GPU card to the riser.
- f.** Slide the expansion card latch on the riser.

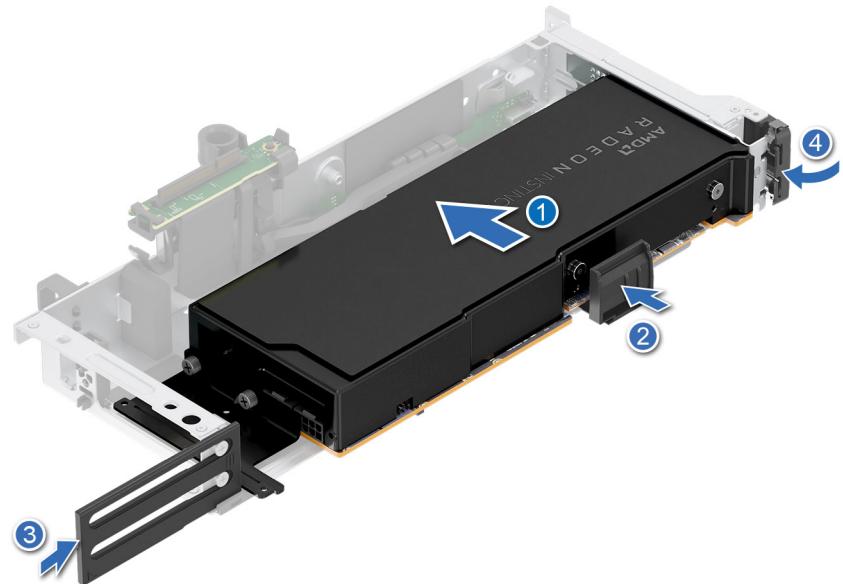


Figure 206. Installing GPU on Riser 4

Next steps

1. If removed, [install the GPU air shroud](#).
2. [Install the full length expansion card riser](#).
3. [Install the GPU air shroud top cover](#).
4. Follow the procedure listed in [After working inside your system](#).

5. Install any device drivers required for the card as described in the documentation for the card.

Optional serial COM port

Removing the serial COM port

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. Remove the air shroud or [remove the GPU air shroud](#).
4. Remove expansion card riser

(i) NOTE: The serial COM port is supported only in slot 4 or slot 8 of the expansion card riser.

Steps

1. Loosen the captive screws on the system.
2. Press the blue release tab or blue button on the riser and holding the edges lift the expansion card riser from the riser connector on the system board.
3. Disconnect the serial COM port cable from the serial port.

⚠ WARNING: Ensure not to pull the riser far away before unlatch cable to prevent damaging the cable latch.

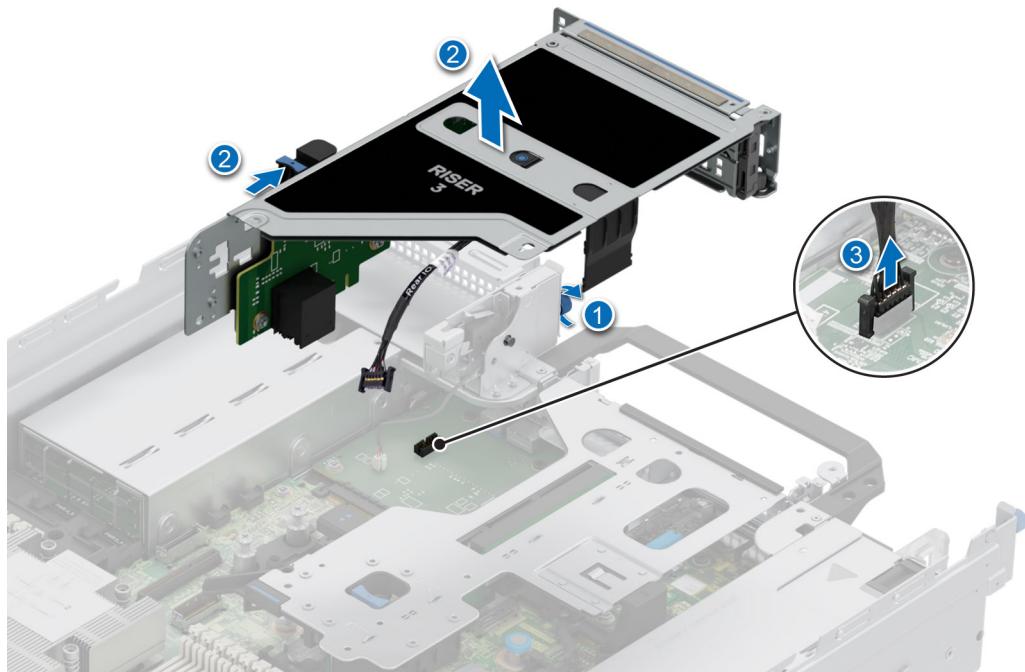


Figure 207. Disconnecting the Serial COM port

4. Open the latch on the expansion card riser and slide the serial COM port out of the expansion card riser.

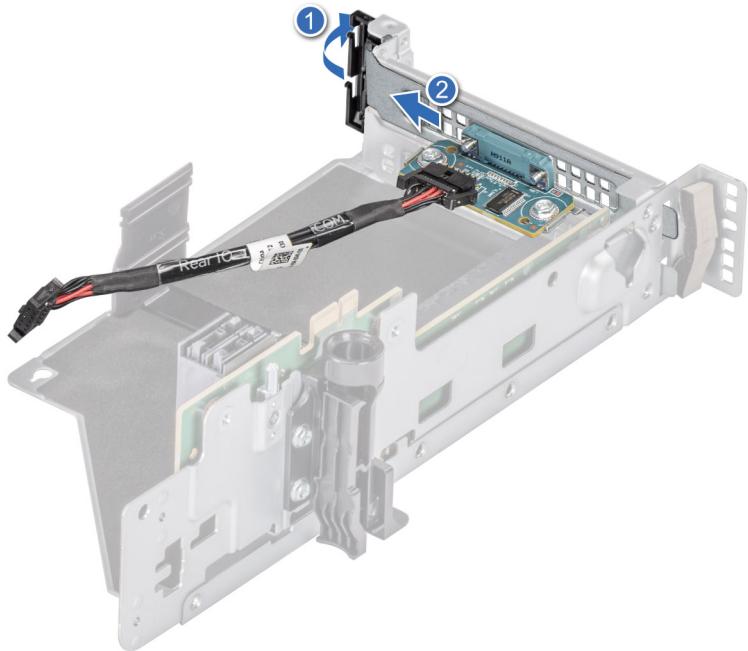


Figure 208. Removing the Serial COM port

5. Install the filler bracket if not replacing the serial COM port.

Next steps

1. Replace the serial COM port.

Installing the serial COM port

The procedure to install serial COM port to Riser 3 or 4 is same.

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the air shroud](#) or [remove the GPU air shroud](#).

NOTE: The serial COM port is supported only in slot 4 or slot 8 of the expansion card riser.

4. [Remove expansion card riser](#).
5. Disconnect the serial COM port cable from the connector on the rear I/O board.

Steps

1. Open the latch on the expansion card riser and remove the filler bracket from the expansion card riser.

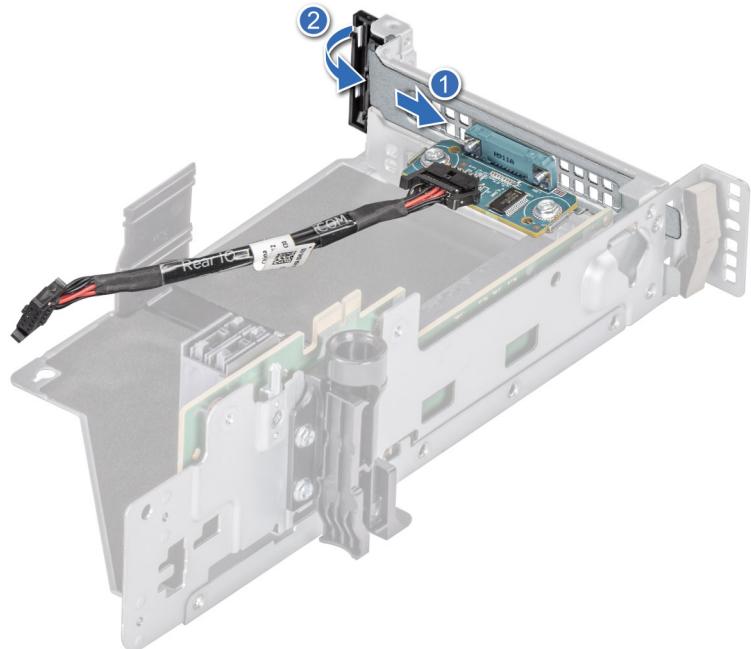


Figure 209. Installing the Serial COM port

2. Slide the serial COM port into the expansion card riser.
3. Connect the serial COM port cable to the serial port.

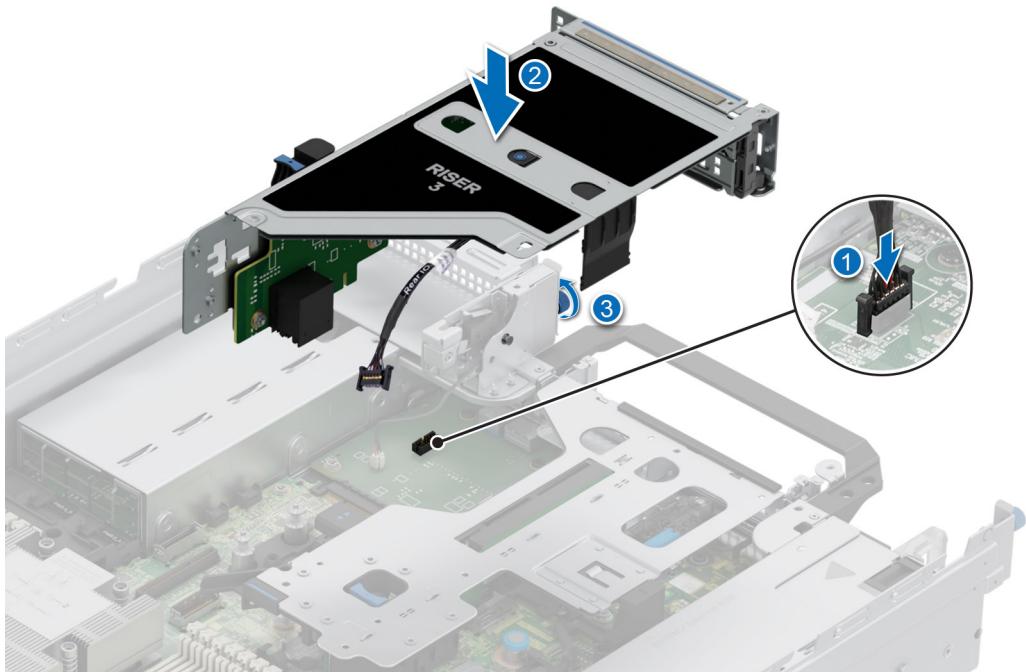


Figure 210. Installing the Serial COM port

Next steps

1. Reconnect the serial COM port cable to the connector on the rear I/O board.
2. [Install the expansion card riser](#).
3. [Install the air shroud or install the GPU air shroud](#).
4. Follow the procedure listed in [After working inside your system](#).

BOSS-N1 module

Removing the BOSS-N1 module blank

Prerequisites

Follow the safety guidelines listed in the [Safety instructions](#).

Steps

Use a screwdriver to push out the blank from the BOSS-N1 module bay.

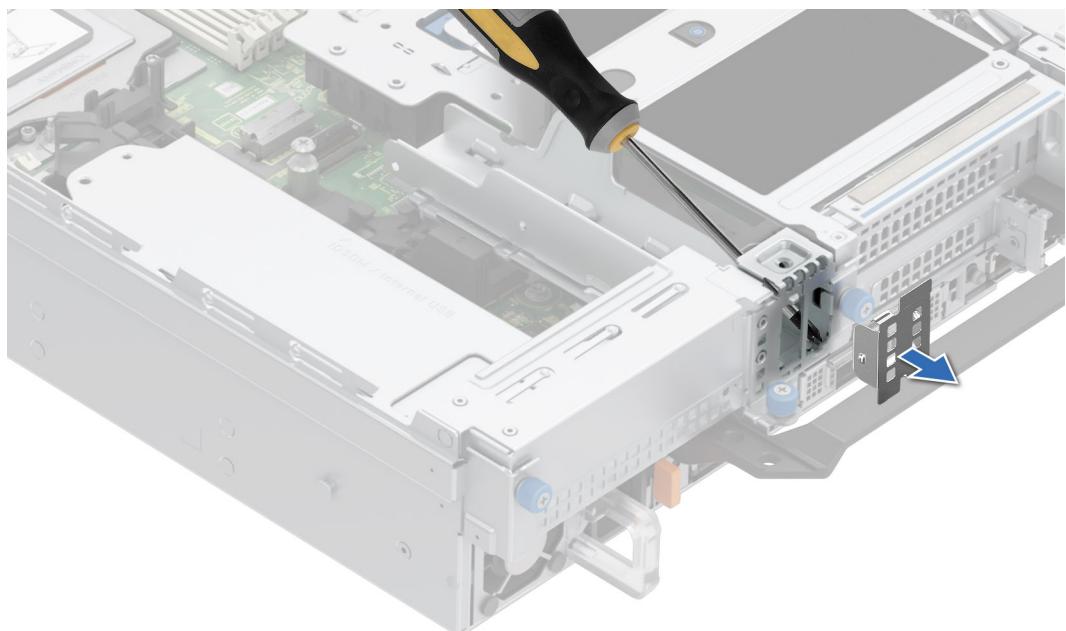


Figure 211. Removing the BOSS-N1 module blank

Next steps

1. Replace the BOSS-N1 module blank or install BOSS-N1 module.

Installing the BOSS-N1 module blank

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).

Steps

Align the blank with the BOSS-N1 module bay and push it into the bay until it clicks into place.

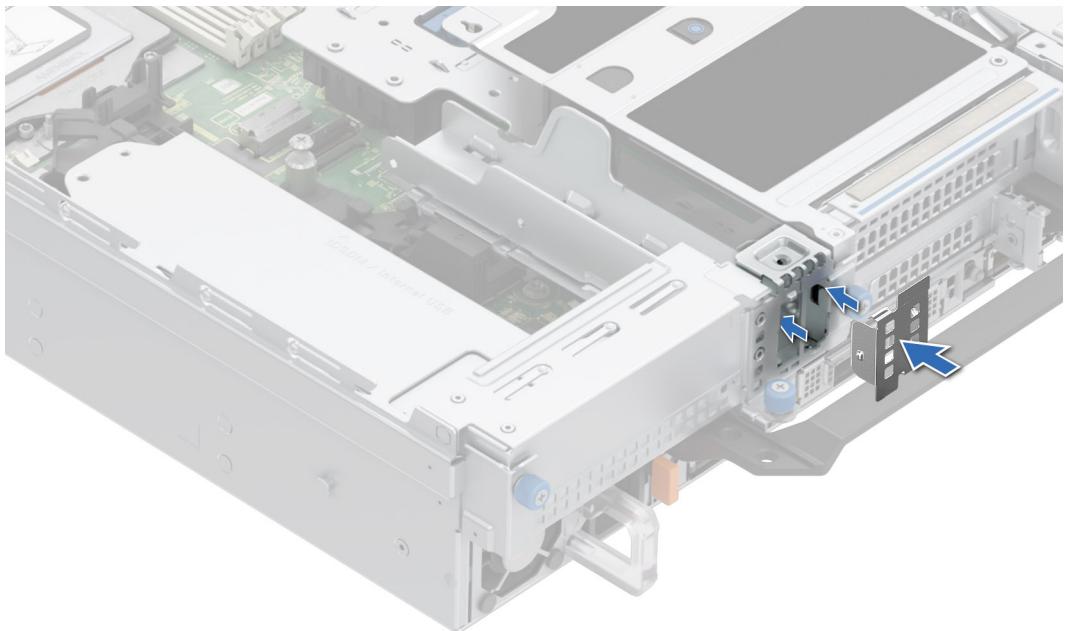


Figure 212. Installing the BOSS-N1 module blank

Removing the BOSS card filler

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

Press and pull the BOSS card filler out from the BOSS-N1 controller card module bay.

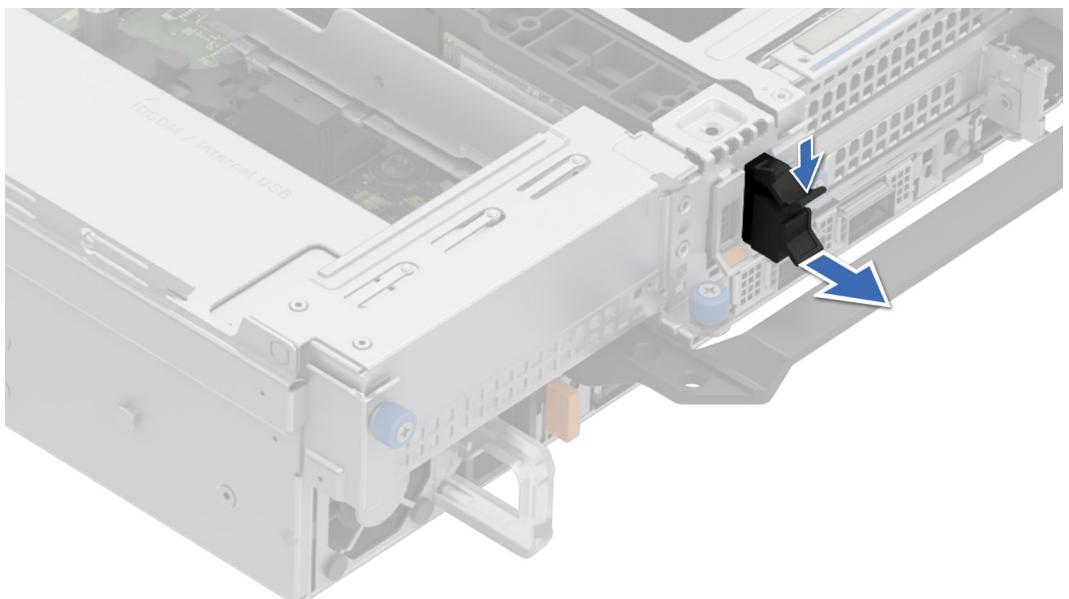


Figure 213. Removing the BOSS card filler

Next steps

1. Replace the BOSS card filler or BOSS-N1 controller card module.

Installing the BOSS card filler

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).

Steps

Align the BOSS card filler with the BOSS-N1 controller card module bay and push it into the bay until it clicks into place.

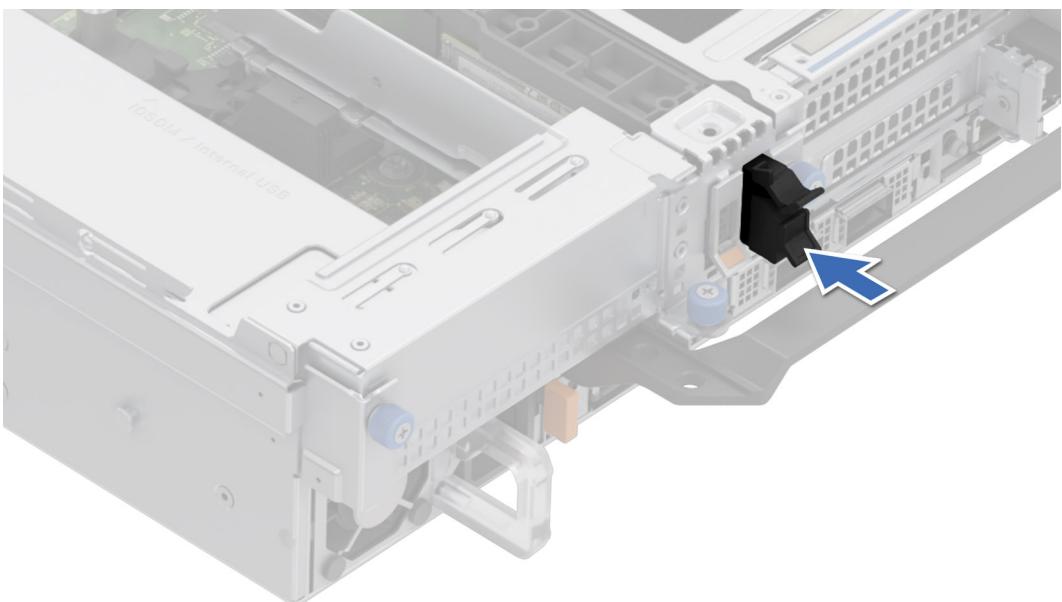


Figure 214. Installing the BOSS card filler

Removing the BOSS-N1 controller card module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Pull and lift the BOSS-N1 card carrier retention latch lock to open.
2. Slide the BOSS-N1 card carrier out.



Figure 215. Removing the BOSS-N1 card carrier

3. Using the Phillips #1 screwdriver remove the M3 x 0.5 x 4.5 mm screw that secures the M.2 SSD to the BOSS-N1 card carrier.
4. Slide the M.2 SSD out and up from the BOSS-N1 card carrier.

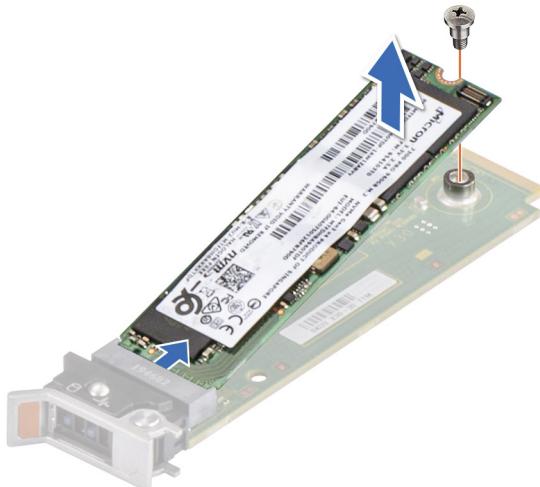


Figure 216. Removing the M.2 SSD

5. Disconnect the BOSS-N1 power cable and signal cable from the system board.
- (i) NOTE:** If BOSS-N1 module is installed, ensure to disconnect the BOSS-N1 power cable and signal cable before removing the Riser 1 cage.
6. Using the Phillips #1 screwdriver remove the M3 x 0.5 x 4.5 mm screw that secures the BOSS-N1 module on Riser 1.

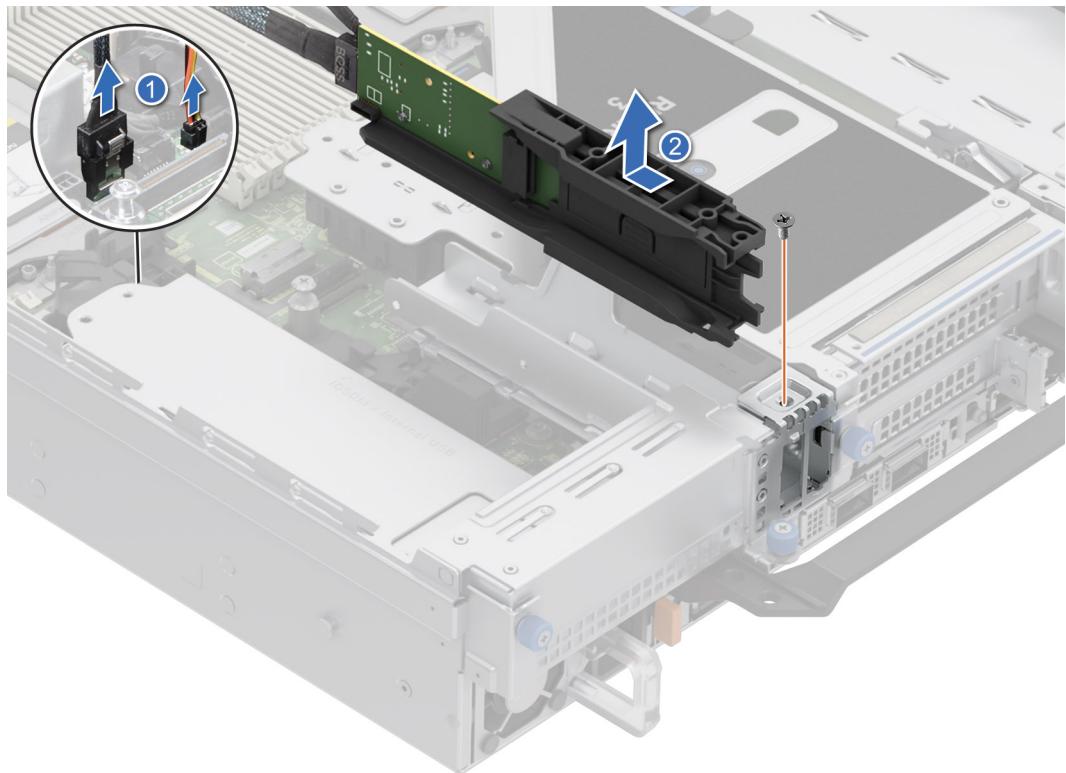


Figure 217. Removing the BOSS-N1 controller card module

7. Slide the BOSS-N1 module towards the front of the chassis and lift the module.

Next steps

1. Replace the BOSS-N1 controller card module or Replace the BOSS card filler

Installing the BOSS-N1 controller card module

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If installed, [remove the BOSS module blank](#).

Steps

1. Align the BOSS-N1 module at an angle with the controller card module slot.
2. Insert the BOSS-N1 controller card module and push the module towards the rear of the system until it is secured.
3. Using the Phillips #1 screwdriver, secure the BOSS-N1 controller card module with the M3 x 0.5 x 4.5 mm screw.
4. Connect the BOSS power and signal cable to the connectors on the system board.

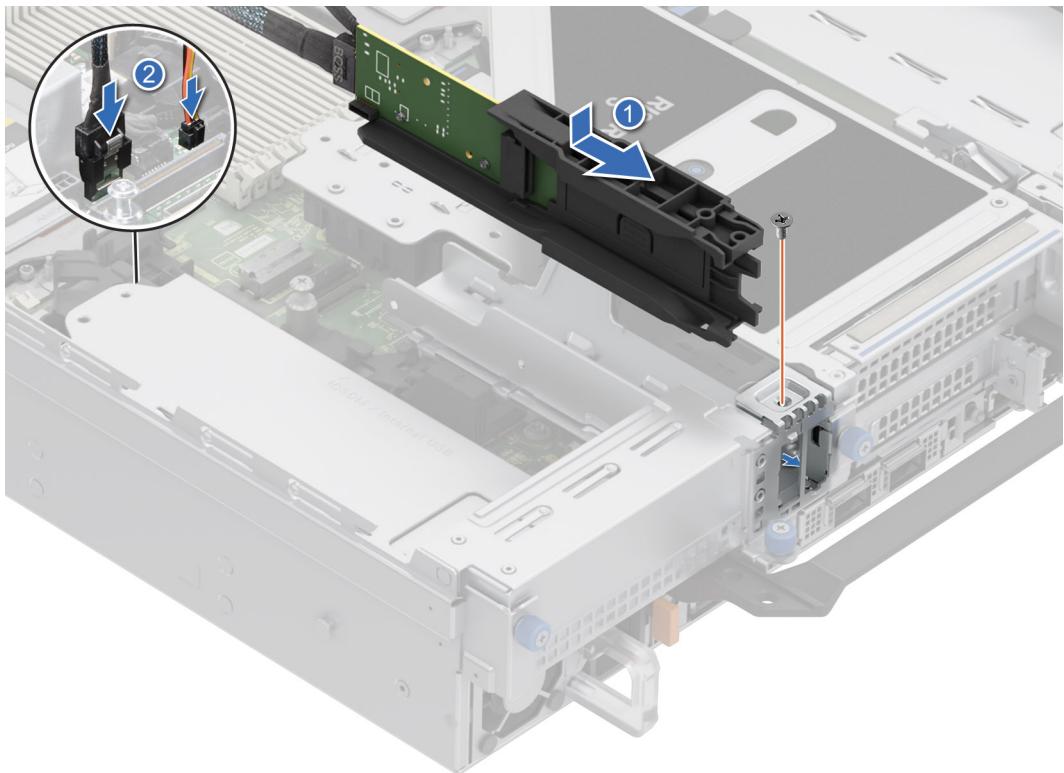


Figure 218. Installing the BOSS-N1 controller card module

5. Align the M.2 SSD at an angle with the BOSS-N1 card carrier.
6. Insert the M.2 SSD until it is firmly seated in the BOSS-N1 card carrier.
7. Using the Phillips #1 screwdriver, secure the M.2 SSD on the BOSS-N1 card carrier with the M3 x 0.5 x 4.5 mm screw.

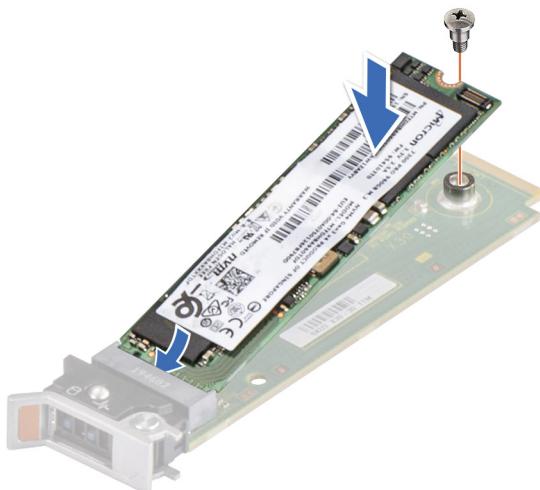


Figure 219. Installing the M.2 SSD

8. Slide the BOSS-N1 card carrier into the BOSS-N1 module slot.
9. Close the BOSS-N1 card carrier release latch to lock the carrier in place.

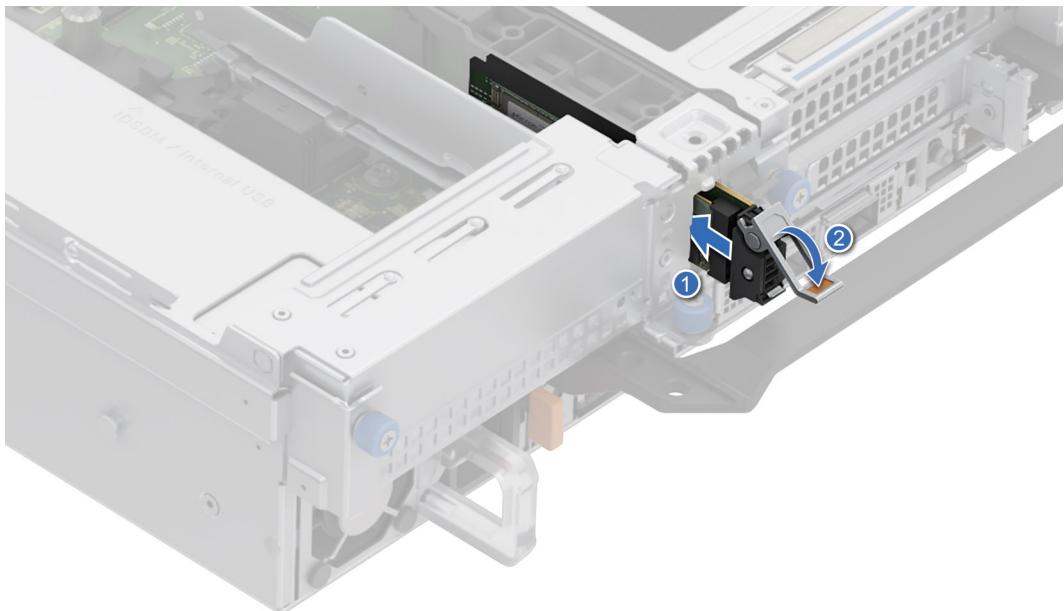


Figure 220. Installing the BOSS-N1 card carrier

Next steps

1. Follow the procedure listed in the [After working inside your system](#).

System battery

This is a service technician replaceable part only.

Replacing the system battery

Prerequisites

⚠️ WARNING: There is a danger of a new battery exploding if it is incorrectly installed. Replace the battery only with the same or equivalent type that is recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions. See the Safety instructions that came with your system for more information.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. If applicable, disconnect the power or data cables from the expansion cards.
4. [Remove the expansion card risers](#).

Steps

1. Press and hold the battery socket retention latch, for the battery to pop out.

ⓘ NOTE: If the battery does not pop out, then lift it out of the socket.

⚠️ CAUTION: To avoid damage to the battery connector, you must firmly support the connector while installing or removing a battery.

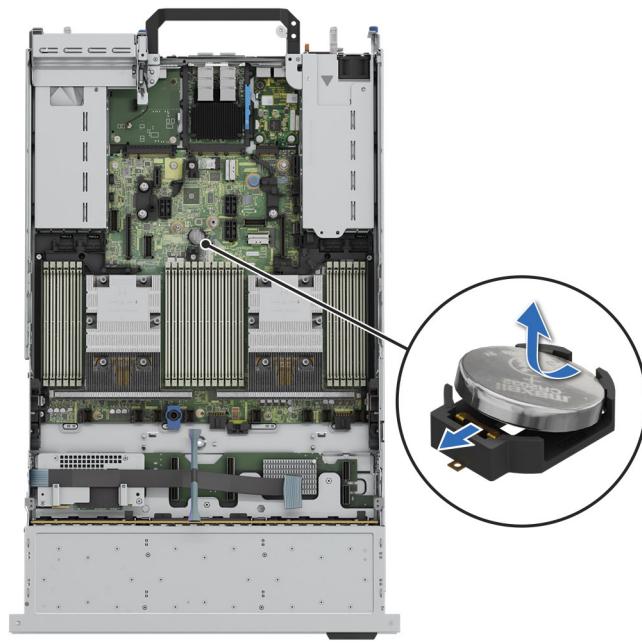


Figure 221. Removing the system battery

2. To install a new system battery:
 - a. Hold the battery with the positive side facing up at an angle and slide it under the battery socket latch.
 - b. Press the battery into the connector until it snaps into place.

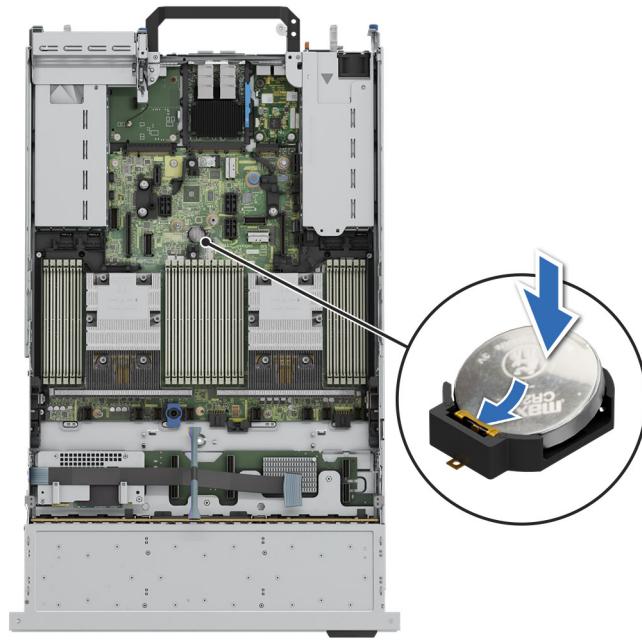


Figure 222. Installing the system battery

Next steps

1. [Install the expansion card risers](#).
2. If applicable, connect the cables to one or more expansion cards.
3. Follow the procedure listed in [After working inside your system](#).
4. Confirm that the battery is operating properly, by performing the following steps:
 - a. Enter the System Setup, while booting, by pressing F2.

- b. Enter the correct time and date in the System Setup **Time** and **Date** fields.
- c. **Exit** the System Setup.
- d. To test the newly installed battery, remove the system from the enclosure for at least an hour.
- e. Reinstall the system into the enclosure after an hour.
- f. Enter the System Setup and if the time and date are still incorrect, see Getting help section.

Optional internal USB card

i **NOTE:** To locate the internal USB port on the system board, see the [System board jumpers and connectors](#) section.

Removing the internal USB card

Prerequisites

⚠ CAUTION: To avoid interference with other components in the server, the maximum permissible dimensions of the USB memory key are 15.9 mm wide x 57.15 mm long x 7.9 mm high.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the expansion card risers](#).

Steps

1. Holding the blue tag, lift the internal USB card to disconnect from the connector on the system board.
2. Remove the USB memory key from the internal USB card.

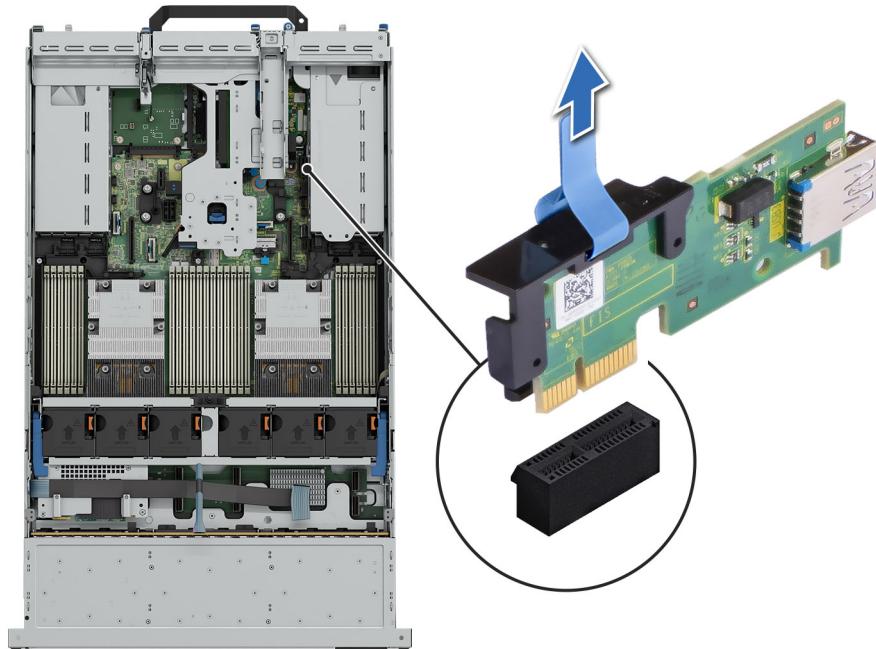


Figure 223. Removing the internal USB card

Next steps

1. [Replace the internal USB card](#).

Installing the internal USB card

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. [Remove the expansion card risers](#).

Steps

1. Connect the USB key to the internal USB card.

NOTE: Ensure to install the internal USB card in the IDSDM/USB card slot and not in the J_R3_PCIE_PWR connector slot.
2. Align the internal USB card with the connector on the system board and press firmly until the internal USB card is seated.

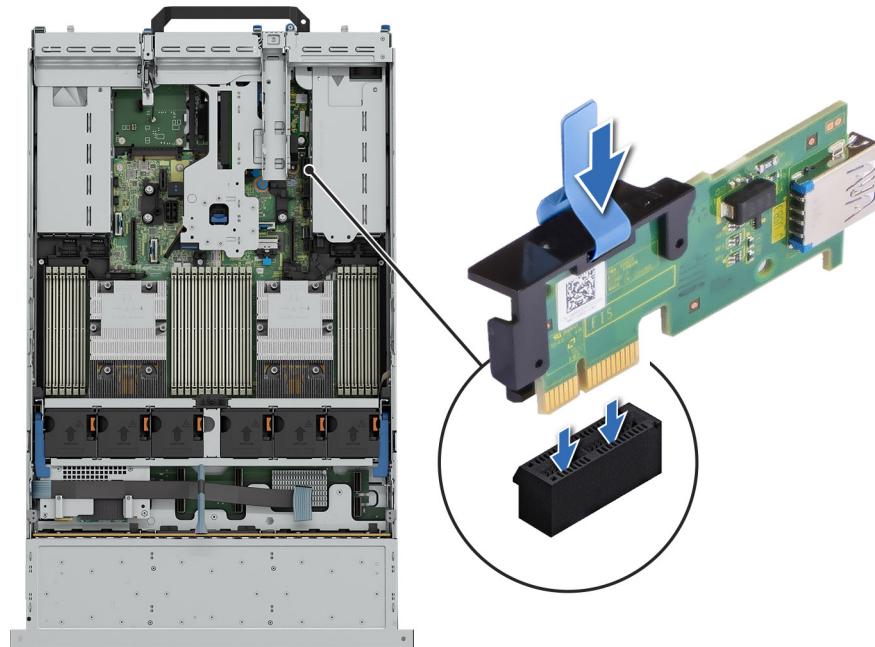


Figure 224. Installing the internal USB card

Next steps

1. [Install the expansion card risers](#).
2. Follow the procedure listed in [After working inside your system](#).
3. While booting, press F2 to enter **System Setup** and verify that the system detects the USB memory key.

Intrusion switch module

Removing the intrusion switch

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).
4. Keep the plastic scribe ready.

Steps

1. Disconnect and remove the intrusion switch cable connector from connector on the system board.
- NOTE:** Observe the routing of the cable as you remove it from the system.
2. Using a Phillips #2 screwdriver, remove the screw that secures the intrusion switch on the intrusion switch slot.
3. Lift to remove the intrusion switch out of the intrusion switch slot.

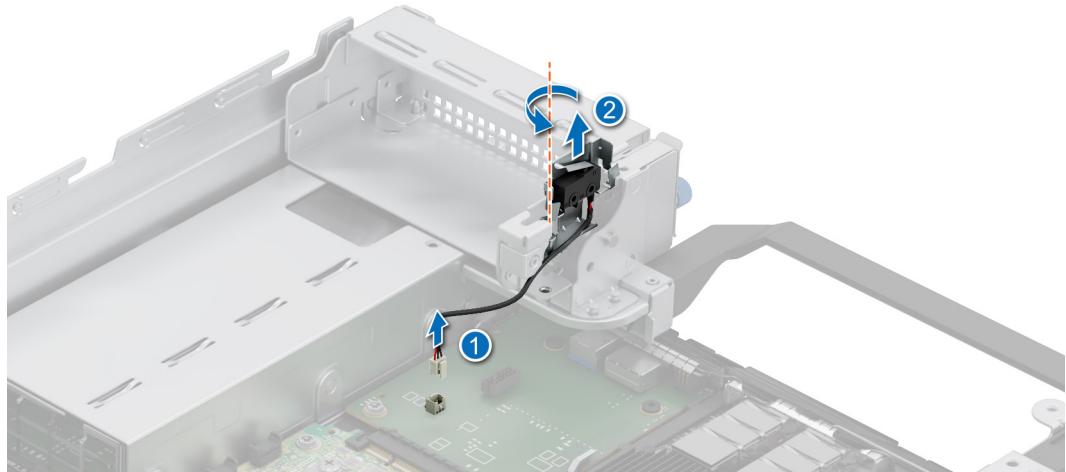


Figure 225. Removing the intrusion switch

Next steps

1. Replace the intrusion switch.

Installing the intrusion switch

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the air shroud](#).

Steps

1. Align and insert the intrusion switch in the slot until it is firmly seated in the slot on the system.
- NOTE:** Route the cable properly when you replace it to prevent the cable from being pinched or crimped.
2. Using a Phillips #2 screwdriver, tighten the screw that secures the intrusion switch on the intrusion switch slot.
3. Connect the intrusion switch cable to the connector on the system board.

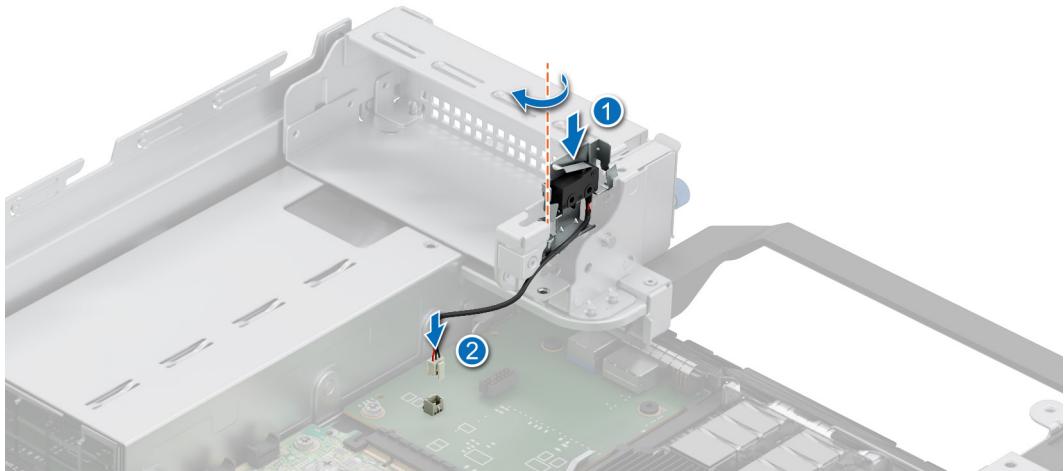


Figure 226. Installing the intrusion switch

Next steps

1. [Install the air shroud](#).
2. Follow the procedure listed in [After working inside your system](#).

Optional OCP card

Removing the OCP card

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the expansion card riser](#).

Steps

1. Open the blue latch to disengage the OCP card.
2. Push the OCP card towards the rear end of the system to disconnect from the connector on the system board.
3. Slide the OCP card out of the slot on the system.

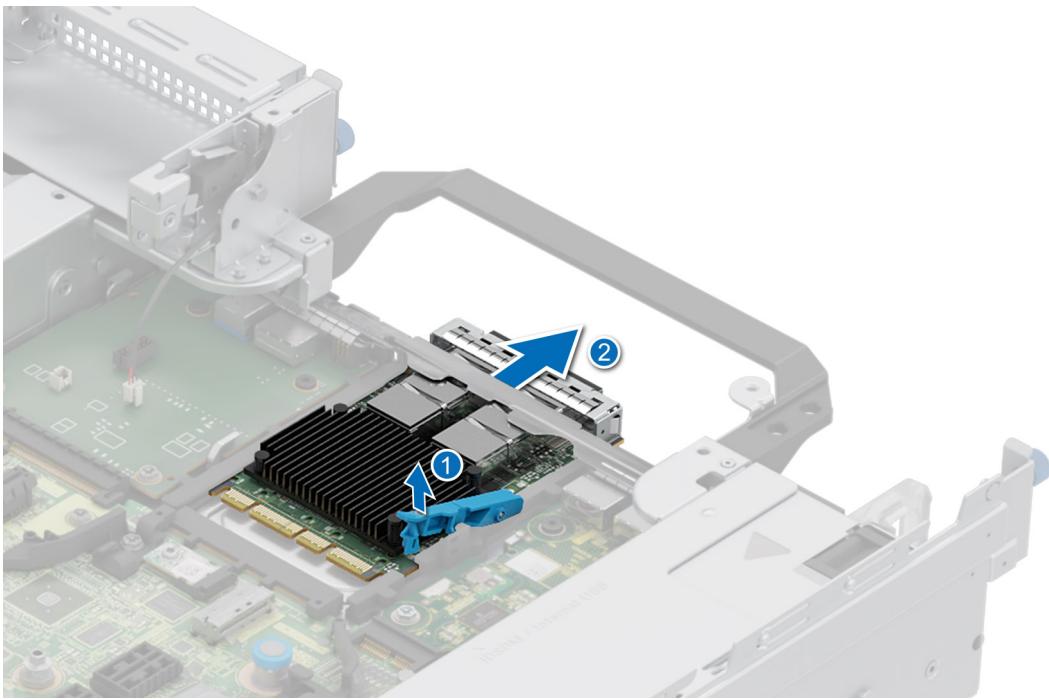


Figure 227. Removing the OCP card

4. If the OCP card is not going to be replaced, install a filler bracket .

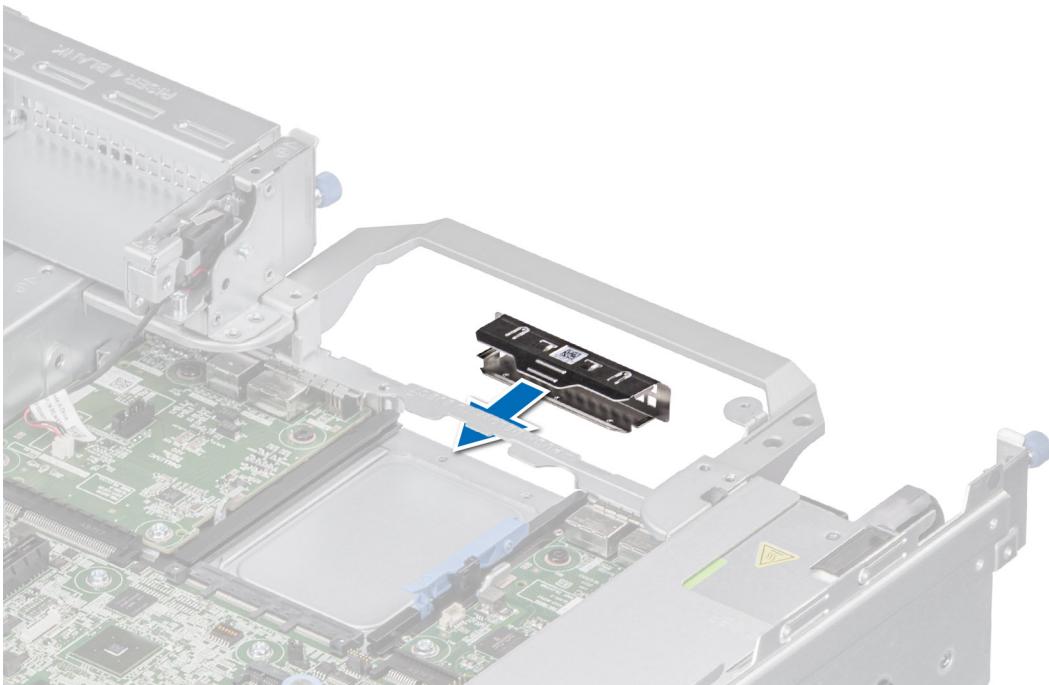


Figure 228. Installation of filler bracket

Next steps

1. Replace the OCP card.

Installing the OCP card

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the expansion card riser](#).

Steps

1. If installed, remove the filler bracket.

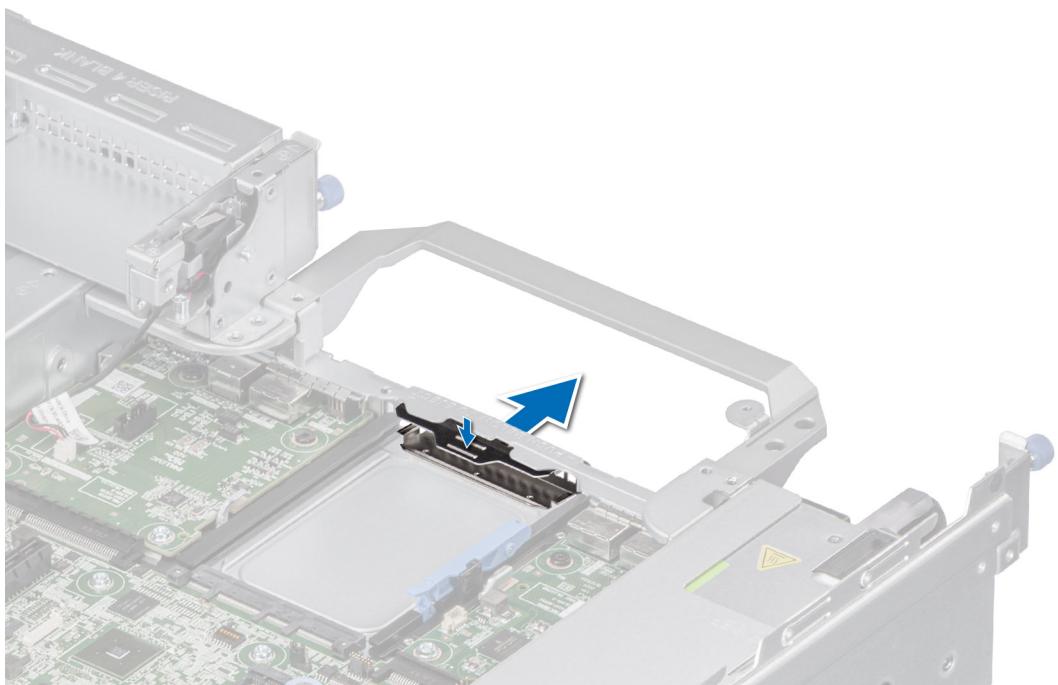


Figure 229. Removal of filler bracket

2. Open the blue latch on the system board.
3. Slide the OCP card into the slot in the system.
4. Push until the OCP card is connected to the connector on the system board.
5. Close the latch to lock the OCP card to the system.

(i) NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

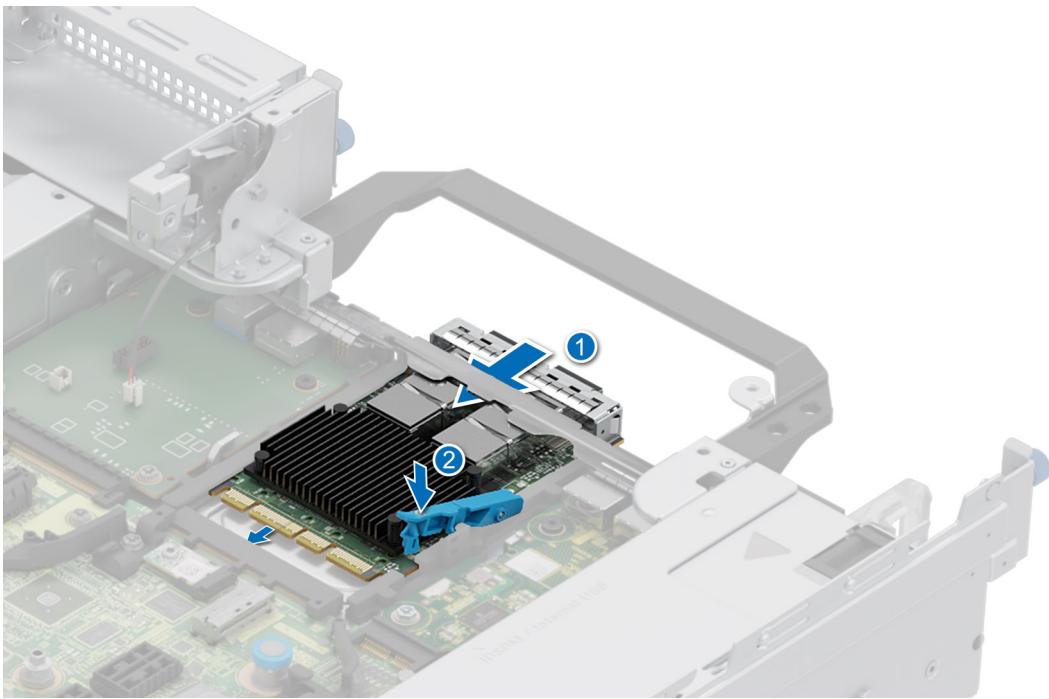


Figure 230. Installing the OCP card

Next steps

1. [Install the expansion card riser](#)
2. Follow the procedure listed in [After working inside your system](#).

Power supply unit

i **NOTE:** While replacing the hot swappable PSU, after next server boot; the new PSU automatically updates to the same firmware and configuration of the replaced one. For more information about the Part replacement configuration, see the *Lifecycle Controller User's Guide* at [iDRAC Manuals](#)

Hot spare feature

Your system supports the hot spare feature that significantly reduces the power overhead associated with power supply unit (PSU) redundancy.

When the hot spare feature is enabled, one of the redundant PSUs is switched to the sleep state. The active PSU supports 100 percent of the system load, thus operating at higher efficiency. The PSU in the sleep state monitors output voltage of the active PSU. If the output voltage of the active PSU drops, the PSU in the sleep state returns to an active output state.

If having both PSUs active is more efficient than having one PSU in the sleep state, the active PSU can also activate the sleeping PSU.

The default PSU settings are as follows:

- If the load on the active PSU is more than 50 percent of PSU rated power wattage, then the redundant PSU is switched to the active state.
- If the load on the active PSU falls below 20 percent of PSU rated power wattage, then the redundant PSU is switched to the sleep state.

You can configure the hot spare feature by using the iDRAC settings. For more information, see the *iDRAC User's Guide* available at [PowerEdge manuals](#).

Removing a power supply unit blank

Prerequisites

Follow the safety guidelines listed in the [Safety instructions](#).

Steps

Pull the blank out of the system.

 **CAUTION:** To ensure proper system cooling, the PSU blank must be installed in the second PSU bay in a non-redundant configuration. Remove the PSU blank only if you are installing a second PSU.

Next steps

1. Replace the PSU blank or PSU.

Installing a power supply unit blank

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).

 **NOTE:** Install the power supply unit (PSU) blank only in the second PSU bay.

2. [remove the PSU](#).

Steps

Align the PSU blank with the PSU bay and push it into the PSU bay until it clicks into place.

Removing a power supply unit adapter blank

Remove the PSU adapter, when installing PSU with 86 mm wide form factor.

Prerequisites

Follow the safety guidelines listed in the [Safety instructions](#).

Steps

Using a Phillips #1 screwdriver, loosen the screw and remove the power supply unit adapter blank.

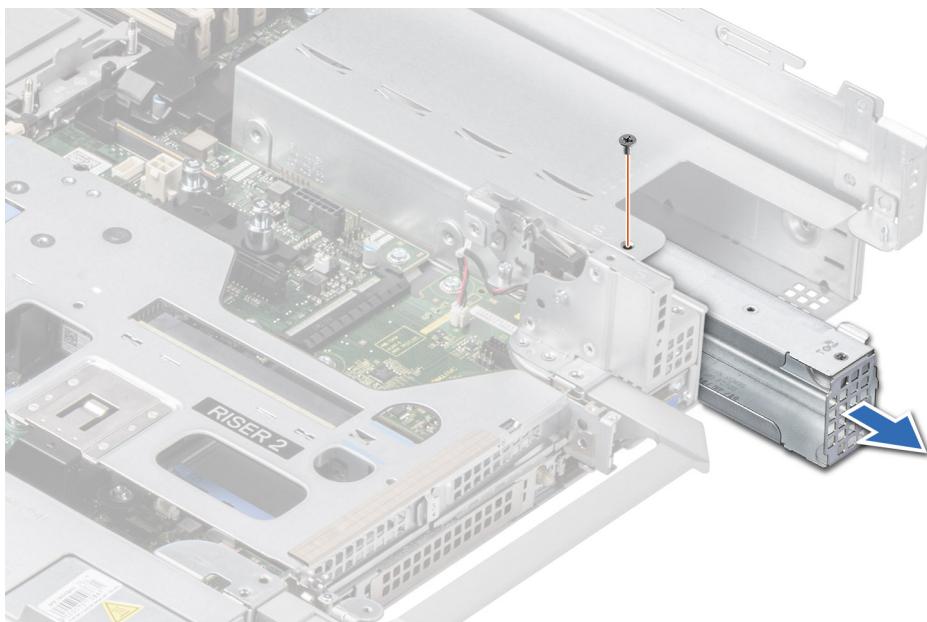


Figure 231. Removing a power supply unit adapter blank

Next steps

1. Replace the PSU adapter or Install the PSU.

Installing a power supply unit adapter blank

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. If required, [Remove the PSU](#).

i **NOTE:** Remove the PSU adapter, when installing PSU with 86 mm wide form factor.

Steps

1. Align and insert the power supply unit adapter blank.
2. Using a phillips #1 screwdriver, tighten the screw.

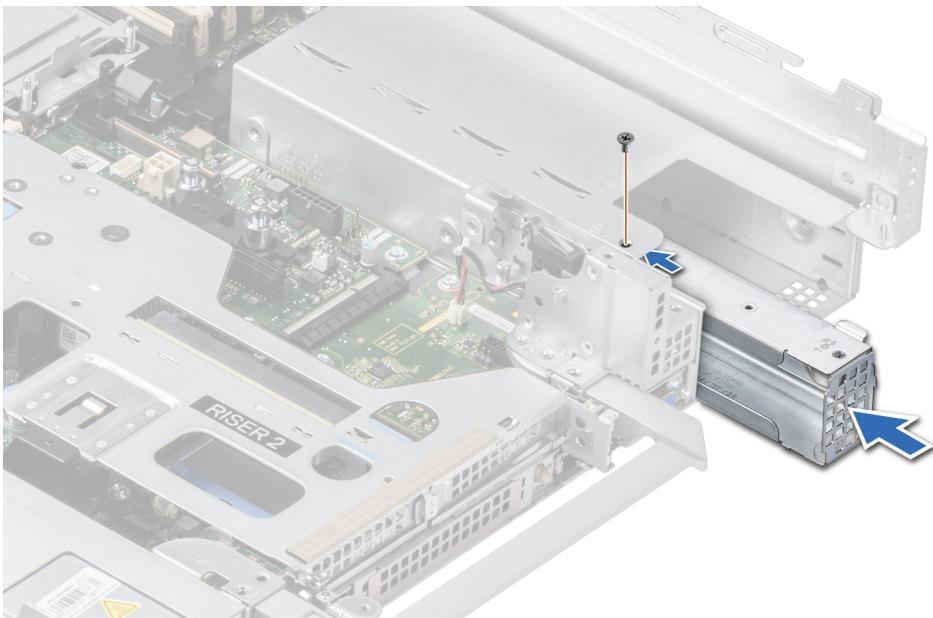


Figure 232. Installing a power supply unit adapter blank

Removing a power supply unit

Prerequisites

CAUTION: The system requires one power supply unit (PSU) for normal operation. On power-redundant systems, remove and replace only one PSU at a time in a system that is powered on.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Disconnect the power cable from the power outlet and from the PSU you intend to remove.
3. Remove the cable from the strap on the PSU handle.
4. Unlatch and lift or remove the optional cable management accessory if it interferes with the PSU removal. For information about the cable management when the PSU is removed or installed while the system is in a rack, see the system's cable management arm documentation at [PowerEdge Manuals](#).

Steps

Press the release latch, and holding the PSU handle slide the PSU out of the PSU bay.



Figure 233. Removing a power supply unit

Next steps

1. Replace the PSU or install the PSU blank.

Installing a power supply unit

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. For systems that support redundant PSU, ensure that both the PSUs are of the same type and have the same maximum output power.

(i) NOTE: The maximum output power (shown in watts) is listed on the PSU label.

3. Remove the PSU blank.

Steps

Slide the PSU into the PSU bay until the release latch snaps into place.



Figure 234. Installing a power supply unit

Next steps

1. If you have unlatched or removed the cable management accessory, re-install or relatch it. For information about the cable management when the PSU is removed or installed while the system is in the rack, see the system's cable management accessory documentation at [PowerEdge Manuals](#).
2. Connect the power cable to the PSU, and plug the cable into a power outlet.

CAUTION: When connecting the power cable to the PSU, secure the cable to the PSU with the strap.

NOTE: When installing, hot swapping, or hot adding a new PSU, wait for 15 seconds for the system to recognize the PSU and determine its status. The PSU redundancy may not occur until discovery is complete. The PSU status indicator turns green to indicate that the PSU is functioning properly.

Trusted Platform Module

This is a service technician replaceable part only.

Upgrading the Trusted Platform Module

Removing the TPM

Prerequisites

NOTE:

- Ensure the operating system is compatible with the TPM version you are installing.
- Ensure that you download and install the latest BIOS firmware on your system.
- Ensure that the BIOS is configured to enable UEFI boot mode.

CAUTION: The TPM plug-in module is cryptographically bound to that particular system board after it is installed. When the system is powered on, any attempt to remove an installed TPM plug-in module breaks the cryptographic binding, and the removed TPM cannot be installed on another system board. Ensure any keys you have stored on the TPM have been securely transferred.

Steps

1. Locate the TPM connector on the system board.
2. Press to hold the module down and remove the screw using the security Torx 8-bit shipped with the TPM module.
3. Slide the TPM module out from its connector.
4. Push the plastic rivet away from the TPM connector and rotate it 90° counterclockwise to release it from the system board.
5. Pull the plastic rivet out of its slot on the system board.

Installing the TPM

Steps

1. To install the TPM, align the edge connectors on the TPM with the slot on the TPM connector.
2. Insert the TPM into the TPM connector such that the plastic rivet aligns with the slot on the system board.
3. Press the plastic rivet until the rivet snaps into place.
4. Replace the screw that secures the TPM to the system board.

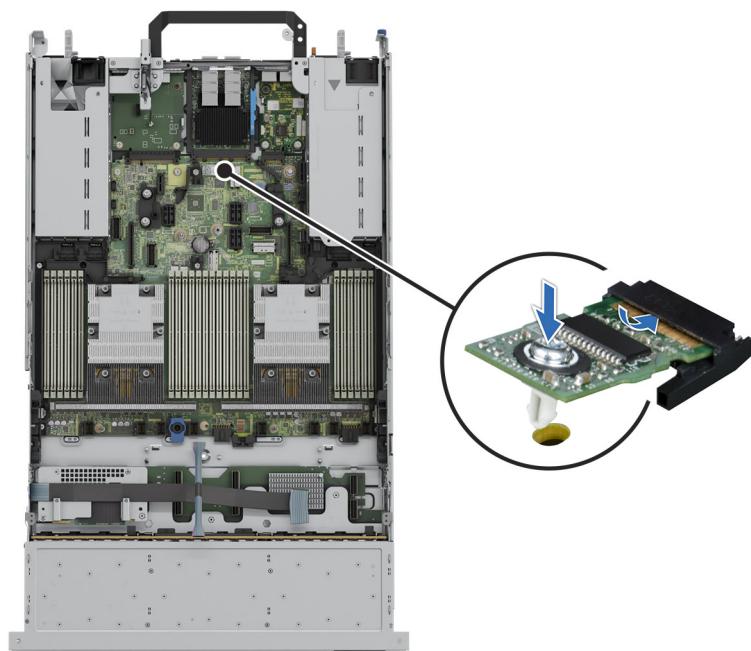


Figure 235. Installing the TPM

Initializing TPM for users

Steps

1. Initialize the TPM.
For more information, see [Initializing the TPM for users](#).
2. The **TPM Status** changes to **Enabled, Activated**.

Initializing the TPM 2.0 for users

Steps

1. While booting your system, press F2 to enter System Setup.
2. On the **System Setup Main Menu** screen, click **System BIOS > System Security Settings**.

3. From the **TPM Security** option, select **On**.
4. Save the settings.
5. Restart your system.

System board

Removing the system board

Prerequisites

 **CAUTION:** If you are using the Trusted Platform Module (TPM) with an encryption key, you may be prompted to create a recovery key during program or System Setup. Be sure to create and safely store this recovery key. If you replace this system board, you must supply the recovery key when you restart your system or program before you can access the encrypted data on your drives.

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. Remove the following components:
 - a. Air shroud (if installed).
 - b. Cooling fan cage assembly.
 - c. Side wall brackets.
 - d. Heat sink.
 - e. Processor.
 - f. Memory modules.
 - g. Expansion card risers.
 - h. Internal USB card (if installed).
 - i. OCP card (if installed).
 - j. Power supply units (PSU).
 - k. Disconnect all cables from the system board.

 **CAUTION:** Take care not to damage the system identification button while removing the system board from the system.

Steps

1. Using the system board holder and plunger, slide the system board towards the front of the system.
2. Lift the system board out of the chassis.

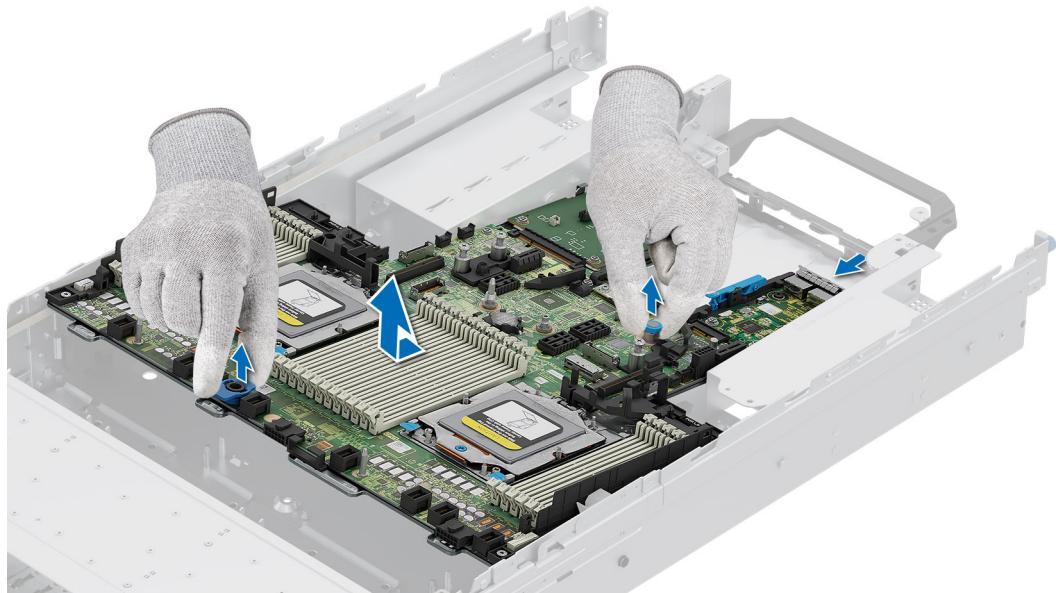


Figure 236. Removing the system board

Next steps

1. [Install the system board.](#)

Installing the system board

Prerequisites

i **NOTE:** Before replacing the system board, replace the old iDRAC MAC address label in the Information tag with the iDRAC MAC address label of the replacement system board

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).
3. If you are replacing the system board, remove all the components that are listed in the removing the system board section.

Steps

1. Unpack the new system board assembly.

⚠ CAUTION: Do not lift the system board by holding a memory module, processor, or other components.

⚠ CAUTION: Take care not to damage the system identification button while placing the system board into the chassis.

2. [Install LOM Card](#) on the system board if necessary.
3. Holding the system board holder and plunger, lower the system board into the system.
4. Slide the system board towards the rear of the chassis until the connectors are firmly seated in the slots.

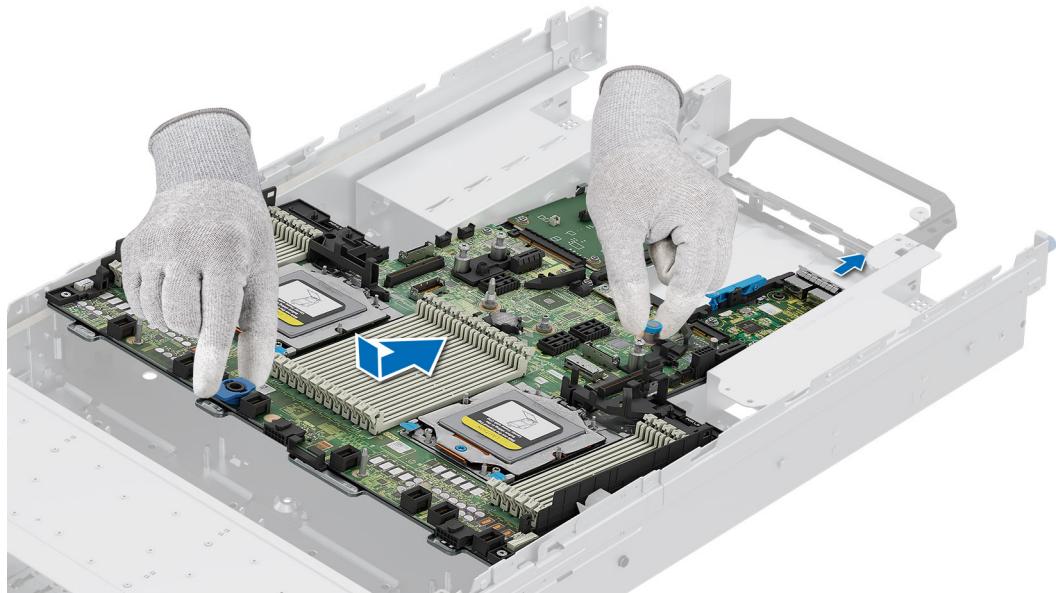


Figure 237. Installing the system board

Next steps

1. Replace the following components:

- a. Trusted Platform Module (TPM).

i **NOTE:** The TPM Module must be replaced only while installing new system board.

- b. Internal USB card (if installed).
- c. Power supply units (PSU).
- d. OCP card (if installed).
- e. Processor.
- f. Heat sink.
- g. Memory modules.
- h. Side wall bracket.
- i. Cooling fan cage assembly.
- j. Air shroud (if installed).

2. Reconnect all cables to the system board.

i **NOTE:** Ensure that the cables inside the system are routed along the chassis wall and secured using the cable securing bracket.

3. Ensure that you perform the following steps:

- a. Use the Easy Restore feature to restore the Service Tag. See the [Restoring the system by using the Easy Restore feature](#) section.
- b. If the service tag is not backed up in the backup flash device, enter the system service tag manually. See the [Manually update the Service Tag by using System Setup](#) section.
- c. Update the BIOS and iDRAC versions. Reenable the Trusted Platform Module (TPM). See the [Upgrading the Trusted Platform Module](#) section.

Restoring Service Tag using Easy Restore

The Easy Restore feature allows you to restore your Service Tag, iDRAC license, UEFI configuration, and the system configuration data after replacing the system board. All data is backed up in a backup Flash drive device automatically. If BIOS detects a new system board, and the Service Tag in the backup Flash drive device is different, BIOS prompts the user to restore the backup information.

Below is a list of options available:

1. Restore the service tag, license, and diagnostics information, press **Y**
2. Navigate to the Lifecycle Controller based restore options, press **N**
3. Restore data from a previously created **Hardware Server Profile**, press **F10**

(i) NOTE: When the restore process is complete, BIOS prompts to restore the system configuration data.

4. Restore data from a previously created **Hardware Server Profile**, press **F10**
5. To restore the system configuration data, press **Y**
6. To use the default configuration settings, press **N**

(i) NOTE: After the restore process is complete, system reboots.

(i) NOTE: If restoring the Service Tag is successful, you can check the Service Tag information in the **System Information** screen and compare it with the Service Tag on the system.

Manually update the Service Tag

After replacing a system board, if Easy Restore fails, follow this process to manually enter the Service Tag, using **System Setup**.

About this task

If you know the system service tag, use the **System Setup** menu to enter the service tag.

Steps

1. Power on the system.
2. To enter the **System Setup**, press **F2**.
3. Click **Service Tag Settings**.
4. Enter the service tag.

(i) NOTE: You can enter the service tag only when the **Service Tag** field is empty. Ensure that you enter the correct service tag. Once the service tag is entered, it cannot be updated or changed. Incorrectly entered service tag will lead to system board replacement.

5. Click **OK**.

LOM card, MIC card and rear I/O board

Removing the LOM card, MIC card and rear I/O board

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the system board](#).

Steps

1. Using a Phillips # 2 screwdriver, remove the screws that secure the LAN on Motherboard (LOM) card, Management Interface card (MIC), and rear I/O board to the system board.
2. Holding the edges, pull the LOM card, MIC card, or rear I/O board to disconnect from the connector on the system board.

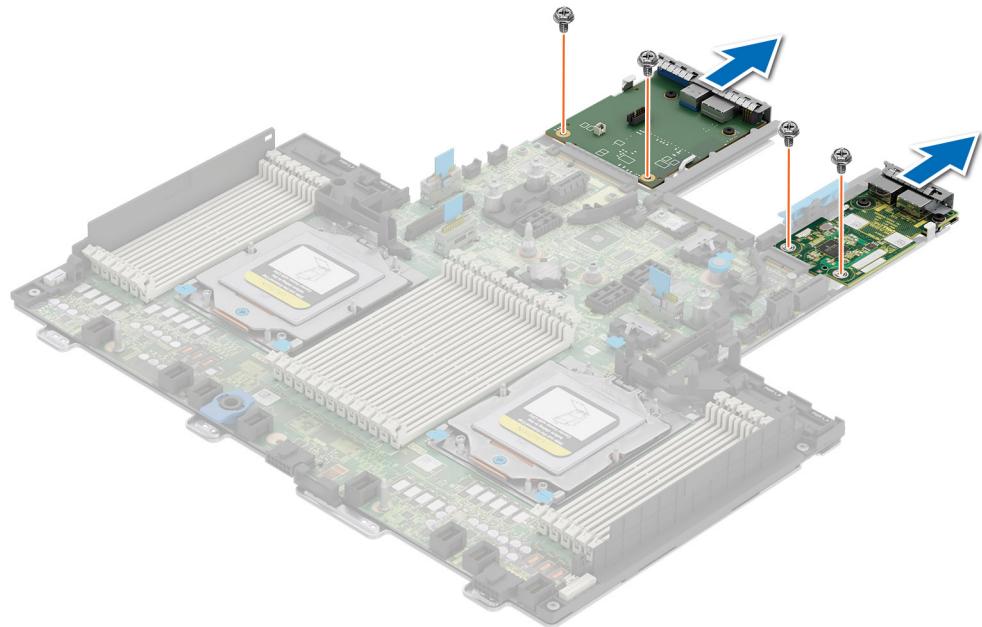


Figure 238. Removing the LOM card and rear I/O board

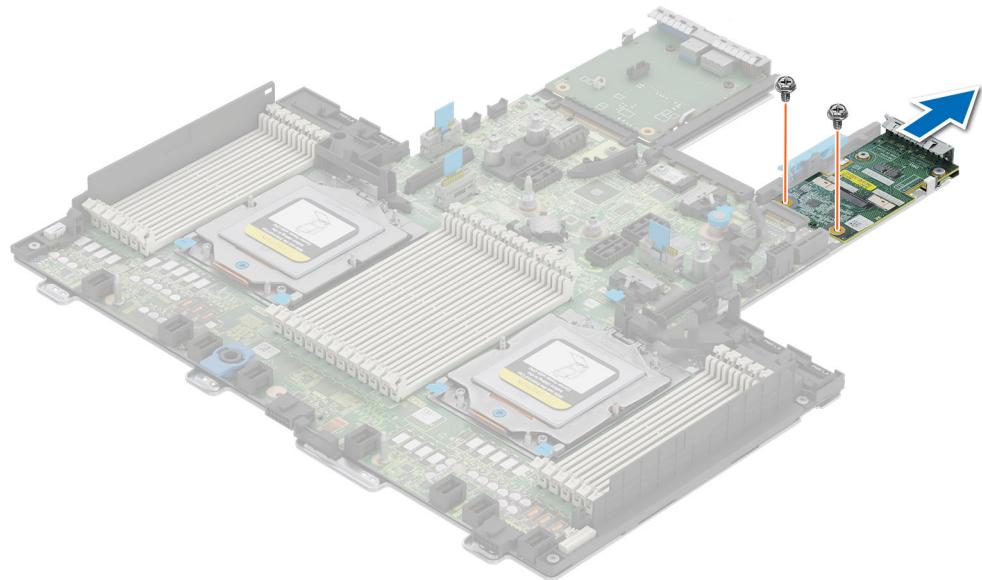


Figure 239. Removing the MIC card

Next steps

1. Replace the LOM card and rear I/O board.

Installing the LOM card, MIC card and rear I/O board

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the system board](#).

Steps

1. Align the connectors and slots on the LAN on Motherboard (LOM) card, Management Interface card (MIC), or rear I/O board with the connector and standoffs on the system board.
2. Press the LOM card, MIC card, or rear I/O board until firmly seated on the system board connector.
3. Using a Phillips #2 screwdriver, secure the LOM card, MIC card or rear I/O board to the system board with screws.

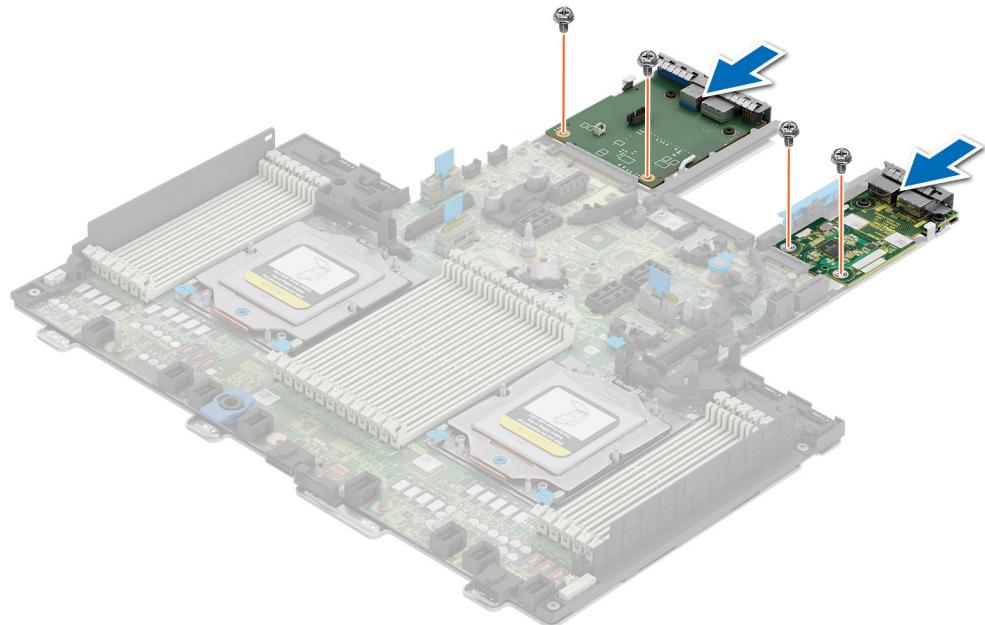


Figure 240. Installing the LOM card and rear I/O board

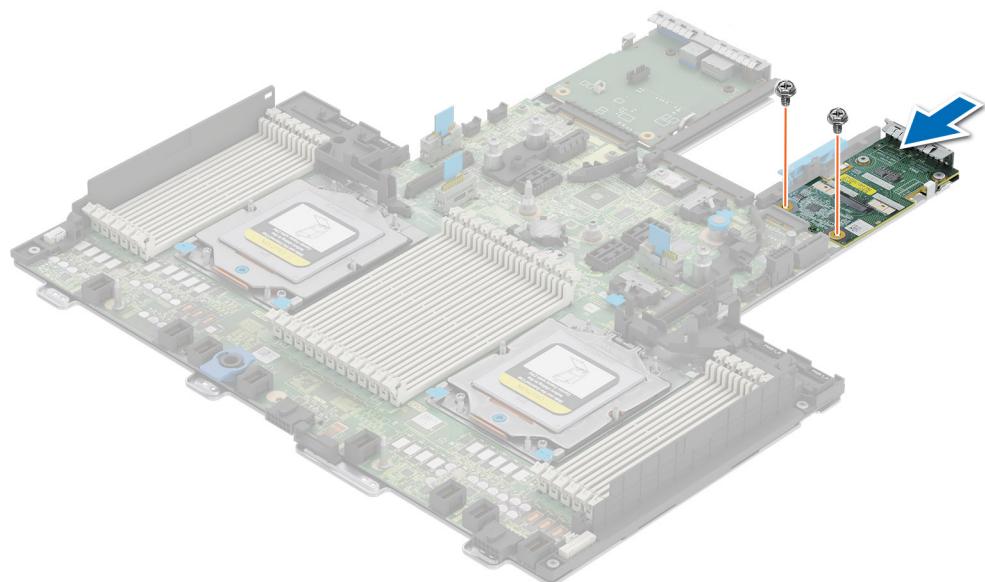


Figure 241. Installing the MIC card

(i) NOTE: MIC is card is only available in the system that supports Dell DPU cards.

Next steps

1. [Install the system board](#).
2. Follow the procedure listed in [After working inside your system](#).

Control panel

Removing the right control panel

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the drive backplane cover](#).
4. If installed, [remove the air shroud](#).
5. [Remove the cooling fan assembly](#).
6. [Remove the side wall bracket](#).

Steps

1. Using the Phillips #1 screwdriver, remove the screws that secure the right control panel and the right control panels cable cover to the system and remove the cable cover away the system.
2. Disconnect the right control panel cable and the VGA cable from the connectors on the system board.
3. Holding the cable, slide the right control panel out of the system.

i **NOTE:** Observe the routing of the cable as you remove the right control panel from the system.

i **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

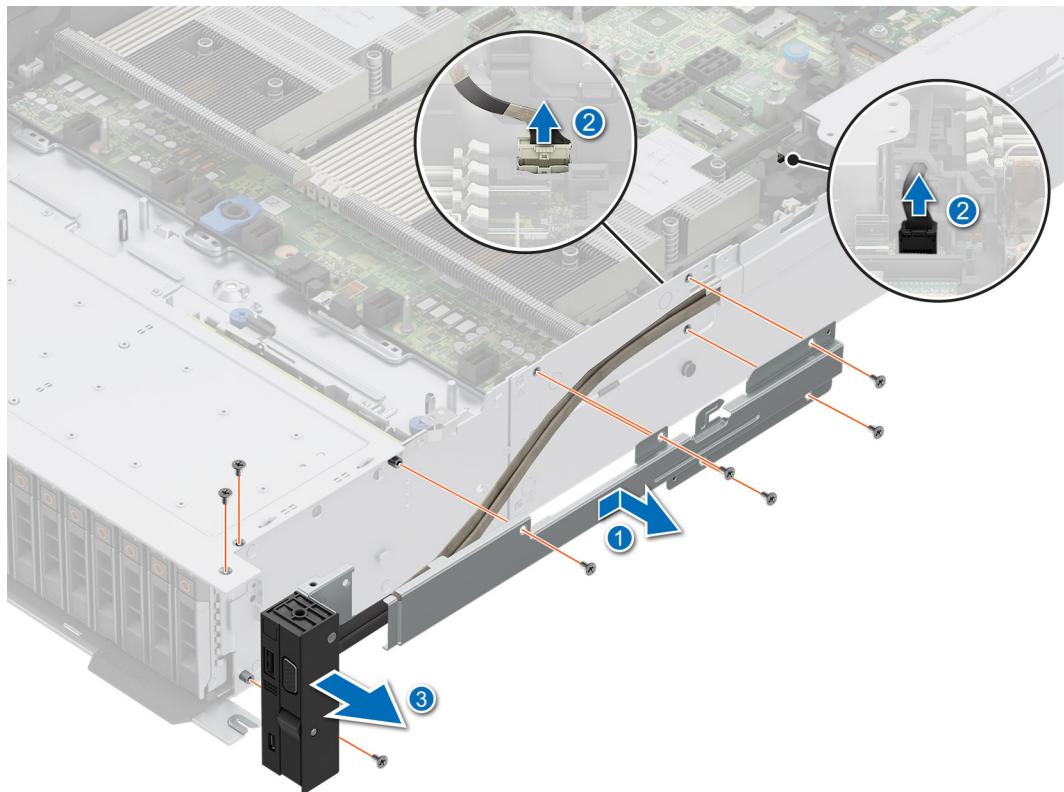


Figure 242. Removing the right control panel

Next steps

1. [Replace the right control panel](#).

Installing the right control panel

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Align and slide the right control panel in the slot on the system.
2. Connect the right control panel cable and VGA cable to the connectors on the system board.
3. Route the right control panel cable through the side wall of the system. Align and slide the right control panel cable cover in the slot on the system.

NOTE: Route the cable properly to prevent the cable from being pinched or crimped.

4. Using the Phillips #1 screwdriver, tighten the screws that secure the right control panel and the right control panel cable cover to the system.

NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

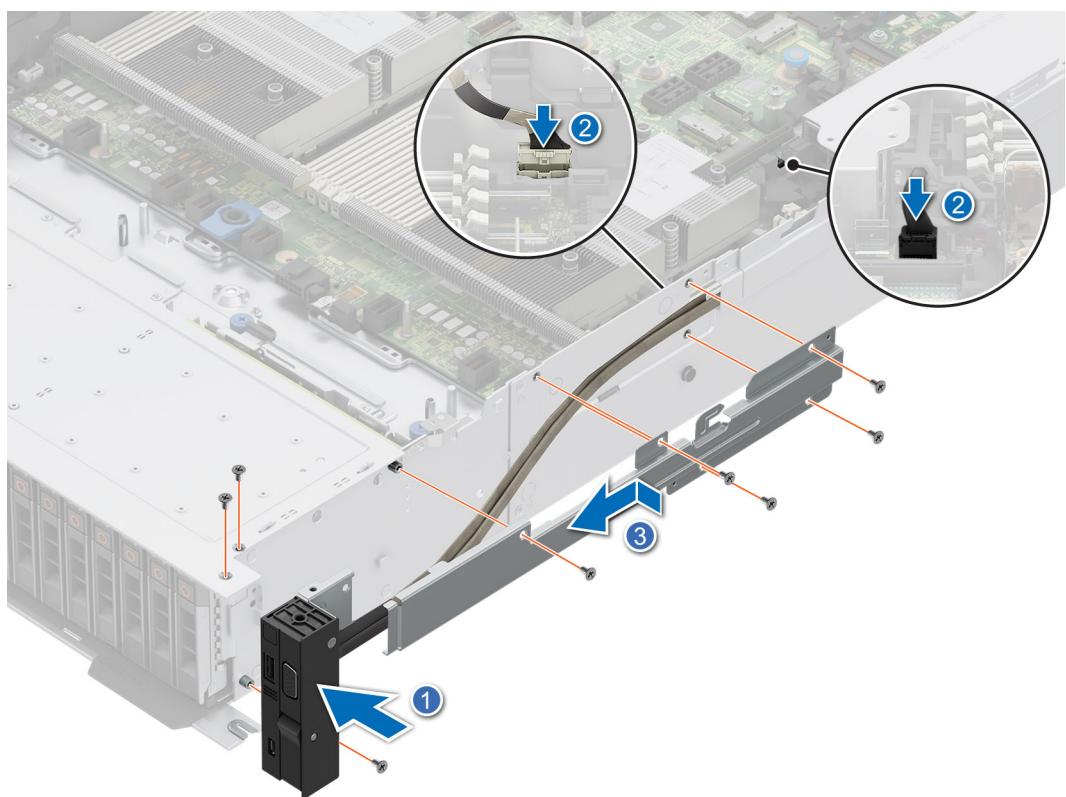


Figure 243. Installing the right control panel

Next steps

1. [Install the side wall bracket](#).
2. [Install the cooling fan assembly](#).
3. [Install the drive backplane cover](#).
4. If removed, [install the air shroud](#).
5. Follow the procedure listed in [After working inside your system](#).

Removing the left control panel

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in the [Before working inside your system](#).
3. [Remove the drive backplane cover](#).
4. If installed, [remove the air shroud](#).
5. [Remove the cooling fan assembly](#).
6. [Remove the side wall bracket](#).

Steps

1. Disconnect the control panel cable from the connector on the system board.
2. Using the Phillips #1 screwdriver, remove the screws that secure the left control panel and the left control panels cable cover to the system.
3. Hold the left control panel cable, and slide the left control panel out of the system.

i **NOTE:** Observe the routing of the cable as you remove the right control panel from the system.

i **NOTE:** The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

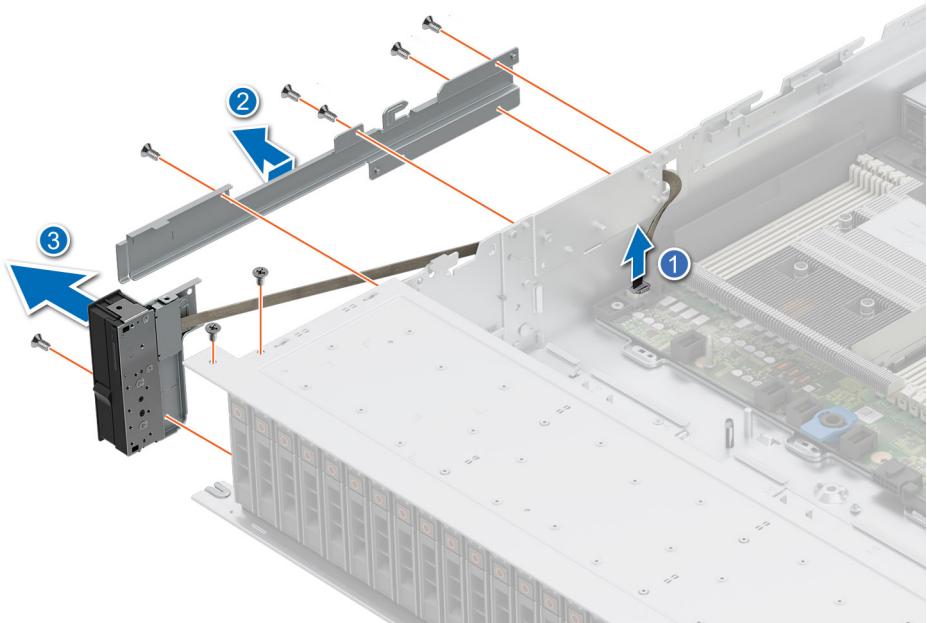


Figure 244. Removing the left control panel

Next steps

1. [Replace the left control panel](#).

Installing the left control panel

Prerequisites

1. Follow the safety guidelines listed in the [Safety instructions](#).
2. Follow the procedure listed in [Before working inside your system](#).

Steps

1. Align and slide the left control panel in the slot on the system.
2. Connect the left control panel cable to the connector on the system board .
3. Route the left control panel cable through the side wall of the system. Align and slide the left control panel cable cover in the slot on the system.

(i) NOTE: Route the cable properly to prevent the cable from being pinched or crimped.

4. Using the Phillips #1 screwdriver, tighten the screws to secure the left control panel and the left control panel cable cover to the system.

(i) NOTE: The numbers on the image do not depict the exact steps. The numbers are for representation of sequence.

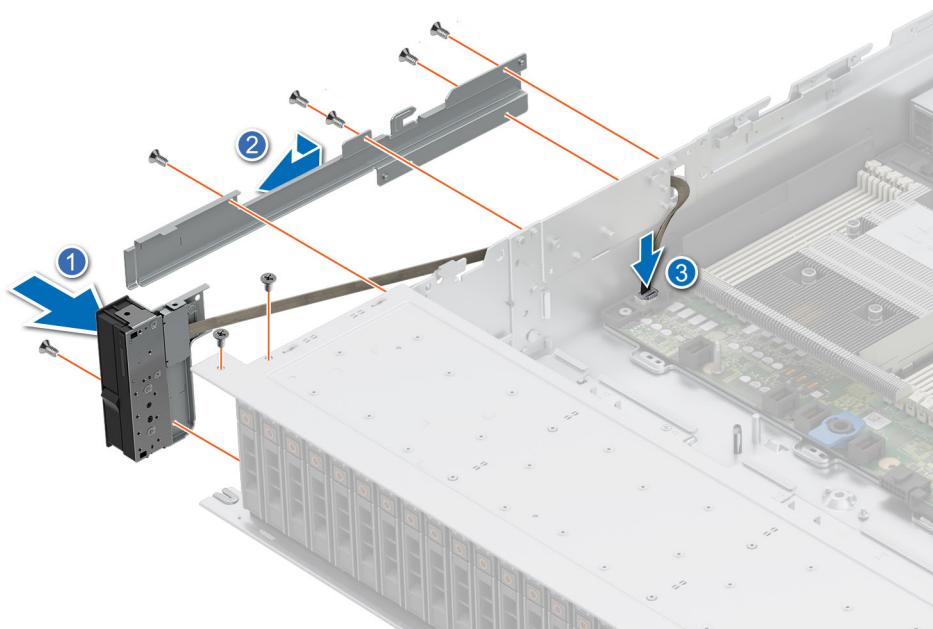


Figure 245. Installing the left control panel

Next steps

1. [Install the side wall bracket.](#)
2. [Install the cooling fan assembly.](#)
3. [Install the drive backplane cover.](#)
4. If removed, [install the air shroud.](#)
5. Follow the procedure listed in [After working inside your system](#).

Jumpers and connectors

This section provides essential and specific information about jumpers and switches. It also describes the connectors on the various boards in the system. Jumpers on the system board help to disable the system and reset the passwords. To install components and cables correctly, you must be able to identify the connectors on the system board.

Topics:

- System board connectors
- System board jumper settings
- Disabling a forgotten password

System board connectors

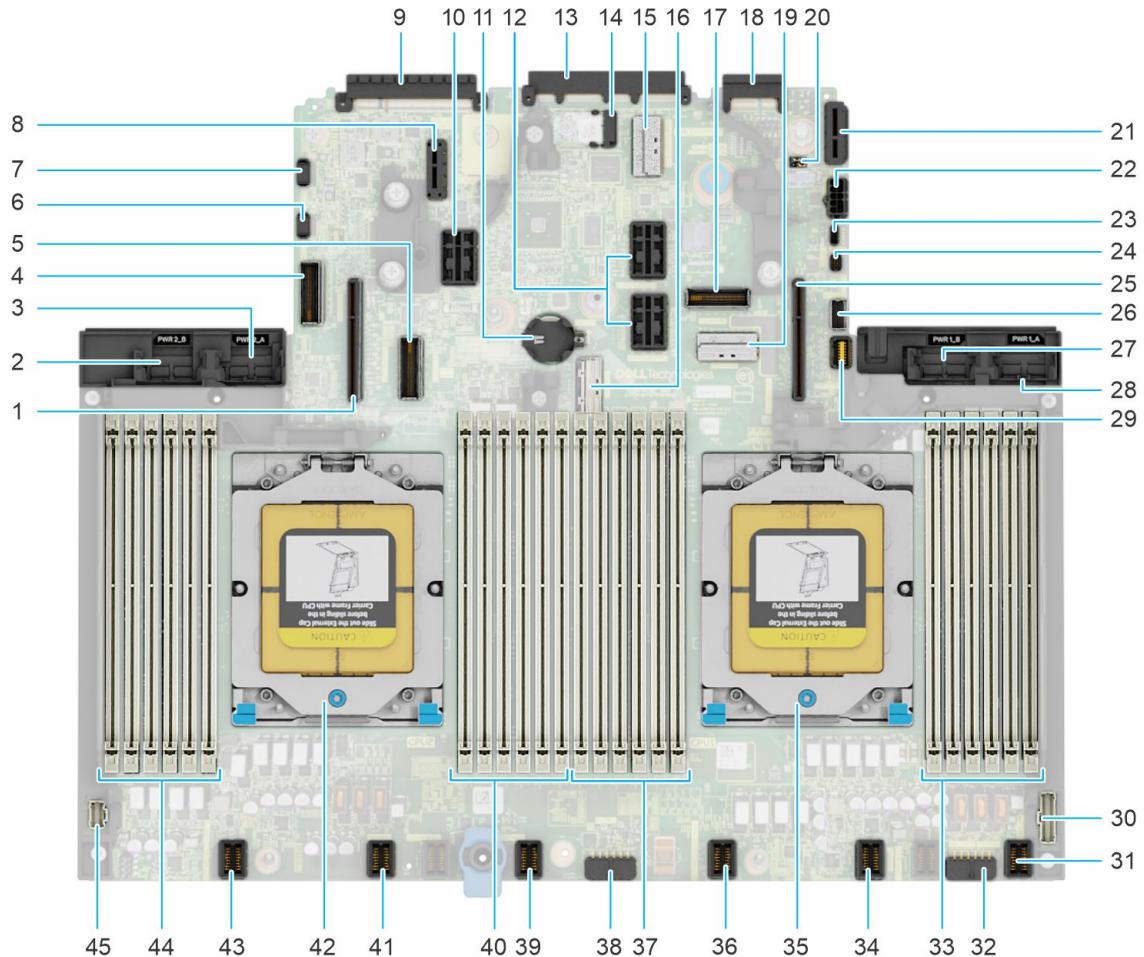


Figure 246. System board jumpers and connectors

Table 138. System board jumpers and connectors

Item	Connector	Description
1.	IO_RISER4 (CPU2)	Riser 4

Table 138. System board jumpers and connectors (continued)

Item	Connector	Description
2.	PWR 2_B	Power Connector for PSU2
3.	PWR 2_A	Power Connector for PSU2
4.	SL1_CPU2_PA4	PCIe Connector 1
5.	SL2_CPU2_PB4	PCIe Connector 2
6.	PSU2 PUCK Sideband Signal	PSU2 PUCK Sideband Signal
7.	Battery SIG Connector	Battery SIG Connector
8.	J_R3_PCIE_PWR	Riser 3 Power Connector
9.	Rear I/O connector	Rear I/O Connector
10.	IO_RISER3 (CPU2)	Riser 3
11.	Coin Cell Battery	Coin Cell Battery
12.	IO_RISER2_A (CPU1) IO_RISER2_B (CPU2)	Riser 2
13.	OCP NIC 3.0 connector	OCP NIC 3.0 Connector
14.	J TPM	TPM
15.	DSL_CPU1_PB2	PCIe Connector
16.	SL3_CPU1_PA1	PCIe Connector 3
17.	SL5_CPU1_PB2	PCIe Connector 5
18.	LOM connector	LOM Connector
19.	SL4_CPU1_PB1	PCIe Connector 4
20.	Jumpers	Jumpers
21.	IDSDM/Internal USB connector	IDSDM/Internal USB Connector
22.	Power Connector 0 - Use for Rear BP	Power Connector 0 - Use for Rear BP
23.	BOSS_CARD_PWR	BOSS Card Power
24.	PSU1 PUCK Sideband Signal	PSU1 PUCK Sideband Signal
25.	IO_RISER1 (CPU1)	Riser 1
26.	SL6_CPU1_PA3	PCIe Connector 6
27.	PWR 1_B	Power Connector for PSU1
28.	PWR 1_A	Power Connector for PSU1
29.	MB_FRONT_VIDEO	Front VGA Connector
30.	RGT_CP	Right Control Panel Connector
31.	FAN 6	Fan 6
32.	PWR Connector 2 - Use for BP only	Power Connector 2 - Use for BP only
33.	A2, A6, A4, A10, A8, A12	DIMMs for processor 1 channels G, H, I, J, K, L
34.	FAN 5	Fan 5
35.	CPU1	Processor 1
36.	FAN 4	Fan 4

Table 138. System board jumpers and connectors (continued)

Item	Connector	Description
37.	A11, A7, A9, A3, A5, A1	DIMMs for processor 1 channels F, E, D, C, B, A
38.	PWR Connector 1 - Use for BP only	Power Connector 1 - Use for BP only
39.	FAN 3	Fan 3
40.	B2, B6, B4, B10, B8, B12	DIMMs for processor 2 channels G, H, I, J, K, L
41.	FAN 2	Fan 2
42.	CPU2	Processor 2
43.	FAN 1	Fan 1
44.	B11, B7, B9, B3, B5, B1	DIMMs for processor 2 channels F, E, D, C, B, A
45.	LFT_CP	Left Control Panel Connector

System board jumper settings

For information about resetting the password jumper to disable a password, see the [Disabling a forgotten password](#) section.

Table 139. System board jumper settings

Jumper	Setting	Description
PWRD_EN	 2 4 6 (default)	The BIOS password feature is enabled.
	 1 3 5	The BIOS password feature is disabled. The BIOS password is now disabled and you are not allowed to set a new password.
NVRAM_CLR	 1 3 5 (default)	The BIOS configuration settings are retained at system boot.
	 2 4 6	The BIOS configuration settings are cleared at system boot.

 **CAUTION:** Be careful when changing the BIOS settings. The BIOS interface is designed for advanced users. Any change in the setting could prevent your system from starting correctly and you might have potential loss of data.

Disabling a forgotten password

The software security features of the system include a system password and a setup password. The password jumper enables or disables password features and clears any password(s) currently in use.

Prerequisites

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that are shipped with your product.

Steps

1. Power off the system, and all the attached peripherals, and disconnect the system from the electrical outlet.

2. Remove the system cover.
3. Move the jumper on the system board from pins 2 and 4 to pins 4 and 6.
4. Replace the system cover.

(i) NOTE: The existing passwords are not disabled (erased) until the system boots with the jumper on pins 4 and 6. However, before you assign a new system and/or setup password, you must move the jumper back to pins 2 and 4.

(i) NOTE: If you assign a new system and/or setup password with the jumper on pins 4 and 6, the system disables the new password(s) the next time it boots.

5. Reconnect the system and all the attached peripherals.
6. Power off the system.
7. Remove the system cover.
8. Move the jumper on the system board from pins 4 and 6 to pins 2 and 4.
9. Replace the system cover.
10. Reconnect the system to the electrical outlet and power on the system, and all the attached peripherals.
11. Assign a new system and/or setup password.

System diagnostics and indicator codes

This section describes the diagnostic indicators on the system front panel that displays the system status during system startup.

Topics:

- Status LED indicators
- System health and system ID indicator codes
- iDRAC Quick Sync 2 indicator codes
- iDRAC Direct LED indicator codes
- LCD panel
- NIC indicator codes
- Power supply unit indicator codes
- Drive indicator codes

Status LED indicators

 **NOTE:** The indicators display solid amber if any error occurs.



Figure 247. Status LED indicators

Table 140. Status LED indicators and descriptions

Icon	Description	Condition	Corrective action
	Drive indicator	The indicator turns solid amber if there is a drive error.	<ul style="list-style-type: none"> • Check the System Event Log to determine if the drive has an error. • Run the appropriate Online Diagnostics test. Restart the system and run embedded diagnostics (ePSA). • If the drives are configured in a RAID array, restart the system, and enter the host adapter configuration utility program.
	Temperature indicator	The indicator turns solid amber if the system experiences a thermal error (for example, the ambient	<p>Ensure that none of the following conditions exist:</p> <ul style="list-style-type: none"> • A cooling fan has been removed or has failed.

Table 140. Status LED indicators and descriptions (continued)

Icon	Description	Condition	Corrective action
		temperature is out of range or there is a fan failure).	<ul style="list-style-type: none"> • System cover, air shroud, or back filler bracket is removed. • Ambient temperature is too high. • External airflow is obstructed. <p>If the problem persists, see the Getting help section.</p>
	Electrical indicator	The indicator turns solid amber if the system experiences an electrical error (for example, voltage out of range, or a failed power supply unit (PSU) or voltage regulator).	<p>Check the System Event Log or system messages for the specific issue. If it is due to a problem with the PSU, check the LED on the PSU. Reseat the PSU.</p> <p>If the problem persists, see the Getting help section.</p>
	Memory indicator	The indicator turns solid amber if a memory error occurs.	<p>Check the System Event Log or system messages for the location of the failed memory. Reseat the memory module.</p> <p>If the problem persists, see the Getting help section.</p>
	PCIe indicator	The indicator turns solid amber if a PCIe card experiences an error.	<p>Restart the system. Update any required drivers for the PCIe card. Reinstall the card.</p> <p>If the problem persists, see the Getting help section.</p> <p> NOTE: For more information about the supported PCIe cards, see the Expansion card installation guidelines section.</p>

System health and system ID indicator codes

The system health and system ID indicator is located on the left control panel of the system.



Figure 248. System health and system ID indicator

Table 141. System health and system ID indicator codes

System health and system ID indicator code	Condition
Solid blue	Indicates that the system is powered on, is healthy, and system ID mode is not active. Press the system health and system ID button to switch to system ID mode.
Blinking blue	Indicates that the system ID mode is active. Press the system health and system ID button to switch to system health mode.
Solid amber	Indicates that the system is in fail-safe mode. If the problem persists, see the Getting help section.
Blinking amber	Indicates that the system is experiencing a fault. Check the System Event Log for specific error messages. EEMI guide

iDRAC Quick Sync 2 indicator codes

iDRAC Quick Sync 2 module (optional) is located on the left control panel of the system.

**Table 142. iDRAC Quick Sync 2 indicators and descriptions**

iDRAC Quick Sync 2 indicator code	Condition	Corrective action
Off (default state)	Indicates that the iDRAC Quick Sync 2 feature is powered off. Press the iDRAC Quick Sync 2 button to power on the iDRAC Quick Sync 2 feature.	If the LED fails to power on, reseat the left control panel flex cable and check. If the problem persists, see the Getting help section.
Solid white	Indicates that iDRAC Quick Sync 2 is ready to communicate. Press the iDRAC Quick Sync 2 button to power off.	If the LED fails to power off, restart the system. If the problem persists, see the Getting help section.
Blinks white rapidly	Indicates data transfer activity.	If the indicator continues to blink indefinitely, see the Getting help section.
Blinks white slowly	Indicates that firmware update is in progress.	If the indicator continues to blink indefinitely, see the Getting help section.
Blinks white five times rapidly and then powers off	Indicates that the iDRAC Quick Sync 2 feature is disabled.	Check if iDRAC Quick Sync 2 feature is configured to be disabled by iDRAC. If the problem persists, see the Getting help section. PowerEdge manuals or Dell OpenManage Server Administrator User's Guide at OpenManage Manuals .
Solid amber	Indicates that the system is in fail-safe mode.	Restart the system. If the problem persists, see the Getting help section.
Blinking amber	Indicates that the iDRAC Quick Sync 2 hardware is not responding properly.	Restart the system. If the problem persists, see the Getting help section.

iDRAC Direct LED indicator codes

The iDRAC Direct LED indicator lights up to indicate that the port is connected and is being used as a part of the iDRAC subsystem.

You can configure iDRAC Direct by using a USB to micro USB (type AB) cable, which you can connect to your laptop or tablet. Cable length should not exceed 3 feet (0.91 meters). Performance could be affected by cable quality. The following table describes iDRAC Direct activity when the iDRAC Direct port is active:

Table 143. iDRAC Direct LED indicator codes

iDRAC Direct LED indicator code	Condition
Solid green for two seconds	Indicates that the laptop or tablet is connected.
Blinking green (on for two seconds and off for two seconds)	Indicates that the laptop or tablet connected is recognized.
Powers off	Indicates that the laptop or tablet is unplugged.

LCD panel

The LCD panel provides system information, status, and error messages to indicate if the system is functioning correctly or requires attention. The LCD panel is used to configure or view the iDRAC IP address of the system. [EEMI Guide](#).

The LCD panel is available only on the optional front bezel. The optional front bezel is hot pluggable.

The status and conditions of the LCD panel are outlined here:

- The LCD backlight is white during normal operating conditions.
- If there is an issue, the LCD backlight turns amber and displays an error code followed by descriptive text.

i **NOTE:** If the system is connected to a power source and an error is detected, the LCD turns amber regardless of whether the system is powered on or off.

- When the system powers off and there are no errors, the LCD enters the standby mode after five minutes of inactivity. Press any button on the LCD to power it on.
- If the LCD panel stops responding, remove the bezel and reinstall it.

If the problem persists, see [Getting help](#).

- The LCD backlight remains off if LCD messaging is powered off using the iDRAC utility, the LCD panel, or other tools.

**Figure 249. LCD panel features****Table 144. LCD panel features**

Item	Button or display	Description
1	Left	Moves the cursor back in one-step increments.
2	Select	Selects the menu item highlighted by the cursor.
3	Right	Moves the cursor forward in one-step increments. During message scrolling: <ul style="list-style-type: none">• Press and hold the right button to increase scrolling speed.• Release the button to stop. i NOTE: The display stops scrolling when the button is released. After 45 seconds of inactivity, the display starts scrolling.
4	LCD display	Displays the system information, status, and error messages or iDRAC IP address.

Viewing Home screen

The **Home** screen displays user-configurable information about the system. This screen is displayed during normal system operation when there are no status messages or errors. When the system turns off and there are no errors, LCD enters the standby mode after five minutes of inactivity. Press any button on the LCD to turn it on.

Steps

1. To view the **Home** screen, press one of the three navigation buttons (Select, Left, or Right).
2. To navigate to the **Home** screen from another menu, complete the following steps:
 - a. Press and hold the navigation button till the up arrow  is displayed.
 - b. Navigate to the **Home** icon  using the up arrow .
 - c. Select the **Home** icon.
 - d. On the **Home** screen, press the **Select** button to enter the main menu.

Setup menu

 **NOTE:** When you select an option in the Setup menu, you must confirm the option before proceeding to the next action.

Table 145. Setup menu

Option	Description
iDRAC	Select DHCP or Static IP to configure the network mode. If Static IP is selected, the available fields are IP , Subnet (Sub) , and Gateway (Gtw) . Select Setup DNS to enable DNS and to view domain addresses. Two separate DNS entries are available.
Set error	Select SEL to view LCD error messages in a format that matches the IPMI description in the SEL. This enables you to match an LCD message with an SEL entry. Select Simple to view LCD error messages in a simplified user-friendly description. EEMI Guide .
Set home	Select the default information to be displayed on the Home screen. See View Home menu section for the options and option items that can be set as the default on the Home screen.

View menu

 **NOTE:** When you select an option in the View menu, you must confirm the option before proceeding to the next action.

Table 146. View menu

Option	Description
iDRAC IP	Displays the IPv4 or IPv6 addresses for iDRAC9. Addresses include DNS (Primary and Secondary), Gateway , IP , and Subnet (IPv6 does not have Subnet).
MAC	Displays the MAC addresses for iDRAC , iSCSI , or Network devices.
Name	Displays the name of the Host , Model , or User String for the system.
Number	Displays the Asset tag or the Service tag for the system.
Power	Displays the power output of the system in BTU/hr or Watts. The display format can be configured in the Set home submenu of the Setup menu.
Temperature	Displays the temperature of the system in Celsius or Fahrenheit. The display format can be configured in the Set home submenu of the Setup menu.

NIC indicator codes

Each NIC on the back of the system has indicators that provide information about the activity and link status. The activity LED indicator indicates if data is flowing through the NIC, and the link LED indicator indicates the speed of the connected network.

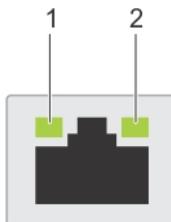


Figure 250. NIC indicator codes

1. Link LED indicator
2. Activity LED indicator

Table 147. NIC indicator codes

NIC indicator codes	Condition
Link and activity indicators are off.	Indicates that the NIC is not connected to the network.
Link indicator is green, and activity indicator is blinking green.	Indicates that the NIC is connected to a valid network at its maximum port speed, and data is being sent or received.
Link indicator is amber, and activity indicator is blinking green.	Indicates that the NIC is connected to a valid network at less than its maximum port speed, and data is being sent or received.
Link indicator is green, and activity indicator is off.	Indicates that the NIC is connected to a valid network at its maximum port speed, and data is not being sent or received.
Link indicator is amber, and activity indicator is off.	Indicates that the NIC is connected to a valid network at less than its maximum port speed, and data is not being sent or received.
Link indicator is blinking green, and activity is off.	Indicates that the NIC identify is enabled through the NIC configuration utility.

Power supply unit indicator codes

AC and DC power supply units (PSUs) have an illuminated translucent handle that serves as an indicator. The indicator shows if power is present or if a power fault has occurred.

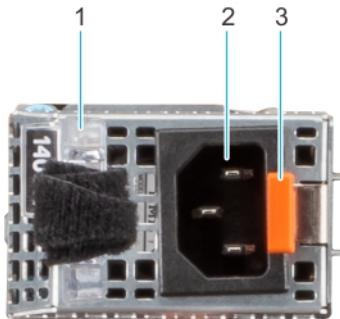


Figure 251. AC PSU status indicator

1. AC PSU handle
2. Socket
3. Release latch

Table 148. AC and DC PSU status indicator codes

Power indicator codes	Condition
Green	Indicates that a valid power source is connected to the PSU and the PSU is operational.
Blinking amber	Indicates an issue with the PSU.
Not powered on	Indicates that the power is not connected to the PSU.
Blinking green	Indicates that the firmware of the PSU is being updated.
Blinking green and powers off	<p>When hot-plugging a PSU, it blinks green five times at a rate of 4 Hz and powers off. This indicates a PSU mismatch due to efficiency, feature set, health status, or supported voltage.</p> <p>CAUTION: Do not disconnect the power cord or unplug the PSU when updating firmware. If firmware update is interrupted, the PSUs will not function.</p>
	<p>CAUTION: If two PSUs are installed, both the PSUs must have the same type of label; for example, Extended Power Performance (EPP) label. Mixing PSUs from previous generations of PowerEdge servers is not supported, even if the PSUs have the same power rating. This results in a PSU mismatch condition or failure to power on the system.</p>
	<p>CAUTION: If two PSUs are used, they must be of the same type and have the same maximum output power.</p>
	<p>CAUTION: When correcting a PSU mismatch, replace the PSU with the blinking indicator. Swapping the PSU to make a matched pair can result in an error condition and an unexpected system shutdown. To change from a high output configuration to a low output configuration or vice versa, you must power off the system.</p>
	<p>CAUTION: AC PSUs support both 240 V and 120 V input voltages with the exception of Titanium PSUs, which support only 240 V. When two identical PSUs receive different input voltages, they can output different wattages, and trigger a mismatch.</p>

Drive indicator codes

The LEDs on the drive carrier indicates the state of each drive. Each drive carrier has two LEDs: an activity LED (green) and a status LED (bicolor, green/amber). The activity LED blinks whenever the drive is accessed.



Figure 252. Drive indicators

1. Drive activity LED indicator

2. Drive status LED indicator
3. Drive capacity label

(i) NOTE: If the drive is in the Advanced Host Controller Interface (AHCI) mode, the status LED indicator does not power on.

(i) NOTE: Drive status indicator behavior is managed by Storage Spaces Direct. Not all drive status indicators may be used.

Table 149. Drive indicator codes

Drive status indicator code	Condition
Blinks green twice per second	Indicates that the drive is being identified or preparing for removal.
Not powered on	Indicates that the drive is ready for removal. (i) NOTE: The drive status indicator remains off until all drives are initialized after the system is powered on. Drives are not ready for removal during this time.
Blinks green, amber, and then powers off	Indicates that there is an expected drive failure.
Blinks amber four times per second	Indicates that the drive has failed.
Blinks green slowly	Indicates that the drive is rebuilding.
Solid green	Indicates that the drive is online.
Blinks green for three seconds, amber for three seconds, and then powers off after six seconds	Indicates that the rebuild has stopped.

EDSFF E3.S drive led codes

The LEDs on the drive carrier indicate the state of each drive. The LEDs on the EDSFF E3.S drive have two LEDs: an activity LED (green) and a locate/fault LED (blue/amber). The activity LED blinks whenever the drive is accessed.



Figure 253. EDSFF E3.S drive indicators

1. Drive activity LED indicator
2. Drive status LED indicator
3. Drive capacity label

EDSFF E3.S drive led codes

E3.S hard drives have Green LED and Blue/Amber LED.

- Green LED shows : Drive power status , Activity
- Blue/Amber LED shows: Drive Fault, Locate

EDSFF indicator behavior

Table 150. EDSFF indicator behavior

Pattern Name	Description	Blue Element	Amber Element
Locate	This device is being identified.	ON (1 sec ON 1 sec OFF)	OFF
Fault	The device is in a fault condition.	OFF	ON (2 sec ON 1 sec OFF)
N/A	This device does not have fault or locate device.	OFF	OFF

(i) NOTE: Locate behavior overrides Fault state.

Green LED

The green LED is driven and controlled by the device. The two functions for this LED are defined as follows:

- Power: This function indicates that the device has power and has no issues with its power regulation. Once the green LED is ON, it shall either remain ON or blink at the activity frequency unless the device determines power is no longer within its operating range.
- Activity: This function indicates if the device is being used.

Table 151. LED and device state per function for Green LED

Function/Device state	LED state
Power ON/Device is powered, no activity occurring.	ON
Activity/Device is powered, host initiated I/O activity occurring.	4 Hz nominal blink rate
Power OFF/Device is not powered.	OFF

Using system diagnostics

If you experience an issue with the system, run the system diagnostics before contacting Dell for technical assistance. The purpose of running system diagnostics is to test the system hardware without using additional equipment or risking data loss. If you are unable to fix the issue yourself, service and support personnel can use the diagnostics results to help you solve the issue.

Topics:

- Dell Embedded System Diagnostics

Dell Embedded System Diagnostics

 **NOTE:** The Dell Embedded System Diagnostics is also known as Enhanced Pre-boot System Assessment (ePSA) diagnostics.

The Embedded System Diagnostics provide a set of options for particular device groups or devices allowing you to:

- Run tests automatically or in an interactive mode
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options to provide extra information about the failed device(s)
- View status messages that inform you if tests are completed successfully
- View error messages that inform you of issues encountered during testing

Running the Embedded System Diagnostics from Boot Manager

Run the Embedded System Diagnostics (ePSA) if your system does not boot.

Steps

1. When the system is booting, press F11.
2. Use the up arrow and down arrow keys to select **System Utilities > Launch Diagnostics**.
3. Alternatively, when the system is booting, press F10, select **Hardware Diagnostics > Run Hardware Diagnostics**.
The **ePSA Pre-boot System Assessment** window is displayed, listing all devices detected in the system. The diagnostics starts executing the tests on all the detected devices.

Running the Embedded System Diagnostics from the Dell Lifecycle Controller

Steps

1. When the system is booting, press F10.
2. Select **Hardware Diagnostics > Run Hardware Diagnostics**.
The **ePSA Pre-boot System Assessment** window is displayed, listing all devices detected in the system. The diagnostics start executing the tests on all the detected devices.

System diagnostic controls

Table 152. System diagnostic controls

Menu	Description
Configuration	Displays the configuration and status information of all detected devices.
Results	Displays the results of all tests that are run.
System health	Provides the current overview of the system performance.
Event log	Displays a time-stamped log of the results of all tests run on the system. This is displayed if at least one event description is recorded.

Getting help

You can download drivers, firmware, and documents from the [R7625 FTP site](#). For more information about username and password, contact your TAM (Tech Account Manager).

The QRL, SupportAssist/ Secure Connect Gateway, and eSupport sites will be launched in Quarter 4 of the calendar year 2022.

Topics:

- [Recycling or End-of-Life service information](#)
- [Contacting Dell Technologies](#)
- [Accessing system information by using QR code](#)
- [Receiving automated support with SupportAssist](#)

Recycling or End-of-Life service information

Take back and recycling services are offered for this product in certain countries. If you want to dispose of system components, visit [How to Recycle](#) and select the relevant country.

Contacting Dell Technologies

Dell provides online and telephone based support and service options. If you do not have an active internet connection, you can find Dell contact information on your purchase invoice, packing slip, bill or Dell product catalog. The availability of services varies depending on the country and product, and some services may not be available in your area. To contact Dell for sales, technical assistance, or customer service issues follow these steps:

Steps

1. Go to [Dell Support](#).
2. Select your country from the drop-down menu on the lower right corner of the page.
3. For customized support:
 - a. Enter the system Service Tag in the **Enter a Service Tag, Serial Number, Service Request, Model, or Keyword** field.
 - b. Click **Search**.
The support page that lists the various support categories is displayed.
4. For general support:
 - a. Select your product category.
 - b. Select your product segment.
 - c. Select your product.
The support page that lists the various support categories is displayed.
5. For contact details of Dell Global Technical Support:
 - a. Click [Contact Technical Support](#).
 - b. The **Contact Technical Support** page is displayed with details to call, chat, or e-mail the Dell Global Technical Support team.

Accessing system information by using QR code

You can use the QR code located on the Express service tag in the front of the R7625 system, to access information about PowerEdge R7625. There is also another QR code for accessing product information on the back of the system cover.

Prerequisites

Ensure that your smart phone or tablet has a QR code scanner installed.

The QR code includes the following information about your system:

- How-to videos
- Reference materials, including the Installation and Service Manual, and mechanical overview
- The system service tag to quickly access the specific hardware configuration and warranty information
- A direct link to Dell to contact technical support and sales teams

Steps

1. Go to [PowerEdge Manuals](#), and navigate to your specific product or
2. Use your smart phone or tablet to scan the model-specific QR code on your system.

QR code for PowerEdge R7625 system



Figure 254. Quick Resource Locator for PowerEdge R7625 system

Receiving automated support with SupportAssist

Dell SupportAssist is an optional Dell Services offering that automates technical support for your Dell server, storage, and networking devices. By installing and setting up a SupportAssist application in your IT environment, you can receive the following benefits:

- Automated issue detection — SupportAssist monitors your Dell devices and automatically detects hardware issues, both proactively and predictively.
- Automated case creation — When an issue is detected, SupportAssist automatically opens a support case with Dell Technical Support.
- Automated diagnostic collection — SupportAssist automatically collects system state information from your devices and uploads it securely to Dell. This information is used by Dell Technical Support to troubleshoot the issue.
- Proactive contact — A Dell Technical Support agent contacts you about the support case and helps you resolve the issue.

The available benefits vary depending on the Dell Service entitlement purchased for your device. For more information about SupportAssist, go to [SupportAssist](#).

Documentation resources

This section provides information about the documentation resources for your system.

To view the document that is listed in the documentation resources table:

- From the Dell support site:
 - Click the documentation link that is provided in the Location column in the table.
 - Click the required product or product version.

 **NOTE:** To locate the model number, see the front of your system.

- On the Product Support page, click **Documentation**.

- Using search engines:
 - Type the name and version of the document in the search box.

Table 153. Additional documentation resources for your system

Task	Document	Location
Setting up your system	<p>For more information about installing and securing the system into a rack, see the Rail Installation Guide included with your rail solution.</p> <p>For information about setting up your system, see the <i>Getting Started Guide</i> document that is shipped with your system.</p>	PowerEdge Manuals
Configuring your system	<p>For information about the iDRAC features, configuring and logging in to iDRAC, and managing your system remotely, see the Integrated Dell Remote Access Controller User's Guide.</p> <p>For information about understanding Remote Access Controller Admin (RACADM) subcommands and supported RACADM interfaces, see the RACADM CLI Guide for iDRAC.</p> <p>For information about Redfish and its protocol, supported schema, and Redfish Eventing implemented in iDRAC, see the Redfish API Guide.</p> <p>For information about iDRAC property database group and object descriptions, see the Attribute Registry Guide.</p>	PowerEdge Manuals
	<p>For information about earlier versions of the iDRAC documents.</p> <p>To identify the version of iDRAC available on your system, on the iDRAC web interface, click ? > About.</p>	iDRAC Manuals
	For information about installing the operating system, see the operating system documentation.	Operating System Manuals

Table 153. Additional documentation resources for your system (continued)

Task	Document	Location
	For information about updating drivers and firmware, see the Methods to download firmware and drivers section in this document.	Drivers
Managing your system	For information about systems management software offered by Dell, see the Dell OpenManage Systems Management Overview Guide.	PowerEdge Manuals
	For information about setting up, using, and troubleshooting OpenManage, see the Dell OpenManage Server Administrator User's Guide.	OpenManage Manuals
	For information about installing and using Dell SupportAssist, see the Dell SupportAssist Enterprise User's Guide.	serviceability tools
	For information about partner programs enterprise systems management, see the OpenManage Connections Enterprise Systems Management documents.	OpenManage Manuals
Working with the Dell PowerEdge RAID controllers	For information about understanding the features of the Dell PowerEdge RAID controllers (PERC), Software RAID controllers, or BOSS card and deploying the cards, see the Storage controller documentation.	Storage Controller Manuals
Understanding event and error messages	For information about the event and error messages generated by the system firmware and agents that monitor system components, see the EEMI guide.	EEMI Guide
Troubleshooting your system	For information about identifying and troubleshooting the PowerEdge server issues, see the Server Troubleshooting Guide.	PowerEdge Manuals

Documentation resources

This section provides information about the documentation resources for your system.

To view the document that is listed in the documentation resources table:

- From the Dell support site:
 - Click the documentation link that is provided in the Location column in the table.
 - Click the required product or product version.

 **NOTE:** To locate the model number, see the front of your system.

- On the Product Support page, click **Documentation**.

- Using search engines:
 - Type the name and version of the document in the search box.

Table 154. Additional documentation resources for your system

Task	Document	Location
Setting up your system	<p>For more information about installing and securing the system into a rack, see the Rail Installation Guide included with your rail solution.</p> <p>For information about setting up your system, see the <i>Getting Started Guide</i> document that is shipped with your system.</p>	PowerEdge Manuals
Configuring your system	<p>For information about the iDRAC features, configuring and logging in to iDRAC, and managing your system remotely, see the Integrated Dell Remote Access Controller User's Guide.</p> <p>For information about understanding Remote Access Controller Admin (RACADM) subcommands and supported RACADM interfaces, see the RACADM CLI Guide for iDRAC.</p> <p>For information about Redfish and its protocol, supported schema, and Redfish Eventing implemented in iDRAC, see the Redfish API Guide.</p> <p>For information about iDRAC property database group and object descriptions, see the Attribute Registry Guide.</p>	PowerEdge Manuals
	<p>For information about earlier versions of the iDRAC documents.</p> <p>To identify the version of iDRAC available on your system, on the iDRAC web interface, click ? > About.</p>	iDRAC Manuals
	For information about installing the operating system, see the operating system documentation.	Operating System Manuals

Table 154. Additional documentation resources for your system (continued)

Task	Document	Location
	For information about updating drivers and firmware, see the Methods to download firmware and drivers section in this document.	Drivers
Managing your system	For information about systems management software offered by Dell, see the Dell OpenManage Systems Management Overview Guide.	PowerEdge Manuals
	For information about setting up, using, and troubleshooting OpenManage, see the Dell OpenManage Server Administrator User's Guide.	OpenManage Manuals
	For information about installing and using Dell SupportAssist, see the Dell SupportAssist Enterprise User's Guide.	serviceability tools
	For information about partner programs enterprise systems management, see the OpenManage Connections Enterprise Systems Management documents.	OpenManage Manuals
Working with the Dell PowerEdge RAID controllers	For information about understanding the features of the Dell PowerEdge RAID controllers (PERC), Software RAID controllers, or BOSS card and deploying the cards, see the Storage controller documentation.	Storage Controller Manuals
Understanding event and error messages	For information about the event and error messages generated by the system firmware and agents that monitor system components, see the EEMI guide.	EEMI Guide
Troubleshooting your system	For information about identifying and troubleshooting the PowerEdge server issues, see the Server Troubleshooting Guide.	PowerEdge Manuals