



EN User Manual | **Microwave Oven**

MFB295DB



Welcome to AEG! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooting, service and repair information:
www.aeg.com/support

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION.....	2
2. SAFETY INSTRUCTIONS.....	5
3. PRODUCT DESCRIPTION.....	6
4. BEFORE FIRST USE.....	9
5. DAILY USE.....	9
6. AUTOMATIC PROGRAMMES.....	13
7. USING THE ACCESSORIES.....	15
8. ADDITIONAL FUNCTIONS.....	16
9. HINTS AND TIPS.....	16
10. CARE AND CLEANING.....	17
11. TROUBLESHOOTING.....	18
12. INSTALLATION.....	18
13. ENERGY EFFICIENCY.....	19
14. ENVIRONMENTAL CONCERNS.....	19

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance read the supplied instructions carefully. The manufacturer is not responsible for any injuries or damage that result from incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and

persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses, and other similar accommodation where such use does not exceed average domestic usage levels.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching the heating elements.
- **WARNING:** If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a qualified person.
- **WARNING:** Do not heat liquids and other foods in sealed containers. They are liable to explode.
- Do not use a steam cleaner to clean the appliance.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Only a qualified person can carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the appliance due to the possibility of ignition.
- The appliance is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling. Care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in the appliance since they may explode, even after microwave heating has ended.
- The appliance should be cleaned regularly and any food deposits removed.
- Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely

affect the life of the appliance and possibly result in a hazardous situation.

- The temperature of accessible surfaces may be high when the appliance is operating.
- The microwave oven is intended to be used freestanding.
- The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
- The rear surface of appliances shall be placed against a wall.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- Do not activate the appliance when it is empty. Metal parts inside the cavity can create electric arcing.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- The appliance can be placed almost anywhere in the kitchen. Make sure the oven is placed on a flat, level surface and that vents as well as the surface underneath the appliance are not blocked (for sufficient ventilation).

2.2 Electrical Connection



WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains.

- If the appliance is connected to the socket via an extension cord, make sure the cord is earthed.
- Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service or an electrician to change a damaged mains cable.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

2.3 Use



WARNING!

Risk of injury, burns and electric shock or explosion.

- Do not modify this appliance.
- Do not let the appliance stay unattended during operation.
- Do not apply pressure on the open door.
- Make sure that the ventilation openings are not blocked.
- Do not use the appliance as a work surface and do not use the cavity for storage purposes.

2.4 Care and Cleaning

WARNING!

Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Do not allow food spills or cleaner residue to accumulate on door sealing surfaces.
- Fat and food remaining in the appliance can cause fire and electric arcing when the microwave function operates.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Check the product regularly for signs of deterioration that may make it unsuitable for food contact, such as cracks, blisters, delamination, shrinkage, stickiness, corrosion, or other visible changes in texture or appearance. Follow cleaning and care instructions to prevent deterioration.
- If you use an oven spray, obey the safety instructions on the packaging.

2.5 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

2.6 Disposal


WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

3. PRODUCT DESCRIPTION

3.1 General overview

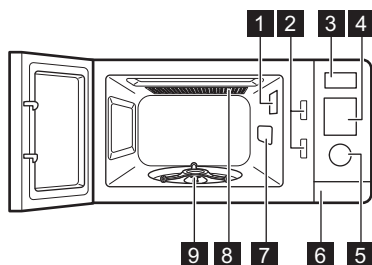


- 1** Lamp
- 2** Safety interlock system
- 3** Display
- 4** Control panel

- 5** Setting knob
- 6** Door opener
- 7** Waveguide cover
- 8** Grill
- 9** Turntable support



This Product fulfils the requirements of the European standard EN55011. In conformity to this standard, this product is classified as group 2 class B equipment. Group 2 means that the equipment intentionally generates radio-frequency energy in the form of electromagnetic radiation for the heat treatment of food. Class B equipment means that the equipment is suitable to be used in domestic establishments.

3.2 Control Panel

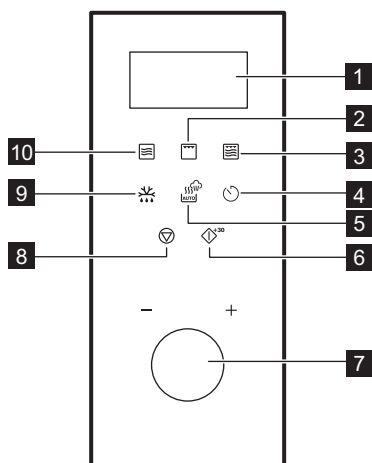

Symbol	Function	Description
1 —	Display	Shows the settings and current time.
2 	Grill	To select the grilling function.
3 	Combi cooking	To select the Combi cooking function.
4 	Timer/Clock	To set the hour of the day and the Kitchen timer.
5 	Presets/Steam Menu	To choose in between two auto cooking models.


Symbol	Function	Description
6 	Start / +30 sec button	To activate the appliance or increase the cooking time for 30 seconds at the selected power.
7 	Setting knob	To set the cooking time or weight.
8 	Stop/Clear button	To deactivate the appliance or delete the cooking settings.
9 	Defrost	To defrost food by time  or weight  .
10 	Microwave	To select the Microwave function.

3.3 Accessories

Turntable set




Always use the turntable set to prepare food in the microwave.

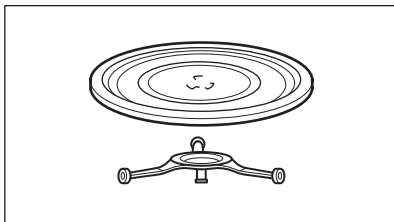

Glass cooking tray and turntable support.

Grill Rack

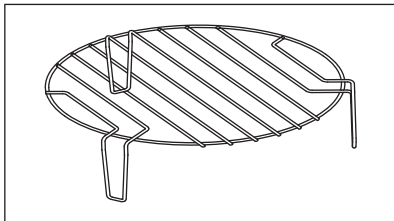


Use for:

- grilling food

Steam Pot set



For the suggested cooking table refer to "Hints and tips" chapter.

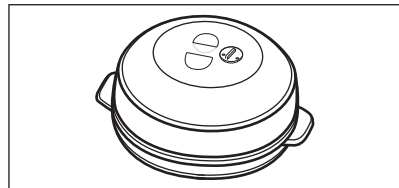

Use for:

- Steam cooking


4. BEFORE FIRST USE

WARNING!

Refer to Safety chapters.

4.1 Removing protective film

Before first use remove the protective film from the control panel and the door opening button.

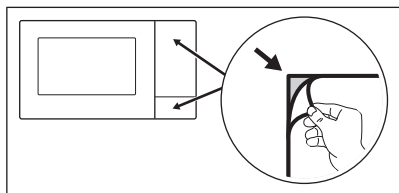

4.2 Initial Cleaning

WARNING!

Refer to "Care and cleaning" chapter.

- Remove all the accessories from the microwave.
- Carefully clean the oven cavity with a moist soft cloth.

4.3 Preheating

Preheat the empty oven before first use.

1. Set the function .

2. Let the oven operate for 30 minutes.
3. Open the door and let it cool down.
4. Clean the oven cavity with a moist soft cloth and dry carefully.

The oven can emit an odour and smoke. Make sure that the airflow in the room is sufficient.

4.4 Setting the Clock



You can set the time in 12 hour or 24 hour clock system.

1. Press  until 12 h or 24 h is displayed.
2. Turn the Time Setting knob to enter the amount of hours.
3. Press  to confirm.
4. Turn the Time Setting knob to enter the amount of minutes.
5. Press  to confirm.
 - If you do not want the clock visible on the display, press  until the display shows OFF and press  to confirm.



If the clock is not set, the display will turn off automatically 10 seconds after the end of the function.

5. DAILY USE

WARNING!

Refer to Safety chapters.

5.1 General information about using the appliance

- After you deactivate the appliance, let the food stand for several minutes.
- Remove the aluminium foil packaging, metal containers, etc. before you prepare the food.

Cooking

- If possible, cook food covered with a material suitable for use in the microwave. Only cook food without a cover if you want to keep it crusty
- Do not overcook the dishes by choosing too high a power setting and too long a time. The food can dry out, burn or catch fire in some places.
- Do not use the appliance to cook eggs or snails in their shells as they may explode. With fried eggs, pierce the yolks first.

- Pierce the skin or peel of potatoes, tomatoes, sausages and similar types of food with a fork several times before cooking so that the food does not burst.
- For chilled or frozen food, set a longer cooking time.
- Dishes which contain sauce must be stirred from time to time.
- Vegetables that have a firm structure, such as carrots, peas or cauliflower, must be cooked in water.
- Turn larger pieces of food halfway through the cooking process.
- If possible, cut vegetables into similar-sized pieces.
- Use flat, wide dishes.
- Do not use cookware made of porcelain, ceramic or earthenware with unglazed bottoms or small openings, for example, on handles. Moisture may get into these openings causing the cookware to crack when heated up.
- The glass cooking tray is necessary for the operation of the microwave. Place the food or liquids on it.

Defrosting meat, poultry, fish

- Put frozen, unwrapped food on a small angled plate with a container below so that the defrosting liquid collects in the container.

- Turn the food halfway through the defrosting time. If possible, separate and then remove the pieces that started to defrost.

Defrosting butter, portions of gateau, quark

- Do not fully defrost the food in the appliance, but let it defrost at room temperature. It gives a more even result. Remove all metal or aluminium packaging before defrosting.

Defrosting fruit, vegetables

- If fruit and vegetables should remain raw, do not defrost them fully in the appliance. Let them defrost at room temperature.
- To cook fruit and vegetables without defrosting them first use a higher microwave power.

Ready meals

- You can prepare ready meals in the appliance only if their packaging is suitable for microwave use.
- You must follow the manufacturer's instructions printed on the packaging (e.g. remove the metal cover and pierce the plastic film).

Suitable cookware and materials

Cookware / Material	Microwave			Grilling
	Defrosting	Heating	Cooking	
Ovenproof glass and porcelain with no metal components, e. g. Pyrex, heat-proof glass	✓	✓	✓	✓
Non-ovenproof glass and porcelain ¹⁾	✓	x	x	x
Glass and glass ceramic made of ovenproof/frost-proof material (e. g. Arcoflam), grill shelf	✓	✓	✓	✓
Ceramic ²⁾ , earthenware ²⁾	✓	✓	✓	x
Heat-resistant plastic up to 200 °C ³⁾	✓	✓	✓	x
Cardboard, paper	✓	x	x	x
Clingfilm	✓	x	x	x
Roasting film with microwave safe closure ³⁾	✓	✓	✓	x

Cookware / Material	Microwave			Grilling
	Defrosting	Heating	Cooking	
Roasting dishes made of metal, e. g. enamel, cast iron	X	X	X	✓
Baking tins, black lacquer or silicon-coated ³⁾	X	X	X	✓
Baking tray	X	X	X	✓
Browning cookware, e. g. crisp pan or crunch plate	X	✓	✓	X
Ready meals in packaging ³⁾	✓	✓	✓	✓
Steam pot set	✓	✓	✓	X

1) With no silver, gold, platinum or metal plating / decorations

2) Without quartz or metal components, or glazes which contain metals

3) You must follow the manufacturer's instructions about the maximum temperatures.

✓ suitable

X not suitable

5.2 Activating and deactivating the microwave



CAUTION!

Do not let the microwave operate if there is no food in it.

1. Press
2. If necessary repeatedly press or turn the Setting knob to choose the power level.
3. Press to confirm.
4. Turn the Setting knob to set the time.

5. Press to confirm and activate the microwave.

To deactivate the microwave:

- wait until the microwave deactivates automatically, when the time comes to an end.
- open the door. The microwave stops automatically. Close the door and press to continue to cook. Use this option to inspect food.
- press



When the microwave deactivates automatically, an acoustic signal sounds.

5.3 Power setting table

Symbol	Power setting	Power
	Microwave	90 - 900 W
	Grill	1000 W

Combi Cooking

Symbol	Power setting	Power
	Combi Cooking 1 (Lo)	55 % Microwave, 45 % Grill
	Combi Cooking 2 (Hi)	36 % Microwave, 64 % Grill
	Defrost	270 W

5.4 Quick Start

Press  to activate the microwave.
The default cooking time is 30 second and it increases by 30 second with each additional press of the button. The cooking time can also be adjusted by turning the knob.
The default power level is 900 W and it can be change by pressing  and turning the knob.

5.5 Defrosting

You can choose between 2 defrosting modes:

- Weight defrosting 
- Time defrosting 



Do not use weight defrosting on food that is left out of the freezer for more than 20 minutes, or for frozen ready-made food.



To activate weight defrosting you must use more than 100 g of food and less than 2000 g.



To defrost less than 200 g of food place it on the edge of the turntable.

1. Press  and set the defrosting mode: time  or weight .
2. Press  to confirm.
3. Turn the knob to set the weight or time.
For weight defrosting the time is set automatically.

4. Press  to confirm and activate the microwave.

5.6 Multistage cooking

This function allows to set two consecutive cooking stages programmes. Each cooking programme is counted down separately. After finishing the first set time, the second cooking programme starts automatically.

You can set the following programmes in the Multistage cooking mode: Defrost ,

Microwave , Grill , Combi Cooking .

The automatic programmes (Auto and Steam Cooking ) cannot be used.



If one of stages is defrosting, set it as the first stage.

Cook all frozen foods in 2 stages.

Example: Defrost  and Microwave 

1. Press  and set the defrosting mode: time  or weight .
2. Press  to confirm.
3. Turn the Setting knob to set the defrosting time or weight.
4. Press .
5. Turn the setting knob to set the power level.
6. Press  to confirm.
7. Turn the Setting knob to set the time.
8. Press  to confirm and start the multistage cooking.

5.7 Grilling and Combi Cooking

- 1. Press  or  to set the desired function.
- 2. Press  to confirm.

- 3. Turn the Setting knob to set the time.
- 4. Press  to confirm and activate the microwave.

6. AUTOMATIC PROGRAMMES



WARNING!

Refer to Safety chapters.

6.1 Steam Cooking

- 1. Place the steam cooking set on the turntable set. Refer to "Using The Accessories".
- 2. Press  to activate the Steam function.
- 3. Turn the Setting knob to choose the desired auto menu

- 4. Press  to confirm.
- 5. Turn the Setting knob to set the weight.
- 6. Press  to confirm and activate the microwave.



You can increase or decrease the set time at will by turning the Setting knob.

Food	Water (ml)	Food weight (g)	Time (min)	Standing time (min) ¹⁾
St1 Carrots in slices	400	150	5	1
		300	6:30	1
St2 Baby Carrots	400	500	10:30	2
St3 Cauliflower	400	125	4:30	1
		250	5:30	1
St4 Broccoli	400	125	4	1
		250	5:30	1
St5 Spinach	400	200	6:00	1
St6 Potatoes in slices	400	300	7:30	2
		500	10	2
St7 Green Beans	400	150	5	1
		300	6	1
St8 Asparagus	400	250	5	1
		500	7 :30	1
St9 Salmon	400	250	5	1

Food	Water (ml)	Food weight (g)	Time (min)	Standing time (min) ¹⁾
St10 Shrimps	400	250	4	1
		400	5:30	1
St11 Chicken Breast	400	500	9:30	2

1) After cooking, keep the food inside the Steam Pot with the lid and the valve closed.

6.2 Auto cooking

Use this function to easily cook favourite food. The microwave automatically sets the optimum settings.

1. Press  to enter the menu.
2. Turn the Power setting knob clockwise to choose the desired menu.
3. Press  to confirm.

4. Turn the Setting knob to set the weight of the menu.

5. Press  to confirm and activate the microwave.



You can increase or decrease the set time at will by turning the Setting knob.

Menu	Amount (g)	Display	Power (W)	Time (min)	Note
P1 Auto Reheat	200	200 g	900	1:50	Cover with plastic wrap and make some holes in it.
	400	400 g		3:30	
P2 Meat	250	250 g	900	3:30	Cover with plastic wrap and make some holes in it.
	350	350 g		4:30	
	450	450 g		5:30	
P3 Vegetable	200	200 g	900	3:00	Add 10 ml of water for every 100 g of vegetables. Cover with plastic wrap and make some holes in it.
	300	300 g		4:00	
	400	400 g		5:00	
P4 Pasta	50 (add 450 ml of water)	50 g	700	18:00	Add pasta to 450 ml of cold water.
	100 (add 800 ml of water)	100 g		20:00	Add pasta to 800 ml of cold water.
P5 Potatoes	about 230 (1)	1	900	5:00	
	about 460 (2)	2		8:00	
	about 690 (3)	3		12:00	
P6 Fish	250	250 g	700	4:30	Cover with plastic wrap and make some holes in it.
	350	350 g		5:30	
	450	450 g		7:00	

Menu	Amount (g)	Display	Power (W)	Time (min)	Note
P7 Beverage	120 ml (1 cup)	1	900	0:50	
	240 ml (2 cups)	2		1:40	
	360 ml (3 cups)	3		2:30	
P8 Popcorn	50	50 g	900	1:10	
	100	100 g		1:50	

7. USING THE ACCESSORIES

WARNING!

Refer to Safety chapters.

7.1 Using the accessories

WARNING!

Refer to Safety chapters.

Inserting the turntable set


CAUTION!

Do not cook food without the turntable set. Use only the turntable set provided with the microwave.



Never cook food directly on the glass cooking tray.

- Place the glass cooking tray on the turntable support

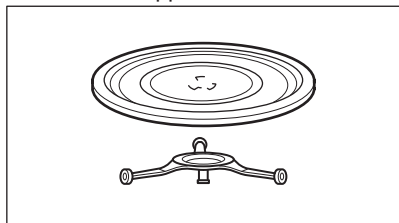


Inserting the grill rack

CAUTION!



Grill rack can not be used with the microwave function. There is a risk of damage to the appliance. Use the grill rack only with the Grill function.

Place the grill rack on the turntable set.

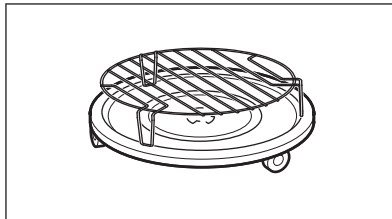

Inserting the steam pot set


CAUTION!




Steam pot set can not be used with the grill function.

- Fill the water collector (C).

2. Combine the steam pot parts: **C** - water collector, **B** - steam basket, **A** - lid.

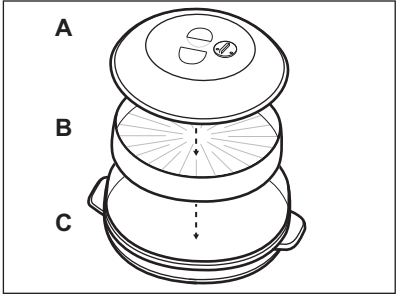

3. Place the steam pot on the turntable set.

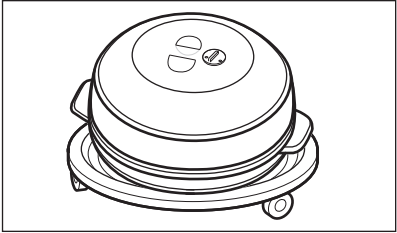

Keep The Steam valve closed during cooking.

8. ADDITIONAL FUNCTIONS

8.1 Kitchen Timer

You can set a maximum 95 minutes.

1. Press .
2. Turn the Setting knob to set the time.
3. Press  to confirm.
The Timer still works when you open the door or pause the microwave. Press  to cancel.

8.2 Child Safety Lock

The Child Safety Lock prevents an accidental operation of the microwave.



When the clock is set, press the Clear button first .

Press and hold  for 3 seconds.
To deactivate the Child Safety Lock open the door then press and hold  for 3 seconds.

9. HINTS AND TIPS



WARNING!

Refer to Safety chapters.

9.1 Tips for the microwave cooking

Problem	Remedy
You cannot find details on the amount of food prepared.	Look for a similar type of food. Increase or shorten the length of the cooking times according to the following rule: • Double the amount almost double the time. • Half the amount is a half time.
The food got too dry.	Set a shorter cooking time or select a lower microwave power.
The food is not defrosted, hot or cooked when the time ends.	Set a longer cooking time or a higher power. Note that large dishes need a longer time.

Problem	Remedy
After the cooking time ends, the food is overheated on the outside, but still not ready inside.	Next time set a lower power and a longer time. Stir liquids halfway through, e.g. soup.
Rice cooking results are poor.	To get better results for rice use a flat, wide dish.

9.2 Defrosting

Always defrost roast fat side down.

Do not defrost covered meat as it may cause cooking instead of defrosting.

Always defrost whole poultry breast side down.

9.3 Cooking

Always remove chilled meat and poultry from the refrigerator at least 30 minutes before cooking.

Let the meat, poultry, fish and vegetables stay covered after cooking.

Brush a little oil or melted butter over the fish.

All vegetables should be cooked at the full microwave power.

Add 30 - 45 ml of cold water for every 250 g of vegetables.

Cut fresh vegetables into even sized pieces before cooking. Cook all vegetables with a cover on the container.

9.4 Reheating

When you reheat packed ready meals always follow the instruction written on the packaging.

9.5 Grilling

Grill flat food items in the middle of the grill rack.

Turn the food over halfway through the set time and continue grilling.

9.6 Combi Cooking

Use Combi Cooking to keep the crispness of certain foods.

Halfway through the cooking time turn the foods over and then continue cooking.

There are 2 modes for Combi Cooking. Each mode combines the microwave and the grill functions at different time periods and power levels.

10. CARE AND CLEANING



WARNING!

Refer to Safety chapters.

10.1 Notes and tips on cleaning

- Clean the front of the appliance with a soft cloth with warm water and a cleaning agent.
- To clean metal surfaces, use a usual cleaning agent.
- Clean the interior of the appliance after each use to keep it in good condition.

Remove food remains regularly. Make sure to get rid of excess steam/humidity.

- Clean stubborn dirt with a special cleaner.
- Clean all accessories regularly and let them dry. Use a soft cloth with warm water and a cleaning agent.
- To soften the remains that are hard to remove boil a glass of water at the full microwave power for 2 to 3 minutes.
- To remove odours, mix a glass of water with 2 tsp of lemon juice and boil at full microwave power for 5 minutes.

11. TROUBLESHOOTING

 WARNING!

Refer to Safety chapters.

11.1 What to do if...

Problem	Possible cause	Remedy
The appliance does not operate.	The appliance is not plugged in.	Plug in the appliance.
The appliance does not operate.	The fuse in the fuse box is blown.	Check the fuse. If the fuse blows more than once, contact a qualified electrician.
The appliance does not operate.	The door is not closed properly.	Make sure that nothing blocks the door.
The lamp does not operate.	The lamp is defective.	The lamp has to be replaced.
There is sparking in the cavity.	There is a metal dish or a dish with a metal trim inside.	Remove the dish from the appliance.
There is sparking in the cavity.	There is a metal skewer or some aluminium foil inside that touches the interior walls.	Make sure that the skewer or foil does not touch the interior walls.
The turntable set makes a scratching or grinding noise.	There is an object or dirt below the glass cooking tray.	Clean the area below the glass cooking tray.
The appliance stops operating without a clear reason.	There is a malfunction.	If this situation repeats itself, call the Authorised Service Centre.

11.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the appliance. Do not remove the rating plate from the appliance.

We recommend that you write the data here:	
Model (MOD.)	
Product number (PNC)	
Serial number (S.N.)	

12. INSTALLATION

 WARNING!

Refer to Safety chapters.

12.1 General Information

⚠ CAUTION!

Do not connect the appliance to adapters or extension leads. This can cause overloading and risk of fire.

⚠ CAUTION!

The minimum installation height is 85 cm.


- The microwave is for a kitchen counter top use only. It must be placed on a stable and flat surface.
- Put the microwave far away from steam, hot air and water splashes.
- If the microwave is too close to a radio or TV set it may cause interference in the received signal.
- If you transport the microwave in the cold weather, do not activate it immediately after the installation. Let it stand in the room temperature and absorb the heat.

12.2 Electrical installation

This microwave is supplied with a main cable and main plug.

The cable has an earth wire with an earthing plug. The plug must be plugged into an outlet that is properly installed and earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock.

12.3 Minimal distances

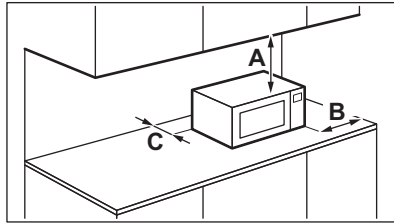

Dimension	mm
A ¹⁾	300
B	200
C	0

¹⁾ The minimum height of free space necessary above the top surface of the appliance.

12.4 Product dimensions

Dimension	mm
Height	290
Width	495
Depth	370

13. ENERGY EFFICIENCY

13.1 Product Information for power consumption and maximum time to reach applicable low power mode

Power consumption in standby with display on	0.8 W
--	-------

Maximum time needed for the equipment to automatically reach the applicable low power mode	20 min
--	--------

Appliance tested according to: EN 50564.

14. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

