



58771

©2023 Bestway Inflatables & Material Corp.

All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten/Tutti i diritti riservati

Trademarks used in some countries under license from/

Marques utilisées dans certains pays sous la licence de/

Marcas comerciales utilizadas en algunos países bajo la licencia de/

Die Warenzeichen werden in einigen Ländern verwendet unter Lizenz der/

Marchi utilizzati in alcuni paesi concessi in licenza a

Bestway Inflatables & Material Corp., Shanghai, China

Manufactured, distributed and represented in the European Union by/

Fabriqués, distribués et représentés dans l'Union Européenne par/Fabricado, distribuido y representado en la Unión Europea por/

Hergestellt, vertrieben und in der Europäischen Union vertreten von/Prodotto, distribuito e rappresentato nell'Unione Europea da

Bestway Europe S.p.a., Via Resistenza, 5, 20098 San Giuliano Milanese (Milano), Italy

Distributed in Latin America by/Distribué en Amérique latine par/Distribuido en Latinoamérica por/Distribuido na América Latina por

Bestway Central & South America Ltda, Salar Ascotan 1282, Parque Enea, Pudahuel, Santiago, Chile

Distributed in Australia & New Zealand by **Bestway Australia Pty Ltd, Unit 2/98-104 Camarvon St Silverwater, NSW 2128, Australia**

Tel: Australia: (+61) 2 9037 1388; New Zealand: 0800 142 101

Distributed in United Kingdom by **Bestway Corp UK Ltd, 8 Wentworth Road, Heathfield Industrial Estate, Newton Abbot, Devon, TQ12 6TL**

Exported by/Exporté par/Exportado por/Exportiert von/Esportato da

Bestway (Hong Kong) International Ltd./Bestway Enterprise Company Limited

Suite 713, 7/Floor, East Wing, Tsim Sha Tsui Centre, 66 Mody Road, Kowloon, Hong Kong

www.bestwaycorp.com

OWNER'S MANUAL

Model No. 58771

IMPORTANT SAFETY INSTRUCTIONS

WARNING

It must only be supplied at SELV.

- This appliance shall not be used by children.
- Cleaning and user maintenance shall not be carried out by children.
- Disconnect the pump from the supply mains before carrying out user maintenance such as cleaning the filter.
- Always disconnect the appliance from the supply before assembling, disassembling or cleaning.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Pumps without indication that they are protected against the effect of freezing shall not be left outside during freezing weather conditions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If instructions is missed, please contact with Bestway or search it in website: www.bestwaycorp.com.

DISPOSAL



Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

TECHNICAL SAFETY INSTRUCTIONS

- The cleaner must only be operated at the appropriate voltage indicated on the product.
- The cleaner is designed to clean a swimming pool or spa.
- Ensure the cleaner is powered off before charging.
- When not in use, store the cleaner in a clean, dry place. Do not leave it out under the sun, as this will reduce the life of the battery.
- Keep away from sharp objects, as they can damage the filter bag.
- Do not close to the vacuum head when it is on, as this increases the temperature of the motor and the risk of damaging it.
- Water depth from 46 cm to 250 cm.
- Water temperature: 4°C (39.2°F) - 35°C (95°F).
- These warnings are not intended to incorporate all possible instances for risks and/or severe injury. Pool/spa owners should always exercise intensive caution and common sense when operating the cleaner.
- This appliance contains batteries that are irreplaceable.
- The indicator light will be green during operation. If there is insufficient power, the indicator light will flash red. The indicator light will be red during charging, and the indicator light will turn green once fully charged.
- Charge the cleaner for 4-5 hours prior to the first use. Normally, the cleaner will operate for 50 minutes once fully charged.
- Before charging, clean the charging port.
- Charge the cleaner when the indicator light flicks red to show low capacity.

TROUBLESHOOTING

Problems	Probable Causes	Solutions
Machine does not work	Low battery	Recharge, it can operate normally for 50 minutes after charging.
	Battery damage	Return to the shop to get assistance
Too little suction	Low battery	Recharge, it can operate normally for 50 minutes after charging.
	Debris bag is full	Clean up excessive garbage in the net bag in time
Abnormal noise	Issue with motor impeller	Clean the foreign matter from the impeller
	Motor impeller is broken	Return to the shop to get assistance
The cleaner cannot be charged	Battery damage	Return to the shop to get assistance
	Damaged charger	Replace the charger
	USB charging cable is damaged	Return to the shop to get assistance

Drawings are for illustration purposes only. May not reflect actual product. Not to scale.



