



68091

©2022 Bestway Inflatables & Material Corp.

All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten/Tutti i diritti riservati

Trademarks used in some countries under license from/

Marques utilisées dans certains pays sous la licence de/

Marcas comerciales utilizadas en algunos países bajo la licencia de/

Die Warenzeichen werden in einigen Ländern verwendet unter Lizenz der/

Marchi utilizzati in alcuni paesi concessi in licenza a

Bestway Inflatables & Material Corp., Shanghai, China

Manufactured, distributed and represented in the European Union by/

Fabriqués, distribués et représentés dans l'Union Européenne par/Fabricado, distribuido y representado en la Unión Europea por/

Hergestellt, vertrieben und in der Europäischen Union vertreten von/Prodotto, distribuito e rappresentato nell'Unione Europea da

Bestway Europe S.p.a., Via Resistenza, 5, 20098 San Giuliano Milanese (Milano), Italy

Distributed in Latin America by/Distribué en Amérique latine par/Distribuido en Latinoamérica por/Distribuido na América Latina por

Bestway Central & South America Ltda, Salar Ascotan 1282, Parque Enea, Pudahuel, Santiago, Chile

Distributed in Australia & New Zealand by **Bestway Australia Pty Ltd, Unit 2/98-104 Camarvon St Silverwater, NSW 2128, Australia**

Tel: Australia: (+61) 2 9037 1388; New Zealand: 0800 142 101

Distributed in United Kingdom by **Bestway Corp UK Ltd, 8 Wentworth Road, Heathfield Industrial Estate, Newton Abbot, Devon, TQ12 6TL**

Exported by/Exporté par/Exportado por/Exportiert von/Esportato da

Bestway (Hong Kong) International Ltd./Bestway Enterprise Company Limited

Suite 713, 7/Floor, East Wing, Tsim Sha Tsui Centre, 66 Mody Road, Kowloon, Hong Kong

www.bestwaycorp.com

Owner's Manual

Model No.#68091

 
ACTIVERIDGE 4 Tent

INTRODUCTION


Proper Use

Any use other than that described or any modification of the product is not permissible and may result in injury and/or damage to the product. The manufacturer is not liable for damage caused by improper use. The product is not intended for commercial use.


Description of parts and features




outer tent
1PC

 


long pole
2PCS

 


short pole
1PC

 


guy rope
6PCS

 

peg
15PCS

 

inner tent
1PC

 

carry bag
1PC




manual
1PC

Tent Dimensions:

Inner tent: 235cm x 205cm x 135cm

Outer tent: (100cm + 210cm) x 240cm x 135cm

Pitching dimension: 320cm x 250cm

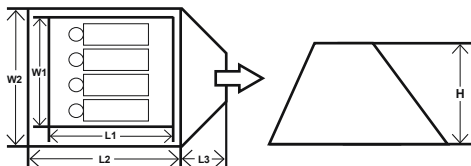

WARNING

IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL INSTRUCTIONS

Keep all flames and heat sources away from this tent fabric. We recommend that you always position your tent upwind from a camp fire. This will reduce the chances of having embers land on your tent. In case of fire, please find the exit to escape from the fire. Never set up the tent near the river, under the tree of other objective hazards.

Keep exits clear.

Make sure ventilation openings are open all the time to avoid suffocation.

SAVE THESE INSTRUCTIONS

ASSEMBLY

Setting up the tent

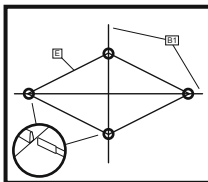


FIG1

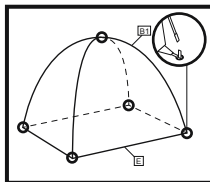


FIG2

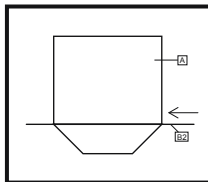


FIG3

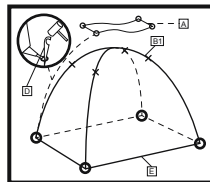


FIG4

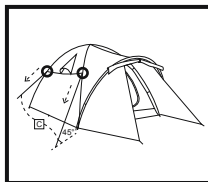


FIG5

WARNING: Poles contain fiber glass. We strongly recommend wearing gloves during assembly to avoid irritating hands.

1. Lay the inner tent<E> on the ground. Pull the four corners outwards.

Note: Make sure that the channels for the poles<B1> are facing upwards.

Note: Make sure that the zip on the entrance to the tent is closed.

2. Push the poles<B1> completely into the channels.(FIG1)
3. Stand the inner tent<E> up and push the ends of the poles<B1> into the ground sleeves (which are on the each corner of the inner tent<E>).(FIG2)
4. Fasten the roof of the inner tent<E> onto the pole junction with the sewn-on tie.(FIG2)
5. Push the pole<B2> completely into the channel on the awning of outer tent<A>.(FIG3)
6. Now carefully place the outer tent<A> over the inner tent<E>.(FIG4)
7. Push the ends of the pole<B2> into the ground sleeves(which are on the awning of the inner tent<A>).(FIG2)
8. Secure the outer tent<A> by pushing the tent pegs<D> into the ground loops.(FIG5)
9. Tie one end of the guy ropes<C>onto the four corner hoops of outer tent<A>.(FIG5)
10. Tie the other end onto the tent pegs<D> and fasten them by inserting the tent pegs<D> into ground.(FIG5)
11. **Note:** Ensure that guy ropes<C> are about at an angle of 45°
12. Do not pull the guy ropes<C> too tight.

DISASSEMBLE AND MAINTENANCE

Follow steps 1-12 in reverse order.

1. Clean the tent and remove any stains with sponge and cool water. Please use non-detergent soap for serious cleaning.
2. Never machine wash or machine dry the tent. Hand wash and air dry.
3. Please allow all parts to dry thoroughly before you repack the tent. This will prevent the formation from mould, bad odours and discolouration
4. Stitch with thread to repair minor leaks, fabrics and plastic sheets damage. Use ropes to connect broken frame parts. Use tapes to repair the coating broken parts.
5. Silicone spray could be use onto zippers if stick

STORAGE

Store the tent in the stuff sack and place it in a cool, dry area out of sunlight and away from heat sources and rodents.