

# Latitude 3540

## Setup and Specifications

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

<b>Chapter 1: Set up your Latitude 3540.....</b>	<b>4</b>
<b>Chapter 2: Views of Latitude 3540.....</b>	<b>6</b>
Right.....	6
Left.....	6
Top.....	7
Display.....	8
Bottom.....	9
Service Tag.....	9
Battery charge and status light .....	10
<b>Chapter 3: Specifications of Latitude 3540.....</b>	<b>11</b>
Dimensions and weight.....	11
Processor.....	11
Chipset.....	12
Operating system.....	12
Memory.....	12
External ports.....	13
Internal slots.....	13
Ethernet.....	13
Wireless module.....	14
WWAN module.....	14
Audio.....	15
Storage.....	16
Keyboard.....	16
Camera.....	17
Touchpad.....	17
Power adapter.....	18
Battery.....	19
Display.....	20
Fingerprint reader.....	21
Sensor .....	21
GPU—Integrated.....	21
GPU—Discrete.....	21
Multiple display support matrix.....	22
Hardware security.....	22
Operating and storage environment.....	22
<b>Chapter 4: Keyboard shortcuts of Latitude 3540.....</b>	<b>24</b>
<b>Chapter 5: Getting help and contacting Dell.....</b>	<b>26</b>

# Set up your Latitude 3540

**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

1. Connect the power adapter and press the power button.



**NOTE:** To conserve battery power, the battery might enter power saving mode. Connect the power adapter and press the power button to turn on the computer.

2. Finish operating system setup.

#### **For Ubuntu:**

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, search in the Knowledge Base Resource at [www.dell.com/support](http://www.dell.com/support).

#### **For Windows:**

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- Connect to a network for Windows updates.






**NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.

- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended.

**Table 1. Locate Dell apps**

Resources	Description
	<p><b>Dell Product Registration</b> Register your computer with Dell.</p>
	<p><b>Dell Help &amp; Support</b> Access help and support for your computer.</p>
	<p><b>SupportAssist</b> SupportAssist is the smart technology that keeps your computer running at its best by optimizing settings, detecting issues, removing viruses and notifies when you need to make system updates. SupportAssist proactively checks the health of your system's hardware and software. When an issue is detected, the necessary system state information is sent to Dell to begin troubleshooting. SupportAssist is preinstalled on most of the Dell devices running Windows operating system. For more information, see SupportAssist for Home PCs User's Guide on <a href="http://www.dell.com/serviceabilitytools">www.dell.com/serviceabilitytools</a>. <b>NOTE:</b> In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p>
	<p><b>Dell Update</b> Updates your computer with critical fixes and latest device drivers as they become available. For more information on using Dell Update, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>
	<p><b>Dell Digital Delivery</b> Download software applications, which are purchased but not preinstalled on your computer. For more information on using Dell Digital Delivery, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>


## Views of Latitude 3540

### Right



1. microSIM card slot (optional)
2. USB 3.2 Gen 1 port
3. RJ-45 ethernet port
4. Ethernet status LED
5. Wedge-shaped lock slot

### Left

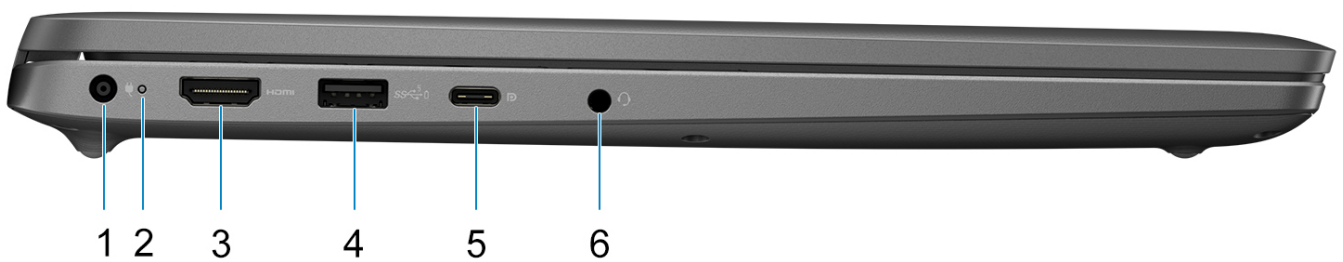


1. DC-in port (4.5 mm)
2. Battery-status light/Diagnostic-status light
3. HDMI 1.4 port
4. USB 3.2 Gen 1 port with PowerShare
5. USB 3.2 Gen 2 Type-C port with Power Delivery and DisplayPort Alt mode
6. Universal audio port

# Top



1. Power button with optional fingerprint reader
2. Keyboard
3. Touchpad


# Display

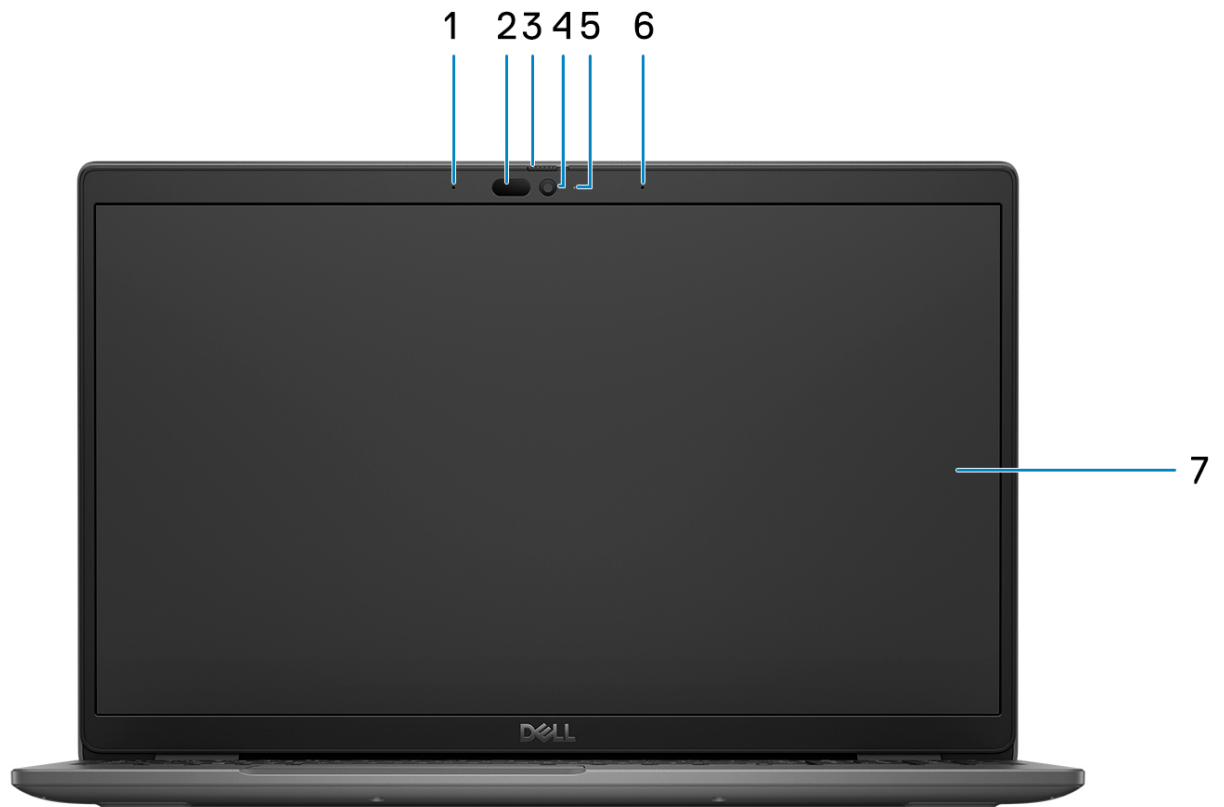

1. Digital-array microphone
2. IR camera and emitter (optional)
3. Camera shutter
4. RGB camera (HD/FHD)
5. Camera status LED
6. Digital-array microphone
7. LCD panel




## Bottom

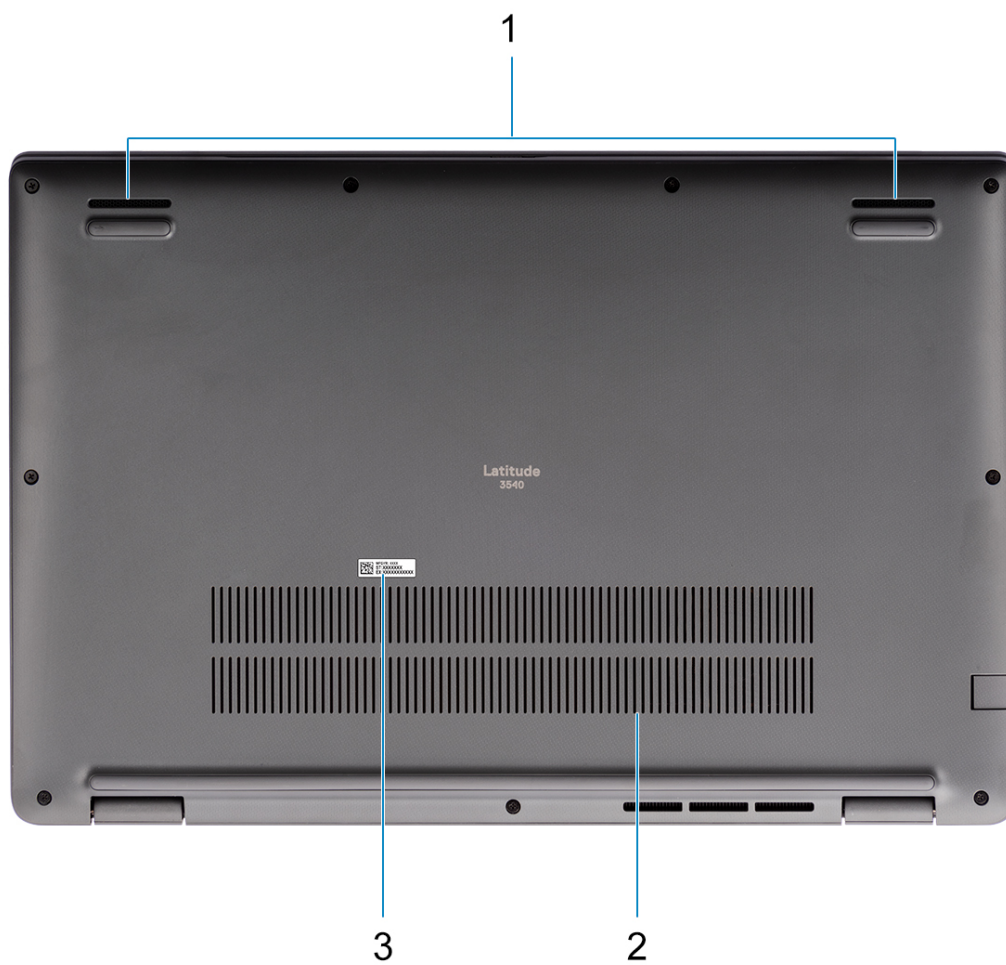

1. Speaker mesh
2. Air vents
3. Service Tag and regulatory labels

## Service Tag

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

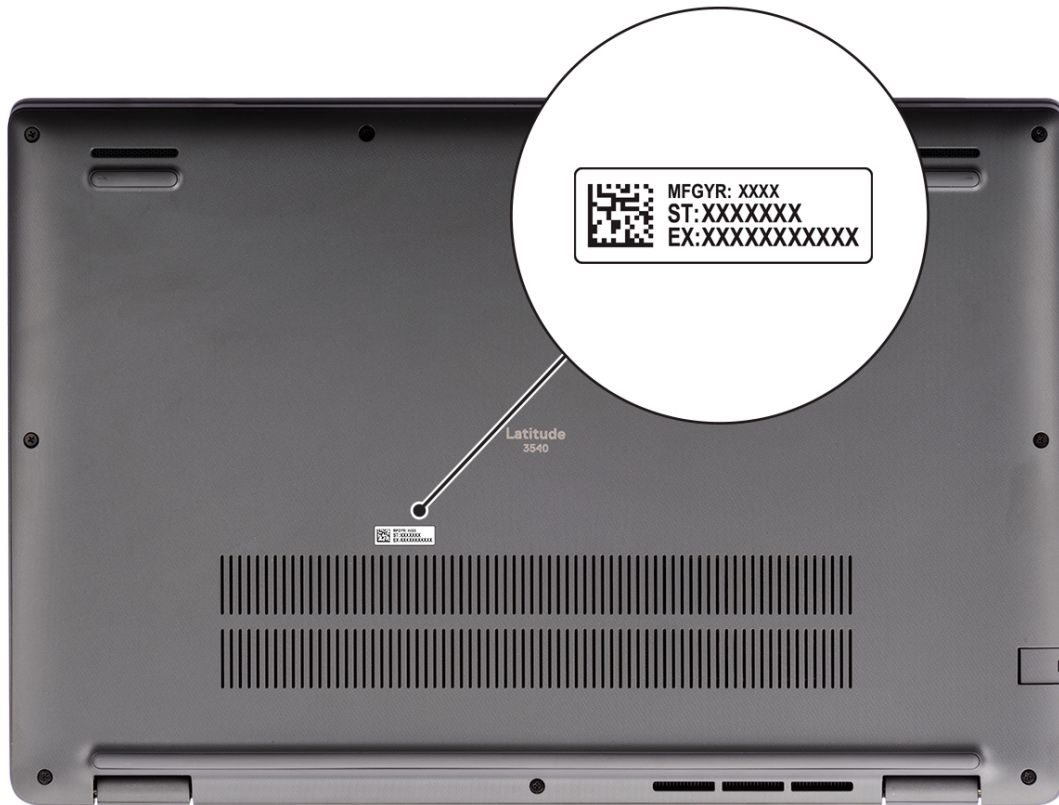

## Battery charge and status light

The following table lists the battery charge and status light behavior of your Latitude 3540.

**Table 2. Battery charge and status light behavior**

Power Source	LED Behavior	System Power State	Battery Charge Level
AC Adapter	Off	S0 - S5	Fully Charged
AC Adapter	Solid White	S0 - S5	< Fully Charged
Battery	Off	S0 - S5	11-100%
Battery	Solid Amber (590+/-3 nm)	S0 - S5	< 10%


- S0 (ON) - System is turned on.
- S4 (Hibernate) - The system consumes the least power compared to all other sleep states. The system is almost at an OFF state, expect for a trickle power. The context data is written to a hard drive.
- S5 (OFF) - The system is in a shutdown state.

# Specifications of Latitude 3540

## Dimensions and weight

The following table lists the height, width, depth, and weight of your Latitude 3540.

**Table 3. Dimensions and weight**

Description	UMA configuration	Discrete configuration
Height:		
Front height	0.71 in. (18.13 mm)	0.71 in. (18.13 mm)
Rear height	0.80 in. (20.40 mm)	0.84 in. (21.41 mm)
Width	14.13 in. (359 mm)	14.13 in. (359 mm)
Depth	9.43 in. (239.69 mm)	9.43 in. (239.69 mm)
Weight  <b>NOTE:</b> The weight of your computer depends on the configuration ordered and manufacturing variability.	<ul style="list-style-type: none"> <li>Minimum—1.81 kg (3.99 lbs)</li> </ul>	<ul style="list-style-type: none"> <li>Minimum—1.86 kg (4.10 lbs)</li> </ul>

## Processor

The following table lists the details of the processors that are supported by your Latitude 3540.

**Table 4. Processor**

Description	Option one	Option two	Option three	Option four	Option five	Option six	Option seven	Option eight
Processor type	12 <sup>th</sup> Generation Intel Celeron 7305	12 <sup>th</sup> Generation Intel Core i3-1215U	12 <sup>th</sup> Generation Intel Core i5-1235U	12 <sup>th</sup> Generation Intel Core i5-1245U	13 <sup>th</sup> Generation Intel Core i3-1315U	13 <sup>th</sup> Generation Intel Core i5-1335U	13 <sup>th</sup> Generation Intel Core i5-1345U	13 <sup>th</sup> Generation Intel Core i7-1355U
Processor wattage	15 W	15 W	15 W	15 W	15 W	15 W	15 W	15 W
Processor core count	5	6	10	10	6	10	10	10
Processor thread count	5	8	12	12	8	12	12	12
Processor speed	Up to 1.10 GHz	Up to 4.40 GHz	Up to 4.40 GHz	Up to 4.40 GHz	Up to 4.50 GHz	Up to 4.60 GHz	Up to 4.70 GHz	Up to 5.00 GHz
Processor cache	8 MB	10 MB	12 MB	12 MB	10 MB	12 MB	12 MB	12 MB

**Table 4. Processor (continued)**

Description	Option one	Option two	Option three	Option four	Option five	Option six	Option seven	Option eight
Integrated graphics	Intel UHD Graphics	Intel UHD Graphics	Intel Iris Xe Graphics	Intel Iris Xe Graphics	Intel Iris Xe Graphics	Intel Iris Xe Graphics	Intel Iris Xe Graphics	Intel Iris Xe Graphics

## Chipset

The following table lists the details of the chipset supported by your Latitude 3540

**Table 5. Chipset**

Description	Option one	Option two
Processors	12 <sup>th</sup> Generation Intel Celeron processor 7305 and 12 <sup>th</sup> Generation Intel Core i3	13 <sup>th</sup> Generation Intel Core i3/i5/i7
Chipset	Intel ADL-U (integrated with the processor)	Intel RPL-U (integrated with the processor)
DRAM bus width	64 bit	64 bit
Flash EPROM	32 MB	32 MB
PCIe bus	Up to Gen 4.0	Up to Gen 4.0

## Operating system

Your Latitude 3540 supports the following operating systems:

- Windows 11 Pro, 64-bit
- Windows 11 Home, 64-bit
- Windows 10 Pro (Windows 11 Pro Downgrade)
- Ubuntu 22.04 LTS, 64-bit

## Memory

The following table lists the memory specifications of your Latitude 3540.

**Table 6. Memory specifications**

Description	Values
Memory slots	Two
Memory type	DDR4, single-channel, dual-channel
Memory speed	3200 MT/s
Maximum memory configuration	64 GB
Minimum memory configuration	8 GB
Memory size per slot	8 GB, 16 GB, 32 GB
Memory configurations supported	<ul style="list-style-type: none"> <li>• 8 GB, DDR4, 3200 MT/s</li> </ul>

**Table 6. Memory specifications (continued)**

Description	Values
	<ul style="list-style-type: none"><li>• 16 GB, DDR4, 3200 MT/s</li><li>• 32 GB, DDR4, 3200 MT/s</li><li>• 64 GB, DDR4, 3200 MT/s</li></ul>

## External ports

The following table lists the external ports of your Latitude 3540.


**Table 7. External ports**

Description	Values
Network port	One Flip-down RJ 45 10/100/1000 Mbps
USB ports	<ul style="list-style-type: none"><li>• One USB 3.2 Gen 2 Type-C port with Power Delivery and DisplayPort Alt mode</li><li>• One USB 3.2 Gen 1 port with PowerShare</li><li>• Two USB 3.2 Gen 1 port</li></ul>
Audio port	One universal audio port
Video port	One HDMI 1.4 port
SIM card slot	One microSIM-card slot (for WWAN configurations only)
Power-adaptor port	One DC-in port (4.5 mm standard plug/USB-C port)
Security-cable slot	One wedge-shaped lock slot

## Internal slots

The following table lists the internal slots of your Latitude 3540.

**Table 8. Internal slots**

Description	Values
M.2	<ul style="list-style-type: none"><li>• One M.2 (2280 or 2230) for solid-state drive</li><li>• One M.2 3042 slot for WWAN card</li><li>• One M.2 2230 slot for WLAN card</li></ul> <p> <b>NOTE:</b> To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>

## Ethernet

The following table lists the wired Ethernet Local Area Network (LAN) specifications of your Latitude 3540.

**Table 9. Ethernet specifications**

Description	Values
Model number	RTL8111H-CG


**Table 9. Ethernet specifications (continued)**

Description	Values
Transfer rate	10/100/1000 Mbps

## Wireless module

The following table lists the Wireless Local Area Network (WLAN) modules that are supported on your Latitude 3540.

**Table 10. Wireless module specifications**

Description	Option one	Option two
Model number	Intel AX211	Realtek RTL8852BE
Transfer rate	Up to 2400 Mbps	Up to 1200 Mbps
Frequency bands supported	2.4 GHz/5 GHz/6 GHz	2.4 GHz/5 GHz
Wireless standards	<ul style="list-style-type: none"> <li>• WiFi 802.11a/b/g</li> <li>• Wi-Fi 4 (WiFi 802.11n)</li> <li>• Wi-Fi 5 (WiFi 802.11ac)</li> <li>• Wi-Fi 6E (WiFi 802.11ax)</li> <li>• Wi-Fi 6 (WiFi 802.11ax)</li> </ul>	<ul style="list-style-type: none"> <li>• WiFi 802.11a/b/g</li> <li>• Wi-Fi 4 (WiFi 802.11n)</li> <li>• Wi-Fi 5 (WiFi 802.11ac)</li> <li>• Wi-Fi 6 (WiFi 802.11ax)</li> </ul>
Encryption	<ul style="list-style-type: none"> <li>• 64-bit/128-bit WEP</li> <li>• AES-CCMP</li> <li>• TKIP</li> </ul>	<ul style="list-style-type: none"> <li>• 64-bit/128-bit WEP</li> <li>• AES-CCMP</li> <li>• TKIP</li> </ul>
Bluetooth wireless card	Bluetooth 5.3	Bluetooth 5.3
	 <b>NOTE:</b> The version of the Bluetooth wireless card may vary depending on the operating system that is installed on your computer.	

## WWAN module

The following table lists the Wireless Wide Area Network (WWAN) module supported on your Latitude 3540.

**Table 11. WWAN module specifications**

Description	Values
Model number	Inter(R) XMM7560 R+LTE-A (DW5823e)
Form factor	M.2 S3 KEY-B
Host interface	PCIe Gen 2
Network standard	<ul style="list-style-type: none"> <li>• LTE FDD/TDD, WCDMA/HSPA+</li> <li>• GPS/GLONASS/Beidou/Galileo</li> </ul>
Transfer rate	<ul style="list-style-type: none"> <li>• Downlink:</li> <li>• LTE FDD: 1 Gbps (Cat16)</li> <li>• LTE TDD: 756 Mbps (Cat 16)</li> <li>• UMTS: 384 Kbps</li> </ul>

**Table 11. WWAN module specifications (continued)**

Description	Values
	<ul style="list-style-type: none"> <li>DC-HSPA+: 42 Mbps (Cat24)</li> <li>Uplink:</li> <li>LTE FDD: 150 Mbps (Cat13)</li> <li>LTE TDD: 90 Mbps (Cat13)</li> <li>UMTS: 384 Kbps</li> <li>DC-HSPA+: 5.76 Mbps (Cat6)</li> </ul>
Operating frequency bands	<ul style="list-style-type: none"> <li>LTE FDD (B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B17, B18, B19, B20, B25, B26, B28, B29, B30, B32, B66, B71)</li> <li>LTE TDD (B34, B38, B39, B40, B41, B42, B43, B46 (receiver only), B48)</li> <li>WCDMA (B1, B2, B4, B5, B8)</li> </ul>
Power supply	DC 3.135 V to 4.4 V, Typical 3.3 V
SIM card	Supported through external or internal SIM-card slot
eSIM with Dual SIM (DSSA)	Supported (The availability of eSIM functionality embedded on the module is dependent on the region and specific carrier requirements)
Antenna Diversity	Supported
Radio On/Off	Supported
Wake On Wireless	Not supported
Temperature	<ul style="list-style-type: none"> <li>Normal operating temperature: -10 °C to +55 °C</li> <li>Extended operating temperature: -20 °C to +65 °C</li> <li>Storage Temperature: -40 °C to +85 °C</li> </ul>
Antenna connector	<ul style="list-style-type: none"> <li>WWAN Main Antenna x 1</li> <li>WWAN Diversity Antenna x 1</li> </ul>
<p><b>i</b> <b>NOTE:</b> For instructions on how to find your computer's IMEI (International Mobile Station Equipment Identity) number, search in the Knowledge Base Resource at <a href="http://www.dell.com/support">www.dell.com/support</a>.</p>	

## Audio

The following table lists the audio specifications of your Latitude 3540.

**Table 12. Audio specifications**

Description	Values
Audio controller	Realtek ALC3204
Stereo conversion	Supported with Waves MaxxAudio Pro
Internal audio interface	High definition audio interface
External audio interface	One universal audio port
Number of speakers	Two
Internal-speaker amplifier	Supported (audio codec integrated)
External volume controls	Supported

**Table 12. Audio specifications (continued)**

Description		Values
Speaker output:		
	Average speaker output	2 W x 2 = 4 W
	Peak speaker output	2.5 W x 2 = 5 W
Subwoofer output		Not supported
Microphone		Digital-array microphone

## Storage

This section lists the storage options on your Latitude 3540.

One M.2 2230/2280 solid-state drive

**Table 13. Storage specifications**

Storage type	Interface type	Capacity
M.2 2230 Class 35 SSD	PCIe NVMe Gen4 x4	Up to 1 TB
M.2 2280 Class 40 SSD	PCIe NVMe Gen4 x4	Up to 1 TB

## Keyboard

The following table lists the keyboard specifications of your Latitude 3540.

**Table 14. Keyboard specifications**

Description	Values
Keyboard type	<ul style="list-style-type: none"> <li>Standard backlit keyboard without fingerprint reader</li> <li>Standard backlit keyboard with fingerprint reader</li> <li>Standard non-backlit keyboard without fingerprint reader</li> <li>Standard non-backlit keyboard with fingerprint reader</li> </ul>
Keyboard layout	QWERTY
Number of keys	<ul style="list-style-type: none"> <li>United States and Canada: 99 keys</li> <li>United Kingdom: 100 keys</li> <li>Japan: 103 keys</li> </ul>
Keyboard size	X=18.05 mm key pitch Y=18.05 mm key pitch
Keyboard shortcuts	<p>Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.</p> <p><b>NOTE:</b> You can define the primary behavior of the function keys (F1–F12) changing <b>Function Key Behavior</b> in BIOS setup program.</p>



# Camera

The following table lists the camera specifications of your Latitude 3540.

**Table 15. Camera specifications**

Description		Values
Number of cameras		One
Camera type		<ul style="list-style-type: none"> <li>• HD RGB</li> <li>• FHD RGB</li> <li>• FHD RGB + IR</li> </ul>
Camera location		Front camera
Camera sensor type		CMOS sensor technology
Camera resolution:		
	Still image	<ul style="list-style-type: none"> <li>• 0.92 megapixels (HD)</li> <li>• 2.07 megapixels (FHD)</li> </ul>
	Video	<ul style="list-style-type: none"> <li>• 1280 x 720 (HD) at 30 fps</li> <li>• 1920 x 1080 (FHD) at 30 fps</li> </ul>
Infrared camera resolution:		
	Still image	0.23 megapixel
	Video	640 x 360 at 15 fps
Diagonal viewing angle:		
	Camera	<ul style="list-style-type: none"> <li>• 78.6 degrees (HD)</li> <li>• 80 degrees (FHD)</li> </ul>
	Infrared camera	86.6 degrees

# Touchpad

The following table lists the touchpad specifications of your Latitude 3540.


**Table 16. Touchpad specifications**

Description		Values
Touchpad resolution:		>300 dpi
Touchpad dimensions:		
	Horizontal	115 mm
	Vertical	67 mm
Touchpad gestures		For more information about touchpad gestures available on Windows, see the Microsoft knowledge base article at <a href="https://support.microsoft.com">support.microsoft.com</a> .

# Power adapter

The following table lists the power adapter specifications of your Latitude 3540.

**Table 17. Power adapter specifications**

Description	Option one	Option two	Option three
Type	60 W AC adapter, USB-C	65 W AC adapter, 4.5 mm barrel	65 W adapter USB-C
Connector dimensions:			
External diameter	N/A	4.50 mm	N/A
Internal diameter	N/A	2.90 mm	N/A
Power-adapter dimensions:			
Height	22 mm (0.86 in.)	29 mm (1.14 in.)	28 mm (1.10 in.)
Width	55 mm (2.16 in.)	47 mm (1.85 in.)	51 mm (2.01 in.)
Depth	66 mm (2.59 in.)	108 mm (4.25 in.)	112 mm (4.41 in.)
Input voltage	100 VAC to 240 VAC	100 VAC - 240 VAC	100 VAC - 240 VAC
Input frequency	50 Hz to 60 Hz	50 Hz - 60 Hz	50 Hz - 60 Hz
Input current (maximum)	1.70 A	1.60 A/1.70 A	1.70 A
Output current (continuous)	<ul style="list-style-type: none"> <li>• 20 V/3 A</li> <li>• 15 V/3 A</li> <li>• 9 V/3 A</li> <li>• 5 V/3 A</li> </ul>	3.34 A	<ul style="list-style-type: none"> <li>• 20 V/3.25 A (Continuous)</li> <li>• 15 V/3 A (Continuous)</li> <li>• 9.0 V/3 A (Continuous)</li> <li>• 5.0 V/3 A (Continuous)</li> </ul>
Rated output voltage	<ul style="list-style-type: none"> <li>• 20 VDC</li> <li>• 15 VDC</li> <li>• 9 VDC</li> <li>• 5 VDC</li> </ul>	19.50 VDC	<ul style="list-style-type: none"> <li>• 20 VDC</li> <li>• 15 VDC</li> <li>• 9 VDC</li> <li>• 5 VDC</li> </ul>
Temperature range:			
Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)
Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)
 <b>CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</b>			

# Battery

The following table lists the battery specifications of your Latitude 3540.

**Table 18. Battery specifications**

Description	Option one	Option two	Option three	Option four	
Battery type	3-cell, 42 Wh, Lithium-ion, ExpressCharge	3-cell, 54 Wh, Lithium-ion, ExpressCharge	3-cell, 42 Wh, Long Life Cycle, ExpressCharge 1.0	3-cell, 54 Wh, Long Life Cycle, ExpressCharge 1.0	
Battery voltage	11.4 V	11.4 V	15 V	11.4 V	
Battery weight (maximum)	0.19 kg	0.22 kg	0.19 kg	0.22 kg	
Battery dimensions:					
	Height	5.73 mm	5.73 mm	5.73 mm	5.73 mm
	Width	263 mm	263 mm	263 mm	263 mm
	Depth	79.42 mm	79.42 mm	79.42 mm	79.42 mm
Temperature range:					
	Operating	0°C to 45°C (32°F to 113°F)	0°C to 45°C (32°F to 113°F)	0°C to 45°C (32°F to 113°F)	0°C to 45°C (32°F to 113°F)
	Storage	-20°C to 60°C (-4°F to 140°F)	-20°C to 60°C (-4°F to 140°F)	-20°C to 60°C (-4°F to 140°F)	-20°C to 60°C (-4°F to 140°F)
Battery operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.		
Battery charging time (approximate)	<ul style="list-style-type: none"> <li>0~15°C—4 hours (when the computer is off)</li> <li>16~45°C—2 hours (when the computer is off)</li> <li>46~50°C—3 hours (when the computer is off)</li> </ul>		<ul style="list-style-type: none"> <li>0~15°C—4 hours (when the computer is off)</li> <li>16~45°C—2 hours (when the computer is off)</li> <li>46~50°C—3 hours (when the computer is off)</li> </ul>		
	<p><b>NOTE:</b> Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information on the Dell Power Manager see, <i>Me and My Dell</i> on <a href="http://www.dell.com">www.dell.com</a>.</p>				
Coin-cell battery	CR2032	CR2032	CR2032	CR2032	
<p><b>CAUTION:</b> Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</p> <p><b>CAUTION:</b> Dell recommends that you charge the battery regularly for optimal power consumption. If your battery charge is completely depleted, connect the power adapter, turn on your computer, and then restart your computer to reduce the power consumption.</p>					

# Display

The following table lists the display specifications of your Latitude 3540.

**Table 19. Display specifications**

Description		Option one	Option two	Option three
Display type		15-inch, High Definition (HD)	15-inch, Full High Definition (FHD)	15-inch, Full High Definition (FHD)
Touch options		No	No	Yes
Color		262,144	262,144	262,144
Panel type		6 bit	6 bit	6 bit
Display-panel technology		Twisted nematic	Wide Viewing Angle (WVA)/In Plane Switching (IPS)	Wide Viewing Angle (WVA)/In Plane Switching (IPS)
Display-panel dimensions (active area):				
	Height	344.16 mm	344.16 mm	344.16 mm
	Width	193.59 mm	193.59 mm	193.59 mm
	Diagonal	394.87 mm	394.87 mm	394.87 mm
Display-panel native resolution		1366 x 768	1920 x 1080	1920 x 1080
Luminance (typical)		220 nits	250 nits	250 nits
Megapixels		1.05 megapixel	2.07 megapixel	2.07 megapixel
Color gamut		45% (NTSC)	45% (NTSC)	45% (NTSC)
Pixels Per Inch (PPI)		100	141	141
Contrast ratio (typical)		400:1	600:1	500:1
Response time (max)		25 ms	35 ms	35 ms
Refresh rate		60 Hz	60 Hz	60 Hz
Horizontal view angle		45 +/- degrees	85 +/- degrees	85 +/- degrees
Vertical view angle		35 +/- degrees	85 +/- degrees	85 +/- degrees
Pixel pitch		0.252 (H)*0.252 (V)	0.17925 (H)* 0.17925 (V)	0.17925 (H)* 0.17925 (V)
Power consumption (maximum)		3.75 W	4.6 W	4.7 W
Anti-glare vs glossy finish		Anti-glare	Anti-glare	Anti-glare

# Fingerprint reader

The following table lists the fingerprint-reader specifications of your Latitude 3540.

**NOTE:** The fingerprint reader is located on the power button.

**Table 20. Fingerprint reader specifications**

Description	Values
Fingerprint-reader sensor technology	Capacitive
Fingerprint-reader sensor resolution	500 ppi
Fingerprint-reader sensor pixel size	108 x 88 pixel

# Sensor

The following table lists the sensor of your Latitude 3540.

**Table 21. Sensor**

Sensor support
Adaptive Thermal Performance-Applicable only for discrete graphics

# GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Latitude 3540.

**Table 22. GPU—Integrated**

Controller	Memory size	Processor
Intel UHD Graphics	Shared system memory	12 <sup>th</sup> Generation Intel Core i3, Celeron
Intel Iris Xe Graphics	Shared system memory	13 <sup>th</sup> Generation Intel Core i3/i5/i7

# GPU—Discrete

The following table lists the specifications of the discrete Graphics Processing Unit (GPU) supported by your Latitude 3540.

**Table 23. GPU—Discrete**

Controller	Memory size	Memory type
Nvidia GeForce MX550	2 GB	GDDR6

## Multiple display support matrix

The following table lists the multiple display support matrix for your Latitude 3540.

**Table 24. Multiple display support matrix**

Graphics Card	Direct Graphics Controller Direct Output Mode	Supported external displays with computer internal display on	Supported external displays with computer internal display off
Intel UHD Graphics	Integrated	3	4
Intel Iris X <sup>e</sup> Graphics	Integrated	3	4
NVIDIA GeForce MX550	MS Hybrid	3	4

## Hardware security

The following table lists the hardware security of your Latitude 3540.

**Table 25. Hardware security**

Hardware security
One wedge-shaped lock slot
TPM 2.0 discrete- Not supported for 12th Generation Intel Celeron 7305, 8 MB cache, 5 cores, 5 threads, up to 1.10 GHz
FIPS 140-2 certification for TPM
TCG Certification for TPM (Trusted Computing Group)
Chassis Intrusion Detection
BIOS - TPM clear and/or system boot lock after chassis intrusion detection
RPMC (specify via SPI Flash or eRPMC)
SPI Flash Tamper Detection / Prevention Shunt Circuit

## Operating and storage environment


This table lists the operating and storage specifications of your Latitude 3540.

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

**Table 26. Computer environment**

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	90% (non-condensing)	95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	NA
Shock (maximum)	140 G†	NA
Altitude range	-15.2 m to 3048 m (-49.8 ft to 10000 ft)	-15.2 m to 10668 m (-49.8 ft to 35000 ft)

**Table 26. Computer environment (continued)**

Description	Operating	Storage
 <b>CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</b>		

\* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse.

## Keyboard shortcuts of Latitude 3540

**NOTE:** Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol shown on the upper part of the key is typed out. For example, if you press **2**, **2** is typed out; if you press **Shift + 2**, **@** is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multi-media control, as indicated by the icon at the bottom of the key. Press the function key to invoke the task represented by the icon. For example, pressing F1 mutes the audio (refer to the table below).

However, if the function keys F1-F12 are needed for specific software applications, multi-media functionality can be disabled by pressing **Fn + Esc**. Subsequently, multi-media control can be invoked by pressing **Fn** and the respective function key. For example, mute audio by pressing **Fn + F1**.

**NOTE:** You can also define the primary behavior of the function keys (F1–F12) by changing **Function Key Behavior** in BIOS setup program.

**Table 27. List of keyboard shortcuts**

Function key	Primary behavior
F1	Mute audio
F2	Decrease volume
F3	Increase volume
F4	Mute mic
F5	Click keyboard backlight (optional). <b>NOTE:</b> Non-backlight keyboards have F5 function key without the backlight icon and do not support toggle keyboard backlight function. <b>NOTE:</b> Toggle to cycle the keyboard backlight status through off, low-backlight, and high-backlight
F6	Decrease brightness
F7	Increase brightness
F8	Switch to external display
F10	Print screen
F11	Home
F12	End


The **Fn** key is also used with selected keys on the keyboard to invoke other secondary functions.

**Table 28. Secondary behavior**

Function key	Secondary behavior
Fn + F1	Operating system and application specific F1 behavior
Fn + F2	Operating system and application specific F2 behavior
Fn + F3	Operating system and application specific F3 behavior
Fn + F4	Operating system and application specific F4 behavior



**Table 28. Secondary behavior (continued)**


Function key	Secondary behavior
Fn + F5	Operating system and application specific F5 behavior
Fn + F6	Operating system and application specific F6 behavior
Fn + F7	Operating system and application specific F7 behavior
Fn + F8	Operating system and application specific F8 behavior
Fn + F10	Operating system and application specific F10 behavior
Fn + F11	Operating system and application specific F11 behavior
Fn + F12	Operating system and application specific F12 behavior
Fn + PrtScr	Turn off/on wireless
Fn + B	Pause
Fn + Ctrl + B	Break
Fn + Insert	Sleep
Fn + S	Toggle scroll lock
Fn + H	Toggle between power and battery-status light/hard-drive activity light
Fn + R	System request
Fn + Ctrl	Open application menu
Fn + Esc	Toggle Fn-key lock
Fn + PgUp	Page up
Fn + PgDn	Page down
Fn + Home	Home
Fn + End	End
Fn + Right Ctrl	Shortcut/Secondary menu assigned to right Ctrl key
Fn + Shift + B	<p data-bbox="804 1068 1059 1097">Calls unobtrusive mode</p> <p data-bbox="842 1099 927 1126"><b>NOTE:</b></p> <p data-bbox="804 1144 1477 1458">  The key sequence will call unobtrusive mode. The hotkey sequence will be disabled by default to prevent accidental actuation. You may enable through BIOS setup option.         </p>

# Getting help and contacting Dell

## Self-help resources


You can get information and help on Dell products and services using these self-help resources:


**Table 29. Self-help resources**

Self-help resources	Resource location
Information about Dell products and services	<a href="http://www.dell.com">www.dell.com</a>
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	<a href="http://www.dell.com/support/windows">www.dell.com/support/windows</a> <a href="http://www.dell.com/support/linux">www.dell.com/support/linux</a>
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at <a href="http://www.dell.com/support">www.dell.com/support</a> .  For more information on how to find the Service Tag for your computer, see <a href="#">Locate the Service Tag on your computer</a> .
Dell knowledge base articles for a variety of computer concerns	<ol style="list-style-type: none"> <li>1. Go to <a href="http://www.dell.com/support">www.dell.com/support</a>.</li> <li>2. On the menu bar at the top of the Support page, select <b>Support &gt; Knowledge Base</b>.</li> <li>3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.</li> </ol>

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [www.dell.com/contactdell](http://www.dell.com/contactdell).

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.