



EN

- ① Steamer head
- ② Steam supply hose
- ③ Steamer head holder
- ④ Hanger
- ⑤ Pole lock clip
- ⑥ Pole

- ⑦ Steam dial
- ⑧ Base
- ⑨ De-calc knob
- ⑩ Water tank
- ⑪ Glove

MS

- ① Kepala penstim
- ② Hos bekalan stim
- ③ Pemegang kepala penstim
- ④ Penggantung
- ⑤ Klip pengunci dirian
- ⑥ Dirian

- ⑦ Tombol stim
- ⑧ Tapak
- ⑨ Tombol pembersihan kerak
- ⑩ Tangki air
- ⑪ Sarung tangan

TH

- ① หัวพ่นน้ำ
- ② สายไฟ
- ③ หัวตั้งโต๊ะน้ำ
- ④ ไม้บานเสื่อม
- ⑤ คีดีก็อคล่า
- ⑥ เสา

- ⑦ ฝาครอบหม้อน้ำไฟฟ้า
- ⑧ รูป
- ⑨ ฝา De-Calc
- ⑩ แม่ตัน
- ⑪ ถุงมือ

VI

- ① Đầu bùn úi hơi nước
- ② Ông cấp hơi phun
- ③ Kẹp giữ đầu bùn úi hơi nước
- ④ Giá treo
- ⑤ Kép khóa
- ⑥ Trụ đứng

- ⑦ Núm điều chỉnh hơi phun
- ⑧ Đè
- ⑨ Núm De-Calc
- ⑩ Ngăn chứa nước
- ⑪ Găng tay

TC

- ① 蒸氣噴頭
- ② 蒸氣輸送管
- ③ 蒸氣噴頭支架
- ④ 衣架
- ⑤ 衣架鎖定夾
- ⑥ 掛桿鎖定夾

- ⑦ 蒸氣控制鉗
- ⑧ 底座
- ⑨ 脫垢旋鈕
- ⑩ 水箱
- ⑪ 手套

SC

- ① 蒸汽喷头
- ② 蒸汽输送管
- ③ 蒸汽喷头支架
- ④ 衣架
- ⑤ 衣架锁夹
- ⑥ 衣架杆

- ⑦ 蒸汽旋钮
- ⑧ 基座
- ⑨ 脱垢旋钮
- ⑩ 水箱
- ⑪ 防烫手套

KO

- ① 스팀 헤드
- ② 스팀 호스
- ③ 스팀 헤드 홀더
- ④ 옷걸이
- ⑤ 풀 걸크립
- ⑥ 팔

- ⑦ 스팀 향 조절기
- ⑧ 반침대
- ⑨ 석회 제거 조절기
- ⑩ 물탱크
- ⑪ 양갑

EN



English

Introduction
Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important
Read this important information before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.

- Do not use the appliance if the plug, mains cord or the appliance itself shows visible damage, or if the appliance has been dropped or leaked.

- Do not connect the appliance to a direct current supply.

- Always return the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise the guarantee becomes invalid.

- If the mains cord is damaged you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- Never leave the appliance unattended when it is connected to the mains.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.