

# PowerEdge R660

## Getting Started Guide

入门指南 | 入門指南

Příručka Začínáme | Guide de mise en route

Handbuch zum Einstieg | Οδηγός «Τα πρώτα βήματα»

Panduan Cara Memulai | スタートガイド

시작 안내서 | Podręcznik Wprowadzenie

Guia de introdução | Руководство по началу работы


Uputstvo za početak rada | Guía de introducción

Başlangıç Kılavuzu | מדריך לתחילת העבודה




[www.Dell.com/QRL/Server/PER660](http://www.Dell.com/QRL/Server/PER660)


1

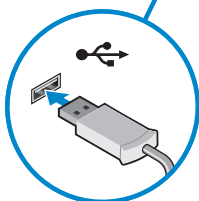


2

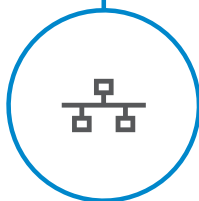


3

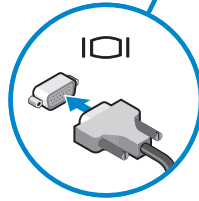

4

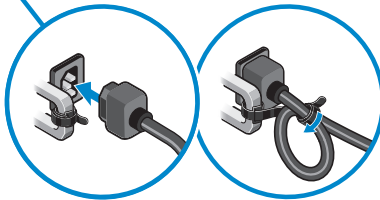

5

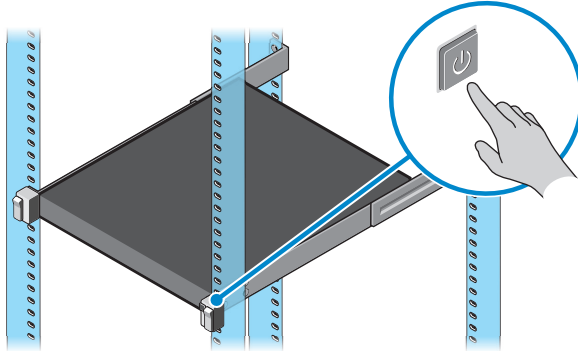

**Regulatory model/type**

管制型号/类型 | 安規型號/類型 | Směrniceový model/typ | Modèle/type réglementaire |  
Vorschriftenmodell/Vorschriftentyp | Μοντέλο/Τύπος κατά τους ρυθμιστικούς φορείς |  
Model/jenis regulasi | 認可モデル / 認可タイプ | 규격 모델/유형 | Model i typ wg normy |  
Modelo/tipo de normas | Нормативный код или тип модели | Regulatorni model/tip |  
Tipo/modelo reglamentario | Yasal model/tür |

E83S Series/E83S001

דגם/סוג תקינה



2023- 12

© 2023 Dell Inc. or its subsidiaries.



0T28HKA01



# Setting up and configuring the system



Rail Sizing and Rack Compatibility Matrix

[https://i.dell.com/sites/csdocuments/Business\\_solutions\\_engineering-Docs\\_Documents/en/rail-rack-matrix.pdf](https://i.dell.com/sites/csdocuments/Business_solutions_engineering-Docs_Documents/en/rail-rack-matrix.pdf)



Deploy and Configure

<https://www.dell.com/idracmanuals>



Shipment Component Verification

<https://www.dell.com/scvmanuals>



Security Configuration

<https://www.dell.com/idracmanuals>



System Management

<https://www.dell.com/idracmanuals>



Service

<https://solve.dell.com/solve/home>



Troubleshoot

<https://qr1.dell.com/#/> or <https://www.dell.com/support/home/en-us?app=manuals>