


English Important safety information
Important

Read this user manual carefully before you use the machine and save it for future reference.

Danger

- Never immerse the machine in water or any other liquid.

Warning

- Check if the voltage indicated on the bottom of the machine corresponds to the local mains voltage before you connect the machine.
- Connect the machine to an earthed wall socket.
- If the mains cord is damaged, you must have it replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- Do not use the machine if the plug, the mains cord or the machine itself is damaged.
- This machine can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and if they understand the hazards involved.
- Cleaning and maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the machine, its accessories and its cord out of the reach of children aged less than 8 years.
- Children shall not play with the machine.
- Only use this appliance for its intended purpose to avoid potential hazard or injury.

Caution

- Always return the machine to a service center authorized by Philips for examination or repair. Do not attempt to repair the machine yourself, otherwise your warranty becomes invalid.
- After unpacking the machine, never put your Senseo machine on its side. Store the machine in an upright position, also during transport.
- Never put normal ground coffee or use ton pads in the pod holder, as this causes it to become blocked.
- Do not use the machine in combination with a transformer, as this could cause hazardous situations.
- Always put the machine on a flat and stable surface.
- Do not place the machine on a hotplate or directly next to a hot oven, heater or any other source of heat.
- Do not place the machine in a cabinet when in use.
- Never let the machine operate unattended.
- Do not use the machine at altitudes higher than 1250 meters above sea level.
- Never pour any other liquid than clean cold water into the water reservoir.
- Never flush the machine or let brew coffee when the spout is not in place.
- Flush the coffee machine with fresh water before you use it for the first time. This causes the system to fill with water, which is essential for the machine to work properly.
- Do not use the machine at a temperature below 0 °C. Water left in the machine may freeze and cause damage.
- Do not use the machine in combination with water softeners based on sodium exchange.
- Descaling your machine regularly. The machine indicates when descaling is needed. Doing this will make your machine stop working properly. In this case, repair is not covered by your warranty.
- Never use a descaling agent based on mineral acids such as sulphuric acid, hydrochloric acid, sulphamic acid and acetic acid (e.g. vinegar). These descaling agents may damage your coffee machine.
- The machine is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments, nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.

Compliance with standards

This machine complies with the applicable standards and regulations regarding explosive electrical equipment and electromagnetic fields. The energy consumption of this machine in off mode is less than 0.25 Watt. This means that this machine complies with European Directive 2009/125/EC, which sets the ecological design requirements for energy-using products.

Frost-free storage

Only use and store the machine in a frost-free place.

Ordering accessories

To buy accessories or spare parts, visit [www.philips.com/parts-and-accessories](#) or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website [www.philips.com/support](#).

Recycling

This symbol means that electrical products shall not be disposed of with your household waste (Fig. 1).

Follow your country's rules for the separate collection of electrical products.

This symbol means that it is necessary to check the recycling provisions of your local municipality (Fig. 2).

For an explanation of the material symbols, see the separate enclosed leaflet.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the machine. If you are unable to solve the problem with the information below, visit [www.philips.com/support](#) for a list of frequently asked questions or contact the Philips Consumer Care Center in your country.

Problem**Solution**

The light ring in the button you pressed flashes quickly.

The float in the water reservoir may be stuck.

Empty the reservoir and shake it a few times to release the float. Close the water reservoir with hot water and some washing-up liquid or in the dishwasher.

If this takes longer than two minutes, your machine may be defective. Contact the Philips Consumer Care Center in your country.

Limescale has built up. You need to descale the machine.

Do not overfill the water reservoir. Check if the water drops on the worktop are not the result of placing or removing the water reservoir.

There is water on the worktop under the appliance.

Water or coffee leaks out of the machine.

Place the coffee pod(s) properly in the center of the pod holder, with the convex side pointing downwards.

The sieve in the center of the pod holder is clogged. Unclog it with a washing-up brush.

Check if the sealing ring of the lid is stuck under the rim of the distribution disk. If it is, pull it out from under the distribution disk carefully.

The coffee volume changed.

Check if you have set the Intensity Select Slider to the preferred coffee recipe.

The sieve in the center of the pod holder is clogged. Unclog it with a washing-up brush.

Reset the volume settings to factory settings (see 'Resetting coffee volumes to the factory setting').

Limescale has built up. You need to descale the machine.

The coffee is not hot enough.

Limescale has built up. You need to descale the machine.

Turn the coffee brewing, preheat the cup by rinsing with hot water or brew a coffee without coffee pod.

I cannot open the lid.

Switch off the coffee machine. Pull up the lever and wait 24 hours before you open the lid. To prevent this from happening, make sure that the sieve in the pod holder is clean and not clogged.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').


In this chapter we list the most frequent problems described, which occur when you use the machine. Some of the information is not applicable to all models. Check which information applies to your model. Consult the Philips Service Center in your country for further assistance.

The machine makes a different sound when brewing Espresso. This produces a different sound.

Water continues to flow from the spout when I use the machine for the first time.

When using the machine for the first time, it performs a flushing cycle. Place a bowl of 1.5 liters under the spout to catch the water from the flushing cycle. Flush the machine before first use (see 'Flushing before first use').

In this chapter we list the most frequent problems described, which occur when

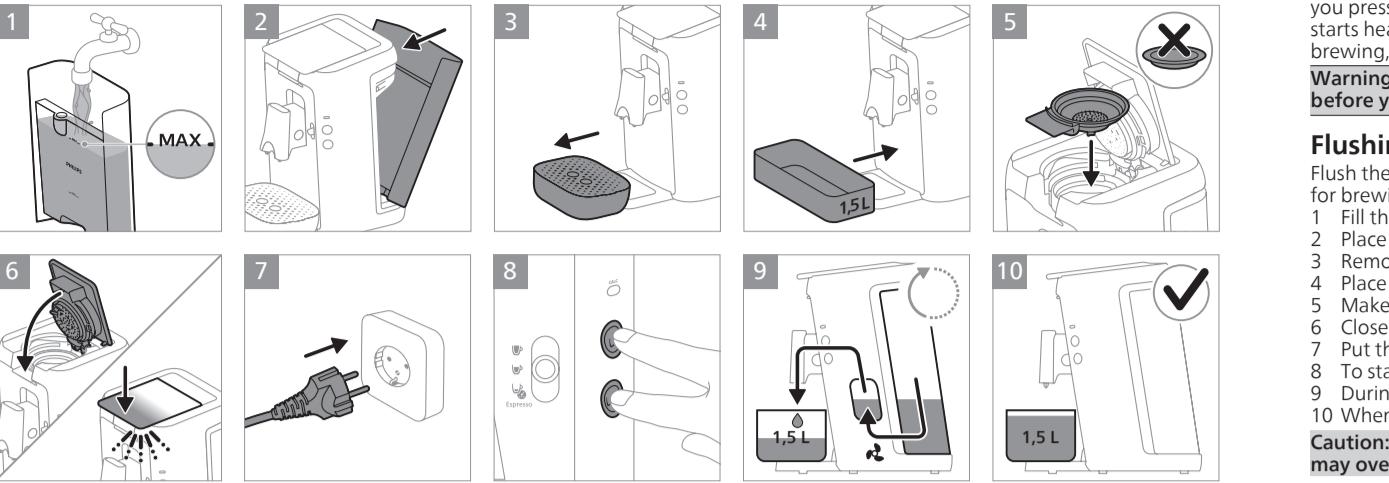

English Usage instructions

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Direct start function

This Senseo machine brews coffee with only one touch of a button. When you press the 1-cup or 2-cup button, the machine immediately switches on, starts heating and then brews a cup of coffee. When the machine has finished brewing, it switches off automatically to save energy.

Warning: Make sure the lid is closed properly and the lid lever is locked before you start brewing.

Flushing before first use

Flush the machine before first use. After the flushing cycle, the machine is ready for brewing coffee.

- Fill the water reservoir with fresh water up to the MAX level indication.
- Place the water reservoir back onto the machine.
- Remove the drip tray from the machine.
- Place a container under the coffee spout.
- Make sure that a pod holder (without pods), is in place.
- Close the lid and lock the lever.
- Put the plug in an earthed wall socket.
- To start flushing, press the 1-cup button and the 2-cup button simultaneously.
- During the flushing cycle, cold water comes out of the coffee spout.
- When the flushing cycle is finished, the machine switches off.

Caution: If you do not flush the machine before first use, your first coffee cup may overflow with cold water.

Achtung: Wenn Sie das Gerät vor dem ersten Gebrauch nicht durchspülen, kann Ihre erste Kaffeetasse mit kaltem Wasser überlaufen.

Brewing coffee

- Fill up the water reservoir with fresh cold tap water.
- Open the lid and lock the lever.
- Place one Senseo coffee pod with one coffee pod in the machine. To brew two cups, place the 2-cup pod holder with two coffee pods in the machine.
- Place the (pod) holder(s) properly in the center of the pod holder, with the convex side pointing downwards. Press the (pod)s lightly into the pod holder.
- Close the lid and lock the lever.
- Place one or two cups under the spout openings. For a large coffee, remove the drip tray and place a large cup or mug under the coffee spout.
- Slide the coffee spout up or down to adjust its height to the size of the cup you are using.
- Use the intensity selector slider to select your choice:

 - Select the top position to brew a classic long espresso.
 - Select the middle position to brew an intense Senseo.
 - Select the bottom position for the Zubereitung eines Espresso.

- Press the 1-cup button to brew one cup of coffee or press the 2-cup button to brew two cups of coffee. You can stop the brewing process at any time by pressing any button.

Note: To ensure the best coffee quality, use fresh cold water every day. If you have not used the machine for 1 day, you have to flush it with fresh cold water before you use it again. To flush the machine, fill the water reservoir with fresh cold water, place 2 cups under the spout and brew coffee without a coffee pod twice in a row.

Intense Plus technology

This Senseo CSA260 machine comes with a new technology for brewing Espresso. This new brewing mode allows optimum extraction for an Espresso with a rich, fine and darker crema. Follow the steps above and select the Espresso recipe in step 8. When brewing an Espresso, you will hear a different sound during each phase. This is caused by the new brewing technology.

Intense Plus-Technology

Diese Senseo CSA260 Kaffeemaschine ist mit einer neuen Aufbrühtechnologie für Espresso ausgestattet. Diese neue Aufbrühmodus ermöglicht eine optimale Extraktion für einen Espresso mit einer reichen, feinen und dunkleren Crema. Folgen Sie den Anweisungen weiter oben und wählen Sie in Schritt 8 das Espressozeptor aus. Sie hören beim Brühen eines Espressos während jeder Phase ein anderes Geräusch. Dieses entsteht durch die neue Aufbrühtechnologie.

Memo function

For each recipe of the Intensity Select slider, you can adjust the coffee volume to your personal taste and save it. Adjust the volume until the light starts flashing.

- Press and hold the 1-cup button for 5 seconds. Do not release the button until the light starts flashing at short intervals, indicating that the memo function is active.
- Halten Sie die 1-Tasse-Taste fünf Sekunden lang gedrückt. Lassen Sie die Taste erst los, wenn die Anzeige in kurzen Abständen zu blinken beginnt und so die Memofunktion aktiviert ist.
- Die 1-Tasse-Taste blinkt in kurzen Abständen, während das Gerät 60-90 Sekunden lang aufgeheizt wird und anschließend Kaffee brüht.
- Wenn der gewünschte Kaffeemenge erreicht ist, drückt Sie erneut die 1-Tasse-Taste, um die 1-Tasse-Taste und die 2-Tassen-Taste zu entfernen.
- Die Kaffeemenge des Rezepts wurde für die 1-Tasse-Taste und die 2-Tassen-Taste gespeichert.
- Das Gerät brüht nun die eingestellte Menge Kaffee, wenn dieses Rezept ausgewählt wird.

Note: The maximum volume that can be programmed is 145 ml and the minimum volume is 25 ml.

Deutsch Gebrauchsanweisungen

Einführung

Herzlichen Glückwunsch zu Ihrem Kauf und willkommen bei Philips! Um die Unterstützung von Philips optimal nutzen zu können, sollten Sie Ihr Produkt auf www.philips.com/welcome registrieren.

Directstartfunktion

Mit dieser Senseo Kaffeemaschine können Sie Kaffee durch Drücken einer einzigen Taste zubereiten. Wenn Sie die 1-Tasse- oder die 2-Tassen-Taste drücken, schaltet sich die Maschine direkt ein, heizt sich auf und bereitet dann eine Tasse Kaffee zu. Wenn das Gerät mit den Brühen fertig ist, schaltet sich es automatisch ab, um Energie zu sparen.

Warning: Make sure the lid is closed properly and the lid lever is locked before you start brewing.

Flushing before first use

Flush the machine before first use. After the flushing cycle, the machine is ready for brewing coffee.

- Fill the water reservoir with fresh water up to the MAX level indication.
- Place the water reservoir back onto the machine.
- Remove the drip tray from the machine.
- Place a container under the coffee spout.
- Make sure that a pod holder (without pods), is in place.
- Close the lid and lock the lever.
- Put the plug in an earthed wall socket.
- To start flushing, press the 1-cup button and the 2-cup button simultaneously.
- During the flushing cycle, cold water comes out of the coffee spout.
- When the flushing cycle is finished, the machine switches off.

Caution: If you do not flush the machine before first use, your first coffee cup may overflow with cold water.

Achtung: Wenn Sie das Gerät vor dem ersten Gebrauch nicht durchspülen, kann Ihre erste Kaffeetasse mit kaltem Wasser überlaufen.

Vor dem ersten Gebrauch durchspülen

Splüßen Sie die Maschine vor dem ersten Gebrauch. Nach dem Spülvorgang ist das Gerät bereit für das Brühen von Kaffee.

- Setzen Sie den Wasserbehälter wieder in das Gerät ein.
- Setzen Sie den Wasserbehälter wieder in das Gerät ein.
- Nehmen Sie die Abtropfschale ab der Kaffeemaschine.
- Stellen Sie ein Becherglas unter den Kaffeauslauf.
- Setzen Sie den Deckel und den Verschlusshebel.
- Stecken Sie den Netzstecker in eine geerdete Steckdose.
- Drücken Sie gleichzeitig die 1-Tasse-Taste und die 2-Tassen-Taste, um das Durchspülvorgang zu starten.
- Bei dem Durchspülvorgang tritt kaltes Wasser aus dem Kaffeauslauf aus.
- Wenn das Gerät durchgespült hat, schaltet sich das Gerät automatisch ab.

Caution: Wenn Sie das Gerät vor dem ersten Gebrauch nicht durchspülen, kann Ihre erste Kaffeetasse mit kaltem Wasser überlaufen.

Achtung: Wenn Sie das Gerät vor dem ersten Gebrauch nicht durchspülen, kann Ihre erste Kaffeetasse mit kaltem Wasser überlaufen.

Precaución: Si no se lava la cafetera antes de usarla por primera vez, la primera taza de café podría rebosar agua fría.

Attention: si vous ne rinsez pas la machine avant la première utilisation, votre première tasse de café risque de déborder d'eau froide.

Preparación: Si no se lava la cafetera antes de usarla por primera vez, la primera taza de café podría rebosar agua fría.

Waarschuwing: Zorg dat het deksel goed gesloten is en dat de hendel van het deksel is vergrendeld voordat u begint met koffiezetten.

Doorpoelen voor eerste gebruik:

- Spoel het apparaat voor het eerste gebruik door. Na de doorspoelycclus is het apparaat klaar voor gebruik.
- Vul het waterreservoir tot aan de MAX-aanduiding met vers water.
- Plaats de lekbak weer terug op de machine.
- Verwijder de lekbak van het apparaat.
- Plaats de reservoor terug op de olla.
- Verwijder de lekbak uit de machine.
- Plaats een bek onder de koffie-uitloop.
- Plaats de waterpot onder de koffie-uitloop.
- Sluit het deksel en vergrendel de hendel.
- Steek de stekker in een geaard stopcontact.
- Druk telkergaedly op de 1-kops knop en de 2-kops knop om het doorspoelen te starten.
- Door de doorspoeling komt er koud water uit de koffiepot.
- Wanneer de doorspoeling is voltooid, wordt het apparaat uitgeschakeld.

Let op: Als u het apparaat niet voor het eerste gebruik spoelt, kan uw eerste kopje overlopen met koud water.

Preparación para la primera utilización:

Spoel het apparaat voor de eerste gebruik. Aan het eind van de doorspoelycclus is het apparaat klaar voor gebruik.

- Vul het waterreservoir tot aan de MAX-aanduiding met vers water.
- Plaats de lekbak weer terug op de machine.
- Verwijder de lekbak van het apparaat.
- Plaats de reservoor terug op de olla.
- Verwijder de lekbak uit de machine.
- Plaats een bek onder de koffie-uitloop.
- Plaats de waterpot onder de koffie-uitloop.
- Sluit het deksel en vergrendel de hendel.
- Steek de stekker in een geaard stopcontact.
- Druk telkergaiedy op de 1-kops knop en de 2-kops knop om het doorspoelen te starten.
- Door de doorspoeling komt er koud water uit de koffiepot.
- Wanneer de doorspoeling is voltooid, wordt het apparaat uitgeschakeld.

Opmerking: als u de doorspoeling niet voltooid heeft, kunt u het apparaat uitschakelen.

Preparazione per la prima utilizzazione:

- Riempire la macchina con acqua fresca fino alla indicazione MAX.
- Rimuovere il recipiente sotto la macchina.
- Rimuovere la ciotola sotto il portafiltro.
- Posizionare un recipiente sotto l'apertura del caffè.
- Chiudere il coperchio e serrare il manico.
- Collocare la spina nella presa elettrica.
- Appiare sul pulsante per il lavaggio.
- Accendere la macchina.
- Accendere il pulsante per il primo uso.
- Chiudere il coperchio e serrare il manico.
- Accendere la macchina.
- Appiare sul pulsante per la preparazione.
- Lavare il portafiltro.
- Aprire lo sciacquo.
- Chiudere il coperchio e serrare il manico.
- Accendere la macchina.
- Appiare sul pulsante per la preparazione.
- Chiudere il coperchio e serrare il manico.
- Accendere la macchina.
- Appiare sul pulsante per la preparazione.

Opmerking: als u de doorspoeling niet voltooid heeft, kunt u het apparaat uitschakelen.

Preparazione per la prima utilização:

- Rinse the machine with fresh cold water.
- Place the water reservoir back onto the machine.
- Remove the drip tray from the machine.
- Place a container under the coffee spout.
- Make sure that a pod holder (without pods), is in place.
- Close the lid and lock the lever.
- Put the plug in an earthed wall socket.
- To start flushing, press the 1-cup button and the 2-cup button simultaneously.
- During the flushing cycle, cold water comes out of the coffee spout.
- When the flushing cycle is finished, the machine switches off.

Caution: If you do not flush the machine before first use, your first coffee cup may overflow with cold water.

Achtung: Wenn Sie das Gerät vor dem ersten Gebrauch nicht durchspülen, kann Ihre erste Kaffeetasse mit kaltem Wasser überlaufen.

Precaución: Si no se lava la cafetera antes de usarla por primera vez, la primera taza de café podría rebosar agua fría.

Attention: si vous ne rinsez pas la machine avant la première utilisation, votre première tasse de café risque de déborder d'eau froide.

Preparazione per la prima utilizzazione:

- Rimplizia la macchina con acqua fredda.
- Colocare de nuevo el deposito de agua en el aparato.
- Retirar la bandeja de drenaje del aparato.
- Colocar un recipiente debajo de la boca del café.
- Cerrar el recipiente y fijar la palanca.
- Colocar la tapa en la máquina y fijar el mango.
- Colocar la clavija en la toma de corriente.
- Pulsar el botón para el lavado.
- Encender la máquina.
- Pulsar el botón para la primera utilización.
- Colocar la tapa y fijar el mango.

Opmerking: als u de doorspoeling niet voltooid heeft, kunt u het apparaat uitschakelen.

Preparazione per la prima utilização:

- Rinse the machine with cold water.
- Place the water reservoir back onto the machine.
- Remove the drip tray from the machine.
- Place a container under the coffee spout.
- Make sure that a pod holder (without pods), is in place.
- Close the lid and lock the lever.
- Put the plug in an earthed wall socket.
- To start flushing, press the 1-cup button and the 2-cup button simultaneously.
- During the flushing cycle, cold water comes out of the coffee spout.
- When the flushing cycle is finished, the machine switches off.

Caution: If you do not flush the machine before first use, your first coffee cup may overflow with cold water.

Achtung: Wenn Sie das Gerät vor dem ersten Gebrauch nicht durchspülen, kann Ihre erste Kaffeetasse mit kaltem Wasser überlaufen.

Precaución: Si no se lava la cafetera antes de usarla por primera vez, la primera taza de café podría rebosar agua fría.

Attention: si vous ne rinsez pas la machine avant la première utilisation, votre première tasse de café risque de déborder d'eau froide.

Preparazione per la prima utilização:

- Rimplizia la macchina con acqua fredda.
- Colocare de nuevo el deposito de agua en el aparato.
- Retirar la bandeja de drenaje del aparato.
- Colocar un recipiente debajo de la boca del café.
- Cerrar el recipiente y fijar la palanca.
- Colocar la tapa en la máquina y fijar el mango.
- Colocar la clavija en la toma de corriente.
- Pulsar el botón para el lavado.
- Encender la máquina.
- Pulsar el botón para la primera utilización.
- Colocar la tapa y fijar el mango.

Opmerking: als u de doorspoeling niet voltooid heeft, kunt u het apparaat uitschakelen.

Preparazione per la prima utilização:

- Rinse the machine with cold water.
- Place the water reservoir back onto the machine.
- Remove the drip tray from the machine.
- Place a container under the coffee spout.
- Make sure that a pod holder (without pods), is in place.
- Close the lid and lock the lever.
- Put the plug in an earthed wall socket.
- To start flushing, press the 1-cup button and the 2-cup button simultaneously.
- During the flushing cycle, cold water comes out of the coffee spout.
- When the flushing cycle is finished, the machine switches off.

Caution: If you do not flush the machine before first use, your first coffee cup may overflow with cold water.

Achtung: Wenn Sie das Gerät vor dem ersten Gebrauch nicht durchspülen, kann Ihre erste Kaffeetasse mit kaltem Wasser überlaufen.

Precaución: Si no se lava la cafetera antes de usarla por primera vez, la primera taza de café podría rebosar agua fría.

Attention: si vous ne rinsez pas la machine avant la première utilisation, votre première tasse de café risque de déborder d'eau froide.

Preparazione per la prima utilização:

- Rimplizia la macchina con acqua fredda.
- Colocare de nuevo el deposito de agua en el aparato.
- Retirar la bandeja de drenaje del aparato.
- Colocar un recipiente debajo de la boca del café.
- Cerrar el recipiente y fijar la palanca.
- Colocar la tapa en la máquina y fijar el mango.
- Colocar la clavija en la toma de corriente.
- Pulsar el botón para el lavado.
- Encender la máquina.
- Pulsar el botón para la primera utilización.
- Colocar la tapa y fijar el mango.

Opmerking: als u de doorspoeling niet voltooid heeft, kunt u het apparaat uitschakelen.

Preparazione per la prima utilização:

- Rinse the machine with cold water.
- Place the water reservoir back onto the machine.
- Remove the drip tray from the machine.
- Place a container under the coffee spout.
- Make sure that a pod holder (without pods), is in place.
- Close the lid and lock the lever.
- Put the plug in an earthed wall socket.
- To start flushing, press the 1-cup button and the 2-cup button simultaneously.
- During the flushing cycle, cold water comes out