


PHILIPS

WALITA

DST2010, DST2020,
DST2030



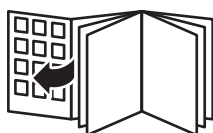


English 6
Português do Brasil 21

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. Read this user manual, the important information leaflet, and the quick start guide carefully before you use the appliance. Save them for future reference.

Product overview

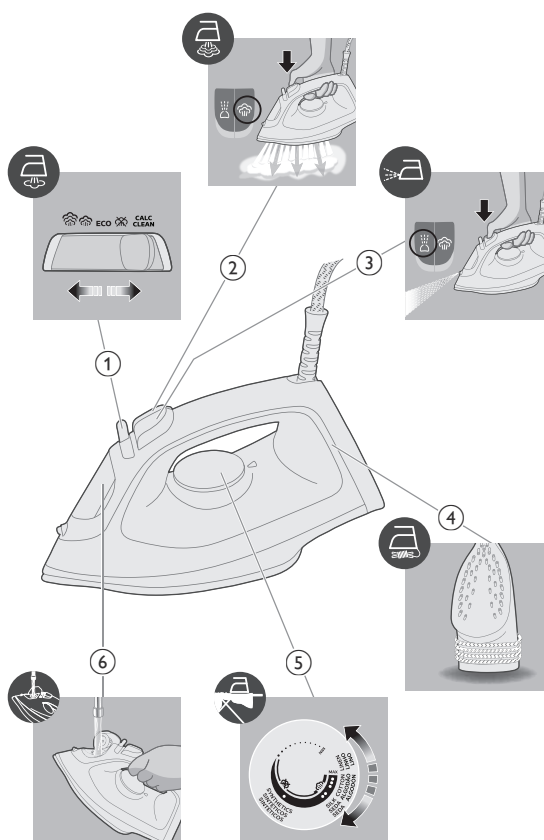

- 1 Steam selector
- 2 Steam boost button
- 3 Water spray
- 4 Cord winding
- 5 Temperature dial
- 6 Water tank lid

Using the appliance

Preparing for use

Note: The iron may give off some steam when you use it for the first time. This stops after a short while.


Type of water to use

The appliance is suitable to be used with tap water. However, if you live in an area with hard water, we recommend that you mix an equal amount of tap water with distilled or demineralized water. This will prevent fast scale build up and prolong the lifetime of the appliance.


Do not add perfume, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals, as they may cause water spitting, brown staining or damage to your appliance.


Filling the water tank

- 1 Do not plug in the appliance.

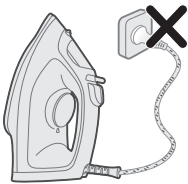


- 2 Ensure the appliance is cooled down.

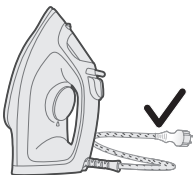


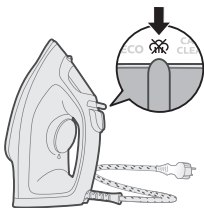


3 Slide the steam selector to the right to select no steam mode (dry ironing) .

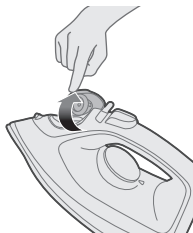

4 Flip open the water tank lid.

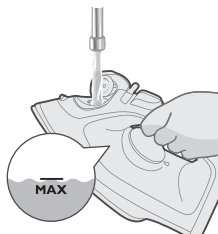

5 Fill water tank up to the MAX indication in the water tank.

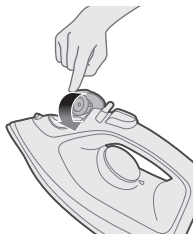

6 Close the water tank lid firmly.

Setting the temperature



MAX
LINEN



● ● ● ●
COTTON



	● ● SILK	ECO
	● SYNTHETICS	

ECO



ECO setting: Minimum constant steam is delivered continuously for garments with less creases. This setting also saves energy.

Two steam clouds



Two steam clouds: More constant steam is delivered continuously for tough creases.


Three steam clouds




Three steam clouds: Maximum constant steam is delivered continuously for stubborn creases.


Using the appliance

- 1 Check the garment label for the required ironing.

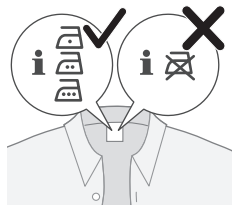


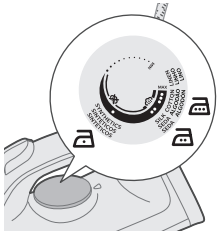


- 2 Set the temperature dial to the required ironing temperature by turning it to the appropriate temperature indication.

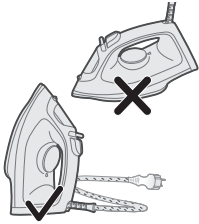


- 3 Allow the iron to rest on its heel.

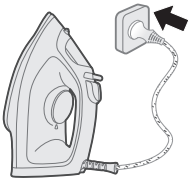

- 4 Plug the appliance in an earthed wall socket.

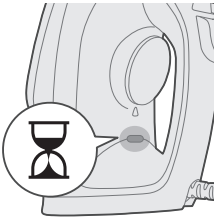


- 5 The iron ready light will light up, indicating iron is heating up.

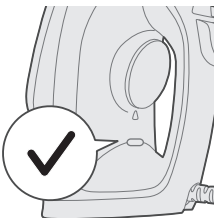


- 6 When the iron ready light has gone out, wait a while before you start ironing. The ready light will go on from time to time during ironing.

No steam/Dry ironing

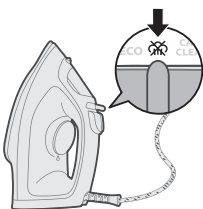


- 1 Set steam setting to no steam setting.

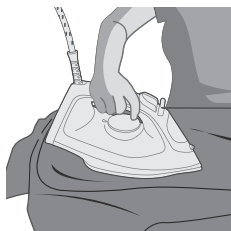


- 2 After a short while, steam will cease during ironing.

Water spray

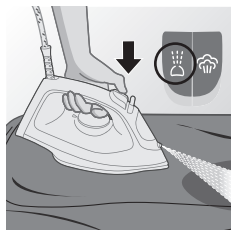

- 1 Set steam setting to no steam setting. Press and release the water spray button  for a stream of mist to remove stubborn creases.

Steam boost

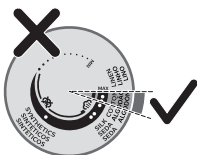

- 1 Set temperature dial to MAX setting between cotton and linen.


12 English



- 2 Press and release the steam boost button for a powerful boost of steam to remove stubborn creases.




- 3 You can use the steam boost function when you hold the iron in vertical position for removing creases from hanging garments (for DST2020 and DST2030 only).

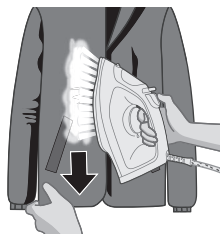

- 4 Pull and stretch your garment while applying steam boost to remove stubborn creases (for DST2020 and DST2030 only).




- 5 Do not use your bare hand as a supporting surface when you iron.

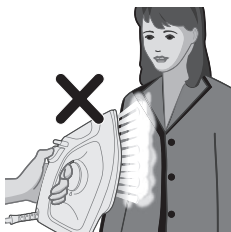


- 6 Do not position the appliance towards yourself/ another person.


Auto shut off (DST2030)

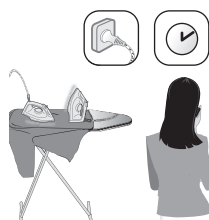


- 1 To give you a peace of mind, the appliance will cool down on its own if it is left unattended for a period of time.

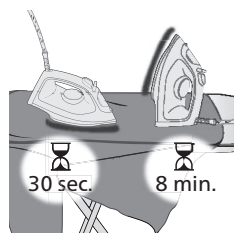


- 2 When the appliance is not in use for more than 30 seconds resting on its soleplate or 8 minutes resting on its heel/ base, the appliance will enter auto shut off mode.

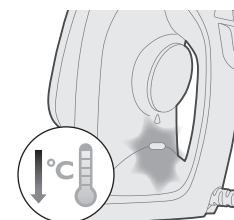


- 3 The temperature of the appliance will decrease in auto shut-off mode. The iron ready light will also flash non-stop to indicate the appliance is at auto-off status. To completely switch off the appliance, unplug the appliance from the socket.

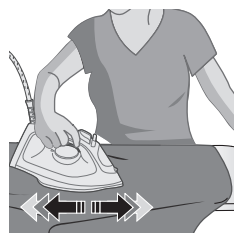

- 4 To let the appliance heat up again, pick up the appliance or move it slightly.

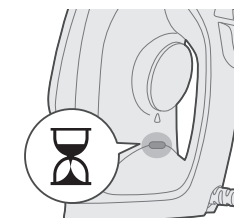



- 5 The iron ready light will light up, indicating the appliance is heating up.

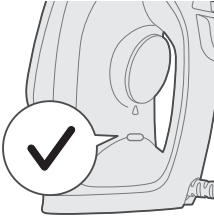


- 6 Once the iron ready light turns off, the appliance is ready to use.

Cleaning and maintenance

- 1 Ensure appliance is not plugged in.

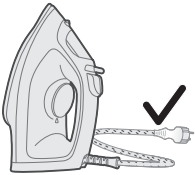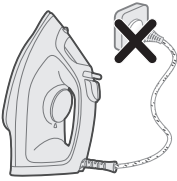


- 2 Ensure the appliance has cooled down.

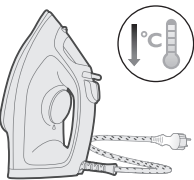

- 3 Wipe flakes and other deposit off the soleplate with a damp cloth.



Note: To keep the soleplate smooth, avoid hard contact with metal objects. Never use a scouring pad, vinegar or other chemicals to clean the soleplate.

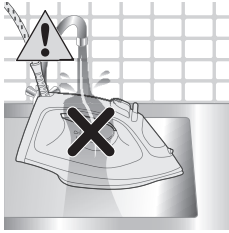


- 4 Do not wash/ clean the appliance under running water.

Calc-Clean




Tip: The Quick Calc Release function can be used at any time. If you live in a hard water area, use the function more frequently.

- 1 After 1 month of use, it is recommended to perform calc clean to remove scales collected from your appliance to prolong its life and ensure the appliance heats up.

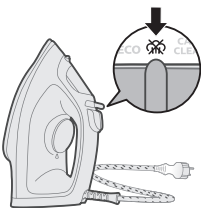

- 2 Make sure the iron is unplugged and the steam setting is set to no steam mode (dry ironing) .


16 English

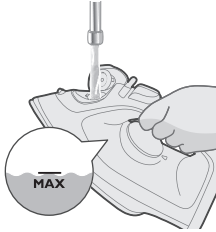


3 Fill the water tank to the MAX indication.




4 Set the temperature dial to MAX.

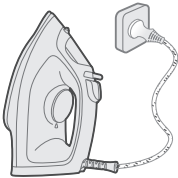

5 Plug in appliance to an earthed wall socket.

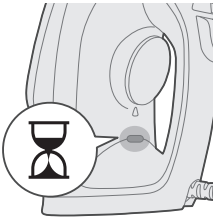


6 The iron ready light will light up, indicating the appliance is heating up.

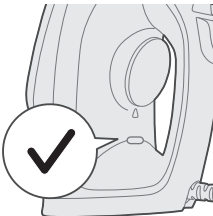


7 Wait for iron ready light to go out.

- 8** Unplug the iron.

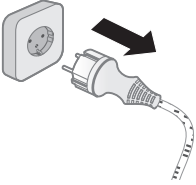

- 9** Slide the steam selector to the Calc-Clean position and hold it.

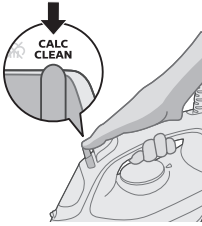


- 10** Hold the iron over the sink and gently shake the iron. Hot water and calc particles will be released from the soleplate.


Caution: While scale is flushed out, steam and boiling water also come out of the soleplate.




- 11** Continue to shake the iron until all the water in the water tank has been released.

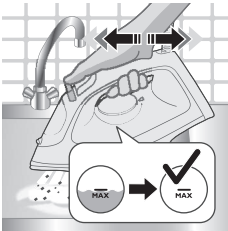


- 12** Plug in the appliance and let the appliance heat up to dry the soleplate. This takes about 2 minutes.

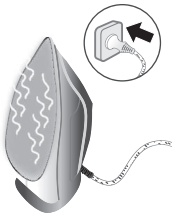

18 English

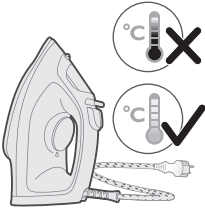


13 Let the iron cool down.

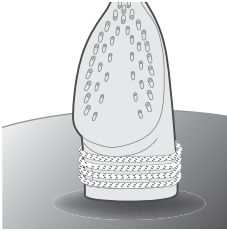


14 Wind the cord around the heel of the iron.


Storage

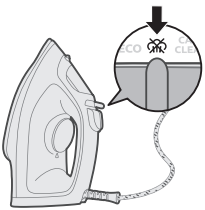


1 Slide the steam selector to select no steam mode (dry ironing) .

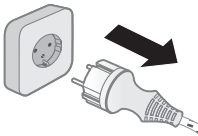


2 Unplug the appliance.

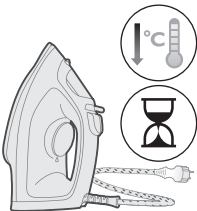

3 Let the appliance cool down.

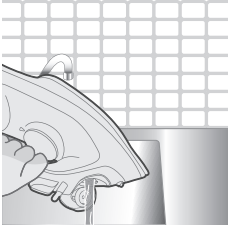

- 4 Pour any remaining water out of the water tank.

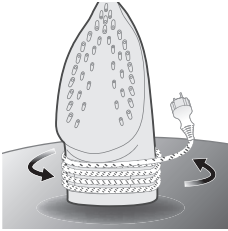

- 5 Wind the power cord around the main body of the appliance.

Trouble shooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The iron cannot remove wrinkles from the garment.	There is no steam during ironing.	Fill the water tank and set the steam slider to  .
The iron does not produce any steam.	There is not enough water in the tank.	Fill the water tank.
	The steam slider is set to  .	Set the steam slider to  .
	The iron is not hot enough yet to produce steam.	When the iron is heating up, the "iron-ready" light is steady on. When the iron is ready for use, the light turns off.
Water droplets drip onto the garment during ironing.	You have used the boost function too often within a short period.	Continue ironing in horizontal position and wait a while before you use the steam boost function again.
	You have not closed the water tank lid properly.	Press the lid until you hear a 'click'.


20 English

The iron does not produce a steam boost.	You have used the steam boost function too often within a short period.	Continue ironing in horizontal position and wait a while before you use the steam boost function again.
	The iron is not hot enough for ironing yet.	Wait until the 'iron ready' light has stopped flashing and lights up steadily.
	You have put a chemical into the water tank.	Rinse the water tank and do not put any perfume or chemicals into the water tank.
Water drips from the soleplate after the iron has been unplugged.	The steam slider is set to  .	Set the steam slider to  .
	You have put the iron in horizontal position with water still left in the water tank.	Empty the water tank after use, or store the iron in vertical position.
The iron leaves a shine or an imprint on the garment.	The surface to be ironed was uneven, for instance because you ironed over a seam or a fold in the garment.	The iron is safe to use on all ironable garments. The shine or imprint is not permanent and disappears when you wash the garment. Avoid ironing over seams or folds. You can also place a cotton cloth over the area to be ironed to avoid imprints.

Introdução

Parabéns pela sua aquisição e bem-vindo à Philips! Para aproveitar ao máximo o suporte oferecido pela Philips, registre seu produto em www.philips.com/welcome. Leia atentamente este manual do usuário, o folheto de informações importantes e o guia de início rápido antes de usar o aparelho. Guarde-os para consultas futuras.

Visão geral do produto

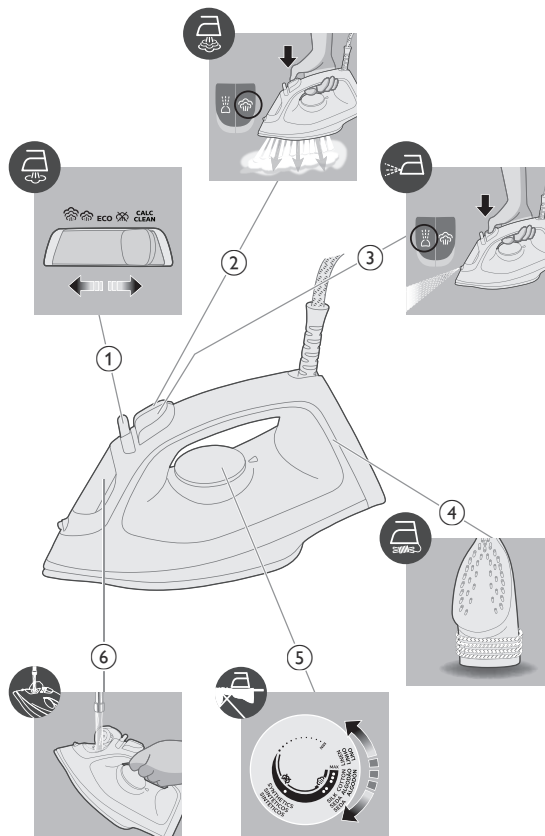

- 1 Seletor de vapor
- 2 Botão do sistema de vapor
- 3 Spray de água
- 4 Suporte para o fio
- 5 Termostato
- 6 Tampa do reservatório de água

Utilização do aparelho

Preparação para o uso

Nota: O ferro pode produzir uma pequena quantidade de vapor quando usado pela primeira vez. Em pouco tempo, isso não ocorrerá mais.


Tipo de água usado

O aparelho é adequado para uso com água corrente. No entanto, se você mora em uma área com água dura, recomendamos misturar uma quantidade igual de água da torneira com água destilada ou desmineralizada. Isso evitará o acúmulo rápido de impurezas e prolongará a vida útil do aparelho.


Não adicione perfume, água da secadora, vinagre, amido, agentes removedores de impurezas, produtos para passar roupas, água quimicamente descalcificada ou outros produtos químicos, pois podem causar jatos de água, manchas escuras ou danos ao aparelho.


Abastecimento do reservatório de água

- 1 Não conecte o aparelho.

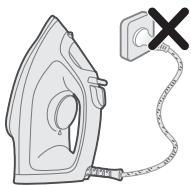


- 2 Certifique-se de que o aparelho esteja frio.

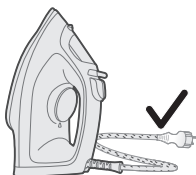


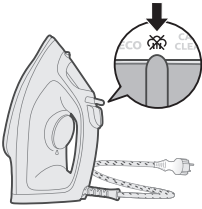

- 3 Deslize o seletor de vapor para a direita para selecionar o modo sem vapor (passar a seco) .

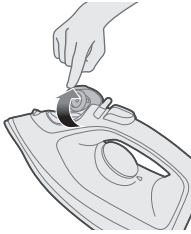

- 4 Abra a tampa do reservatório de água.

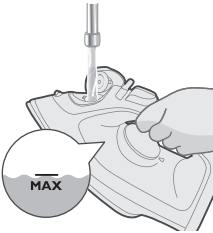

- 5 Encha o reservatório de água até a indicação MÁX no reservatório de água.



- 6 Feche bem a tampa do reservatório de água.

Definição da temperatura



MÁX
LINHO



● ● ●
ALGODÃO





● ●
SEDA

ECO



●
SINTÉTICO



ECO



Ajuste ECO: Vapor mínimo e constante fornecido continuamente para roupas com menos vincos. Este ajuste também economiza energia.




Duas nuvens de vapor: Vapor máximo e constante fornecido continuamente para eliminar os vincos difíceis.




Três nuvens de vapor: Vapor máximo e constante fornecido continuamente para eliminar os vincos mais difíceis.


Utilização do aparelho

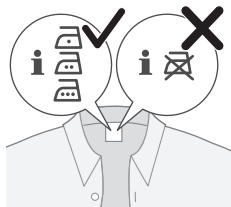


- 1 Verifique a etiqueta da roupa para saber as informações necessárias para passar a roupa.

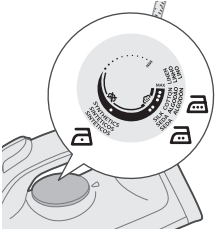


- 2 Ajuste o botão de temperatura para a temperatura desejada para passar a roupa, girando-o para a indicação de temperatura apropriada.

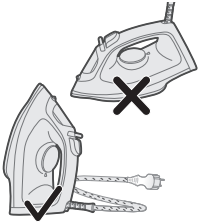


- 3 Deixe que o ferro descanse na posição vertical.

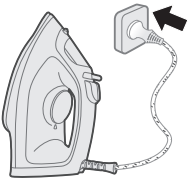

- 4 Conecte o aparelho a uma tomada de parede aterrada.

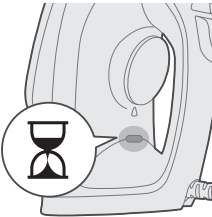


- 5 A luz de "ferro pronto" acenderá indicando que o ferro está esquentando.

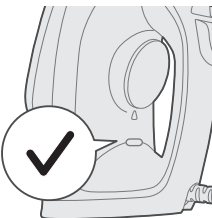


- 6 Quando a luz indicadora de ferro pronto apagar, espere um pouco antes de começar a passar. A luz indicadora de ferro pronto acende às vezes durante o uso.

Sem vapor/passar a seco

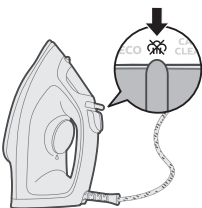


- 1 Ajuste a configuração de vapor para sem vapor.

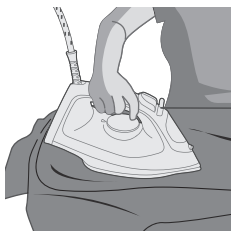

- 2 Após um breve período, o vapor cessará enquanto você passa a roupa.


Spray de água

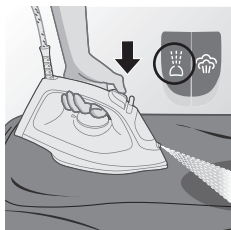


- 1 Ajuste a configuração de vapor para sem vapor. Pressione e solte o botão do spray de água  para obter um jato de névoa para remover vincos mais difíceis.


Sistema de vapor

- 1 Ajuste o botão de temperatura para o ajuste MÁX entre algodão e linho.

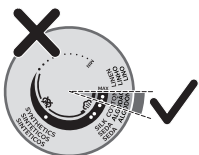


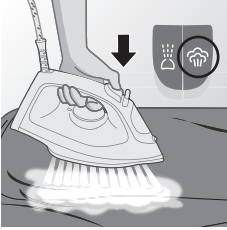

- 2 Pressione e solte o botão do sistema de vapor para aplicar um poderoso jato de vapor para remover os vincos mais difíceis.

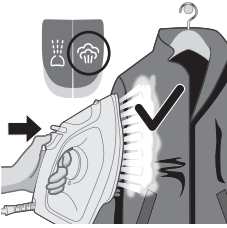


- 3 Você pode usar a função do sistema de vapor com o ferro na posição vertical enquanto remove os vincos das roupas penduradas (apenas para DST2020 e DST2030).

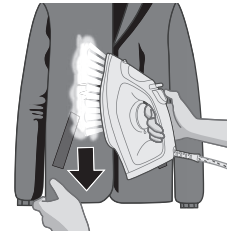

- 4 Puxe e estique a peça enquanto aplica o jato de vapor para remover os vincos mais difíceis (apenas para DST2020 e DST2030).




- 5 Não use a mão nua como superfície de apoio ao usar o ferro.

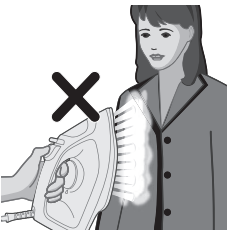


- 6 Não posicione o aparelho na sua direção ou de outra pessoa.


Desligamento automático (DST2030)

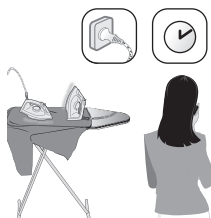


- 1** Para a sua tranquilidade, o aparelho resfria-se sozinho se não for supervisionado por um tempo.

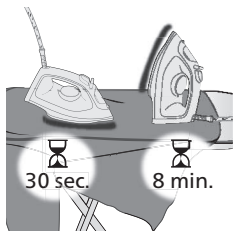


- 2** Quando o aparelho não for usado por mais de 30 segundos apoiado na base ou 8 minutos apoiado na posição de descanso/base, o aparelho entrará no modo de desligamento automático.

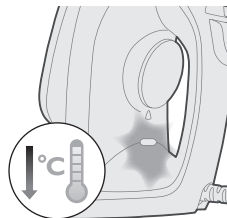


- 3** A temperatura do aparelho diminuirá no modo de desligamento automático. A luz indicadora de ferro pronto também piscará sem parar para indicar que o aparelho está no status de desligamento automático. Para desligar o aparelho completamente, desconecte-o da tomada.

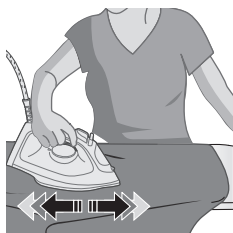

- 4** Para aquecer o aparelho novamente, segure-o ou movimente-o devagar.

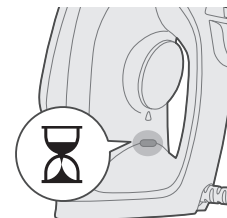



- 5** A luz de "ferro pronto" acenderá indicando que o aparelho está esquentando.

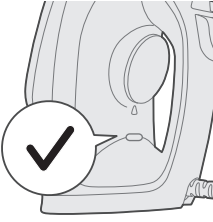


- 6 Assim que a luz indicadora de "ferro pronto" apagar, o aparelho estará pronto para uso.

Limpeza e manutenção

- 1 Certifique-se de que o aparelho não está conectado à tomada elétrica.

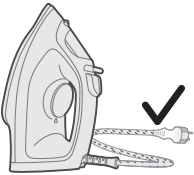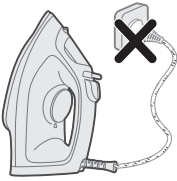


- 2 Certifique-se de que o aparelho esfriou.

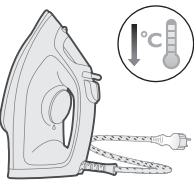

- 3 Limpe os flocos e outros depósitos da base com um pano úmido.



Nota: Mantenha a base lisa e evite o contato direto com objetos metálicos. Nunca use palha de aço, vinagre ou outras substâncias químicas para limpar a base.

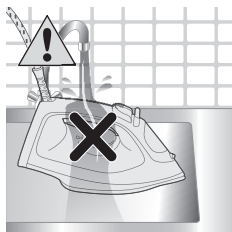


- 4 Não lave/limpe o aparelho com água corrente.

Calc-Clean




Dica: A função Quick Calc Release pode ser usada a qualquer momento. Se você vive em uma área de água dura, use a função com mais frequência.

- 1 Após 1 mês de uso, recomenda-se realizar a limpeza de calcário para remover as impurezas coletadas no aparelho, prolongar sua vida útil e garantir o aquecimento do aparelho.

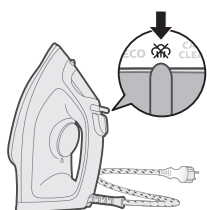


- 2 Verifique se o ferro está desconectado e se o ajuste de vapor está na posição sem vapor (passar a seco) ~~com~~.

- 8 Desconecte o ferro.

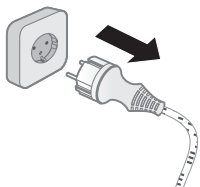

- 9 Deslize o seletor do vapor até a posição Calc-Clean e segure-o.

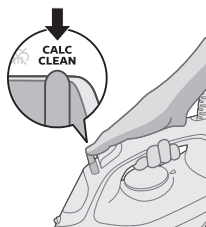


- 10 Segure o ferro sobre a pia e sacuda-o suavemente. Água quente e partículas calcificadas serão liberadas da base do ferro.




Cuidado: No momento em que as impurezas saírem, também sairão vapor e água quente da base do ferro.

- 11 Continue balançando o ferro suavemente até que toda a água no reservatório tenha sido liberada.

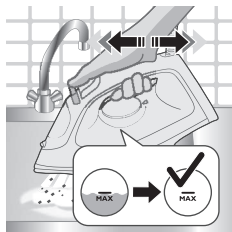


- 12 Conecte o aparelho à tomada e deixe-o esquentar para secar a base. Esse processo demora cerca de 2 minutos.



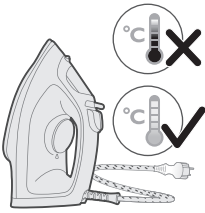


13 Deixe o ferro esfriar.

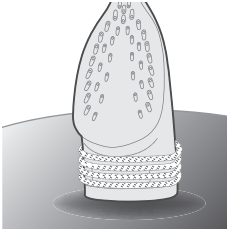



14 Enrole o fio em volta da base do ferro.

Armazenamento

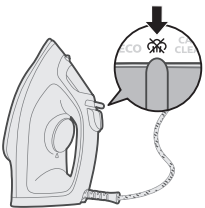


1 Deslize o seletor de vapor para selecionar o modo sem vapor (passar a seco) .


2 Desligue o aparelho da tomada.

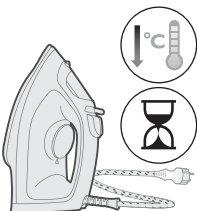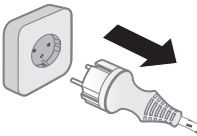

3 Deixe o aparelho esfriar.

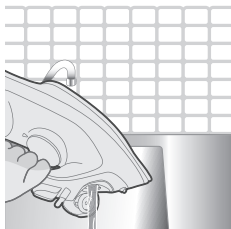

4 Retire toda a água restante no reservatório de água.

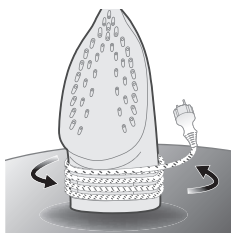

5 Enrole o cabo de energia em torno da estrutura do aparelho.

Solução de problemas

Este capítulo resume os problemas mais comuns que você pode entrar no aparelho. Caso você não consiga solucionar o problema com as informações abaixo, acesse www.philips.com/support para obter uma lista de perguntas frequentes ou entre em contato com a Central de Atendimento ao Cliente do seu país.

Problema	Possível causa	Solução
O ferro não consegue remover os amassados da roupa.	Não há produção de vapor ao passar a roupa.	Encha o reservatório de água e ajuste o controle deslizante de vapor para
O ferro não produz vapor.	O reservatório não possui água suficiente.	Encha o reservatório de água.
	O controle deslizante de vapor está definido como	Regule o controle deslizante de vapor para
	O ferro não está quente o suficiente para produzir vapor.	Enquanto o ferro estiver aquecendo, a luz indicadora de "ferro pronto" estará acesa. Quando o ferro estiver pronto para uso, a luz se apagará.
Pingos d'água caem na peça de roupa durante o uso o ferro.	A função de vapor extra foi usada muitas vezes em um curto período.	Continue passando na posição horizontal e aguarde um pouco antes de usar novamente a função do sistema de vapor.
	Você não fechou corretamente a tampa do reservatório de água.	Pressione a tampa até ouvir um "clique".

O ferro produz vapor em pouca quantidade.	A função do sistema de vapor foi usada muitas vezes em um curto período.	Continue passando na posição horizontal e aguarde um pouco antes de usar novamente a função do sistema de vapor.
	O ferro ainda não está quente o suficiente para ser usado.	Espere até que luz indicadora de "ferro pronto" tenha parado de piscar e fique acesa.
	Você colocou um produto químico no reservatório de água.	Enxágue o reservatório de água e não coloque nenhum perfume ou produto químico nele.
A água escorre da base depois que o ferro é desligado.	O controle deslizante de vapor está definido como  .	Regule o controle deslizante de vapor para  .
	Você colocou o ferro na posição horizontal e o reservatório de água não estava vazio.	Esvazie o reservatório de água após o uso ou guarde o ferro na posição vertical.
O ferro deixa brilho ou uma marca na peça de roupa.	A superfície a ser passada estava desnivelada, por exemplo, por ter passado o ferro sobre uma costura ou uma dobra na peça de roupa.	O ferro pode ser utilizado com segurança em todas as peças de roupa. O brilho ou a marca não é permanente e desaparecerá ao lavar a peça de roupa. Evite passar o ferro por cima de costuras ou dobras. Você também pode colocar um pano de algodão sobre a área na qual o ferro será passado para evitar marcas.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2024 © Versuni Holding B.V.

642001009691 (07/2024)

