



## ENGLISH

**Introduction**  
Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Important

Read this important information carefully before you use the appliance and save it for future reference. This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

### Danger

- Never immerse the appliance in water.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself shows visible damage, or if the appliance functions abnormally in any way, or if the appliance has been dropped or leaked.
- Do not immerse the iron or (for cordless iron) in water.
- If the mains cord is damaged, you must have it replaced by Philips, or a service centre, authorised by Philips or a registered repairer.
- Never move the appliance unswitched and when it is connected to the mains.
- The appliance must not be stored until it has cooled.
- Always unplug the appliance from the socket outlet before you fill the water reservoir. For cordless, the iron must be removed from the base before you fill the water reservoir.
- Cordless Iron must only be used with the base provided.
- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the need to follow the instructions.
- Do not allow children to play with the appliance.
- Older children aged 8 or over are only allowed to clean the appliance and perform the Calc-Clean procedure under supervision.
- Keep the iron and its mains cord out of the reach of children less than 8 years of age when the appliance is switched on or cooling down.
- Always place the base (for cordless iron) and the iron on a stable, level and horizontal surface.
- The appliance must be used and placed on a flat, stable, heat-resistant surface. When you place the iron on its heel or its stand, make sure that the surface on which you place it is stable.
- Do not let the mains cord come into contact with the hot soleplate of the iron.
- (For cordless Iron) Do not ironing with the base attached to the iron. Otherwise, the supply cord will get damaged. The steam iron is designed for cordless ironing only.

### CAUTION: Hot surface (Fig. 1)

- Surfaces are liable to get hot during use (for irons with 'hot' symbol marked on the appliance).

### Caution

- Only connect the appliance to an earthed wall socket.
- Check the mains cord regularly for possible damage.
- The soleplate of the iron can become extremely hot and may cause burns if touched.
- Descal the iron regularly according to the instructions in Chapter 'Cleaning and maintenance' in the user manual.
- When you have finished ironing when you clear the appliance, when you fill or empty the water tank and also when you leave the iron even for a short while: set the steam control to 'dry ironing' position, put the iron on its heel and remove the mains plug from the wall socket.
- Type of water to use: The appliance is suitable to use with tap water. However, if you live in an area with hard water, we recommend that you mix an equal amount of tap water with distilled or demineralized water. This will prevent scale build up and prolong the lifetime of the appliance.
- Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.
- The plug must only be connected to a socket with the same technical characteristics as plug.
- The filling hole must not be open during operation.

### Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

### Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

### India E-Waste Statement

The product is in conformance with the restriction of hazardous substances requirement as per the India E-Waste Rule 2022.

### Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website [www.philips.com/support](http://www.philips.com/support).

### For Australia and New Zealand only

Our goods and services come with guarantees that cannot be excluded under the Australian Consumer Law, or under the Consumer Guarantees Act (NZ). You are entitled to a replacement or a refund for a major failure and compensation for any other reasonably foreseeable loss or damage. If a failure with the goods does not amount to a major failure, you are entitled to have the goods repaired or replaced in a reasonable time. If this is not done you are entitled to a refund for the goods and obtain a refund.

### Versuni Australia

To make a claim under this warranty, contact: Versuni Australia on 1300 805 865 (AU) or 0800 854885 (NZ). Expenses of claiming the warranty will be borne by the person making the claim. This warranty is provided by Versuni Australia, 65 Epping Road North Ryde, Sydney NSW

## BAHASA INDONESIA

### Pendahuluan

Selamat atas pembelian Anda dan selamat datang di Philips! Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, daftarkan produk Anda di [www.philips.com/welcome](http://www.philips.com/welcome).

### Penting

Berikut informasi penting ini dengan saksama sebelum menggunakan alat dan simpanlah untuk referensi.

Atas ini dirilisnya hanya untuk pemakaian rumah tangga. Pemakaian komersial, pemakaian yang tidak tepat, atau gagal mematuhi petunjuk pemakaian, maka produsen tidak bertanggung jawab dan garansi akan tidak berlaku.

### Bahaya

- Jangan sekali-kali merendam alat di dalam air.

### Peringatan

- Periksa apakah voltase pada alat sesuai dengan voltase listrik di rumah Anda, sebelum menghubungkan alat.

Jangan menggunakan alat jika steker, kabel listrik atau alat itu sendiri menunjukkan kerusakan, atau jika alat tidak berfungsi secara normal, atau jika alat pernah terjatuh atau bocor.

Jangan gunakan alat jika steker, kabel listrik atau alat tersebut terjatuh atau bocor.

Jika kabel listrik rusak, maka harus diganti oleh Philips, pasti layanan resmi Philips, atau orang yang mempunyai keahlian sejenis agar terhindar dari bahaya.

Jangan gunakan setrika sejauh apa pun jika tidak terikat pada bocor.

Jangan gunakan setrika jika kabelnya terikat pada bocor.

Apabila setrika tidak berfungsi secara normal, atau jika alat pernah terjatuh atau bocor.

Jangan gunakan setrika jika kabelnya terikat pada bocor