





ThinkPad T14 Gen 4 / ThinkPad P14s Gen 4
ThinkPad T16 Gen 2 / ThinkPad P16s Gen 2



Get started

Get started | Get started | Get started | Get started | Get started

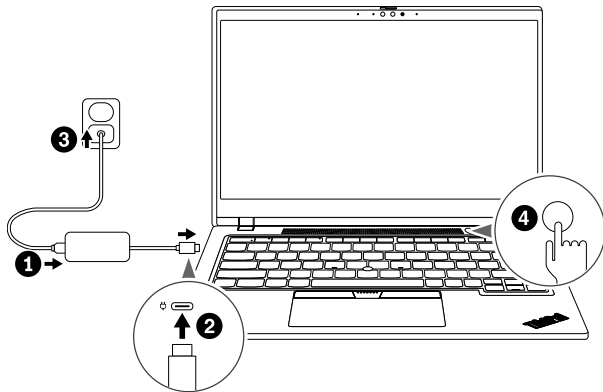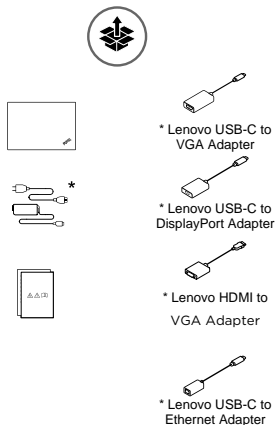


* For selected models | For selected models | For selected models | For selected models | For selected models

Front view

Front view | Front view | Front view | Front view | Front view

T14 Gen 4 / P14s Gen 4

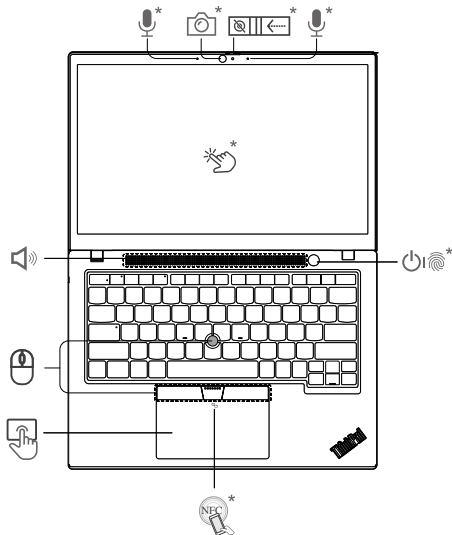

Press to log in to the computer*
Press to log in to the computer*
Press to log in to the computer*
Press to log in to the computer*
Press to log in to the computer*
Press to log in to the computer*



Navigate as a traditional mouse
Navigate as a traditional mouse
Navigate as a traditional mouse
Navigate as a traditional mouse
Navigate as a traditional mouse
Navigate as a traditional mouse
Navigate as a traditional mouse

Front view

Front view | Front view | Front view | Front view | Front view

T16 Gen 2 / P16s Gen 2



Press to log in to the computer*

Press to log in to the computer*

Press to log in to the computer*

Press to log in to the computer*

Press to log in to the computer*

Press to log in to the computer*



Navigate as a traditional mouse

Navigate as a traditional mouse


Navigate as a traditional mouse

Navigate as a traditional mouse

Navigate as a traditional mouse


Navigate as a traditional mouse

Navigate as a traditional mouse

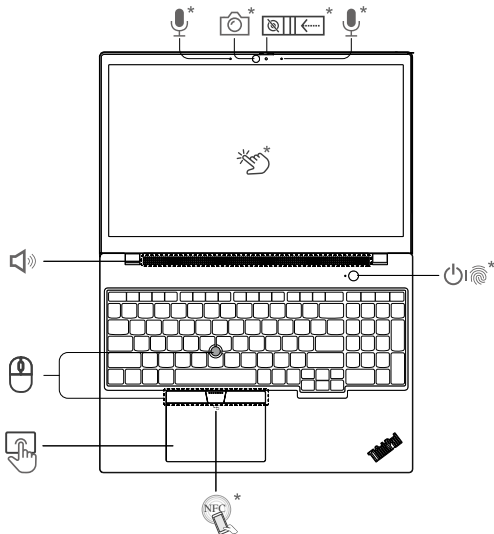

Overview

Overview | Overview | Overview | Overview | Overview

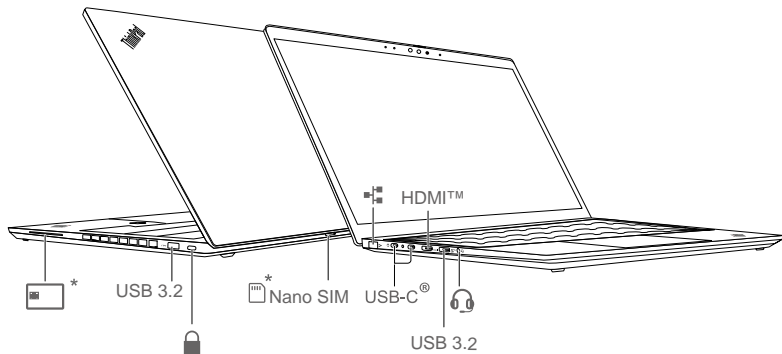

Read the statement on USB transfer rate in the User Guide. To access the User Guide, go to <https://pcsupport.lenovo.com>.
Read the statement on USB transfer rate in the User Guide. To access the User Guide, go to <https://pcsupport.lenovo.com>.
Read the statement on USB transfer rate in the User Guide. To access the User Guide, go to <https://pcsupport.lenovo.com>.
Read the statement on USB transfer rate in the User Guide. To access the User Guide, go to <https://pcsupport.lenovo.com>.
Read the statement on USB transfer rate in the User Guide. To access the User Guide, go to <https://pcsupport.lenovo.com>.
Read the statement on USB transfer rate in the User Guide. To access the User Guide, go to <https://pcsupport.lenovo.com>.

Lenovo Commercial Vantage*

Access Commercial Vantage to adjust device settings and check for system updates.

Access Commercial Vantage to adjust device settings and check for system updates.


Access Commercial Vantage to adjust device settings and check for system updates.

Access Commercial Vantage to adjust device settings and check for system updates.

Access Commercial Vantage to adjust device settings and check for system updates.

Access Commercial Vantage to adjust device settings and check for system updates.

Access Commercial Vantage to adjust device settings and check for system updates.

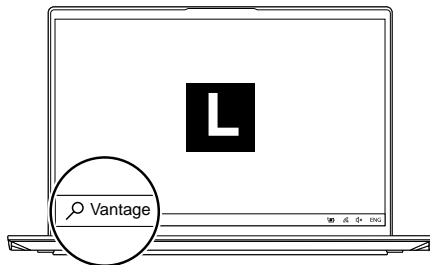

Lock on leave¹



Protect your privacy and improve battery life.

Protect your privacy and improve battery life.

Protect your privacy and improve battery life.

Protect your privacy and improve battery life.



Protect your privacy and improve battery life.

Protect your privacy and improve battery life.


Protect your privacy and improve battery life.

¹ For infrared camera models only | For infrared camera models only | For infrared camera models only | For infrared camera models only | For infrared camera models only


Lenovo View*




Video Enhancer | Video Enhancer
Video Enhancer | Video Enhancer
Video Enhancer | Video Enhancer

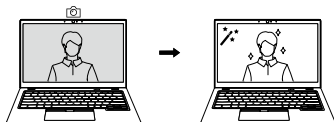


Background Removal | Background Removal
Background Removal | Background Removal
Background Removal | Background Removal

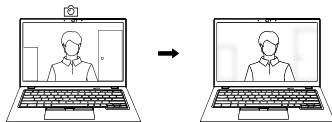

Privacy Guard | Privacy Guard | Privacy Guard
Privacy Guard | Privacy Guard | Privacy Guard

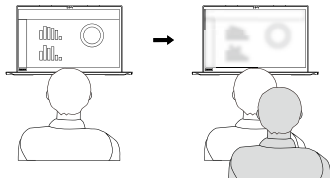

Posture Warning | Posture Warning | Posture Warning
Posture Warning | Posture Warning | Posture Warning

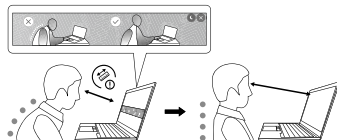

[English]

Specific absorption rate (SAR)

YOUR DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Refer to the following for 10g SAR limit and maximum reported SAR values:

10g SAR limit: 2 W/kg (body-worn SAR); 4 W/kg (limb SAR)

Maximum SAR with 0 mm separation distance:

Product name	Body-worn SAR value	Limb SAR value
ThinkPad T14 Gen 4/P14s Gen 4	1.551 W/kg	2.412 W/kg
ThinkPad T16 Gen 2/P16s Gen 2	1.547 W/kg	3.104 W/kg

For more information about SAR, refer to the *Safety and Warranty Guide* that came with your device.

European Union (EU) / United Kingdom (UK) — radio frequency and power

This radio equipment operates with the following frequency bands and maximum radio-frequency power:

Technology	Frequency [MHz] / band	Maximum transmit power
WLAN 802.11b/g/n/ax	2400 - 2483.5	< 20 dBm
WLAN 802.11a/n/ac/ax	5150 - 5725	< 23 dBm
WLAN 802.11a/n/ac/ax	5725 - 5875	< 13.98 dBm
WLAN 802.11ax	5945 - 6425	< 23 dBm
Bluetooth BR/EDR/LE	2400 - 2483.5	< 20 dBm
WWAN UMTS	1/8	< 25.5 dBm
WWAN LTE	1/3/7/8/20/28/34/38/40/41/42/43	< 25.5 dBm
WWAN LTE HPUE	41	< 26 dBm
NFC	13.56	< -5.31 dBμA/m@10m

Note: Not all wireless bands may be enabled depending on your product configuration.

Usage of this device is limited to indoor locations in the bands 5150 - 5350 MHz and 5945 - 6425 MHz.

For Barcode Position Only

Printed in China

Lenovo

First Edition (July 2023)

© Copyright Lenovo 2023.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Lenovo, Lenovo logo, ThinkPad, and ThinkPad logo are trademarks of Lenovo. The terms HDMI and HDMI High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. USB-C is a registered trademark of USB Implementers Forum. All other trademarks are the property of their respective owners.



Reduce
Reuse
Recycle

For FSC Mix logo only