

SMART 100_B

SMART 100_T

SMART 120

POLTI Vaporetto®

MANUALE DI ISTRUZIONI

INSTRUCTION **MANUAL**
MANUEL D'INSTRUCTIONS

MANUAL DE INSTRUCCIONES
BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES

REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTRE O SEU PRODUTO
www.polti.com



POLTI VAPORETTO SMART 120

POLTI VAPORETTO SMART 100_B

POLTI VAPORETTO SMART 100_T



SPAZZOLA PAVIMENTI

BRUSH FOR FLOORS
BROSSE SOLS
CEPILLO DE SUELOS
FUßBODENBÜRSTE
ESCOVA PAVIMENTOS



TUBI PROLUNGA

EXTENSION TUBES
TUBES RALLONGE
TUBOS RÍGIDOS
VERLÄNGERUNGSRÖHRE
TUBOS EXTENSÃO



SPAZZOLA PICCOLA CON TERGIVETRO

SMALL BRUSH WITH WINDOW CLEANER
PETITE BROSSE AVEC RACLETTE
CEPILLO PEQUEÑO CON LIMPIACRISTALES
KLEINE BÜRSTE MIT FENSTERWISCHER
ESCOVA PEQUENA COM LIMPA-VIDROS



N. 3 only SMART 120

PANNO PAVIMENTI

FLOOR CLOTH
SERPILLIÈRE POUR SOLS
PAÑO DE SUELOS
BODENREINIGUNGSTUCH
PANO PAVIMENTOS



only SMART 100_T

only SMART 120

ACCESSORIO PER FUGHE

ACCESSORY FOR GROUTING
ACCESSOIRE POUR LES JOINTS
ACCESORIO PARA JUNTAS
FUGENZUBEHÖR
ACESSÓRIO PARA REJUNTES



TELAIO PER TAPPETI E MOQUETTE

FRAME FOR CARPETS AND RUGS
CHÂSSIS POUR TAPIS ET MOQUETTE
CHASIS PARA ALFOMBRAS Y MOQUETAS
RAHMEN FÜR TEPPICHEN UND TEPPICHBÖDEN
ESTRUTURA PARA TAPETES E ALCATIFAS



only SMART 100_T

only SMART 120

SPAZZOLINO TONDO GRANDE CON SETOLE IN NYLON

LARGE ROUND BRUSH WITH NYLON BRISTLES
GRANDE BROSSE RONDE AVEC POILS EN NYLON
CEPILLO REDONDO GRANDE CON CERDAS DE NYLON
GROßE RUNDBÜRSTE MIT NYLONBORSTEN
ESCOVA REDONDA GRANDE COM CERDAS DE NYLON



N. 2 only SMART 120

CUFFIA PER SPAZZOLA PICCOLA

SOCKETTE FOR SMALL BRUSH
BONNETTE POUR PETITE BROSSE
FUNDA PARA CEPILLO PEQUEÑO
HAUBE FÜR KLEINE BÜRSTE
PROTEÇÃO PARA ESCOVA PEQUENA



only SMART 100_B

only SMART 120

SPAZZOLINO ROSSO TONDO PICCOLO CON SETOLE IN NYLON

SMALL RED ROUND BRUSH WITH NYLON BRISTLES
PETITE BROSSE ROUGE RONDE AVEC POILS EN NYLON
CEPILLO ROJO REDONDO PEQUEÑO CON CERDAS DE NYLON
KLEINE ROTE RUNDBÜRSTE MIT NYLONBORSTEN
ESCOVINHA VERMELHA REDONDA PEQUENA COM CERCAS EM NYLON



CONCENTRATORE VAPORE

STEAM CONCENTRATOR
CONCENTRATEUR VAPEUR
CONCENTRADOR VAPOR
DAMPFKONZENTRIERER
CONCENTRADOR DE VAPOR



SPAZZOLINO NERO TONDO PICCOLO CON SETOLE IN NYLON

SMALL BLACK ROUND BRUSH WITH NYLON BRISTLES
PETITE BROSSE NOIRE RONDE AVEC POILS EN NYLON
CEPILLO NEGRO REDONDO PEQUEÑO CON CERDAS DE NYLON
KLEINE SCHWARZE RUNDBÜRSTE MIT NYLONBORSTEN
ESCOVINHA PRETA REDONDA PEQUENA COM CERDAS EM NYLON



only SMART 100_B

only SMART 120

SPATOLA

SPATULA
SPATULE
ESPÁTULA
SPACHTELEINSATZ
ESCOVA





OPTIONAL

PAEU0094



kalstop
ANTICALCARE NATURALE
 NATURAL ANTI-LIMESCALE
 FORMULA ANTI-CALCAIRE NATUREL
 ANTICAL NATURAL
 NATÜRLICHER KALKLÖSER
 ANTICÁLCARIO NATURAL

PAEU0282



KIT 6 CUFFIE
 KIT 6 SOCKETTES
 KIT 6 BONNETTES
 KIT 6 FUNDAS
 KIT 6 HAUBEN
 KIT 6 PROTEÇÕES

PAEU0285



FRESCOVAPOR

CONFEZIONE 2 FLACONI DEODORANTE (2 x 200 ml)
 PACK OF 2 BOTTLES DEODORISER (2 x 200 ml)
 PACK DE 2 BOUTEILLES DE DÉSODORISANT (2 x 200 ml)
 PACK DE 2 BOTELLAS DESODORIZANTES (2 x 200 ml)
 PACKUNG MIT 2 RAUMDUFTFLÄSCHEN (2 x 200 ml)
 EMBALAGEM COM 2 FRASCOS DESODORIZANTES (2 x 200 ml)

PAEU0332



KIT 2 PANNI IN MICROFIBRA
 KIT OF 2 MICROFIBRE CLOTHS
 KIT 2 SERPILLIÈRES MICROFIBRES
 KIT 2 PAÑOS DE MICROFIBRA
 SET 2 MIKROFASERTÜCHER
 KIT 2 PANOS EM MICROFIBRA

PAEU0344



KIT 3 SPAZZOLINI ASSORTITI
 KIT OF 3 ASSORTED BRUSHES
 KIT 3 BROSSES ASSORTIE
 KIT 3 CEPILLOS SURTIDOS
 SET 3 VERSCHIEDENE BÜRSTEN
 KIT DE 3 ESCOVINHAS SORTIDAS

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici, nei Centri Assistenza autorizzati e sul sito www.polti.com.

The optional accessories are on sale at all the best domestic appliance retailers, an Authorised Polti Service Centre or online at www.polti.co.uk.

Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers, un SAV agréé ou sur le site www.polti.fr.

Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos, Centros de Asistencia Autorizadoo en la página web www.polti.com.

Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften, bei den Autorisierten Kundendienstcenter oder auf www.poltide.de erhältlich.

Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos, num dos Centros de Assistência Autorizados ou no site www.polti.com.

WELCOME TO THE WORLD OF POLTI VAPORETTO

POLTI VAPORETTO IS A CLEANING SYSTEM FOR ALL DOMESTIC SURFACES
IT KILLS 99.99% OF GERMS AND BACTERIA AND REMOVES THEM WITHOUT THE USE OF
CHEMICAL DETERGENTS.



ACCESSORIES FOR ALL NEEDS

On our web site **www.polti.co.uk** and in good appliance shops you will find a wide range of accessories to increase the performance and the practical applications of your appliances to make home cleaning even easier.

To check the compatibility of an accessory with your appliance, search the code PAEUXXXX listed next to each accessory on page 4.

If the accessory code you wish to buy is not listed in this manual, please contact our Customer Service team for more information.



REGISTER YOUR PRODUCT

Visit our website **www.polti.co.uk** or call our Customer Services department to register your product. You can benefit from a special welcome offer, in participating countries, and keep up to date on all the latest Polti news, as well as buy accessories and consumables.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the silver label, located on the box and underneath the appliance.

To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



OFFICIAL YOUTUBE CHANNEL

Want to know more? Visit our official channel:
www.youtube.com/poltispa.

We will show you the effectiveness of the natural and ecological power of steam both for ironing and cleaning, with many videos of the Polti Vaporetto and all the other products from the world of Polti.

Sign up to the official channel to keep yourself updated about our video contents!

ATTENTION: The safety warnings are only indicated on this manual.

SAFETY WARNINGS

IMPORTANT PRECAUTIONS FOR USE



WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.

Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Correct use of the product is only as detailed in this instruction manual.

Any use which does not comply with these instructions will invalidate the warranty.

SAFETY SYMBOLS:



WARNING: High temperature. Risk of scalding!

If shown on the product, do not touch as parts may be very hot.



WARNING: Steam.
Risk of scalding!

This appliance reaches very high temperatures. Incorrect use of the device can cause scalding.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not try to repair the appliance yourself. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.
- This appliance must not be used if it has been dropped, if there are visible signs of damage or if it leaks.
- The plug must be removed from the socket before the tank/boiler is filled with water.
- During use there is pressure inside the boiler. Do not remove the boiler cap if the equipment is switched ON.

- To carry out any maintenance or cleaning requiring access to the boiler, ensure that the appliance is switched off at the power switch and disconnected from the mains for at least two hours.
- Always unplug the appliance if it is not in use.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must be supervised to ensure they do not play with the appliance.
- Keep the appliance out of reach of children when it is plugged in or cooling down.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.
- The appliance must not be left unattended if plugged in to the mains.
- Steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- This appliance is intended exclusively for indoor domestic use.

In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the basic precautions listed in this manual.

RISKS CONNECTED TO THE POWER SUPPLY-ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances.
Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.

- Do not overload sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.
- Do not use electrical extension leads that are unsuitable for the power rating or which are not compliant with the law. They may overheat and possibly lead to short circuiting, fire, power outage or damage to the equipment. Only use extension leads which are certified, suitable for the power rating, supporting 16A and earthed.
- Always turn the appliance off at the ON/OFF switch before unplugging it.
- To remove the plug from the socket, do not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.
- Fully unwind the cable from the cable winder before connecting the appliance to the mains and before use. Always use the product with the cable completely unwound.
- Do not pull or jerk the cable or expose it to stresses (twisting, crushing or stretching). Keep the cable away from hot and/or sharp surfaces and elements. Avoid crushing the cables in doors and windows. Do not pull the cable tightly around corners. Avoid treading on the cable. Do not wind the power cable around the appliance, especially if the appliance is hot. Do not place the appliance on top of the power cable, this can be dangerous.
- Do not change the plug on the power cable.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid all possible hazards. Do not use the product if the power cable is damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use in swimming pools containing water. Do not use the appliance near containers full of water, e.g. sinks, baths and swimming pools.
- Do not immerse the appliance, including the power cable and plug, in water or other liquids.

RISKS DURING USE OF THE PRODUCT - INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not pour toxic substances, acids, solvents, detergents, corrosive substances and/or explosives or perfumes into the boiler.
- Only pour water or the water mix indicated in the section "WHICH WATER TO USE" into the boiler.
- Do not direct the steam jet onto toxic substances, acids, solvents, detergents or corrosive substances.
- Do not direct the steam jet onto explosive powders or liquids, hydrocarbons, open flames or extremely hot objects.
- The handling and removal of dangerous substances must be carried out according to the indications of the manufacturers of these substances.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- Do not position the product near electromagnetic fields such as induction plates.
- Re-wind the cable when the appliance is not in use.
- Use the special carry handle for transport. Do not pull the power cable. Do not use the power cable as a handle. Do not lift the appliance using the power cable or the steam hoses/vacuum tubes.
- Do not obstruct the openings and grills on the product.
- Do not direct the steam jet on any part of the body of people or animals.
- Do not direct the steam jet on clothes while they are being worn.
- Cloths, rugs and fabrics which have been subjected to a deep steam reach very high temperatures, above 100°C. Wait a few minutes and check that they have cooled before handling them. Therefore, avoid contact with the skin if they have just been steamed.
- During use, keep the base in a horizontal position on stable surfaces.
- The steam lock on the handle guarantees greater safety, as it prevents the accidental activation of steam delivery by

children or people who are unaware of the function of the appliance. When steam is not being used, engage the steam lock.

To continue steam delivery, return the switch to its original position.

- Do not connect the appliance with the boiler safety cap removed. Carefully tighten the safety cap before plugging in and turning on the appliance.
- Wait until the iron has cooled down completely before storing after use.

CORRECT USE OF THE PRODUCT

Polti Vaporetto Smart 120 / Smart 100_B / Smart 100_T is intended for internal domestic use as a steam cleaner, in accordance with the descriptions and instructions contained in this manual. Please read these instructions carefully and keep them. This manual is also available on the website **www.polti.co.uk**.

Never leave the appliance exposed to weathering.

POLTI S.p.A. reserves the right to make the aesthetic, technical and construction changes it deems necessary, without prior notice.

Before leaving our factory all our products are rigorously tested. This is the reason why your Polti Vaporetto may contain some residual water in the boiler.

Correct use of the product is only as detailed in this instruction manual. Any other use may damage the appliance and invalidate the warranty.

INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU.



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste. Therefore, at the end of its life, the user must hand over the appliance to an appropriate collection centre for electric and electronic waste or, according to the legislation in force in the country, leave the used appliance with the distributor when buying a new product to replace it. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner may result in the sanctions envisaged by current legislation.

WHICH WATER TO USE IN THE BOILER

Polti Vaporetto Smart 120 / Smart 100_B / Smart 100_T has been designed to function with normal medium tap water between 8°F and 20°F. If the tap water contains a lot of limescale use a mix composed of 50% tap water and 50% demineralised water which is widely available to purchase. Do not use pure demineralised water.

Warning: check the hardness of the water at the technical office at your local council or the local water supplier.

If you only use tap water, you can reduce the formation of limescale by using the special **Kalstop (PAEU0094)** anti-limescale product, distributed by Polti, and available for sale at all major domestic-appliance stores or online at **www.polti.co.uk**.

Never use distilled water, rain water or water containing additives (e.g. starch, perfumes), or water produced by other domestic appliances, by water softeners or filter jugs. Do not add chemical, natural, detergent, or limescale removing substances, etc.

1. PREPARING FOR USE

1.1 Remove the appliance from the packaging, checking that the product is whole and that all the parts are included.

1.2 Turn the tank cap (1) and fill the tank completely with water (2), making sure that it does not overflow. The tank is removable and can also be detached to fill it easily under a tap (3).

This operation must always be carried out with the power cable disconnected from the mains.

Thanks to the auto refill system, it is not necessary to wait for the appliance to cool and the tank can be filled as needed.

1.3 Close the tank cap (1).

1.4 Insert the steam lock of the flexible hose (4). The steam gun has a safety button that prevents accidental start of steam delivery by children or people unfamiliar with how the appliance works. To prevent accidental steam delivery push the button to the OFF position (4). To restart steam delivery, push the button to the ON position (4).

1.5 Connect the cable plug to an earthed power supply of the correct voltage(5).

Completely unwind the power cable before plugging it into the mains and before use, and always use the appliance with the power cable completely unwound.

1.6 Press the ON/OFF switch (6). The power indicator light A will come on.

1.7 Wait for the "steam ready" indicator light C to come on (approx. 2 minutes). Polti is now ready for use.

The "steam ready" C (8) indicator light comes on and goes off during use. This means that the electrical resistance is working to maintain constant pressure: it is a normal phenomenon and you can continue with your cleaning operations.

WARNING: When first operating steam, there may be some drops of water mixed with the steam due to temperature imbalances. Direct the first steam jet onto a cloth for a few seconds.

2. CONNECTION OF ACCESSORIES

2.1 To attach the extension hose to the flexible hose and the floor brush, simply insert until you hear the button click indicating that the accessory is locked in place (9). To release the accessories simply hold the button down and separate the components (9). Before using the accessories, make sure that they are firmly in place.

2.2 To connect the small brush, the steam concentrator or the brushes to the flexible hose or to the extension hoses insert the accessories and then turn them until they are locked in place (10)(11).

3. STEAM ADJUSTMENT

You can optimise the steam flow by means of the steam adjustment knob (7). You can increase the steam flow by turning the control in an anti-clockwise direction. Turning it in a clockwise direction reduces the steam flow. Here are some suggestions for the choice of steam flow level:

- **Maximum level:** for encrusted dirt, stains, sanitising, grease.
- **Medium level:** for carpets, rugs, glass, tiles etc.
- **Minimum level:** for vaporising plants and cleaning delicate fabrics, upholstery, wallpaper, parquet, laminate, etc.

WARNING: In case of excessive humidity, reduce the quantity of steam.

4. CLEANING FLOORS

Before using the appliance on delicate surfaces, ensure that the part in contact with the surface is free from foreign bodies that could cause scratches.

Before starting to steam clean, it is good practice to have previously swept or vacuumed the floor.

4.1 Make sure that Section 1 has been followed and connect the accessories as indicated in Section 2.

4.2 Connect the extension tubes to the steam hose and the floor brush to the extension tubes.

4.3 Attach the supplied cloth to the floor brush. To make it easier to attach, the cloth has an easy lock/release system to avoid having to bend over and use your hands. Just place the cleaning side of the cloth on the floor and rest the brush on top (12).

4.4 Adjust the intensity of the steam by turning the adjustment knob (7); for this type of surface we recommend **Medium level** steam.

4.5 Deactivate the steam lock (4) and continue with steam delivery, pressing the steam trigger on the handle of the steam hose (4).

4.6 Clean the floors by moving the brush.

The brush has a flexible joint that makes it possible to reach the most difficult-to-reach areas (under furniture, under beds, etc.).

The brush has bristles built into the rear side (13) ideal for removing the most stubborn dirt. To use, return the handle to the vertical position locking the brush, then tilt until the brushes are touching the floor and scrape off the dirt.

At the end of the cleaning operations, the cloth can be removed from the brush by pressing with a foot on the tab of the cloth and pulling upwards on the extension tubes connected to the brush.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool.

WARNING: Do not use the appliance without the cloth.

WARNING: For additional safety, test steam delivery on a hidden area, leave the steamed area to dry to ensure that no changes in colour or deformations have occurred.

5. CLEANING CARPETS AND RUGS

WARNING: Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.

5.1 Make sure that Section 1 has been followed and connect the accessories as indicated in Section 2.

5.2 Connect the extension tubes to the steam hose and the floor brush to the extension tubes. Insert the brush with the cloth attached (see point 4.3) in the special frame for sliding on rugs (14).

5.3 Adjust the intensity of the steam by turning the adjustment knob (7); for this type of surface we recommend **Medium level** of steam.

5.4 Deactivate the steam lock (4) and continue with steam delivery, pressing the steam trigger on the handle of the steam hose (4).

5.5 Pass the floor brush over the surface.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool. After which, remove the frame by resting the foot on the relative symbol and then remove the cloth by holding it firm with the foot resting on the tab and pulling the brush up.

6. CLEANING GLASS, WINDOWS AND TILES

WARNING: To clean glass surfaces during cold weather, preheat the windows starting to steam from a distance of about 50 cm from the surface.

6.1 Make sure that Section 1 has been followed and connect the accessories as indicated in Section 2.

6.2 Adjust the intensity of the steam (7) with the special handle; for this type of surface we recommend **Medium level** of steam.

6.3 Ensure that the steam lock on the handle is deactivated (4).

6.4 To clean windows and mirrors, steam the surface thoroughly to dissolve the dirt. Connect the small brush with window cleaner to the flexible hose and go back over the surface to remove the dirt, without dispensing steam. The extension hoses can be connected to the flexible hose to reach high surfaces.

6.5 To clean tiles, attach the cap to the small brush and pass over the surface, dispensing steam, in order to eliminate the dirt. The extension hoses can be connected to the handle to reach high surfaces.

6.6 We recommend keeping a microfiber cloth close at hand (Polti Vaporetto Microfiber Cloths for manual use PAEU0231) to complete the cleaning operations and dry the dirt dissolved by steam.

7. CLEANING UPHOLSTERY, ARMCHAIRS, CUSHIONS (mattresses, sofas, car interiors, etc.)

WARNING: Before cleaning leather or fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.

7.1 Make sure that Section 1 has been followed and connect the accessories as indicated in Section 2.

7.2 Connect the small brush to the steam hose.

7.3 Attach the cap to the small brush.

7.4 Adjust the intensity of the steam by turning the adjustment knob (7); for this type of surface we recommend **Minimum level** of steam.

7.5 Ensure that the steam lock on the handle is deactivated (4).

7.6 Hold the steam trigger down (4) on the handle and pass over the surface.

8. CLEANING BATHROOM FIXTURES, GROUTING AND KITCHEN WORKTOPS

8.1 Make sure that Section 1 has been followed and connect the accessories as indicated in Section 2.

8.2 Connect the most suitable accessory depending on requirements:

- steam concentrator, ideal for cleaning bathroom fixtures, the bathroom, hob burners.
- large round brush for removing encrusted dirt from large surfaces (**only for Polti Vaporetto Smart 120/100_T**).
- small black round brush for removing encrusted dirt.
- small red round brush for removing

encrusted dirt (**only for Polti Vaporetto Smart 120/100_B**).

The different colour makes it possible to assign each brush to a certain surface or a certain environment.

- grout accessory to clean between tiles or to remove dirt from very narrow surfaces (**only for Polti Vaporetto Smart 120/100_T**).
- spatula for removing stubborn dirt from cooking pans and hobs (**only for Polti Vaporetto Smart 120/100_B**).

8.3 Adjust the intensity of the steam by turning the adjustment knob (7); for this type of surface we recommend **Maximum level** of steam.

8.4 Ensure that the steam lock on the handle is deactivated (4).

8.5 Press and hold the steam trigger on the handle (4) and steam the surface generously to dissolve the dirt. Use a dry cloth to remove the dirt dissolved by the steam. It is possible to connect one of the following accessories, recommended for removing encrusted dirt from very narrow surfaces, to the flexible handle: steam concentrator, small round brush, or large round brush.

9. CLEANING FURNITURE AND DELICATE SURFACES

WARNING: Do not direct the steam jet directly onto surfaces.

WARNING: Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden area or on a sample of the material.

9.1 Make sure that Section 1 has been followed and connect the accessories as indicated in Section 2.

9.2 Adjust the intensity of the steam by turning the adjustment knob (7); for this type of surface we recommend **Minimum level** of steam.

9.3 Press and hold the steam trigger on the handle (4) and direct the jet onto a cloth (Polti Vaporetto Microfiber Cloths for manual use PAEU0231).

9.4 Use the steamed cloth to clean the surface, avoiding prolonged use on the same spot.

10. OTHER GENERAL USES

WARNING: Before cleaning the surface, always do a test on a hidden area and see how it reacts to the application of steam.

10.1 BRIGHTENING UP CURTAINS AND DRAPES

Mites and dust can be removed from curtains and drapes by steaming the fabric with just the handle. The steam can remove odours and brighten up colours, allowing the fabric to be washed less frequently.

For this surface, set the steam to **Minimum level**.

10.2 REMOVING STAINS FROM CARPETS AND UPHOLSTERY



WARNING: Steam.
Risk of scalding!

Direct the steam directly onto the stain with the greatest angle possible (never vertically with respect to the surface to be cleaned) and place a cloth beyond the stain to collect the dirt that has been "blown" away by the steam pressure.

For this surface, set the steam to **Minimum level**.

10.3 TAKING CARE OF PLANTS AND HUMIDIFYING ROOMS

To care for your house plants, remove the dust from the leaves using the steam. Steam the surface directly from the handle, at a minimum distance of 50 cm, adjust the steam to the **Minimum level**.

Plants breathe better and will be cleaner and brighter. The steam can also be used to refresh rooms, especially those frequented by smokers: steam the room by directing the jet towards the ceiling and distributing evenly.

11. OUT OF WATER

A lack of water in the boiler is indicated by the out-of-water light B (8) coming on.

To resume use, simply:

- switch off and disconnect the Polti Vaporetto.
- fill the tank as described in Section 1.
- connect the Polti Vaporetto and turn it back on.

WARNING: This operation must always be done after having disconnected the appliance from the mains.

12. GENERAL MAINTENANCE

Before carrying out any maintenance on the device, always unplug it from the power mains making sure that the product has cooled down before proceeding.

To clean the outside of the appliance, use only a damp cloth and tap water.

All accessories can be cleaned using running water, ensuring they are completely dry before the next use.

Do not use detergents of any type.

After using the brushes, we recommend letting the bristles cool down in their natural position, in order to avoid any deformation.

13. CLEANING THE BOILER (special maintenance)



WARNING: Steam.
Risk of scalding!

WARNING: Risk of scalding! When accessing the boiler (removing the cap, filling up, emptying), ensure that the appliance is switched off at the power switch and disconnected from the mains for at least two hours.

To maintain optimum performance, clean the boiler every 10/20 uses depending on the amount of limestone in the water.

13.1 Unplug the appliance and let it cool down for 2 hours at least, if it is hot.

13.2 Empty the water tank to prevent leakage.

13.3 Place the appliance on its side and unscrew the boiler cap protection (18) located on the side of the appliance.

13.4 Unscrew the boiler cap (19).

13.5 Pour 250 ml of cold water (20) into the boiler.

WARNING: Do not exceed the quantity of water recommended and pour it slowly into the boiler, paying attention not to let it overflow.

13.6 Rinse the boiler and pour the water into the sink or into a special container. If the water is very dirty, repeat the operation until it is clean.

13.7 Insert 100 ml of water in the boiler and screw on the boiler cap and the boiler cap protection, ensuring that they are correctly screwed on.

13.8 Refill the water tank.

13.9 Turn the appliance back on.

Before using steam to clean, direct the jet into a sink or other container until the steam

is completely clean.

WARNING: Do not pour toxic substances, acids, solvents, detergents, corrosive substances and/or explosives or perfumes into the boiler.

14. KALSTOP optional

Kalstop is the anti-limescale product for appliances with boiler for ironing and steam cleaning.

Regular use of Kalstop, every time the tank is filled with water:

- Extends the life of the appliance.
- Allows emission of a "drier" steam
- Prevents limescale build up.
- Protects the walls of the boiler.
- Contributes to saving energy.

Kalstop (PAEU0094) is on sale at household appliance stores, at Polti authorised service centres or on the site www.polti.co.uk.

15. FRESCOVAPOR optional

Polti Vaporetto Smart 120 / Smart 100_B / Smart 100_T has a dispenser, located in the floor brush, to be used exclusively with FrescoVapor, the natural deodorant that, besides leaving a pleasant fragrance, captures bad odours. FrescoVapor (PAEU0285) is an air freshener that contains natural substances. Designed to mix with steam it releases a fresh perfume in every space and, thanks to its special composition, it is able to eliminate bad odours.

To use FrescoVapor, proceed as follows:

- Unscrew the deodorant dispenser cap located on the floor brush and fill it with FrescoVapor (21).
- Tighten the cap (21).
- To start dispensing the deodorant, press the selector located on the brush to the "ON" position to release the deodorant. Press the selector back to the "OFF" position to stop it (22).

WARNING: Never put FrescoVapor into the water tank.

During dispensing of the deodorant, the surfaces may feel slightly damper, since FrescoVapor mixes with the steam being dispensed. To stop dispensing FrescoVapor, move the selector located on the brush to the OFF position.

The selector only controls dispensing of the deodorant that mixes with the steam. It does not regulate the quantity of steam. To adjust the quantity of steam, you must use the steam-adjustment dial (7).

Contents of the FrescoVapor bottle: 200 ml 

FrescoVapor is on sale at household appliance stores, at Polti authorised service centres or on the site **www.polti.co.uk**.

16. STORAGE

16.1 Turn off the appliance and disconnect from the mains electricity.

16.2 Wait for the appliance to cool down completely before storing it.

16.3 It is possible to store the appliance by placing the brush (including the frame) and the hoses in the parking unit (15 - 16).

16.4 The smaller accessories can be stored inside the accessories compartment (17).

17. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not turn on.	No power.	Check that the appliance has been connected to the mains, as indicated in Section 1.
The steam ready indicator light turns on and off during use.	This indicates that the electrical resistor has started to work to keep the pressure constant	It is a normal phenomenon, no action is necessary.
Does not dispense steam.	Out of water.	Add water to the boiler as described in Section 11.
	Steam lock activated.	Deactivate the steam lock on the handle.
	The boiler is not yet pressurised.	Wait until the steam indicator light comes on.
	Steam hose trapped or twisted.	Check that the steam hose is not trapped or twisted.
The appliance is pressurised but little steam comes out.	Steam adjustment dial set to the Minimum level .	Adjust the position of the dial for the desired increase.
Floors that are too wet.	First delivery of steam or after approx. two minutes of inactivity.	Direct the steam jet onto a cloth for a few seconds.
	Steam level too high.	Reduce the quantity of steam.
	Room temperature too cold.	Reduce the quantity of steam and dispense intermittently.
Accessories are difficult to assemble.	The seals produce friction.	Lubricate the seals with silicone grease or Vaseline, or alternatively with a small amount of vegetable oil.
If problems persist or are not listed above, please contact a Polti Authorised Service Centre (www.polti.co.uk for the updated list) or contact Customer Services.		

WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold against the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres or contact Customer Services with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the customer.
- Parts (filter, brush, hose, battery, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

To see the up-to-date list of the Polti Authorised Service Centres, visit the website www.polti.co.uk



POLTI®

NATURAL HOME FEELING

Scopri il mondo e l'offerta completa di Polti sul sito polti.com, iscriviti alla newsletter per restare sempre aggiornato su tutte le novità e le offerte.

Discover the world and the complete offering of Polti on polti.co.uk, sign up for the newsletter to stay up to date on all the news and offers.

Découvrez le monde et l'offre complète de Polti sur polti.fr, inscrivez-vous à la newsletter pour rester informé sur les nouveautés et offres.

Descubra el mundo y la oferta completa de Polti en el sitio web www.polti.com y suscríbase a la newsletter para estar al día de todas las novedades y ofertas.

Entdecken Sie die Welt und die Angebote von Polti auf www.poltide.de und abonnieren Sie unseren Newsletter, um immer über die Neuheiten und Angebote auf dem Laufenden zu bleiben.

Descubra o mundo e a oferta completa da Polti no site polti.com, assine a newsletter para se manter atualizado sobre todas as novidades e ofertas.

www.polti.com



REGISTRA IL TUO PRODOTTO
REGISTER YOUR PRODUCT
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTRE O SEU PRODUTO

SN:



CALL CENTER

ITALIA SERVIZIO CLIENTI	800 162 162
FRANCE SERVICE CLIENTS	04 78 66 42 12
ESPAÑA SERVICIO AL CLIENTE	900 53 53 28
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0161 813 2765
DEUTSCHLAND KUNDENDIENST	03222 109 472 9

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM



POLTI®

NATURAL HOME FEELING

POLTI S.p.A. - Via Ferloni, 83
22070 Bulgarograsso (CO) - Italy
www.polti.com

Follow us:

