


THANK YOU FOR BUYING A WHIRLPOOL PRODUCT

In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register



Before using the appliance carefully read the Safety Instruction.

PRODUCT DESCRIPTION

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

CONTROL PANEL



 
1. Refrigerator temperature - Fast cool
2. Turning off the sound alarm
3. On/stand-by
4. "Eco Night" button
5. Freezer temperature - Fast freeze

6TH SENSE FRESH CONTROL

The appliance is automatically able to quickly reach the optimal internal preservation temperature. The function enables to control also the humidity of the appliance. In order for it to function correctly, the fan must also be turned on. It is possible to turn the function on/off (see Fan description).

FAN*

The Fan improves temperature distribution inside the product, allowing better preservation of stored food and reduction of excess humidity. The fan is switched on by default and can be activate/deactivate by pressing the button on the base (as shown in the figure). If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.

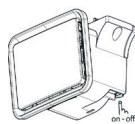

Note: the fan restarts automatically after a power cut or after turning off the appliance. Do not obstruct the air intake area with food items.

ANTIBACTERIAL FILTER*

Remove it from the box placed in the Fruit and vegetable drawer and insert into the cover of fan. The replacement procedure is included in the filter box.

TURNING OFF THE SOUND ALARM

To turn off the sound alarm, briefly press the "Stop Alarm" button.



ECO NIGHT FUNCTION

The Eco night function enables the appliance's energy consumption to be concentrated in the hours that correspond to the cheapest electricity tariff (generally at night), when electricity is freely available and costs less compared to daytime (only in countries that utilize a multi-tariff system based on time of day - check your energy tariff with your local electricity utility company). To activate the function, press the Eco night button at the time the cheap tariff begins (depending on your specific tariff). For example, if the cheap rate begins at 8 pm, press the button at that time. When the Eco night LED is ON, the function is active. Once the function has been activated, the appliance automatically adapts energy consumption based on the time selected, i.e. consuming less energy during the day than at night.

Important: To operate properly, the function must be active during both night and day. The function remains active until deactivated (or it deactivates in the event of a blackout or appliance switch-off). To deactivate the function, press the button again. When the Eco night LED is OFF, the function is not active.

Note: the appliance's declared energy consumption refers to operation with the Eco night function deactivated.



KEY LOCK

The key lock can be activated/deactivated by pressing and holding the "Key Lock" button for 3 seconds, until you hear a confirmation tone (the icon lights up). If you press any button while the key lock is active, you will hear a sound and the "Key Lock" icon will start to flash.



ON/STAND-BY

Press the button for 3 seconds to turn the appliance off. Press the button again briefly to reactivate the appliance.

Note: this does not disconnect the appliance from the power supply.

REFRIGERATOR COMPARTMENT TEMPERATURE

It is possible to set a different temperature with the "Temperature" button.

 
There are five possible controls.

- From a less cold temperature ❄️ (left)
- to a colder temperature ❄️❄️❄️ (right).

FAST COOL

Press the button "Temperature" for 3 seconds to quickly cool the refrigerator compartment or 6 hours before putting large quantities of food to be frozen in the freezing zone. When the function is turned on the icon lights up. The function automatically turns off after 30 hours, or manually by pressing the button again for 3 seconds.

Note: avoid a direct contact between the fresh food and the food that is already frozen. To optimise the freezing speed, drawers can be removed and the food can be placed directly on the bottom of the compartment.




* Available only on certain models

“0° ZONE” COMPARTMENT*


The “0° ZONE” compartment is specifically designed to maintain a low temperature and the correct humidity to preserve fresh food for longer (for example, meat, fish, fruits and winter vegetables).

 Humidity control technology coupled with Active0 provides the best food preservation when the food is not completely packed.

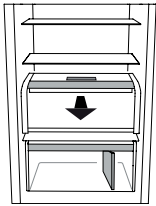

TURNING ON AND TURNING OFF THE COMPARTMENT

 The internal temperature of the compartment is approximately 0° when the compartment is turned on.
To turn on the compartment, press the button (1) for more than one second until the symbol (2) lights up. The lit symbol (2) means that the compartment is working. Press the button (1) again for more than one second to turn off the compartment. The temperature inside depends on the general temperature of the refrigerator.

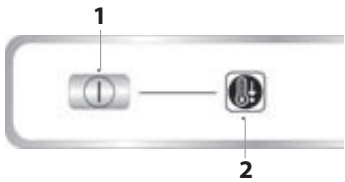

- For the correct functioning of the “0° ZONE” compartment, it is necessary that:
- the appliance is turned on;
 - the fridge temperature is between +2°C and +6°C;
 - the “0° ZONE” compartment is turned on
 - Vacation Mode and Stand by are not selected
- Note:
- if the symbol does not light up when you turn on the compartment, check that the drawer is properly inserted; if the problem persists contact the authorised Technical Assistance Service;
 - when the “0° ZONE” compartment is inserted in the appliance you may hear a faint noise, which you should consider as normal;
- Important:** be careful when positioning food and containers that are small in size on the upper shelf of the “0° ZONE” compartment in order to prevent them accidentally falling between the shelf and the back wall of the refrigerator compartment.

REMOVING THE “0° ZONE” COMPARTMENT

 
- Carry out the following steps:
1. To make it easier to remove the compartment, we recommend that you empty (and possibly remove) the lower door shelves.
 2. Remove the compartment by rotating it upwards.
 3. Remove the white plastic shelf under the compartment.
- Note: it is not possible to remove the upper shelf and side supports.
- To use the “0° ZONE” compartment again, carefully reposition the white plastic shelf under the compartment before inserting the drawer and turning the function back on.

To have a larger refrigerator volume and to reduce energy consumption, it is recommended to remove the “0° ZONE” compartment.

Clean the compartment and its components occasionally using a cloth and a solution of warm water (taking care not to submerge the white plastic shelf under the drawer) and neutral cleaning agents specifically for cleaning the inside of the refrigerator. Do not use abrasive cleaning agents.

Before cleaning the compartment (also externally) it is necessary to remove the drawer to disconnect the electrical supply.

HOW TO STORE FOOD AND BEVERAGE

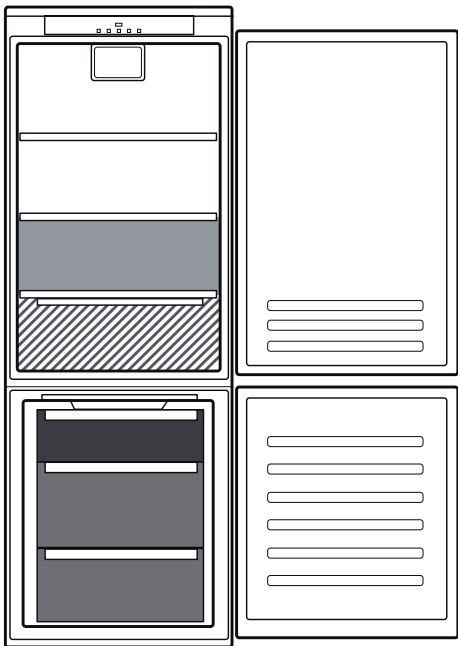

- Legend**
- TEMPERATE ZONE**
Suggested for storage of tropical fruit, cans, drink, eggs, sauces, pickles, butter, jam
 - COOL ZONE**
Suggested for storage of cheese, milk, daily food, delicatessen, yoghurt
 - COOLEST AREA**
Suggested for storage of cold cuts, desserts, meat and fish
 - FRUIT & VEGETABLE DRAWER**
 - FREEZER DRAWERS**
 - FREEZING ZONE DRAWER (Max cool zone)**
Suggested to freeze fresh/cooked food

* Available only on certain models

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance could be in On/Standby mode. There may be an appliance power supply problem.	Activate the appliance with the On/Standby button. Make sure: - there is not a power outage - the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) - the household electrical system protection devices are efficient - the power cable is not broken.
The inside light does not work.	The light may need replacing.	Models with lamp: disconnect the appliance from the power supply, check the lamp and, if necessary, replace it with a new one (see the section "Lamp or LED replacement").
	The appliance could be in On/Standby mode.	Models with LED lights: contact the authorised Service Centre. Activate the appliance with the On/Standby button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Cures").	Make sure: - the doors close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the vents at the bottom of the appliance is not obstructed.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrost water drain hole (see the section "Appliance Maintenance and Cleaning").
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No remedy is necessary.
The red light  flashes and an acoustic alarm sounds.	Door open alarm Activated when a door remains open for a long period of time.	To deactivate the acoustic alarm temporarily, press the alarm deactivation button; to eliminate it completely, close the refrigerator door again.
The red light  comes on and the refrigerator compartment temperature indicators flash, as indicated in the figure: 	Malfunction alarm The alarm indicates a fault in a technical component.	Call the authorised Service Centre. Press the "Stop Alarm" button to deactivate the acoustic signal.



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website docs.whirlpool.eu
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.



Whirlpool



400011195014