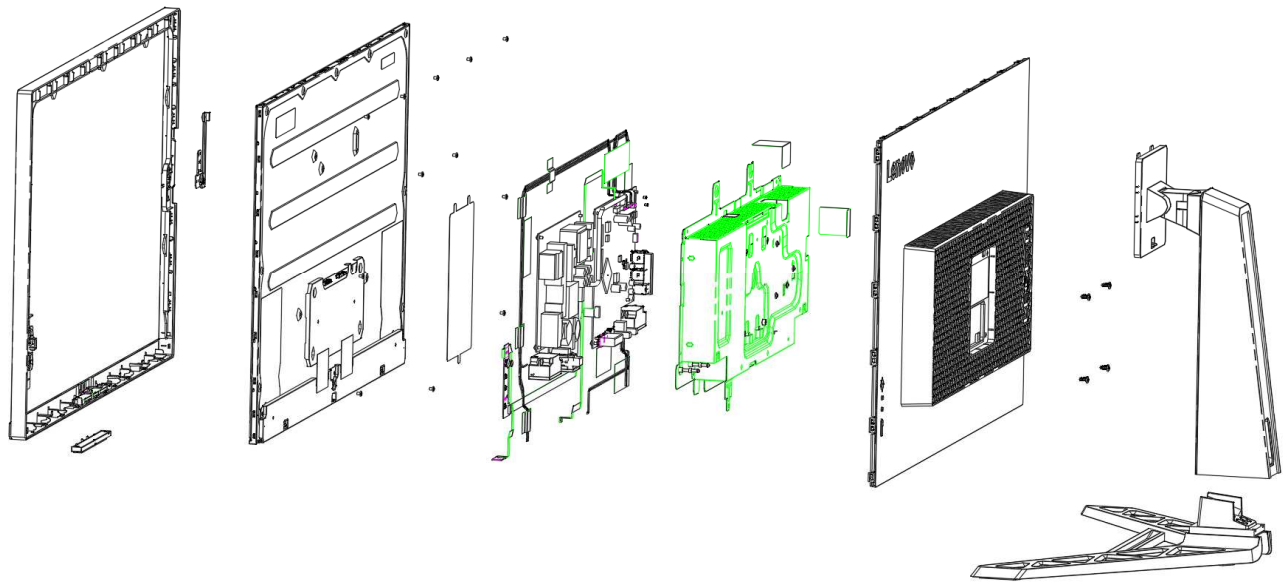


Y32p-30 Simplified service manual for dismantling

Model Name: Lenovo Y32p-30

Exploded Diagram



1. Precaution

Please read the precaution as follows to prevent any damages to the LCD Monitor.

Make sure all power connector is removed. Be sure that the LCD Monitor is in power off status.

Prepare soft cloth and sponge as working platform to place LCD monitor horizontally.







Hold LCD by the side carefully and DON'T touch or press panel directly.



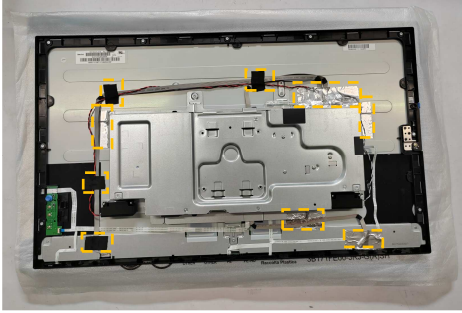
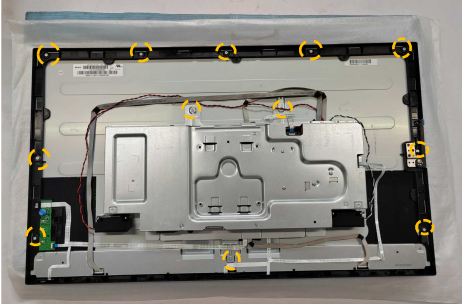

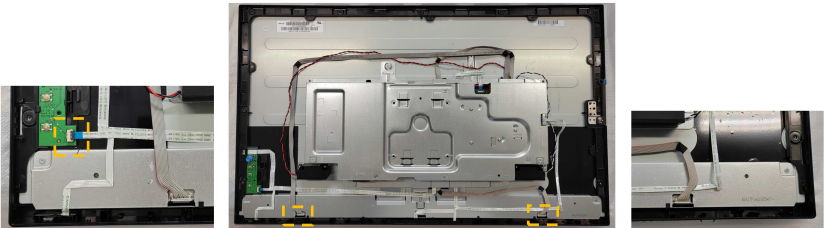
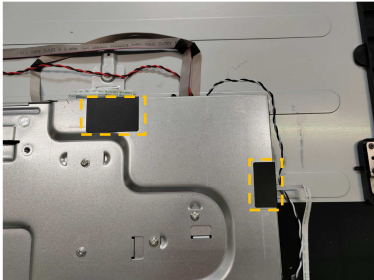
2. Appropriate tools

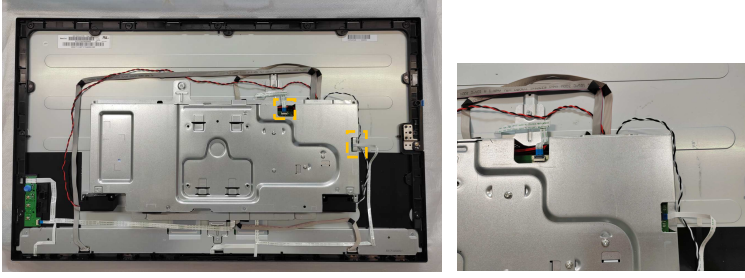
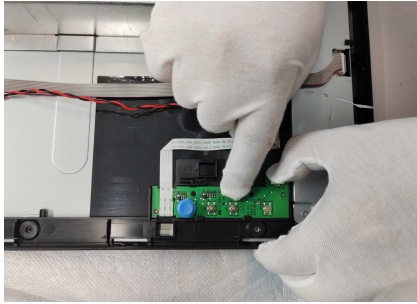
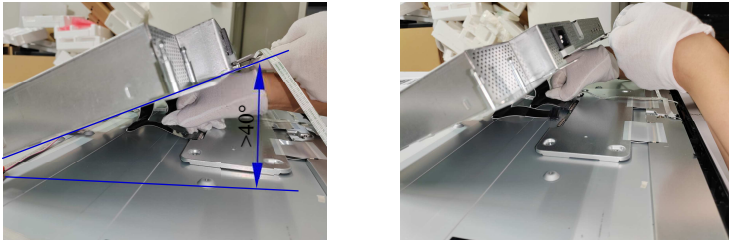
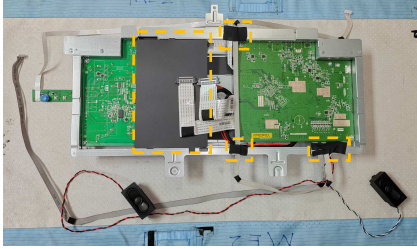
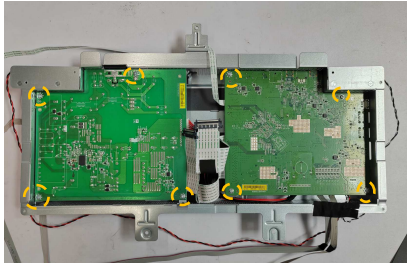
Select the Appropriate tools for disassembly and re-assembly.

Phillips screwdriver (#2)	
spacer screwdriver	
C/D disassembly tool	
Gloves or soft cloth	

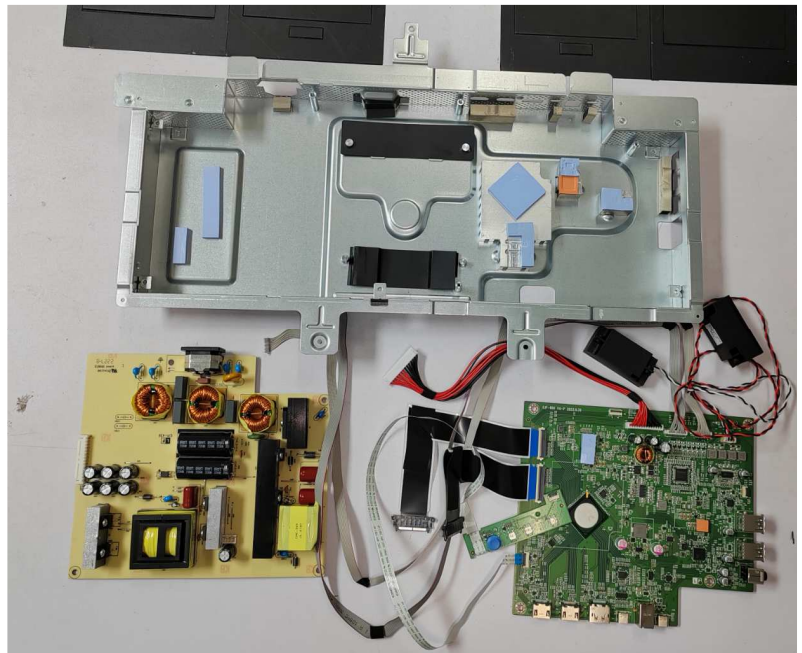
3. Disassembly SOP

<p>Put the monitor on a flat surface (Put the EPE on under the monitor)</p>	
<p>Push the button to release the stand</p>	
<p>Remove the screw * 4pcs Tool : Screwdriver #2</p>	
<p>Open the HEADSET_HINGEL Use the C/D disassembly tool to release Rear cover hook from disassemble hole</p>	

<p>Remove All tape and foil</p>	
<p>Remove All screw. Tool : Screwdriver #2</p>	
<p>Release the headset hinged from the middle frame</p>	
<p>1. Unplug light bar line 2. Unplug lens line</p>	
<p>Remove Mylar</p>	

<ol style="list-style-type: none"> 1. Unplug sensor line 2. Unplug RGB Lighting module line 	
<p>Release the keypad PCB from the middle frame</p>	
<p>Unplug LVDS line</p>	
<ol style="list-style-type: none"> 1. Remove Mylar 2. Remove the acetate tape 	
<p>Remove All screw. Tool : Screwdriver #2</p>	

Take out PCB and Peel off all
Gasket 、mylar 、 Thermal pads



Remove the middle frame



Remove the RGB Lighting
module、 sensor board、 Lens
board form middle frame

