



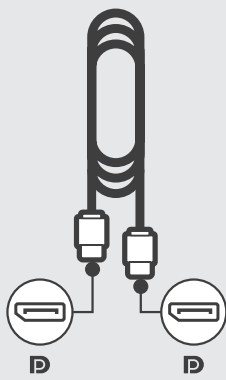
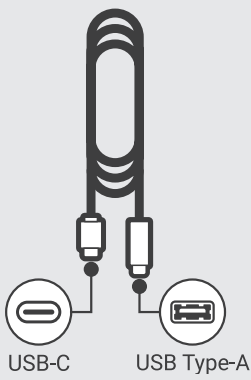
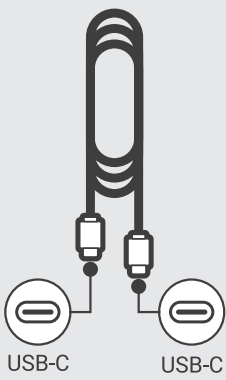
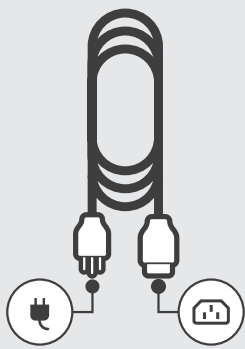


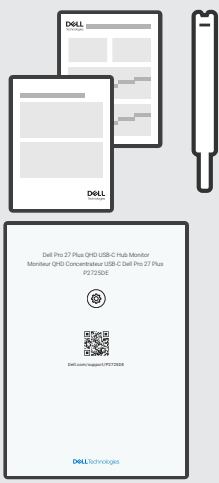



Monitor Dell Pro 27 Plus QHD s hubem USB-C
P2725DE

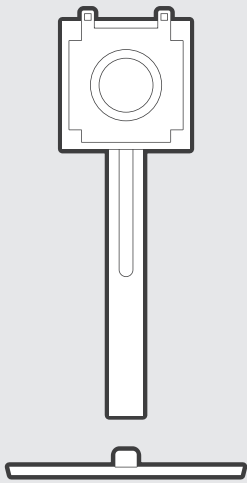


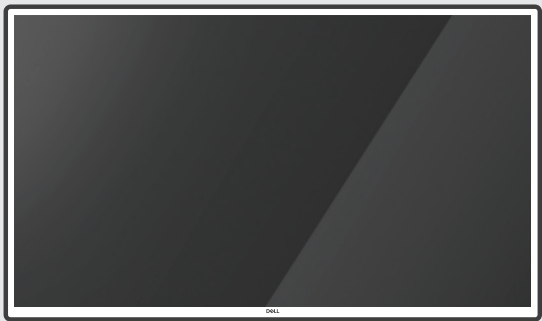


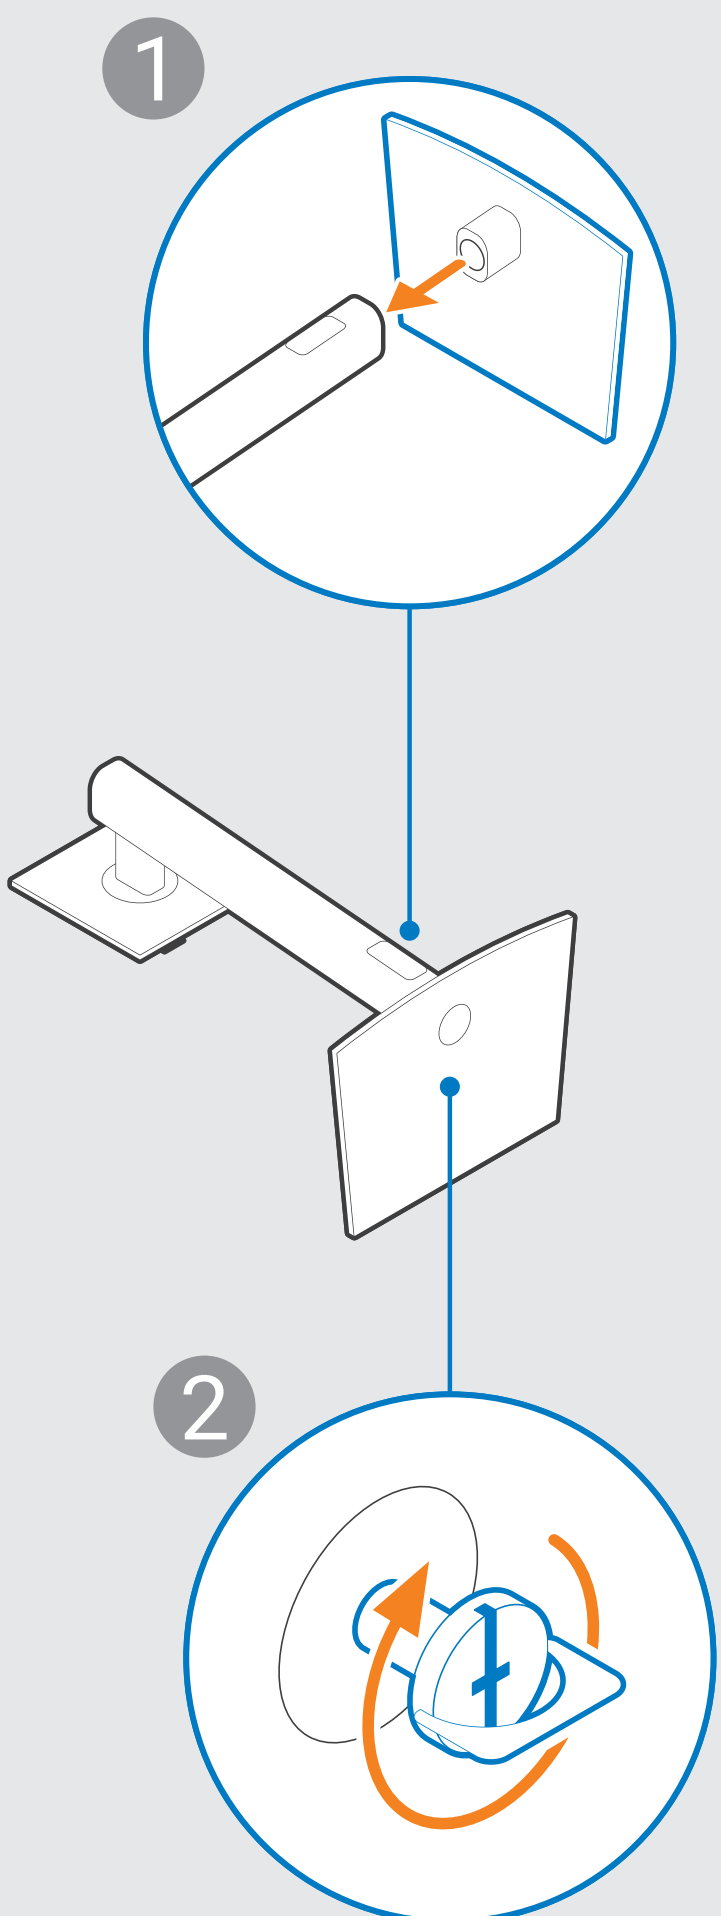


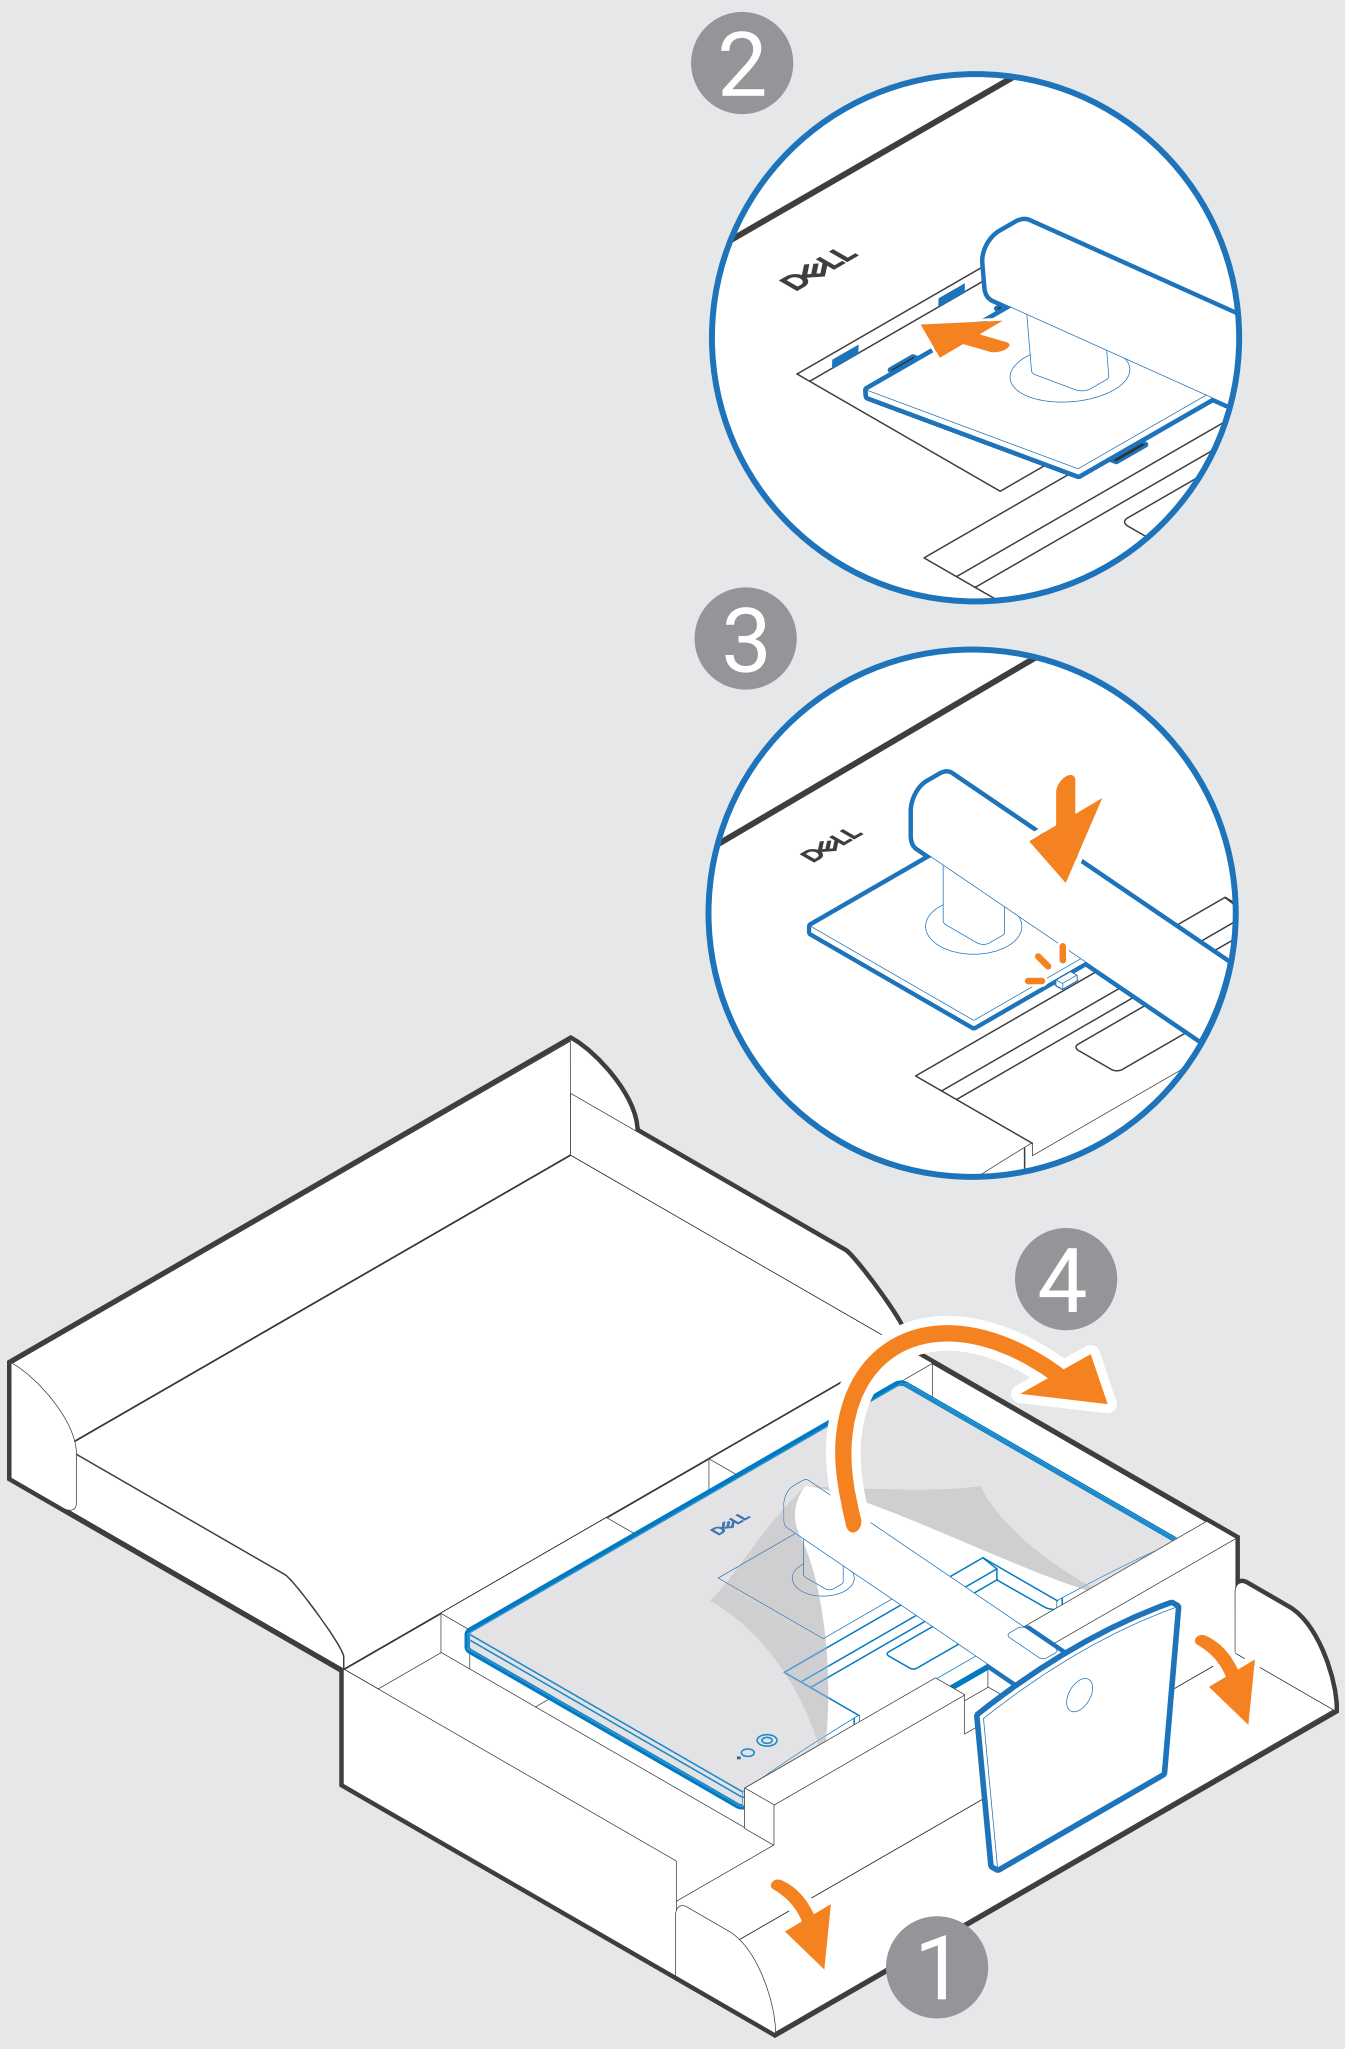


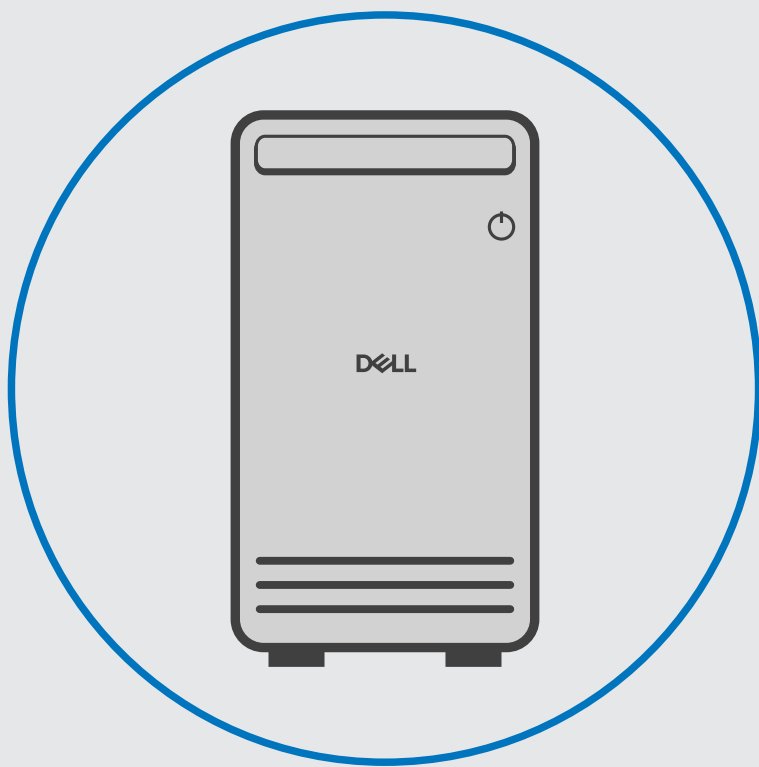


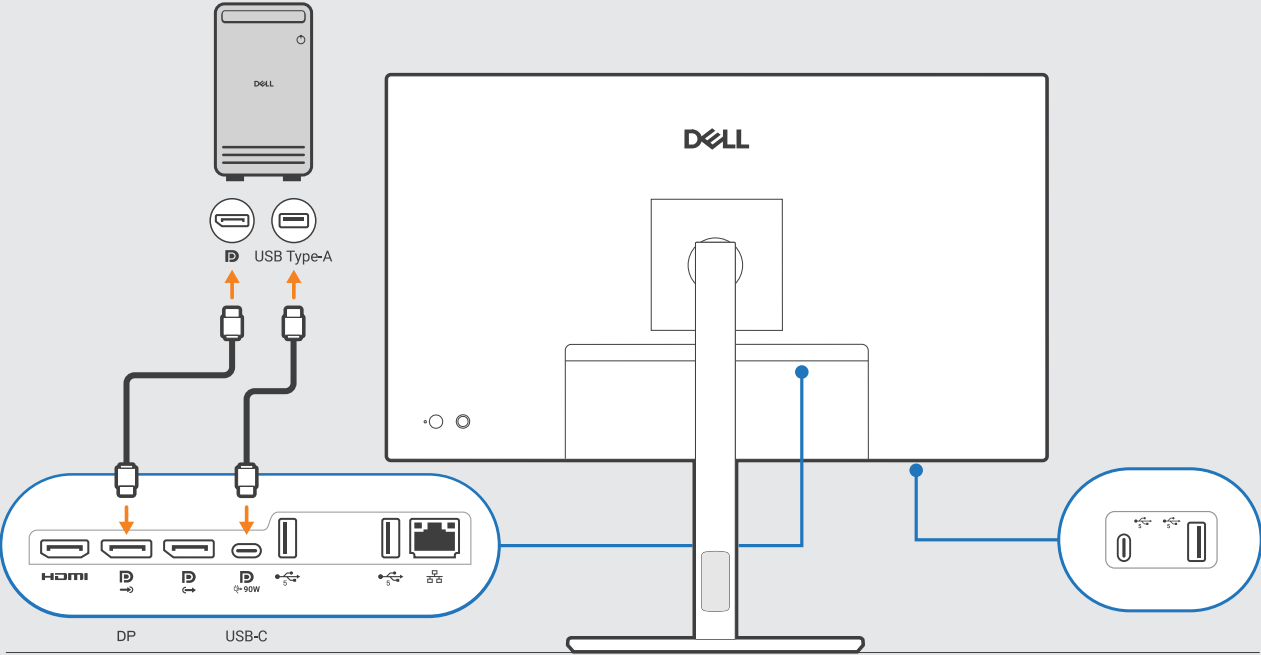

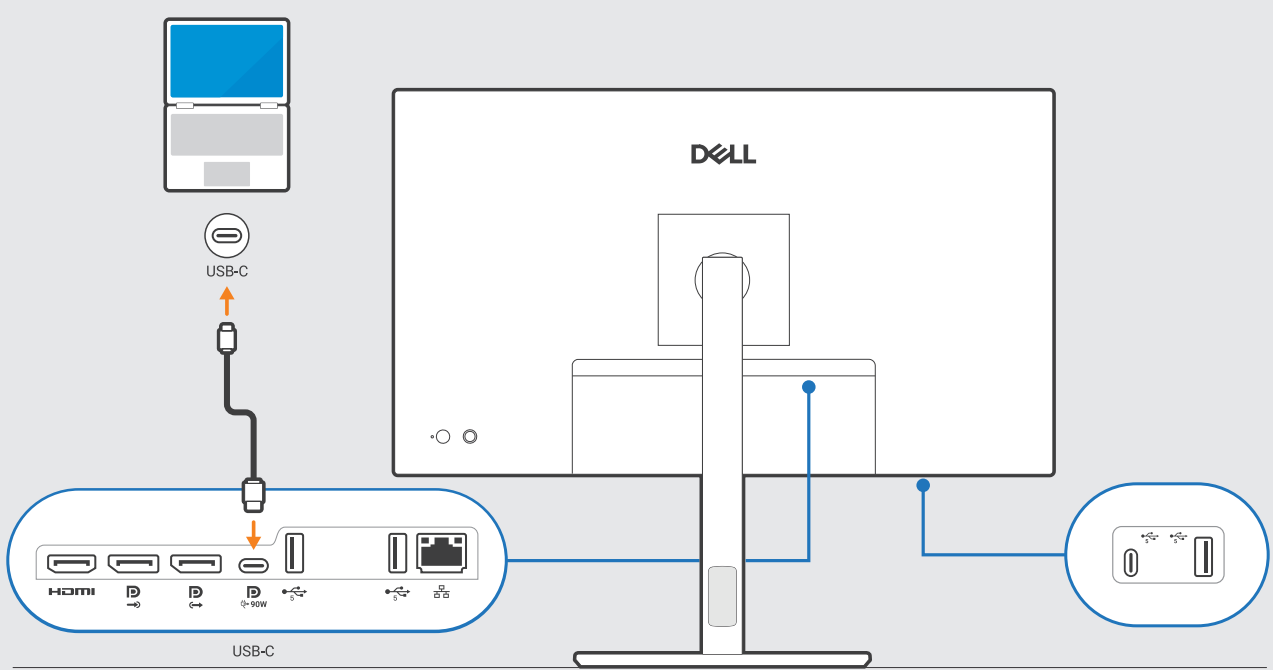


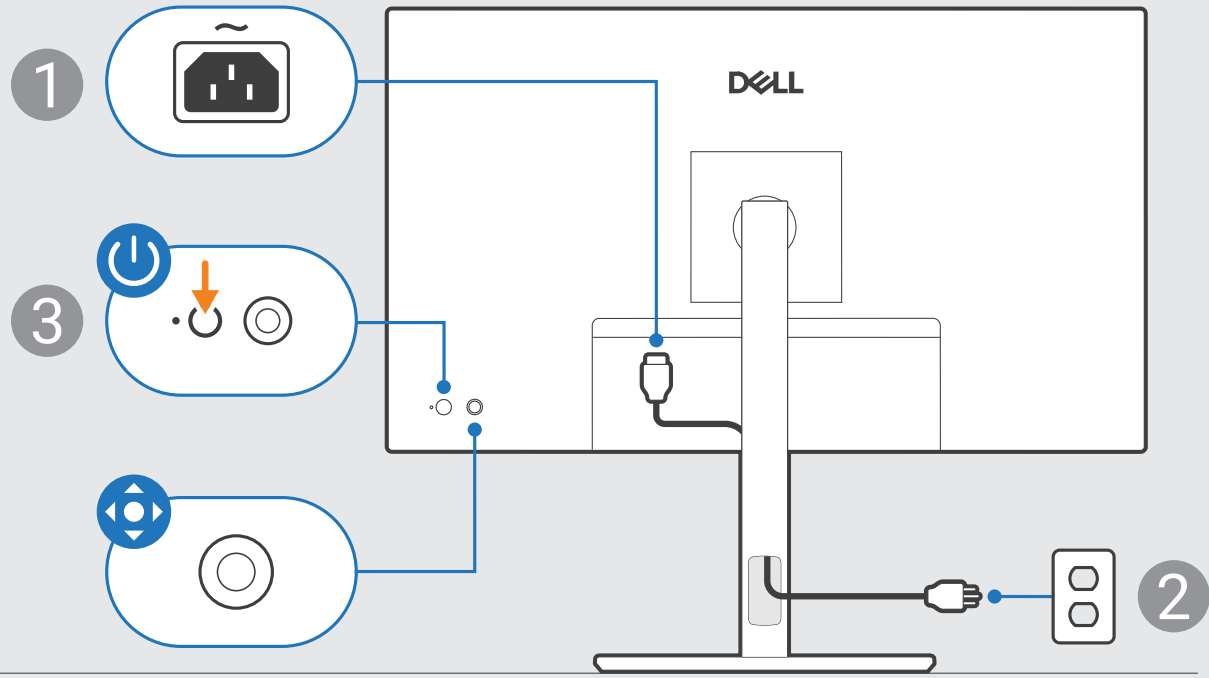

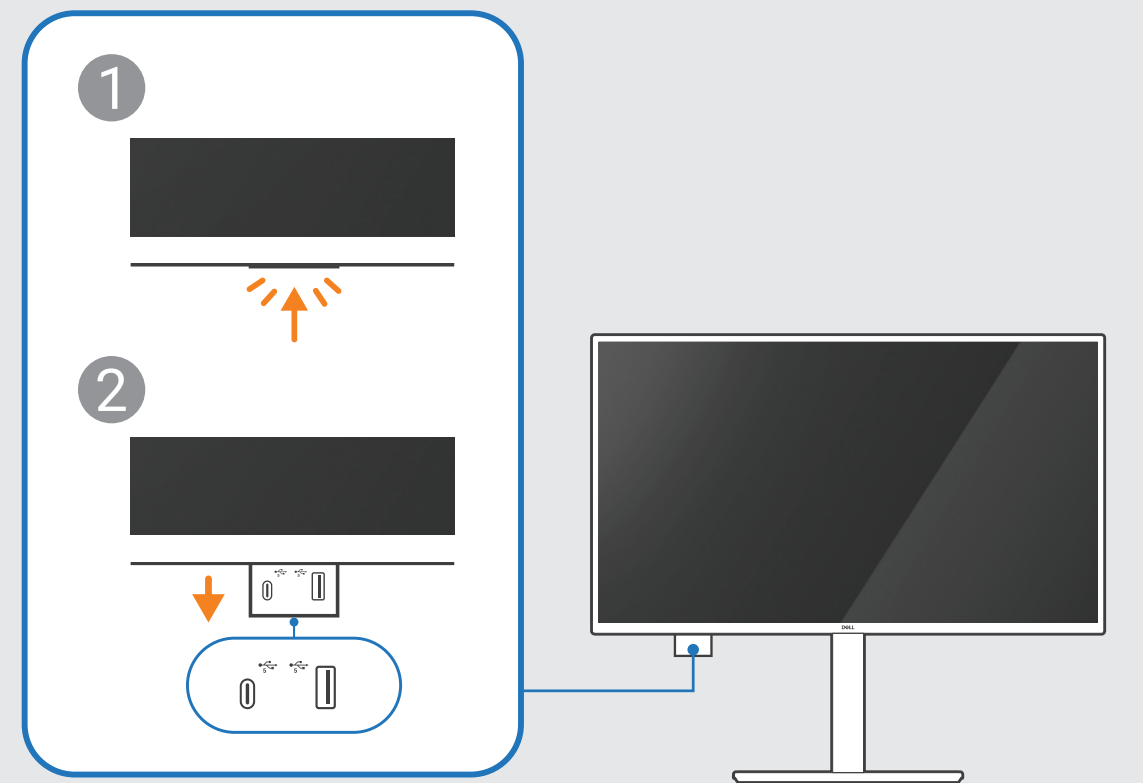


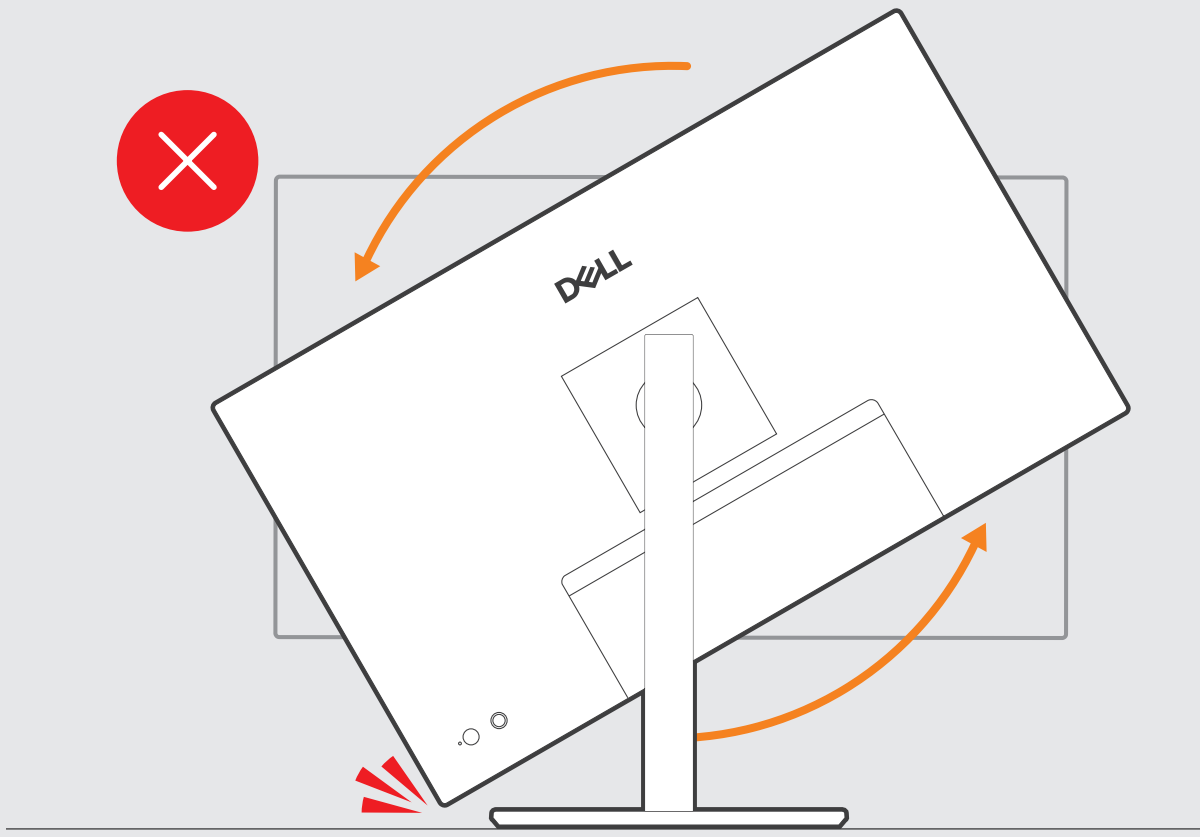


1


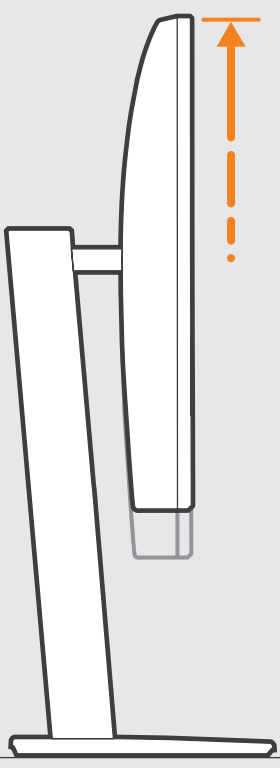



2

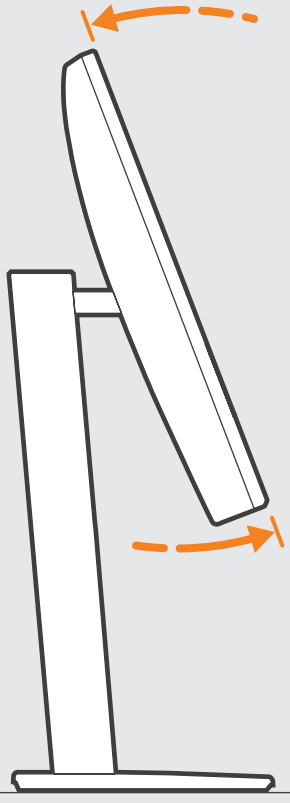


3

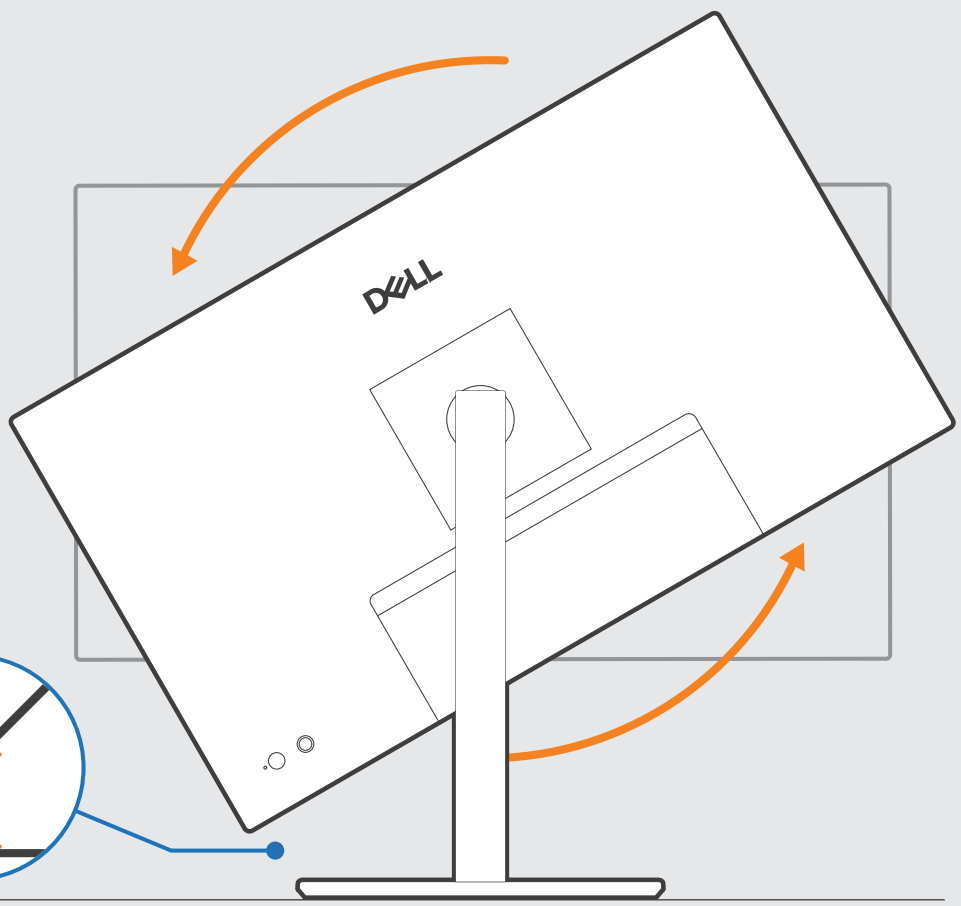

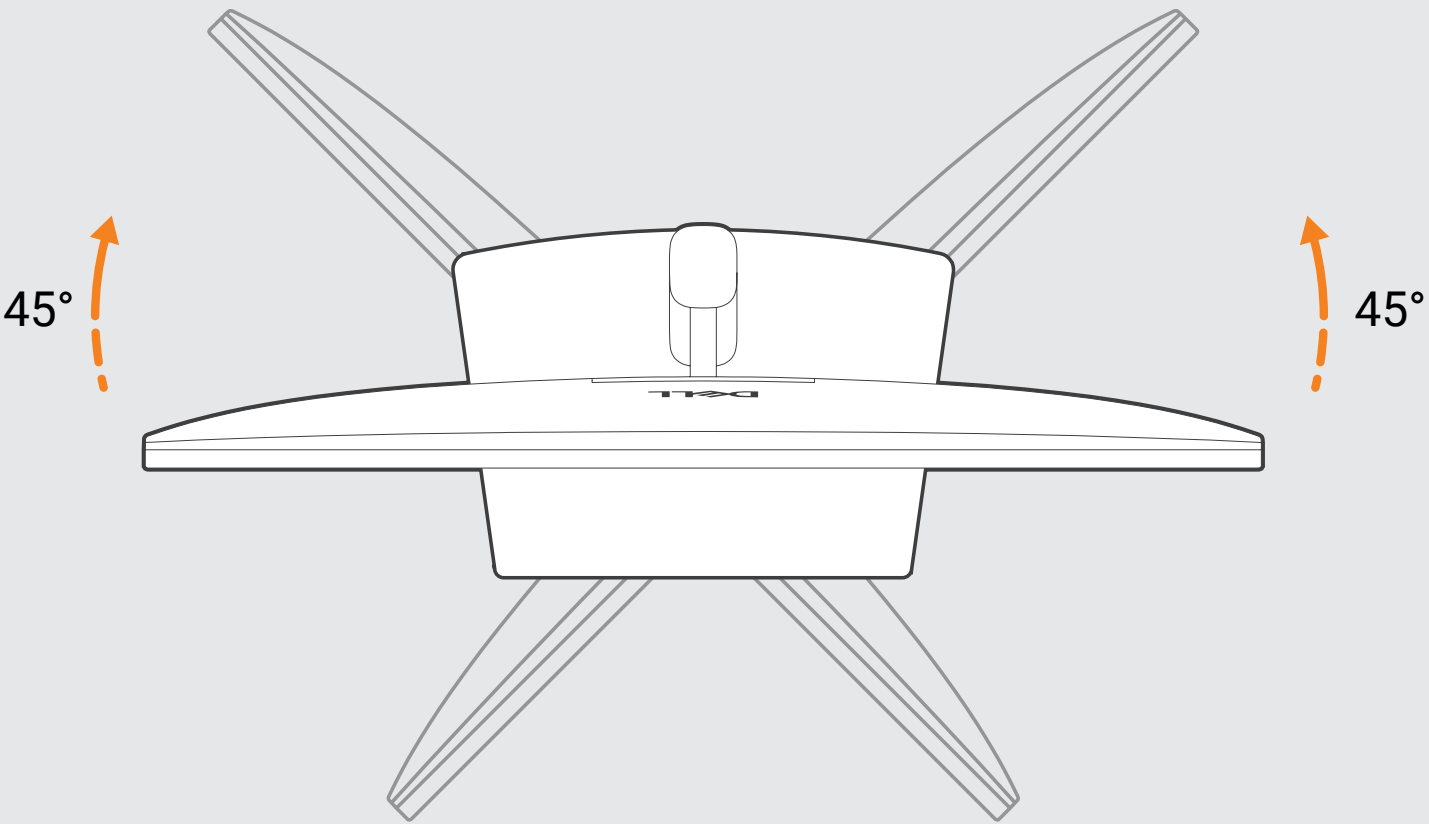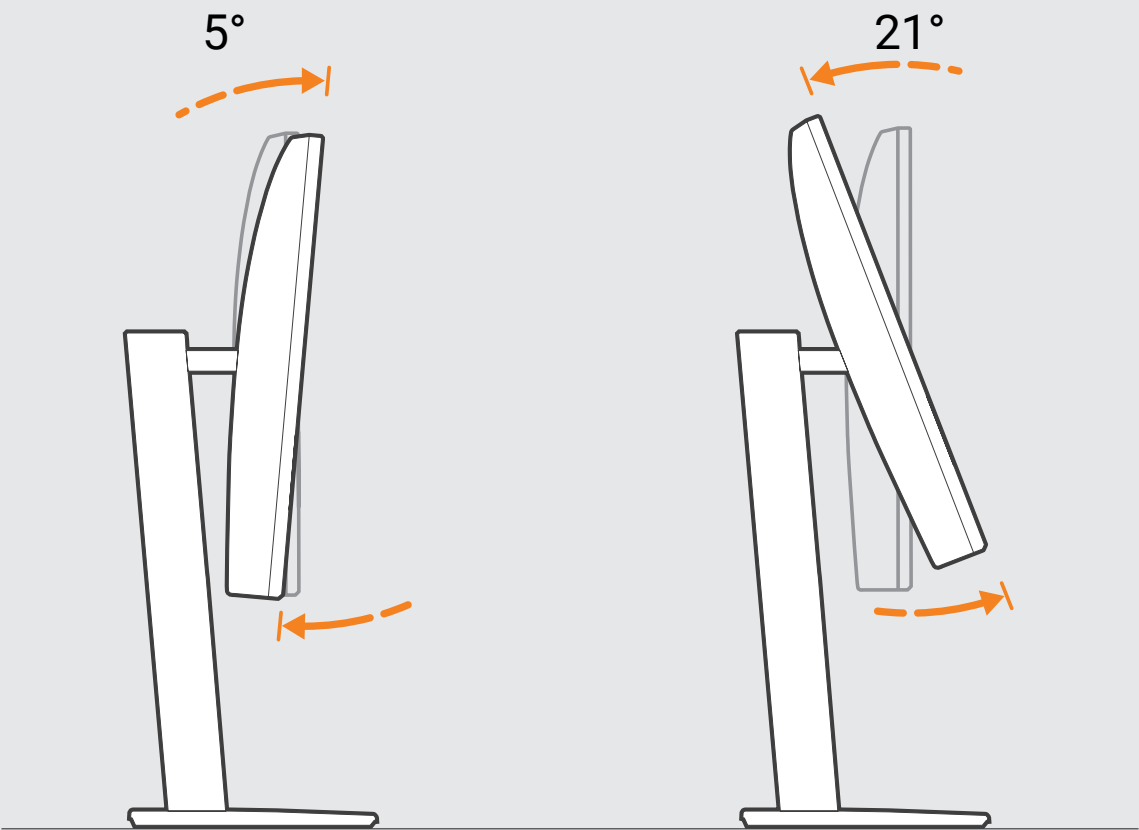


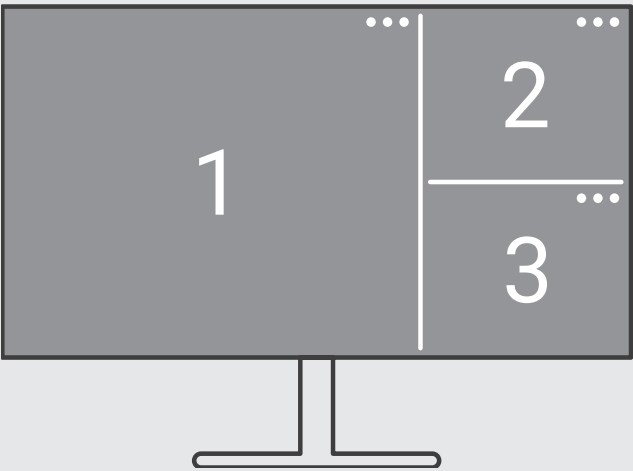

Dell Display and Peripheral Manager
Dell.com/support/ddpm

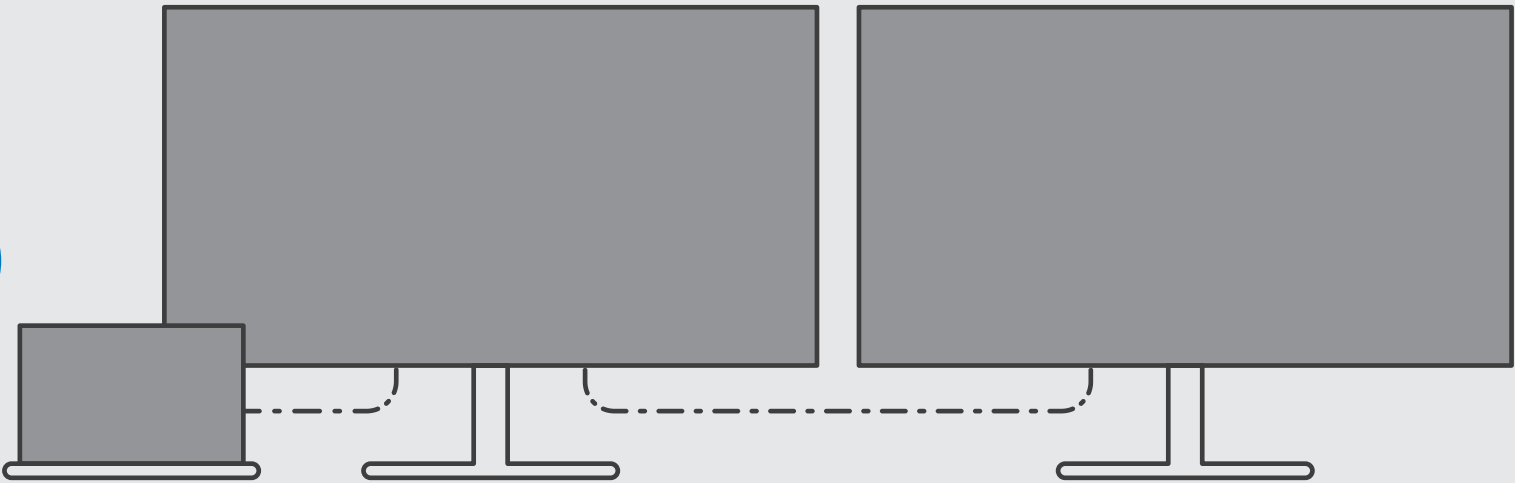

Reťazové prepojenie

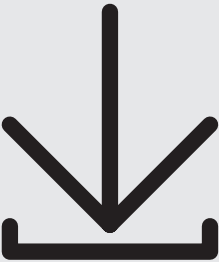

Dell.com/support/P2725DE