



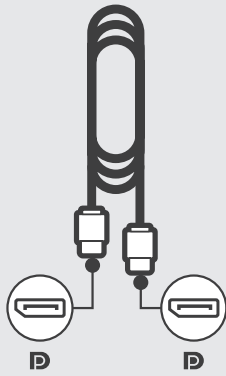
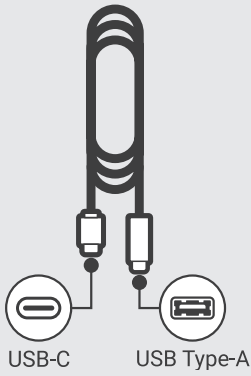
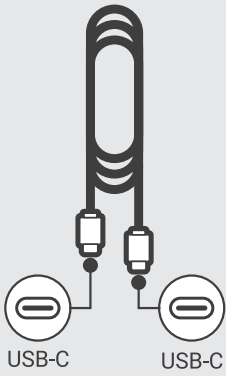
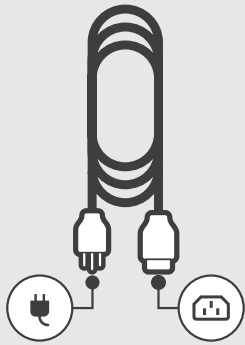


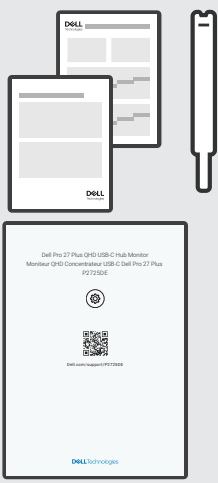


Monitor Dell Pro 27 Plus QHD USB-C Hub
P2725DE

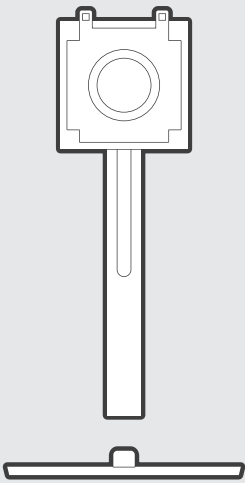


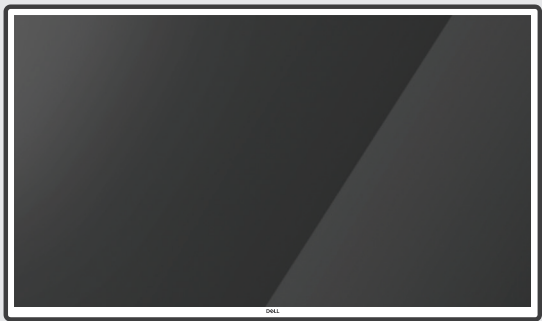


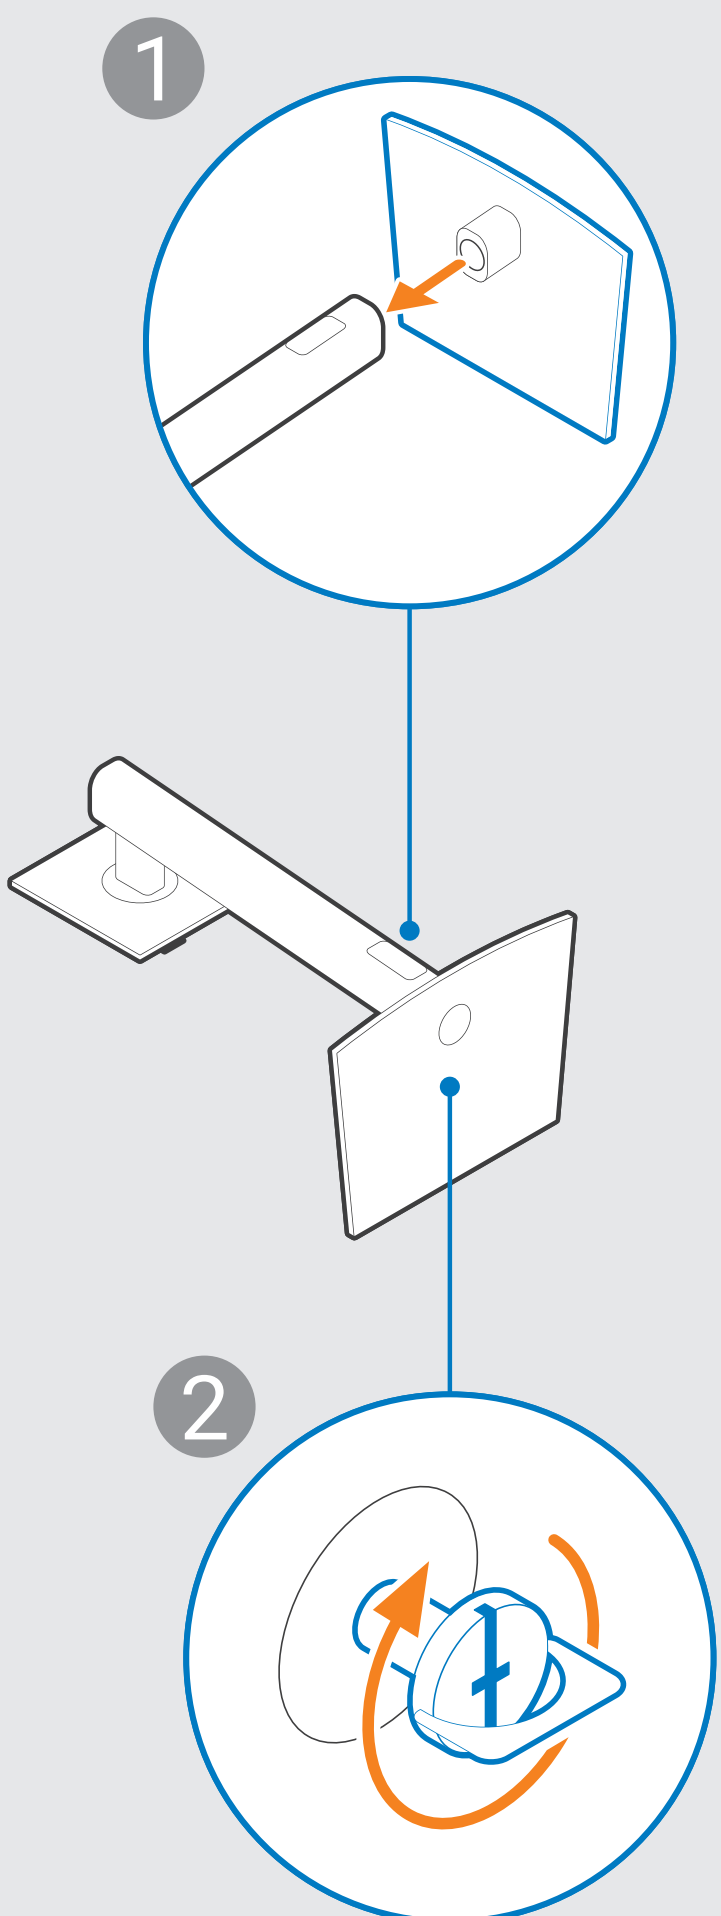


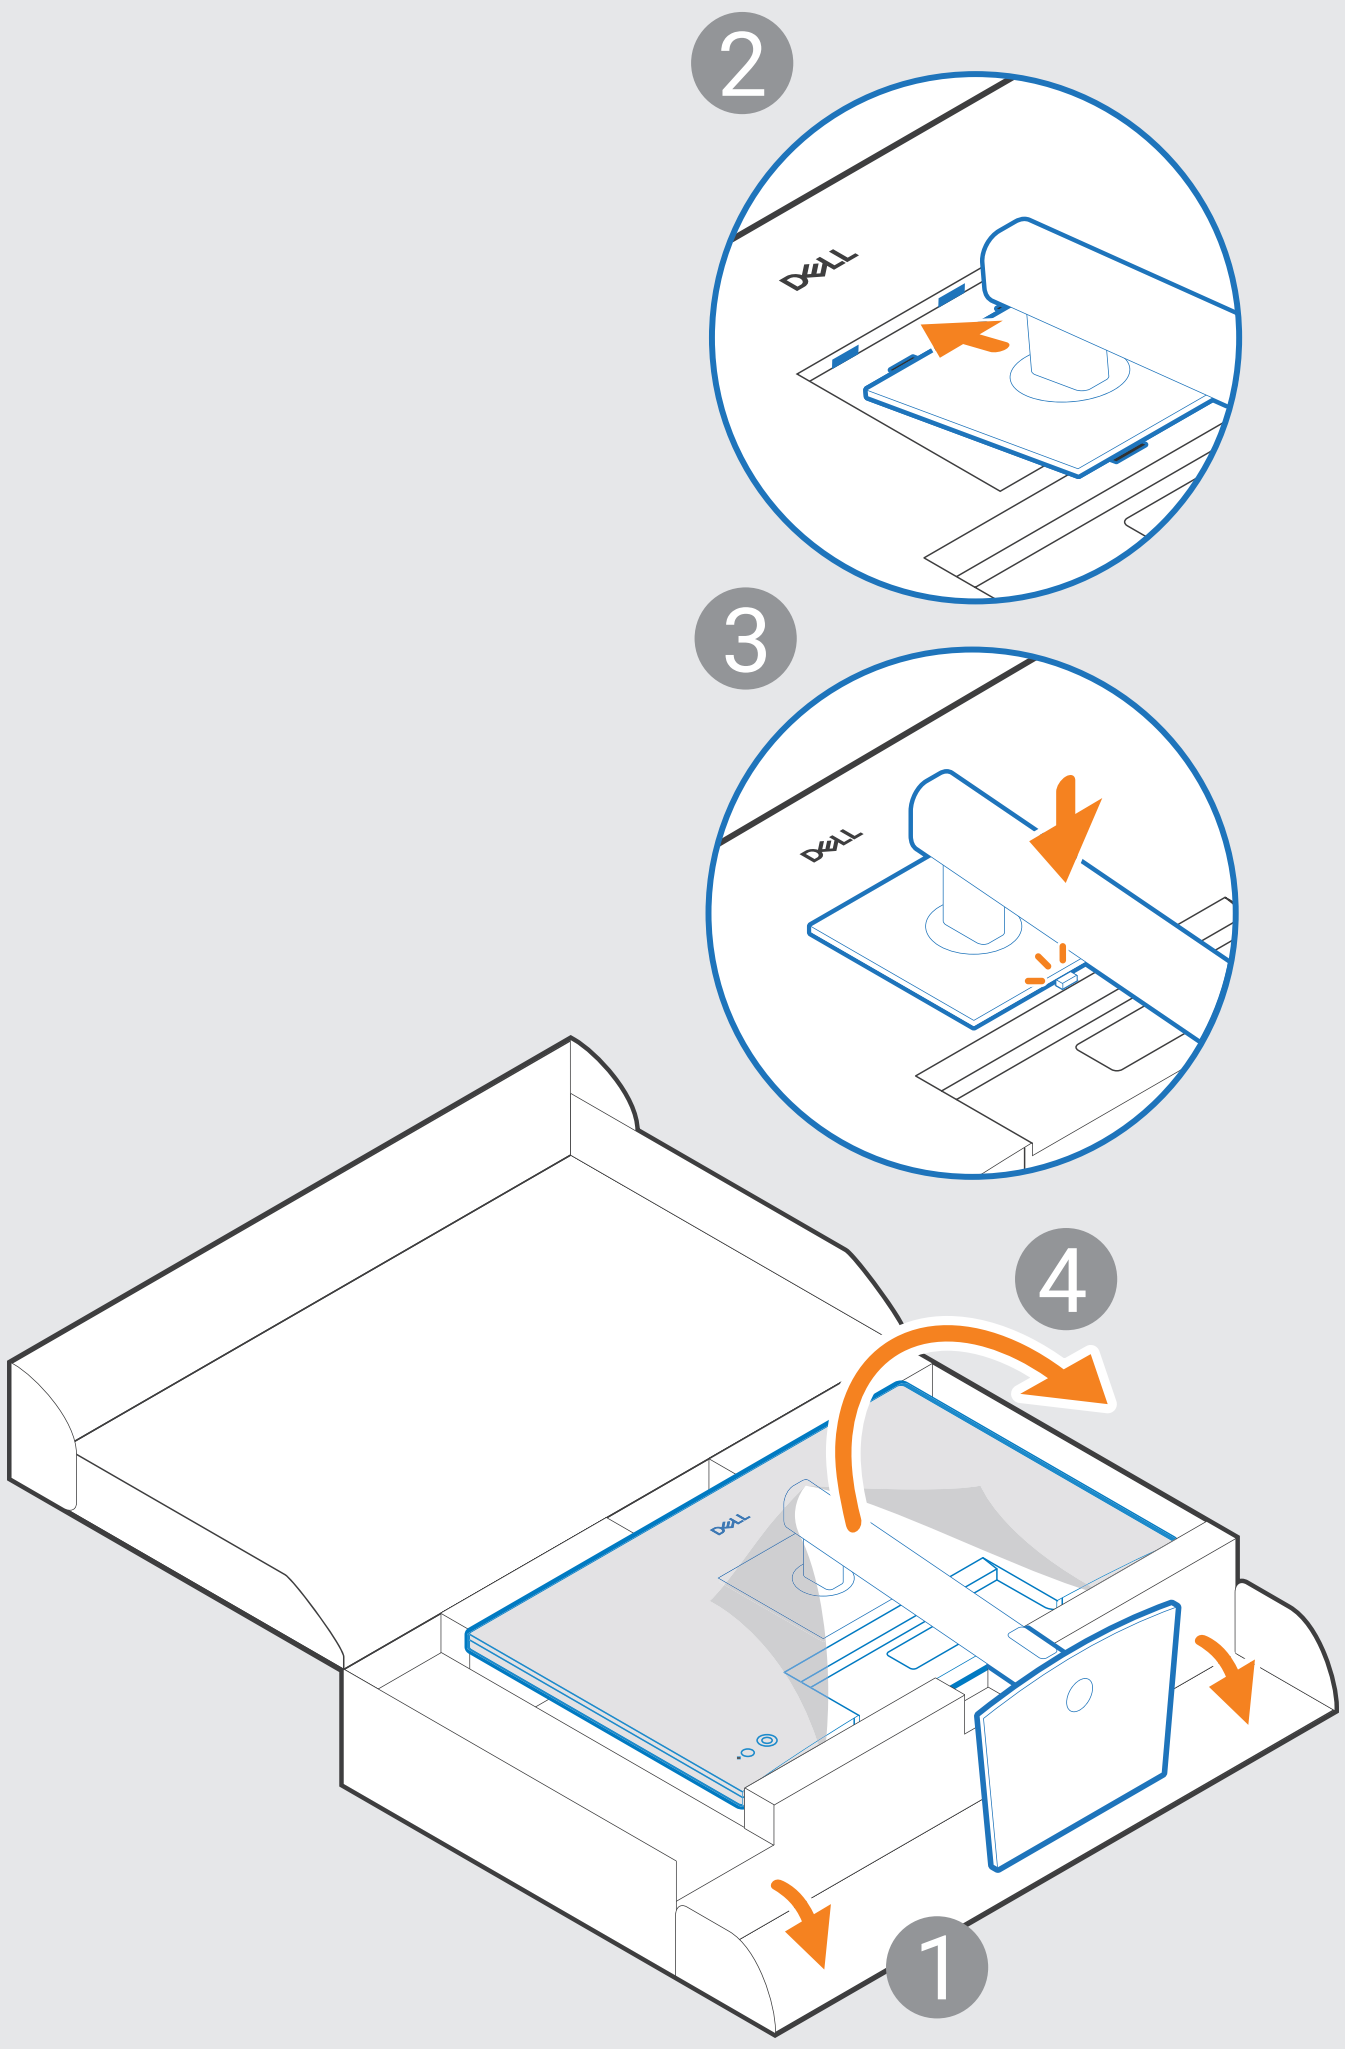





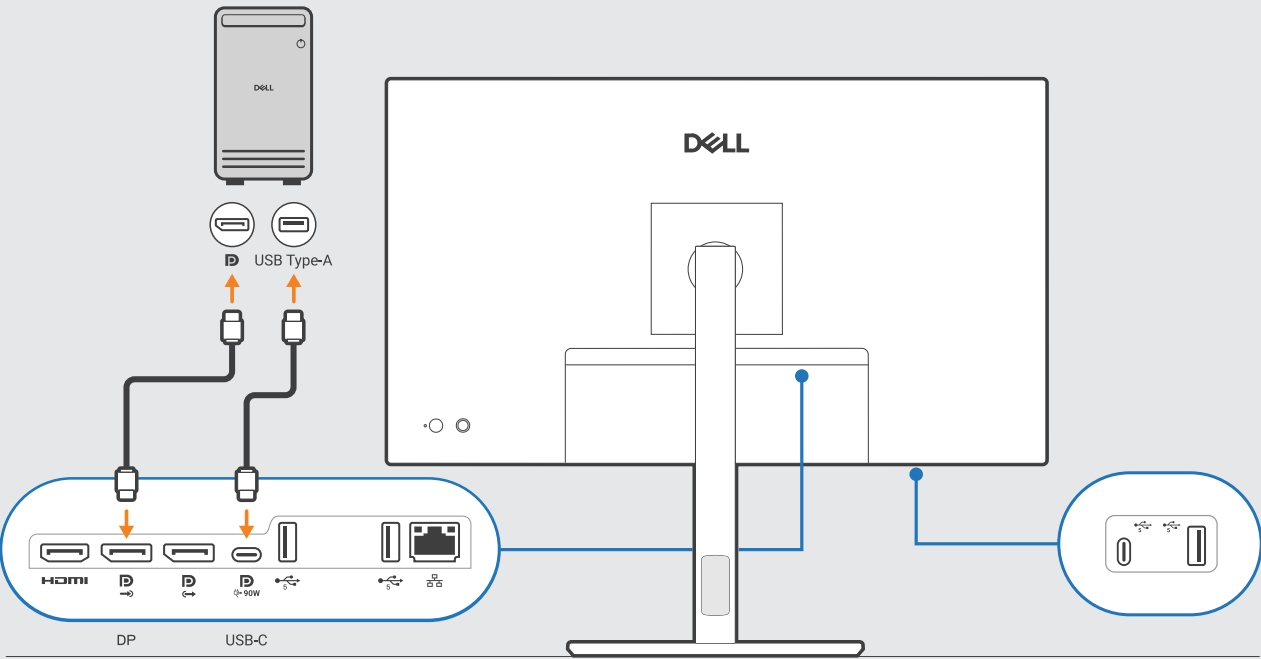

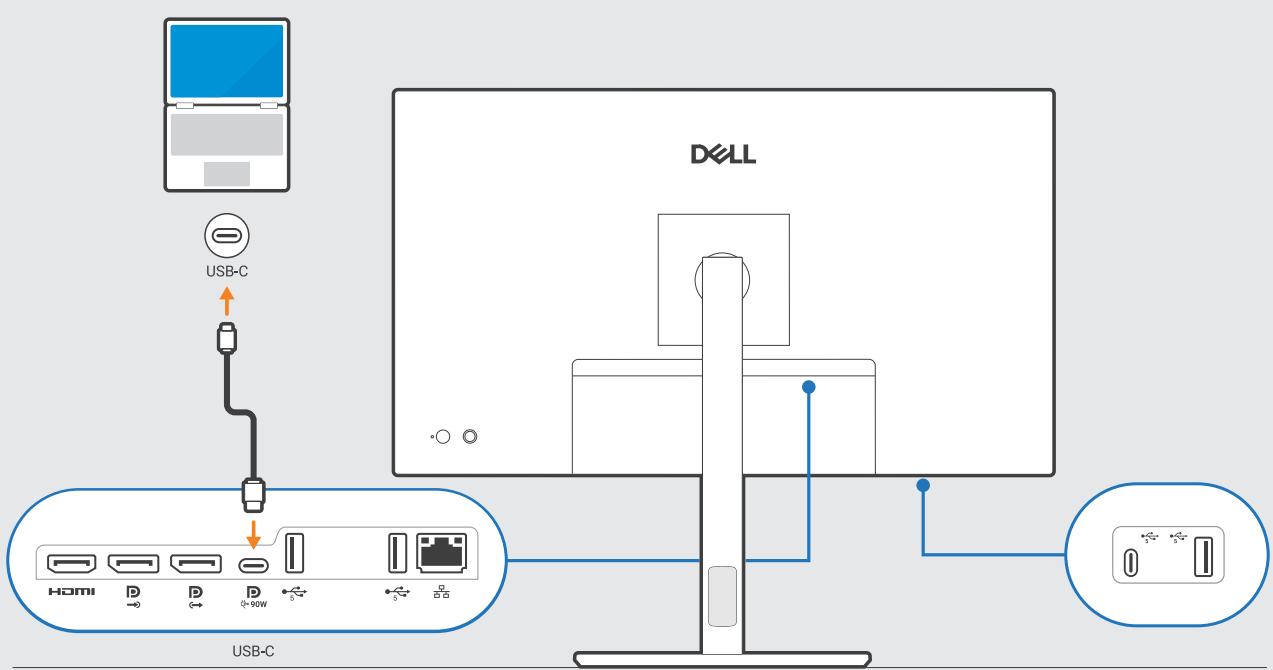


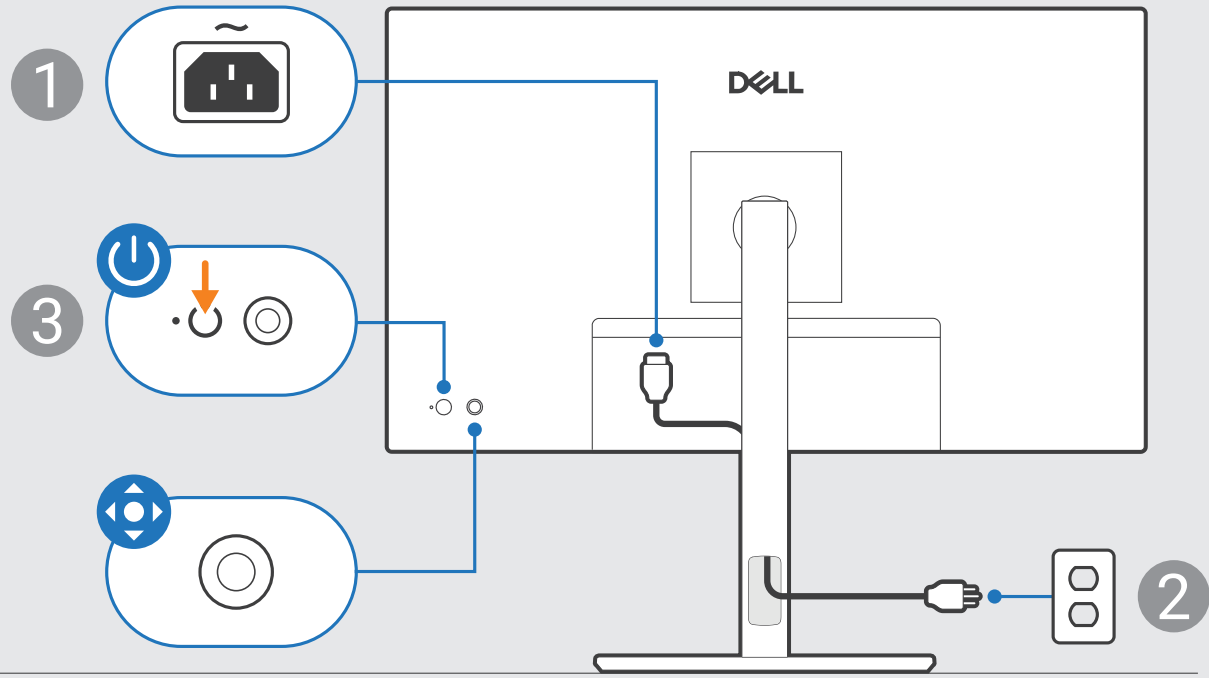

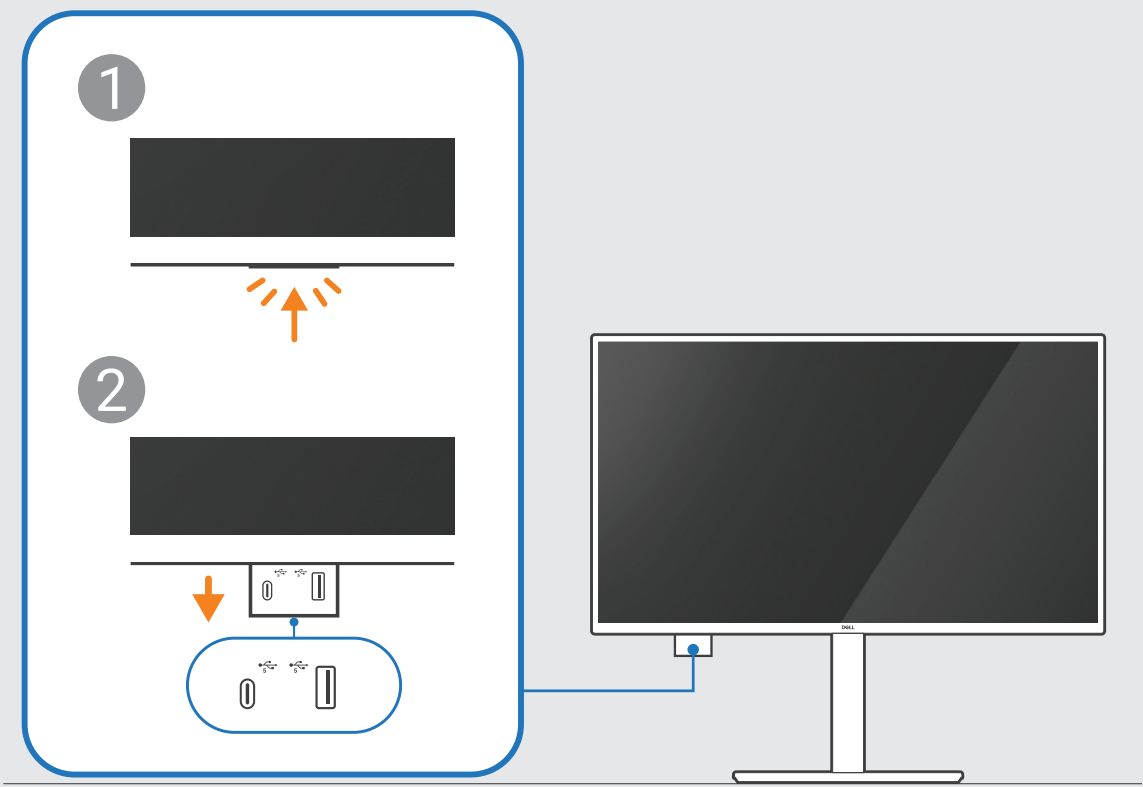


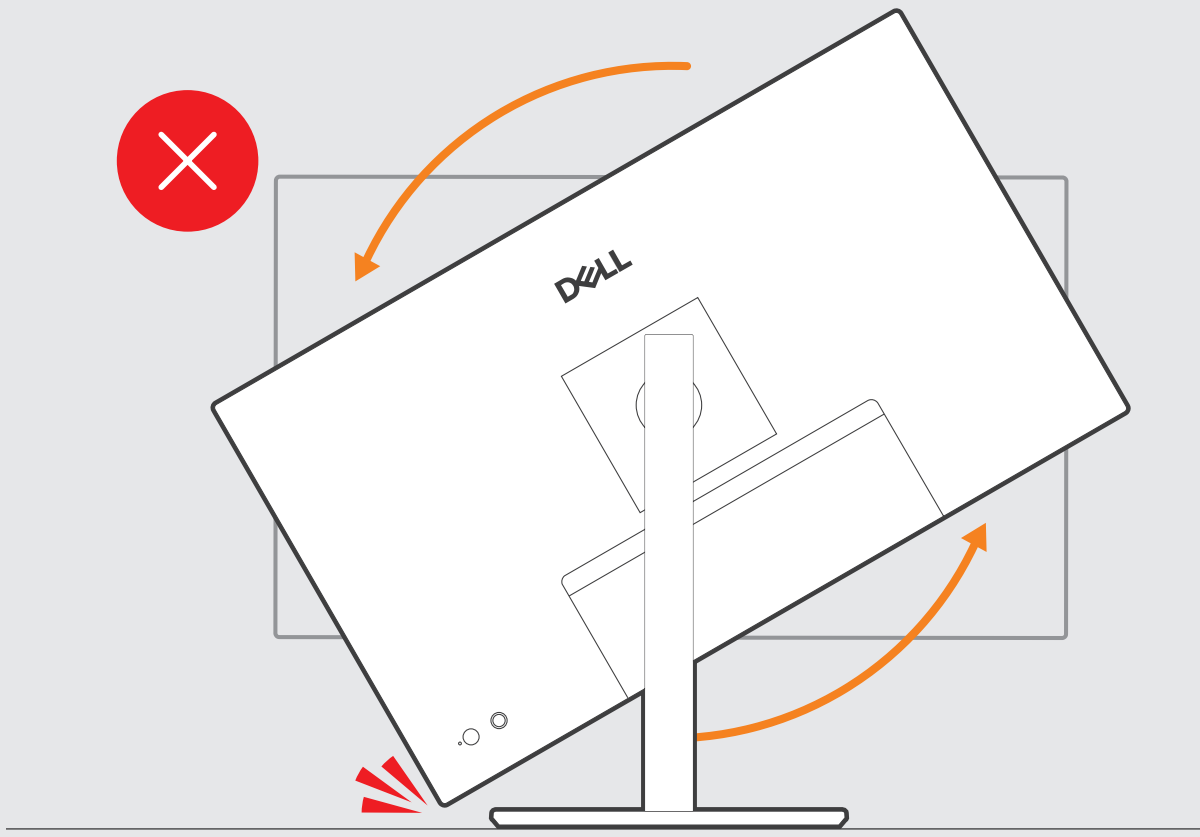


1



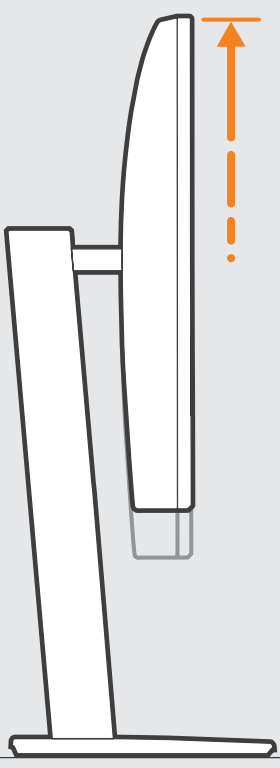



2

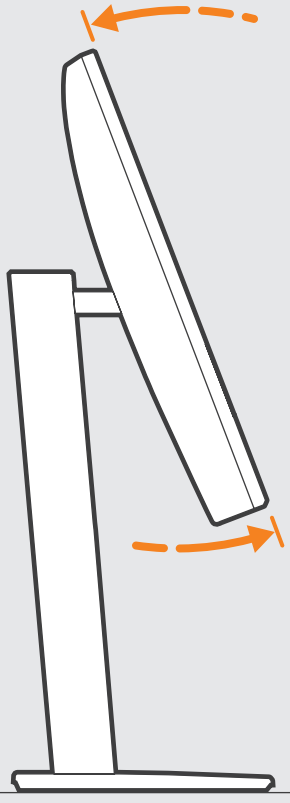


3

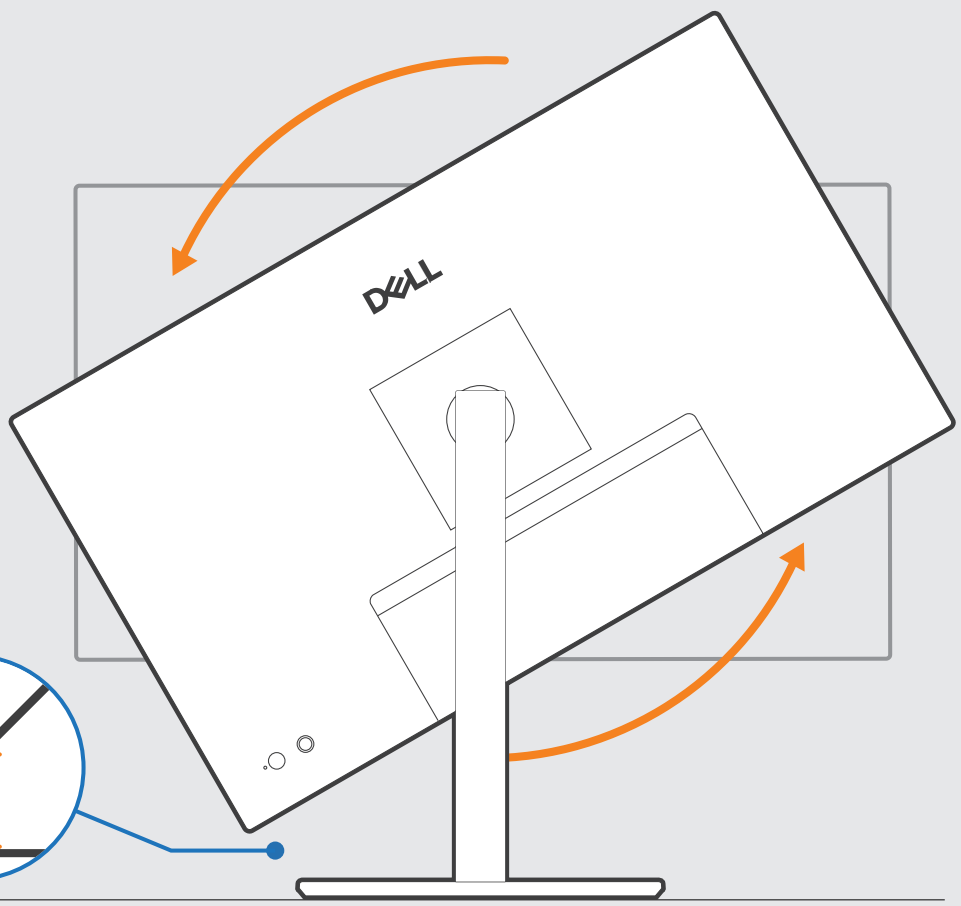

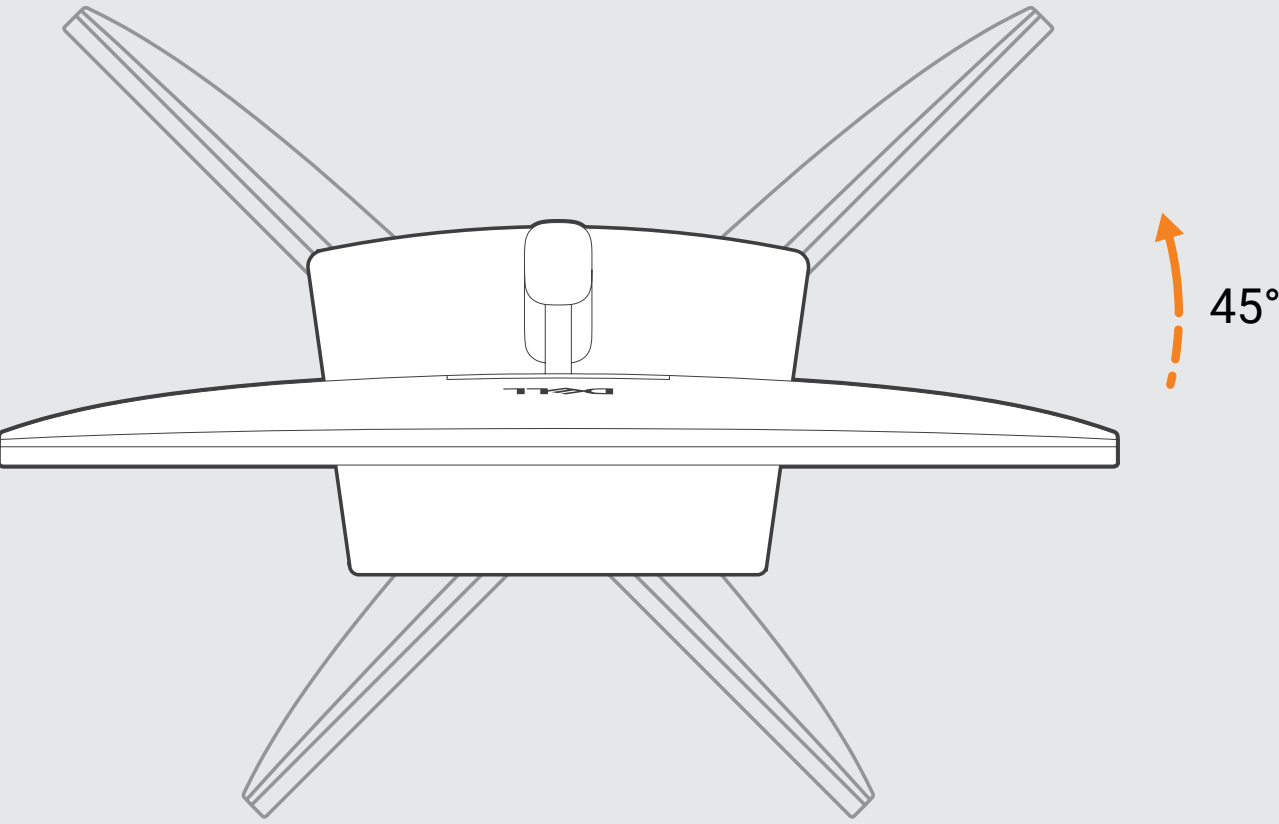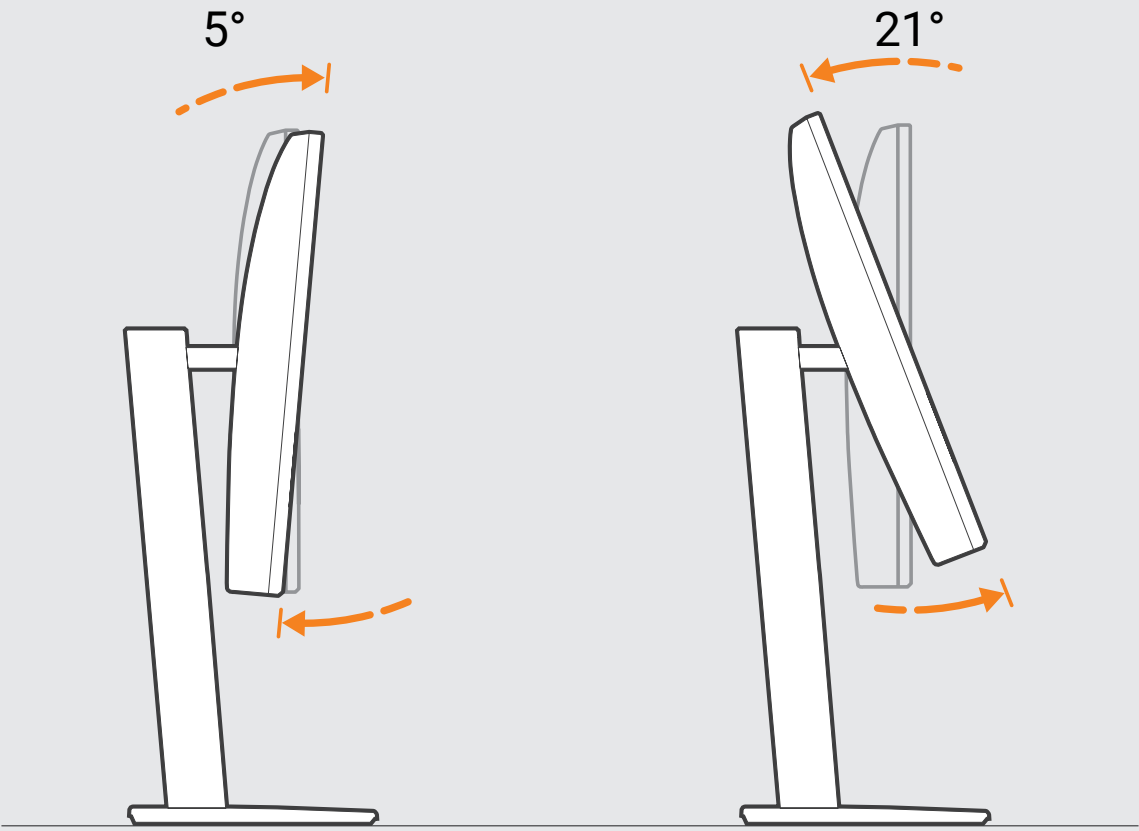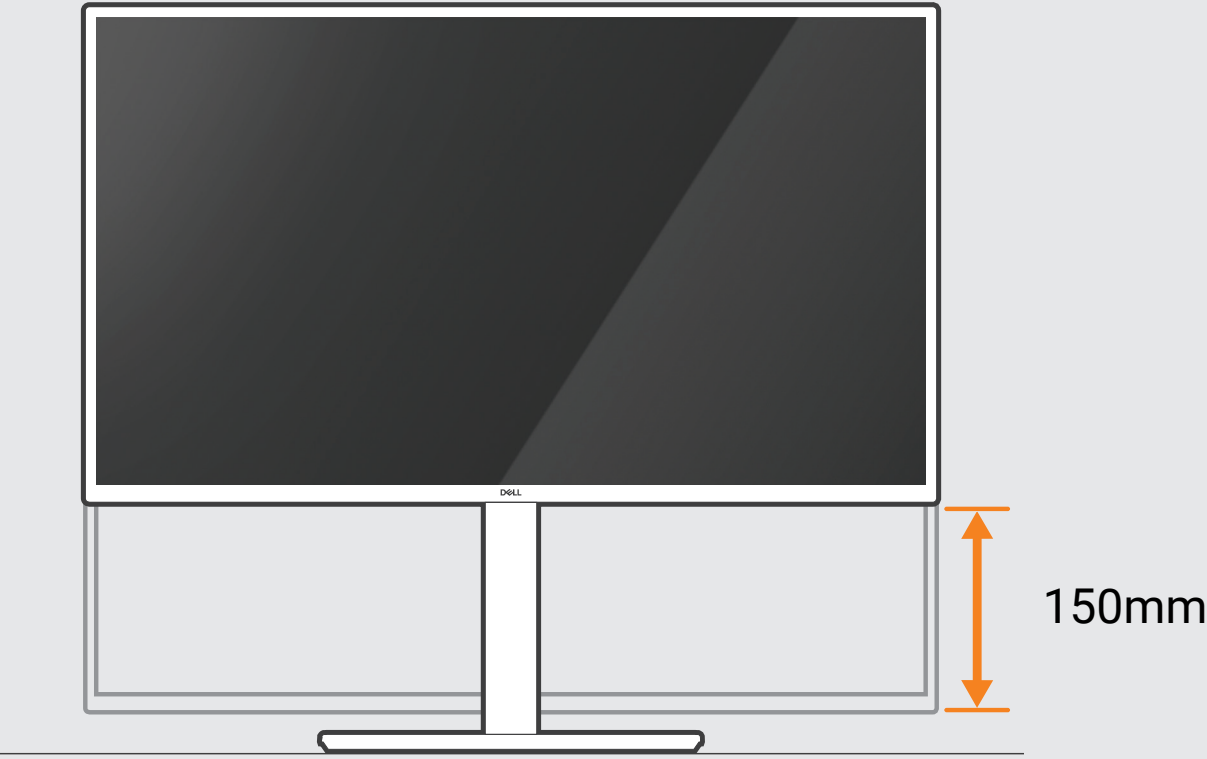


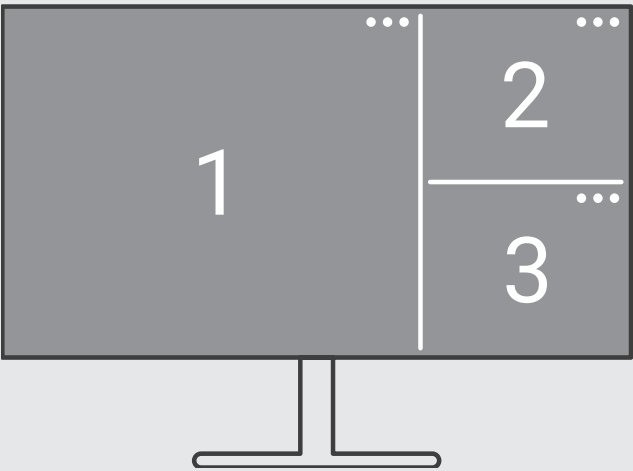

Dell Display and Peripheral Manager
Dell.com/support/ddpm

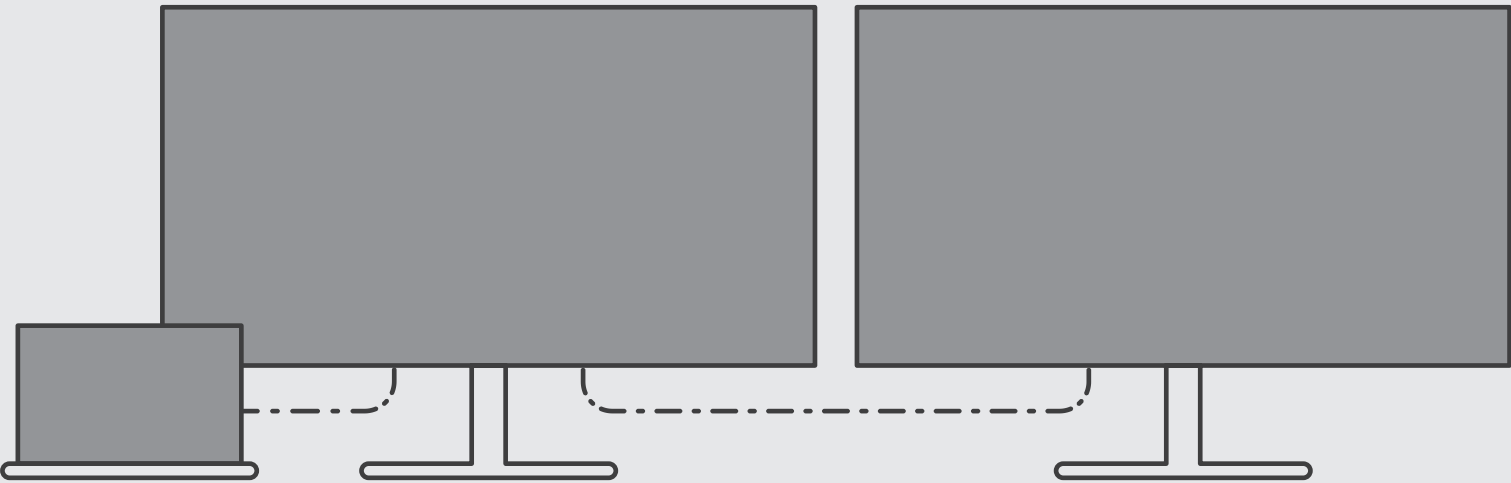

Daisy Chain

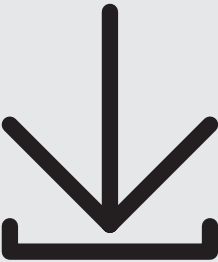

Dell.com/support/P2725DE