


L22e-30 L22i-30 S22e-20 Simplified service manual for dismantling


Model Name: Lenovo L22e-30 L22i-30 S22e-20

Exploded Diagram


L22e-30

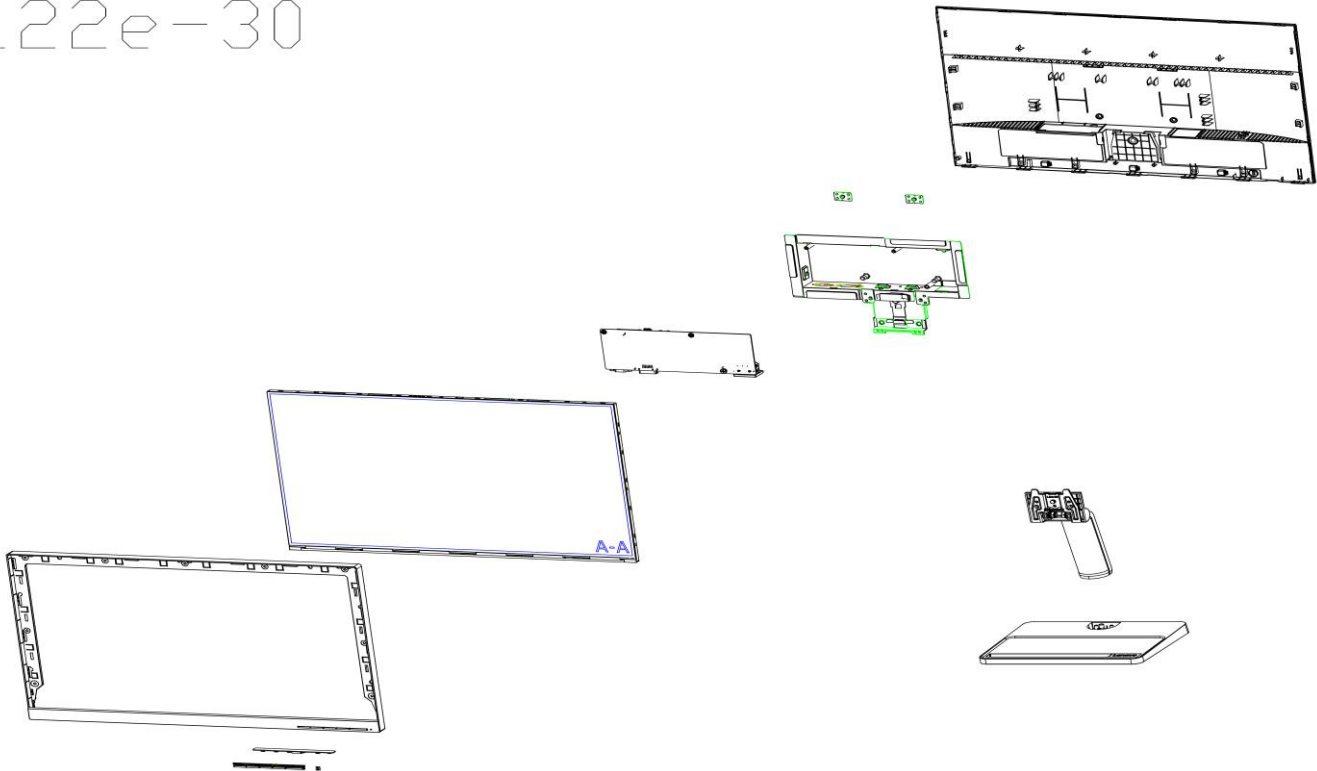

L22i-30

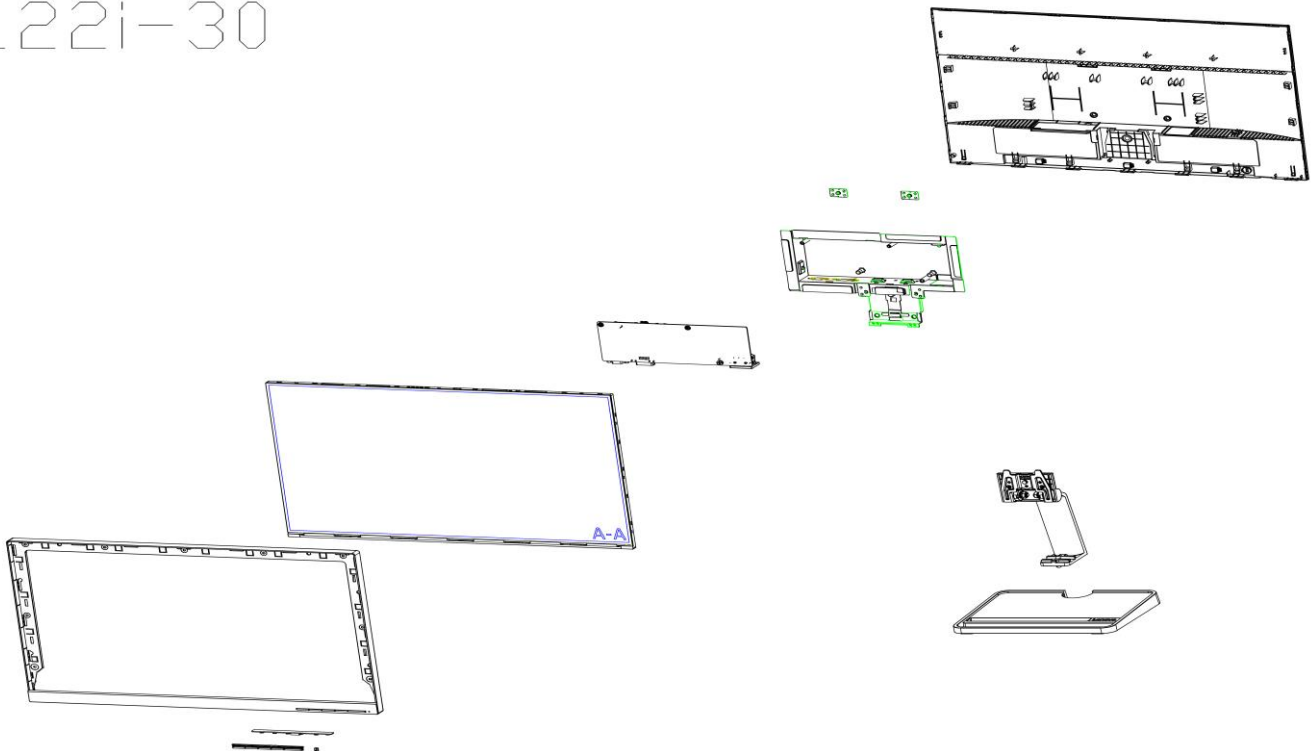

S22e-20

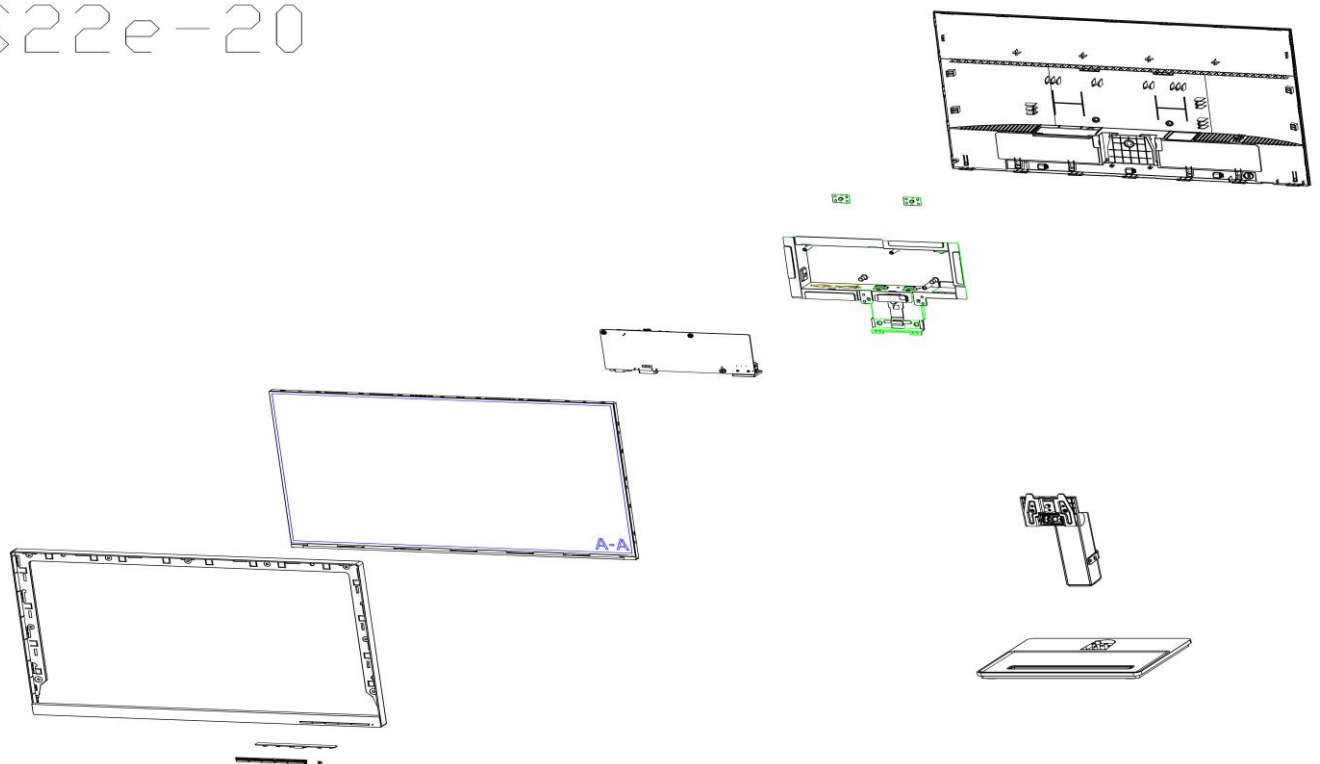

1. Precaution

Please read the precaution as follows to prevent any damages to the LCD Monitor.

Make sure all power connector is removed. Be sure that the LCD Monitor is in power off status.

Prepare soft cloth and sponge as working platform to place LCD monitor horizontally.



Hold LCD by the side carefully and DON'T touch or press panel directly.



2. Appropriate tools


Select the Appropriate tools for disassembly and re-assembly.

Phillips screwdriver (#2)	
spacer screwdriver	
C/D disassembly tool	
Gloves or soft cloth	


3. Disassembly SOP

Put the monitor on a flat surface (Put the EPE on under the monitor)	
Remove the screw * 1pcs Tool : Screwdriver #2 Pull out stand	
Use the C/D disassembly tool to release Rear cover hook from disassemble hole on bottom	

Remove All tape and foil

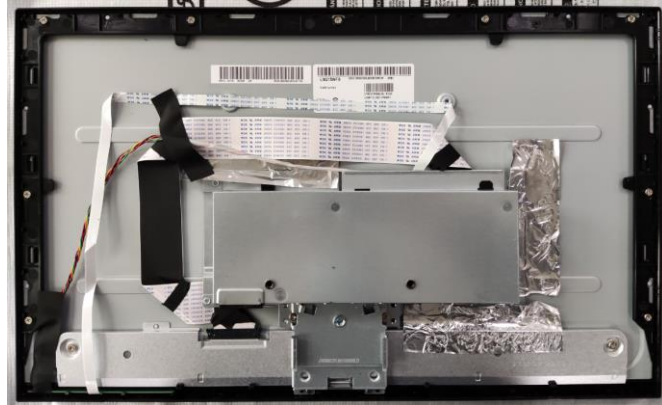


Remove All screw.
Tool : Screwdriver #2

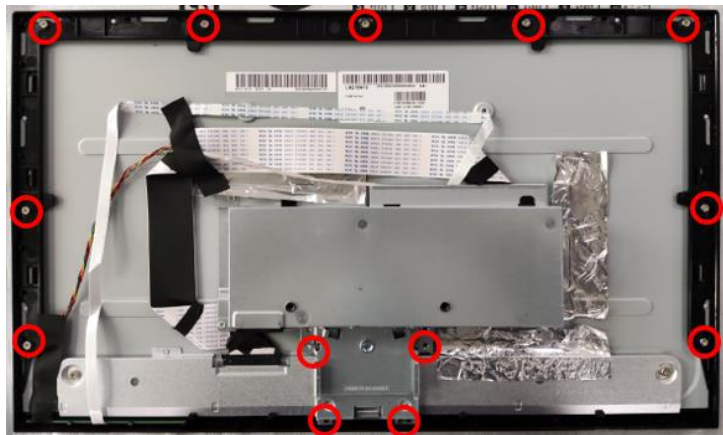

Release the middle frame from the
Panel


Release the keypad pcb from the
the middle frame

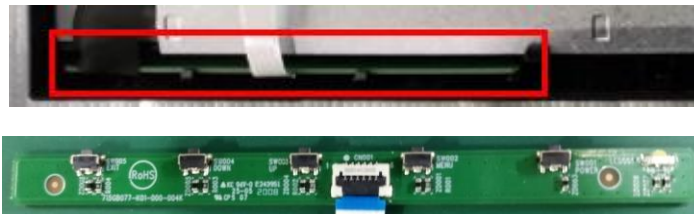


Unplug light bar line and LVDS
line




Take out the mylar sheet from
Main chassis

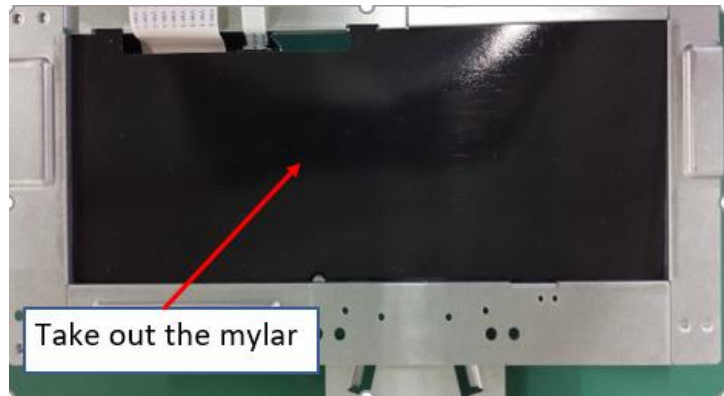

Remove All screw.
Tool : Screwdriver #2
Tool : spacer screwdriver

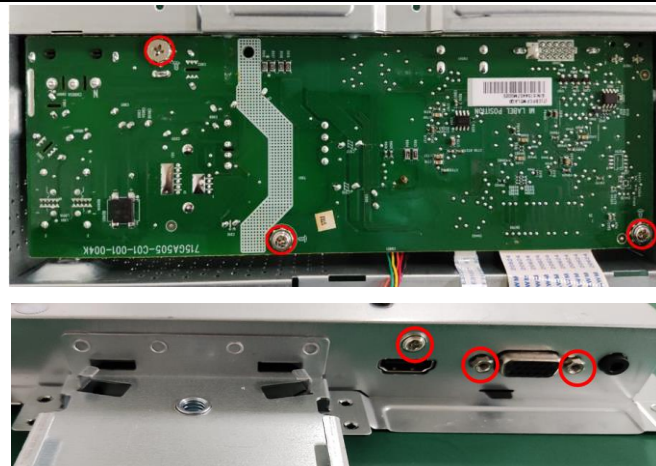

Take out PCB and Peel off all
mylar.

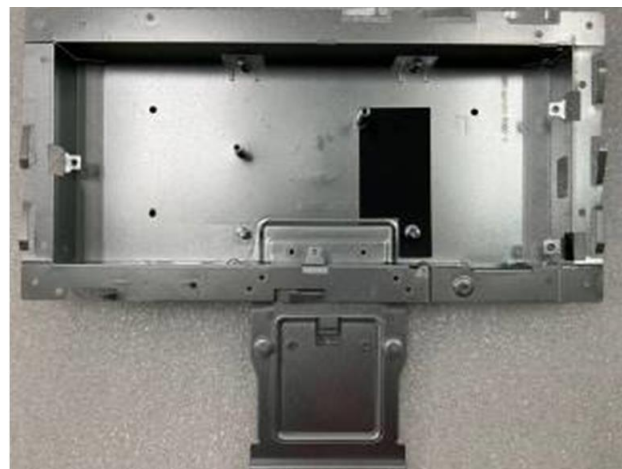

Take out the Thermal pads from
Power pcb

