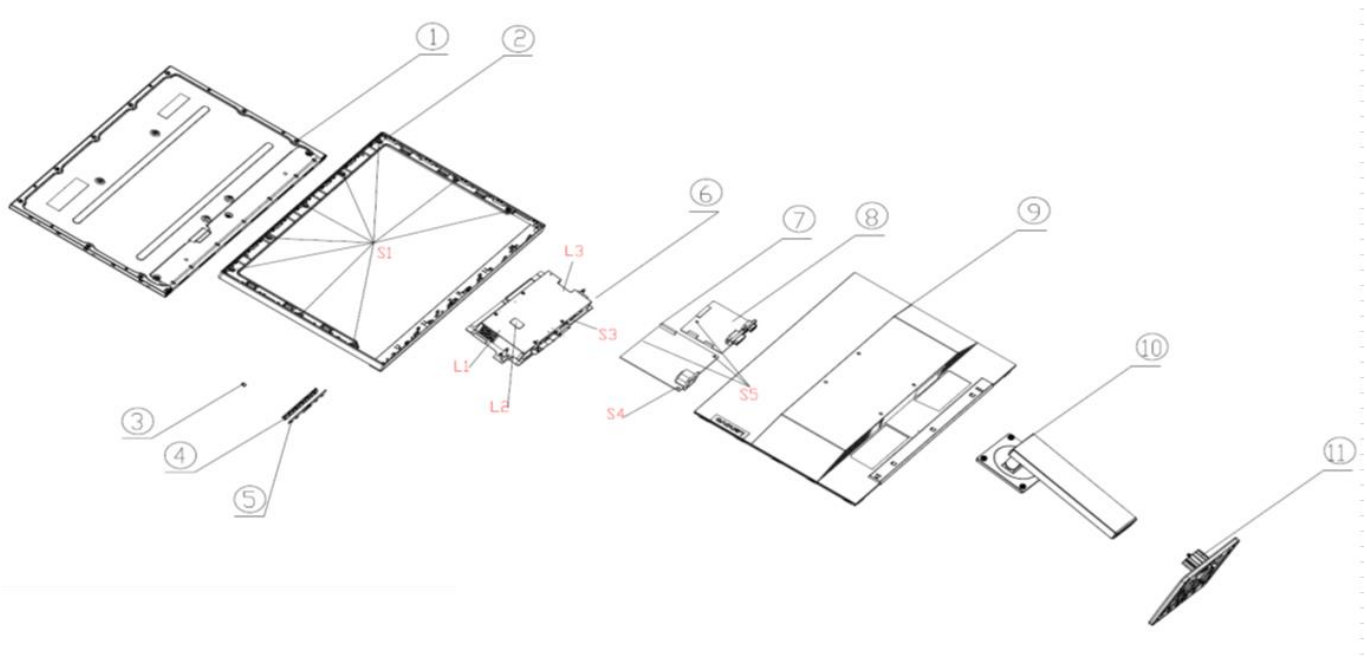


# E27Q-20 Simplified service manual for dismantling

Model Name: Lenovo E27Q-20



Exploded Diagram



## 1. Precaution



Please read the precaution as follows to prevent any damages to the LCD Monitor.

Make sure all power connector is removed. Be sure that the LCD Monitor is in power off status.


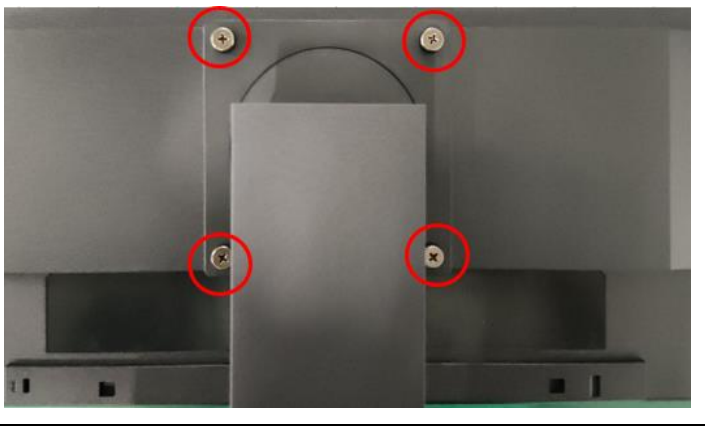
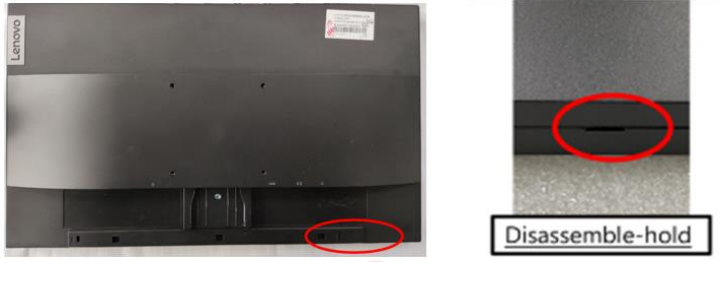
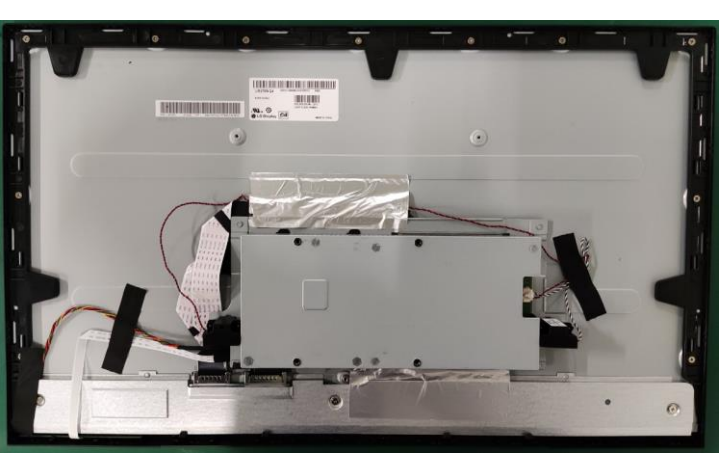
<p>Prepare soft cloth and sponge as working platform to place LCD monitor horizontally.</p>	
<p>Hold LCD by the side carefully and DON'T touch or press panel directly.</p>	

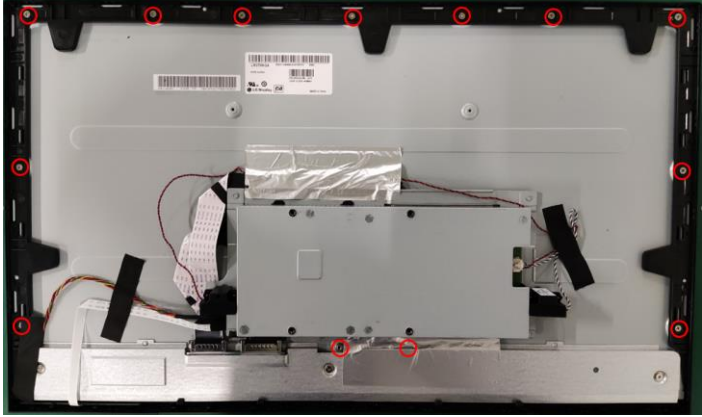
 

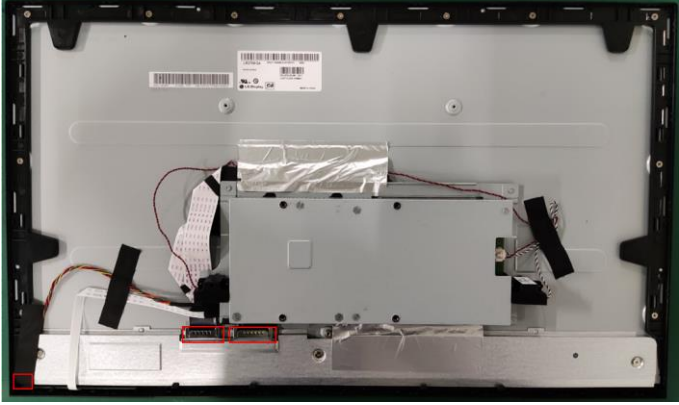

## 2. Appropriate tools

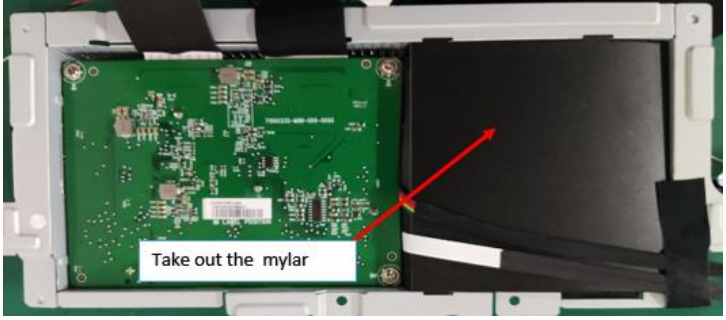

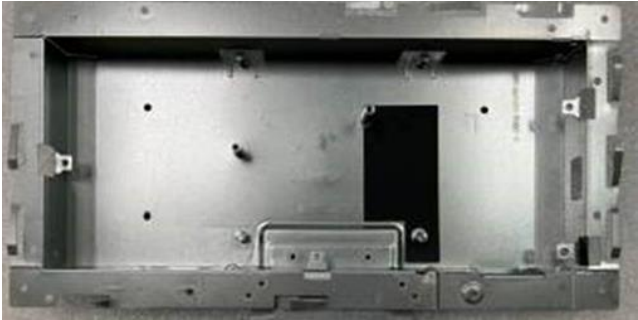
Select the Appropriate tools for disassembly and re-assembly.

Phillips screwdriver (#2)	
spacer screwdriver	
C/D disassembly tool	
Gloves or soft cloth	

### 3. Disassembly SOP

<p>Put the monitor on a flat surface (Put the EPE on under the monitor)</p>	
<p>Remove the screw *4pcs Tool : Screwdriver #2 Pull out stand</p>	
<p>Use the C/D disassembly tool to release Rear cover hook from disassemble hole on bottom</p>	
<p>Remove All tape and foil</p>	

<p>Remove All screw.</p> <p>Tool : Screwdriver #2</p>	
<p>Release the middle frame from the Panel</p> <p>Release the keypad pcb from the the middle frame</p>	 
<p>Unplug light bar line and LVDS line</p>	
<p>Remove the acetate tape</p>	

<p>Take out the mylar sheet from Main chassis</p>	
<p>Remove All screw. Tool : Screwdriver #2 Tool : spacer screwdriver</p>	
<p>Take out PCB and Peel off all mylar.</p>	
<p>Take out the Thermal pads from Power pcb</p>	