


L32P-30 Simplified service manual for dismantling

Model Name: Lenovo L32P-30

Exploded Diagram

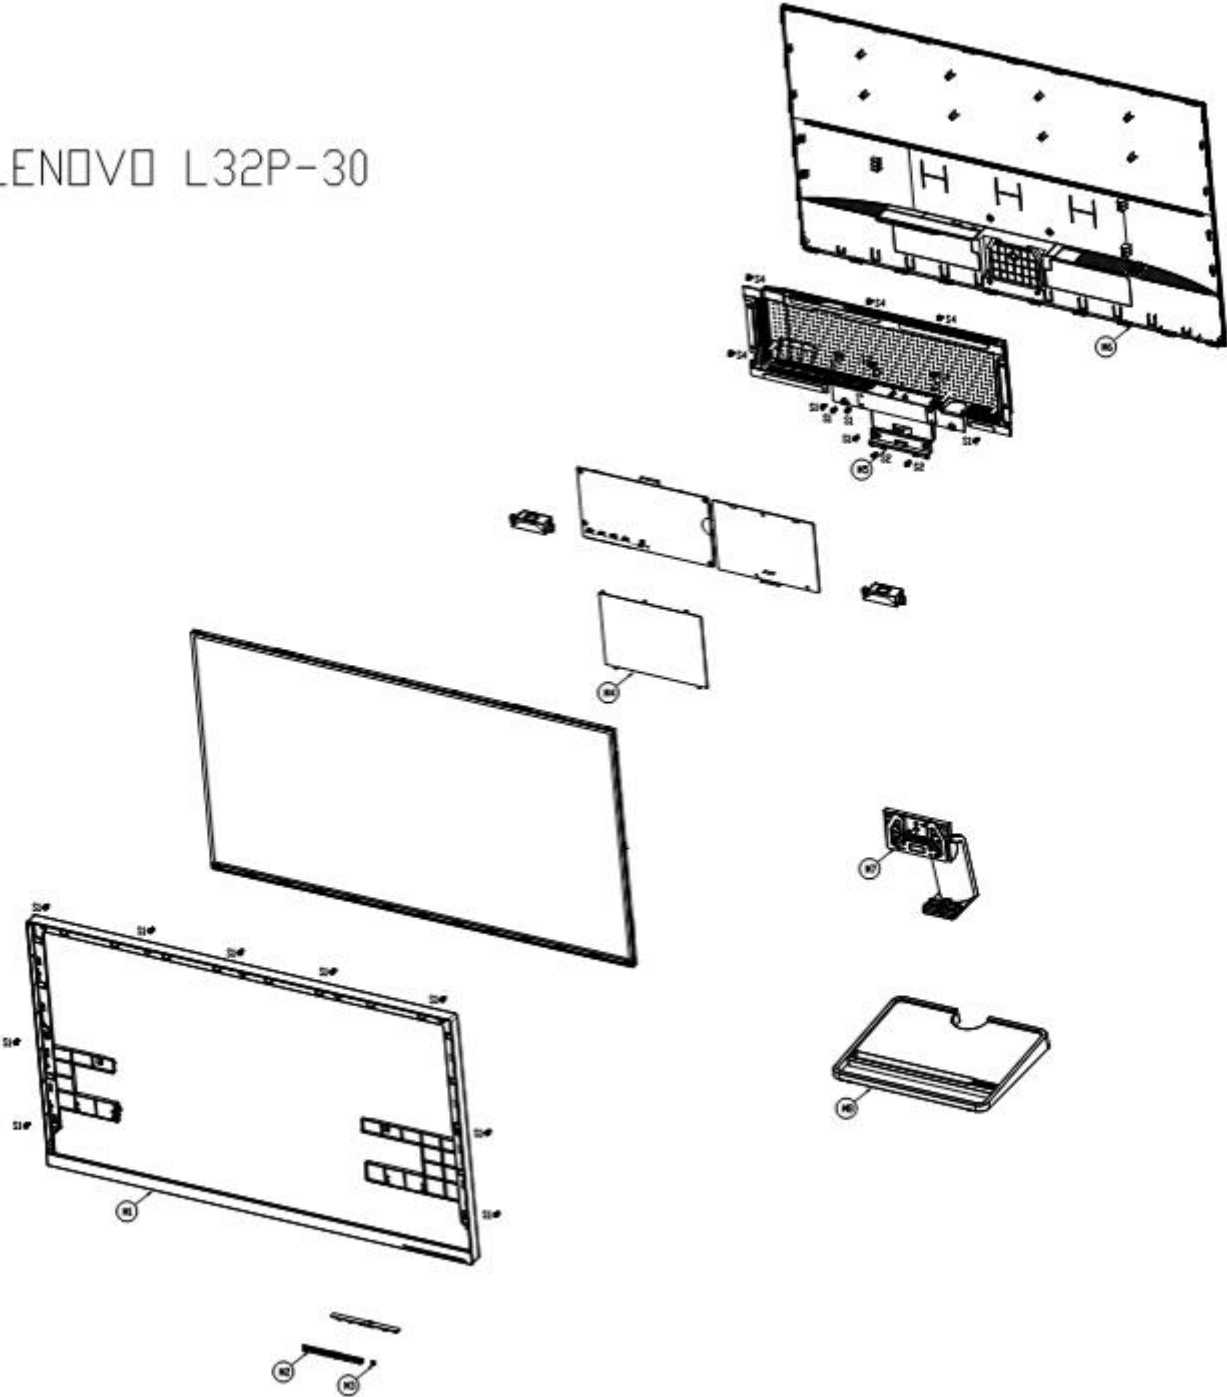

LENOVO L32P-30



1. Precaution

Please read the precaution as follows to prevent any damages to the LCD Monitor.

Make sure all power connector is removed. Be sure that the LCD Monitor is in power off status.

<p>Prepare soft cloth and sponge as working platform to place LCD monitor horizontally.</p>	
<p>Hold LCD by the side carefully and DON'T touch or press panel directly.</p>	

2. Appropriate tools

Select the Appropriate tools for disassembly and re-assembly.

Phillips screwdriver (#2)	
spacer screwdriver	
C/D disassembly tool	
Gloves or soft cloth	

3. Disassembly SOP


Remove the screw on the hinge firstly and then pull out the hinge by hand




Use the C/D disassembly tool to release Rear cover hook from the bottom site



Remove the tapes and disconnect phone jack connectors , then unscrew the 3 *screws on the mainframe .
Tool : Phillips screwdriver (#2)

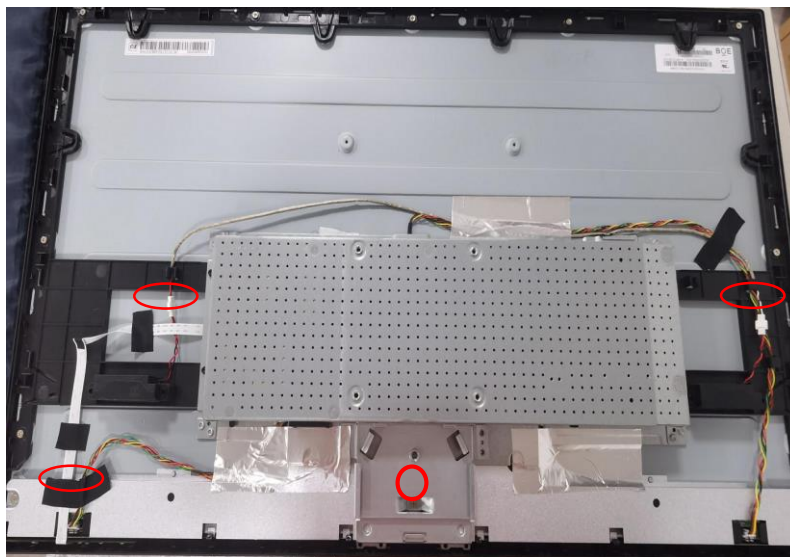


Turn over the mainframe and disconnect the connectors as the picture

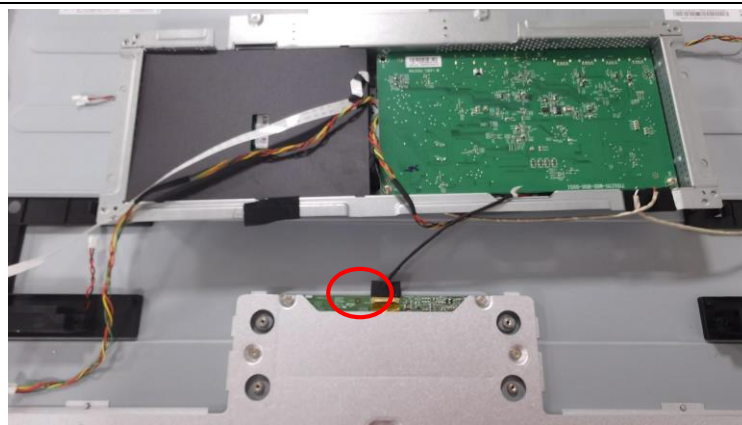


Remove the mylar sheet on the power board




Unscrew the
6*screws on the
boards
Tool : Phillips
screwdriver (#2)

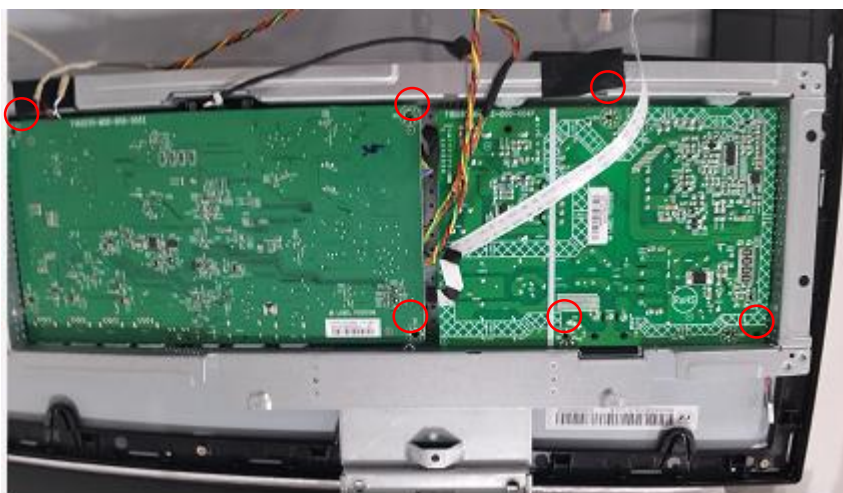


Mainboard and
power board

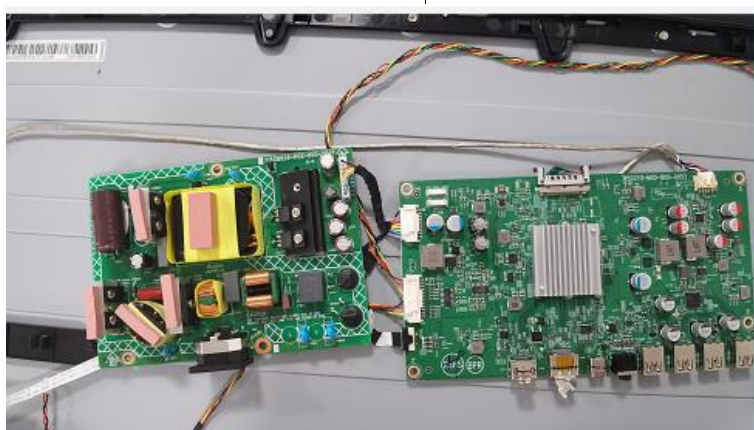

Unscrew the screws on the middle frame .
Tool : Phillips screwdriver (#2)

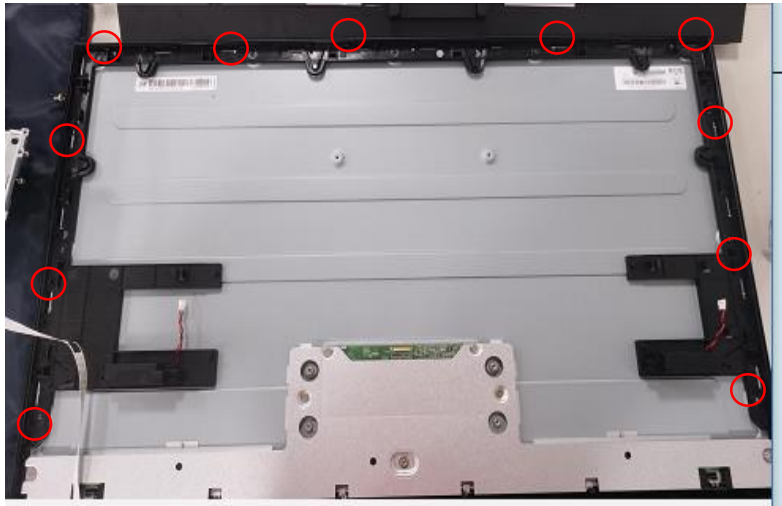

Disconnect the connector on the keyboard

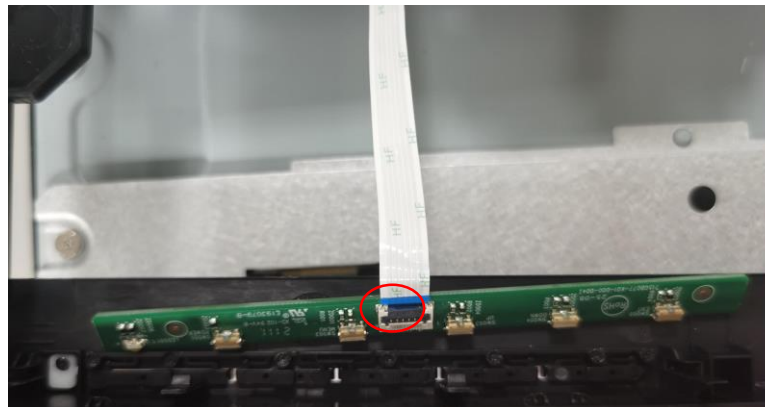

Panel

