



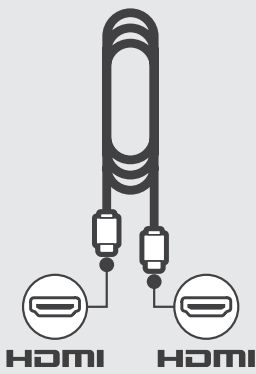
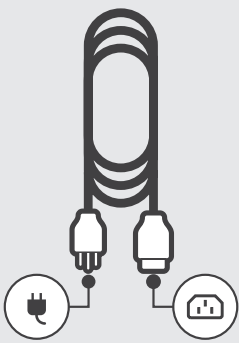


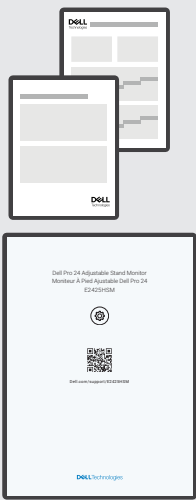


צג Dell Pro 24 עם מעמד מתכוון
E2425HSM

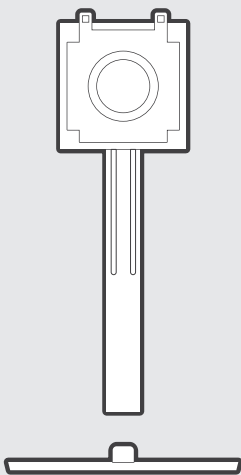


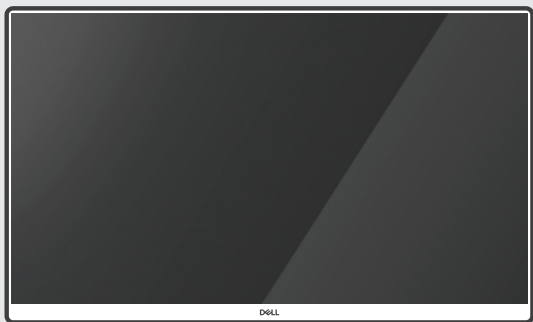



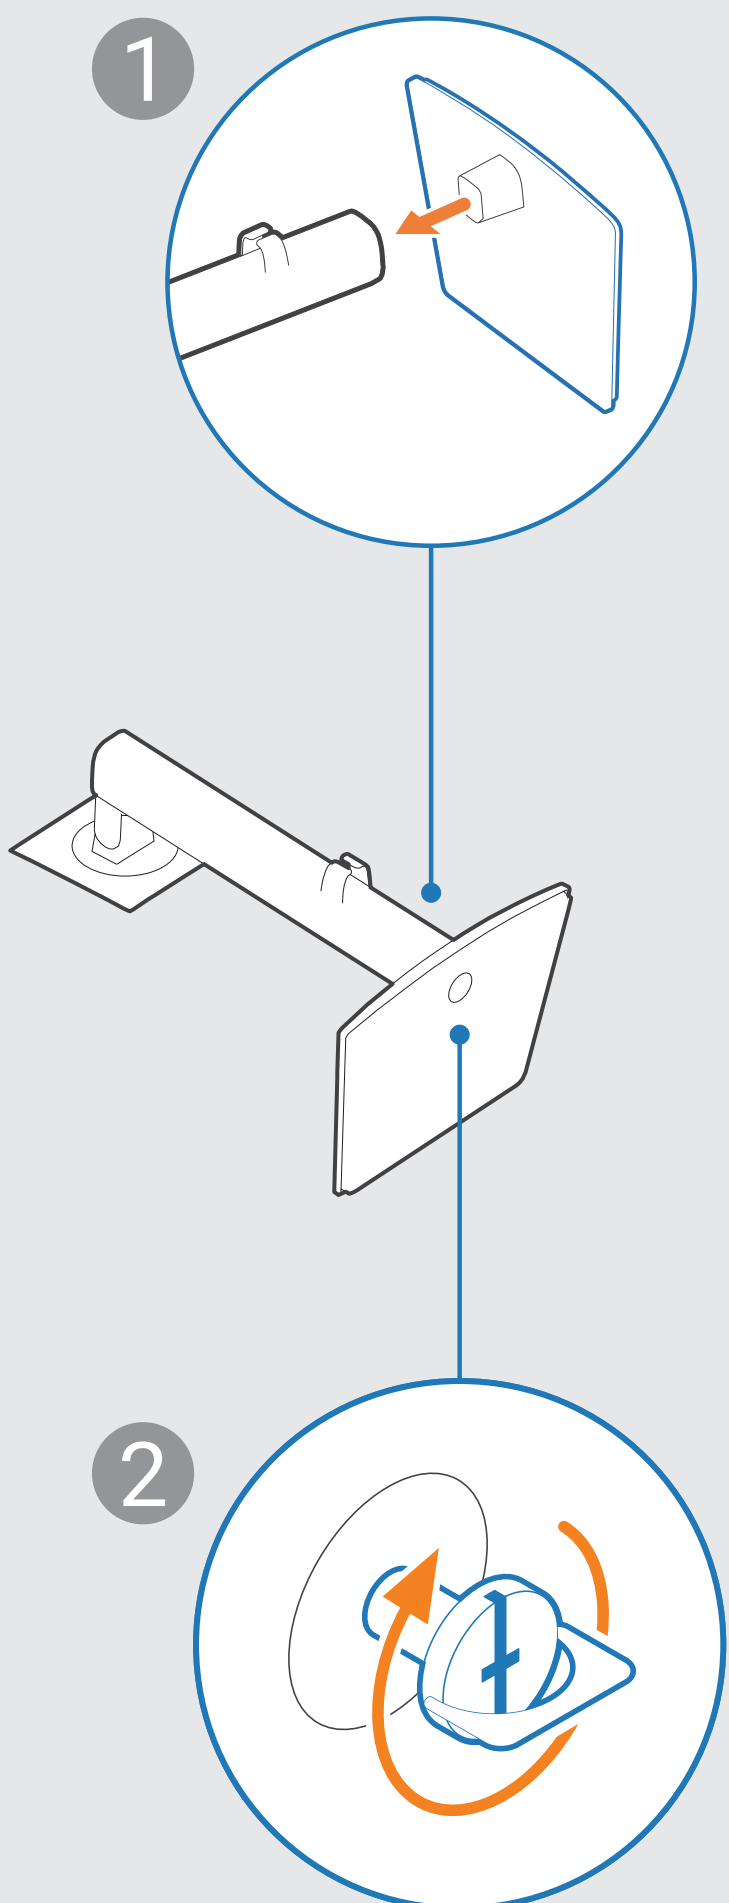


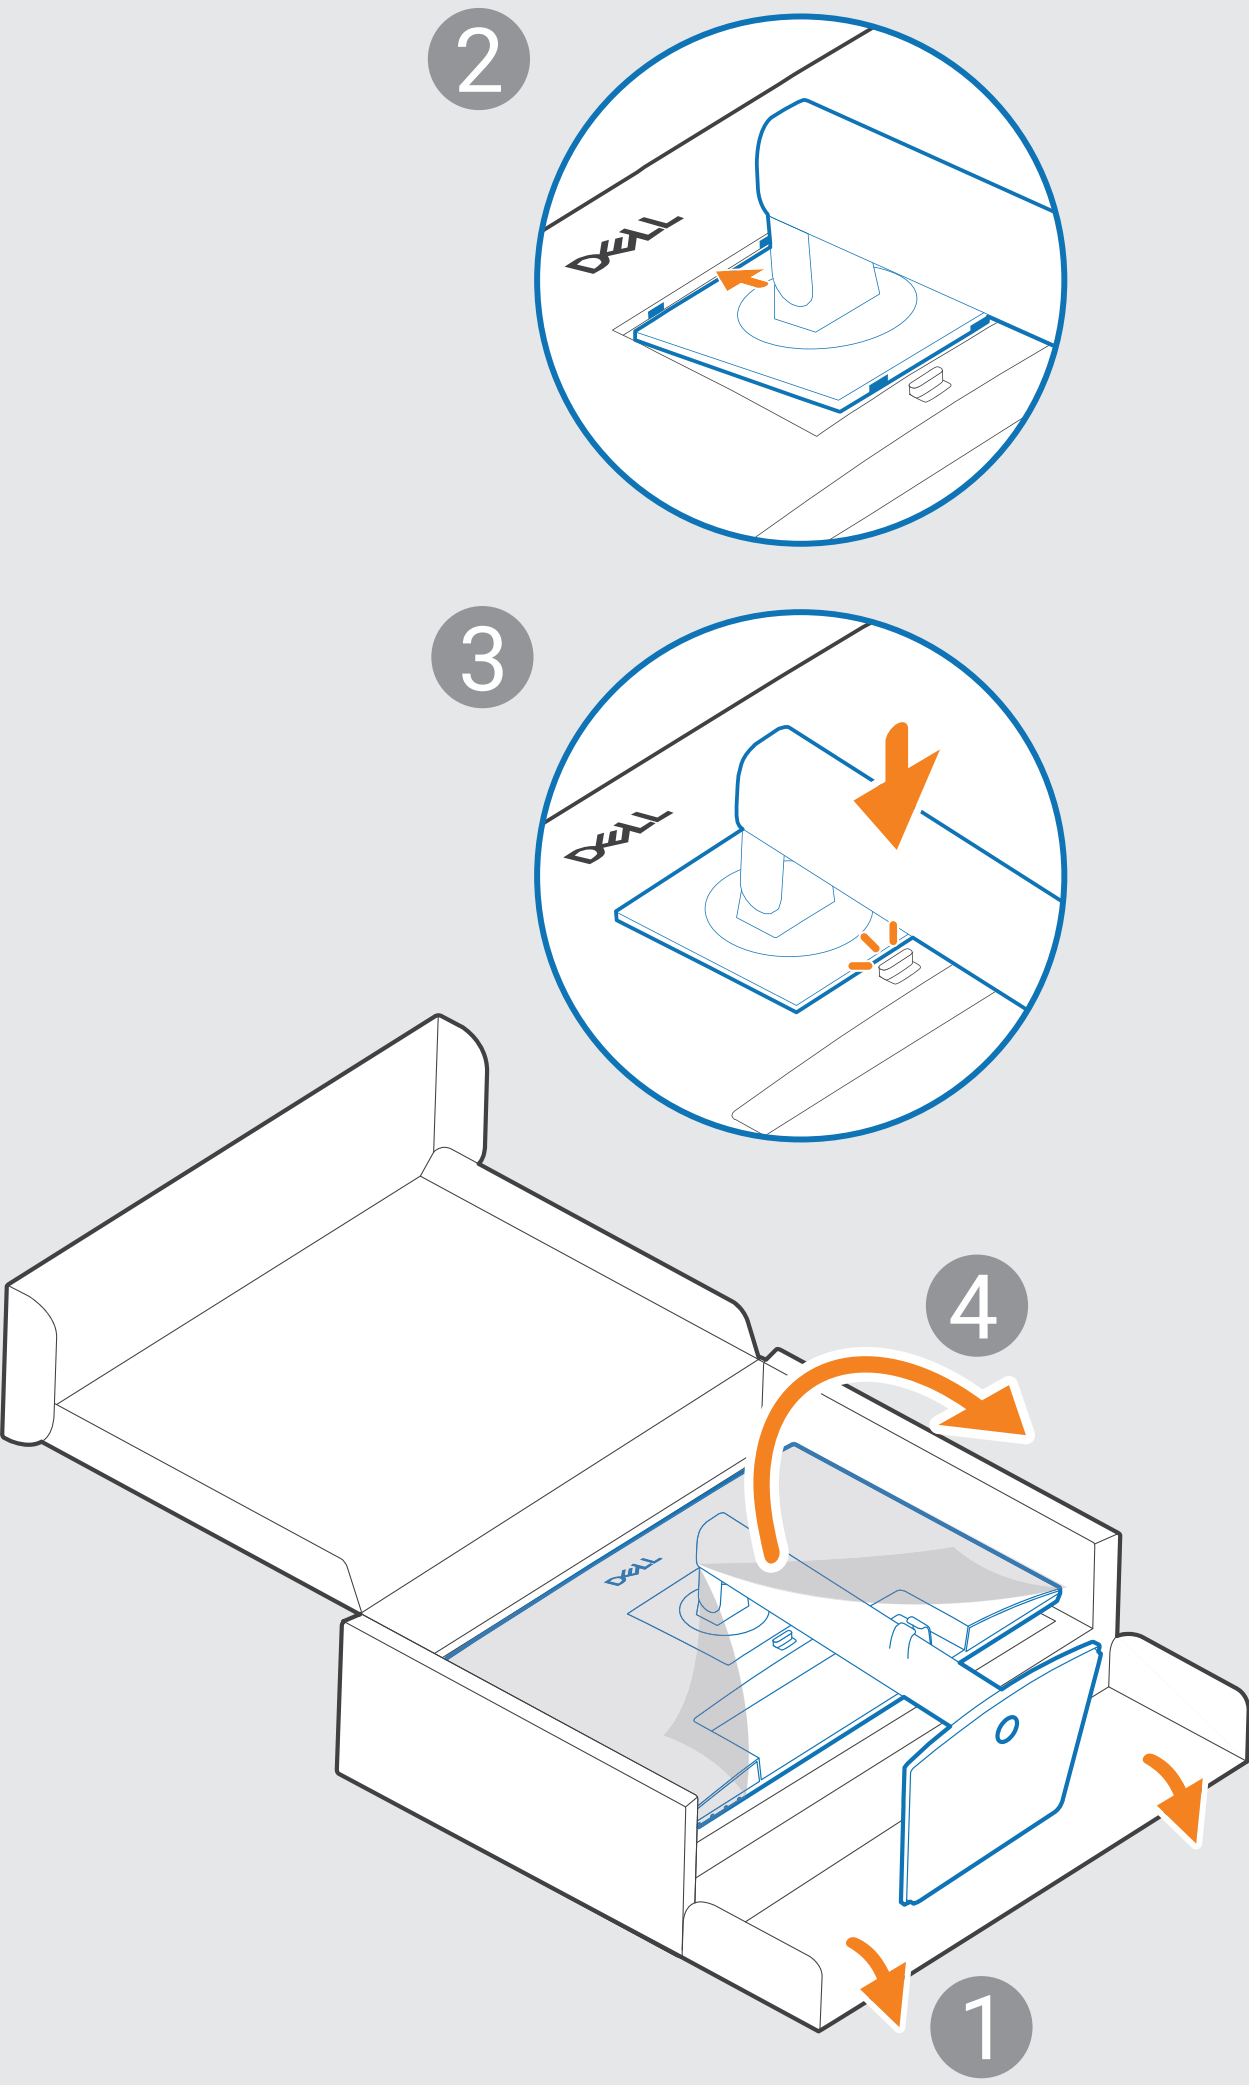




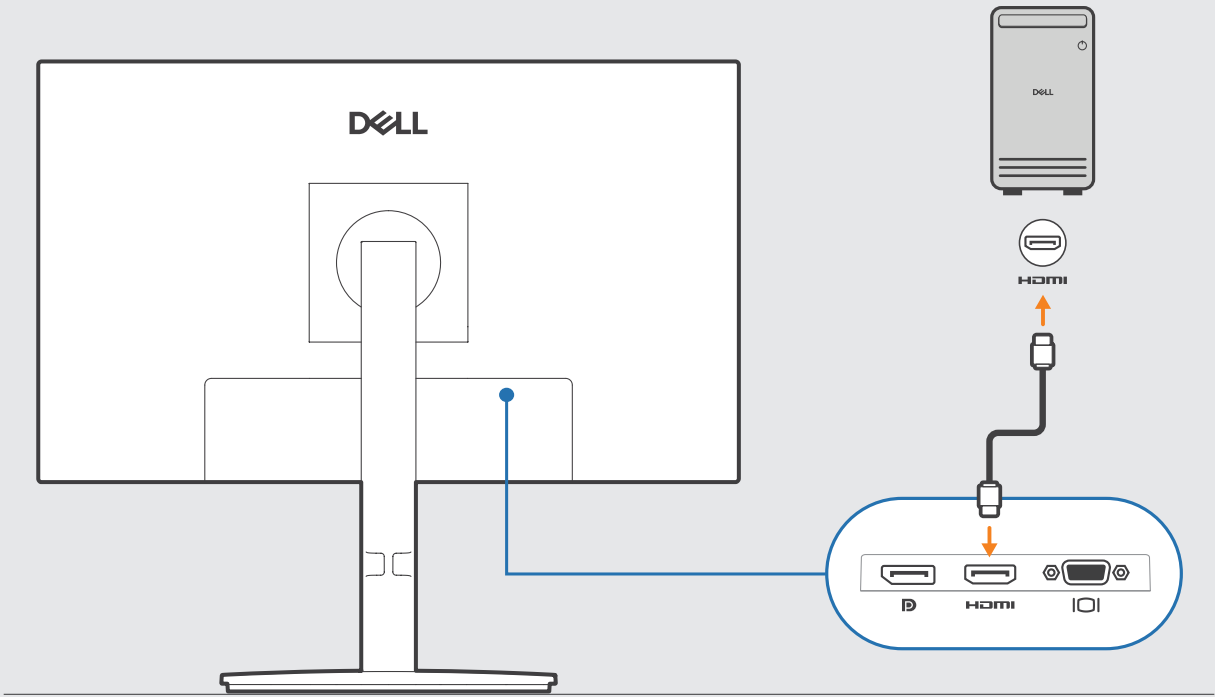


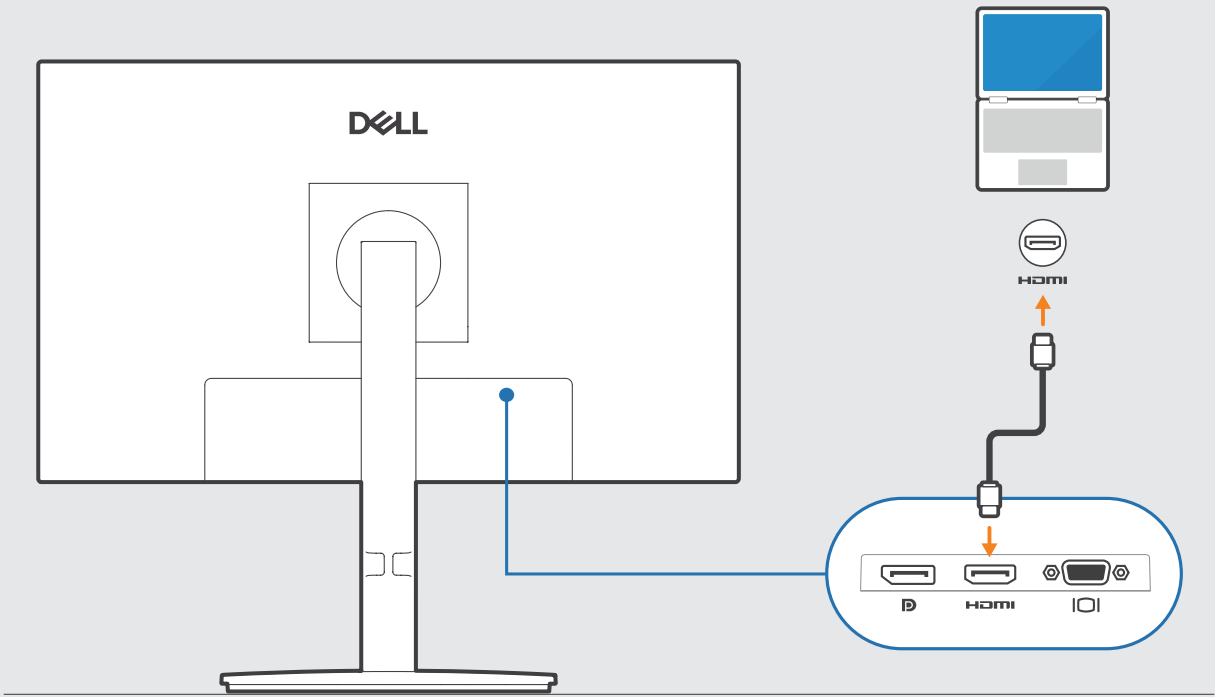

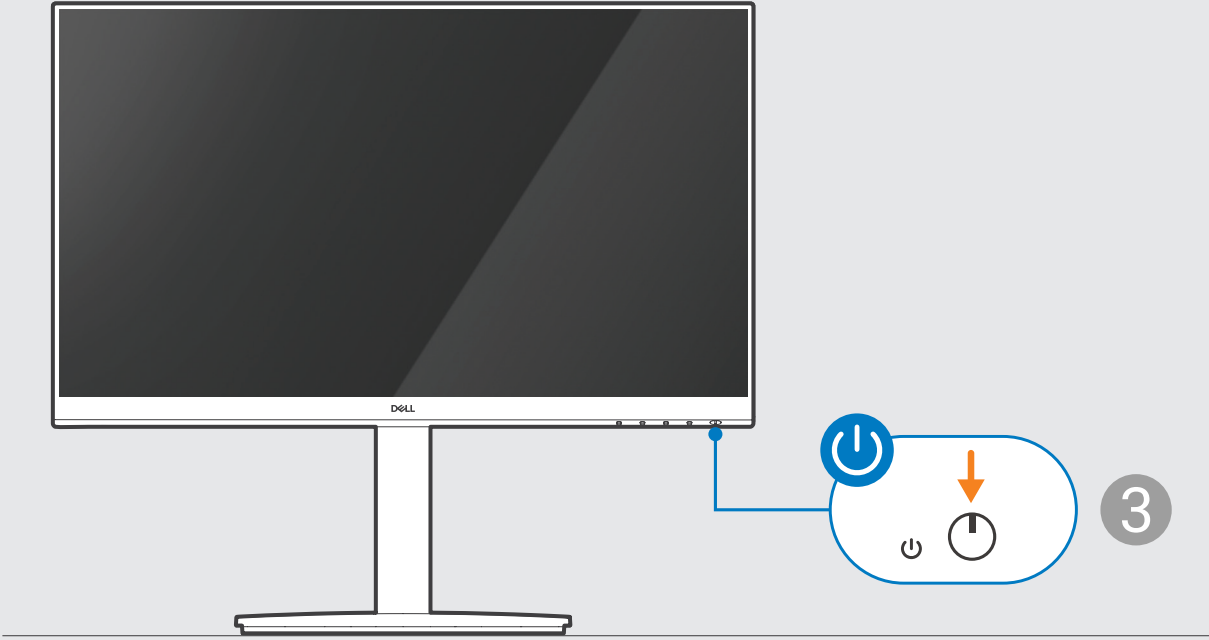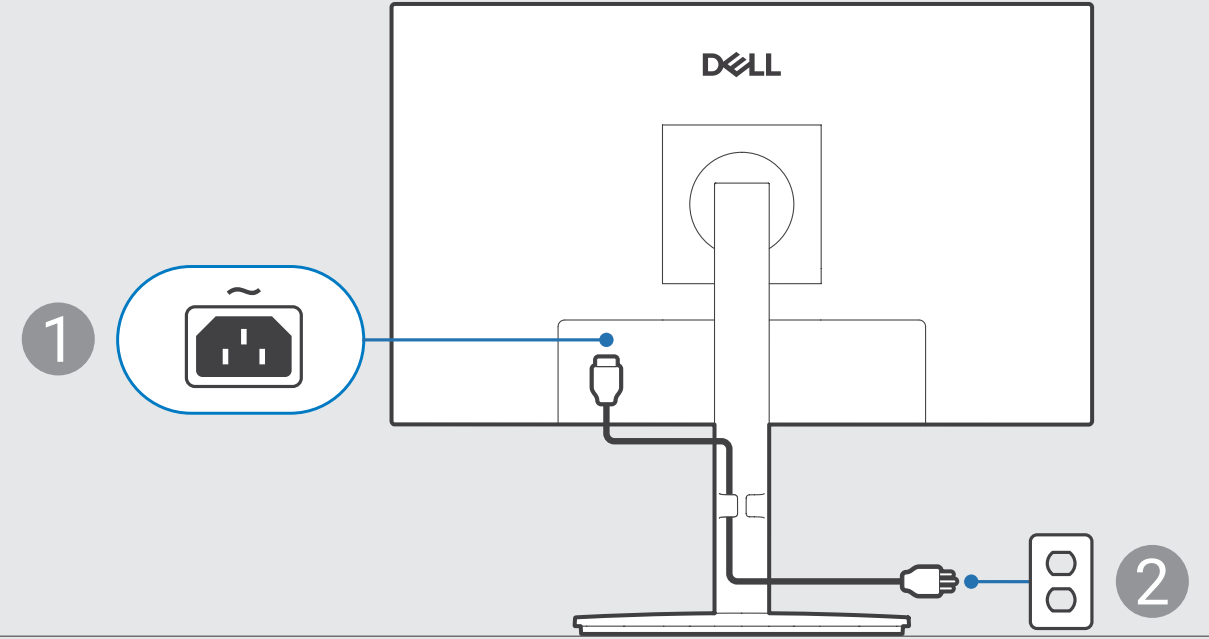


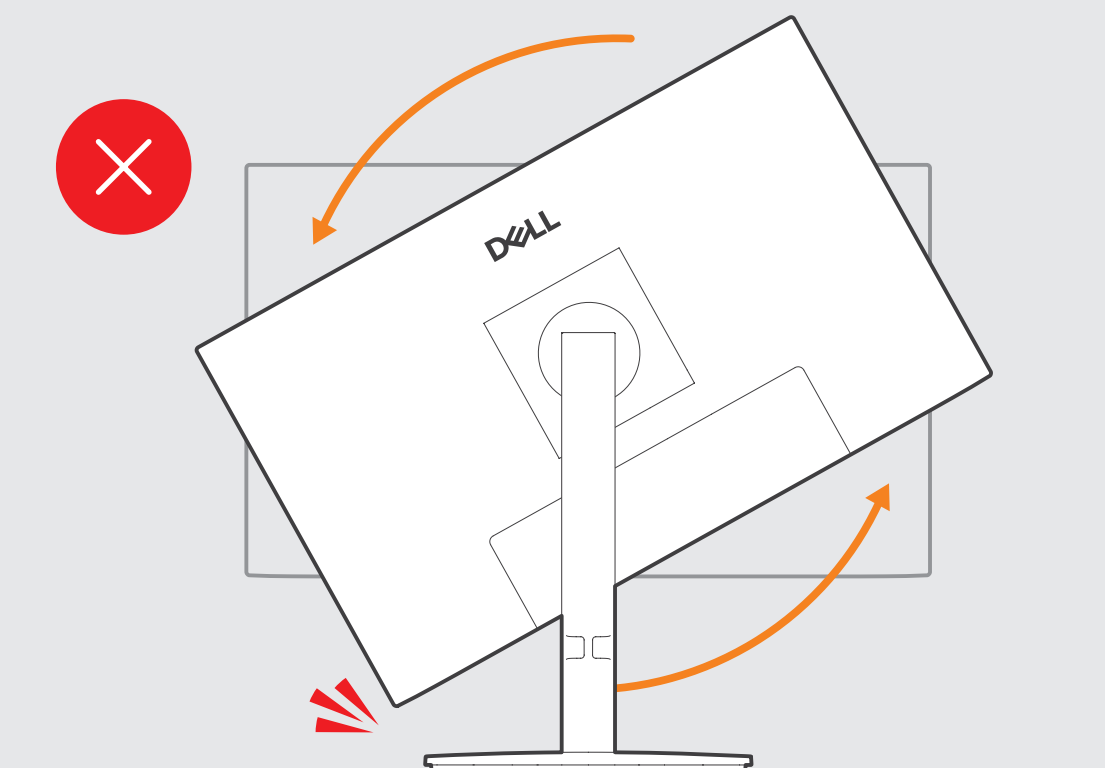



1



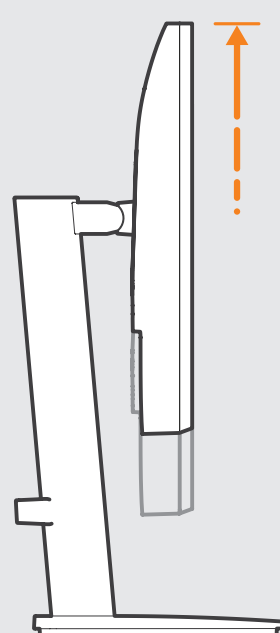



2

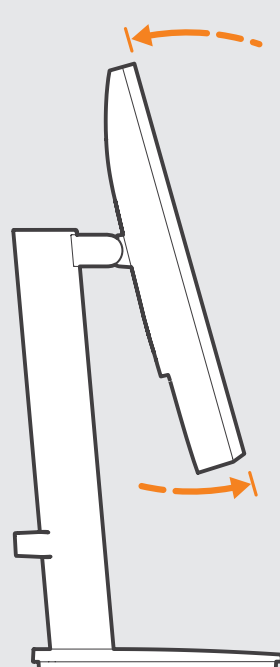


3

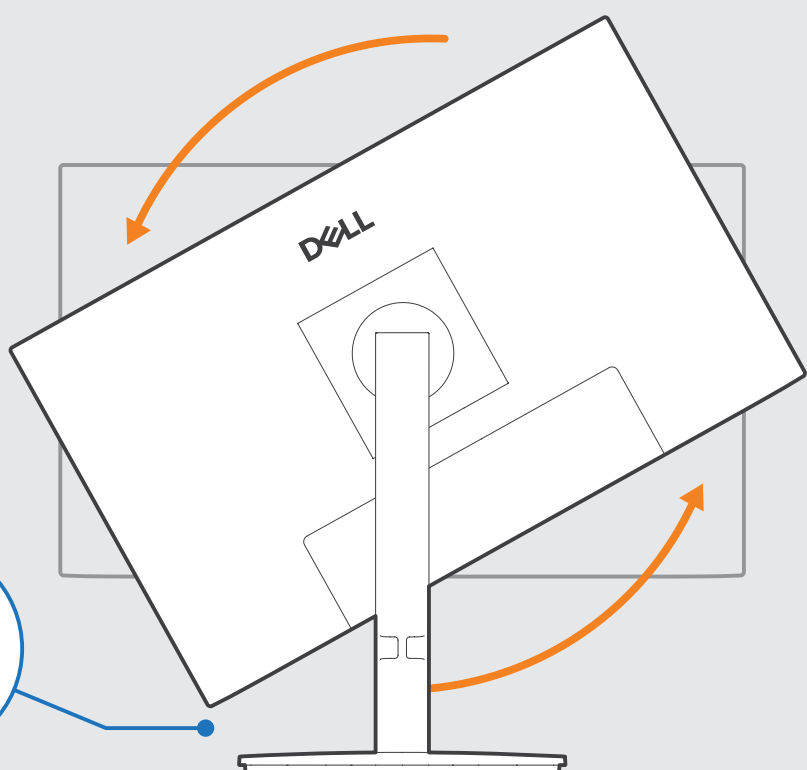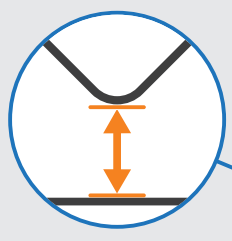

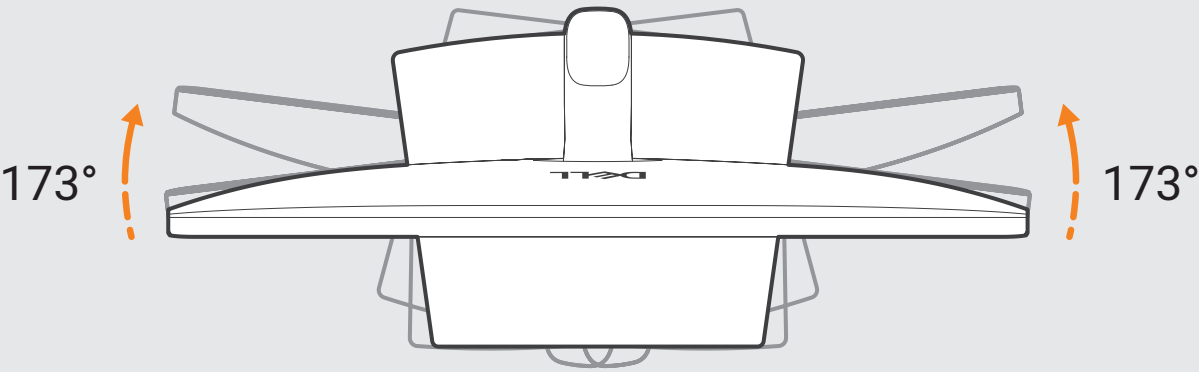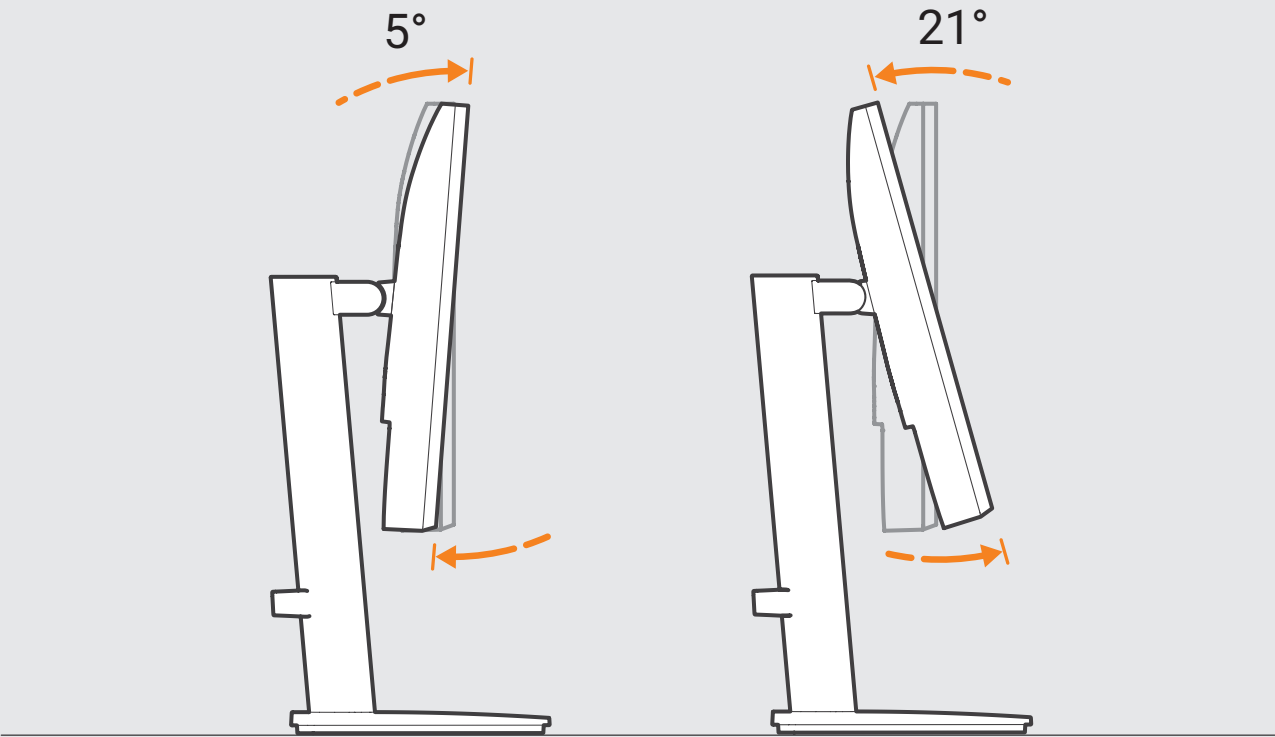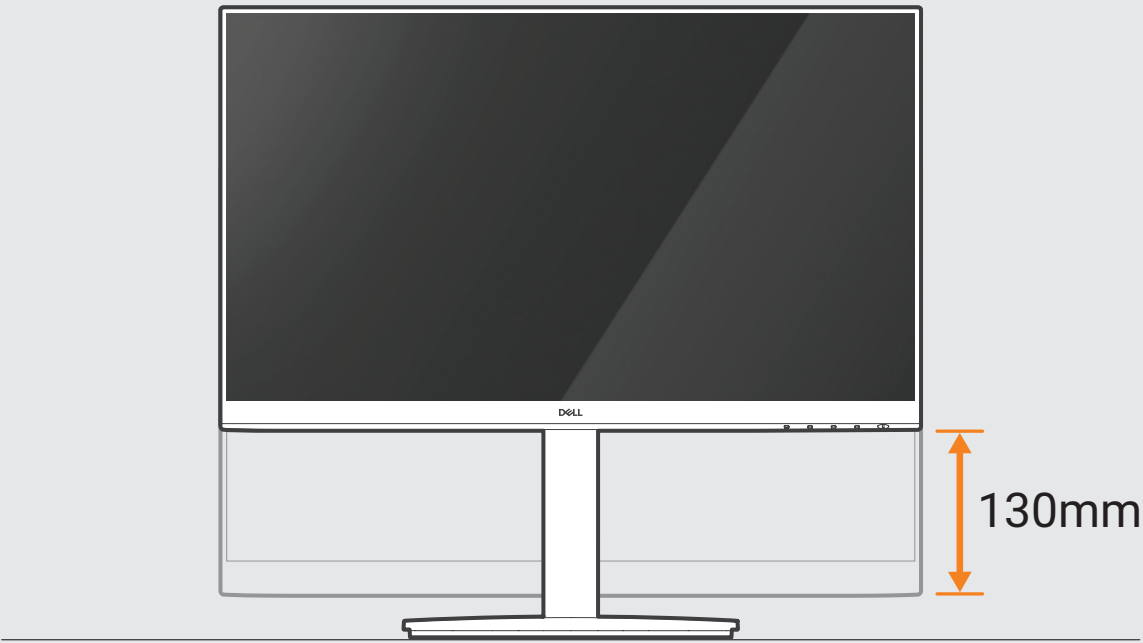

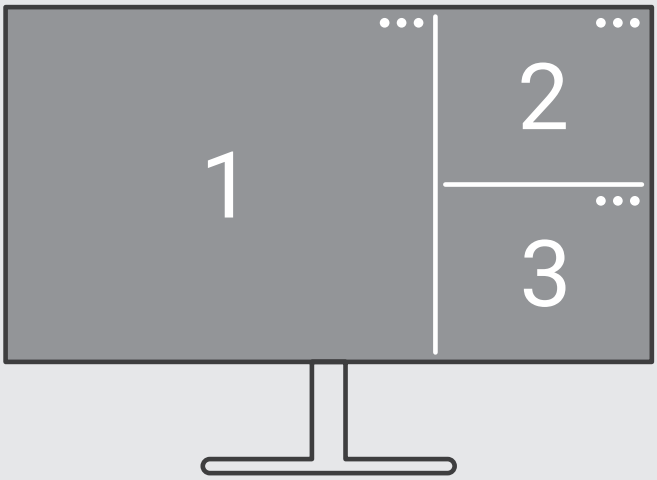

Dell Display and Peripheral Manager
Dell.com/support/ddpm

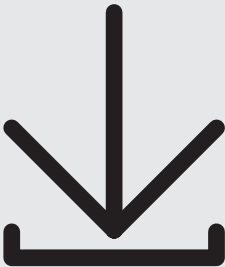

Dell.com/support/E2425HSM