

Dell Pro Rugged 13

RA13250

Resistive Touchpad User's Guide

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Chapter 1: Dell Pro Rugged 13 RA13250 Resistive Touchpad User's Guide.....	4
---	----------

Dell Pro Rugged 13 RA13250 Resistive Touchpad User's Guide

Your Dell Pro Rugged 13 RA13250 is shipped with a resistive touchpad for computers that are used in the rugged environment. Unlike the capacitive touchpads on most laptops, you need to apply slightly more pressure when you use the resistive touchpad.

This guide provides the information which you must know to achieve a smooth and accurate experience when using your resistive touchpad.

Table 1. Common Touchpad Gestures

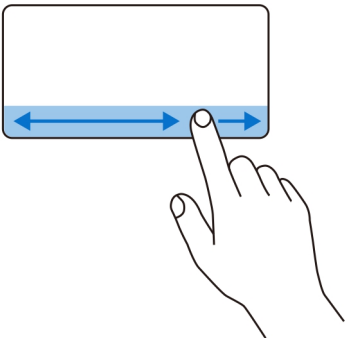
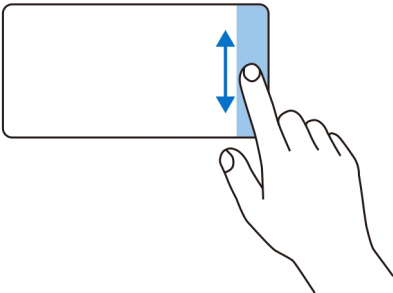
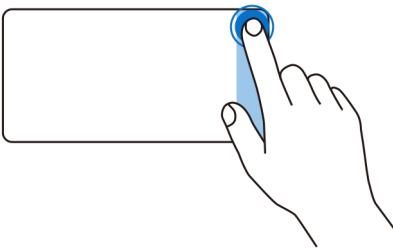
Gesture	Description
Scroll left or right 	Swipe your finger left or right on the bottom edge of the touchpad to scroll horizontally across a page.
Scroll up or down 	Swipe your finger up or down on the right edge of the touchpad to scroll vertically up or down a page.
Scroll up continuously 	Press and hold your finger at the upper-right edge of the touchpad to scroll up a page rapidly.

Table 1. Common Touchpad Gestures (continued)

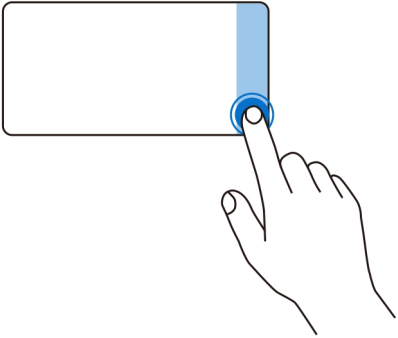
Gesture	Description
Scroll down continuously 	Press and hold your finger at the bottom-right edge of the touchpad to scroll down a page rapidly.

Table 2. Main click functions

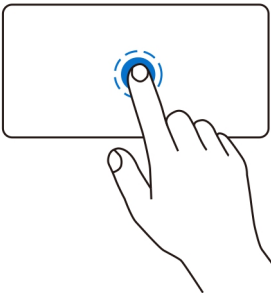
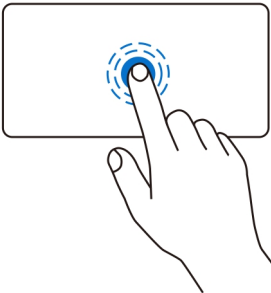
Gesture	Description
Click 	Tap your finger on the touchpad to select items or close a file.
Double left-click 	Double-tap with a finger to open a file.
Right-click with one finger	Tap your finger on the lower-right corner to open the right-click menu.

Table 2. Main click functions (continued)

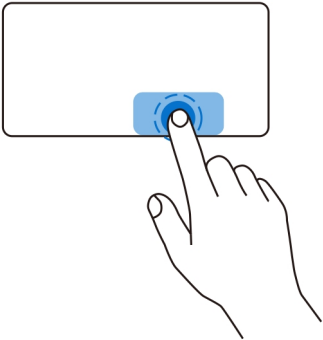
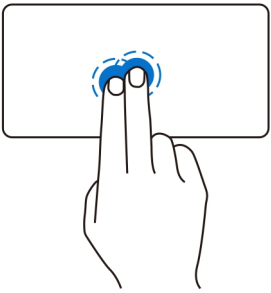
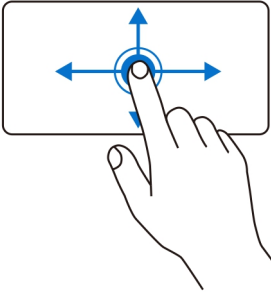
Gesture	Description
	
Right click with two fingers 	Tap with two fingers simultaneously anywhere on the touchpad to open the right-click menu.
Cursor movement 	Tap your finger within the active area to navigate. All scrolling area functions are disabled and interpreted as cursor movements.

Table 3. Drag and drop function

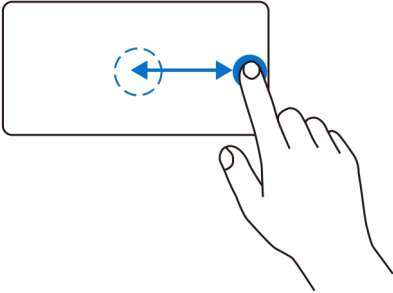
Gesture	Description
Keep dragging files 	Drag the file to the right edge of the touchpad and release your finger. Within three seconds, if you touch the touchpad again and move your finger, the file remains selected, and you can continue to drag the file to the preferred position. The file will not be released immediately.

Table 4. Two-finger gestures

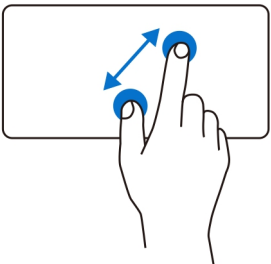
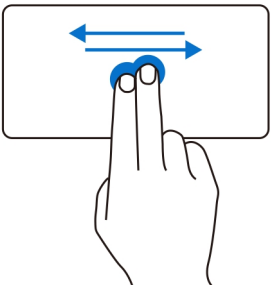
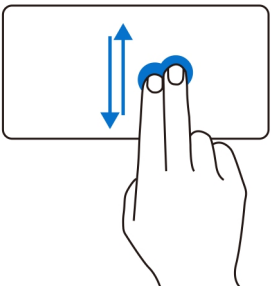
Gesture	Description
Zoom in or out 	Pinch two fingers to zoom in or out.
Scroll left or right with two fingers 	Swipe left or right with two fingers to scroll left or right.
Scroll up or down with two fingers 	Slide up or down with two fingers to scroll up or down.

Table 5. Buttons below the touchpad

Gesture	Description
Left-click or right-click	You can use the buttons below touchpad to perform left-click or right-click functions.

Table 5. Buttons below the touchpad

Gesture	Description
