

# Dell Pro Micro

QCM1250

Owner's Manual

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

|  |           |
|--|-----------|
| <b>Chapter 1: Views of Dell Pro Micro QCM1250</b> .....          | <b>7</b>  |
| Front view.....  | 7         |
| Back view.....   | 8         |
| Top view.....  | 10        |
| <b>Chapter 2: Set up your computer</b> .....                     | <b>11</b> |
| <b>Chapter 3: Specifications of Dell Pro Micro QCM1250</b> ..... | <b>16</b> |
| Dimensions and weight.....                                       | 16        |
| Processor.....   | 16        |
| Chipset.....   | 18        |
| Operating system.....  | 18        |
| Memory.....  | 18        |
| Memory matrix.....   | 19        |
| External ports and slots.....                                    | 20        |
| Internal slots.....  | 21        |
| Ethernet.....  | 21        |
| Wireless module.....   | 21        |
| Audio.....   | 22        |
| Storage.....   | 22        |
| Storage matrix.....  | 23        |
| Power adapter.....   | 23        |
| GPU—Integrated.....  | 24        |
| Video port resolution (GPU—Integrated).....                      | 24        |
| External display support (GPU—Integrated).....                   | 25        |
| Hardware security.....   | 25        |
| Environmental.....   | 26        |
| Regulatory compliance.....                                       | 26        |
| Operating and storage environment.....                           | 26        |
| Dell support policy.....   | 27        |
| <b>Chapter 4: Working inside your computer</b> .....             | <b>28</b> |
| Safety instructions.....   | 28        |
| Before working inside your computer.....                         | 28        |
| Safety precautions.....  | 29        |
| Electrostatic discharge—ESD protection.....                      | 29        |
| ESD Field Service kit .....                                      | 30        |
| Transporting sensitive components.....                           | 31        |
| After working inside your computer.....                          | 31        |
| BitLocker.....   | 31        |
| Recommended tools.....   | 31        |
| Screw list.....  | 32        |
| Major components of Dell Pro Micro QCM1250.....                  | 33        |

|  |           |
|--|-----------|
| <b>Chapter 5: Removing and installing side cover.....</b>                        | <b>36</b> |
| Removing the side cover.....   | 36        |
| Installing the side cover.....   | 37        |
| <b>Chapter 6: Removing and installing coin-cell battery.....</b>                 | <b>39</b> |
| Removing the coin-cell battery.....  | 39        |
| Installing the coin-cell battery.....  | 40        |
| <b>Chapter 7: Removing and installing Customer Replaceable Units (CRUs).....</b> | <b>42</b> |
| Speaker.....   | 42        |
| Removing the speaker.....  | 42        |
| Installing the speaker.....  | 43        |
| Solid state drive.....   | 44        |
| Removing the M.2 2230 solid-state drive in a single SSD configuration.....       | 44        |
| Installing the M.2 2230 solid-state drive in a single SSD configuration.....     | 45        |
| Removing the M.2 2280 solid-state drive in a single SSD configuration.....       | 47        |
| Installing the M.2 2280 solid-state drive in a single SSD configuration.....     | 47        |
| Removing the M.2 2230 solid-state drive in a dual SSD configuration.....         | 49        |
| Installing the M.2 2230 solid-state drive in a dual SSD configuration.....       | 51        |
| Removing the M.2 2280 solid-state drive in a dual SSD configuration.....         | 52        |
| Installing the M.2 2280 solid-state drive in a dual SSD configuration.....       | 53        |
| Wireless card.....   | 55        |
| Removing the wireless card.....  | 55        |
| Installing the wireless card.....  | 56        |
| Fan.....   | 57        |
| Removing the fan.....  | 57        |
| Installing the fan.....  | 58        |
| Memory.....  | 60        |
| Removing the memory module.....  | 60        |
| Installing the memory module.....  | 61        |
| External puck antenna.....   | 63        |
| Removing external puck antenna.....  | 63        |
| Installing external puck antenna module.....                                     | 64        |
| SMA antenna module.....  | 65        |
| Removing SMA antenna module.....   | 65        |
| Installing SMA antenna module.....   | 66        |
| Optional Input/Output modules.....   | 68        |
| Dual USB 3.2 Gen 2 ports module.....   | 68        |
| USB Type-C port module with DisplayPort Alt mode and Power Delivery.....         | 70        |
| DisplayPort module.....  | 75        |
| HDMI port module.....  | 78        |
| VGA port module.....   | 81        |
| PS2 port module.....   | 84        |
| Serial port module.....  | 87        |
| Fiber optic port module.....   | 90        |
| <b>Chapter 8: Removing and installing Field Replaceable Units (FRUs).....</b>    | <b>94</b> |
| Heat sink.....   | 94        |

|   |            |
|---|------------|
| Removing the heat sink.....   | 94         |
| Installing the heat sink.....   | 95         |
| Internal antenna module.....  | 96         |
| Removing the antenna module (black cable).....                          | 96         |
| Installing the antenna module (black cable).....                        | 97         |
| Removing the antenna module (white cable).....                          | 99         |
| Installing the antenna module (white cable).....                        | 100        |
| Processor.....  | 102        |
| Removing the processor.....   | 102        |
| Installing the processor.....   | 103        |
| Speaker holder.....   | 104        |
| Removing the speaker holder.....  | 104        |
| Installing the speaker holder.....                                      | 105        |
| System board.....   | 106        |
| Removing the system board.....  | 106        |
| Installing the system board.....  | 109        |
| <b>Chapter 9: Software.....</b>   | <b>114</b> |
| Operating system.....   | 114        |
| Drivers and downloads.....  | 114        |
| <b>Chapter 10: BIOS Setup.....</b>                                      | <b>115</b> |
| Entering BIOS Setup program.....  | 115        |
| Navigation keys.....  | 115        |
| F12 One Time Boot menu.....   | 115        |
| System setup options.....   | 116        |
| Updating the BIOS.....  | 126        |
| Updating the BIOS in Windows.....                                       | 126        |
| Updating the BIOS in Linux and Ubuntu.....                              | 126        |
| Updating the BIOS using the USB drive in Windows.....                   | 126        |
| Updating the BIOS from the One-Time boot menu.....                      | 127        |
| System and setup password.....  | 127        |
| Assigning a System Setup password.....                                  | 127        |
| Deleting or changing an existing system password or setup password..... | 128        |
| Clearing CMOS settings.....   | 128        |
| Clearing system and setup passwords.....                                | 128        |
| <b>Chapter 11: Troubleshooting.....</b>                                 | <b>129</b> |
| Dell SupportAssist Pre-boot System Performance Check diagnostics.....   | 129        |
| Running the SupportAssist Pre-Boot System Performance Check.....        | 129        |
| Power-Supply Unit Built-in Self-Test .....                              | 129        |
| System-diagnostic lights.....   | 129        |
| Recovering the operating system.....                                    | 130        |
| Real-Time Clock—RTC reset.....  | 131        |
| Backup media and recovery options.....                                  | 131        |
| Network power cycle.....  | 131        |
| <b>Chapter 12: Getting help and contacting Dell.....</b>                | <b>132</b> |

**Chapter 13: Revision history.....133**

# Views of Dell Pro Micro QCM1250

## Front view

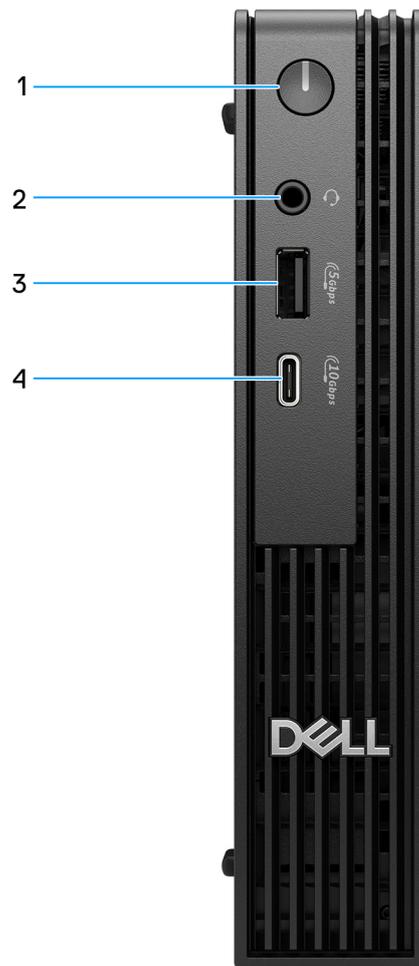


Figure 1. Front view

### 1. Power button

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state. When the computer is turned on, press the power button to put the computer into a sleep state; press and hold the power button for 10 seconds to force shut-down the computer.

### 2. Headset (headphone and microphone combo) port

Connect headphones or a headset.

### 3. USB 3.2 Gen 1 (5 Gbps) port

Connect devices such as external storage devices and printers. Provides a data transfer speed of up to 5 Gbps.

### 4. USB 3.2 Gen 2 (10 Gbps) Type-C port

Connect devices such as external storage devices and printers. Provides a data transfer speed of up to 10 Gbps.

## Back view

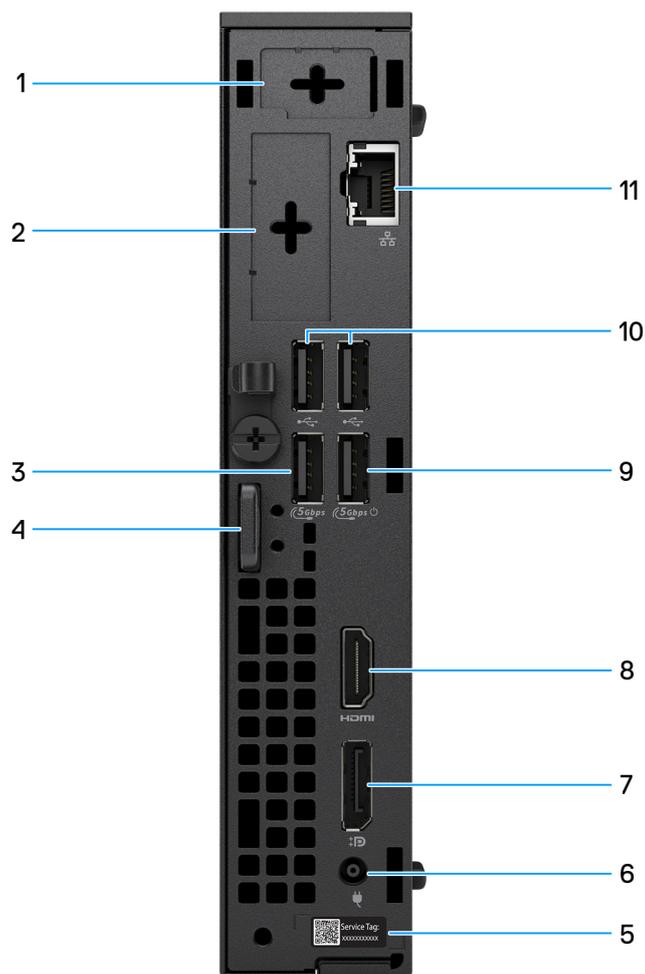


Figure 2. Back view

### 1. Optional external antenna port

Supports an optional external antenna module.

### 2. Optional I/O module port

Supports an optional I/O module with one of the following ports:

- HDMI 2.1 FRL port

**NOTE:** This port is available only for computers that are shipped with Intel Core Ultra processors.

- DisplayPort 2.1 (UHBR20) port

**NOTE:** This port is available only for computers that are shipped with Intel Core Ultra processors.

- HDMI 2.1 TMDS port

**NOTE:** This port is available only for computers that are shipped with Intel Core i3, i5, i7 and Intel 300T processors.

- DisplayPort 1.4a (HBR3) port

**NOTE:** This port is available only for computers that are shipped with Intel Core i3, i5, i7 and Intel 300T processors.

- VGA port
- USB 3.2 Gen 2 Type-C port with DisplayPort Alt Mode and 100W Power Input
- Two USB 3.2 Gen 2 ports
- PS2 port
- Serial port
- Fiber optic (5 Gbps, peer-to-peer) port

 **NOTE:** Supports up to 5 Gbps connectivity in peer-to-peer transmission. Actual speed via network depends on equipment compatibility, requiring both transceiver and switch at the same maximum speed.

### 3. **USB 3.2 Gen 1 (5 Gbps) port**

Connect devices such as external storage devices and printers. Provides data transfer speeds of up to 5 Gbps.

### 4. **Kensington security-cable slot and padlock ring**

Connect a security cable to prevent unauthorized movement of your computer and install a standard padlock to prevent unauthorized access to the interior of your computer.

### 5. **Service Tag label**

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

### 6. **Power-adaptor port**

Connect a power adapter to provide power to your computer.

### 7. **DisplayPort 1.4a port**

Connect an external display or a projector.

### 8. **HDMI 2.1 (TMDS) port**

Connect a gaming console, Blu-ray player, or other HDMI-out enabled device.

### 9. **USB 3.2 Gen 1 (5 Gbps) port with SmartPower On**

Connect devices such as external storage devices and printers. Provides data transfer speeds of up to 5 Gbps.

### 10. **Two USB 2.0 (480 Mbps) port**

Connect devices such as external storage devices and printers. Provides data transfer speeds of up to 480 Mbps.

### 11. **RJ45 ethernet port (1 Gbps)**

Connect an ethernet (RJ45) cable from a router or a broadband modem for network or Internet access, with a transfer rate of 10/100/1000 Mbps (maximum 1 Gbps).

## Top view



Figure 3. Top view of Dell Pro Micro QCM1250


### 1. MyDell QR code

MyDell is your hub for content personalized to your Dell Pro Micro QCM1250, including videos, articles, manuals, and easy access to support.

## Set up your computer


### Steps

1. Connect the keyboard and mouse.

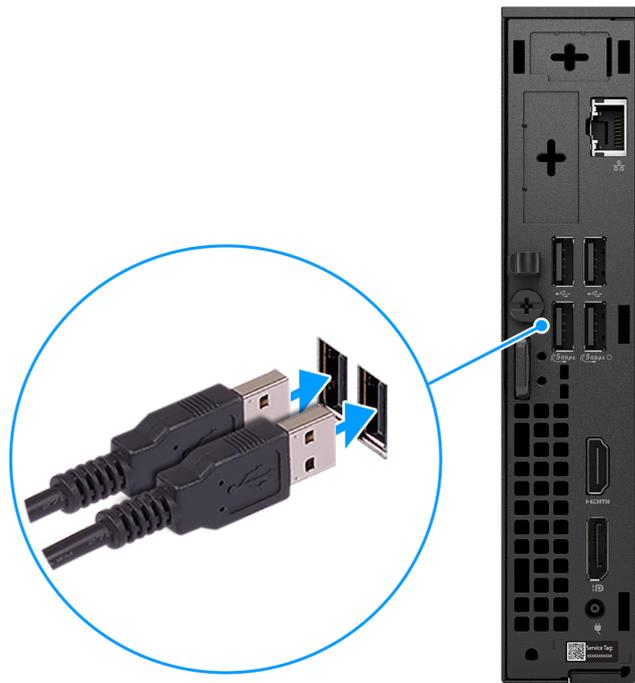

**Figure 4. Connect the keyboard and mouse to your Dell Pro Micro GCM1250**

2. Connect to your network using a cable.

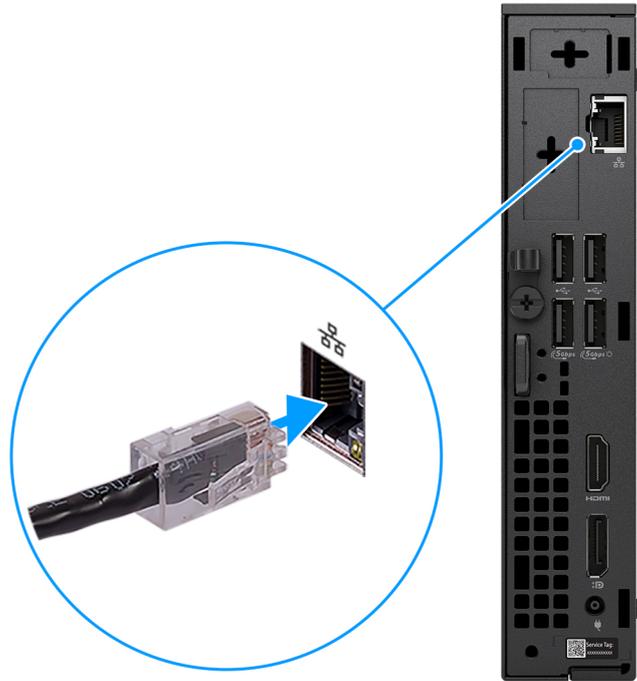

**Figure 5. Connect to your network using a cable**


**NOTE:** Alternatively, you can connect to a wireless network.

3. Connect the display.



**Figure 6. Connect the display**

4. Connect the power cable.

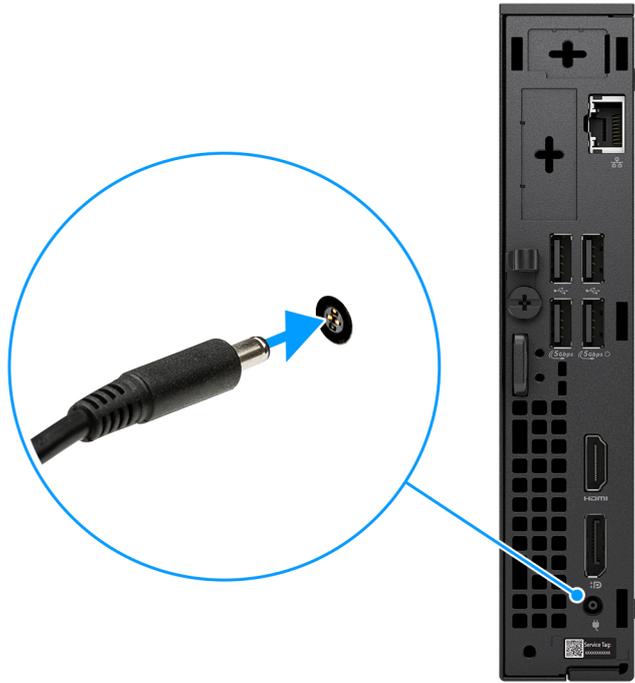

**Figure 7. Connect the power cable.**

5. Press the power button.



**Figure 8. Press the power button**

6. Finish the operating system setup.

**For Ubuntu:**

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, search in the Knowledge Base Resource at [Dell Support Site](#).

**For Windows:**

Follow the on-screen instructions to complete the setup. When setting up, Dell Technologies recommends that you:

- Connect to a network for Windows updates.

**NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the Internet, sign-in with an existing Microsoft account or create a new account. If not connected to the Internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

7. Locate and use Dell apps from the Windows Start menu—Recommended.

**Table 1. Locate Dell apps**

| Resources   | Description   |
|---|---|
|  | <p>Dell Optimizer is an application is designed to enhance computer performance and productivity by optimizing settings for power, battery, display, collaboration touchpad, and presence detection. It also provides access to applications purchased with your new computer.</p> <p>For more information, see Dell Optimizer User's Guide at <a href="#">Dell Support Site</a></p>  |
|  | <p><b>Dell Product Registration</b></p> <p>Register your computer with Dell.</p>  |
|  | <p><b>Dell Help &amp; Support</b></p> <p>Access help and support for your computer.</p>   |
|  | <p><b>SupportAssist</b></p> <p>SupportAssist is a proactive and predictive technology that offers automated technical support for Dell computers. It proactively monitors both hardware and software, addressing performance issues, preventing security threats, and automating engagement with Dell Technical Support.</p> <p>For more information, see SupportAssist documentation at <a href="#">Dell Support Site</a>.</p> <p> <b>NOTE:</b> In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p> |

# Specifications of Dell Pro Micro QCM1250

## Dimensions and weight

The following table lists the height, width, depth, and weight of your Dell Pro Micro QCM1250.

**Table 2. Dimensions and weight**

| Description  | Values   |
|--|--|
| Height   | 182.00 mm (7.17 in.)   |
| Width  | 36.00 mm (1.42 in.)  |
| Depth  | 178.00 mm (7.01 in.)   |
| Weight<br> <b>NOTE:</b> The weight of your computer depends on the configuration that is ordered and manufacturing variability. | <ul style="list-style-type: none"> <li>• Maximum - 1.40 kg (3.09 lbs)</li> <li>• Minimum - 1.16 kg (2.56 lbs)</li> </ul> |

## Processor

The following table lists the details of the processors that are supported by your Dell Pro Micro QCM1250.

**Table 3. Processor**

| Description   | Option one                  | Option two                  | Option three                | Option four              | Option five              | Option six               | Option seven           | Option eight           |
|---|-----------------------------|-----------------------------|-----------------------------|--------------------------|--------------------------|--------------------------|------------------------|------------------------|
| Processor type  | Intel Core Ultra 7 265TvPro | Intel Core Ultra 5 245TvPro | Intel Core Ultra 5 235TvPro | Intel Core i7 14700TvPro | Intel Core i5 14600TvPro | Intel Core i5 14500TvPro | Intel Core i3 14100T   | Intel 300T             |
| Processor wattage   | 35 W                        | 35 W                        | 35 W                        | 35 W                     | 35 W                     | 35 W                     | 35 W                   | 35 W                   |
| Processor total core count  | 20                          | 14                          | 14                          | 20                       | 14                       | 14                       | 4                      | 2                      |
| Performance cores   | 8                           | 6                           | 6                           | 8                        | 6                        | 6                        | 4                      | 2                      |
| Efficient cores   | 12                          | 8                           | 8                           | 12                       | 8                        | 8                        | 0                      | 0                      |
| Processor total thread count  | 20                          | 14                          | 14                          | 28                       | 20                       | 20                       | 8                      | 4                      |
|  <b>NOTE:</b> Intel Hyper-Threading Technology is available only on Performance-cores. |                             |                             |                             |                          |                          |                          |                        |                        |
| Processor speed   | Up to 5.3 GHz               | Up to 5.1 GHz               | Up to 5.0 GHz               | Up to 5.0 GHz Turbo      | Up to 5.1 GHz Turbo      | Up to 4.8 GHz Turbo      | Up to 4.4 GHz Turbo    | 3.4 GHz                |
| Performance-cores frequency   |                             |                             |                             |                          |                          |                          |                        |                        |
| Processor base frequency  | 1.5 GHz                     | 2.2 GHz                     | 2.2 GHz                     | 1.3 GHz                  | 1.8 GHz                  | 1.7 GHz                  | 2.7 GHz                | 3.4 GHz                |
| Maximum turbo frequency   | 5.3 GHz                     | 5.1 GHz                     | 5.0 GHz                     | 5.0 GHz                  | 5.1 GHz                  | 4.8 GHz                  | 4.4 GHz                | Not applicable         |
| Efficient-cores frequency   |                             |                             |                             |                          |                          |                          |                        |                        |
| Processor base frequency  | 1.2 GHz                     | 1.7 GHz                     | 1.6 GHz                     | 0.9 GHz                  | 1.3 GHz                  | 1.2 GHz                  | Not applicable         | Not applicable         |
| Maximum turbo frequency   | 4.6 GHz                     | 4.5 GHz                     | 4.4 GHz                     | 3.7 GHz                  | 3.6 GHz                  | 3.4 GHz                  | Not applicable         | Not applicable         |
| Processor cache   | 30 MB                       | 24 MB                       | 24 MB                       | 33 MB                    | 24 MB                    | 24 MB                    | 12 MB                  | 6 MB                   |
| Integrated graphics   | Intel Graphics              | Intel Graphics              | Intel Graphics              | Intel UHD Graphics 770   | Intel UHD Graphics 770   | Intel UHD Graphics 770   | Intel UHD Graphics 730 | Intel UHD Graphics 710 |
| AI technology   | Intel AI Boost              | Intel AI Boost              | Intel AI Boost              | None                     | None                     | None                     | None                   | None                   |
| Neural Processing Unit (NPU) performance  | Up to 13 TOPS               | Up to 13 TOPS               | Up to 13 TOPS               | Not applicable           | Not applicable           | Not applicable           | Not applicable         | Not applicable         |

**Table 3. Processor (continued)**

| Description   | Option one | Option two | Option three | Option four | Option five | Option six | Option seven | Option eight |
|---|------------|------------|--------------|-------------|-------------|------------|--------------|--------------|
|  <b>NOTE:</b> Tera Operations Per Second (TOPS) is an AI performance metric that measures how many trillions of operations per second an AI processor can perform. |            |            |              |             |             |            |              |              |

## Chipset

The following table lists the details of the chipset that is supported in your Dell Pro Micro QCM1250.

**Table 4. Chipset**

| Description  | Option one   | Option two   |
|--|--|--|
| Chipset  | Intel Q870   | Intel Q670   |
| Processors   | Intel Core Ultra 7/ Ultra 5  | Intel Core i7/i5/i3 and 300T   |
| DRAM bus width   | 128-bit  | 128-bit  |
| Flash EPROM  | 32 MB + 32 MB  | 32 MB + 16 MB  |
| PCIe bus   | Up to Gen4   | Up to Gen4   |
| Non-volatile memory                                      | Yes  | Yes  |
| BIOS configuration Serial Peripheral Interface (SPI)     | 256 Mbit (32 MB) located at SPI_FLASH  | 256 Mbit (32 MB) located at SPI_FLASH  |
| Trusted Platform Module (TPM) 2.0 (Discrete TPM Enabled) | 24 KB located at TPM 2.0 on chipset  | 24 KB located at TPM 2.0 on chipset  |
| Firmware-TPM (Discrete TPM disabled)                     | By default the Platform Trust Technology feature is visible to the operating system. | By default the Platform Trust Technology feature is visible to the operating system. |
| NIC EEPROM   | LOM configuration contained within SPI flash ROM instead of LOM e-fuse               | LOM configuration contained within SPI flash ROM instead of LOM e-fuse               |

## Operating system

Your Dell Pro Micro QCM1250 supports the following operating systems:

- Windows 11 Home
- Windows 11 Pro
- Windows 11 Pro National Education
- Ubuntu Linux 24.04 LTS, 64-bit

## Memory

The following table lists the memory specifications that are supported by your Dell Pro Micro QCM1250.

**Table 5. Memory specifications**

| Description  | Values           |
|--------------|------------------|
| Memory slots | Two SODIMM slots |
| Memory type  | DDR5             |

**Table 5. Memory specifications (continued)**

| Description                     | Values   |
|---------------------------------|--|
| Memory speed                    | 4800 MT/s, 5600 MT/s, 6400 MT/s  |
| Maximum memory configuration    | 64 GB  |
| Minimum memory configuration    | 8 GB   |
| Memory size per slot            | 8 GB, 16 GB, or 32 GB  |
| Memory configurations supported | <p>For computers shipped with Intel Core i5 14500T vPro, i3 14100T and Intel 300T processors</p> <ul style="list-style-type: none"> <li>• 8 GB, 1 x 8 GB, DDR5, 4800 MT/s, single-channel</li> <li>• 16 GB, 1 x 16 GB, DDR5, 4800 MT/s, single-channel</li> <li>• 16 GB, 2 x 8 GB, DDR5, 4800 MT/s, dual-channel</li> <li>• 32 GB, 1 x 32 GB, DDR5, 4800 MT/s, single-channel</li> <li>• 32 GB, 2 x 16 GB, DDR5, 4800 MT/s, dual-channel</li> <li>• 64 GB, 2 x 32 GB, DDR5, 4800 MT/s, dual-channel</li> </ul> <p>For Computers shipped with Intel Core i7 14700T vPro and i5 14600T vPro processors</p> <ul style="list-style-type: none"> <li>• 8 GB, 1 x 8 GB, DDR5, 5600 MT/s, single-channel</li> <li>• 16 GB, 1 x 16 GB, DDR5, 5600 MT/s, single-channel</li> <li>• 16 GB, 2 x 8 GB, DDR5, 5600 MT/s, dual-channel</li> <li>• 32 GB, 1 x 32 GB, DDR5, 5600 MT/s, single-channel</li> <li>• 32 GB, 2 x 16 GB, DDR5, 5600 MT/s, dual-channel</li> <li>• 64 GB, 2 x 32 GB, DDR5, 5600 MT/s, dual-channel</li> </ul> <p>For Computers shipped with Intel Core Ultra 7 and Ultra 5 processors</p> <ul style="list-style-type: none"> <li>• 8 GB, 1 x 8 GB, DDR5, 6400 MT/s, single-channel</li> <li>• 16 GB, 1 x 16 GB, DDR5, 6400 MT/s, single-channel</li> <li>• 16 GB, 2 x 8 GB, DDR5, 6400 MT/s, dual-channel</li> <li>• 32 GB, 1 x 32 GB, DDR5, 6400 MT/s, single-channel</li> <li>• 32 GB, 2 x 16 GB, DDR5, 6400 MT/s, dual-channel</li> <li>• 8 GB, 1 x 8 GB, DDR5, 5600 MT/s, single-channel</li> <li>• 16 GB, 1 x 16 GB, DDR5, 5600 MT/s, single-channel</li> <li>• 16 GB, 2 x 8 GB, DDR5, 5600 MT/s, dual-channel</li> <li>• 32 GB, 1 x 32 GB, DDR5, 5600 MT/s, single-channel</li> <li>• 32 GB, 2 x 16 GB, DDR5, 5600 MT/s, dual-channel</li> <li>• 64 GB, 2 x 32 GB, DDR5, 5600 MT/s, dual-channel</li> </ul> |

## Memory matrix

The following table lists the memory configurations supported on your Dell Pro Micro QCM1250.

**Table 6. Memory matrix**

| Configuration | Slot    |         |
|---------------|---------|---------|
|               | SODIMM1 | SODIMM2 |
| 8 GB DDR5     | 8 GB    |         |
| 16 GB DDR5    | 8 GB    | 8 GB    |
| 16 GB DDR5    | 16 GB   |         |
| 32 GB DDR5    | 16 GB   | 16 GB   |
| 32 GB DDR5    | 32 GB   |         |

**Table 6. Memory matrix (continued)**

| Configuration | Slot    |         |
|---------------|---------|---------|
|               | SODIMM1 | SODIMM2 |
| 64 GB DDR5    | 32 GB   | 32 GB   |

## External ports and slots

The following table lists the external ports and slots of your Dell Pro Micro QCM1250.

**Table 7. External ports and slots**

| Description         | Values   |
|---------------------|--|
| Network port        | One RJ45 ethernet port (1 Gbps)  |
| USB ports           | <ul style="list-style-type: none"> <li>• One USB 3.2 Gen 2 (10 Gbps) Type-C port</li> <li>• One USB 3.2 Gen 1 (5 Gbps) port with SmartPower On</li> <li>• Two USB 3.2 Gen 1 (5 Gbps) ports</li> <li>• Two USB 2.0 (480 Mbps) ports</li> </ul>  |
| Audio port          | One headset (headphone and microphone combo) port  |
| Video port(s)       | <ul style="list-style-type: none"> <li>• One HDMI 2.1 (TMDS) port</li> <li>• One DisplayPort 1.4a (HBR3 support) port for computers shipped with Intel Core Ultra processors</li> <li>• One DisplayPort 1.4a (HBR2 support) for computers shipped with Intel Core i3, i5, i7 and Intel 300T processors</li> </ul>  |
| Power-adaptor port  | One 4.5 mm DC-in port  |
| Security-cable slot | <ul style="list-style-type: none"> <li>• One security-cable slot (for Kensington locks)</li> <li>• One padlock ring</li> </ul>   |
| Optional port       | <p>One optional port slot which can be configured with one of the following options:</p> <ul style="list-style-type: none"> <li>• One external antenna port</li> <li>• One I/O module port</li> </ul> <p><b>NOTE:</b> The optional I/O module port can be configured with one of the following options:</p> <ul style="list-style-type: none"> <li>○ One HDMI 2.1 FRL port for computers shipped with Intel Core Ultra processors</li> <li>○ One DisplayPort 2.1 (UHBR20 support) for computers shipped with Intel Core Ultra processors</li> <li>○ One HDMI 2.1 TMDS port for computers shipped with Intel Core i3, i5, i7 and Intel 300T processors</li> <li>○ One DisplayPort 1.4a (HBR3 support) for computers shipped with Intel Core i3, i5, i7 and Intel 300T processors</li> <li>○ One VGA port</li> <li>○ One USB Type-C port with DisplayPort Alt Mode and Power Delivery and 100W Power Input</li> <li>○ Two USB 3.2 Gen 2 ports</li> <li>○ One PS2 port</li> <li>○ One serial port</li> <li>○ One fiber optic (5 Gbps, peer-to-peer) port</li> </ul> |

**Table 7. External ports and slots (continued)**

| Description | Values   |
|-------------|--|
|             | <p><b>NOTE:</b> Supports up to 5 Gbps connectivity in peer-to-peer transmission. Actual speed via network depends on equipment compatibility, requiring both transceiver and switch at the same maximum speed.</p> |

## Internal slots

The following table lists the internal slots of your Dell Pro Micro QCM1250.

**Table 8. Internal slots**

| Description | Values  |
|-------------|---|
| M.2         | <ul style="list-style-type: none"> <li>One M.2 2230 slot for Wi-Fi and Bluetooth combo card</li> <li>Two M.2 2230/2280 slots for solid-state drive</li> </ul> <p><b>NOTE:</b> To learn more about the features of different types of M.2 cards, search <a href="#">Dell Support Site</a>.</p> |

## Ethernet

The following table lists the wired ethernet Local Area Network (LAN) specifications of your Dell Pro Micro QCM1250.

**Table 9. Ethernet specifications**

| Description   | Values           |
|---------------|------------------|
| Model         | Intel WGI219LM   |
| Transfer rate | 10/100/1000 Mbps |

## Wireless module

The following table lists the Wireless Local Area Network (WLAN) module specifications of your Dell Pro Micro QCM1250.

**Table 10. Wireless module specifications**

| Description               | Option one  | Option two  | Option three   |
|---------------------------|---|---|--|
| Model number              | Intel BE200   | Intel AX211   | MediaTek MT7920  |
| Transfer rate             | Up to 5760 Mbps   | Up to 2400 Mbps   | Up to 1200 Mbps  |
| Frequency bands supported | 2.4 GHz/5 GHz/6 GHz   | 2.4 GHz/5 GHz/6 GHz   | 2.4 GHz/5 GHz  |
| Wireless standards        | <ul style="list-style-type: none"> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> <li>Wi-Fi 6 (WiFi 802.11ax)</li> <li>Wi-Fi 7 (WiFi 802.11be)</li> </ul> | <ul style="list-style-type: none"> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> <li>Wi-Fi 6E (WiFi 802.11ax)</li> </ul> | <ul style="list-style-type: none"> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> <li>Wi-Fi 6 (WiFi 802.11ax)</li> </ul> |

**Table 10. Wireless module specifications (continued)**

| Description   | Option one   | Option two   | Option three   |
|---|--|--|--|
| Encryption  | <ul style="list-style-type: none"> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul> | <ul style="list-style-type: none"> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul> | <ul style="list-style-type: none"> <li>64-bit/128-bit WEP</li> <li>AES-CCMP</li> <li>TKIP</li> </ul> |
| Bluetooth wireless card<br><b>i</b> <b>NOTE:</b> The functionality of the Bluetooth wireless card may vary based on the operating system. | Bluetooth 5.4  | Bluetooth 5.3  | Bluetooth 5.4  |

## Audio

The following table lists the audio specifications of your Dell Pro Micro QCM1250.

**Table 11. Audio specifications**

| Description              | Values  |
|--------------------------|---|
| Audio type               | 4 Channel High-Definition Audio                   |
| Audio controller         | Realtek ALC3204 Codec                             |
| Internal audio interface | Intel HDA (High-Definition Audio)                 |
| External audio interface | One headset (headphone and microphone combo) port |
| Speakers                 | Waves MaxxAudio 14.0, Internal speakers           |

## Storage

This section lists the storage options on your Dell Pro Micro QCM1250.

**Table 12. Storage specifications**

| Storage type               | Interface type   | Capacity   |
|----------------------------|--|------------|
| M.2 2230 solid-state drive | QLC PCIe Gen4 NVMe, Class 25                                     | Up to 1 TB |
| M.2 2230 solid-state drive | TLC Gen4 PCIe NVMe, Class 35                                     | Up to 1 TB |
| M.2 2280 solid-state drive | TLC Gen4 PCIe NVMe, Class 40, Self-Encrypting Opal 2.0, Class 40 | Up to 1 TB |

**i** **NOTE:** Your computer supports two SSD configurations.

- **Single SSD configuration:** One SSD is installed in either of the two slots.
- **Dual SSD configuration:** SSDs are installed in both slots.

To upgrade from a single SSD configuration to a dual configuration by adding an SSD, users must install SSD heatsinks on both SSDs to ensure optimal performance. These heatsinks must be purchased separately.

## Storage matrix

The following table lists the storage configurations supported on your Dell Pro Micro QCM1250.

**Table 13. Storage matrix**

| Storage   | Slot  |                     |
|---|---|---------------------|
|   | M.2 PCIe SSD-0 (Primary M.2 PCIe for boot function) | M.2 PCIe SSD-1      |
| One M.2 2230 solid-state drive  | Yes   |                     |
| One M.2 2280 solid-state drive  | Yes   |                     |
| Two M.2 2230 solid-state drive  | Yes   | Yes                 |
| Two M.2 2280 solid-state drive  | Yes   | Yes                 |
| One M.2 2230 solid-state drive<br>+<br>One M.2 2280 solid-state drive | Yes (M.2 2230/2280)                                 | Yes (M.2 2230/2280) |

## Power adapter

The following table lists the power adapter specifications of your Dell Pro Micro QCM1250.

**Table 14. Power-adapter specifications**

| Description                 | Option one                     | Option two                     |
|-----------------------------|--------------------------------|--------------------------------|
| Type                        | 90 W                           | 65 W                           |
| Connector dimensions:       |                                |                                |
| External diameter           | 4.50 mm                        | 4.50 mm                        |
| Internal diameter           | 2.90 mm                        | 2.90 mm                        |
| Power-adapter dimensions:   |                                |                                |
| Height                      | 32.00 mm                       | 28.00 mm                       |
| Width                       | 52.00 mm                       | 47.00 mm                       |
| Depth                       | 128.00 mm                      | 108.00 mm                      |
| Input voltage               | 100 VAC–240 VAC                | 100 VAC–240 VAC                |
| Input frequency             | 50 Hz–60 Hz                    | 50 Hz–60 Hz                    |
| Input current (maximum)     | 1.50 A                         | 1.70 A                         |
| Output current (continuous) | 4.62 A                         | 3.34 A                         |
| Rated output voltage        | 19.5 VDC                       | 19.50 VDC                      |
| Temperature range:          |                                |                                |
| Operating                   | 0°C to 40°C (32°F to 104°F)    | 0°C to 40°C (32°F to 104°F)    |
| Storage                     | -40°C to 70°C (-40°F to 158°F) | -40°C to 70°C (-40°F to 158°F) |

**Table 14. Power-adapter specifications (continued)**

| Description  | Option one | Option two |
|--|------------|------------|
|  <b>CAUTION:</b> Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components. |            |            |

## GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Dell Pro Micro QCM1250.

**Table 15. GPU—Integrated**

| Controller                     | Memory size          | Processor                          |
|--------------------------------|----------------------|------------------------------------|
| Intel Graphics                 | Shared system memory | Intel Core Ultra 9/Ultra 7/Ultra 5 |
| Intel UHD Graphics 770/730/710 | Shared system memory | Intel Core i3/i5/i7/300T           |

## Video port resolution (GPU—Integrated)

**Table 16. Video port resolution (GPU—Integrated)**

| Graphics card      | Video ports  | Maximum supported resolution  |
|--------------------|--|---|
| Intel Graphics     | One DisplayPort 1.4a (HBR3 support) port   | 5120 x 3200 @ 60Hz  |
|                    | One HDMI 2.1 (TMDS) port   | 4096 x 2160 @ 60 Hz   |
|                    | One optional port slot which can be configured with one of the following options: <ul style="list-style-type: none"> <li>• HDMI 2.1 FRL port</li> <li>• DisplayPort 2.1 (UHBR20 support) port</li> <li>• VGA port</li> <li>• USB Type-C port with DisplayPort Alt Mode and Power Delivery</li> </ul> | <ul style="list-style-type: none"> <li>• HDMI 2.1 FRL - Up to 5120 x 3200 @ 60 Hz</li> <li>• DisplayPort 2.1 (UHBR20 support) - Up to 7680 x 4320 @ 60 Hz</li> <li>• VGA - Up to 1920 x 1200 @ 60 Hz</li> <li>• USB Type-C with DisplayPort Alt Mode and Power Delivery- Up to 5120 x 3200 @ 60 Hz</li> </ul> |
| Intel UHD Graphics | One DisplayPort 1.4a (HBR2 support) port   | 4096 x 2304 @ 60 Hz   |
|                    | One HDMI 2.1 (TMDS) port   | 4096 x 2160 @ 60 Hz   |
|                    | One optional port slot which can be configured with one of the following options: <ul style="list-style-type: none"> <li>• HDMI 2.1 TMDS port</li> <li>• DisplayPort 1.4a (HBR3 support) port</li> <li>• VGA port</li> <li>• USB Type-C port with DisplayPort Alt Mode and Power Delivery</li> </ul> | <ul style="list-style-type: none"> <li>• HDMI 2.1 TMDS - Up to 4096 x 2160 @ 60 Hz</li> <li>• DisplayPort 1.4a (HBR3 support) - 5120 x 3200 @ 60 Hz</li> <li>• VGA - Up to 1920 x 1200 @ 60 Hz</li> <li>• USB Type-C with DisplayPort Alt Mode and Power Delivery - Up to 5120 x 3200 @ 60 Hz</li> </ul>      |

## External display support (GPU—Integrated)

Display support for the integrated graphics card

**Table 17. Display support specifications**

| Graphics card                                       | Supported external displays   |
|---|---|
| Intel Graphics                                      | <ul style="list-style-type: none"> <li>• With MST- 4</li> <li>• Without MST- 2</li> </ul> |
| Intel UHD Graphics                                  | <ul style="list-style-type: none"> <li>• With MST- 4</li> <li>• Without MST- 2</li> </ul> |
| Intel Graphics/Intel UHD Graphics + optional module | <ul style="list-style-type: none"> <li>• With MST- 4</li> <li>• Without MST- 3</li> </ul> |

 **NOTE:** MST (Multi-Stream Transport)/daisy-chaining supports four displays.

## Hardware security

The following table lists the hardware security of your Dell Pro Micro QCM1250.

**Table 18. Hardware security**

| Hardware security  |
|--|
| Kensington security-cable slot   |
| Padlock ring   |
| Chassis lock slot support  |
| Chassis intrusion switch   |
| Lockable cable covers  |
| Supply chain tamper alerts   |
| SafelD including Trusted Platform Module (TPM) 2.0   |
| Smart card keyboard (FIPS)   |
| Microsoft 10 Device Guard & Credential Guard (Enterprise SKU)  |
| SafeBIOS: includes Dell Off-host BIOS Verification, BIOS Resilience, BIOS Recovery, and additional BIOS Controls |
| Microsoft Windows BitLocker  |
| Local hard drive data wipe through BIOS (Secure Erase)   |
| Self-encrypting storage drives (Opal, FIPS)  |
| Intel Secure Boot  |
| Intel Authenticate   |

# Environmental

The following table lists the environmental specifications of your Dell Pro Micro QCM1250.

**Table 19. Environmental**

| Feature                                | Values   |
|--|----------|
| Recyclable packaging                   | Yes      |
| BFR/PVC—free chassis                   | Yes      |
| Vertical orientation packaging support | Yes      |
| Multi-Pack packaging                   | Yes      |
| Energy-Efficient Power Supply          | Standard |
| ENV0424 compliant                      | Yes      |

**NOTE:** Wood-based fiber packaging contains a minimum of 35% recycled content by total weight of wood-based fiber. Packaging that contains without wood-based fiber can be claimed as Not Applicable. The anticipated required criteria for EPEAT 2018.

# Regulatory compliance

The following table lists the regulatory compliance of your Dell Pro Micro QCM1250.

**Table 20. Regulatory compliance**

| Regulatory compliance  |
|--|
| <a href="#">Product Safety, EMC and Environmental Datasheets</a> |
| <a href="#">Dell Regulatory Compliance Home Page</a>             |
| <a href="#">Responsible Business Alliance policy</a>             |

# Operating and storage environment

This table lists the operating and storage specifications of your Dell Pro Micro QCM1250.

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

**Table 21. Computer environment**

| Description                 | Operating                                  | Storage                                      |
|-----------------------------|--|--|
| Temperature range           | 10°C to 35°C (50°F to 95°F)                | -40°C to 65°C (-40°F to 149°F)               |
| Relative humidity (maximum) | 20% to 80% (non-condensing)                | 5% to 95% (non-condensing)                   |
| Vibration (maximum)*        | 0.26 GRMS                                  | 1.37 GRMS                                    |
| Shock (maximum)             | 40 G†                                      | 105 G†                                       |
| Altitude range              | -15.2 m to 3048 m (-49.87 ft to 10,000 ft) | -15.2 m to 10,668 m (-49.87 ft to 35,000 ft) |

**CAUTION:** Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.

\* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.

## Dell support policy

For information about Dell support policy, search [Dell Support Site](#).

# Working inside your computer

## Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.

-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see [Dell Regulatory Compliance Home Page](#).
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **WARNING:** For laptops, discharge the battery completely before removing it. Disconnect the AC power adapter from the computer and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty.
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the connector on the cable is correctly oriented and aligned with the port.
-  **CAUTION:** Press and eject any installed card from the media-card reader.

## Before working inside your computer

### About this task

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

### Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start** >  **Power** > **Shut down**.
  -  **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
3. Turn off all the attached peripherals.
4. Disconnect your computer from the electrical outlet.

5. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.

 **CAUTION: To disconnect a network cable, unplug the cable from your computer.**

6. Remove any media card and optical disc from your computer, if applicable.

## Safety precautions

This section details the primary steps to be followed before disassembling any device or component.

Observe the following safety precautions before any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer from AC power.
- Disconnect all network cables and peripherals from the computer.
- Use an ESD field service kit when working inside your computer to avoid electrostatic discharge (ESD) damage.
- Place the removed component on an anti-static mat after removing it from the computer.
- Press and hold the power button for 15 seconds to discharge the residual power in the system board.

## Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. Ensure that the wrist strap is secure and in full contact with your skin. Remove all jewelry, watches, bracelets, or rings before grounding yourself and the equipment.

## Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. A slight charge can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory module that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The memory module receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.

Intermittent failures that are also called latent or "walking wounded" are difficult to detect and troubleshoot.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, use the anti-static wrist strap to discharge the static electricity from your body.

 **NOTE:** You can protect against ESD and discharge static electricity from your body by touching a metal-grounded object before you interact with anything electronic, for example, an unpainted metal surface on your computer's I/O panel. When connecting a peripheral (including handheld digital assistants) to your computer, you should always ground both yourself and the peripheral before connecting it to the computer. In addition, as you work inside the computer, periodically touch a metal-grounded object to remove any static charge that your body may have accumulated.

For more information about the wrist strap and ESD wrist strap tester, see [Components of an ESD Field Service Kit](#).

- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

## ESD Field Service kit

The unmonitored field service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

 **CAUTION:** It is critical to keep ESD-sensitive devices away from internal parts that are insulated and often highly charged, such as plastic heat sink casings.

## Working environment

. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.

## ESD packaging

All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged component using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the anti-static mat, in the computer, or inside an ESD bag.

## Components of an ESD Field Service kit

The components of an ESD Field Service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the anti-static mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the anti-static mat. ESD-sensitive items are safe in your hand, on the anti-static mat, in the computer, or inside an ESD bag.
- **Wrist Strap and Bonding Wire** – If an anti-static mat is not being used, the wrist strap and bonding wire should be connected directly between your wrist and an exposed metal part of the hardware. If you are using an anti-static mat, connect the wrist strap and bonding wire to the anti-static mat to ensure protection for any hardware placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the anti-static mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, anti-static mat, and bonding wire. Never use wireless wrist straps. Always be cautious that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored ESD kit, it is recommended to test the wrist strap regularly—ideally before each service session, and at a minimum, once per week. The most reliable method for testing is with a wrist strap tester. To perform the test, connect the bonding wire of the wrist strap to the tester while wearing the strap. Press the test button to initiate the check. A green LED indicates a successful test, while a red LED and audible alarm signal a failure.

 **NOTE:** It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while servicing the computer.

## Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

## Lifting equipment

Adhere to the following guidelines when lifting heavy equipment:

 **CAUTION: Do not lift greater than 50 pounds. Always obtain additional resources or use a mechanical lifting device.**

1. Get a firm balanced footing. Keep your feet apart for a stable base, and point your toes out.
2. Tighten stomach muscles. Abdominal muscles support your spine when you lift, offsetting the force of the load.
3. Lift with your legs, not your back.
4. Keep the load close. The closer it is to your spine, the less force it exerts on your back.
5. Keep your back upright, whether lifting or setting down the load. Do not add the weight of your body to the load. Avoid twisting your body and back.
6. Follow the same technique in reverse to set the load down.

## After working inside your computer

### About this task

 **CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.**

### Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other components that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
5. Turn on your computer.

## BitLocker

When updating the BIOS on a computer with BitLocker enabled, consider the following precautions.

 **CAUTION: If BitLocker is not suspended before updating the BIOS, the BitLocker key will not be recognized the next time that you reboot the computer. You are prompted to enter the recovery key to progress, and the computer displays a prompt for the recovery key on each reboot. If the recovery key is not known, this can result in data loss or an operating system reinstall. For more information, see Knowledge Article: [updating the BIOS on Dell computers with BitLocker enabled](#).**

The installation of the following components triggers BitLocker:

- Hard disk drive or solid state drive
- System board

## Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Phillips screwdriver #1
- Plastic scribe

# Screw list

- i NOTE:** When removing screws from a component, it is recommended to note the screw type and the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.
- i NOTE:** Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.
- i NOTE:** Screw color may vary depending on the configuration ordered.

**Table 22. Screw list**


| Component  | Screw type | Quantity | Screw image   |
|--|------------|----------|---|
| Side cover   | #6-32      | 1        |    |
| M.2 2230 solid-state drive in a single SSD configuration   | M2x3.5     | 2        |    |
| M.2 2280 solid-state drive in a single SSD configuration   | M2x3.5     | 1        |    |
| M.2 2230 solid-state drive in a dual SSD configuration   | M2x8.5     | 1        |   |
|  | M2x6       | 1        |  |
| M.2 2280 solid-state drive in a dual SSD configuration   | M2x3.5     | 1        |  |
| Wireless card  | M2x3.5     | 1        |  |
| External puck antenna  | Captive    | 1        |  |
| SMA antenna module   | M3x3       | 1        |  |
| Optional input/output module (Dual USB 3.2 Gen 2 / USB Type-C / DisplayPort / HDMI / VGA / PS2 / Serial) | Captive    | 1        |  |
|  |            | 1        |  |

**Table 22. Screw list (continued)**

| Component                        | Screw type   | Quantity | Screw image   |
|----------------------------------|--------------|----------|---|
| Optional fiber optic port module | Captive      | 2        |    |
|                                  |              | 1        |    |
| Heat sink                        | Captive      | 3        |    |
| Internal antenna module          | M3x3         | 2        |    |
|                                  | Captive      | 1        |   |
| Speaker holder                   | M3x5         | 1        |  |
| System board                     | M3x5         | 3        |  |
|                                  | Standoff nut | 1        |  |

## Major components of Dell Pro Micro QCM1250

The following image shows the major components of Dell Pro Micro QCM1250.

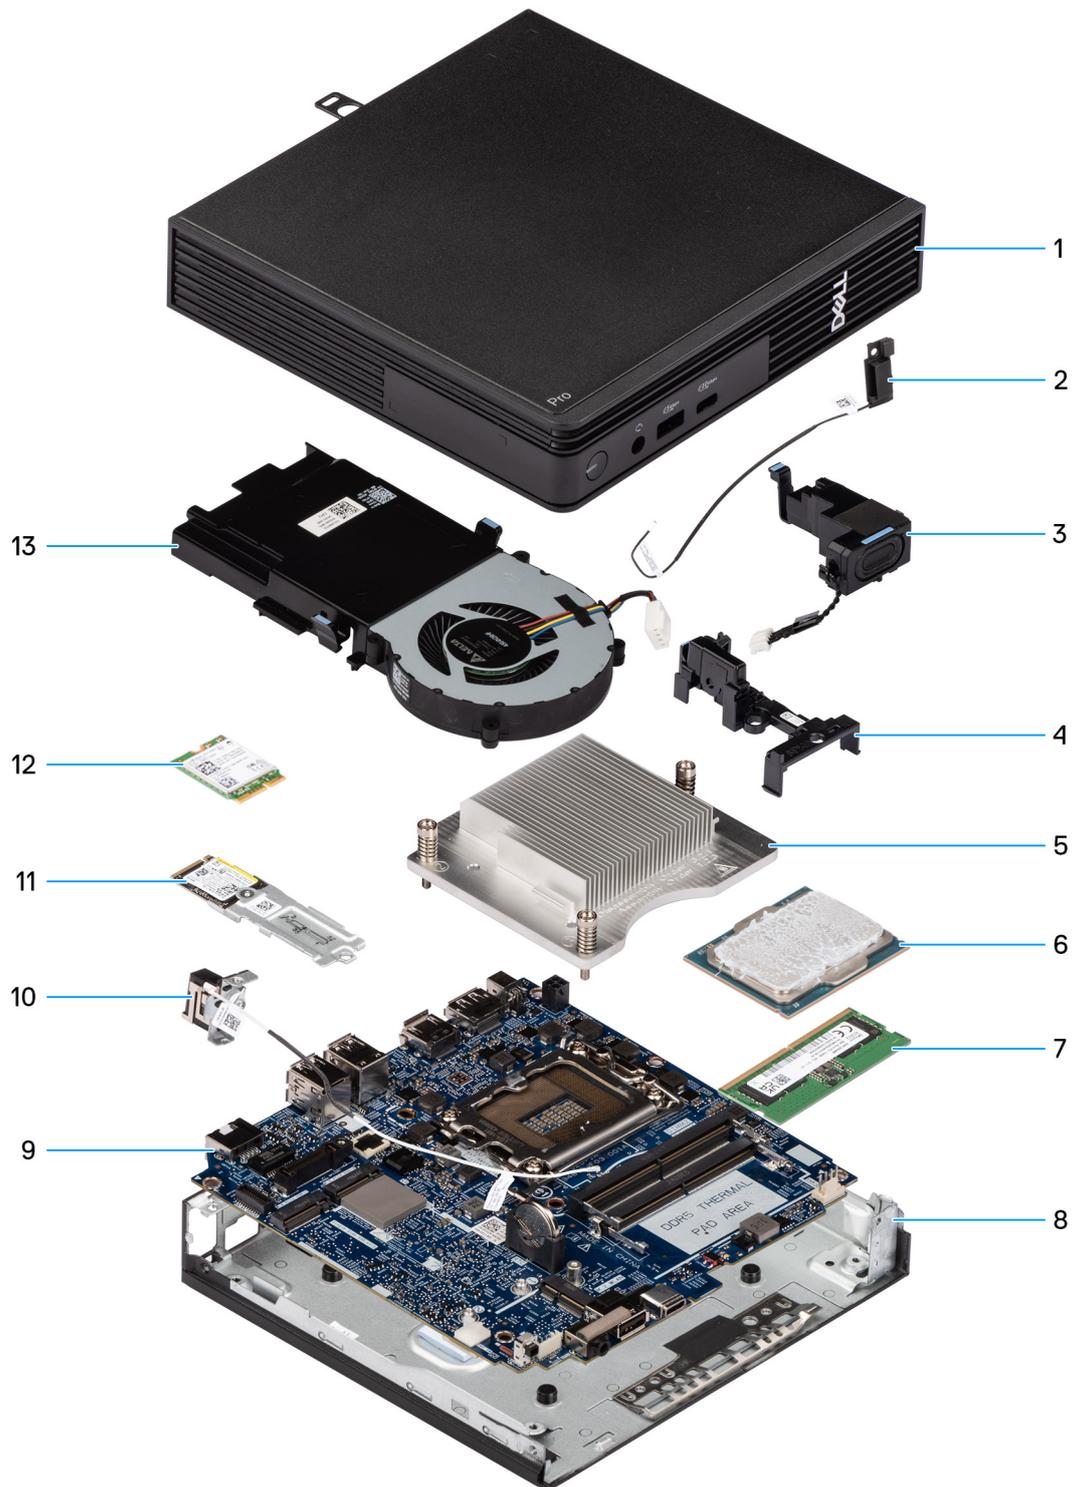

**Figure 9. Major components of Dell Pro Micro GCM1250**

- 1. Side cover
- 2. Internal antenna module (black cable)
- 3. Speaker
- 4. Speaker holder
- 5. Heat sink
- 6. Processor
- 7. Memory

8. Chassis
9. System board
10. Internal antenna module (white cable)
11. Solid-state drive assembly
12. Wireless card
13. Fan

 **NOTE:** Dell Technologies provides a list of components and their part numbers for the original system configuration purchased. These parts are available according to warranty coverages purchased by the customer. Contact your Dell sales representative for purchase options.

# Removing and installing side cover

**NOTE:** The power button is integrated into the side cover and is not serviceable as a separate component.

## Removing the side cover

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

### About this task

The following images indicate the location of the side cover and provide a visual representation of the removal procedure.



1x  
#6-32

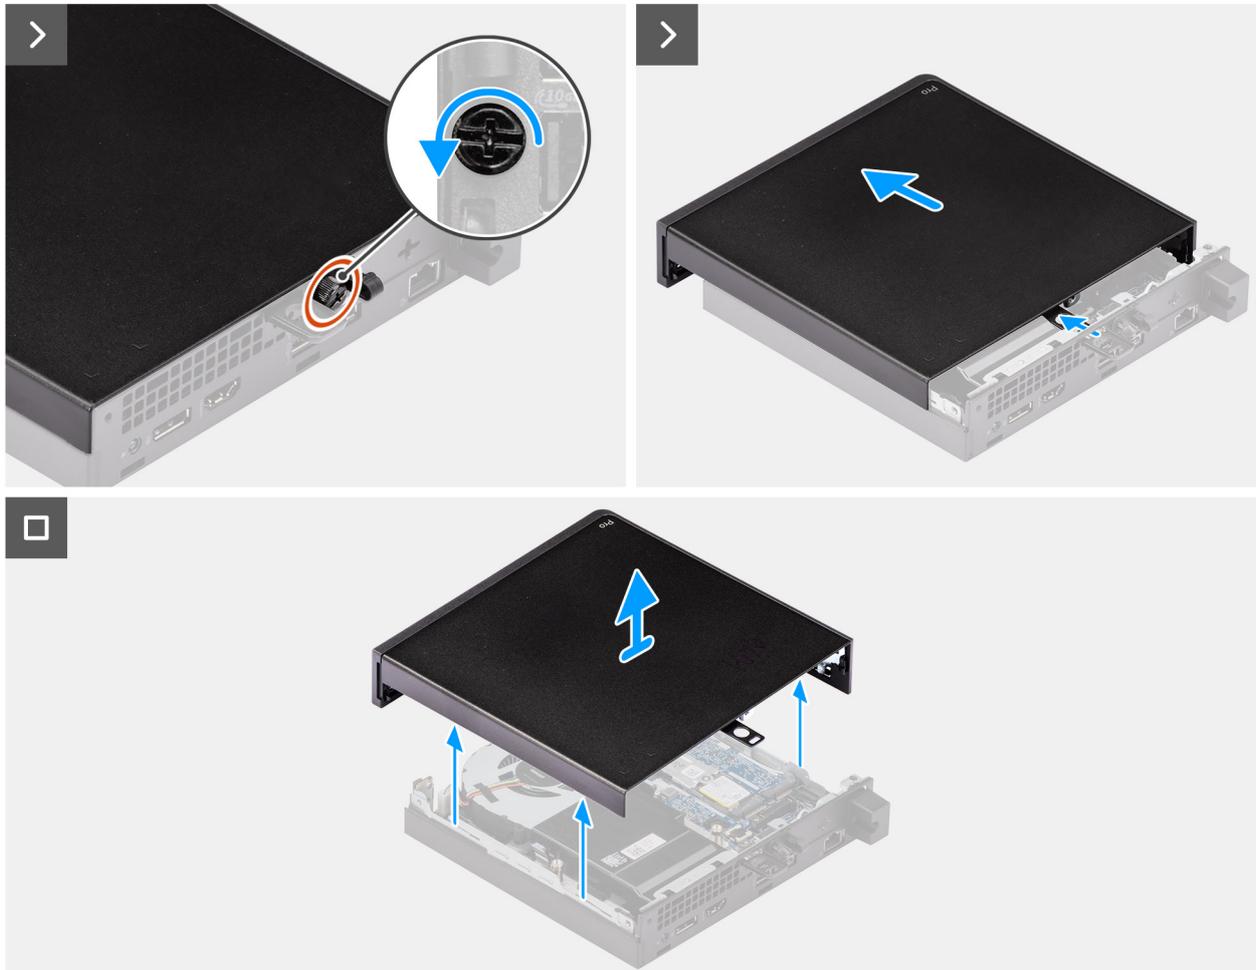


Figure 10. Removing the side cover

### Steps

1. Place your computer on its side with the side cover facing up.
2. Loosen the thumbscrew (6x32) that secures the side cover to the chassis.
3. Slide and lift the side cover off the chassis.

## Installing the side cover

### Prerequisites


If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following images indicate the location of the side cover and provide a visual representation of the installation procedure.



1x  
#6-32

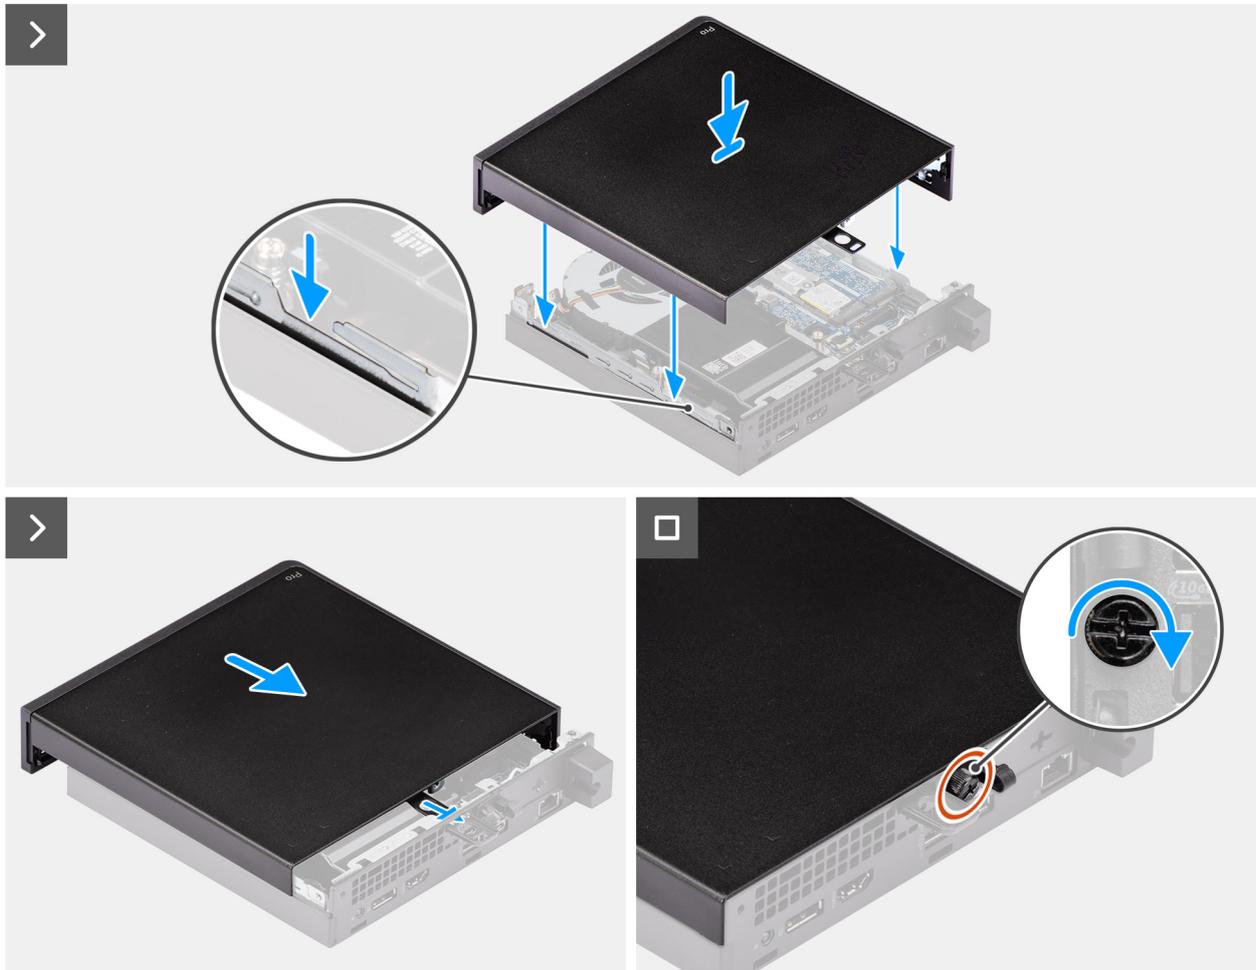

**Figure 11. Installing the side cover**

**Steps**

1. Place the side cover on the chassis by aligning the tabs on the side cover with the slots on the chassis.
2. Slide the side cover towards the rear of the computer.
3. Tighten the thumbscrew (6x32) that secures the side cover to the chassis.

**Next steps**

1. Follow the procedure in [After working inside your computer.](#)

# Removing and installing coin-cell battery

## Removing the coin-cell battery

**CAUTION:** Removing the coin-cell battery clears the CMOS and resets BIOS settings.

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).
3. Remove the [speaker](#).

### About this task

The following images indicate the location of the coin-cell battery and provide a visual representation of the removal procedure.

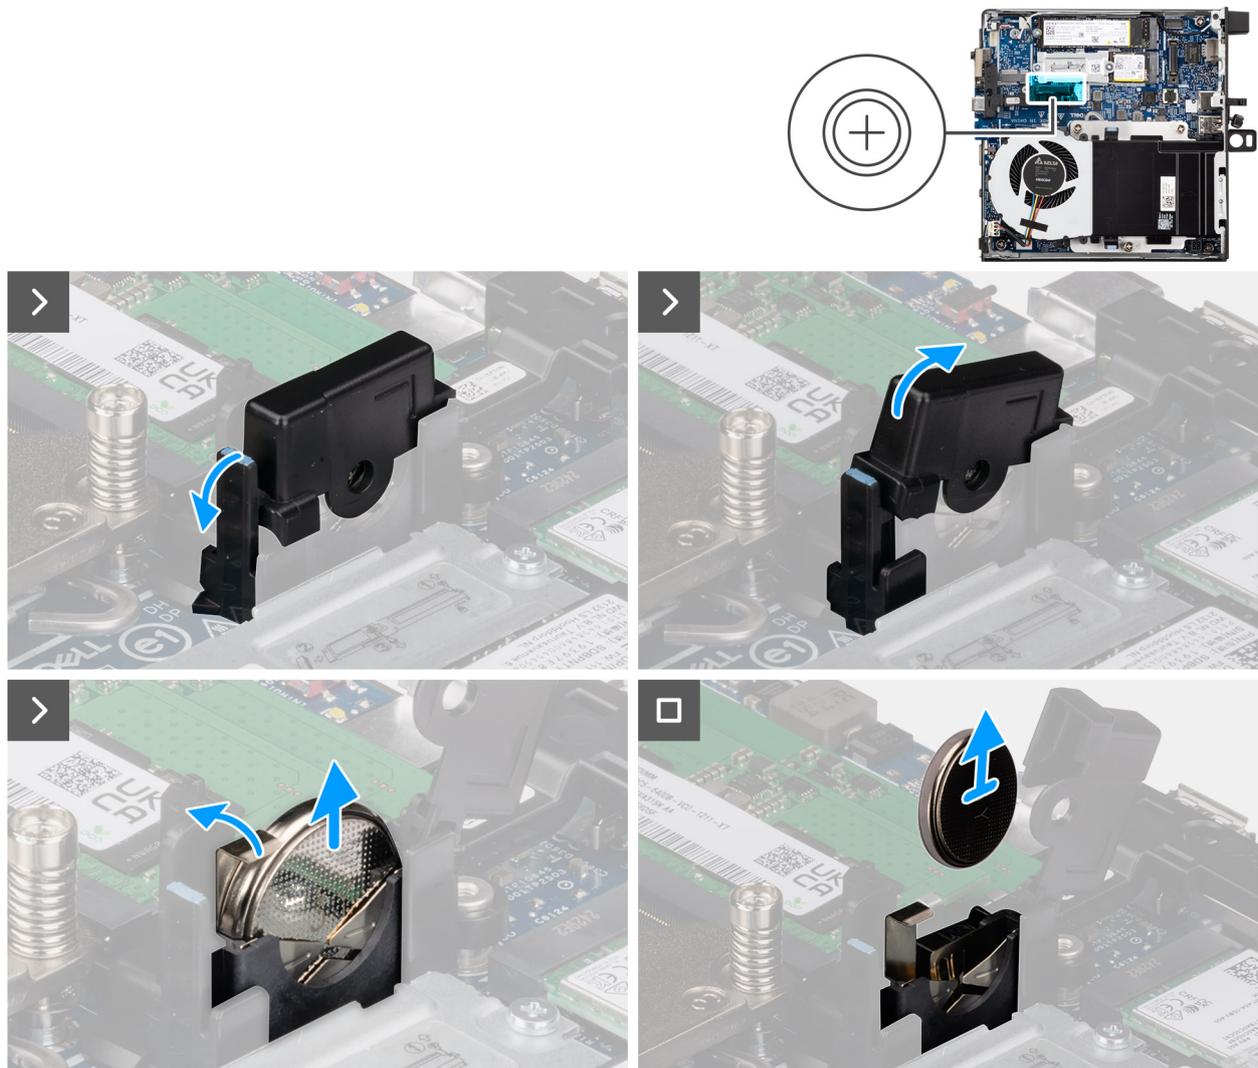


Figure 12. Removing the coin-cell battery

### Steps

1. Pull the coin-cell battery-cover tab and rotate the coin-cell battery cover to access the coin-cell battery.
2. Press the coin-cell battery-release lever on the coin-cell battery socket and pull the coin-cell battery slightly upwards.
3. Lift and remove the coin-cell battery from the coin-cell battery socket.

## Installing the coin-cell battery

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following images indicate the location of the coin-cell battery and provide a visual representation of the installation procedure.

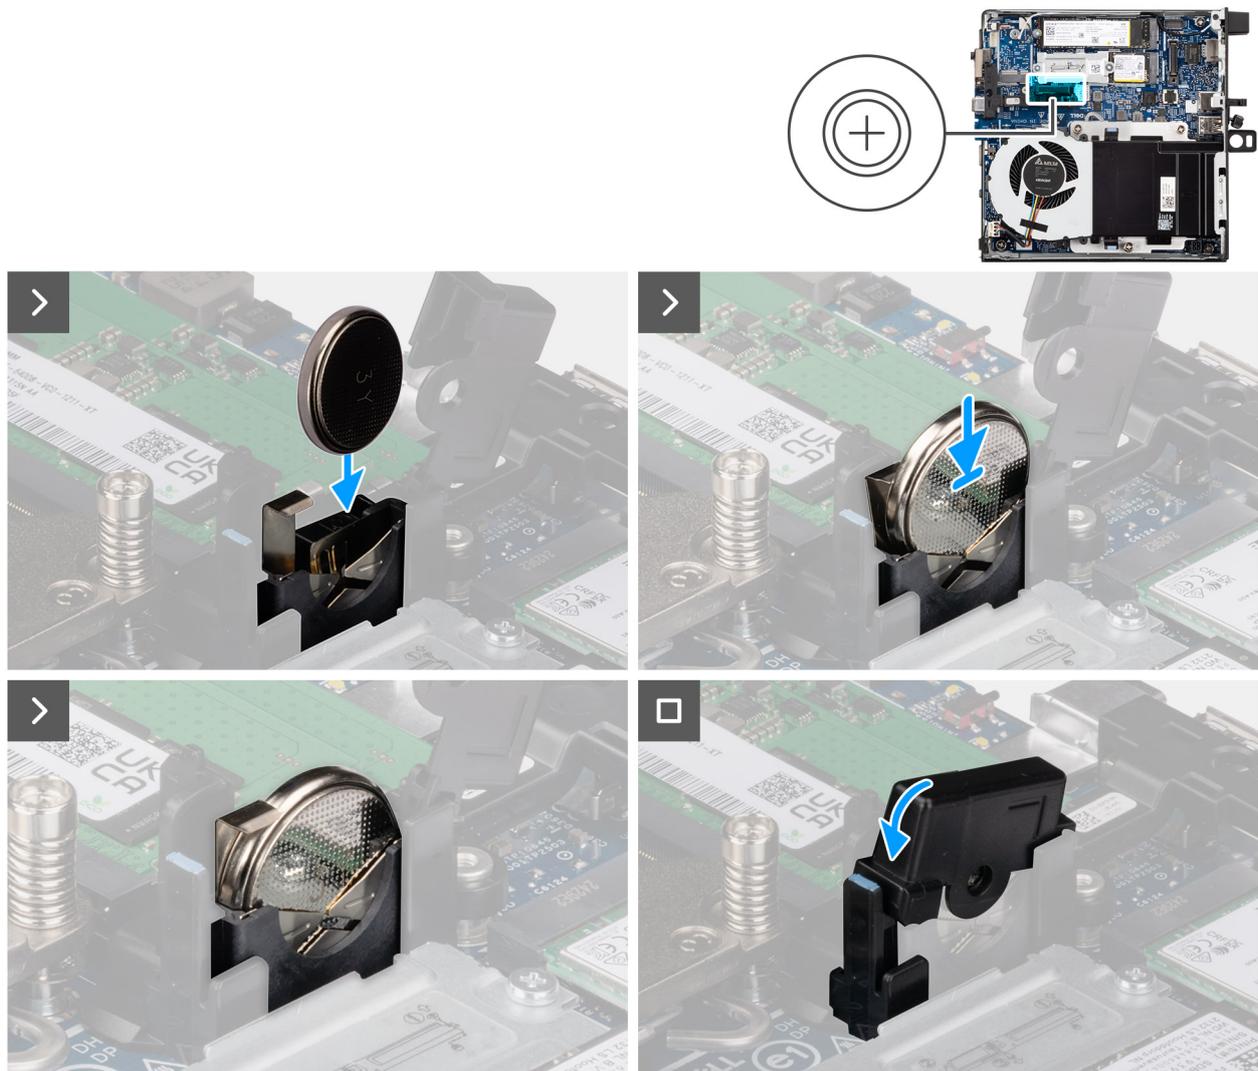


Figure 13. Installing the coin-cell battery

### Steps

1. With the positive side (+) facing towards the front side of the computer, insert the coin-cell battery into the coin-cell battery socket and snap the battery into place.
2. Rotate and press the coin-cell battery cover until it snaps into its place.

**Next steps**

1. Install the [speaker](#).
2. Install the [side cover](#).
3. Follow the procedure in [After working inside your computer](#).

# Removing and installing Customer Replaceable Units (CRUs)

The replaceable components in this chapter are Customer Replaceable Units (CRUs).

**CAUTION:** Customers can replace only the Customer Replaceable Units (CRUs) following the safety precautions and replacement procedures.

**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Speaker

### Removing the speaker

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

#### About this task

The following images indicate the location of the speaker and provide a visual representation of the removal procedure.

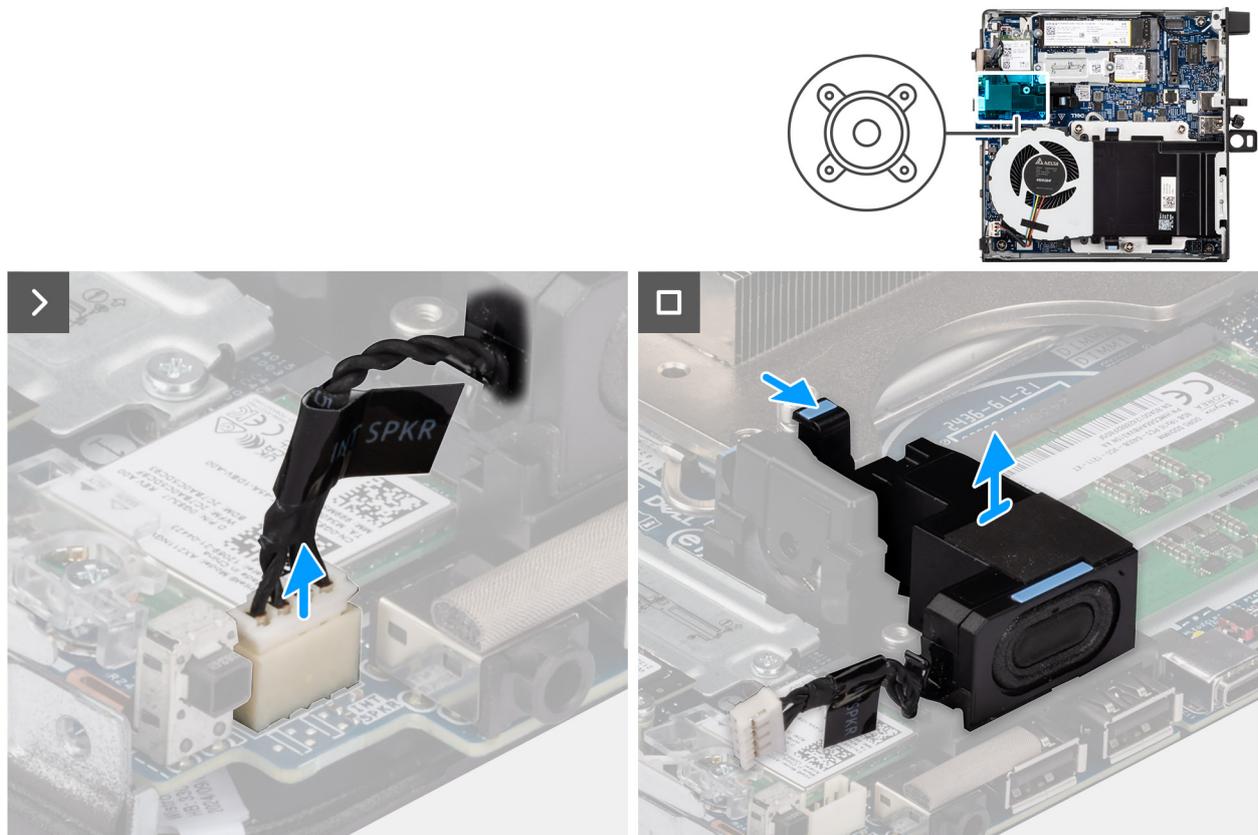


Figure 14. Removing the speaker

## Steps

1. Disconnect the speaker cable from its connector (INT SPKR) on the system board.
2. Press the tab that secures the speaker to the speaker-support bracket.
3. Lift the speaker off the bracket.


## Installing the speaker

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following images indicate the location of the speaker and provide a visual representation of the installation procedure.

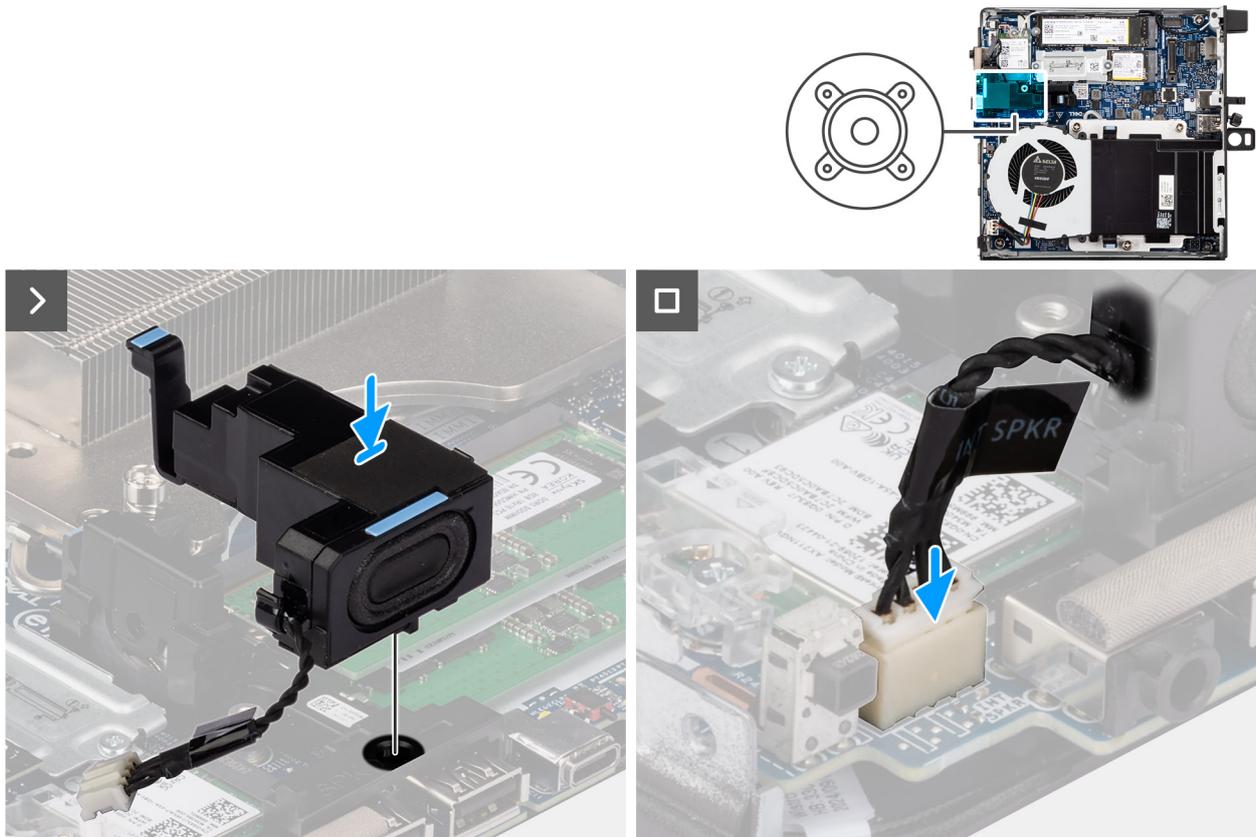

**Figure 15. Installing the speaker**

## Steps

1. Align the tab on the speaker with its slot in the speaker-support bracket.
2. Place the speaker into the speaker-support bracket and press it downwards to snap the speaker into its place.
3. Connect the speaker cable to its connector (INT SPKR) on the system board.

## Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

# Solid state drive

**NOTE:** Your computer supports two SSD configurations.

- **Single SSD configuration:** One SSD is installed in either of the two slots.
- **Dual SSD configuration:** SSDs are installed in both slots.

To upgrade from a single SSD configuration to a dual configuration by adding an SSD, users must install SSD heatsinks on both SSDs to ensure optimal performance. These heatsinks must be purchased separately.

## Removing the M.2 2230 solid-state drive in a single SSD configuration

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

### About this task

The following images indicate the location of the M.2 2230 solid-state drive and provide a visual representation of the removal procedure.

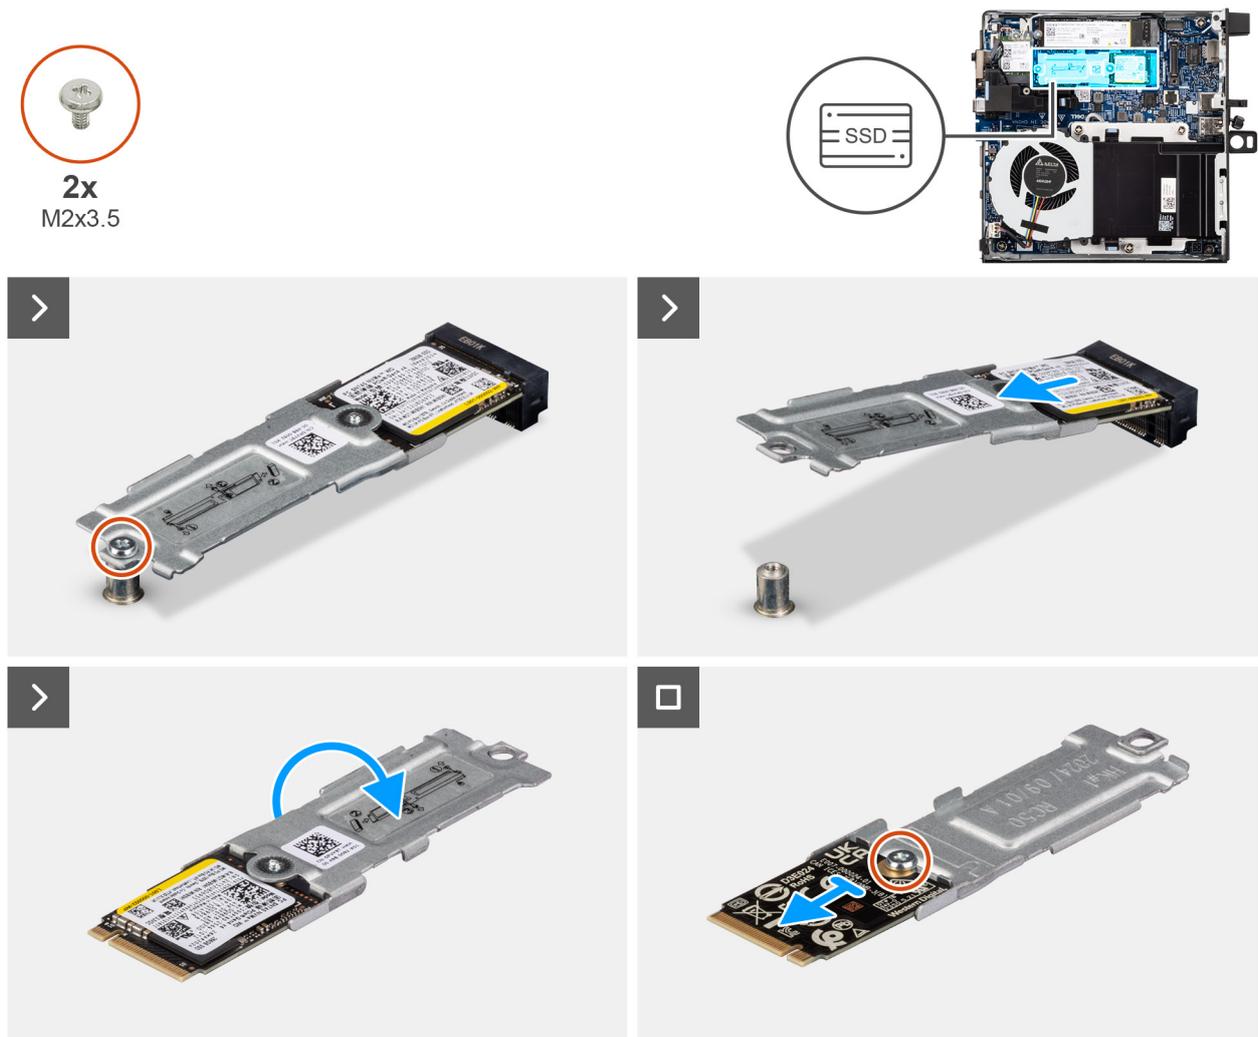


Figure 16. Removing the 2230 solid-state drive

## Steps

1. Remove the screw (M2x3.5) that secures the M.2 2230 solid-state drive assembly to the system board.
2. Slide and lift the M.2 2230 solid-state drive assembly off the solid-state drive slot (M.2 PCIe SSD-0) on the system board.
3. Hold the M.2 2230 solid-state drive assembly and flip it over.
4. Remove the screw (M2x3.5) that secures the M.2 2230 solid-state drive to its bracket.

## Installing the M.2 2230 solid-state drive in a single SSD configuration

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

**NOTE:** Ensure that a thermal pad is installed in the solid-state drive slot 1 (M.2 PCIe SSD-0) before installing the M.2 2230 solid-state drive.

The following images indicate the location of the M.2 2230 solid-state drive and provide a visual representation of the installation procedure.


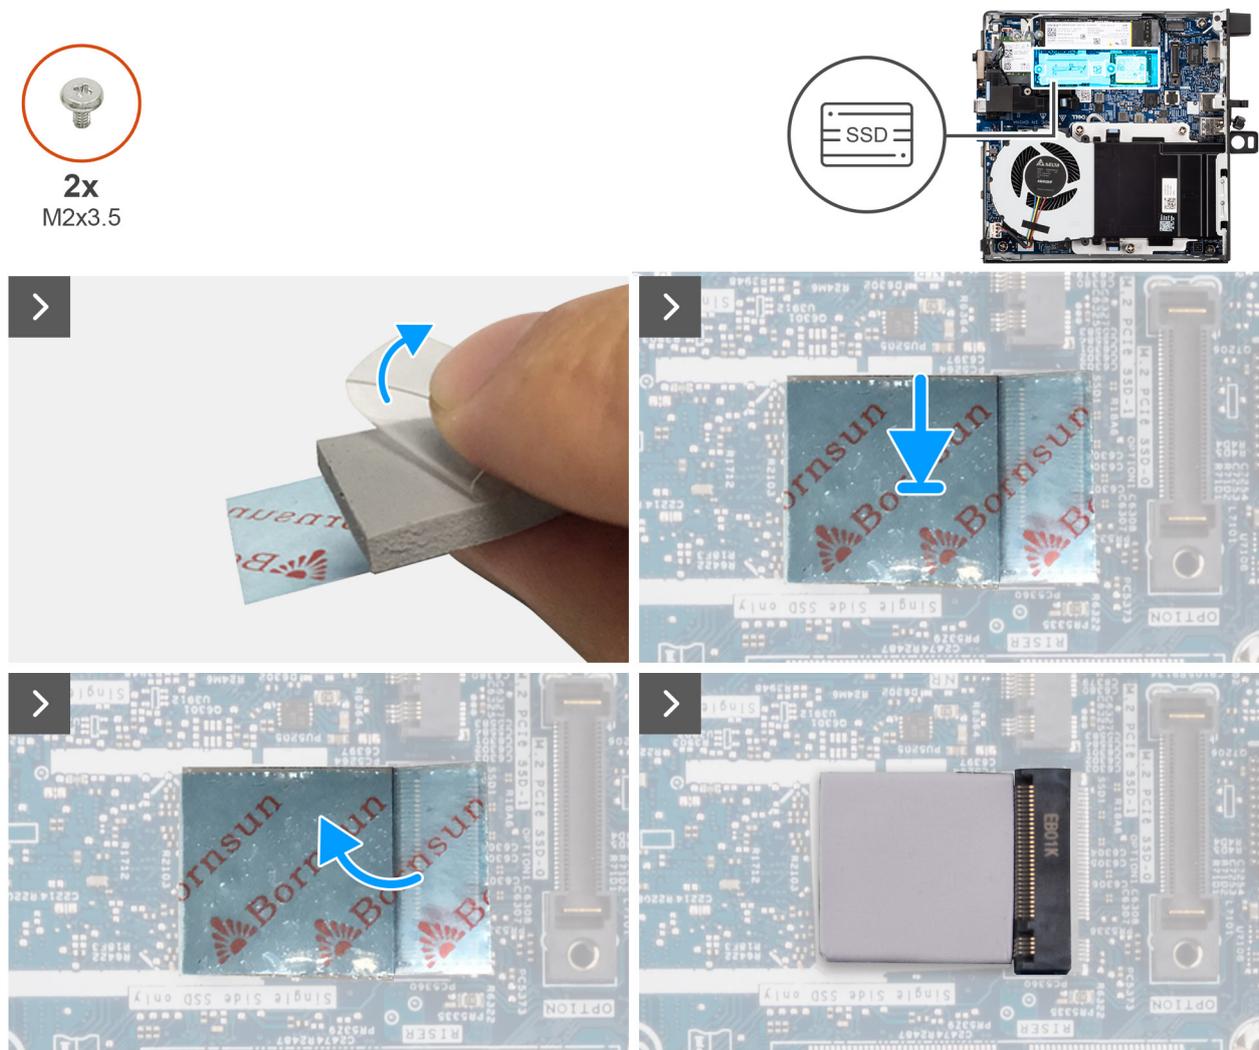


Figure 17. Installing the 2230 solid-state drive

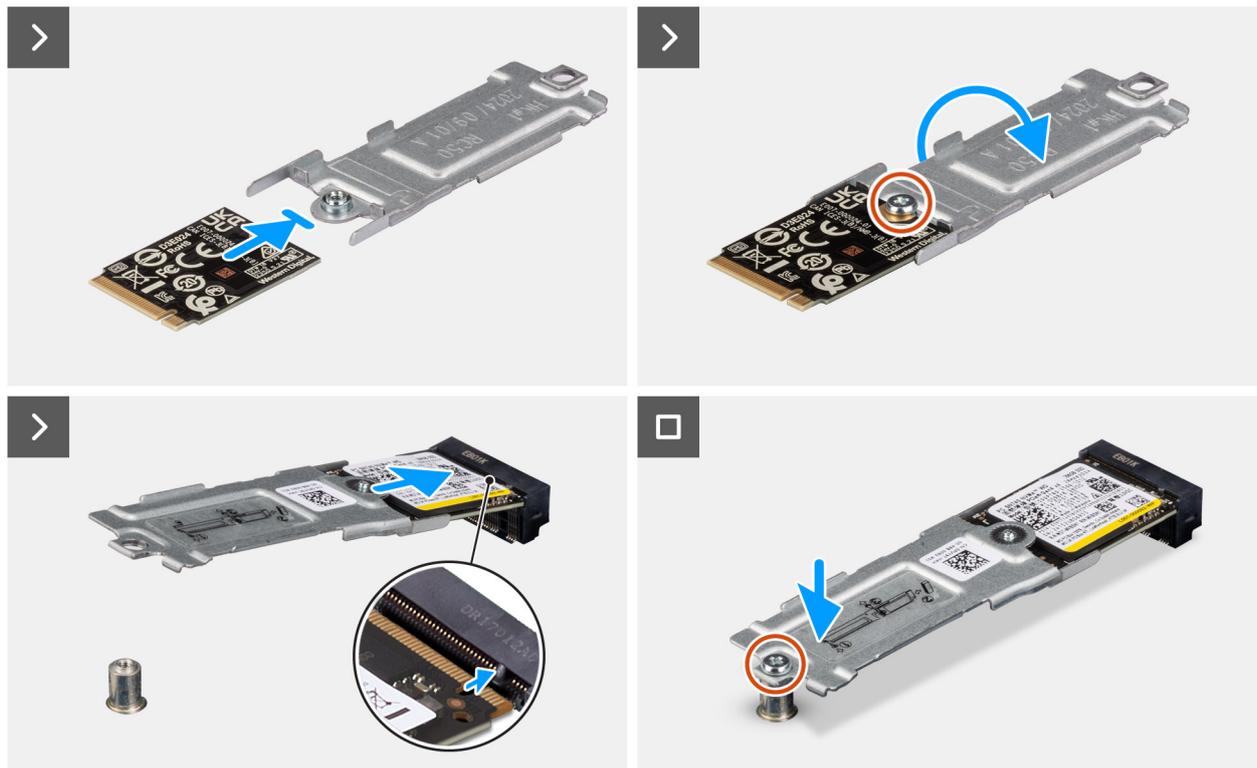

**Figure 18. Installing the 2230 solid-state drive**

### Steps

**NOTE:** Step 1 to Step 5 are applicable only to the installation of the SSD thermal pad on **Slot 1 (M.2 PCIe SSD-0)** of the system board.

1. Remove the plastic liner covering the solid-state drive thermal pad, exposing the adhesive surface halfway.
2. Place the solid-state drive thermal pad over the M.2 solid state-drive thermal pad area, ensuring accurate alignment and secure positioning.
3. Remove the remaining plastic liner from the solid-state drive thermal pad, and carefully apply the pad to the M.2 solid-state drive thermal pad area, ensuring a secure and even bond.
4. Use a plastic scraper to gently press and flatten the solid-state drive thermal pad onto the M.2 solid-state drive thermal pad area, ensuring a smooth and even surface for optimal adhesion.
5. Remove the remaining plastic liner from the solid-state drive thermal pad.
6. Align the screw hole on the M.2 2230 solid-state drive with the screw hole on the solid-state drive bracket.
7. Replace the screw (M2x3.5) that secures the M.2 2230 solid-state drive to the solid-state drive bracket and flip over the solid-state drive assembly.
8. Align the notch on the M.2 2230 solid-state drive with the tab on the solid-state drive slot (M.2 PCIe SSD-0).
9. Slide the M.2 2230 solid-state drive assembly into the solid-state drive slot (M.2 PCIe SSD-0) on the system board.
10. Replace the screw (M2x3.5) that secures the M.2 2230 solid-state drive assembly to the system board.

### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

# Removing the M.2 2280 solid-state drive in a single SSD configuration

## Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

## About this task

The following images indicate the location of the M.2 2280 solid-state drive and provide a visual representation of the removal procedure.

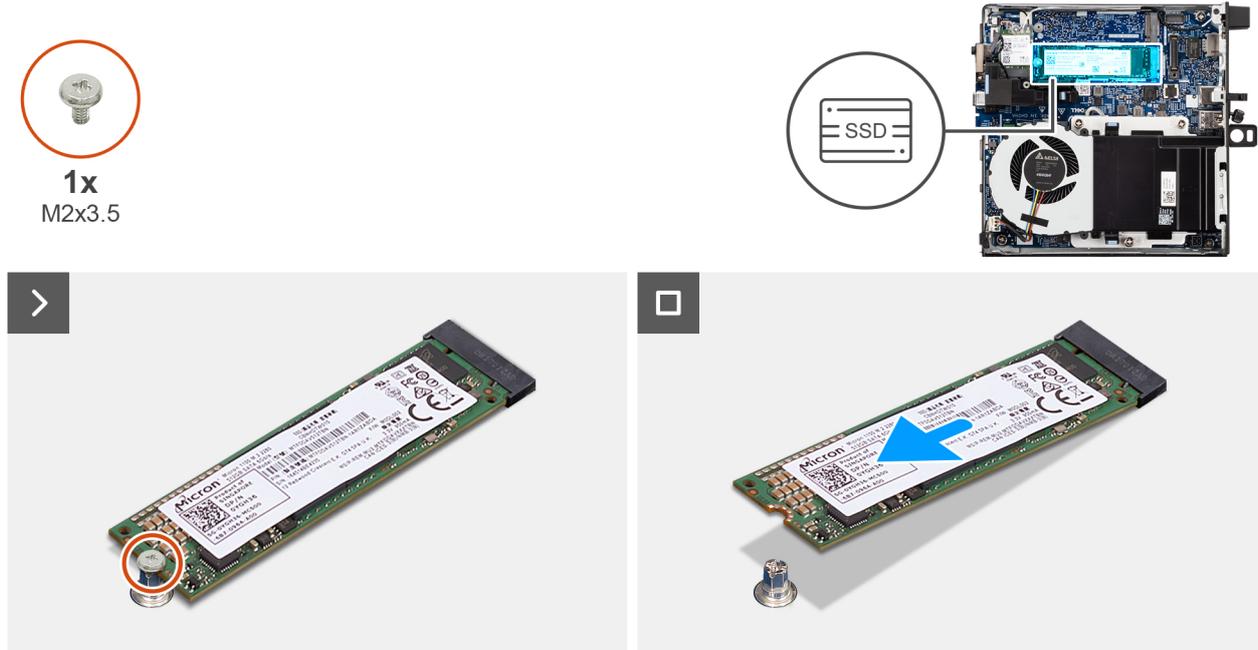


Figure 19. Removing the M.2 2280 solid-state drive

## Steps

1. Remove the screw (M2x3.5) that secures the M.2 2280 solid-state drive to the system board.
2. Slide and lift the M.2 2280 solid-state drive off the solid-state drive slot (M.2 PCIe SSD-0) on the system board.

# Installing the M.2 2280 solid-state drive in a single SSD configuration

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

## About this task

- NOTE:** This procedure is only applicable if you are installing an M.2 2280 solid-state drive in the solid-state drive slot 1 (M.2 PCIe SSD 0).
- NOTE:** Ensure that a thermal pad is installed in the solid-state drive slot 1 (M.2 PCIe SSD-0) before installing the M.2 2280 solid-state drive.

The following images indicate the location of the M.2 2280 solid-state drive and provide a visual representation of the installation procedure.



1x  
M2x3.5

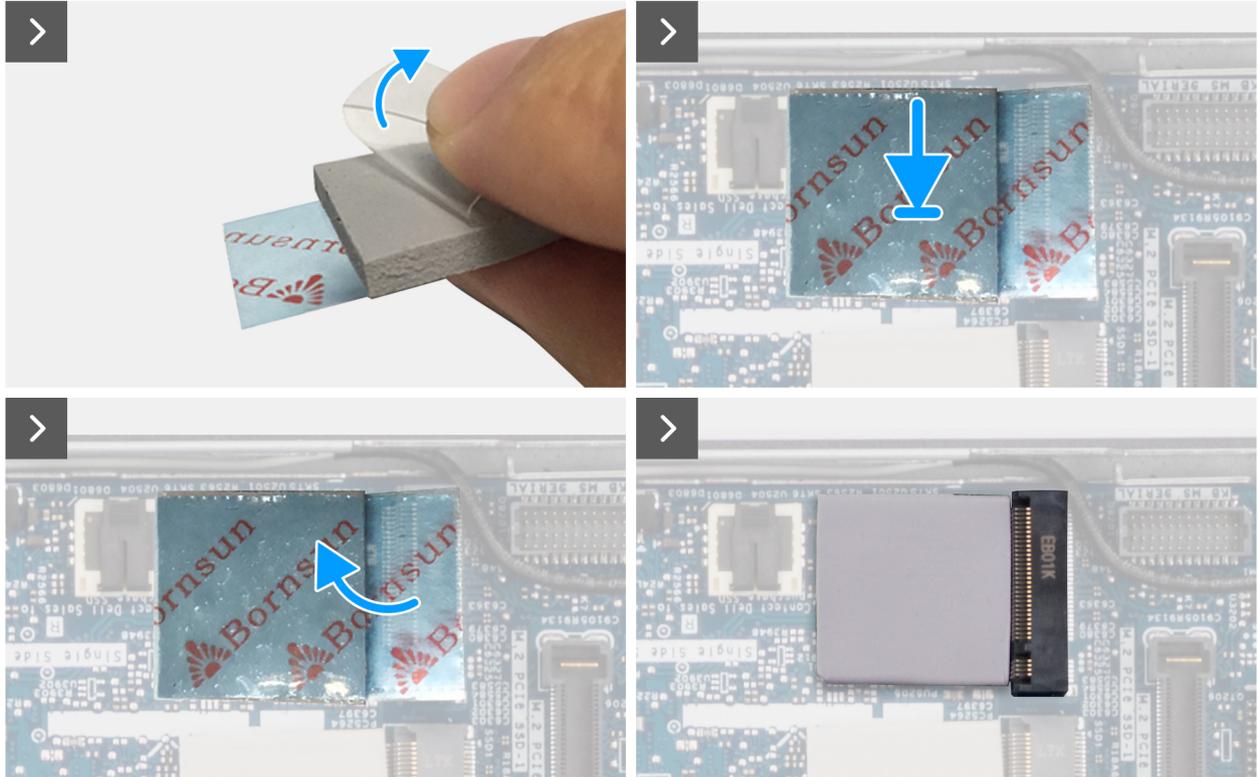
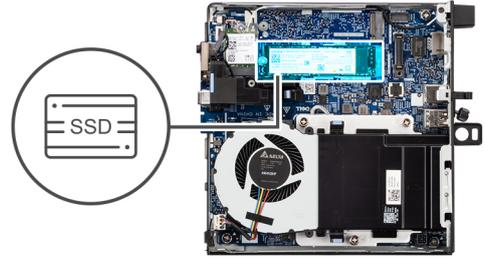


Figure 20. Installing the M.2 2280 solid-state drive

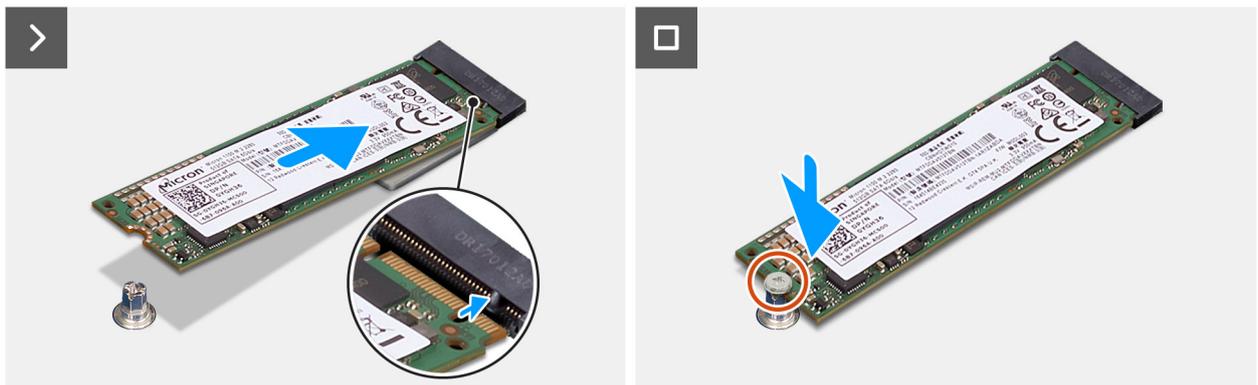


Figure 21. Installing the M.2 2280 solid-state drive

### Steps

**NOTE:** Step 1 to Step 5 are applicable only to the installation of the SSD thermal pad on **Slot 1 (M.2 PCIe SSD-0)** of the system board.

1. Remove the plastic liner covering the solid-state drive thermal pad, exposing the adhesive surface halfway.
2. Place the solid-state drive thermal pad over the M.2 solid state-drive thermal pad area, ensuring accurate alignment and secure positioning.

3. Remove the remaining plastic liner from the solid-state drive thermal pad, and carefully apply the pad to the M.2 solid-state drive thermal pad area, ensuring a secure and even bond.
4. Use a plastic scraper to gently press and flatten the solid-state drive thermal pad onto the M.2 solid-state drive thermal pad area, ensuring a smooth and even surface for optimal adhesion.
5. Remove the remaining plastic liner from the solid-state drive thermal pad.
6. Align the notch on the M.2 2280 solid-state drive with the tab on the solid-state drive slot (M.2 PCIe SSD-0).
7. Slide the M.2 2280 solid-state drive into the solid-state drive slot (M.2 PCIe SSD-0) on the system board.
8. Replace the screw (M2x3.5) that secures the M.2 2280 solid-state drive to the system board.

#### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).


## Removing the M.2 2230 solid-state drive in a dual SSD configuration

#### Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [side cover](#).

#### About this task

The following images indicate the location of the SSD and provide a visual representation of the removal procedure.

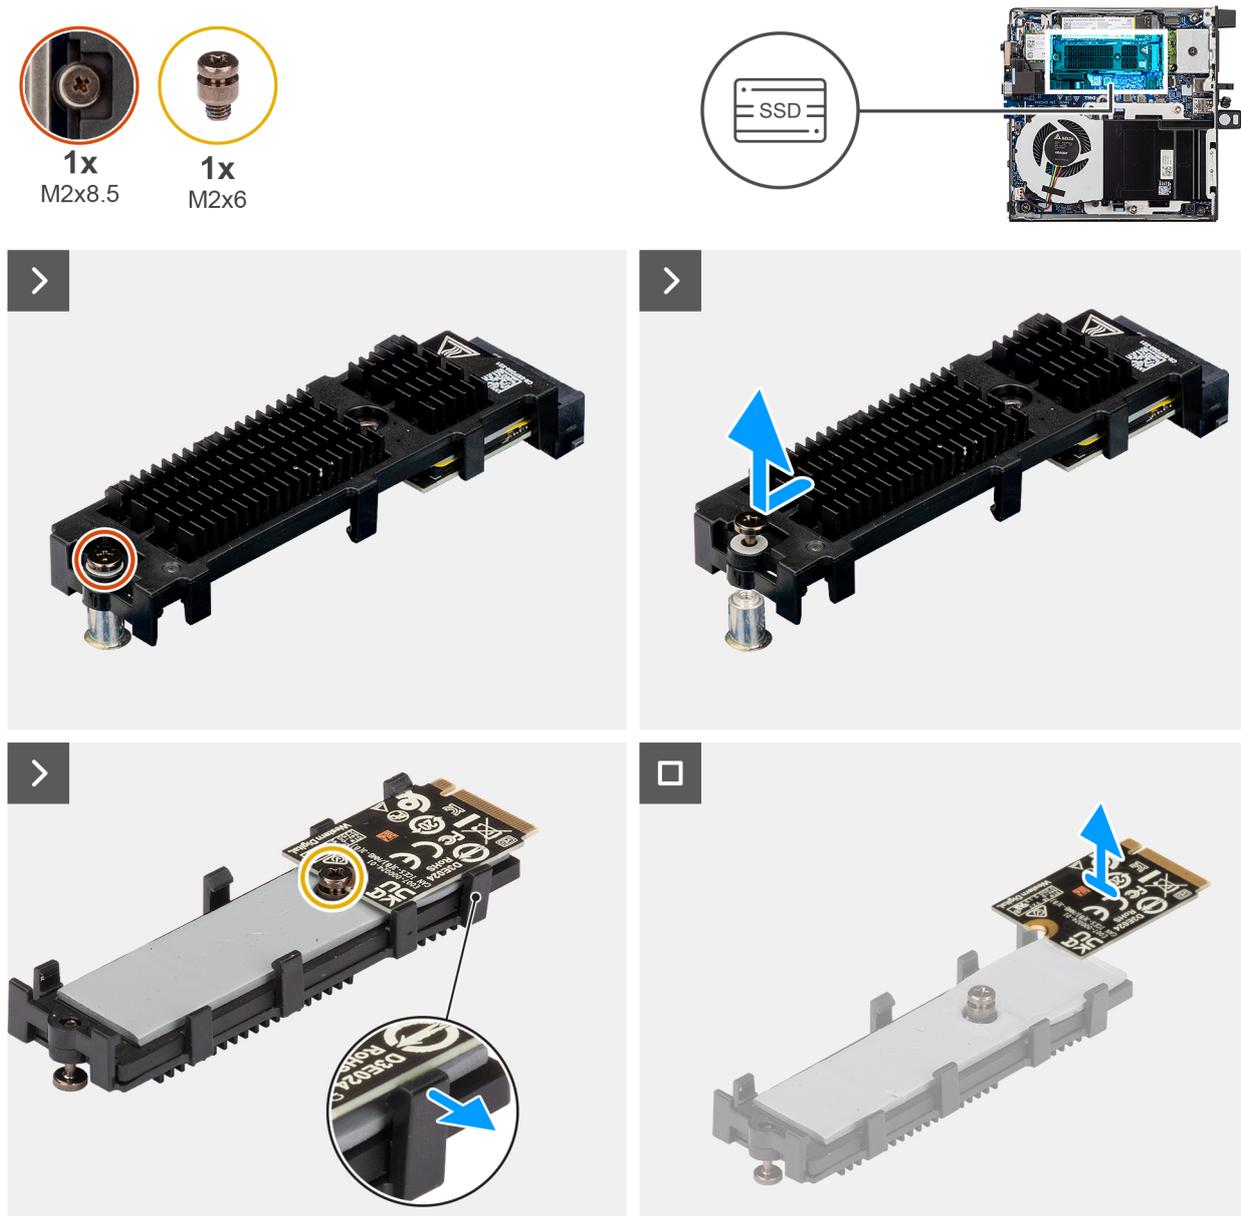

**Figure 22. Removing the M.2 2230 PCIe solid state drive**

**Steps**

1. Loosen the screw (M2x8.5) that secures the SSD-extender bracket to the system board.
2. Slide and lift the SSD-extender bracket from the system board.
3. Flip over the extender bracket.
4. Release the four snaps holding the M.2 2230 SSD card.
5. Remove the M.2 2230 SSD from the extender bracket.

**NOTE:** Repeat steps 1 to 5 for removing M.2 2230 SSD from slot-two (if applicable)

# Installing the M.2 2230 solid-state drive in a dual SSD configuration

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The following image indicates the location of the SSD and provides a visual representation of the installation procedure.

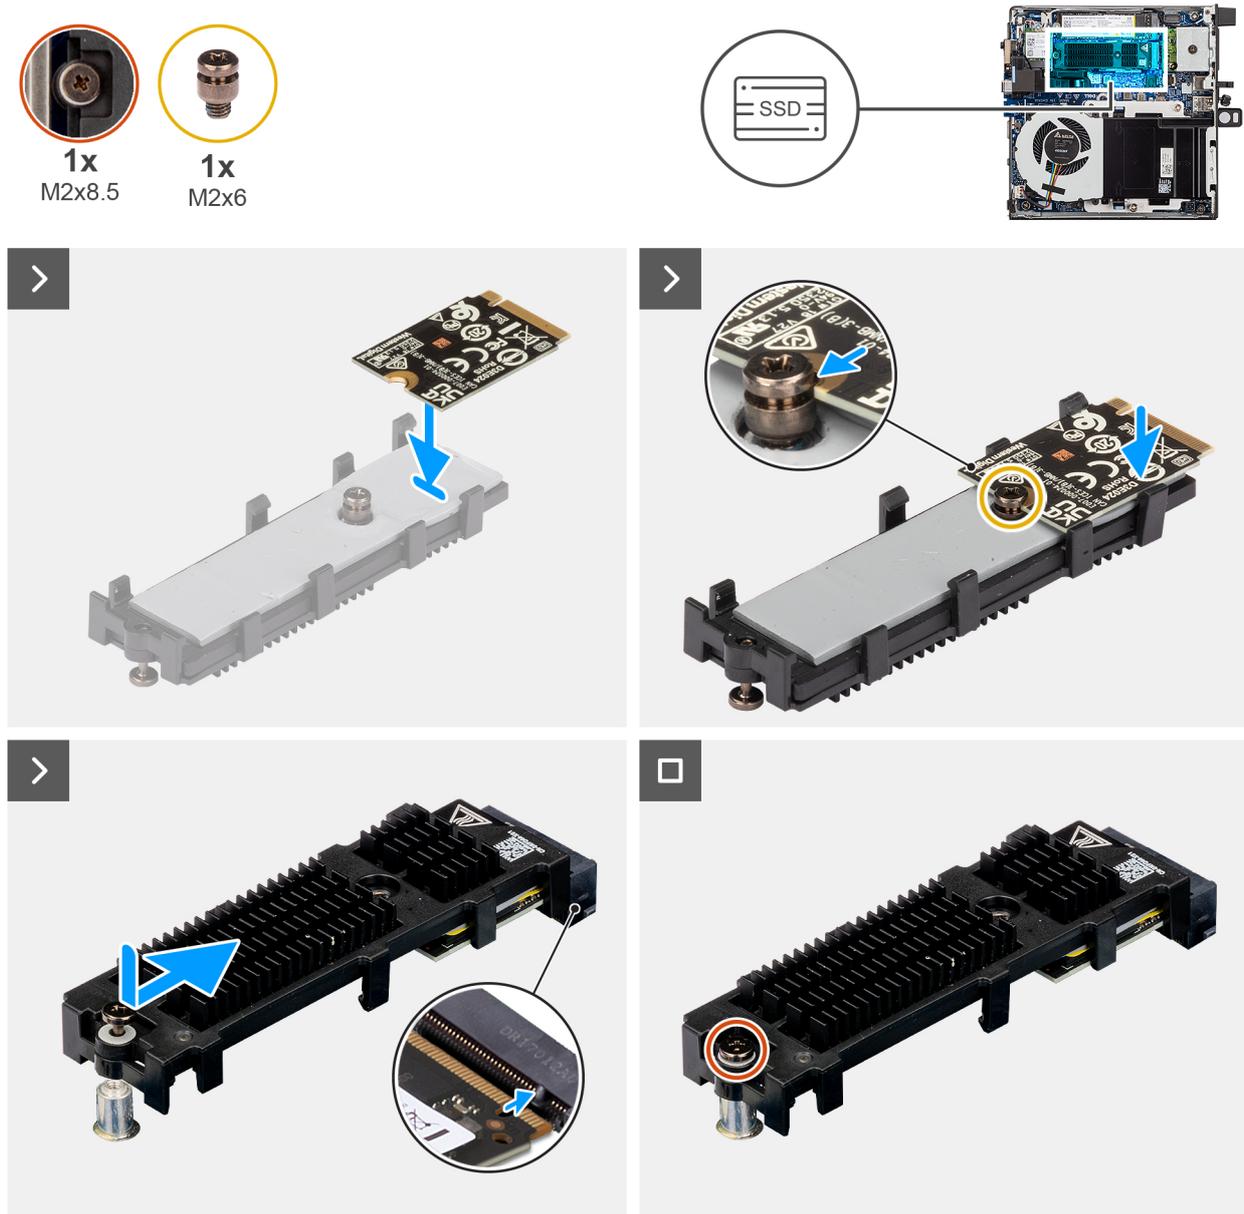


Figure 23. Installing the M.2 2230 PCIe solid state drive

## Steps

1. Place the M.2 2230 SSD card on the extender bracket at a 45-degree angle.
2. Align the notch of the card with the screw (M2x6) on the extender bracket.
3. Press down until the M.2 2230 SSD card snaps into place.
4. Flip the extender bracket and align the notch with the tab on the SSD connector on the system board.

5. Insert the SSD-extender bracket at a 45-degree angle into the M.2 connector on the system board.
6. Replace the screw (M2x8.5) that secures the M.2 2230 SSD-extender bracket to the system board.

 **NOTE:** Repeat steps 1 to 6 for installing the M.2 2230 SSD in slot-two (if applicable).

#### **Next steps**

1. Install the [side cover](#).
2. Follow the procedure in [after working inside your computer](#).

## **Removing the M.2 2280 solid-state drive in a dual SSD configuration**

#### **Prerequisites**

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [side cover](#).

#### **About this task**

The following images indicate the location of the SSD and provide a visual representation of the removal procedure.



1x  
M2x8.5

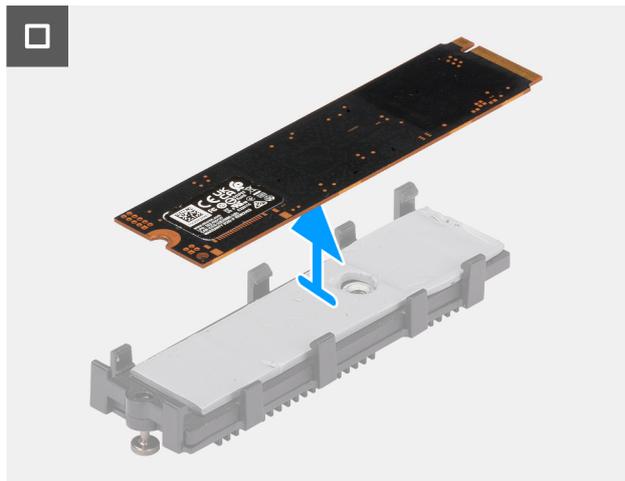
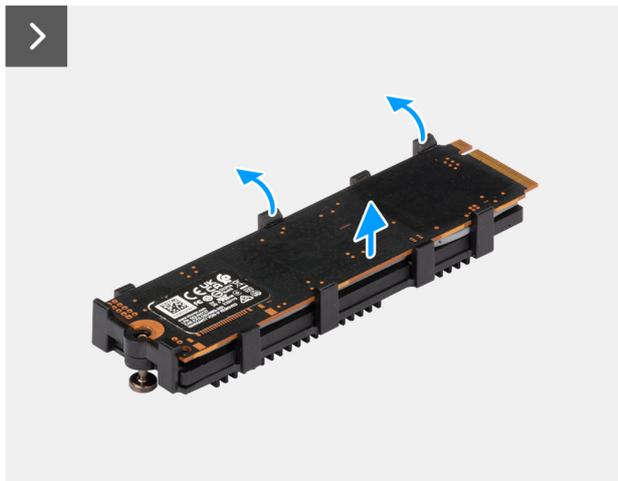
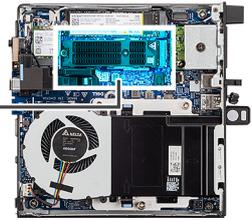


Figure 24. Removing the M.2 2280 PCIe solid state drive

#### Steps

1. Loosen the screw (M2x8.5) that secures the SSD-extender bracket to the system board.
2. Slide and lift the SSD-extender bracket from the system board.
3. Flip over the bracket and remove the M.2 2280 SSD from the extender bracket.

## Installing the M.2 2280 solid-state drive in a dual SSD configuration

#### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

#### About this task

The following image indicates the location of the SSD and provides a visual representation of the installation procedure.



1x  
M2x8.5

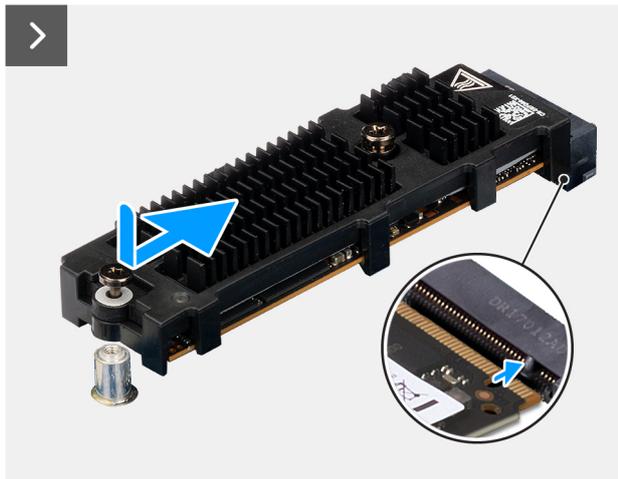
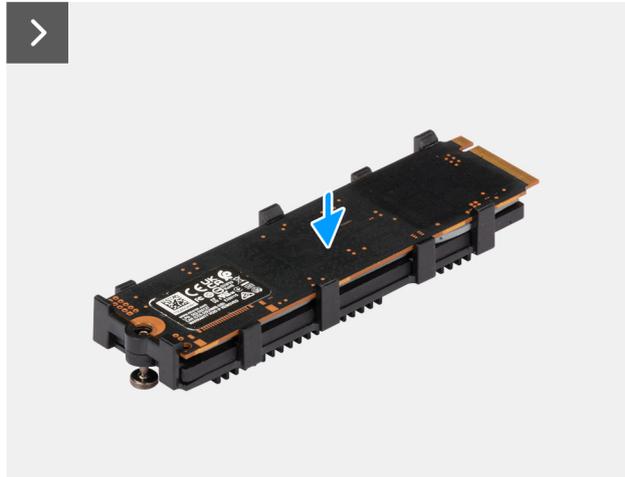
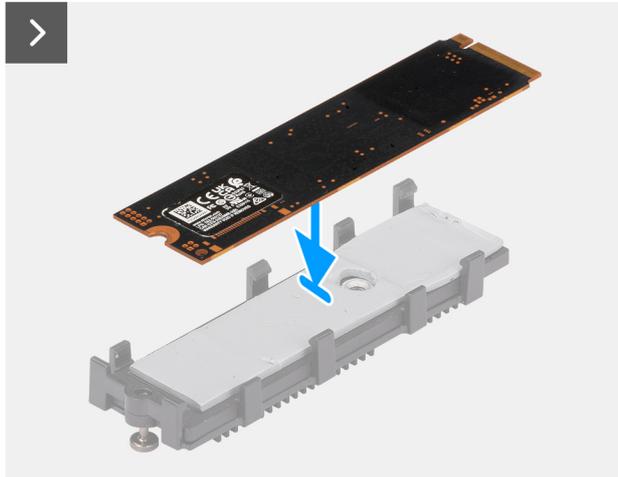
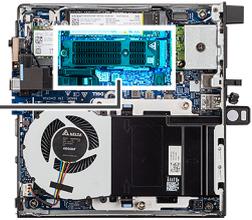


Figure 25. Installing the M.2 2280 PCIe solid state drive

### Steps

1. Place the M.2 2280 SSD on the SSD-extender bracket.
2. Flip over the bracket and align the notch with the tab on the SSD connector on the system board.
3. Insert the SSD-extender bracket at a 45-degree angle into the M.2 connector on the system board.
4. Replace the screw (M2x8.5) that secures the M.2 2280 SSD-extender bracket to the system board.

### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [after working inside your computer](#).

# Wireless card

## Removing the wireless card

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

### About this task

The following images indicate the location of the wireless card and provide a visual representation of the removal procedure.

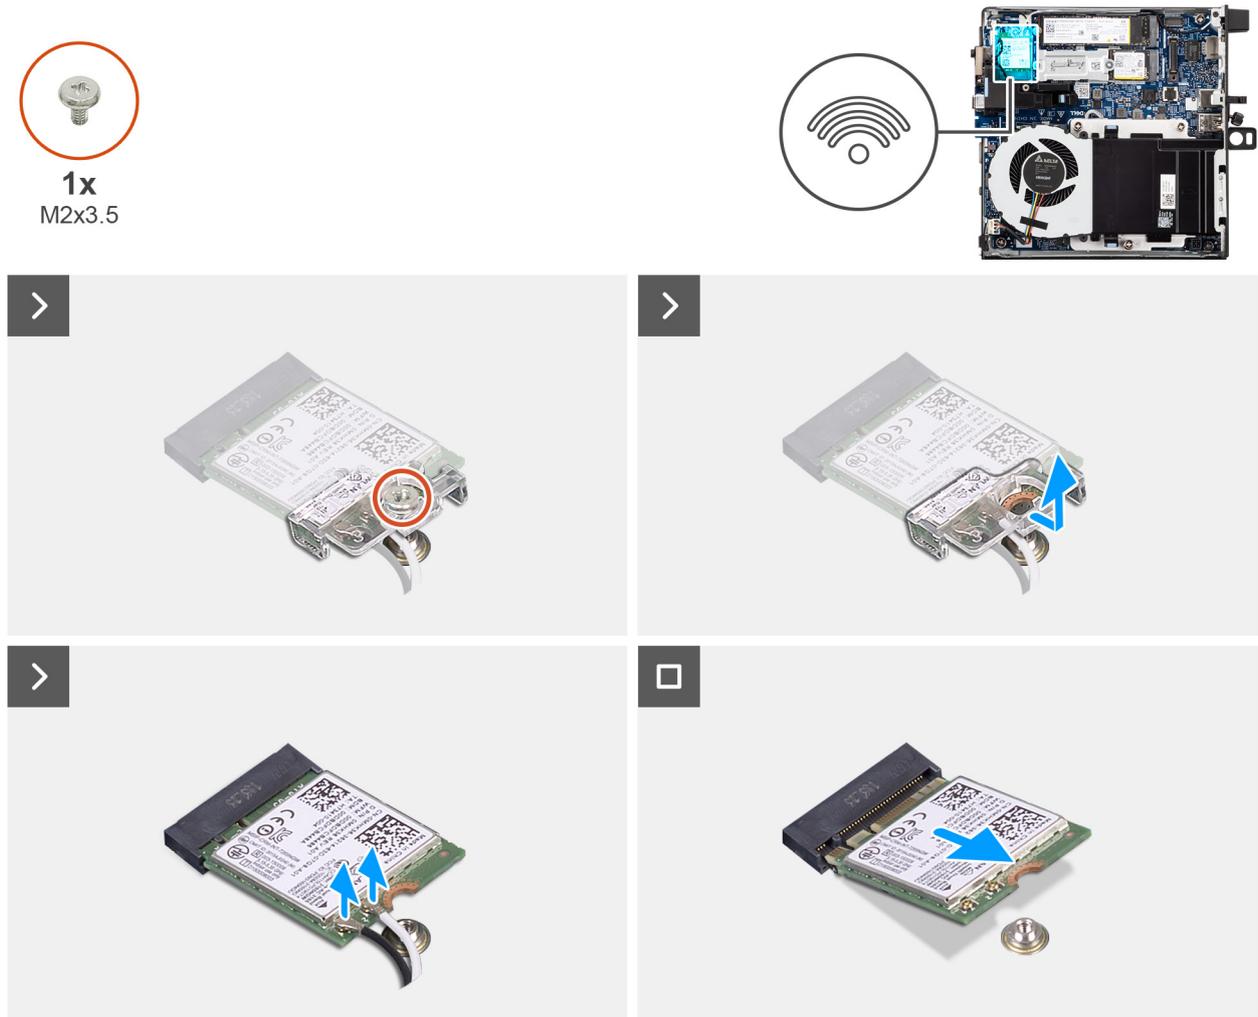


Figure 26. Removing the wireless card

### Steps

1. Remove the screw (M2x3.5) that secures the wireless-card bracket to the wireless card.
2. Lift the wireless-card bracket off the wireless card.
3. Disconnect the antenna cables from the connectors on the wireless card.
4. Slide and remove the wireless card from the wireless-card slot (M.2 WLAN).

# Installing the wireless card

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

## About this task

The following images indicate the location of the wireless card and provide a visual representation of the installation procedure.

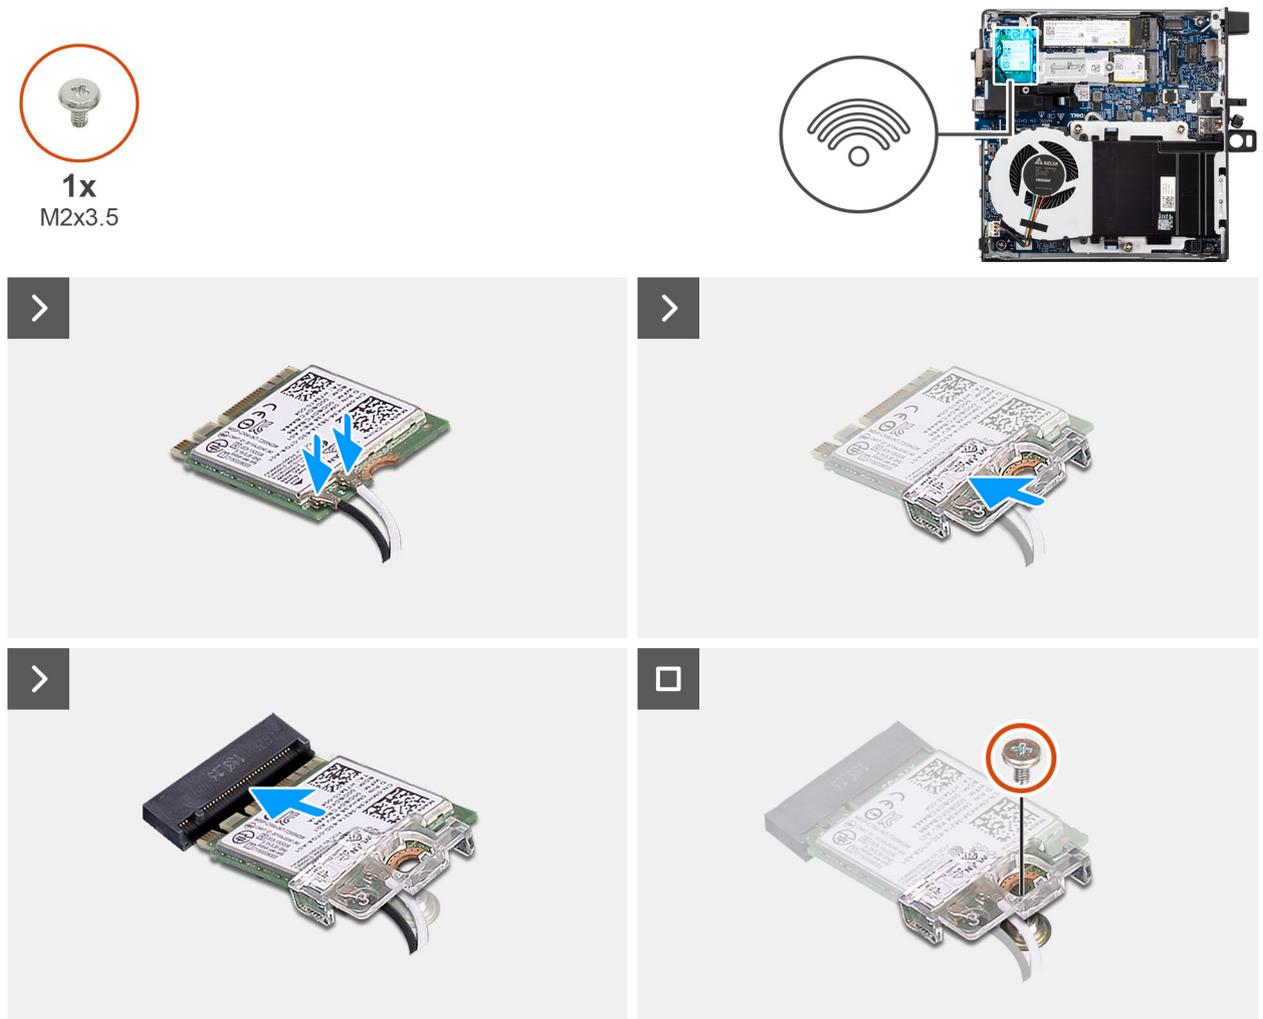


Figure 27. Installing the wireless card

## Steps

1. Connect the antenna cables to the connectors on the wireless card.

Table 23. Antenna-cable color scheme

| Connector on the wireless card | Antenna-cable color | Silkscreen marking |                    |
|--------------------------------|---------------------|--------------------|--------------------|
| Main                           | White               | MAIN               | △ (white triangle) |
| Auxiliary                      | Black               | AUX                | ▲ (black triangle) |

2. Align the notch on the wireless card with the tab on the wireless-card slot (M.2 WLAN).
3. Slide the wireless card at an angle into the wireless-card slot (M.2 WLAN).
4. Place the wireless-card bracket on the wireless card.

5. Replace the screw (M2x3.5) that secures the wireless-card bracket to the wireless card.

#### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Fan

### Removing the fan

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

#### About this task

The following images indicate the location of the fan and provide a visual representation of the removal procedure.




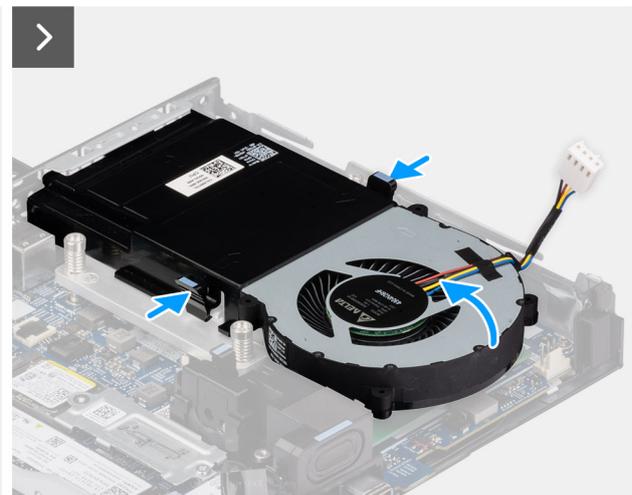


Figure 28. Removing the fan

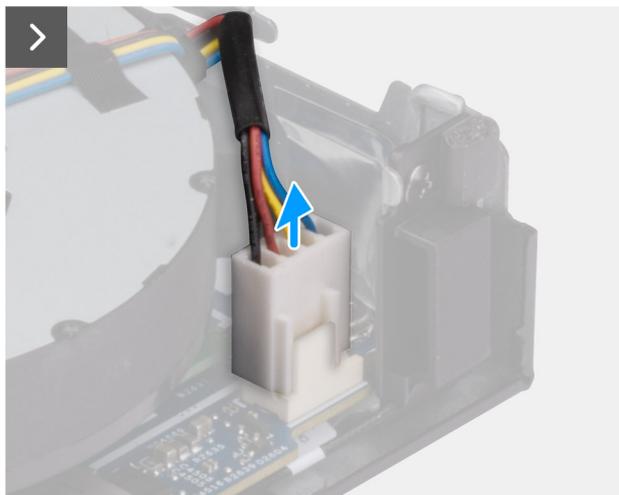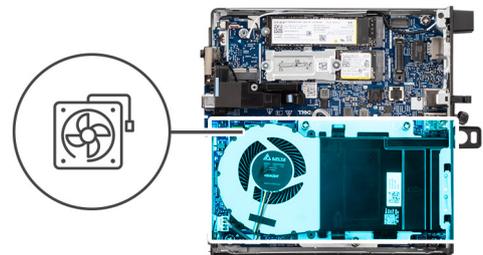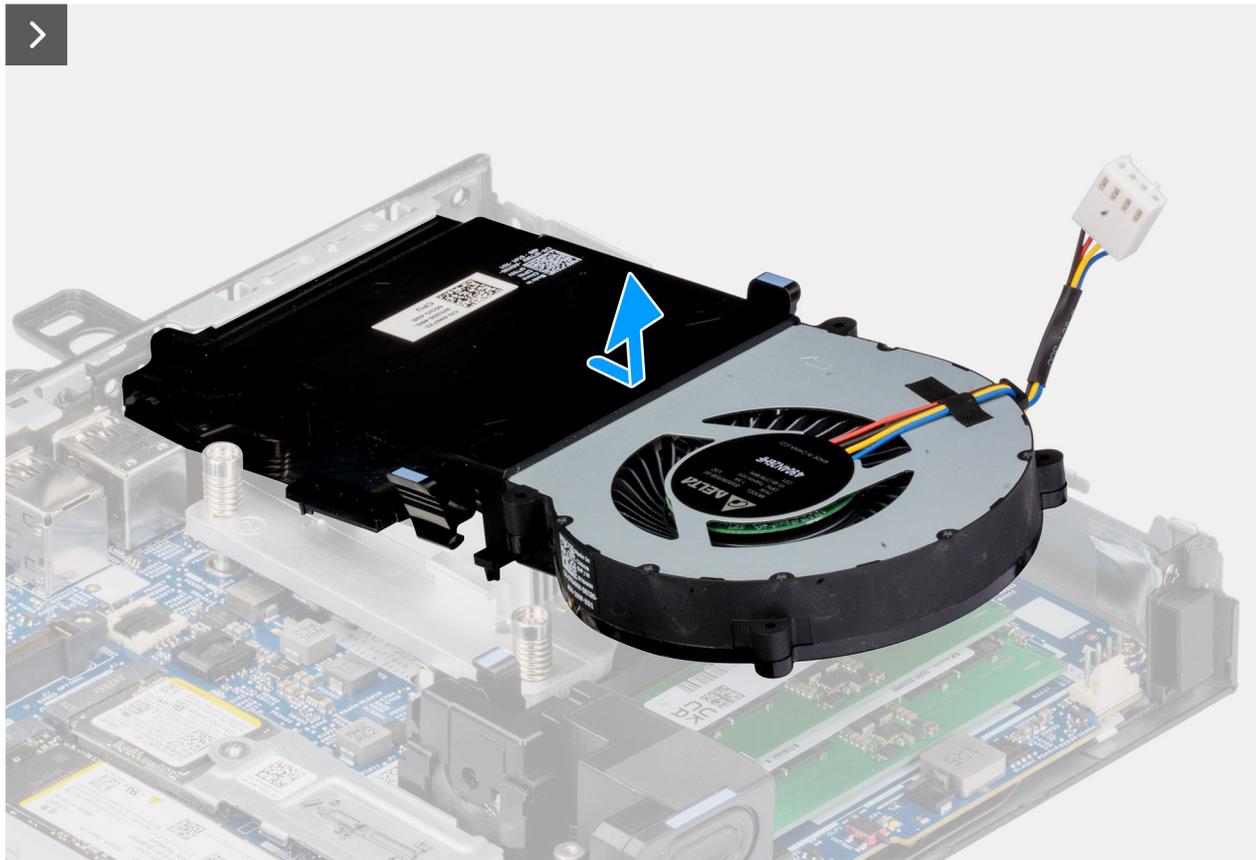

**Figure 29. Removing the fan**

### Steps

1. Disconnect the fan cable from its connector (FAN CPU) on the system board.
2. Grip the tabs on the fan and lift it upward, holding it at the desired angle.
3. Slide the fan outwards and remove the fan away from the chassis.

## Installing the fan

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following images indicate the location of the fan and provide a visual representation of the installation procedure.



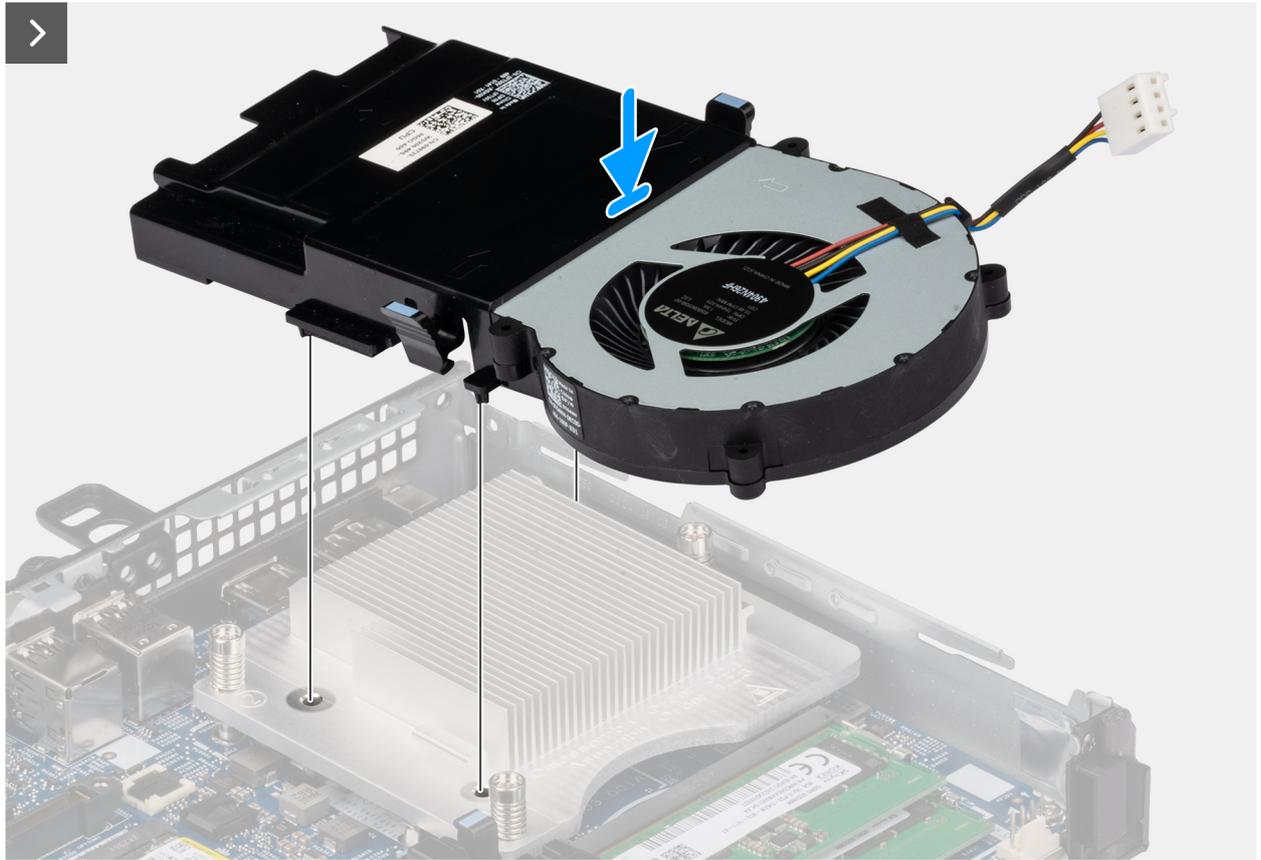


Figure 30. Installing the fan

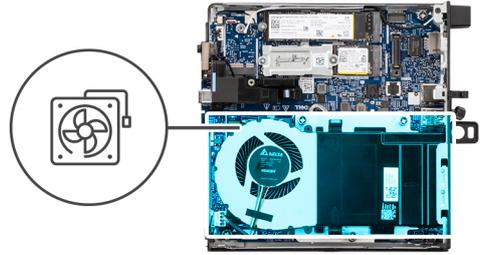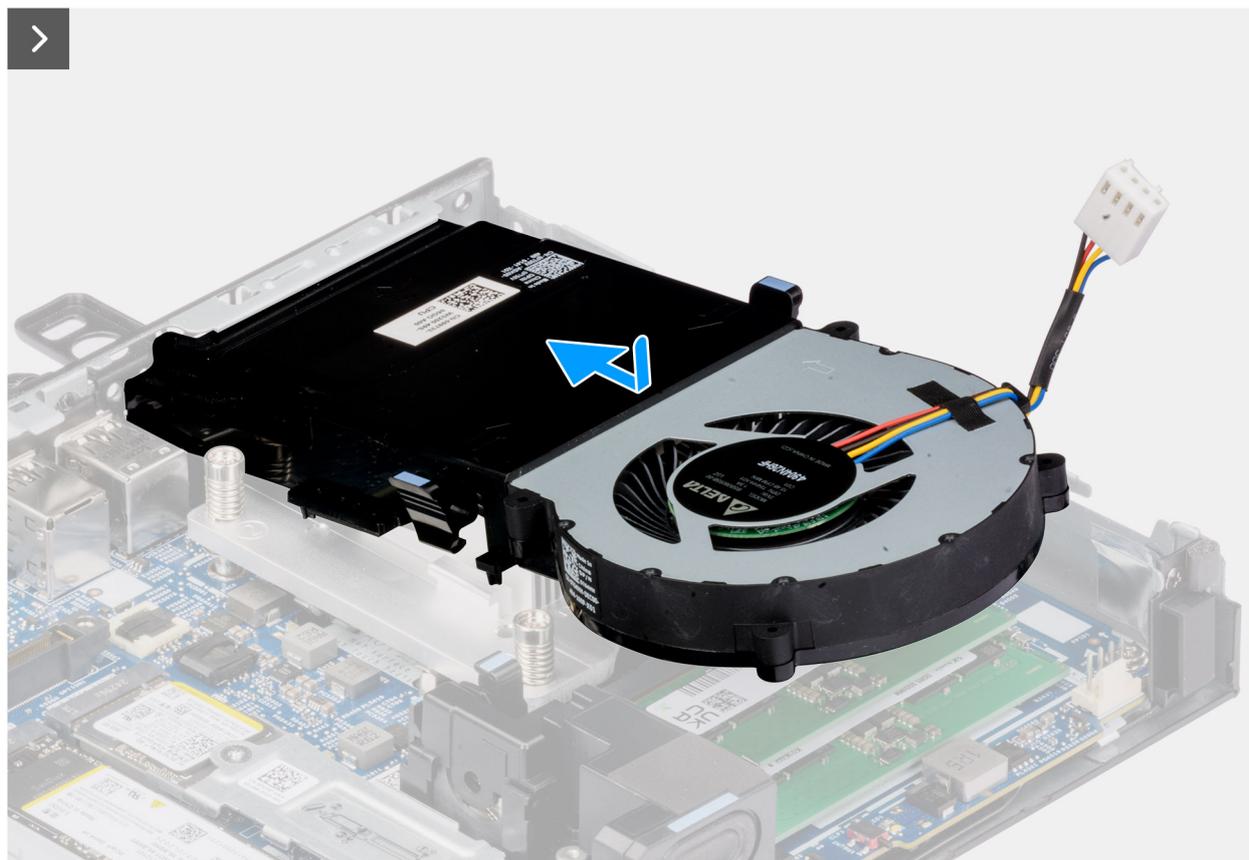

**Figure 31. Installing the fan**

#### Steps

1. Slide the fan at a certain angle into its slot on the chassis.
2. Press the fan downwards until it snaps into place.  
**i** **NOTE:** Ensure that the tabs are snapped into position on the heat sink.
3. Connect the fan cable to its connector (FAN CPU) on the system board.

#### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Memory

### Removing the memory module

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).
3. Remove the [fan](#).

#### About this task

The following images indicate the location of the memory modules and provide a visual representation of the removal procedure.



**Figure 32. Removing the memory module**

**Steps**

1. Carefully spread apart the securing-clips on each end of the memory-module slot (DIMM1 or DIMM2).
2. Grasp the memory module near the securing clip, and then gently ease the memory module out of the memory-module slot.

**CAUTION:** To prevent damage to the memory module, hold the memory module by the edges. Do not touch the components on the memory module.

**NOTE:** Repeat **Step 1** and **Step 2** to remove any other memory modules installed in your computer.

**NOTE:** Note the slot and the orientation of the memory module in order to replace it in the correct slot.

## Installing the memory module


**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation process.

**About this task**

**NOTE:** The DDR5 thermal pad is required if you are installing 64 GB memory in your computer.

The following images indicate the location of the memory modules and provide a visual representation of the installation procedure.

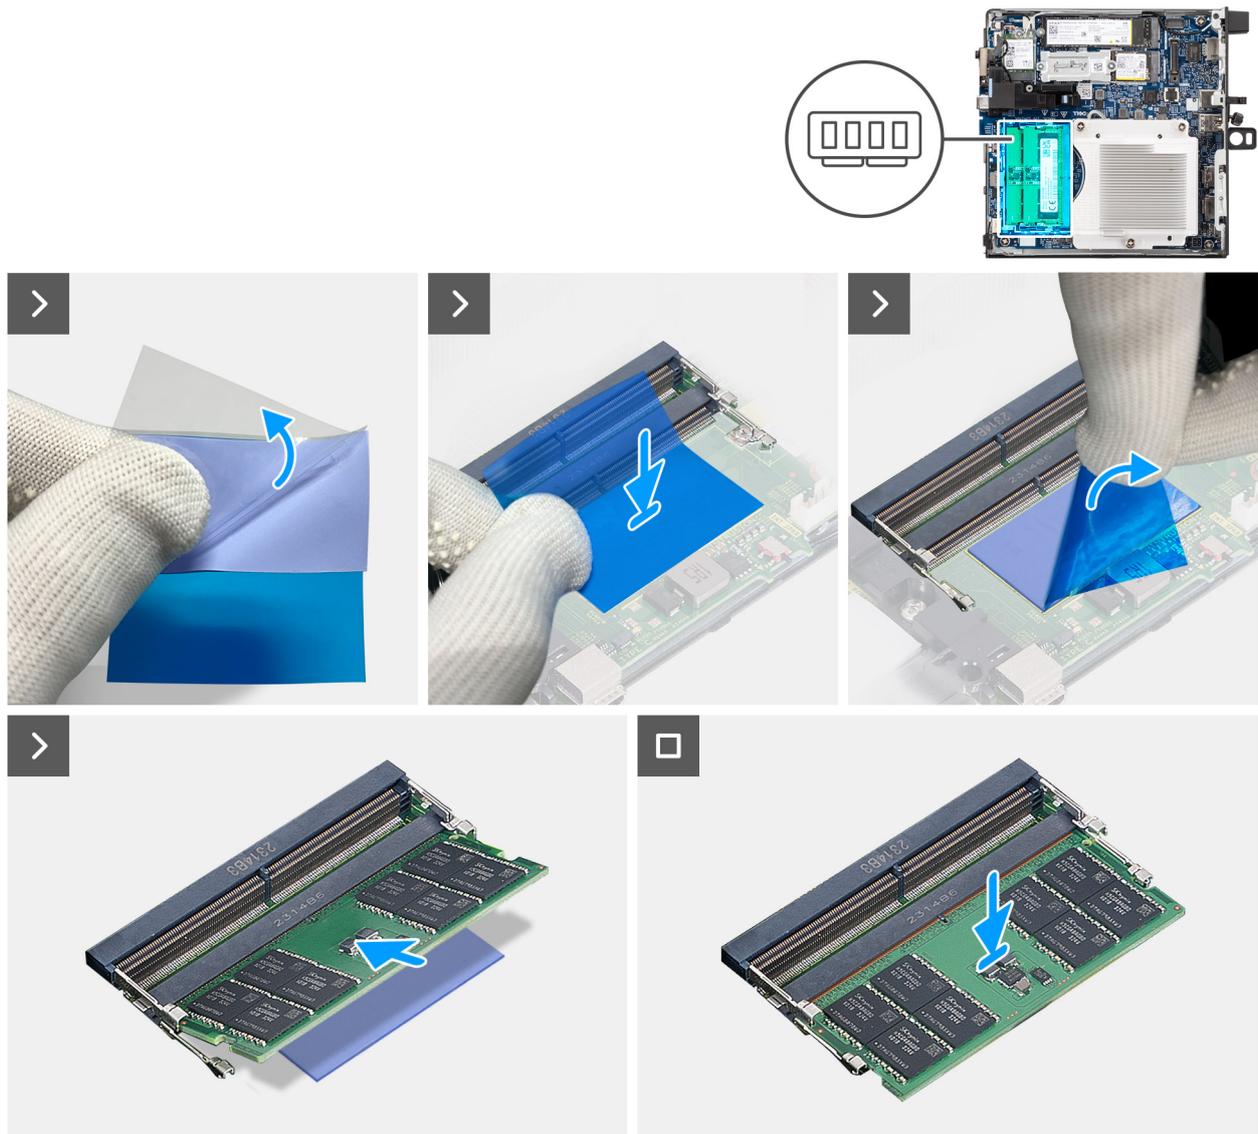

**Figure 33. Installing the memory module**

### Steps

**i** **NOTE:** Step 1 to Step 5 are applicable when installing the DDR5 thermal pad.

1. Peel back the backing of the DDR5 thermal pad halfway.
2. Align the DDR5 thermal pad over the DDR5 thermal pad area.
  - i** **NOTE:** Ensure the corners of the DDR5 thermal pad are aligned to the corners of the DDR5 thermal pad area.
3. Peel the rest of the backing off the DDR5 thermal pad and paste the DDR5 thermal pad onto the DDR5 thermal pad area.
4. Flatten the DDR5 thermal pad with a plastic scrapper to ensure proper adhesion.
5. Peel off the protective layer from the DDR5 thermal pad.
6. Align the notch on the memory module with the tab on the memory-module slot (DIMM1 or DIMM2).
7. Press down on the memory module until the memory module snaps into position and the securing clips lock in place.

**⚠ CAUTION:** To prevent damage to the memory module, hold the memory module by the edges. Do not touch the components on the memory module.

**i** **NOTE:** Repeat Step 6 and Step 7 when installing more than one memory module in your computer.

### Next steps

1. Install the [fan](#).
2. Install the [side cover](#).
3. Follow the procedure in [After working inside your computer](#).

## External puck antenna

### Removing external puck antenna

#### Prerequisites

1. Follow the procedure in [before working inside your computer](#).

#### About this task

The following images indicate the location of external puck antenna and provide a visual representation of the removal procedure.

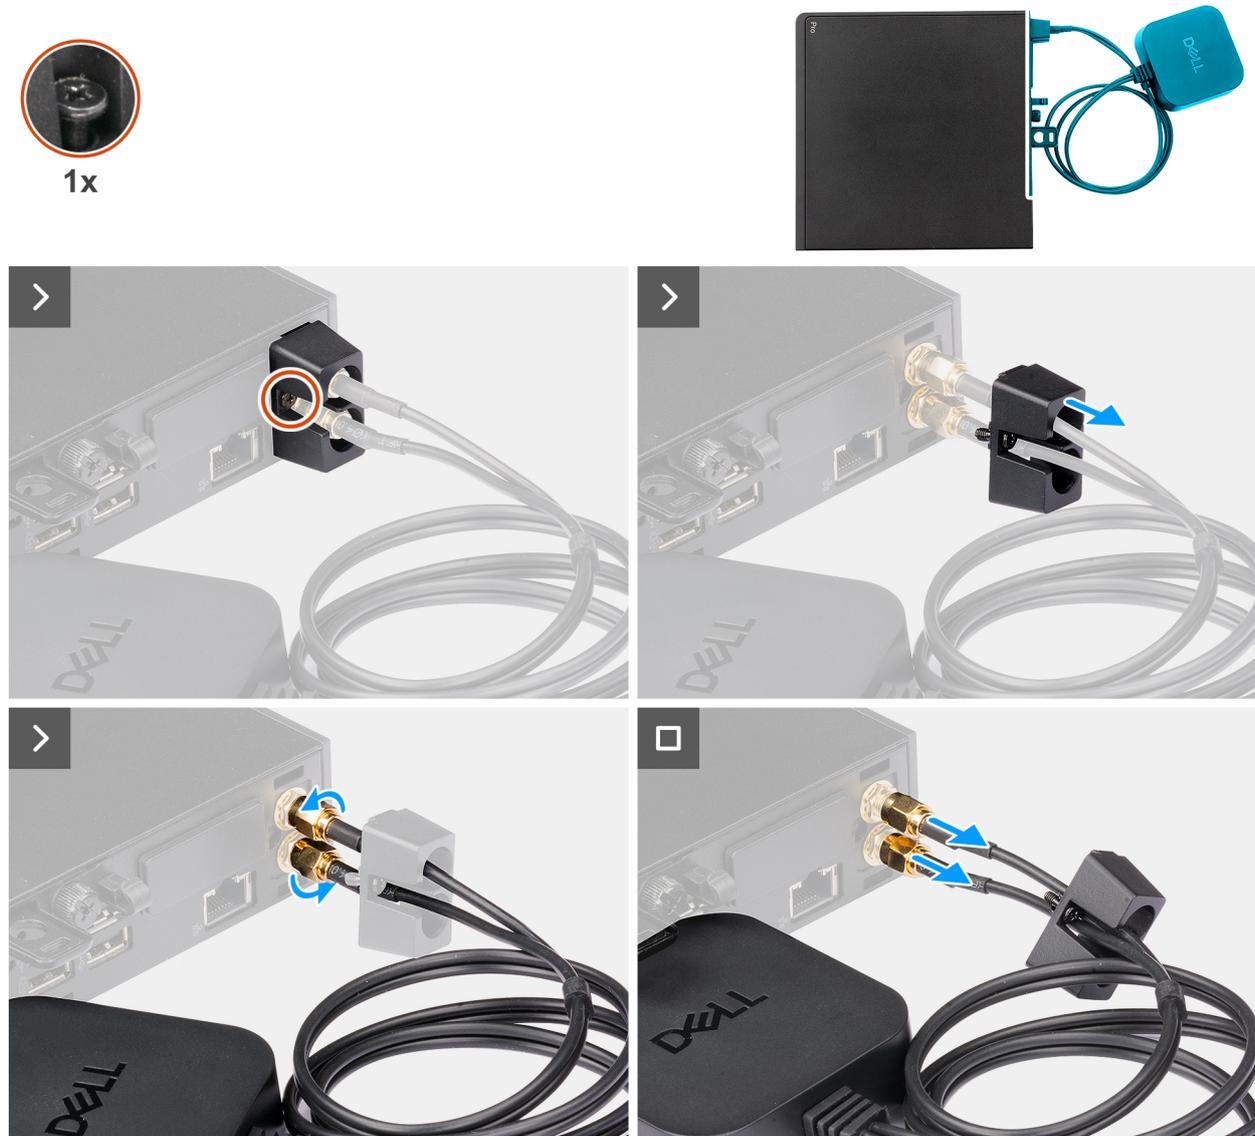


Figure 34. Removing external puck antenna

## Steps

1. Loosen the captive screw that secures the puck antenna cover to the chassis.
2. Remove the puck antenna cover to access the bolts on the puck antenna cable.
3. Loosen the bolts on the puck antenna cable.
4. Disconnect the puck antenna cable from the SMA antenna connector on the chassis.

## Installing external puck antenna module

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of external puck antenna and provide a visual representation of the removal procedure.



Figure 35. Installing external puck antenna

## Steps

1. Align and connect the puck antenna cables to the SMA antenna connectors on the chassis.

2. Tighten the bolts on the puck antenna cable to secure the external puck antenna to the chassis.
3. Slide and push the puck antenna cover into its slots until it clicks into its place.
4. Tighten the captive screw to secure the puck antenna cover to the chassis.

#### Next steps

1. Follow the procedure in [after working inside your computer](#).

## SMA antenna module

### Removing SMA antenna module

#### Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [external puck antenna](#), if applicable.
3. Remove the [side cover](#).
4. Remove the [wireless card](#).

#### About this task

The following images indicate the location of SMA antenna module and provide a visual representation of the removal procedure.

 **NOTE:** To upgrade to an SMA antenna, the internal antenna (white cable) must be removed.



1x  
M3x3

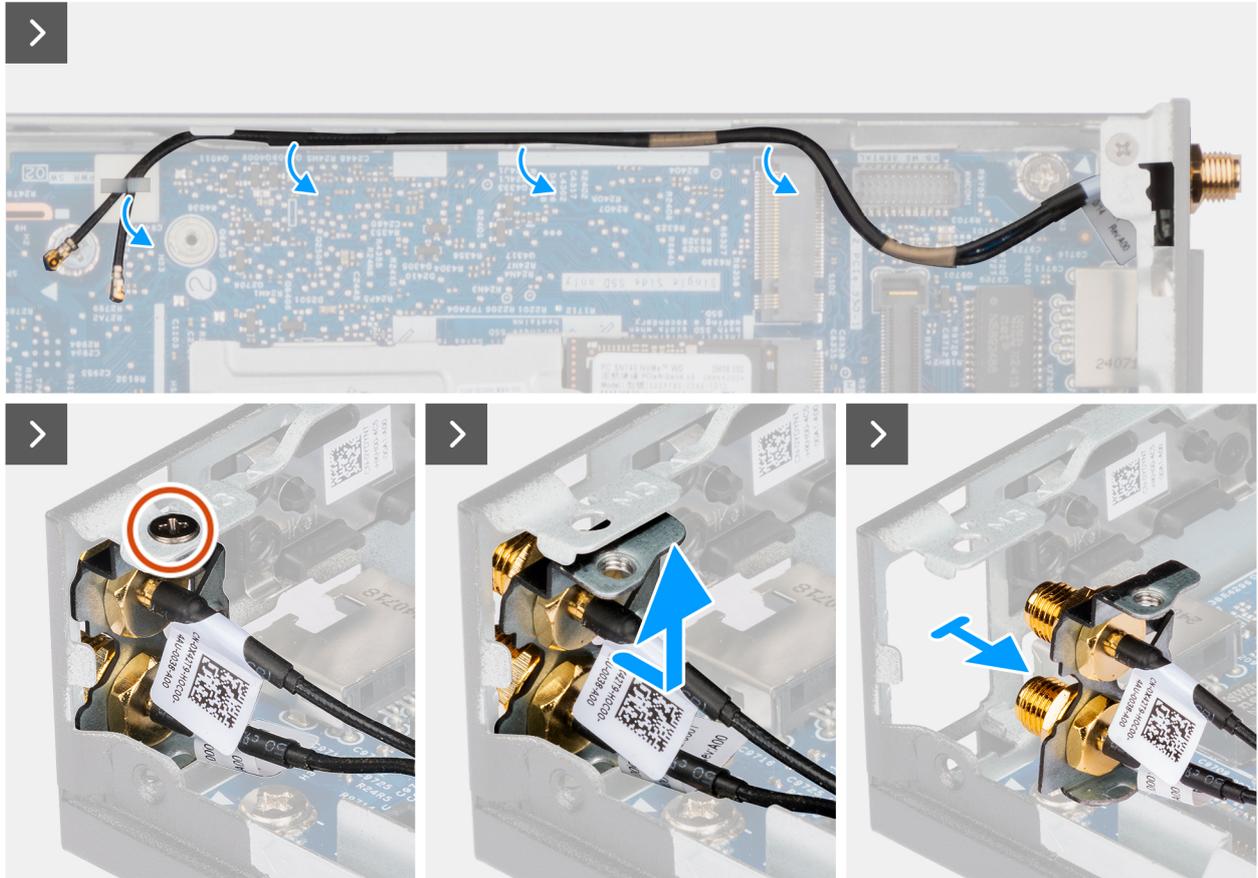


Figure 36. Removing SMA antenna

### Steps

1. Remove the SMA antenna module cables from the routing guides on the chassis.
2. Remove the screw (M3x3) that secures the SMA antenna module to the chassis.
3. Push the SMA antenna module inward through the opening on the back of the chassis, and then lift it upward and away from the mounting points.

## Installing SMA antenna module

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.


### About this task

The following images indicate the location of SMA antenna module and provide a visual representation of the removal procedure.

 **NOTE:** To upgrade to an SMA antenna, the internal antenna (white cable) must be removed.



1x  
M3x3

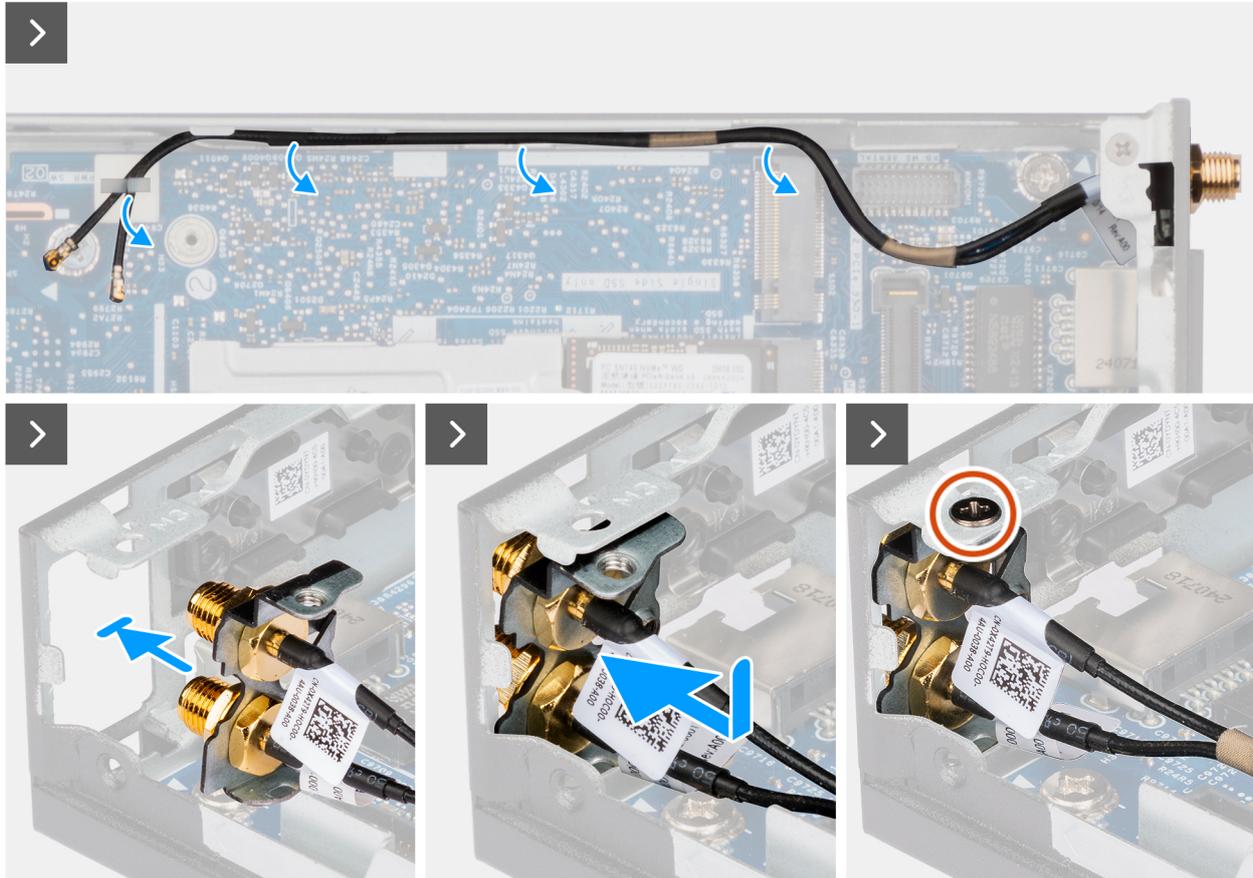

**Figure 37. Installing SMA antenna module**

### Steps

1. Remove the fillers on the side cover, if applicable.
2. Tilt the SMA antenna module and place it on the chassis.
3. Insert the SMA antenna module through the opening at the back of the chassis.
4. Replace the screw (M3x3) that secures the SMA module assembly to the chassis.
5. Route the SMA antenna module cables through the routing guides on the chassis.

### Next steps

1. Install the [wireless card](#).
2. Install the [side cover](#).
3. Install the [external puck antenna](#), if applicable.
4. Follow the procedure in [after working inside your computer](#).

# Optional Input/Output modules

## Dual USB 3.2 Gen 2 ports module

### Removing the dual USB 3.2 Gen 2 ports module

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

#### About this task

The following images indicate the location of the optional I/O module and provide a visual representation of the removal procedure.

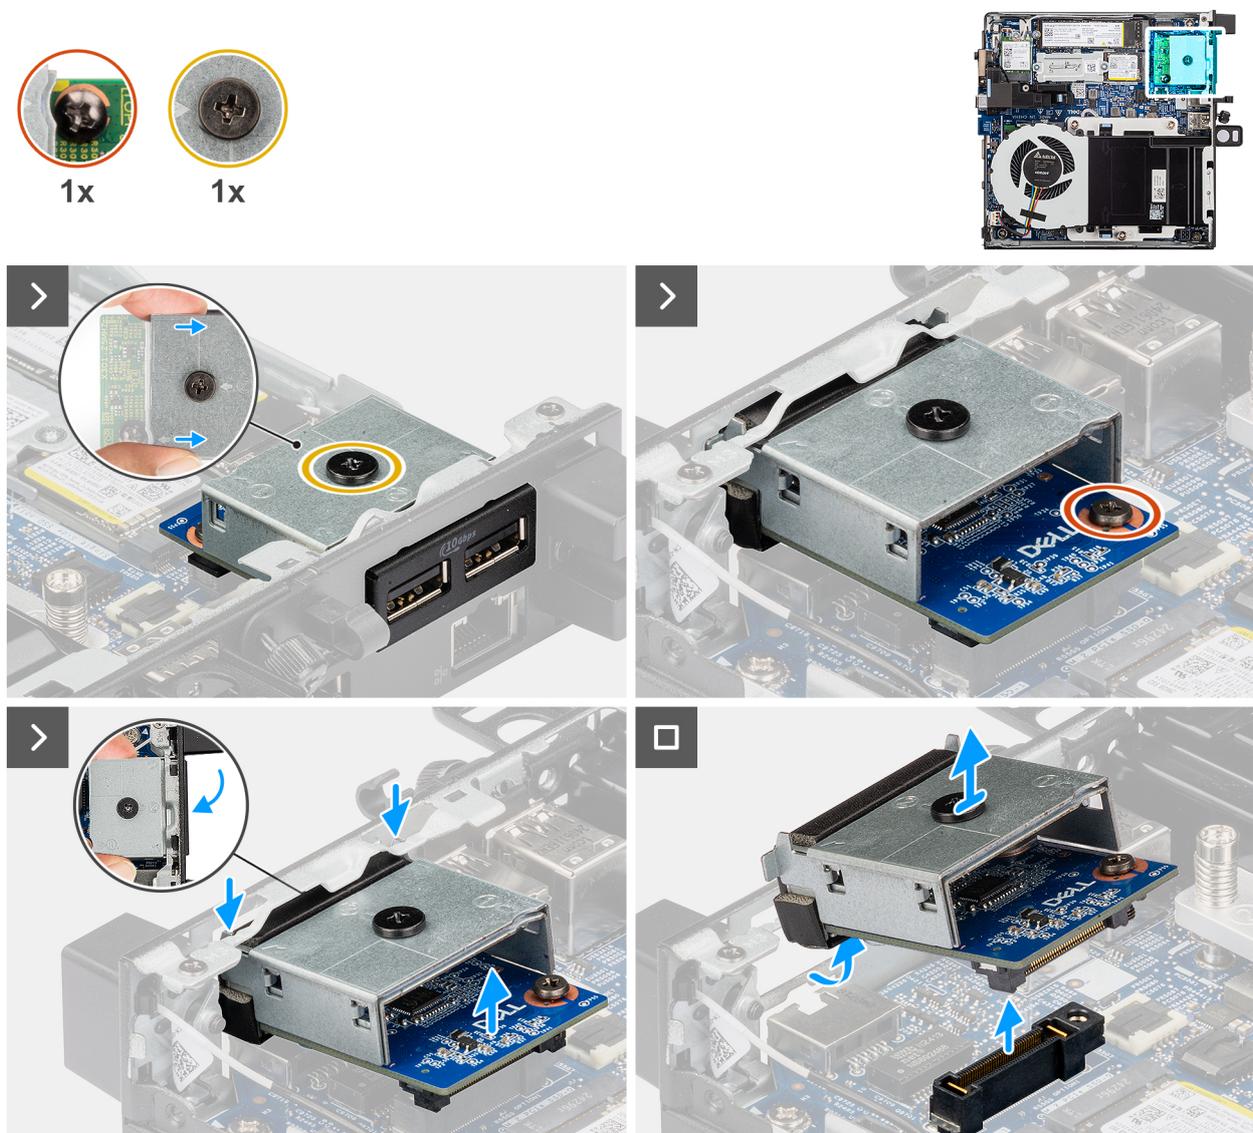


Figure 38. Removing the dual USB 3.2 Gen 2 ports module

#### Steps

1. Loosen the two captive screws that secure the dual USB 3.2 Gen 2 ports module to the chassis.

2. Disconnect the dual USB 3.2 Gen 2 ports module from the connector (OPTION) on the system board.
3. Lift the dual USB 3.2 Gen 2 ports module from its connector end at an angle, then move it downwards to detach it from the mounting points on the chassis.
4. Slide the dual USB 3.2 Gen 2 ports module and lift it away from the chassis.

## Installing dual USB 3.2 Gen 2 ports module

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the dual USB 3.2 Gen 2 ports module and provide a visual representation of the installation procedure.

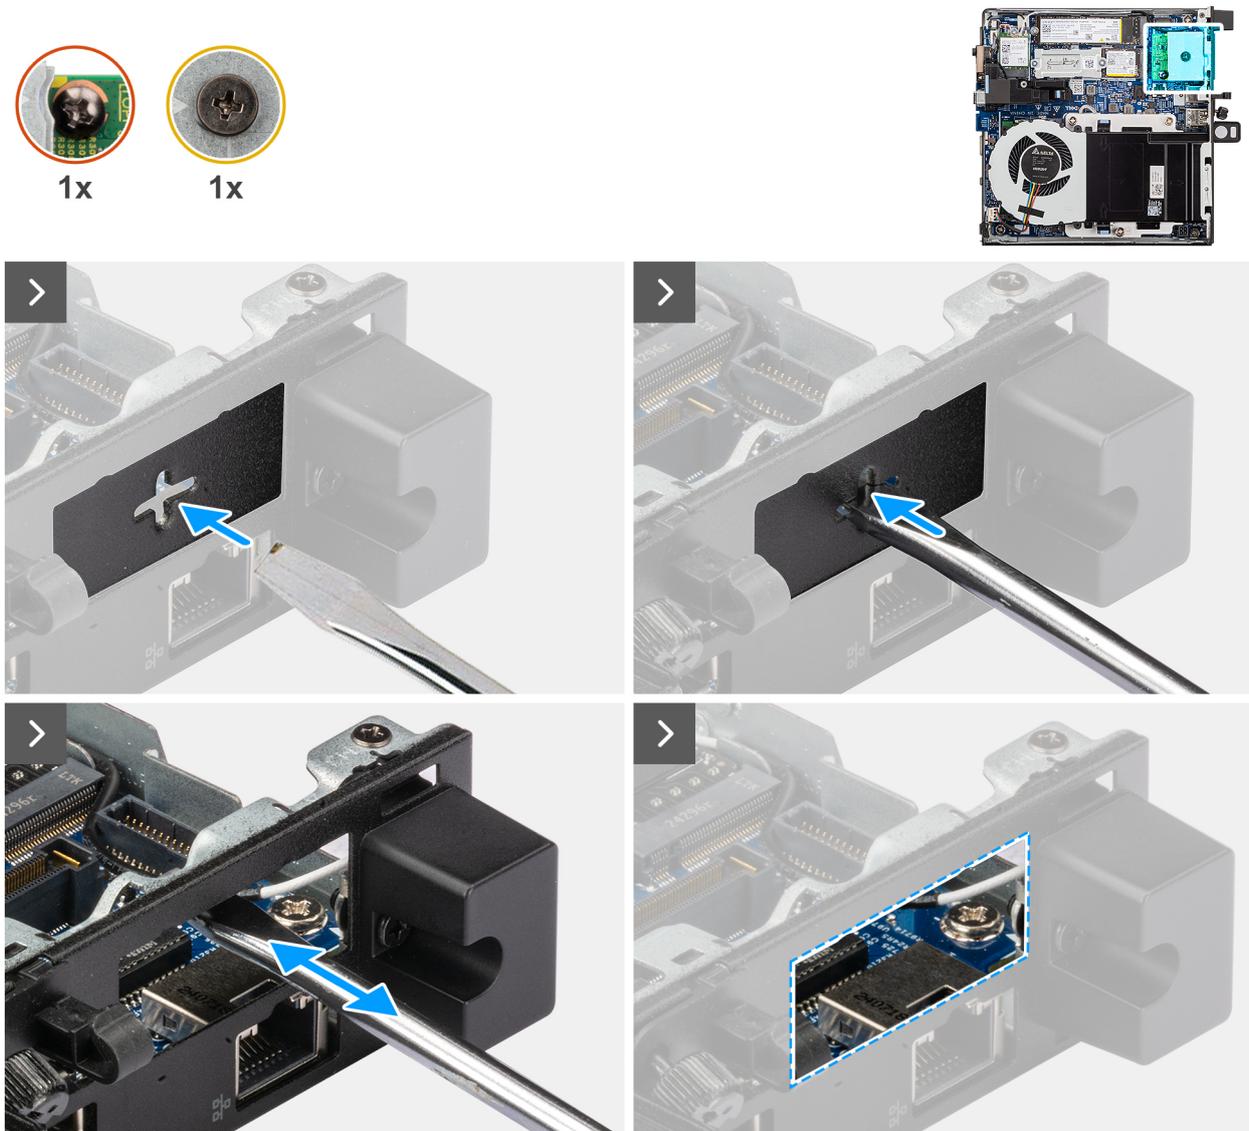


Figure 39. Installing dual USB 3.2 Gen 2 ports module

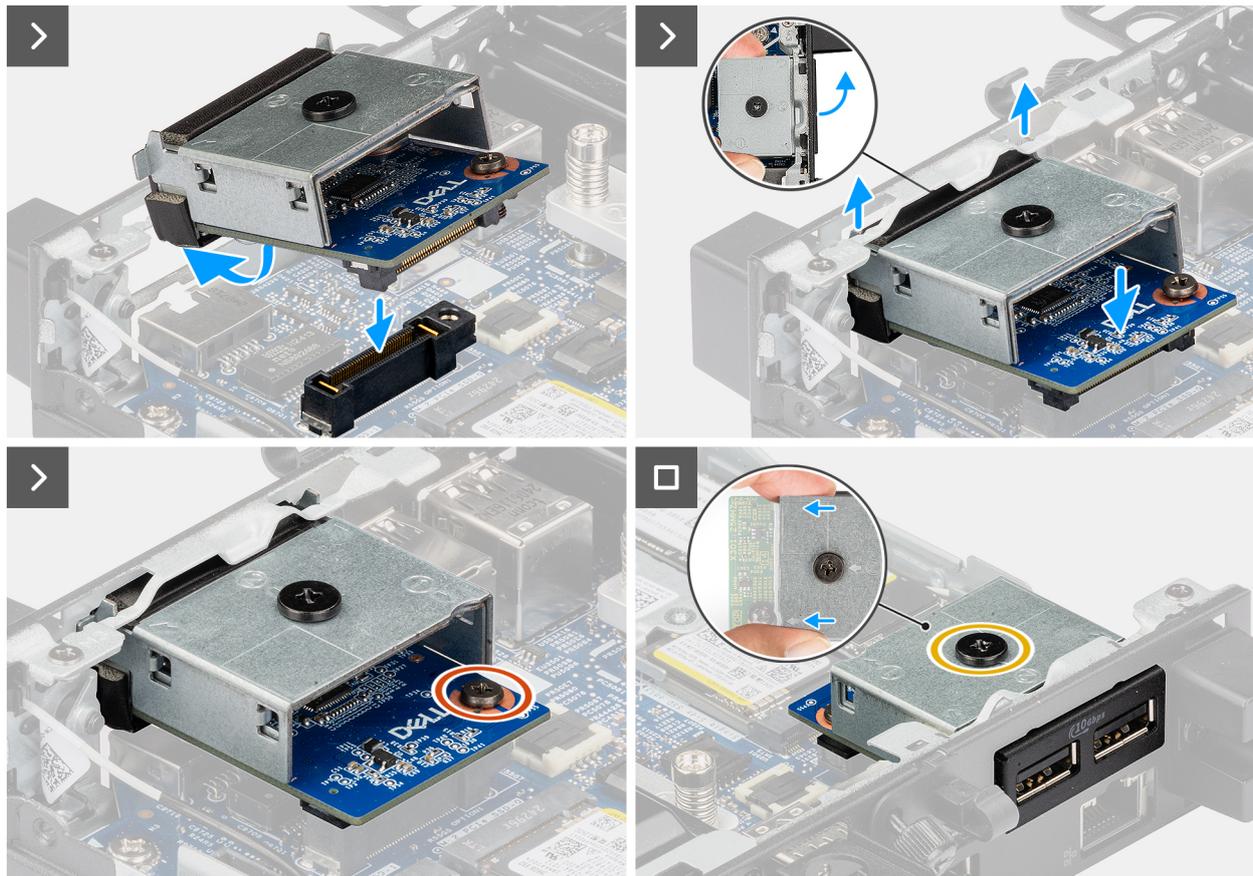


Figure 40. Installing the dual USB 3.2 Gen 2 ports module

### Steps

1. **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the dual USB 3.2 Gen 2 ports module into its slot at the back panel of the computer.

**NOTE:** Ensure that the tabs on the dual USB 3.2 Gen 2 ports module align with the triangles that are engraved on the mounting point on the chassis.

3. Connect the dual USB 3.2 Gen 2 ports module to the connector (OPTION) on the system board.
4. Tighten the two captive screws to secure the dual USB 3.2 Gen 2 ports module to the chassis.

### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## USB Type-C port module with DisplayPort Alt mode and Power Delivery

### Removing the USB Type-C port module

#### Prerequisites


1. Follow the procedure in [Before working inside your computer](#).


2. Remove the [side cover](#).

**About this task**

The following images indicate the location of the USB Type-C port module and provide a visual representation of the removal procedure.

**Figure 41. Removing the USB Type-C port module**

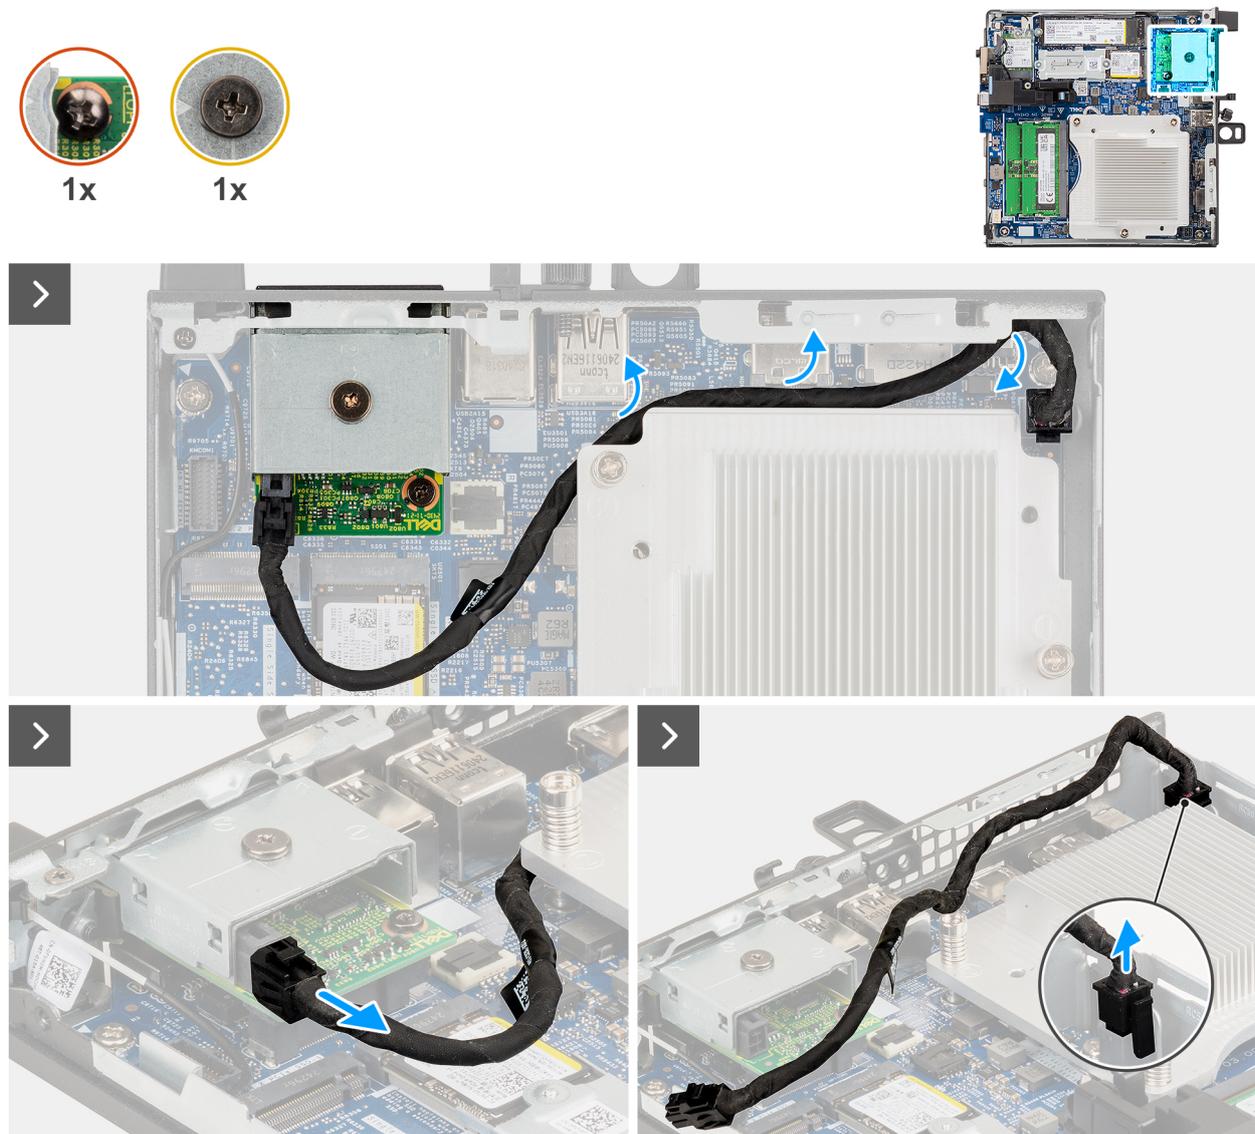

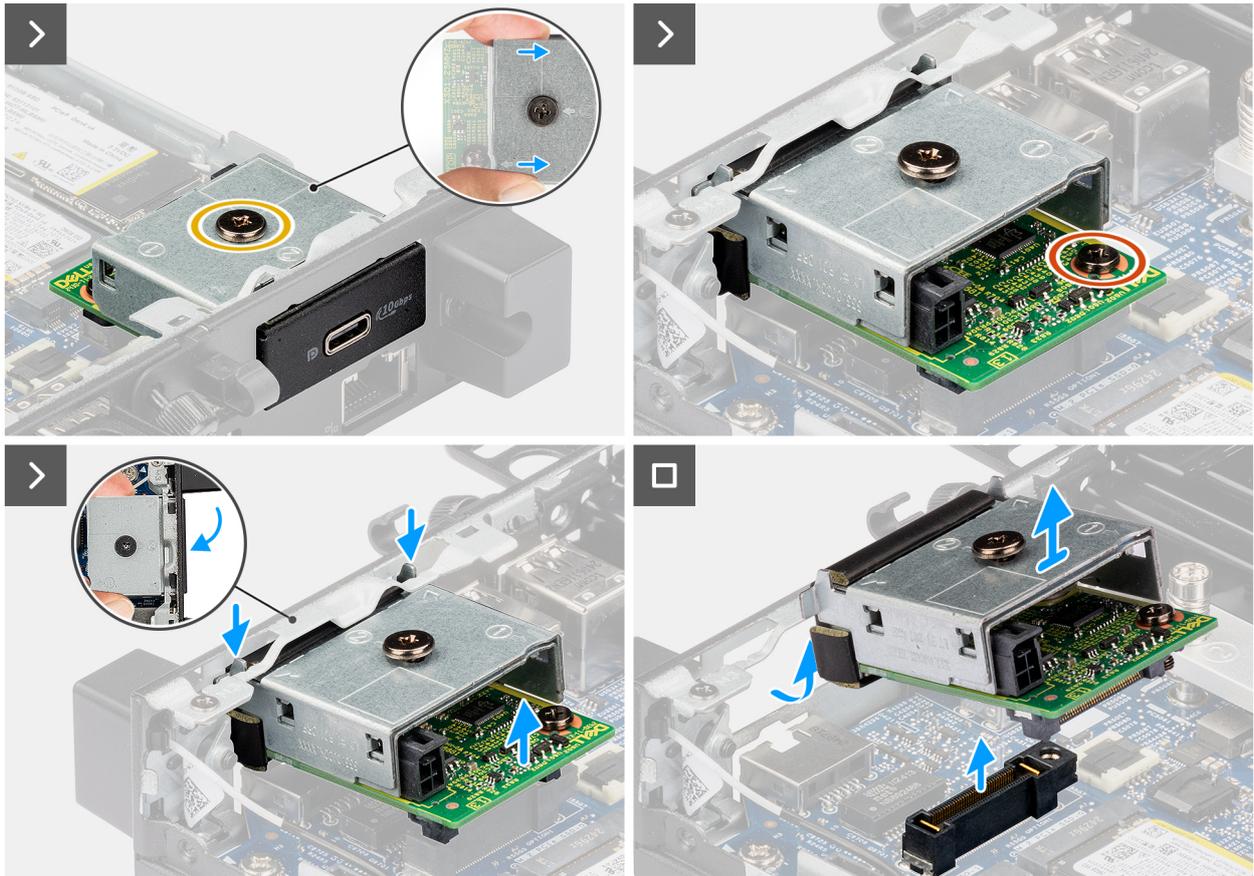

**Figure 42. Removing the USB Type-C port module**

**Steps**

1. Remove the power-in cable from the routing points on the system board.
2. Disconnect the power-in cable from the connector on the USB Type-C port module.
3. Disconnect the power-in cable from the connector on the system board.
4. Loosen the two captive screws that secure the USB Type-C port module to the chassis.
5. Disconnect the USB Type-C port module from the connector (OPTION) on the system board.
6. Lift the USB Type-C port module from its connector end to a certain angle and move the USB Type-C port module downwards to detach it from the mounting points on the chassis.
7. Slide the USB Type-C port module and lift it away from the chassis.

**Installing the USB Type-C port module**

**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the USB Type-C port module and provide a visual representation of the installation procedure.

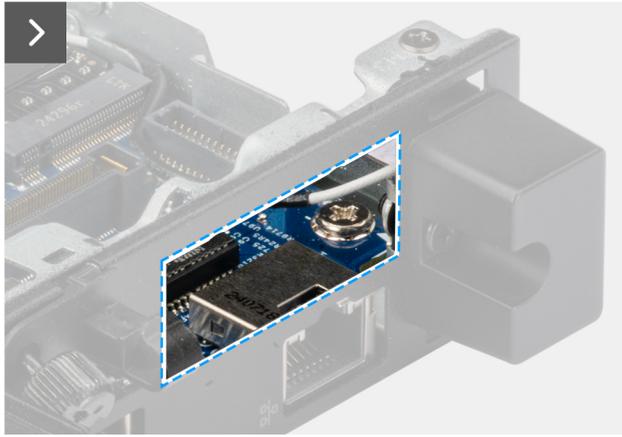
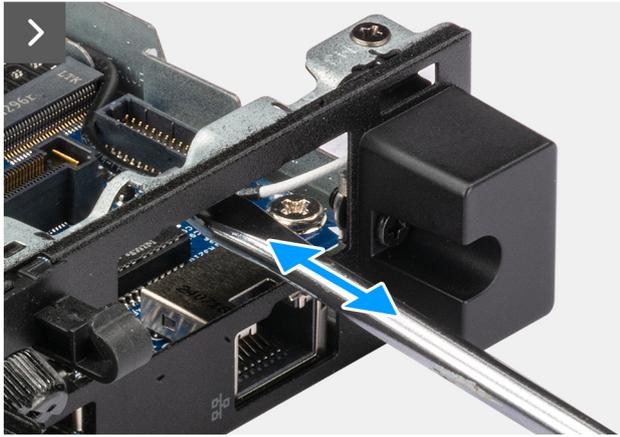
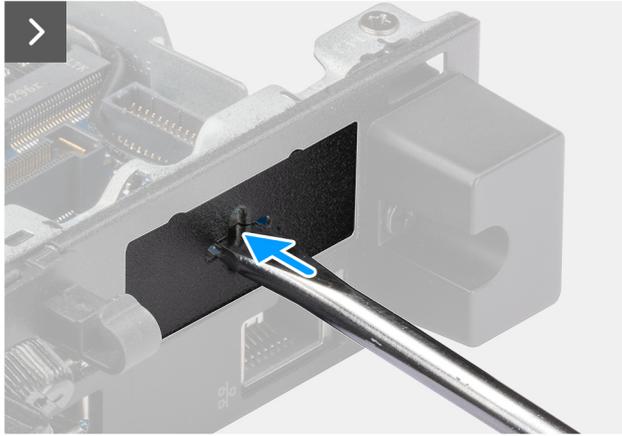
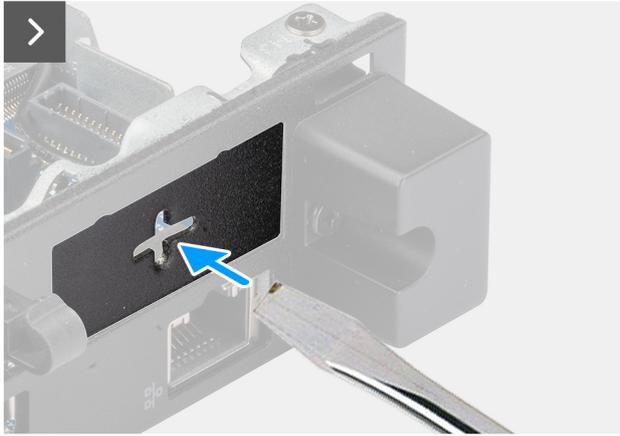
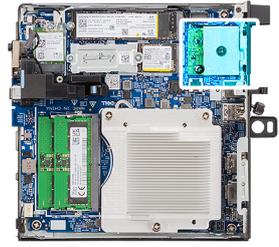


Figure 43. Installing the USB Type-C port module

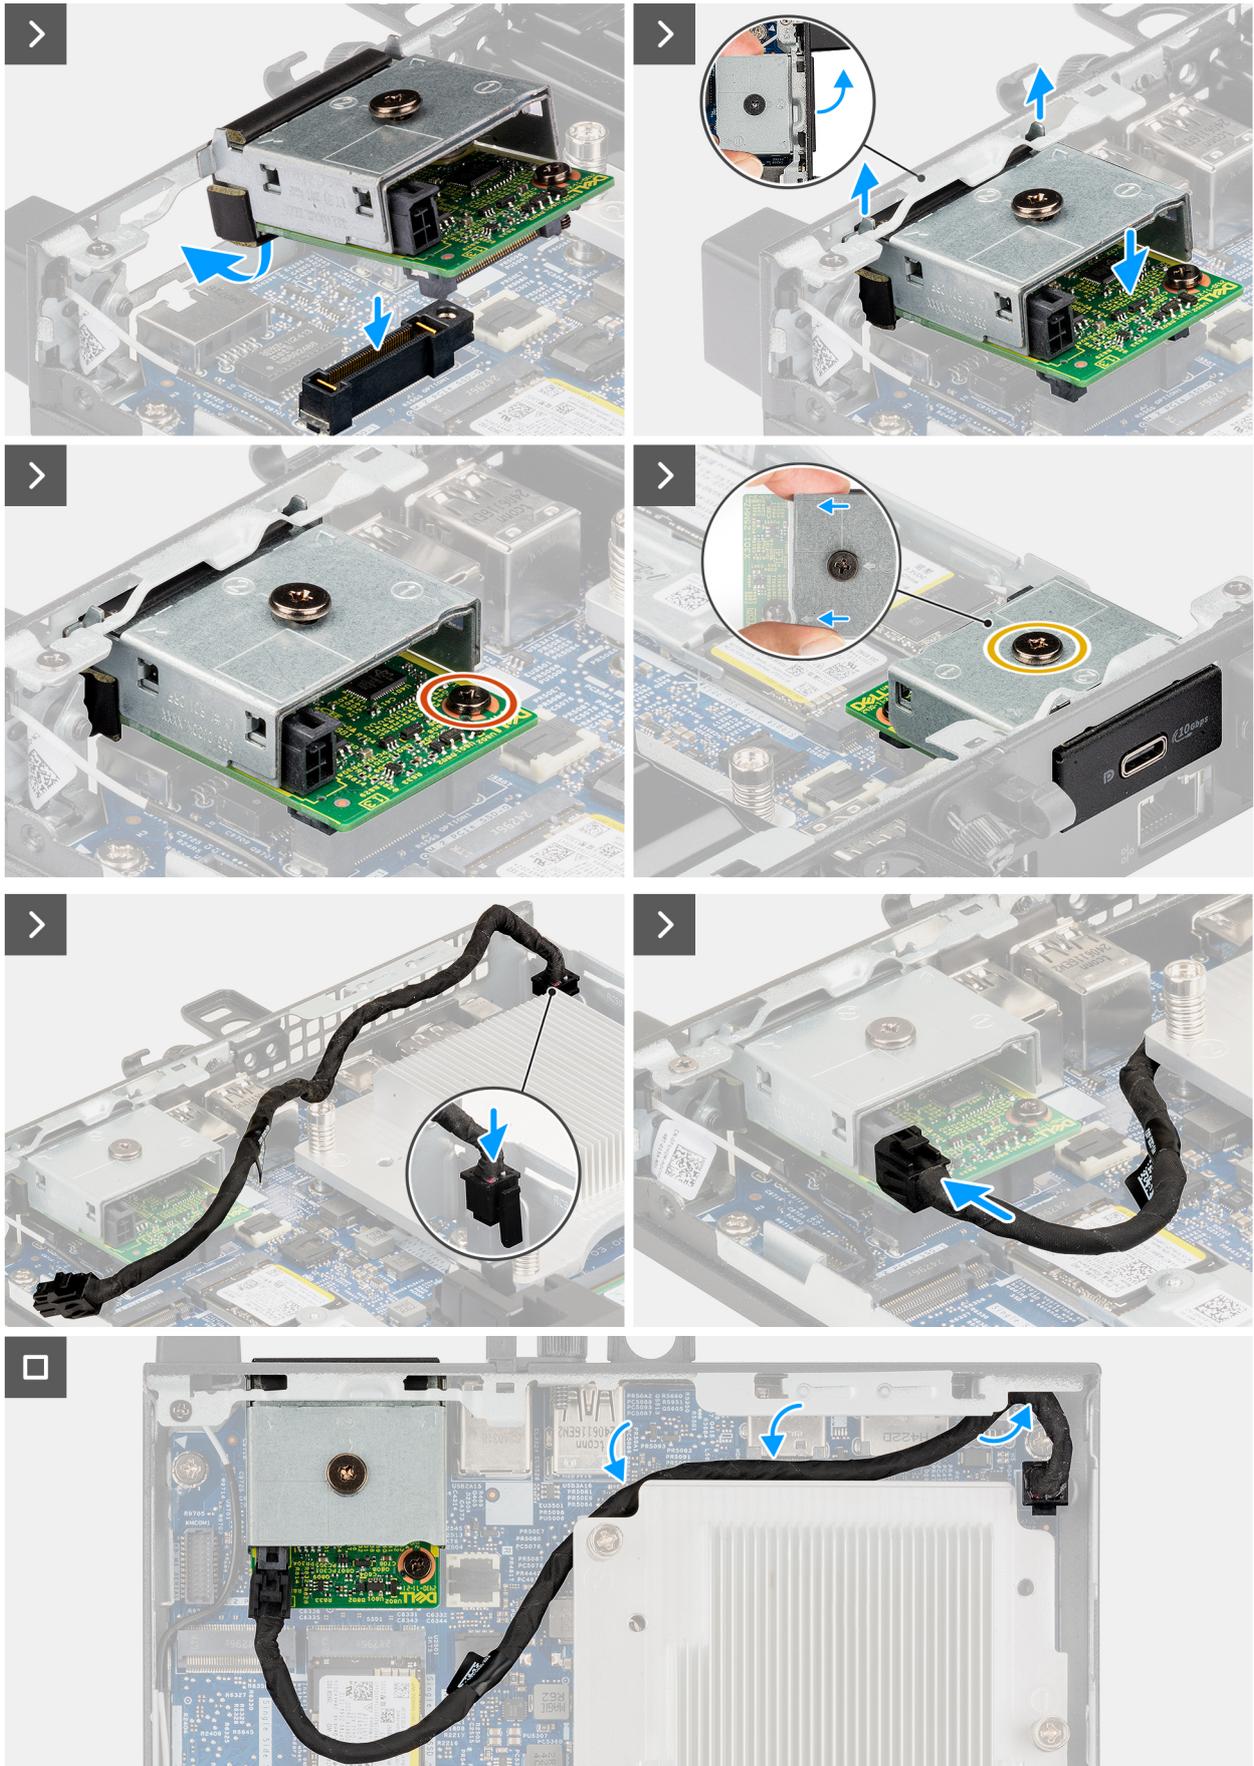


Figure 44. Installing the USB Type-C port module

## Steps

1.  **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the USB Type-C port module into its slot at the back panel of the computer.

 **NOTE:** Ensure that the tabs on the USB Type-C port module align with the triangles that are engraved on the mounting point on the chassis.

3. Connect the USB Type-C port module to the connector (OPTION) on the system board.
4. Tighten the two captive screws to secure the USB Type-C port module to the chassis.
5. Connect the power-in cable to the connector on the system board.
6. Connect the power-in cable to the connector on the USB Type-C port module.
7. Route the power-in cable through the designated routing points on the system board.

## Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

# DisplayPort module




## Removing the DisplayPort module

### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

### About this task

The following images indicate the location of the DisplayPort module and provide a visual representation of the removal procedure.

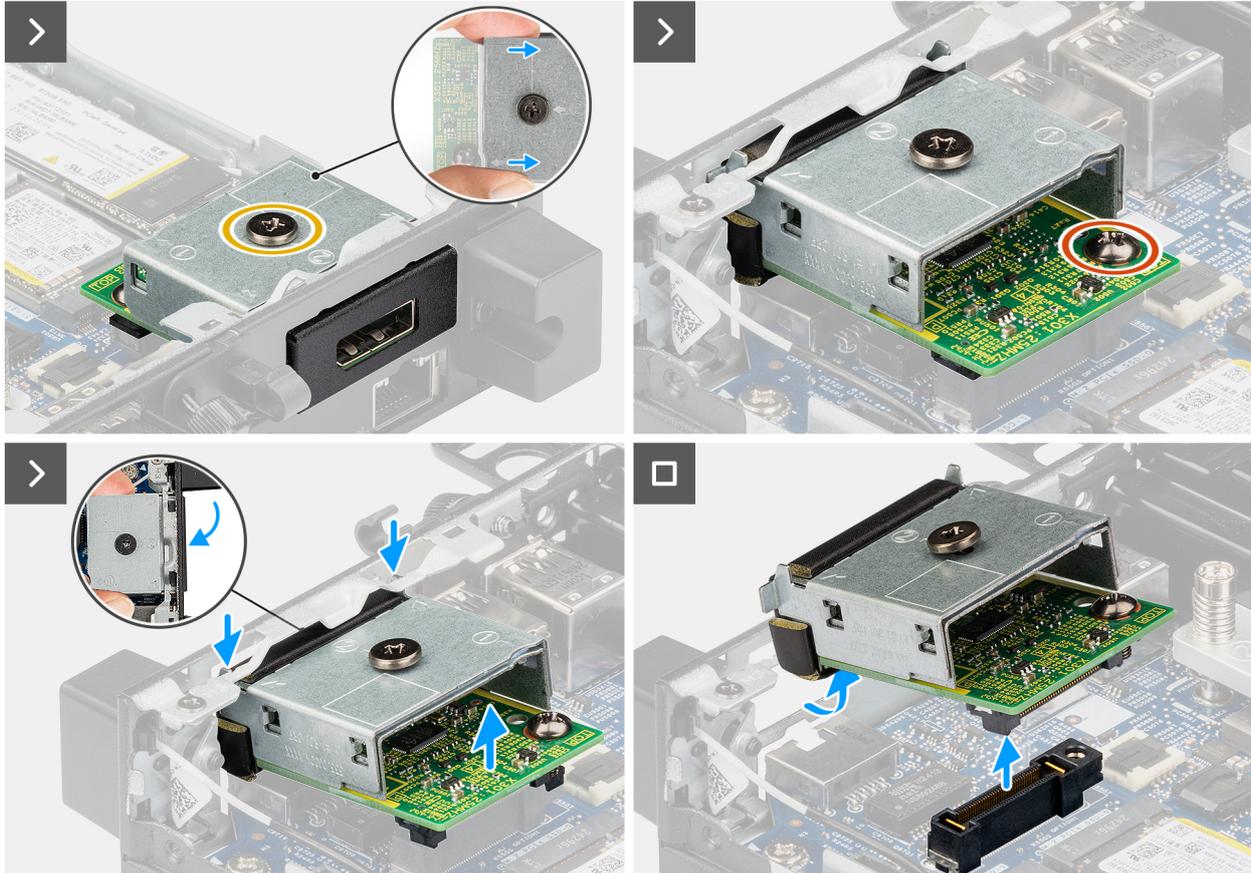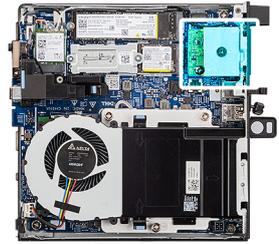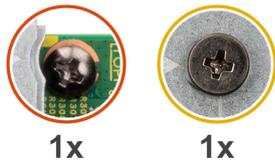

**Figure 45. Removing the DisplayPort module**

**Steps**

1. Loosen the two captive screws that secure the DisplayPort module to the chassis.
2. Disconnect the DisplayPort module from the connector (OPTION) on the system board.
3. Lift the DisplayPort module from its connector end to a certain angle and move the DisplayPort module downwards to detach it from the mounting points on the chassis.
4. Slide the DisplayPort module and lift it away from the chassis.

**Installing the DisplayPort module**

**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the DisplayPort module and provide a visual representation of the installation procedure.







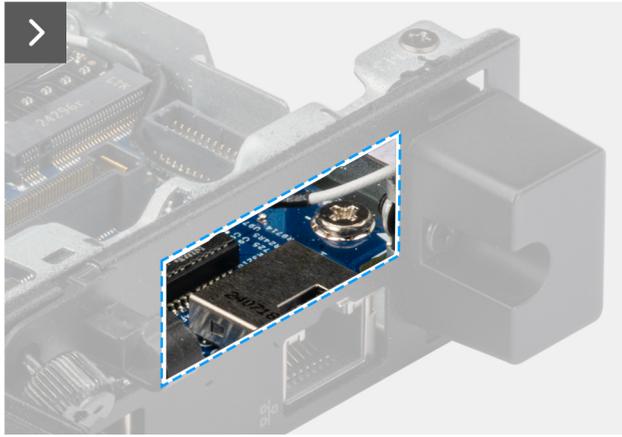


Figure 46. Installing DisplayPort module

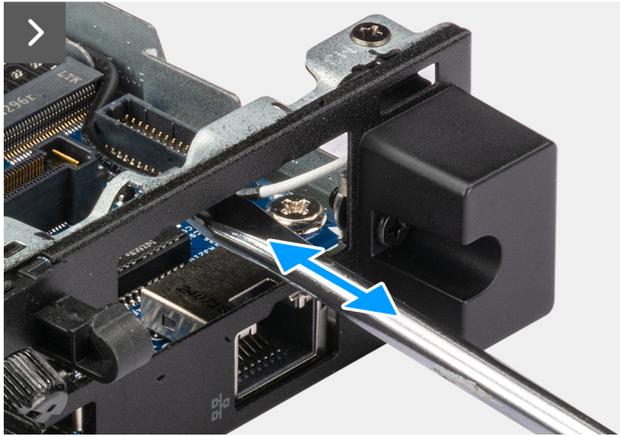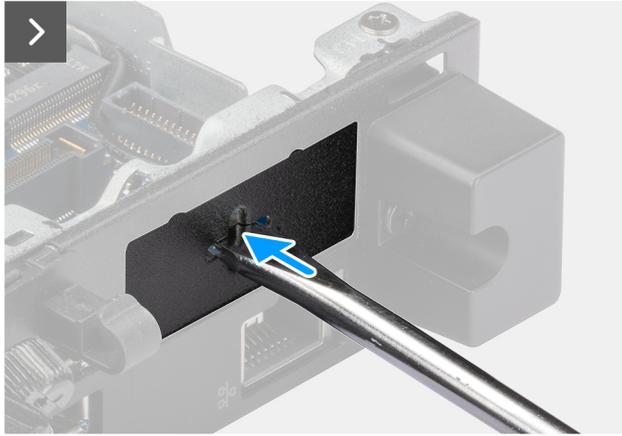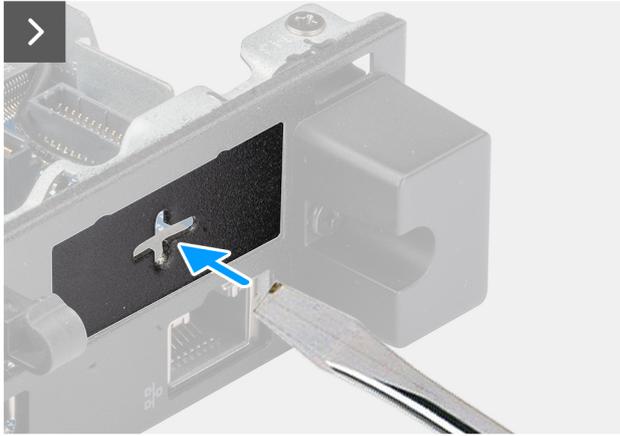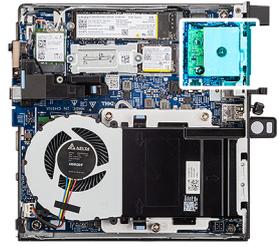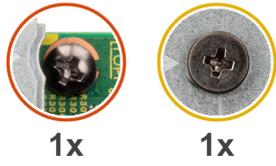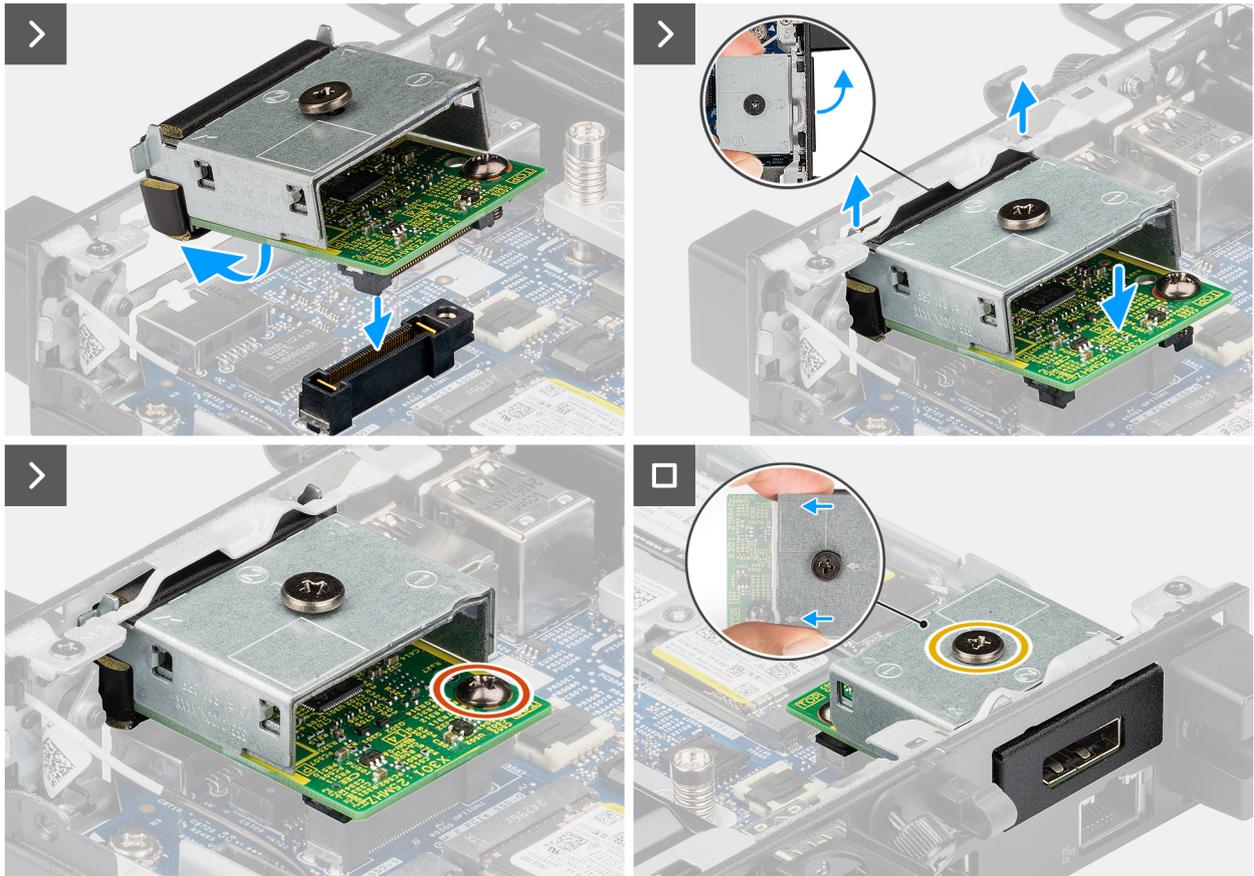

**Figure 47. Installing DisplayPort module**

**Steps**

1. **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the DisplayPort module into its slot at the back panel of the computer.

**NOTE:** Ensure that the tabs on the DisplayPort module align with the triangles that are engraved on the mounting point on the chassis.

3. Connect the DisplayPort module to the connector (OPTION) on the system board.
4. Tighten the two captive screws to secure the DisplayPort module to the chassis.

**Next steps**

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## HDMI port module


### Removing the HDMI port module

**Prerequisites**

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

### About this task

The following images indicate the location of the HDMI port module and provide a visual representation of the removal procedure.

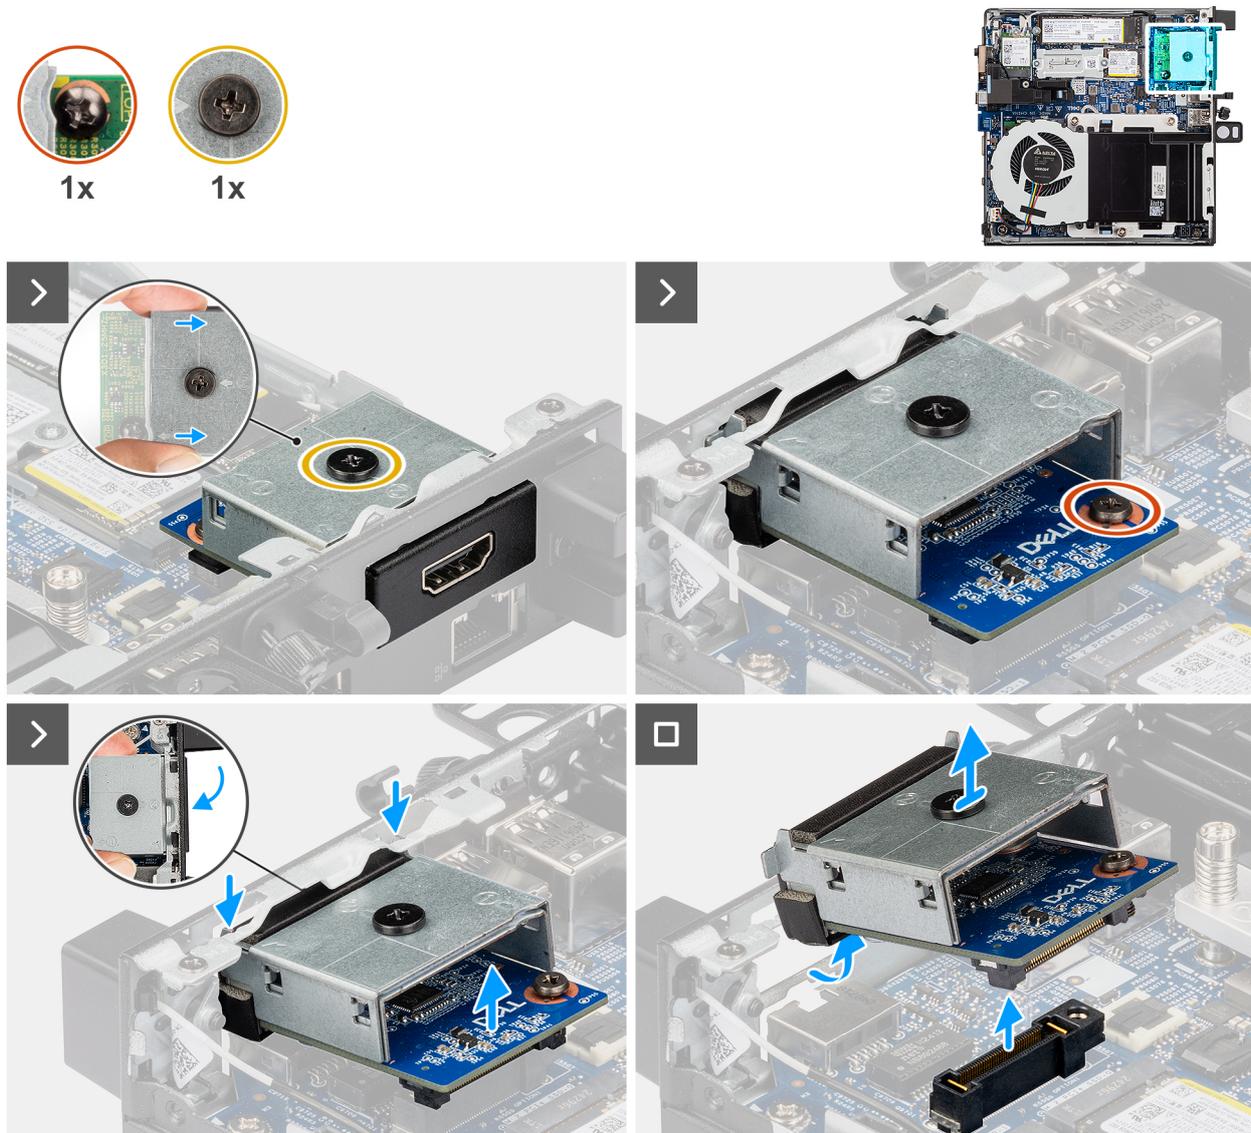

**Figure 48. Removing the HDMI port module**

### Steps

1.  **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the HDMI port module into its slot at the back panel of the computer.

 **NOTE:** Ensure that the tabs on the HDMI port module align with the triangles that are engraved on the mounting point on the chassis.

3. Connect the HDMI port module to the connector (OPTION) on the system board.
4. Tighten the two captive screws to secure the HDMI port module to the chassis.

## Installing the HDMI port module

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following images indicate the location of the HDMI port module and provide a visual representation of the installation procedure.


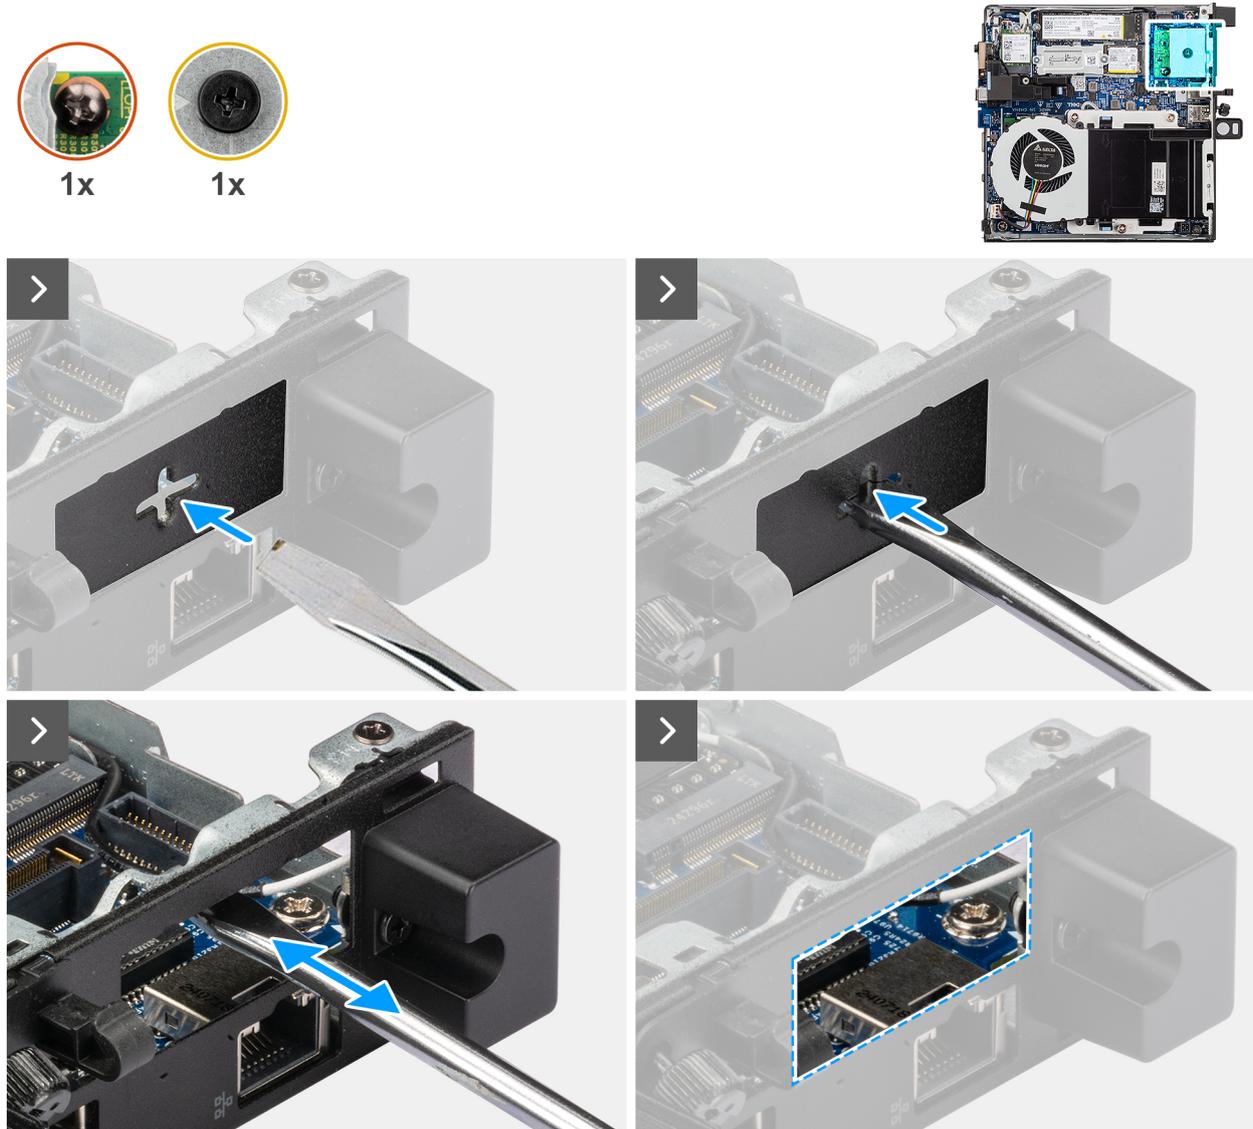


Figure 49. Installing HDMI port module

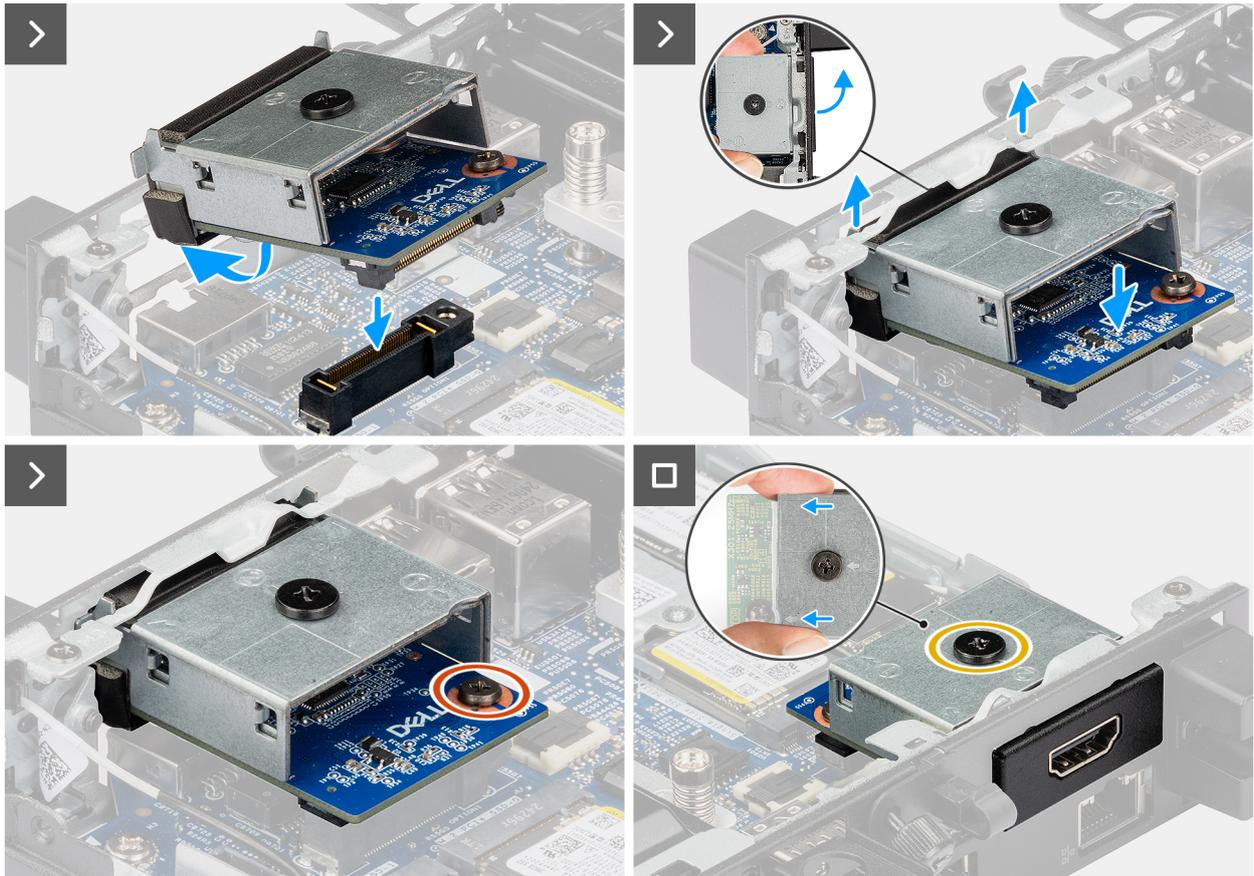

**Figure 50. Installing HDMI port module**

### Steps

1. **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the HDMI port module into its slot at the back panel of the computer.

**NOTE:** Ensure that the tabs on the HDMI port module align with the triangles that are engraved on the mounting point on the chassis.

3. Connect the HDMI port module to the connector (OPTION) on the system board.
4. Tighten the two captive screws to secure the HDMI port module to the chassis.

### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## VGA port module


### Removing the VGA port module

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

## About this task

The following images indicate the location of the VGA port module and provide a visual representation of the removal procedure.

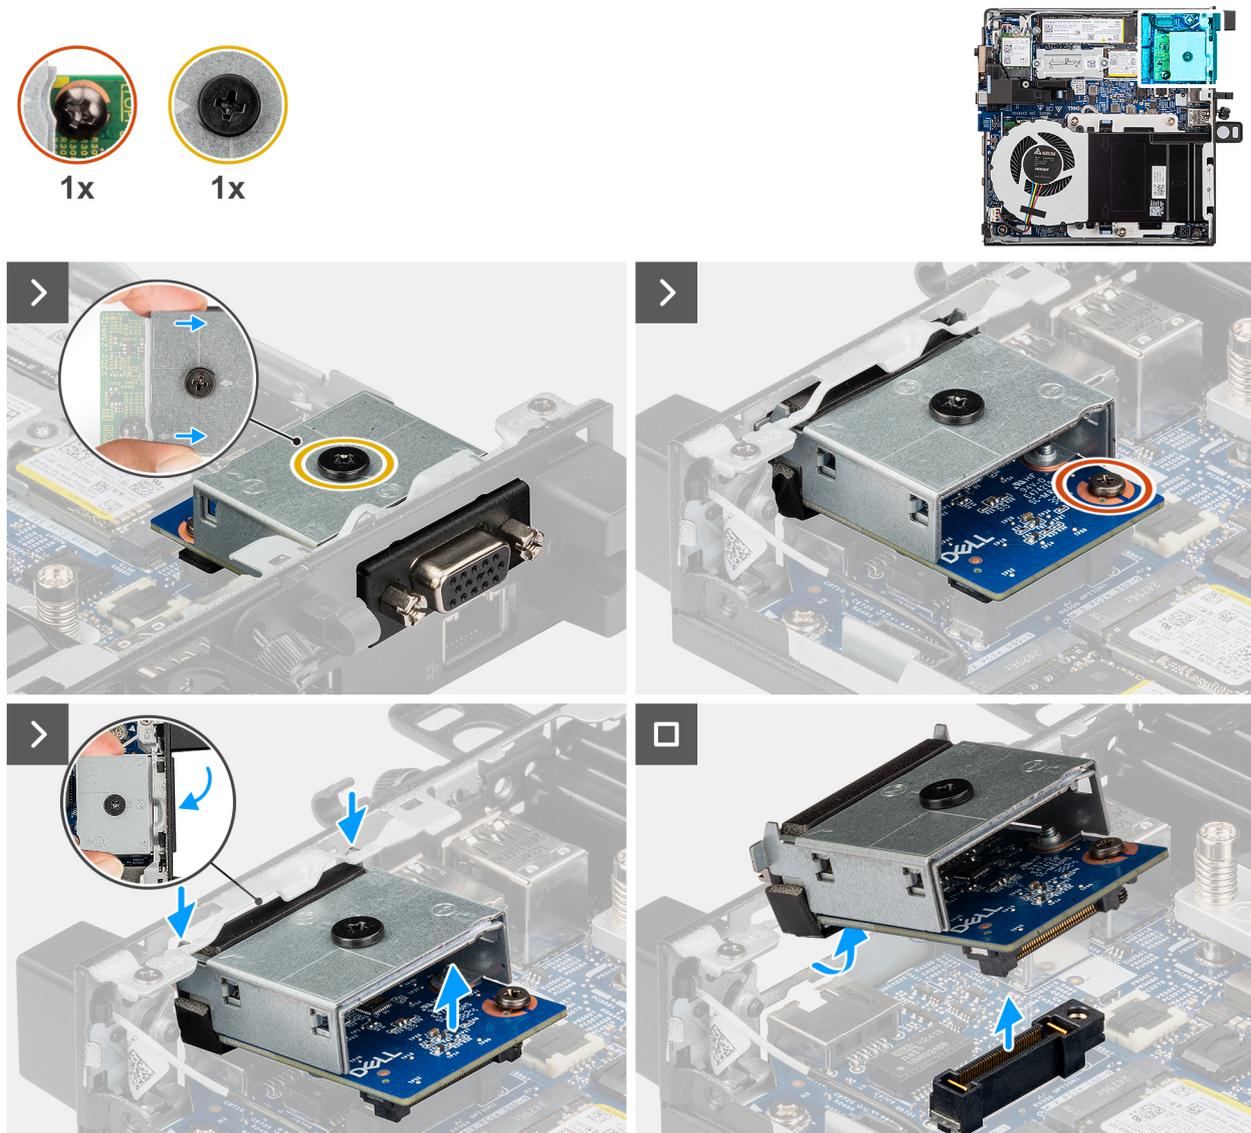

**Figure 51. Removing the VGA port module**

### Steps

1. Loosen the two captive screws that secure the VGA port module to the chassis.
2. Disconnect the VGA port module from the connector (OPTION) on the system board.
3. Lift the VGA port module from its connector end to a certain angle and move the VGA port module downwards to detach it from the mounting points on the chassis.
4. Slide the VGA port module and lift it away from the chassis.


## Installing the VGA port module

### Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the optional I/O module and provide a visual representation of the installation procedure.

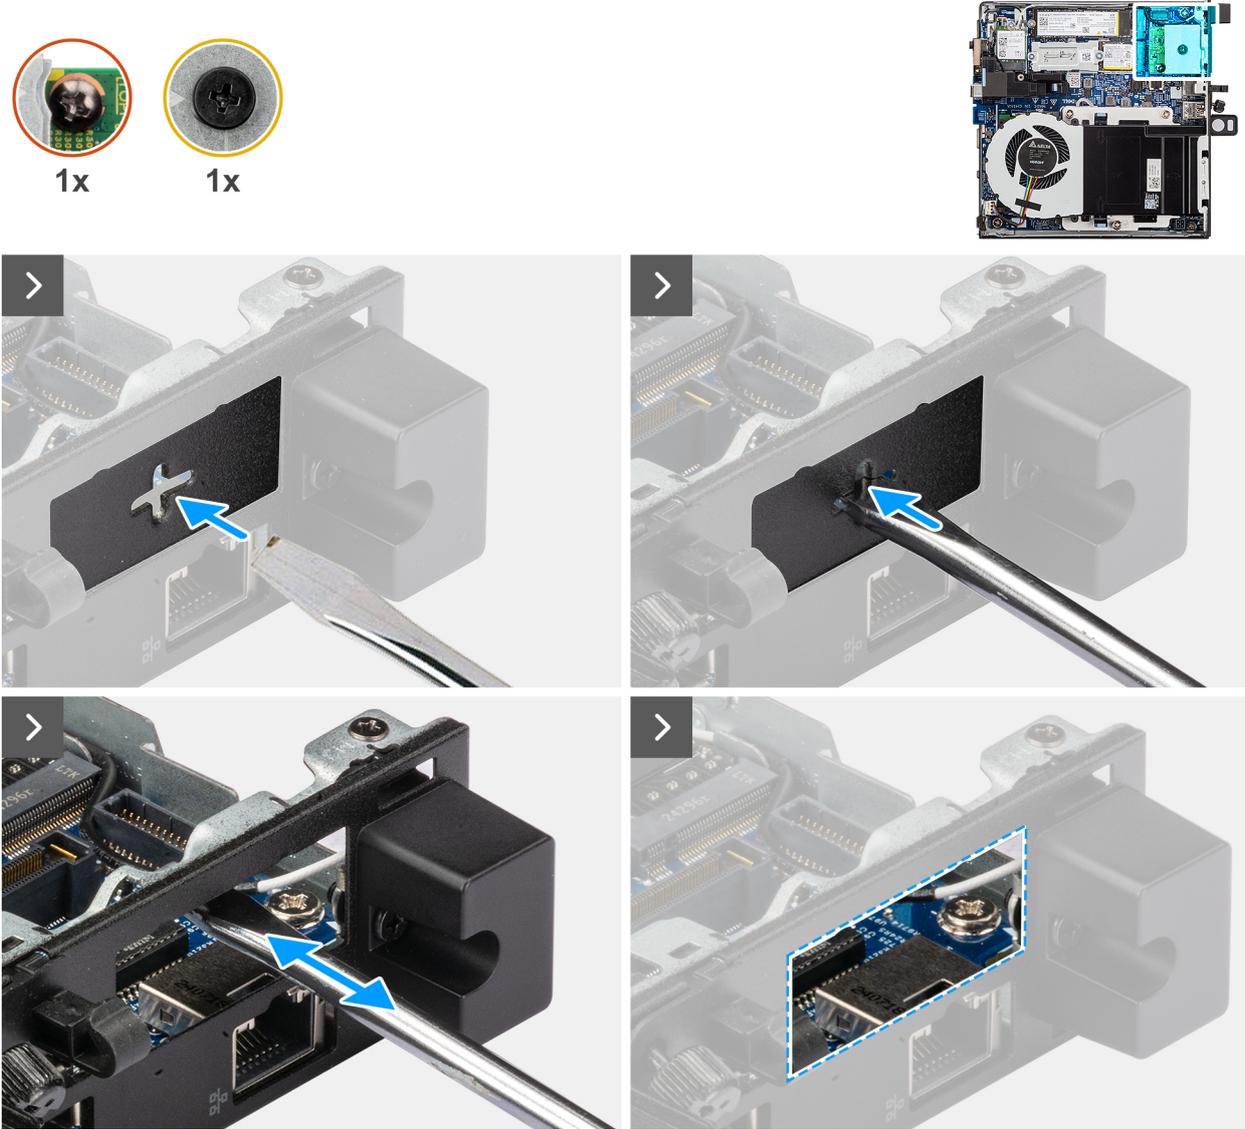

**Figure 52. Installing VGA port module**

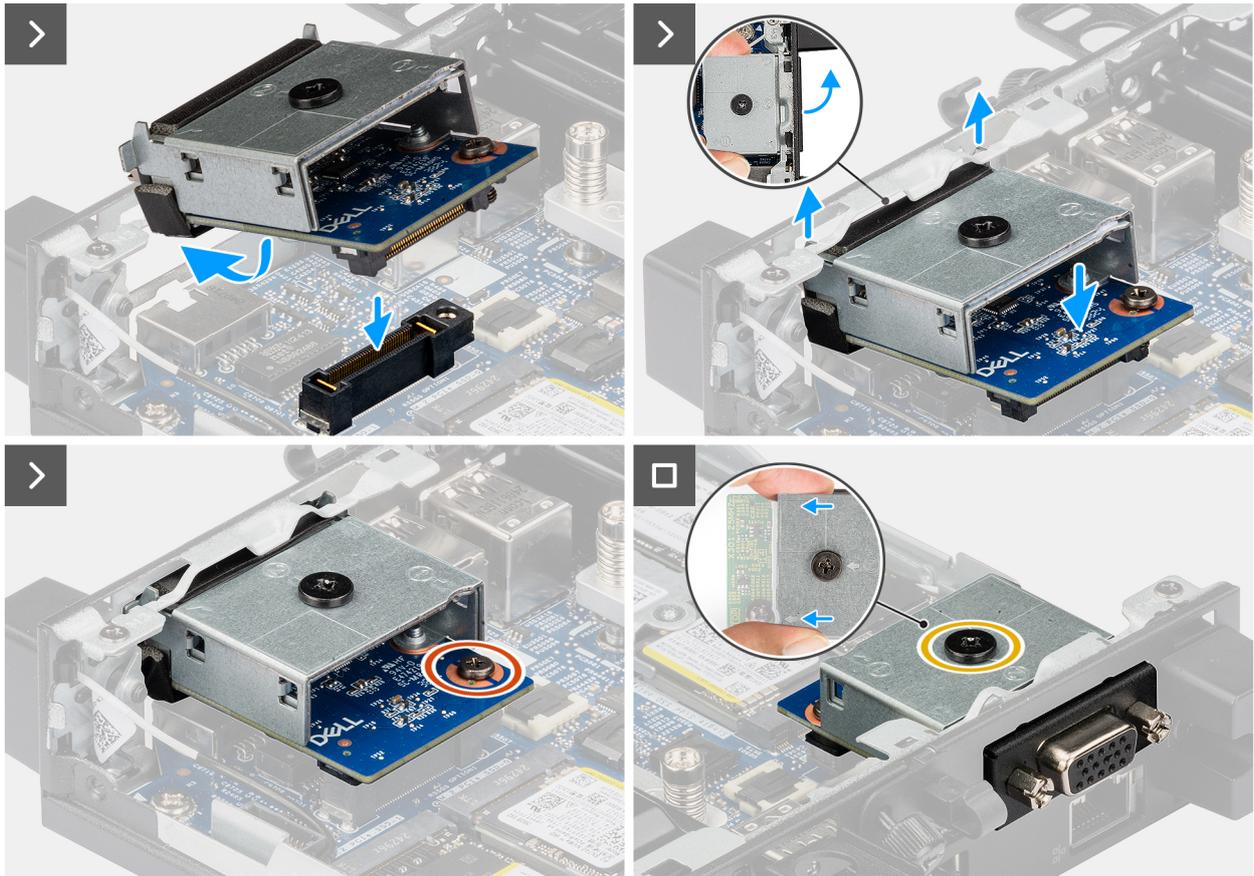

**Figure 53. Installing VGA port module**

### Steps

1. **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the VGA port module into its slot at the back panel of the computer.
  - NOTE:** Ensure that the tabs on the VGA port module align with the triangles that are engraved on the mounting point on the chassis.
3. Connect the VGA port module to the connector (OPTION) on the system board.
4. Tighten the two captive screws to secure the VGA port module to the chassis.

### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## PS2 port module


### Removing the PS2 port module

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

### About this task

The following images indicate the location of the PS2 port module and provide a visual representation of the removal procedure.

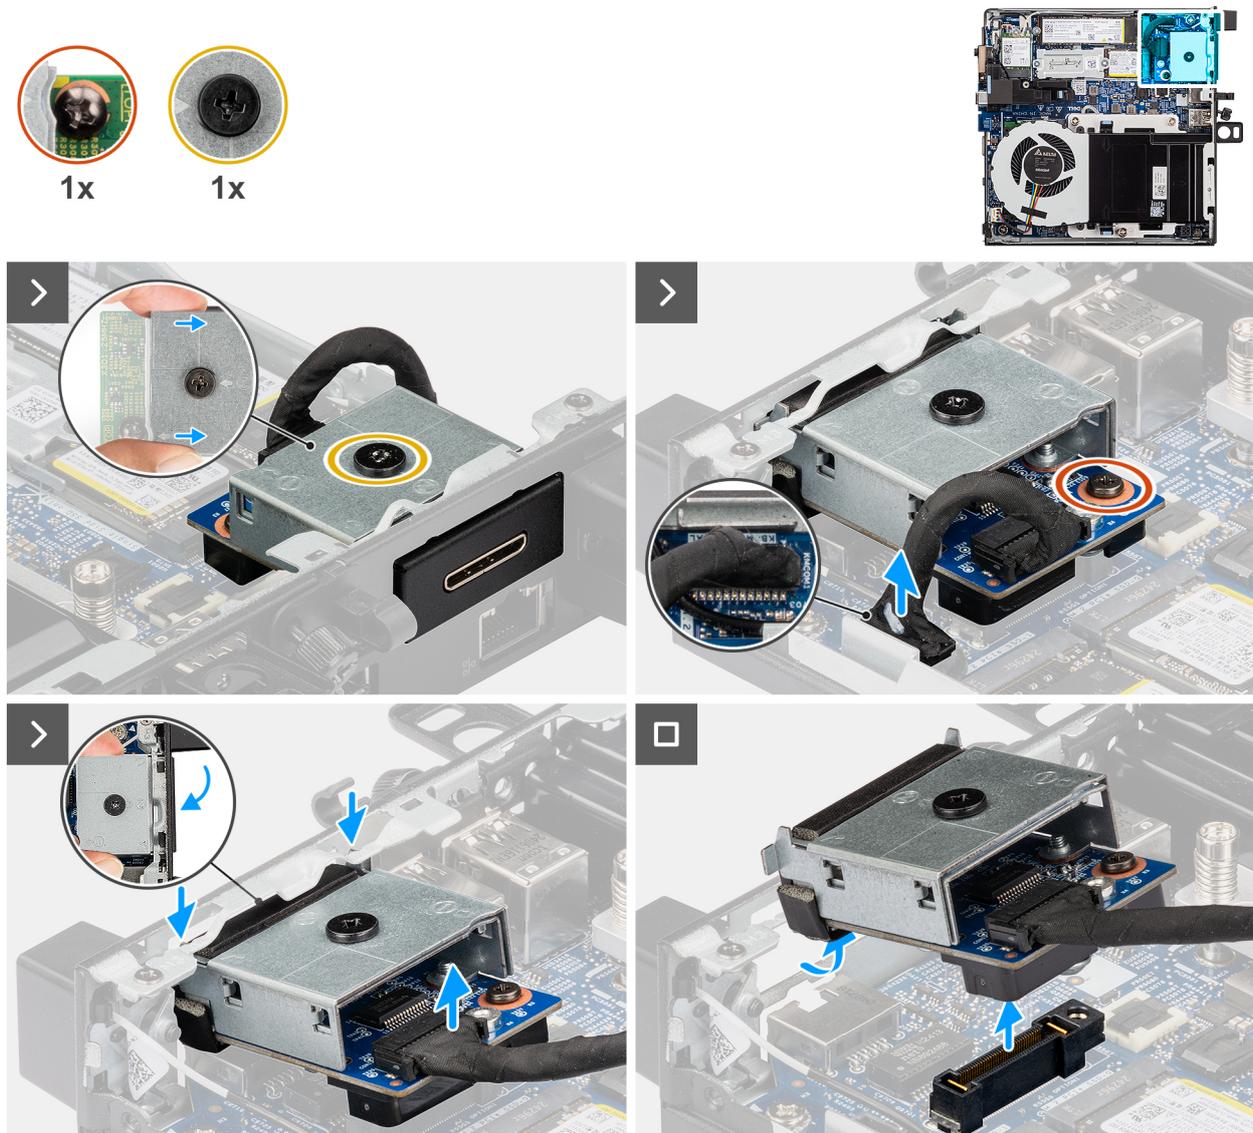

**Figure 54. Removing the PS2 port module**

### Steps

1. Loosen the two captive screws that secure the PS2 port module to the chassis.
2. Disconnect the PS2 port module cable from the connector (KB MS SERIAL) on the system board.
3. Lift the PS2 port module from its connector end to a certain angle and move the PS2 port module downwards to detach it from the mounting points on the chassis.
4. Slide the PS2 port module and lift it away from the chassis.


### Installing the PS2 port module

#### Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the PS2 port module and provide a visual representation of the installation procedure.

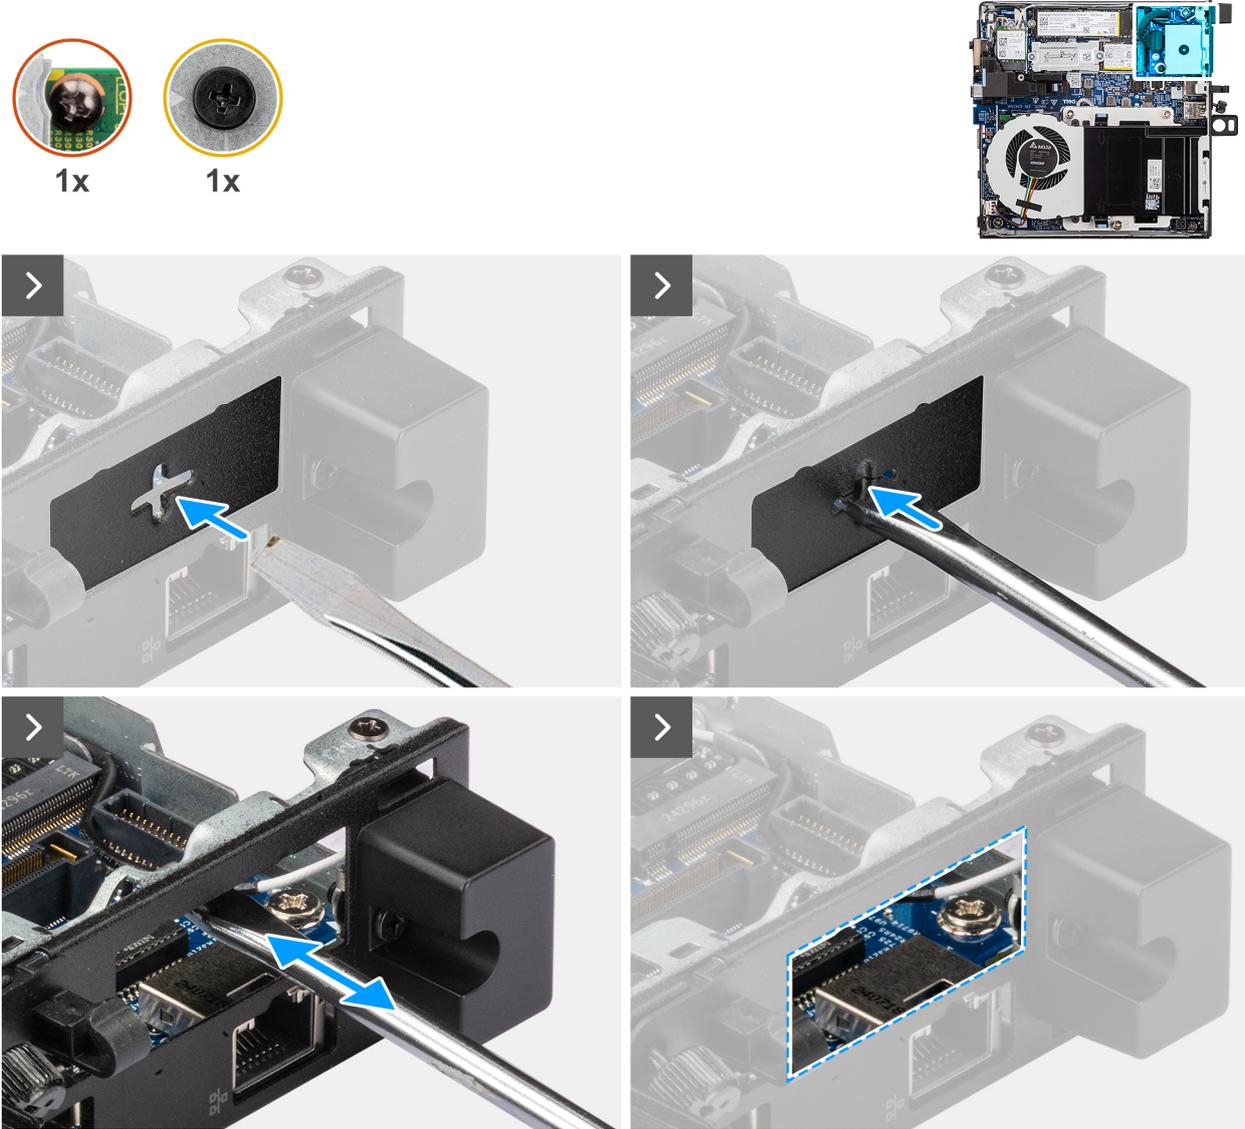

**Figure 55. Installing the PS2 port module**

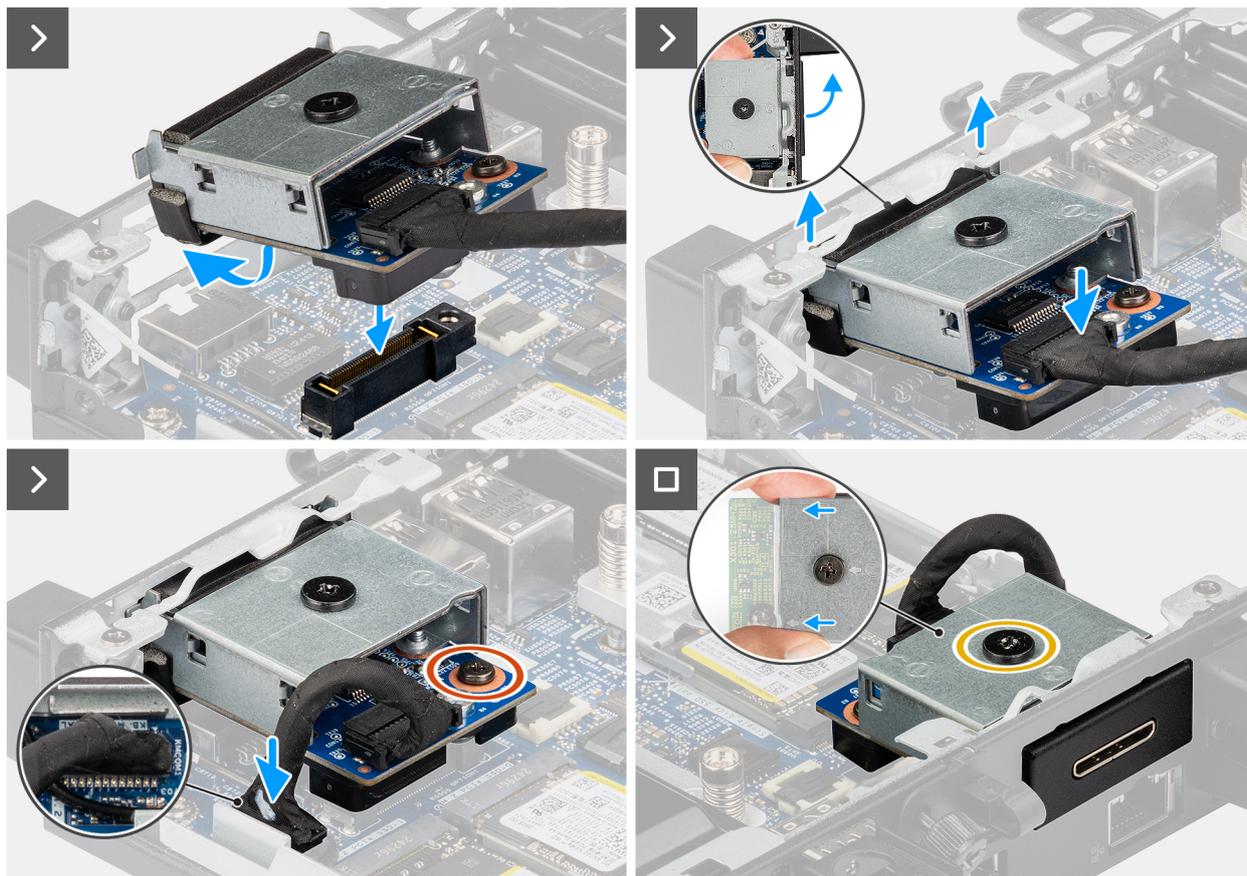

**Figure 56. Installing the PS2 port module**

### Steps

1. **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the PS2 port module into its slot at the back panel of the computer.
  - NOTE:** Ensure that the tabs on the PS2 port module align with the triangles that are engraved on the mounting point on the chassis.
3. Connect the PS2 port module cable to the connector (KB MS SERIAL) on the system board.
4. Tighten the two captive screws to secure the PS2 port module to the chassis.

### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Serial port module

### Removing the serial port module

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

### About this task

The following images indicate the location of the serial port module and provide a visual representation of the removal procedure.

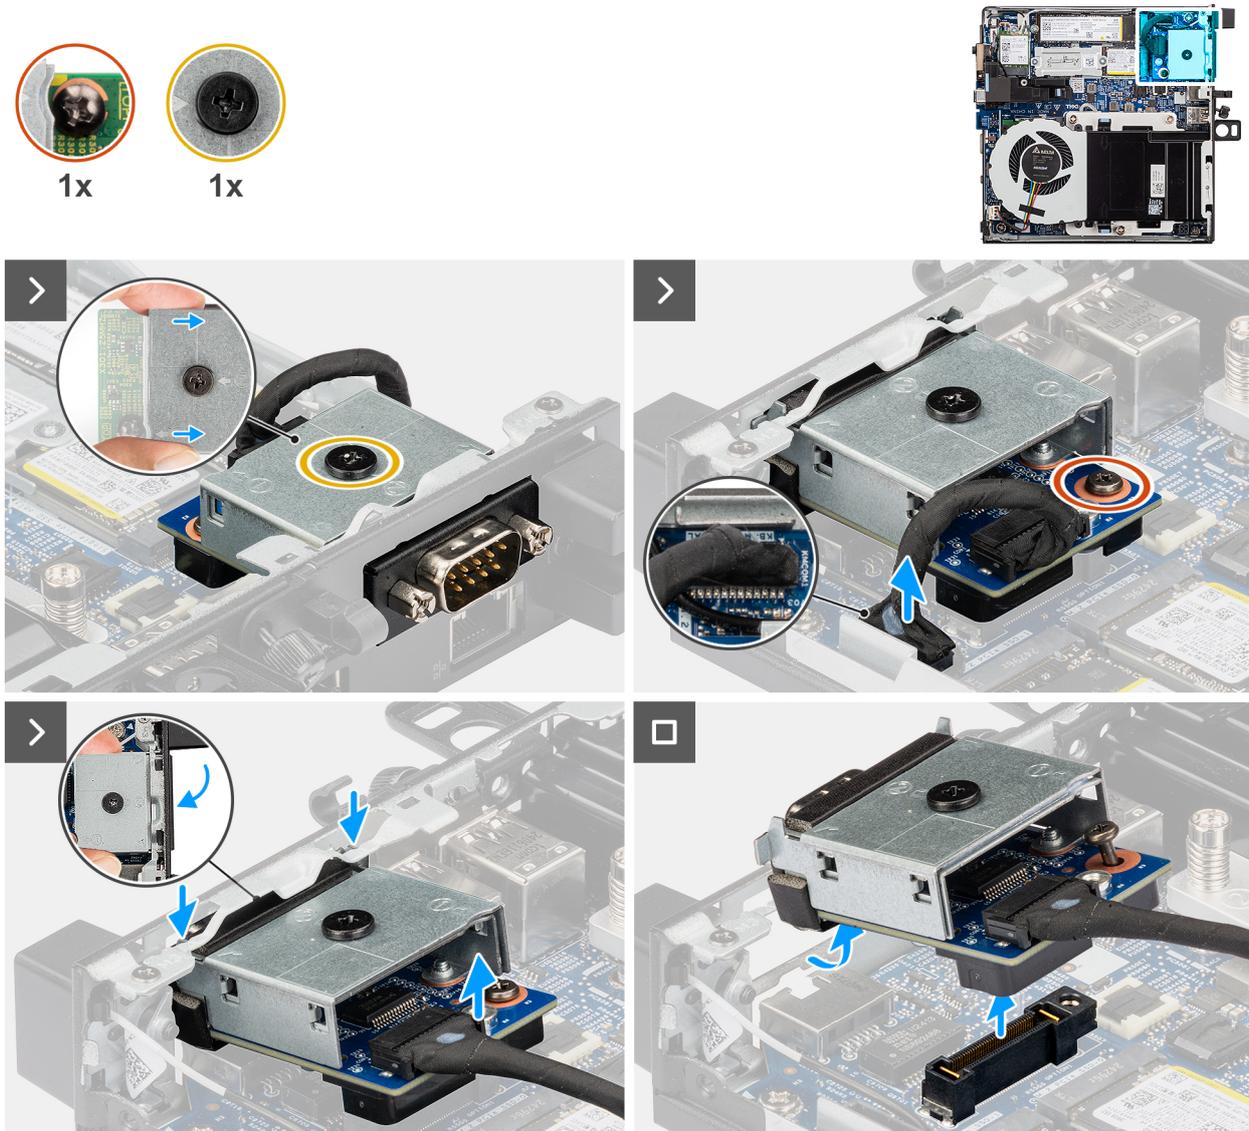


Figure 57. Removing the serial port module

### Steps

1. Loosen the two captive screws that secure the serial port module to the chassis.
2. Disconnect the serial port module cable from the connector (KB MS SERIAL port) on the system board.
3. Lift the serial port module from its connector end to a certain angle and move the serial port module downwards to detach it from the mounting points on the chassis.
4. Slide the serial port module and lift it away from the chassis.



## Installing the serial port module

### Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the serial port module and provide a visual representation of the installation procedure.

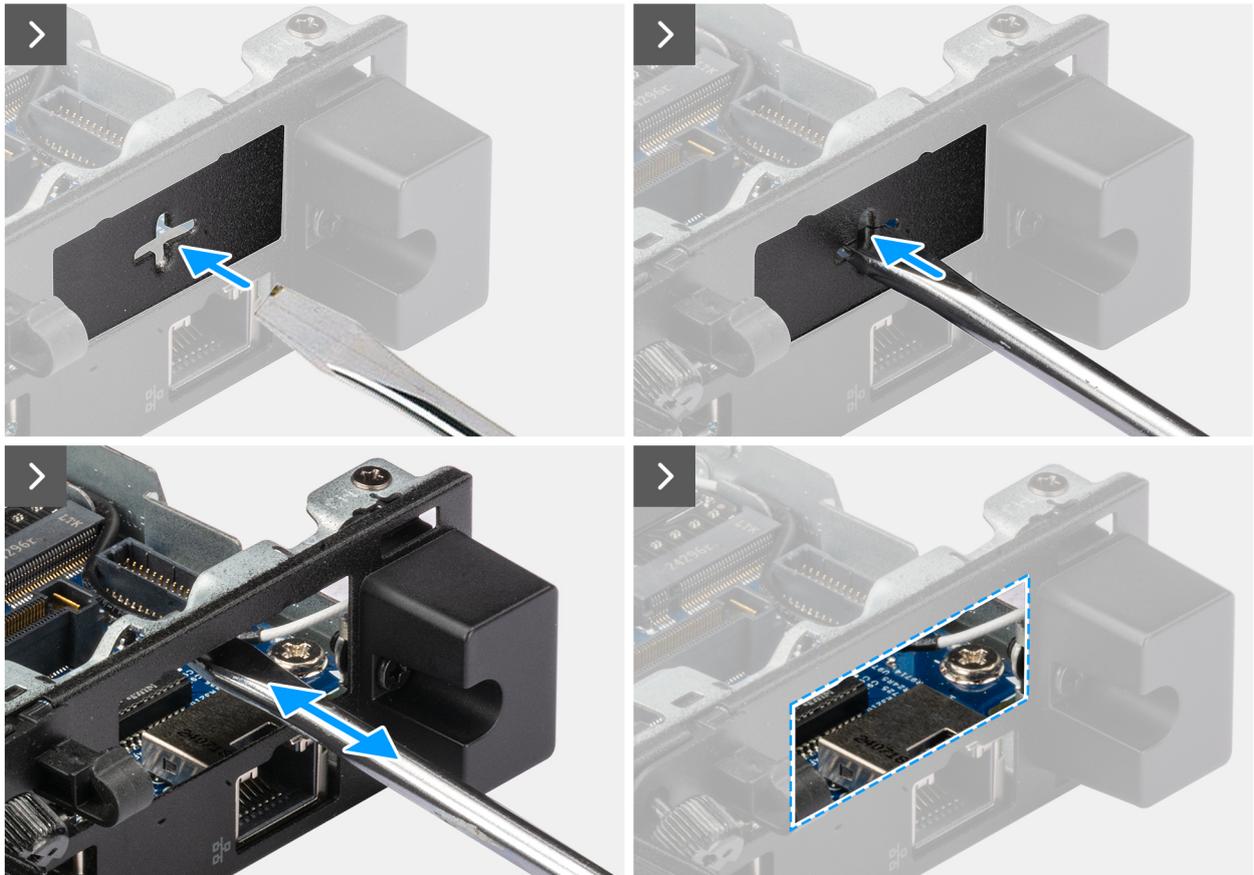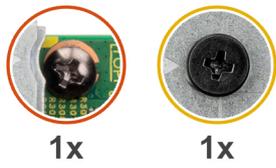

**Figure 58. Installing serial port module**

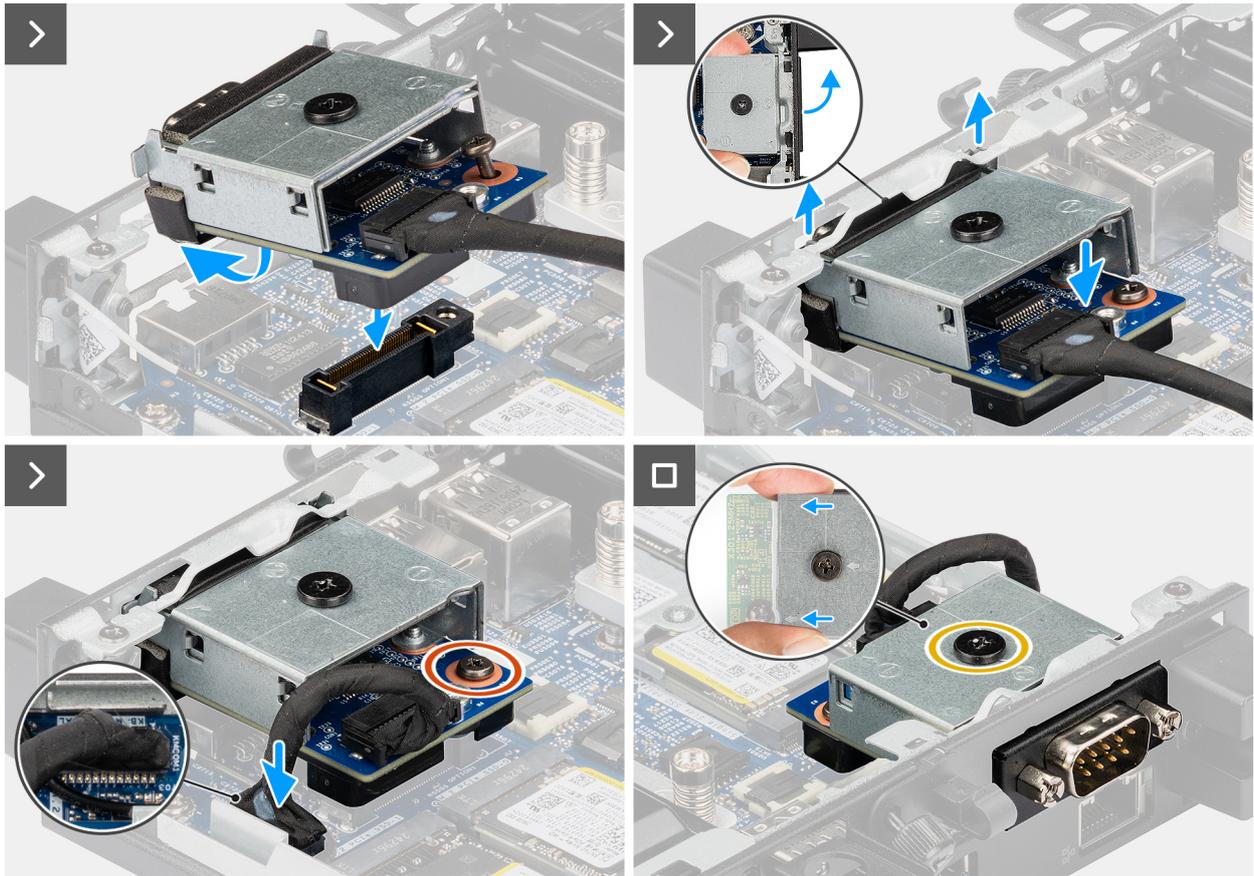

**Figure 59. Installing serial port module**

### Steps

1. **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the serial port module into its slot at the back panel of the computer.

**NOTE:** Ensure that the tabs on the serial port module align with the triangles that are engraved on the mounting point on the chassis.

3. Connect the serial port module cable to the connector (KB MS SERIAL port) on the system board.
4. Tighten the two captive screws to secure the serial port module to the chassis.

### Next steps

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

## Fiber optic port module

### Removing the fiber optic port module

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).

### About this task

The following images indicate the location of the fiber optic port module and provide a visual representation of the removal procedure.

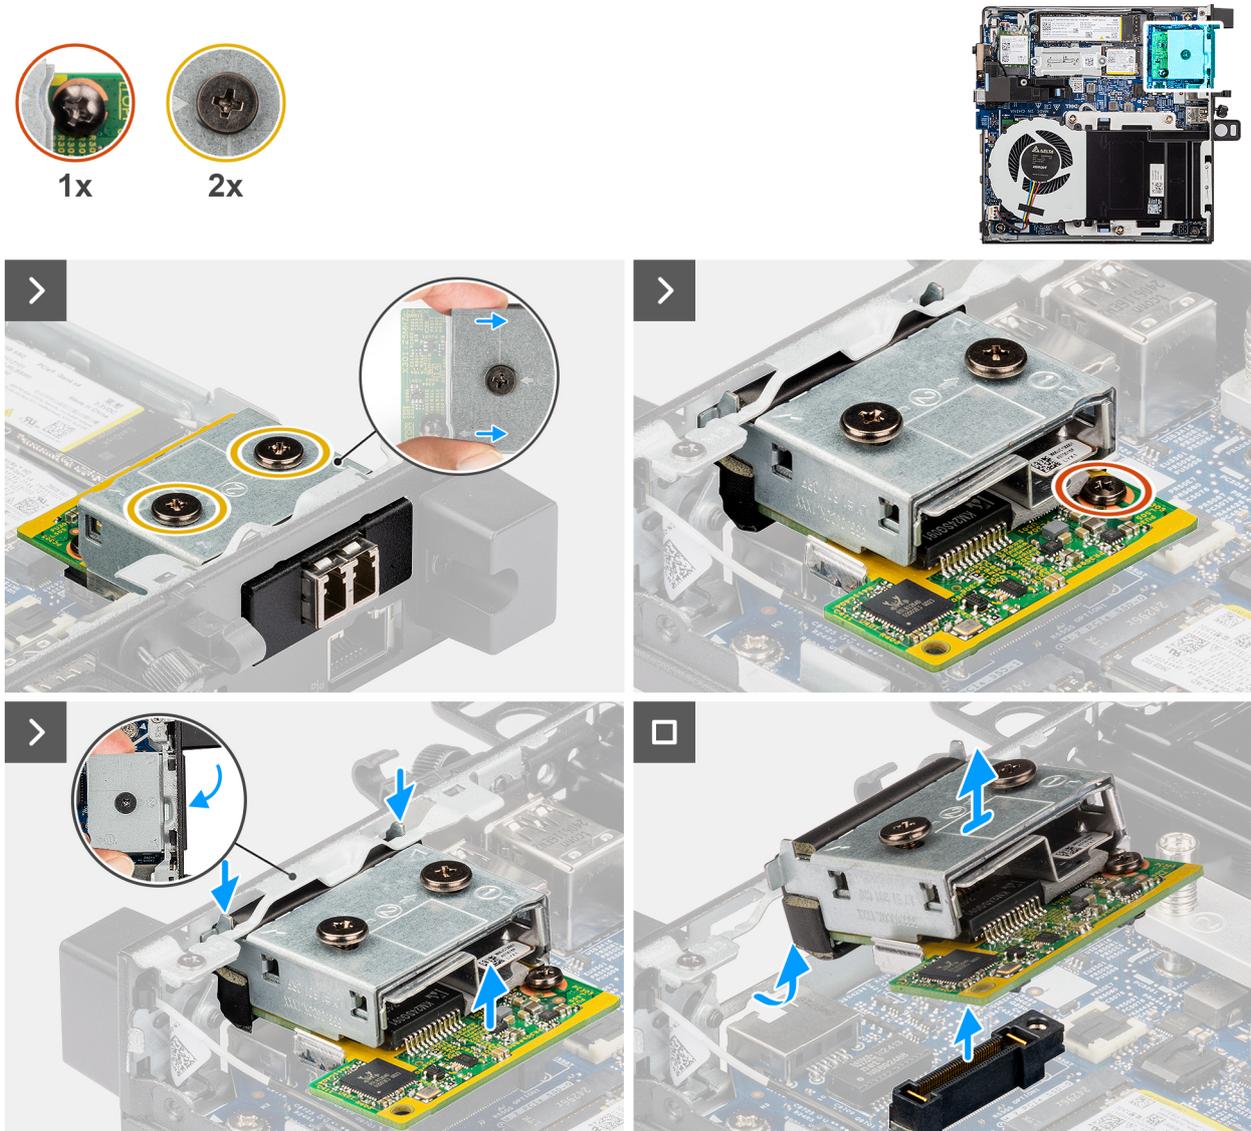


Figure 60. Removing the fiber optic port module

### Steps

1. Loosen the three captive screws that secure the fiber optic port module to the chassis.
2. Disconnect the fiber optic port module from the connector (OPTION) on the system board.
3. Lift the fiber optic port module from its connector end to a certain angle and move the fiber optic port module downwards to detach it from the mounting points on the chassis.
4. Slide the fiber optic port module and lift it away from the chassis.


## Installing the fiber optic port module

### Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.

**About this task**

The following images indicate the location of the fiber optic port module and provide a visual representation of the installation procedure.

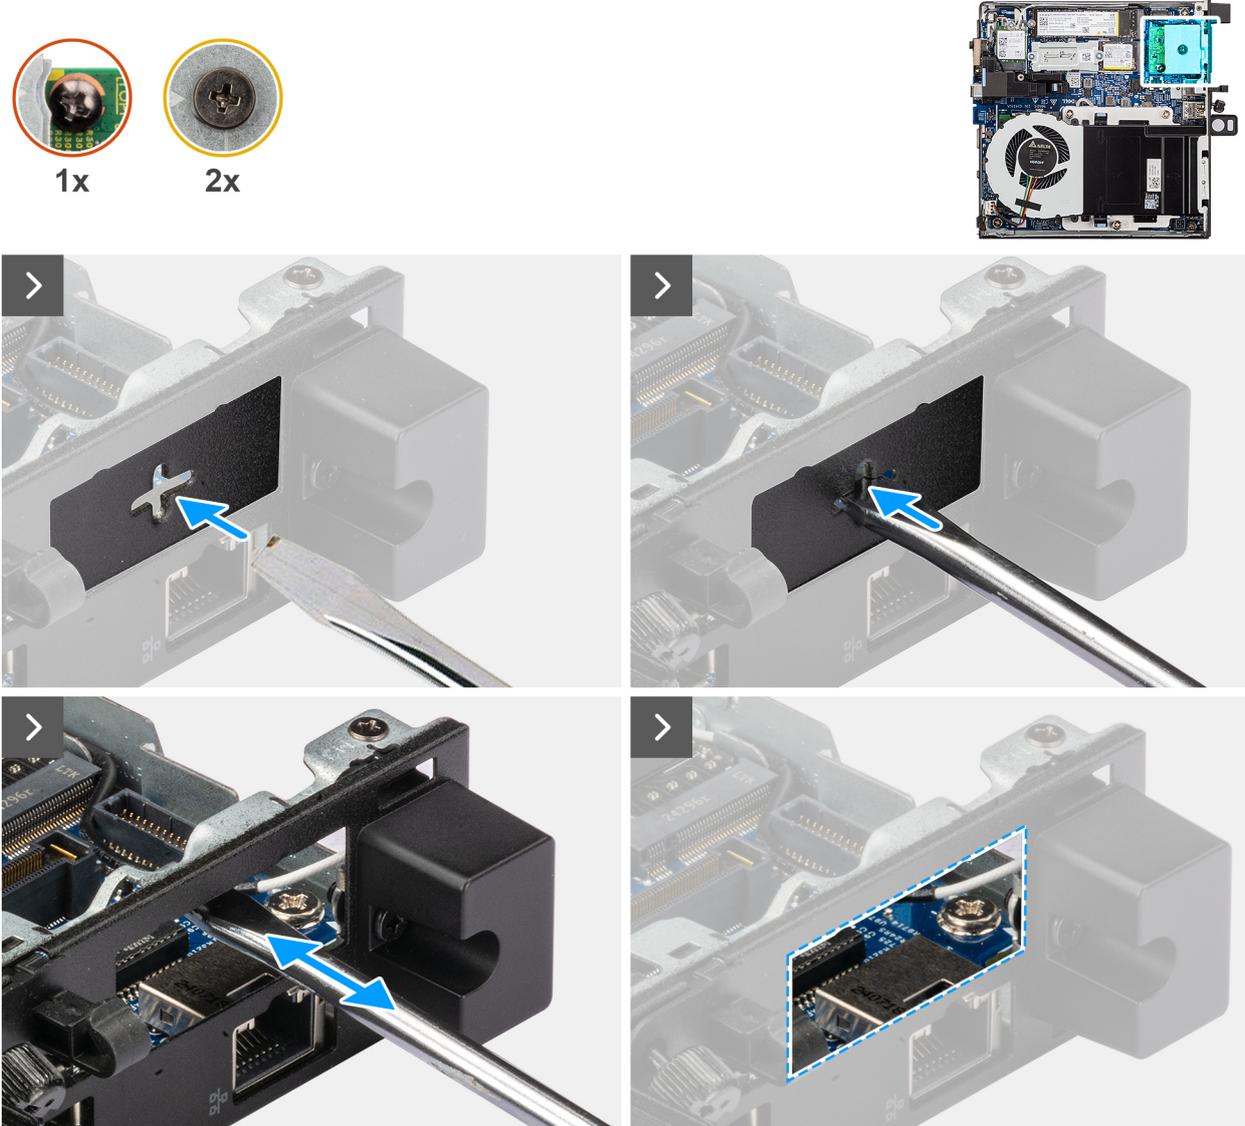

**Figure 61. Installing fiber optic port module**

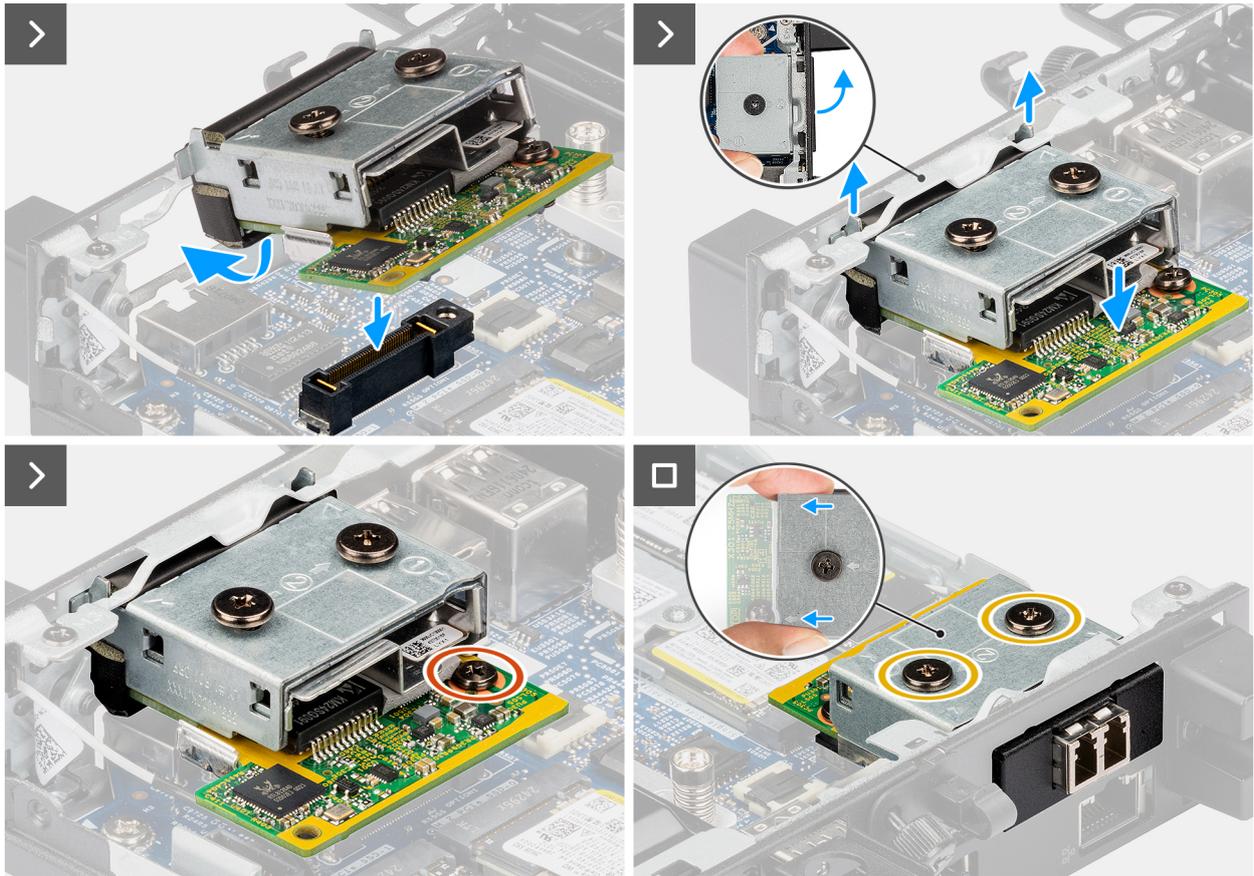

**Figure 62. Installing fiber optic port module**

**Steps**

1. **i** **NOTE:** This step applies if you are upgrading a computer with no existing I/O module.

To remove the knock-out port cover, insert a flat-head screwdriver in the hole of the port cover from the outside of the computer. Push the knock-out port cover to release it, and then remove it out from the computer.

2. Insert the fiber optic port module into its slot at the back panel of the computer.

**i** **NOTE:** Ensure that the tabs on the fiber optic port module align with the triangles that are engraved on the mounting point on the chassis.

3. Connect the fiber optic port module to the connector (OPTION) on the system board.
4. Tighten the two captive screws to secure the fiber optic port module to the chassis.

**Next steps**

1. Install the [side cover](#).
2. Follow the procedure in [After working inside your computer](#).

# Removing and installing Field Replaceable Units (FRUs)

The replaceable components in this chapter are Field Replaceable Units (FRUs).

**CAUTION:** The information in this removing and installing FRUs section is intended for authorized service technicians only.

**CAUTION:** To avoid any potential damage to the component or loss of data, Dell Technologies recommends that an authorized service technician replaces the Field Replaceable Units (FRUs).

**CAUTION:** Your warranty does not cover damages that may occur during FRU repairs that are not authorized by Dell Technologies.

**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

## Heat sink

### Removing the heat sink

**CAUTION:** The information in this section is intended for authorized service technicians only.

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).
3. Remove the [fan](#).

#### About this task

**NOTE:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

**NOTE:** For maximum cooling of the processor, do not touch the heat-transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal paste.

The following images indicate the location of the heat sink and provide a visual representation of the removal procedure.

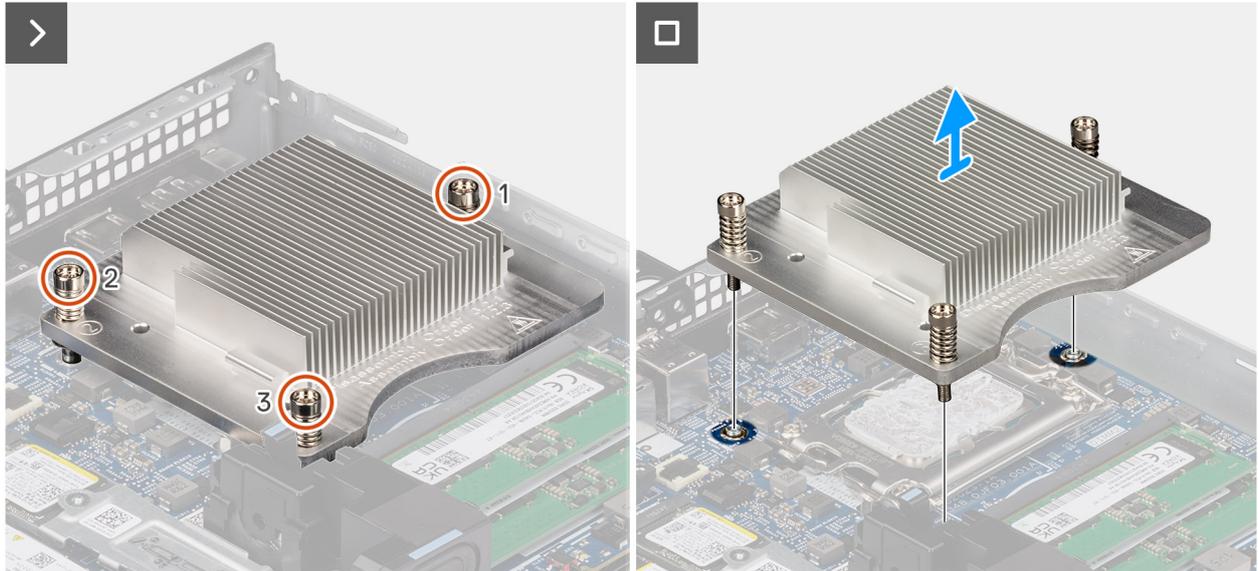
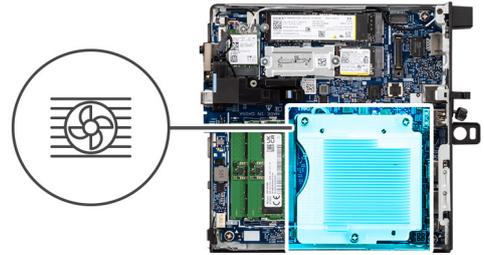


Figure 63. Removing the heat sink

#### Steps

1. In reverse sequential order (3->2->1), loosen the three captive screws that secure the heat sink to the system board.
2. Lift the heat sink off the system board.

## Installing the heat sink

**CAUTION:** The information in this section is intended for authorized service technicians only.

#### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

#### About this task

**NOTE:** If either the processor or the heat sink is replaced, use the thermal paste that is provided in the kit to ensure that thermal conductivity is achieved.

The following images indicate the location of the heat sink and provide a visual representation of the installation procedure.



3x

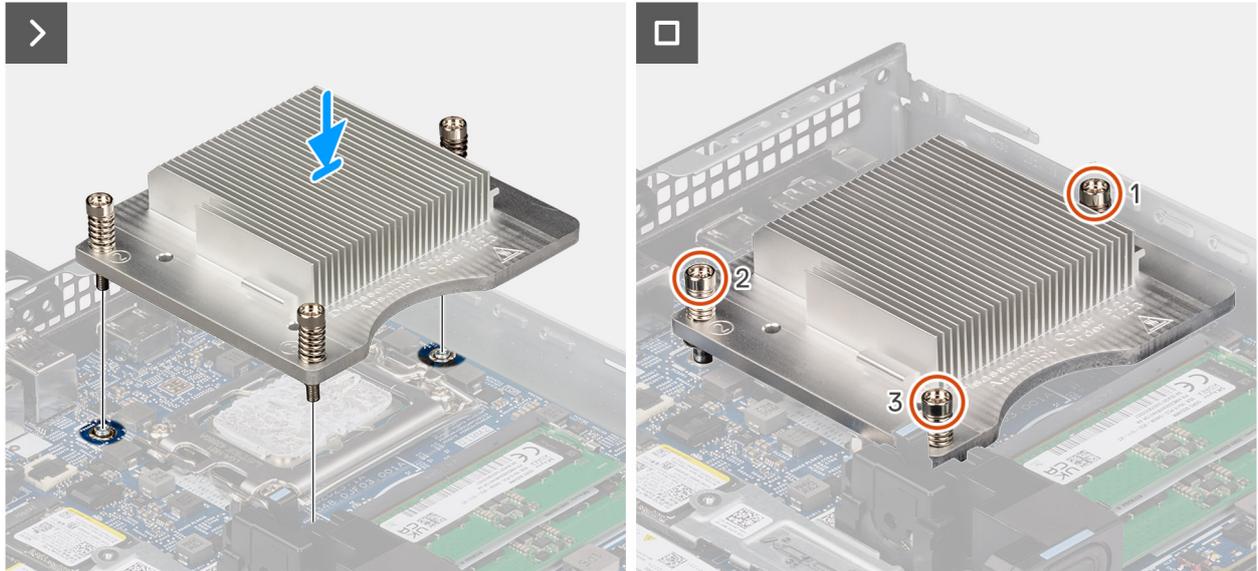
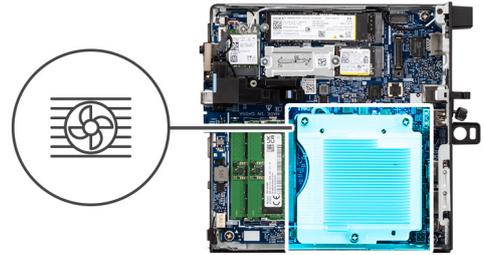


Figure 64. Installing the heat sink

#### Steps

1. Place the heat sink on the system board.
2. Align the screw holes on the heat sink with the screw holes on the system board.
3. In sequential order (1->2->3), tighten the three captive screws that secure the heat sink to the system board.

#### Next steps

1. Install the [fan](#).
2. Install the [side cover](#).
3. Follow the procedure in [After working inside your computer](#).

## Internal antenna module

### Removing the antenna module (black cable)

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).
3. Remove the [wireless card](#).

#### About this task

The following images indicate the location of the wireless antenna module (black cable) and provide a visual representation of the removal procedure.



1x  
M3x3

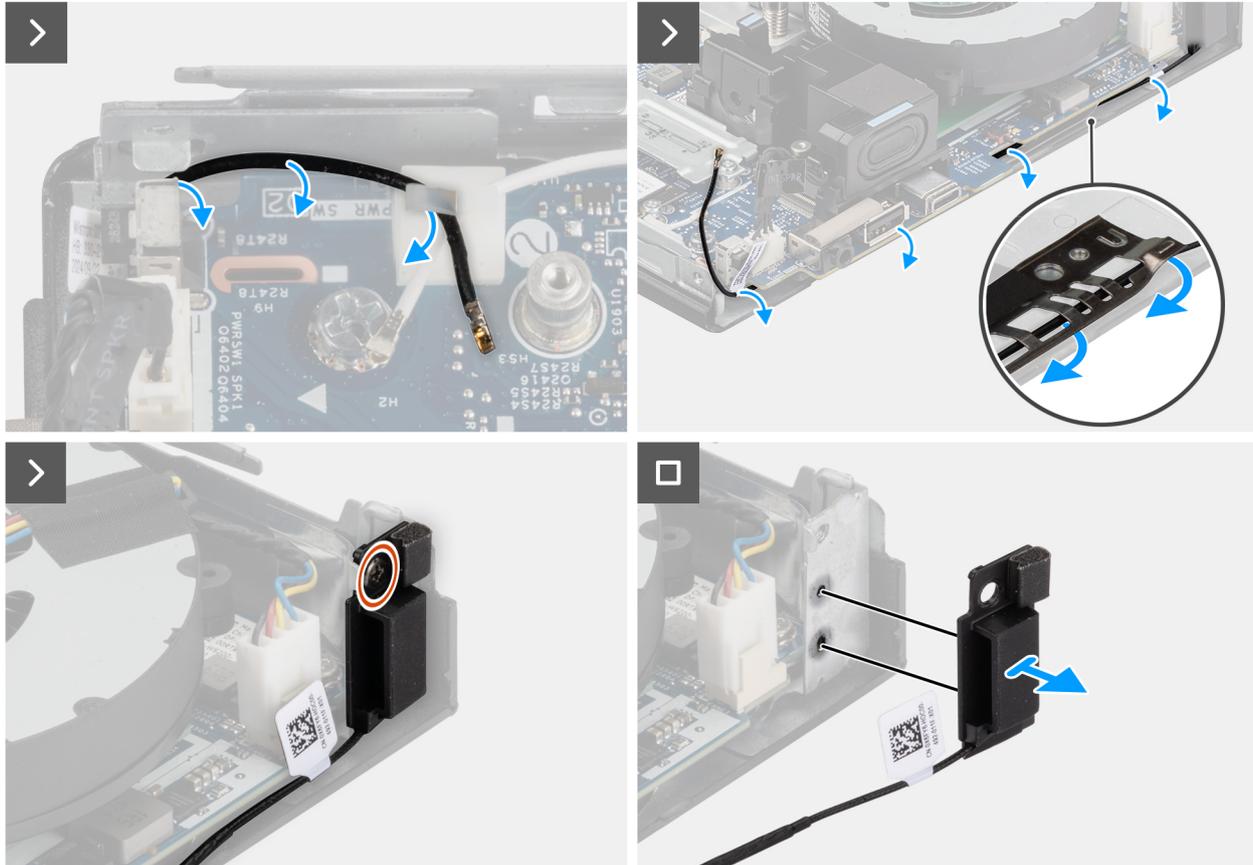
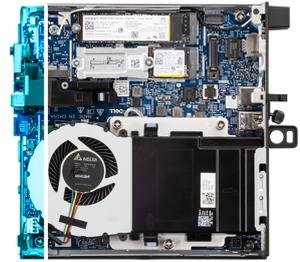


Figure 65. Removing the antenna module (black cable)

### Steps

1. Remove the antenna cable from the routing guides on the chassis.
2. Remove the screw (M3x3) that secures the antenna module to the chassis.
3. Lift the antenna module away from the chassis.

## Installing the antenna module (black cable)

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

The following images indicate the location of the antenna module (black cable) and provide a visual representation of the installation procedure.



1x  
M3x3

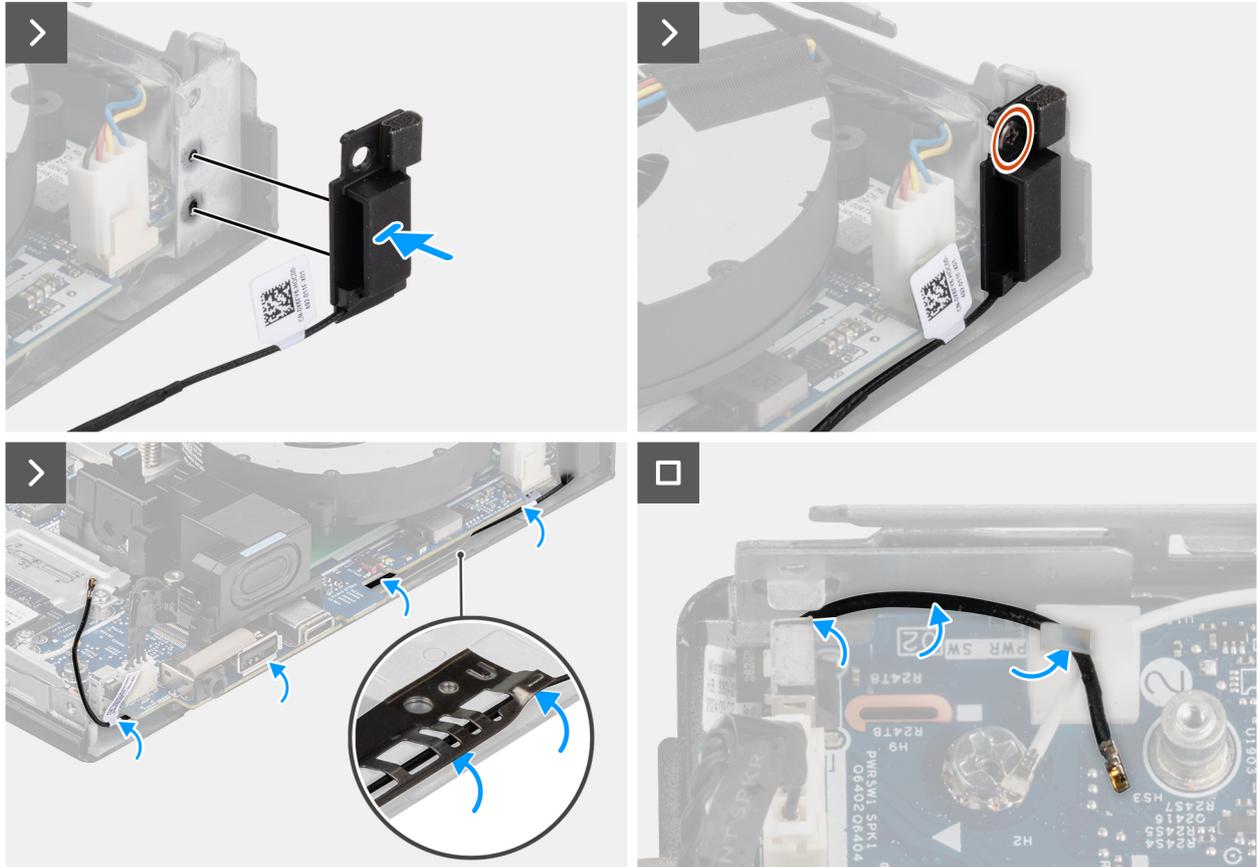
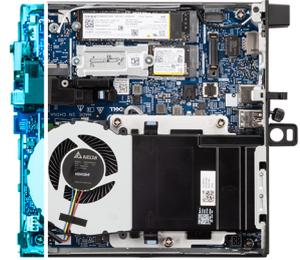


Figure 66. Installing the antenna module (black cable)

### Steps

1. Align the tabs on the antenna module with the holes on the chassis and place it on the chassis.
2. Replace the screw (M3x3) that secures the antenna module to the chassis.
3. Using a plastic scribe, route the black antenna cable under the EMI shield below the system board on the chassis.

**CAUTION:** Do not press the Intrusion switch while routing the black antenna cable under the EMI shield.

4. Route the black antenna cable through the routing guides on the system board.

### Next steps

1. Install the [wireless card](#).
2. Install the [side cover](#).
3. Follow the procedure in [After working inside your computer](#).

# Removing the antenna module (white cable)

## Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).
3. Remove the [wireless card](#).

## About this task

The following images indicate the location of the antenna module (white cable) and provide a visual representation of the removal procedure.

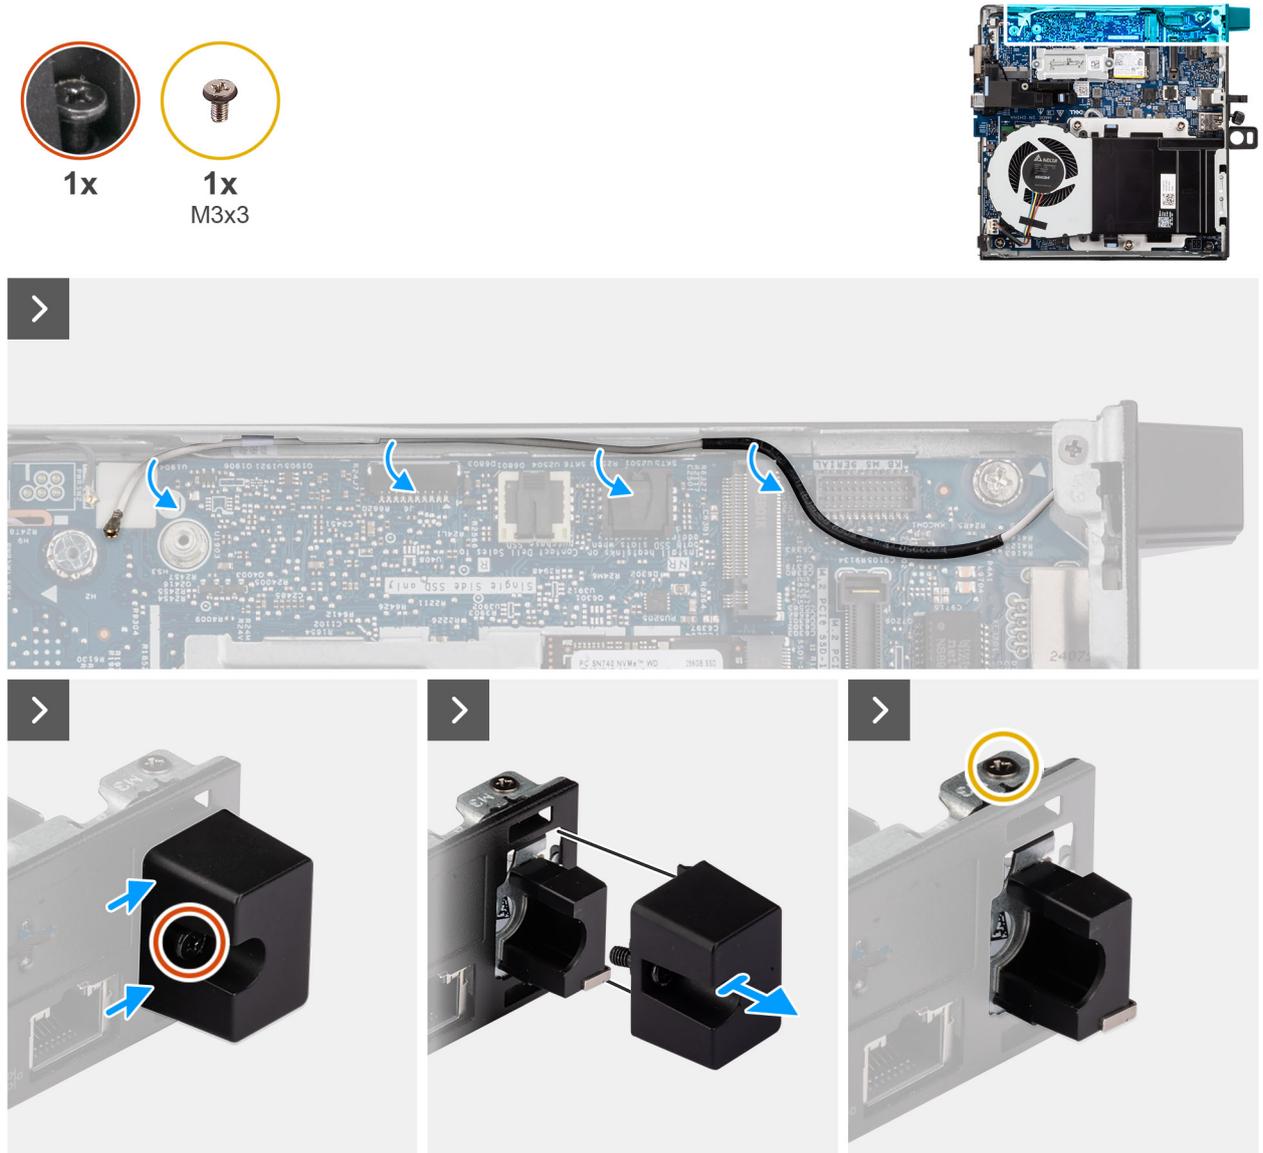


Figure 67. Removing the antenna module (white cable)



**Figure 68. Removing the antenna module (white cable)**

**Steps**

1. Remove the white antenna cable from the routing guides on the chassis and system board.
2. Loosen the captive screw that secures the antenna module cover to the antenna module (white cable).
3. Remove the antenna module cover from the chassis.
4. Remove the screw (M3x3) that secures the antenna module to the chassis.
5. Gently push the antenna module downwards, allowing it to slide through its slot on the chassis.
6. Pull the antenna module and lift it away from the chassis.

## Installing the antenna module (white cable)

**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation process.

**About this task**

The following images indicate the location of the antenna module (white cable) and provide a visual representation of the installation procedure.



1x



1x  
M3x3

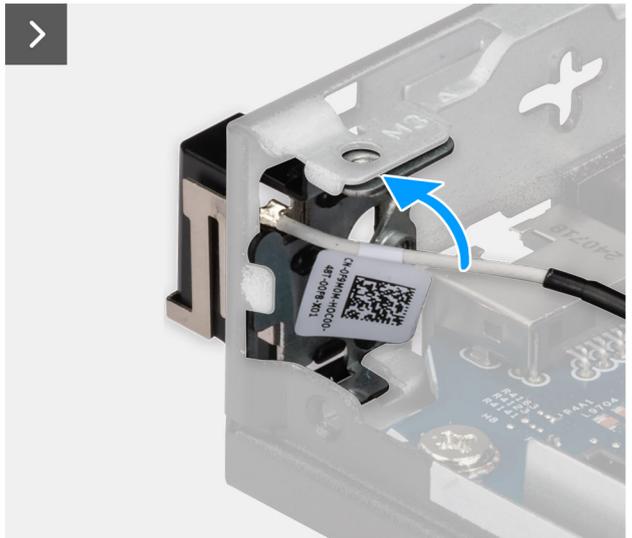
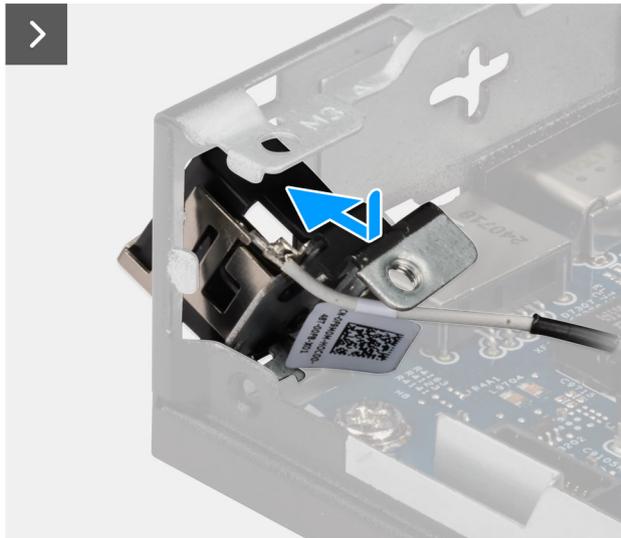
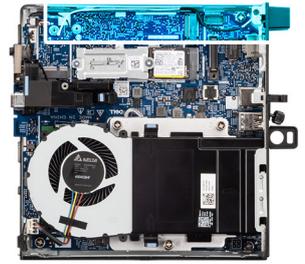


Figure 69. Installing the antenna module (white cable)

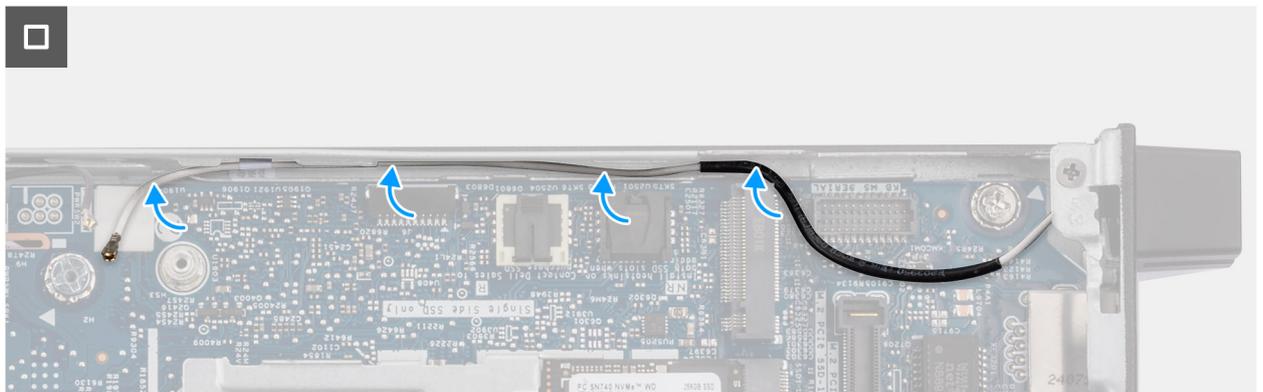
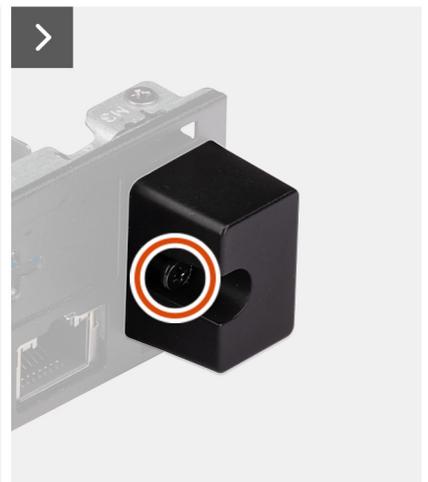


Figure 70. Installing the antenna module (white cable)

### Steps

1. Place the antenna module at a certain angle and push it into the slot on the chassis.
2. Align the screw hole and captive screw on the antenna module to the screw holes on the chassis.
3. Replace the screw (M3x3) to secure the antenna module to the chassis.
4. Replace the antenna module cover into its slot on the chassis.
5. Tighten the captive screw to secure the antenna module cover to the chassis.
6. Route the white antenna cable through the routing guides on the chassis and system board.

### Next steps

1. Install the [wireless card](#).
2. Install the [side cover](#).
3. Follow the procedure in [After working inside your computer](#).

## Processor

### Removing the processor

 **CAUTION:** The information in this section is intended for authorized service technicians only.

#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [side cover](#).
3. Remove the [fan](#).
4. Remove the [heat sink](#).

#### About this task

-  **NOTE:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.
-  **NOTE:** For maximum cooling of the processor, do not touch the heat-transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

The following images indicate the location of the processor and provide a visual representation of the removal procedure.

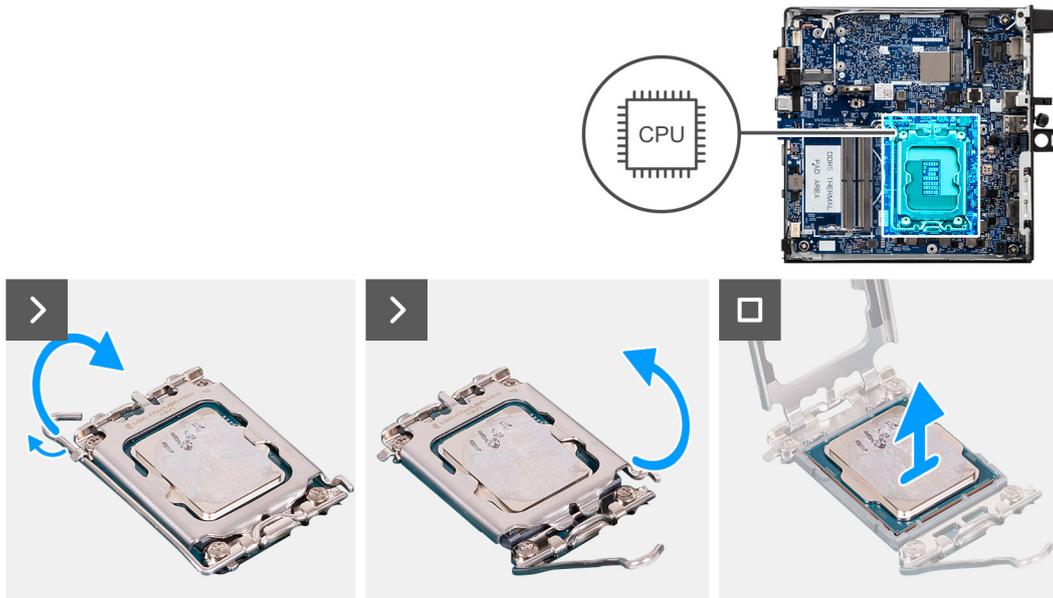


Figure 71. Removing the processor

### Steps

1. Press the release lever down and then push it away from the processor to release it from the securing tab.
2. Extend the release lever all the way to ensure that the processor cover is open completely.

**CAUTION:** When removing the processor, do not touch any of the pins inside the socket or allow any objects to fall on the pins in the socket.

3. Gently lift the processor from the processor socket.

## Installing the processor

**CAUTION:** The information in this section is intended for authorized service technicians only.


### Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

### About this task

**NOTE:** If either the processor or the heat sink is replaced, use the thermal grease that is provided in the kit to ensure that thermal conductivity is achieved.

The following images indicate the location of the processor and provide a visual representation of the installation procedure.

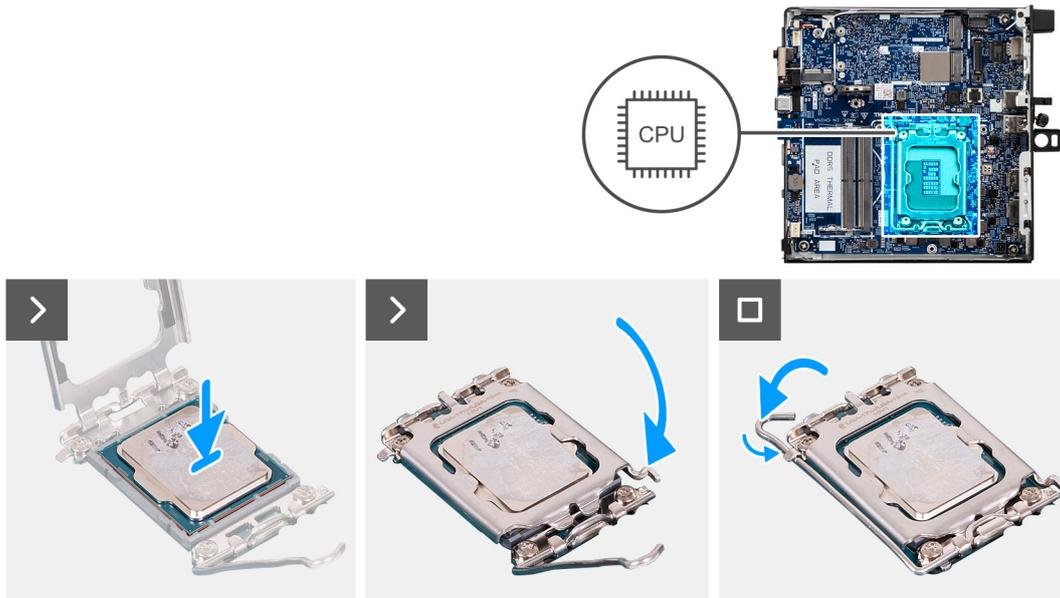

**Figure 72. Installing the processor**

**Steps**

1. Align the notches on the processor with the tabs on the processor socket and place the processor in the processor socket.

**CAUTION:** Ensure that the processor-cover notch is positioned underneath the alignment post.

**NOTE:** The pin-1 corner of the processor has a triangle that aligns with the triangle on the pin-1 corner on the processor socket. When the processor is properly seated, all four corners are aligned at the same height. If one or more corners of the processor are higher than the others, the processor is not seated properly.

2. When the processor is fully seated in the socket, close the processor-socket cover.
3. Push the release-lever down and place it under the tab on the processor socket.

**Next steps**

1. Install the [heat sink](#).
2. Install the [fan](#).
3. Install the [side cover](#).
4. Follow the procedure in [After working inside your computer](#).

## Speaker holder

### Removing the speaker holder

**Prerequisites**



1. Follow the procedure in [before working inside your computer](#).
2. Remove the [side cover](#).
3. Remove the [speaker](#).

**About this task**

The following image indicates the location of the speaker holder and provides a visual representation of the removal procedure.



1x  
M3x5

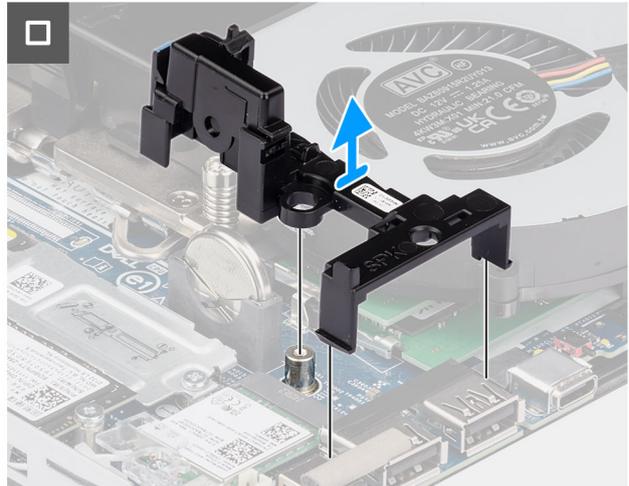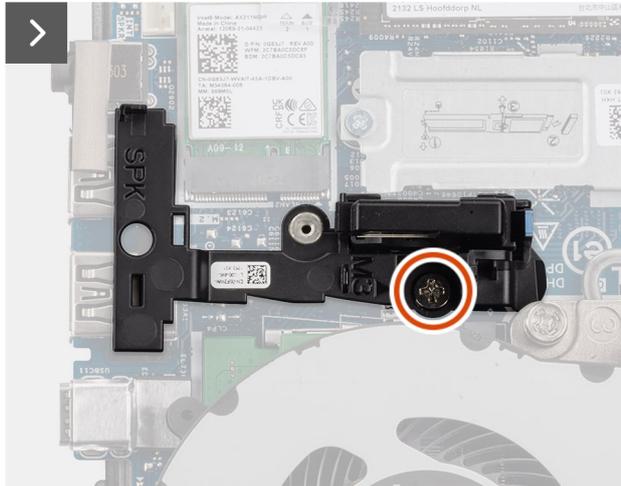

**Figure 73. Removing the speaker holder**

### Steps

1. Remove the screw (M3x5) that secures the speaker holder to the system board.
2. Lift the speaker holder away from the system board.

## Installing the speaker holder

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following image indicates the location of the speaker holder and provides a visual representation of the installation procedure.



1x  
M3x5

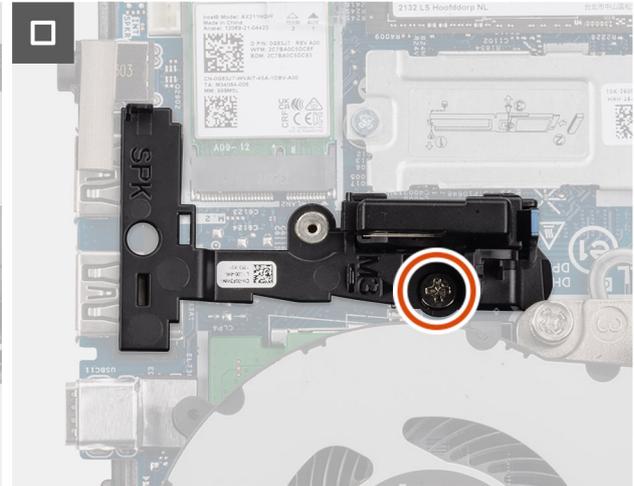
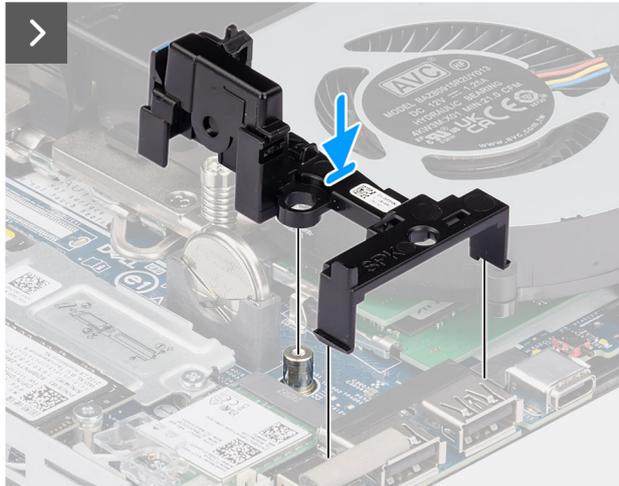


Figure 74. Installing the speaker holder

#### Steps

1. Align and insert the speaker holder into the slots on the system board and press it until the release tab clicks.
2. Replace the screw (M3x5) to secure the speaker holder to the system board.

#### Next steps

1. Install the [speaker](#).
2. Install the [side cover](#).
3. Follow the procedure in [after working inside your computer](#).

## System board

### Removing the system board

**CAUTION:** The information in this section is intended for authorized service technicians only.


#### Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [external puck antenna](#), if applicable.
3. Remove the [side cover](#).
4. Remove the [speaker](#).
5. Remove the [coin-cell battery](#).
6. Remove the [M.2 2230 solid-state drive](#) or [M.2 2280 solid-state drive](#) in single SSD configuration, if applicable.
7. Remove the [M.2 2230 solid-state drive](#) or [M.2 2280 solid-state drive](#) in dual SSD configuration, if applicable.
8. Remove the [wireless card](#).
9. Remove the [fan](#).
10. Remove the [memory](#).
11. Remove the [heat sink](#).

12. Remove the [processor](#).
13. Remove the optional input/output module, whichever is applicable.
  - [Dual USB 3.2 Gen 2 ports module](#)
  - [USB Type-C port module](#)
  - [DisplayPort module](#)
  - [HDMI port module](#)
  - [VGA port module](#)
  - [PS2 port module](#)
  - [Serial port module](#)
  - [Fiber optic port module](#)
14. Remove the [speaker holder](#).

**About this task**

The following images indicate the system board connectors.

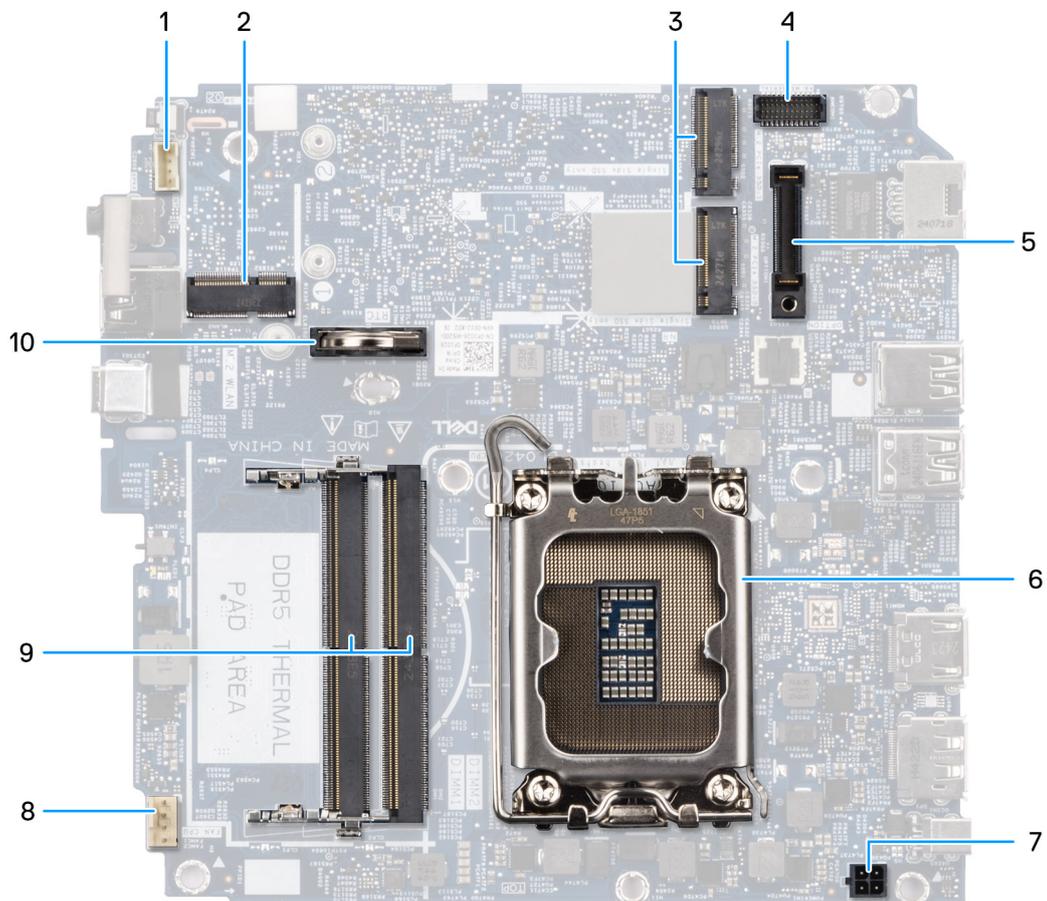

**Figure 75. System board connectors**

1. Speaker connector (INT SPK)
2. Wireless card slot (M.2 WLAN)
3. M.2 Solid-state drive slots (M.2 PCIe SSD-0 and M.2 PCIe SSD-1)
4. Optional PS/2, serial port connector (KB MS SERIAL)
5. Optional port connector (OPTION)
6. Processor socket
7. Power adapter connector (POWERIN)
8. Fan connector (FAN CPU)

- 9. Memory-module slots (DIMM1 and DIMM2)
- 10. Coin-cell battery

The following images indicate the location of the system board and provide a visual representation of the removal procedure.


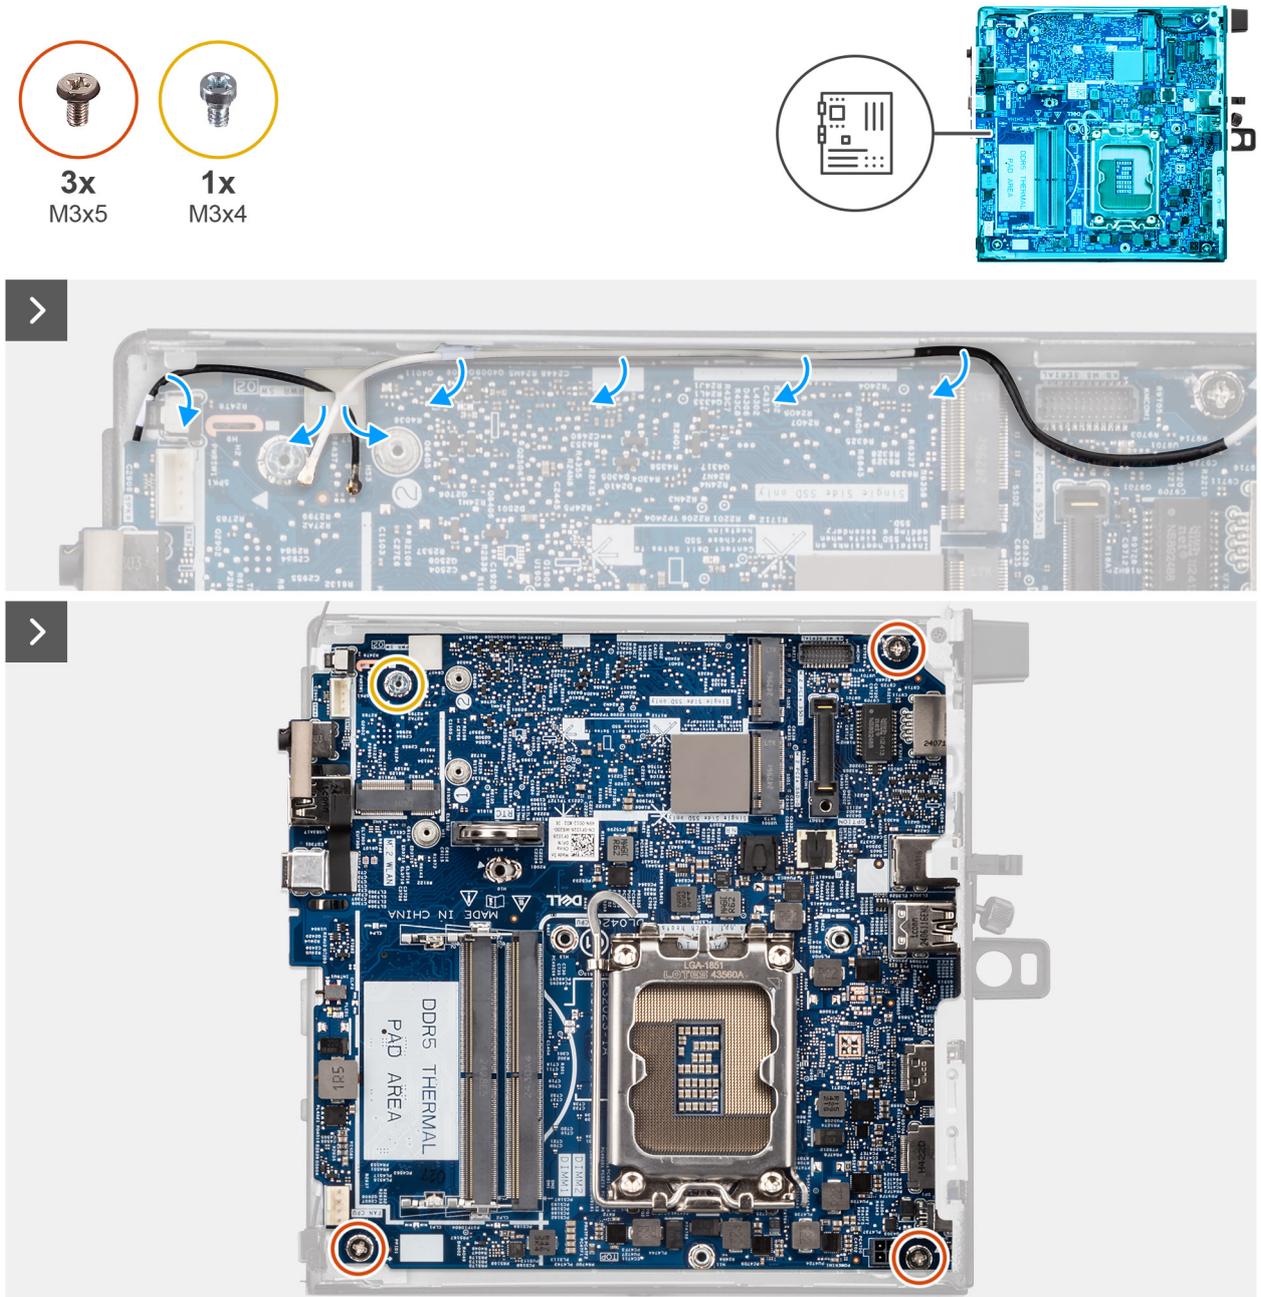


Figure 76. Removing the system board

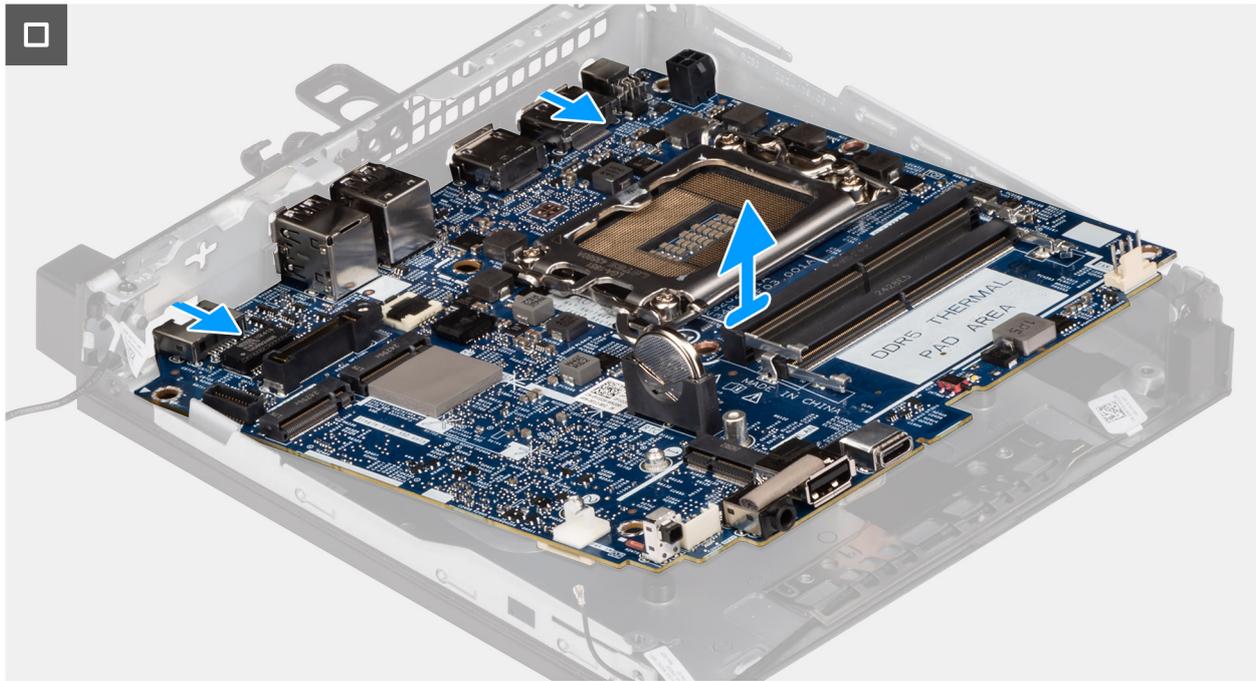

**Figure 77. Removing the system board**

**Steps**

1. Remove the wireless-card cables from their routing guides on the system board.
2. Remove the three screws (M3x5) that secure the system board to the chassis.
3. Remove the screw mount (M3x4) that secure the system board to the chassis.
4. Lift the system board at an angle and remove it from the chassis.

## Installing the system board


**CAUTION:** The information in this section is intended for authorized service technicians only.

**Prerequisites**

If you are replacing a component, remove the existing component before performing the installation process.

**About this task**

The following images indicate the system board connectors.

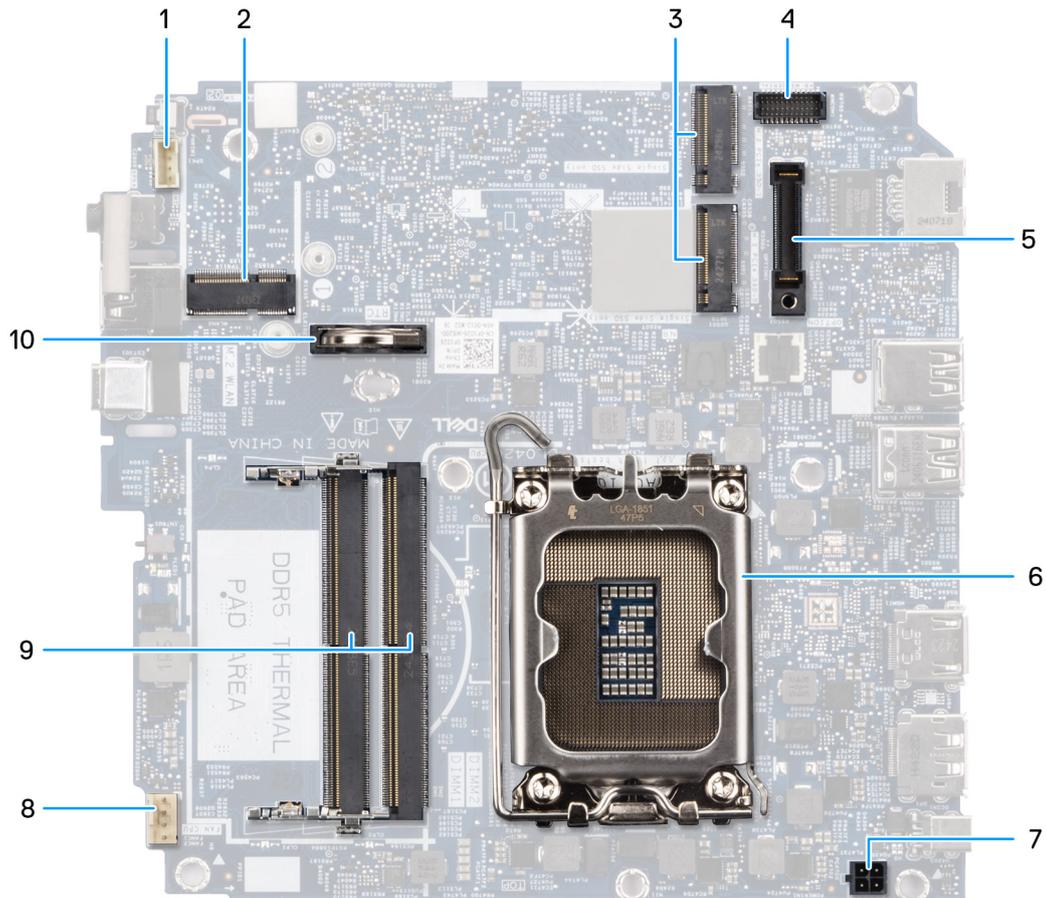

**Figure 78. System board connectors**

1. Speaker connector (INT SPK)
2. Wireless card slot (M.2 WLAN)
3. M.2 Solid-state drive slots (M.2 PCIe SSD-0 and M.2 PCIe SSD-1)
4. Optional PS/2, serial port connector (KB MS SERIAL)
5. Optional port connector (OPTION)
6. Processor socket
7. Power adapter connector (POWERIN)
8. Fan connector (FAN CPU)
9. Memory-module slots (DIMM1 and DIMM2)
10. Coin-cell battery

The following images indicate the location of the system board and provide a visual representation of the installation procedure.



3x  
M3x5



1x  
M3x4



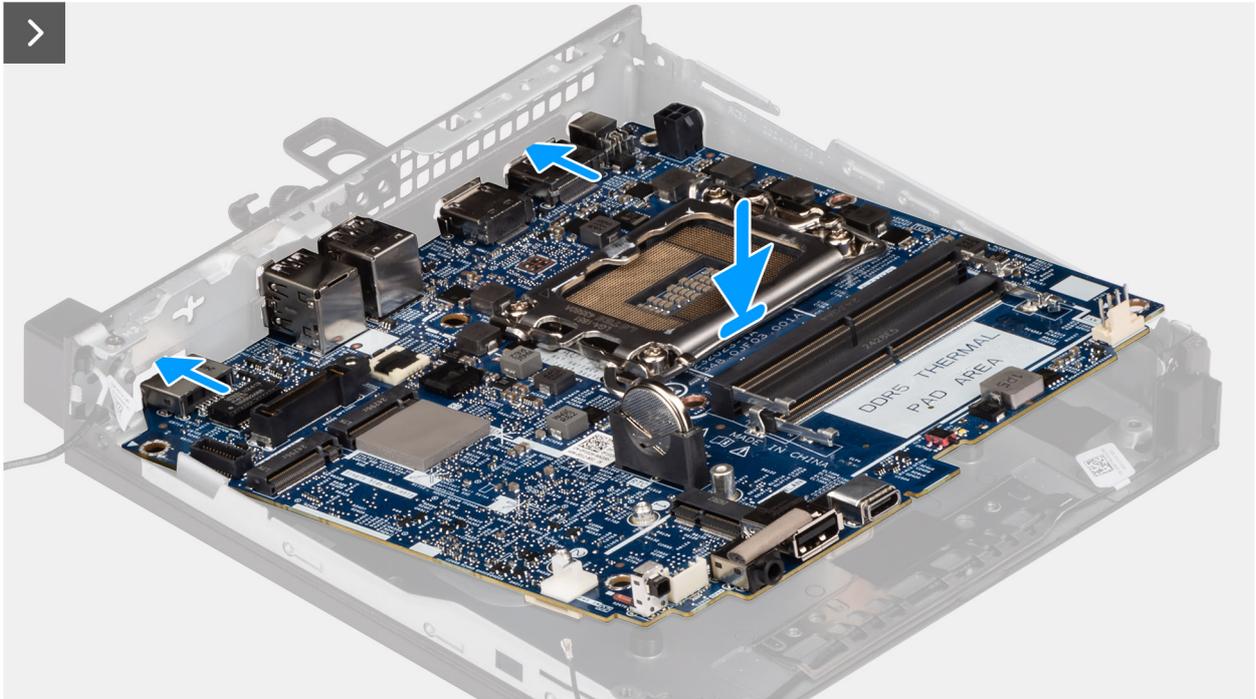


Figure 79. Installing the system board

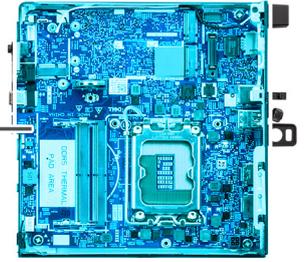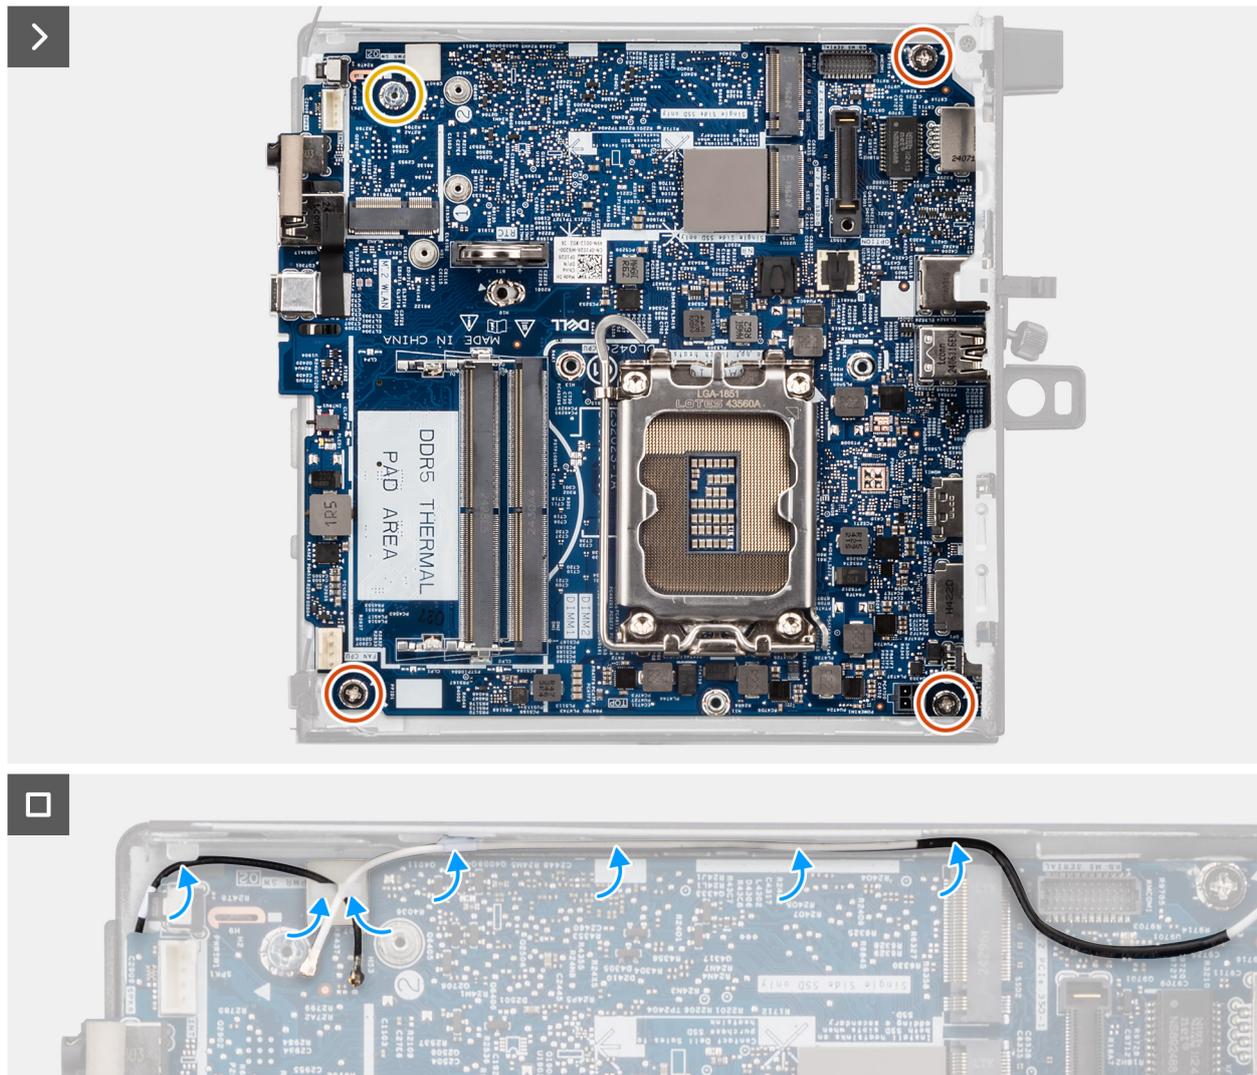

**Figure 80. Installing the system board**

**Steps**

1. Align and lower the system board into the chassis until the standoff points at the back of the system board align with those on the chassis.
2. Replace the screw mount (M3x4) that secure the system board to the chassis.
3. Replace the three screws (M3x5) that secure the system board to the chassis.
4. Rout the wireless-card cables into their routing guides on the system board.

**Next steps**

1. Install the [speaker holder](#).
2. Install the optional input/output module, whichever is applicable.
  - [Dual USB 3.2 Gen 2 ports module](#)
  - [USB Type-C port module](#)
  - [DisplayPort module](#)
  - [HDMI port module](#)
  - [VGA port module](#)
  - [PS2 port module](#)
  - [Serial port module](#)
  - [Fiber optic port module](#)
3. Install the [processor](#).
4. Install the [heat sink](#).

5. Install the [memory](#).
6. Install the [fan](#).
7. Install the [wireless card](#).
8. Install the [M.2 2230 solid-state drive](#) or [M.2 2280 solid-state drive](#) in single SSD configuration, if applicable.
9. Install the [M.2 2230 solid-state drive](#) or [M.2 2280 solid-state drive](#) in dual SSD configuration, if applicable.
10. Install the [coin-cell battery](#).
11. Install the [speaker](#).
12. Install the [side cover](#).
13. Install the [external puck antenna](#), if applicable.
14. Follow the procedure in [After working inside your computer](#).

# Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

## Operating system

Your Dell Pro Micro QCM1250 supports the following operating systems:

- Windows 11 Home
- Windows 11 Pro
- Windows 11 Pro National Education
- Ubuntu Linux 24.04 LTS, 64-bit

## Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the [Dell Knowledge Base article Drivers and Downloads FAQs](#).

# BIOS Setup

**CAUTION:** Certain changes can make your computer work incorrectly. Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

**NOTE:** Depending on the computer and the installed devices, the options that are listed in this section may differ.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the capacity of the storage device.
- Change the system configuration information.
- Set or change user-selectable options such as the user password, enabling or disabling base devices, and configuring hard drive settings.

## Entering BIOS Setup program

### About this task

Turn on (or restart) your computer and press F2 immediately.

## Navigation keys

**NOTE:** For most of the BIOS Setup options, changes that you make are recorded but do not take effect until you restart the computer.

**Table 24. Navigation keys**

| Keys       | Navigation   |
|------------|--|
| Up arrow   | Moves to the previous field.   |
| Down arrow | Moves to the next field.   |
| Enter      | Selects a value in the selected field (if applicable) or follows the link in the field.  |
| Spacebar   | Expands or collapses a drop-down list, if applicable.  |
| Tab        | Moves to the next focus area.  |
| Esc        | Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer. |

## F12 One Time Boot menu

To enter the One Time Boot menu, turn on or restart your computer, and then press F12 immediately.

**NOTE:** If you are unable to enter the One Time Boot menu, repeat the above action.

The One Time Boot menu displays the devices that you can boot from and also display the options to start diagnostics. The boot menu options are:

- Removable Drive (if available)

- STXXXX Drive (if available)

**NOTE:** XXXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The One Time Boot menu screen also displays the option to access BIOS Setup.

## System setup options

**NOTE:** Depending on your computer and its installed devices, the items that are listed in this section may or may not be displayed.

**Table 25. System setup options—System information menu**

| Overview                      |   |
|-------------------------------|---|
| <b>Dell Pro Micro QCM1250</b> |   |
| BIOS Version                  | Displays the BIOS version number.                               |
| Service Tag                   | Displays the Service Tag of the computer.                       |
| Asset Tag                     | Displays the Asset Tag of the computer.                         |
| Manufacture Date              | Displays the manufacture date of the computer.                  |
| Ownership Date                | Displays the ownership date of the computer.                    |
| Express Service Code          | Displays the express service code of the computer.              |
| Ownership Tag                 | Displays the Ownership Tag of the computer.                     |
| <b>PROCESSOR</b>              |   |
| Processor Type                | Displays the processor type.                                    |
| Maximum Clock Speed           | Displays the maximum processor clock speed.                     |
| Minimum Clock Speed           | Displays the minimum processor clock speed.                     |
| Core Count                    | Displays the number of cores on the processor.                  |
| Processor ID                  | Displays the processor identification code.                     |
| Processor L2 Cache            | Displays the processor L2 Cache size.                           |
| Processor L3 Cache            | Displays the processor L3 Cache size.                           |
| Microcode Version             | Displays the microcode version.                                 |
| Intel Hyper-Threading Capable | Displays whether the processor is Hyper-Threading (HT) capable. |
| Intel vPro Technology         | Displays the status of Intel vPro technology in your computer.  |
| <b>MEMORY</b>                 |   |
| Memory Installed              | Displays the total computer memory installed.                   |
| Memory Available              | Displays the total computer memory available.                   |
| Memory Speed                  | Displays the memory speed.                                      |
| Memory Technology             | Displays the technology that is used for the memory.            |
| DIMM 1 Size                   | Displays the DIMM 1 memory size.                                |
| DIMM 2 Size                   | Displays the DIMM 2 memory size.                                |
| <b>DEVICES</b>                |   |
| Video Controller              | Displays the video controller type of the computer.             |

**Table 25. System setup options—System information menu (continued)**

| Overview           |  |
|--------------------|--|
| Video Memory       | Displays the video memory information of the computer.             |
| Wi-Fi Device       | Displays the wireless device information of the computer.          |
| Native Resolution  | Displays the native resolution of the computer.                    |
| Video BIOS Version | Displays the video BIOS version of the computer.                   |
| Audio Controller   | Displays the audio controller information of the computer.         |
| Bluetooth Device   | Displays the Bluetooth device information of the computer.         |
| LOM MAC Address    | Displays the LAN On Motherboard (LOM) MAC address of the computer. |

**Table 26. System setup options—Boot Configuration menu**

| Boot Configuration           |  |
|------------------------------|--|
| <b>Boot Sequence</b>         |  |
| Boot Sequence                | Displays the boot sequence.  |
| Enable PXE Boot Priority     | Enables or disables the option to add a new PXE boot to the top of the Boot Sequence.<br><br>By default, the <b>OFF</b> option is disabled.  |
| Force PXE On Next Boot       | Enables or disables the Force PXE feature on the next boot.<br><br>By default, the <b>Force PXE On Next Boot</b> option is disabled.   |
| <b>Secure Boot</b>           |  |
| Enable Secure Boot           | Enable or disable the secure boot feature.<br><br>By default, the <b>OFF</b> option is disabled.   |
| Enable Microsoft UEFI CA     | Enable or disable Microsoft UEFI Certificate Authority.<br><br>By default, the <b>ON</b> option is enabled.<br><br> <b>CAUTION: Disabling Microsoft UEFI CA could render your system being unable to boot. System graphics may not function, some devices may not function properly. The system could become unrecoverable.</b> |
| Secure Boot Mode             | Change the secure boot mode options.<br><br>By default, the <b>Deployed Mode</b> option is enabled.  |
| <b>Expert Key Management</b> |  |
| Enable Custom Mode           | Enable or disable custom mode.<br><br>By default, the <b>OFF</b> option is disabled.   |
| Custom Mode Key Management   | Select the custom values for expert key management.  |

**Table 27. System setup options—Integrated Devices menu**

| Integrated Devices       |  |
|--------------------------|--|
| <b>Date/Time</b>         | Displays the current date in MM/DD/YYYY format and current time in HH:MM:SS AM/PM format.          |
| <b>Enable Audio</b>      | Enable or disable the integrated audio controller.<br><br>By default, all the options are enabled. |
| <b>USB Configuration</b> | Enable or disable booting from USB mass storage devices through the boot sequence or boot menu.    |

**Table 27. System setup options—Integrated Devices menu (continued)**

| Integrated Devices             |  |
|--------------------------------|--|
|                                | By default, all the options are enabled.   |
| <b>Front USB Configuration</b> | Enable or disable the individual front USB ports.<br>By default, all the options are enabled.        |
| <b>Rear USB Configuration</b>  | Enable or disable the individual rear USB ports.<br>By default, all the options are enabled.         |
| <b>Dust Filter Maintenance</b> | Enable or disable the dust filter maintenance.<br>By default, the <b>Disabled</b> option is enabled. |

**Table 28. System setup options—Storage menu**

| Storage                    |  |
|----------------------------|--|
| <b>SATA/NVMe Operation</b> | Enable or disable the operating mode of the integrated SATA hard drive controller.<br>By default, the <b>RAID On</b> option is enabled.                  |
| <b>Storage Interface</b>   |  |
| Port Enablement            | Enable or disable the onboard drives.<br>By default, all the onboard drives are enabled.   |
| <b>M.2 PCIe SSD-0</b>      | Enable or disable the M.2 PCIe SSD-0 solid-state drive.<br>By default, the <b>ON</b> option is enabled.  |
| <b>M.2 PCIe SSD-1</b>      | Enable or disable the M.2 PCIe SSD-1 solid-state drive.<br>By default, the <b>ON</b> option is enabled.  |
| <b>SMART Reporting</b>     |  |
| Enable SMART Reporting     | Enable or disable Self-Monitoring, Analysis, and Reporting Technology (SMART) during computer startup.<br>By default, the <b>OFF</b> option is disabled. |
| <b>Drive Information</b>   |  |
| <b>M.2 PCIe SSD-0</b>      |  |
| Type                       | Displays the M.2 PCIe SSD-0 type information of the computer.  |
| Device                     | Displays the M.2 PCIe SSD-0 device information of the computer.  |
| <b>Drive Information</b>   |  |
| <b>M.2 PCIe SSD-1</b>      |  |
| Type                       | Displays the M.2 PCIe SSD-1 type information of the computer.  |
| Device                     | Displays the M.2 PCIe SSD-1 device information of the computer.  |

**Table 29. System setup options—Display menu**

| Display                 |   |
|-------------------------|---|
| <b>Primary Display</b>  | Determines the primary display when multiple controllers are available on the computer.<br>By default, the <b>Auto</b> option is enabled. |
| <b>Full Screen Logo</b> | Enable or disable full screen logo.<br>By default, the <b>OFF</b> option is disabled.   |

**Table 30. System setup options—Connection menu**

| Connection                              |  |
|---|--|
| <b>Network Controller Configuration</b> |  |
| Integrated NIC                          | Controls the on-board LAN controller.<br>By default, the <b>Enabled with PXE</b> option is selected.   |
| <b>Wireless Device Enable</b>           |  |
| WLAN                                    | Enable or disable the internal WLAN device.<br>By default, the <b>WLAN</b> option is selected.   |
| Bluetooth                               | Enable or disable the internal Bluetooth device.<br>By default, the <b>Bluetooth</b> option is selected.   |
| <b>Enable UEFI Network Stack</b>        |  |
|   | Enable or disable UEFI Network Stack and controls the on-board LAN Controller.<br>By default, the <b>Auto Enabled</b> option is selected.  |
| <b>HTTP(s) Boot Feature</b>             |  |
| HTTP(s) Boot                            | Enable or disable the HTTP(s) Boot feature.<br>By default, the <b>ON</b> option is enabled.  |
| HTTP(s) Boot Mode                       | With Auto Mode, the HTTP(s) Boot extracts Boot URL from the DHCP. With Manual Mode, the HTTP(s) Boot reads Boot URL from the user-provided data.<br>By default, the <b>Auto Mode</b> option is selected. |

**Table 31. System setup options—Power menu**

| Power                     |  |
|---------------------------|--|
| <b>Thermal Management</b> |  |
|                           | Select the heat management settings for the cooling fan and the processor, with respect to system performance, noise, and temperature.<br>By default, the <b>Optimized</b> option is selected.   |
| <b>USB Wake Support</b>   |  |
| Enable USB Wake Support   | When enabled, you can use the USB devices like a mouse or keyboard to wake your computer from standby.<br>By default, the <b>ON</b> option is enabled.   |
| Wake on Dell USB-C Dock   | When enabled, you can use the Dell USB-C dock to wake your computer from standby.<br>By default, the <b>ON</b> option is enabled.  |
| <b>AC Behavior</b>        |  |
| AC Recovery               | Allows you to determine what happens when AC power is restored after an unexpected loss of AC power.<br>By default, the <b>Power Off</b> option is selected.   |
| <b>Block Sleep</b>        |  |
|                           | Enables or disables the computer from entering Sleep (S3) mode in the operating system.<br>By default, the <b>OFF</b> option is disabled.<br><b>NOTE:</b> When enabled, the computer does not go to Sleep, Intel Rapid Start is disabled automatically, and the operating system power option is blank if it was set to Sleep. |
| <b>Deep Sleep Control</b> |  |
|                           | Enable or disable the Deep Sleep mode support.<br>By default, the <b>Enabled in S4 and S5</b> option is selected.  |

**Table 31. System setup options—Power menu (continued)**

| Power                       |   |
|-----------------------------|---|
| <b>Fan Control Override</b> | <p>Enable or disable the fan control override feature.</p> <p>By default, the <b>OFF</b> option is enabled.</p> |

**Table 32. System setup options—Security menu**

| Security  |   |
|---|---|
| <b>TPM 2.0 Security</b>                           |   |
| TPM 2.0 Security On                               | <p>Enable or disable TPM 2.0 security options.</p> <p>By default, the <b>ON</b> option is enabled.</p>  |
| Attestation Enable                                | <p>Enables to control whether the Trusted Platform Module (TPM) Endorsement Hierarchy is available to the operating system.</p> <p>By default, the <b>ON</b> option is enabled.</p>   |
| Key Storage Enable                                | <p>Enables to control whether the Trusted Platform Module (TPM) Storage Hierarchy is available to the operating system.</p> <p>By default, the <b>ON</b> option is enabled.</p>   |
| Clear   | <p>Enables to clear the TPM owner information and returns the TPM to the default state.</p> <p>By default, the <b>OFF</b> option is enabled.</p>  |
| PPI Bypass for Clear Commands                     | <p>Controls the TPM Physical Presence Interface (PPI).</p> <p>By default, the <b>OFF</b> option is enabled.</p>   |
| <b>Intel Total Memory Encryption</b>              |   |
| Multi-Key Total Memory Encryption (Up to 16 keys) | <p>Enable encryption to secure the memory from any physical attacks.</p> <p>By default, the <b>OFF</b> option is enabled.</p>   |
| <b>Chassis intrusion</b>                          |   |
|   | <p>Controls the chassis intrusion feature.</p> <p>By default, the <b>Disabled</b> option is enabled.</p>  |
| <b>Data Wipe on Next Boot</b>                     |   |
| Start Data Wipe                                   | <p>Data Wipe is a secure wipe operation that deletes information from a storage device.</p> <p> <b>CAUTION: The secure Data Wipe operation deletes information in a way that it cannot be reconstructed.</b></p> <p>Commands such as delete and format in the operating system may remove files from showing up in the file system. However, they can be reconstructed through forensic means as they are still represented on the physical media. Data Wipe prevents this reconstruction and is not recoverable.</p> <p>When enabled, the data wipe option will prompt to wipe any storage devices that are connected to the computer on the next boot.</p> <p>By default, the <b>OFF</b> option is disabled.</p> |
| <b>Absolute®</b>                                  |   |
| Absolute®   | <p>Absolute Software provides various cyber security solutions, some requiring software preloaded on Dell computers and integrated into the BIOS. To use these features, you must enable the Absolute BIOS setting and contact Absolute for configuration and activation.</p> <p>By default, the <b>Enable Absolute</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Absolute</b> option enabled.</p>   |

**Table 32. System setup options—Security menu (continued)**

| Security                                     |  |
|--|--|
|  | <p><b>i</b> <b>NOTE:</b> When the Absolute features are activated, the Absolute integration cannot be disabled from the BIOS setup screen.</p>   |
| <b>UEFI Boot Path Security</b>               |  |
| UEFI Boot Path Security                      | <p>Enables or disables the computer to prompt the user to enter the Administrator password (if set) when booting to a UEFI boot path device from the F12 boot menu.</p> <p>By default, the <b>Always Except Internal HDD</b> option is selected.</p> |
| <b>Authenticated BIOS Interface</b>          |  |
| Enable Authenticated BIOS Interface          | <p>Controls the authentication feature in the BIOS interface.</p> <p>By default, the <b>OFF</b> option is enabled.</p>   |
| <b>Legacy Manageability Interface Access</b> |  |
|  | <p>Controls the access to Legacy Manageability Interface when enabled.</p>   |
| <b>Firmware Device Tamper Detection</b>      |  |
| Firmware Device Tamper Detection             | <p>Controls the Firmware Device Tamper Detection.</p> <p>By default, the <b>Silent</b> option is selected.</p>   |
| Clear Firmware Device Tamper Detection       |  |

**Table 33. System setup options—Passwords menu**

| Passwords                     |  |
|-------------------------------|--|
| <b>Admin Password</b>         | Set, change, or delete the administrator password.   |
| <b>System Password</b>        | Set, change, or delete the computer password.  |
| <b>M.2 PCIe SSD-0</b>         | Set, change, or delete the M.2 PCIe SSD-0 password.  |
| <b>Password Configuration</b> | <p>The Password configuration page includes several options for changing the requirements of BIOS passwords. You can modify the minimum and maximum length of the passwords and require passwords to contain certain character classes (upper case, lower case, digit, special character).</p> <p>Dell Technologies recommends setting the minimum password length to at least eight characters.</p> |
| Upper Case Letter             | <p>Reinforces password must have at least one upper case letter.</p> <p>By default, the <b>OFF</b> option is enabled.</p>  |
| Lower Case Letter             | <p>Reinforces password must have at least one lower case letter.</p> <p>By default, the <b>OFF</b> option is enabled.</p>  |
| Digit                         | <p>Reinforces password must have at least one digit.</p> <p>By default, the <b>OFF</b> option is enabled.</p>  |
| Special Character             | <p>Reinforces password must have at least one special character.</p> <p>By default, the <b>OFF</b> option is enabled.</p>  |
| Minimum Characters            | <p>Set the minimum characters allowed for password.</p> <p>By default, the <b>Minimum Characters</b> value is set to 4.</p>  |
| Password Bypass               | <p>When enabled, this always prompts for computer and internal hard drive passwords when powered on from the off state.</p> <p>By default, the <b>Disabled</b> option is enabled.</p>  |
| <b>Password Changes</b>       |  |

**Table 33. System setup options—Passwords menu (continued)**

| <b>Passwords</b>                   |   |
|------------------------------------|---|
| Enable Non-Admin Password Changes  | <p>The <b>Enable Non-Admin Password Changes</b> option in BIOS setup allows an end user to set or change the computer or hard drive passwords without entering the administrator password. This gives an administrator control over the BIOS settings but enables an end user to provide their own password.</p> <p>By default, the <b>ON</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Enable Non-Admin Password Changes</b> option disabled.</p>   |
| <b>Admin Setup Lockout</b>         |   |
| Enable Admin Setup Lockout         | <p>The <b>Enable Admin Setup Lockout</b> option prevents an end user from even viewing the BIOS setup configuration without first entering the administrator password (if set).</p> <p>By default, the <b>OFF</b> option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Enable Admin Setup Lockout</b> option disabled.</p>   |
| <b>Master Password Lockout</b>     |   |
| Enable Master Password Lockout     | <p>The Master Password Lockout setting allows you to disable the Recovery Password feature. If the computer, administrator, or hard drive password is forgotten, the computer becomes unusable.</p> <p><b>NOTE:</b> When the owner password is set, the Master Password Lockout option is not available.</p> <p><b>NOTE:</b> When an internal hard drive password is set, it must first be cleared before Master Password Lockout can be changed.</p> <p>By default, the <b>OFF</b> option is disabled.</p> <p>Dell does not recommend enabling the <b>Master Password Lockout</b> unless you have implemented your own password recovery computer.</p> |
| <b>Allow Non-Admin PSID Revert</b> |   |
| Enable Allow Non-Admin PSID Revert | <p>Controls access to the Physical Security ID (PSID) revert of NVMe hard-drives from the Dell Security Manager prompt.</p> <p>By default, the <b>OFF</b> option is disabled.</p>   |

**Table 34. System setup options—Update, Recovery menu**

| <b>Update, Recovery</b>              |  |
|--------------------------------------|--|
| <b>BIOS Recovery from Hard Drive</b> | <p>Enables or disables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.</p> <p>By default, the <b>ON</b> option is enabled.</p> <p><b>NOTE:</b> BIOS Recovery from Hard Drive is not available for self-encrypting drives (SED).</p> <p><b>NOTE:</b> BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.</p> |
| <b>BIOS Downgrade</b>                |  |
| Allow BIOS Downgrade                 | <p>Controls flashing of the computer firmware to previous revisions.</p> <p>By default, the <b>ON</b> option is enabled.</p>   |
| <b>SupportAssist OS Recovery</b>     | <p>Enables or disables the boot flow for SupportAssist OS Recovery tool in the event of certain computer errors.</p>   |

**Table 34. System setup options—Update, Recovery menu (continued)**

| Update, Recovery                       |   |
|--|---|
| <b>BIOSConnect</b>                     | <p>By default, the <b>ON</b> option is enabled.</p> <p>Enables or disables cloud Service operating system recovery if the main operating system fails to boot with the number of failures equal to or greater than the value specified by the Auto operating system Recovery Threshold setup option and local Service operating system does not boot or is not installed.</p> |
| <b>Dell Auto OS Recovery Threshold</b> | <p>By default, the <b>ON</b> option is enabled.</p> <p>Allows you to control the automatic boot flow for SupportAssist System Resolution Console and for Dell operating system Recovery Tool.</p> <p>By default, the value of <b>2</b> option is selected.</p>  |

**Table 35. System setup options—System Management menu**

| System Management                            |   |
|--|---|
| <b>Service Tag</b>                           | Display the Service Tag of the computer.  |
| <b>Asset Tag</b>                             | <p>Creates a computer Asset Tag that can be used by an IT administrator to uniquely identify a particular computer.</p> <p><b>NOTE:</b> Once set in BIOS, the Asset Tag cannot be changed.</p>  |
| <b>Wake on LAN/WLAN</b>                      | <p>Enables or disables the computer to turn on by special LAN signals.</p> <p>By default, the <b>Disabled</b> option is selected.</p>   |
| <b>Auto On Time</b>                          | <p>Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays, or Selected Days.</p> <p>By default, the <b>Disabled</b> option is selected.</p>   |
| <b>Intel AMT Capability</b>                  | <p>Enable Intel AMT Capability</p> <p>Enable or disable the Intel AMT capability.</p> <p>By default, the <b>Restrict Preboot Access</b> option is selected.</p>   |
| <b>SERR Messages</b>                         | <p>Enable SERR Messages</p> <p>Enable or disable SERR (system error) messages.</p> <p>By default, the <b>ON</b> option is enabled.</p>  |
| <b>First Power On Date</b>                   | <p>Set Ownership Date</p> <p>Set ownership date</p> <p>By default, the <b>OFF</b> option is enabled.</p>  |
| <b>Diagnostics</b>                           | <p>OS Agent Requests</p> <p>Enables OS agent request to schedule onboard diagnostics.</p> <p>By default, the <b>ON</b> option is enabled.</p>   |
| <b>Power-On-Self-Test Automatic Recovery</b> | <p>Power-On-Self-Test Automatic Recovery</p> <p>Enables automatic recovery when the computer becomes unresponsive when performing a BIOS Power-On-Self-Test (POST). If the computer becomes unresponsive before POST is completed, the BIOS will automatically attempt to recover the computer. In some cases, this may include resetting the BIOS Setup configuration settings to BIOS default values, and unprovisioning the Intel AMT vPro feature, if applicable.</p> <p>By default, the <b>ON</b> option is enabled.</p> |

**Table 36. System setup options—Keyboard menu**

| Keyboard                                  |   |
|---|---|
| <b>Numlock LED</b>                        |   |
| Enable Numlock LED                        | Enable or disable Numlock LED.<br>By default, the <b>ON</b> option is enabled.  |
| <b>Device Configuration Hotkey Access</b> |   |
| Device Configuration Hotkey Access        | Allows you to control whether you can access device configuration screens through hotkeys during computer startup.<br>By default, the <b>Enabled</b> option is selected.<br><b>NOTE:</b> This setting controls only the Intel RAID (CTRL+I), MEBX (CTRL+P), and LSI RAID (CTRL+C) Option ROMs. Other preboot Option ROMs, which support entry using a key sequence, are not affected by this setting. |

**Table 37. System setup options—Pre-boot Behavior menu**

| Pre-boot Behavior              |   |
|--------------------------------|---|
| <b>Adapter Warnings</b>        |   |
| <b>Enable Adapter Warnings</b> | Enables the warning messages during boot when the adapters with less power capacity are detected.<br>By default, the <b>ON</b> option is enabled.   |
| <b>Warning and Errors</b>      | Enables or disables the action to be taken when a warning or error is encountered.<br>By default, the <b>Prompt on Warnings and Errors</b> option is selected. Stop, prompt, and wait for user input when warnings or errors are detected.<br><b>NOTE:</b> Errors deemed critical to the operation of the computer hardware stop the functioning of the computer. |
| <b>USB-C Warnings</b>          |   |
| Enable Dock Warning Messages   | Enables or disables the dock warning messages.<br>By default, the <b>ON</b> option is enabled.  |
| <b>Extend BIOS POST Time</b>   | Sets the BIOS POST (Power-On Self-Test) load time.<br>By default, the <b>0 seconds</b> option is selected.  |

**Table 38. System setup options—Virtualization menu**

| Virtualization                                   |  |
|--|--|
| <b>Intel® Trusted Execution Technology (TXT)</b> | Intel Trusted Execution Technology (TXT) is a set of hardware extensions to Intel processors and chipsets. It provides a hardware-based root of trust to ensure that a platform boots with a known good configuration of firmware, BIOS, virtual machine monitor, and operating system. The following must be enabled in order to enable Intel TXT - <ul style="list-style-type: none"> <li>• Intel Virtualization Technology - X</li> <li>• Intel Virtualization Technology - Direct</li> </ul> |
| Enable Intel Trusted Execution Technology (TXT)  | By default, the <b>OFF</b> option is enabled.<br>For additional security, Dell Technologies recommends enabling the <b>Intel Trusted Execution Technology (TXT)</b> feature.   |
| <b>DMA Protection</b>                            |  |

**Table 38. System setup options—Virtualization menu (continued)**

| Virtualization                       |  |
|--------------------------------------|--|
| Enable Pre-Boot DMA support.         | <p>Allows you to control the Pre-Boot DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system.</p> <p><b>i</b> <b>NOTE:</b> This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the <b>ON</b> option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the <b>Enable Pre-Boot DMA Support</b> option enabled.</p> <p><b>i</b> <b>NOTE:</b> This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p>         |
| Enable OS Kernel DMA support         | <p>Allows you to control the Kernel DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. For operating systems that support DMA protection, this setting indicates to the operating system that the BIOS supports the feature.</p> <p><b>i</b> <b>NOTE:</b> This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the <b>ON</b> option is enabled.</p> <p><b>i</b> <b>NOTE:</b> This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p> |
| Internal Port DMA Compatibility Mode | <p>Allows you to control the OS's ability to notify if the internal ports are DMA capable.</p> <p>By default, the <b>OFF</b> option is enabled.</p>  |

**Table 39. System setup options—Performance menu**

| Performance   |   |
|---|---|
| <p><b>Intel® SpeedStep</b></p> <p>Enable Intel® SpeedStep Technology</p>  | <p>Enables the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production.</p> <p>By default, the <b>ON</b> option is enabled.</p> |
| <p><b>PCIe Resizable Base Address Register (BAR)</b></p> <p>Enable PCIe Resizable Base Address Register (BAR) support</p> | <p>Enable or disable PCIe Resizable BAR in the processor.</p> <p>By default, the <b>OFF</b> option is disabled.</p>   |

**Table 40. System setup options—System Logs menu**

| System Logs  |   |
|--|---|
| <p><b>BIOS Event Log</b></p> <p>Clear Bios Event Log</p>   | <p>Allows you to select option to keep or clear BIOS events logs.</p> <p>By default, the <b>Keep Log</b> option is selected.</p>  |
| <p><b>Power Event Log</b></p> <p>Clear Power Event Log</p> | <p>Allows you to select option to keep or clear Power events logs.</p> <p>By default, the <b>Keep Log</b> option is selected.</p> |

# Updating the BIOS

## Updating the BIOS in Windows

### About this task

**CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer [Updating the BIOS on Dell systems with BitLocker enabled](#).

**CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

### Steps

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.
  - NOTE:** If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, navigate to the folder where the BIOS update file has been saved.
8. Double-click the BIOS update file and follow the on-screen instructions.  
For more information, search [Dell Support Site](#).

## Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see [How to Update the Dell BIOS in the Ubuntu or Linux Environment](#) at [Dell Support Site](#).

## Updating the BIOS using the USB drive in Windows

### About this task

**CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer [Updating the BIOS on Dell systems with BitLocker enabled](#).

**CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

### Steps

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.

**NOTE:** If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.

3. Click **Drivers & Downloads**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. Create a bootable USB drive. For more information, search [Dell Support Site](#).
8. Copy the BIOS setup program file to the bootable USB drive.
9. Connect the bootable USB drive to the computer that needs the BIOS update.
10. Restart the computer and press **F12**.
11. Select the USB drive from the **One Time Boot Menu**.
12. Type the BIOS setup program filename and press **Enter**.  
The **BIOS Update Utility** appears.
13. Follow the on-screen instructions to complete the BIOS update.

## Updating the BIOS from the One-Time boot menu

To update the BIOS from the One-Time boot menu, see [Updating the BIOS from the One Time Boot Menu](#) at [Dell Support Site](#).

## System and setup password

**CAUTION:** The password features provide a basic level of security for the data on your computer.

**CAUTION:** Ensure that your computer is locked when it is not in use. Anyone can access the data that is stored on your computer, when left unattended.

**Table 41. System and setup password**

| Password type   | Description   |
|-----------------|---|
| System password | Password that you must enter to boot to your operating system.                        |
| Setup password  | Password that you must enter to access and change the BIOS settings of your computer. |

You can create a system password and a setup password to secure your computer.

**NOTE:** The System and setup password feature is disabled by default.

## Assigning a System Setup password

### Prerequisites

You can assign a new System or Admin Password only when the status is set to **Not Set**. To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
2. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.  
The **Security** screen is displayed.
3. Select **System/Admin Password** and create a password in the **Enter the new password** field.  
Use the following guidelines to create the system password:

- Password can be up to 32 characters.
  - Password must contain at least one special character: "( ! " # \$ % & ' \* + , - . / : ; < = > ? @ [ \ ] ^ \_ ` { | } )"
  - The password can contain numbers from 0 to 9.
  - The password can contain alphabets A to Z and a to z.
4. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
  5. Press Y to save the changes.  
The computer restarts.

## Deleting or changing an existing system password or setup password

### Prerequisites

Ensure that the **Password Status** is Unlocked in the System Setup before attempting to delete or change the existing system password and/or setup password. You cannot delete or change an existing system password or setup password if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
2. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.  
The **System Security** screen is displayed.
3. In the **System Security** screen, verify that the **Password Status** is Unlocked.
4. Select **System Password**. Update or delete the existing system password, and press Enter or Tab.
5. Select **Setup Password**. Update or delete the existing setup password, and press Enter or Tab.
  -  **NOTE:** If you change the system password and/or setup password, reenter the new password when prompted. If you delete the system password and/or setup password, confirm the deletion when prompted.
6. Press Esc. A message prompts you to save the changes.
7. Press Y to save the changes and exit from **System Setup**.  
The computer restarts.

## Clearing CMOS settings

### About this task

 **CAUTION:** Clearing CMOS settings resets the BIOS settings on your computer.

### Steps

1. Remove the [side cover](#).
2. Remove the [coin-cell battery](#).
3. Wait for one minute.
4. Replace the [coin-cell battery](#).
5. Replace the [side cover](#).

## Clearing system and setup passwords

### About this task

To clear the system or setup passwords, contact Dell technical support as described at [Contact Support](#).

 **NOTE:** For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.

# Troubleshooting

## Dell SupportAssist Pre-boot System Performance Check diagnostics

### About this task

SupportAssist diagnostics (also known as system diagnostics) performs a complete check of your hardware. The Dell SupportAssist Pre-boot System Performance Check diagnostics is embedded within the BIOS and launched by the BIOS internally. The embedded system diagnostics provides options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode.
- Repeat the tests.
- Display or save test results.
- Run thorough tests to add more options and obtain details about any failed devices.
- View status messages that inform you when the tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

 **NOTE:** Some tests for specific devices require user interaction. Always ensure that you are present at the computer when the diagnostic tests are performed.

For more information, see [How to Run Dell Preboot Diagnostics and Hardware Tests on Your Dell Computer](#).

## Running the SupportAssist Pre-Boot System Performance Check

### Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key.
3. On the boot menu screen, select **Diagnostics**.  
The diagnostic quick test begins.

 **NOTE:** For more information about running the SupportAssist Pre-Boot System Performance Check on a specific device, see [Dell Support Site](#).

4. If there are any issues, error codes are displayed.  
Note the error code and validation number and contact Dell.

## Power-Supply Unit Built-in Self-Test

Built-in Self-Test (BIST) helps determine if the power-supply unit is working. To run self-test diagnostics on the power-supply unit of a desktop or all-in-one computer, search in the Knowledge Base Resource at [Dell Support Site](#).

## System-diagnostic lights

This section lists the system-diagnostic lights of your Dell Pro Micro QCM1250.

The following table shows different Service LED blinking patterns and associated problems. The diagnostic light codes consist of a two-digit number, and the digits are separated by a comma. The number stands for a blinking pattern; the first digit shows the number of blinks in amber color, and the second digit shows the number of blinks in white color. The Service LED blinks in the following manner:

- The Service LED blinks the number of times equal to the value of the first digit and turns off with a short pause.
- After that, the Service LED blinks the number of times equal to the value of the second digit.

- The Service LED turns off again with a longer pause.
- After the second pause, the blinking pattern will be repeated.

**Table 42. Diagnostic light codes**

| <b>Diagnostic light codes<br/>(Amber, White)</b> | <b>Problem description</b>                           |
|--|--|
| <b>1,1</b>                                       | TPM Detection Failure                                |
| <b>1,2</b>                                       | Unrecoverable SPI Flash Failure                      |
| <b>1,5</b>                                       | EC unable to program i-Fuse                          |
| <b>1,6</b>                                       | Generic catch-all for ungraceful EC code flow errors |
| <b>1,7</b>                                       | Non-RPMC Flash on Boot Guard fused system            |
| <b>2,1</b>                                       | CPU configuration or CPU failure                     |
| <b>2,2</b>                                       | System board: BIOS or Read-Only Memory (ROM) failure |
| <b>2,3</b>                                       | No memory or Random-Access Memory (RAM) detected     |
| <b>2,4</b>                                       | Memory or Random-Access Memory (RAM) failure         |
| <b>2,5</b>                                       | Invalid memory installed                             |
| <b>2,6</b>                                       | System board/Chipset Error                           |
| <b>2,7</b>                                       | LCD failure SBIOS message                            |
| <b>2,8</b>                                       | Display power-rail failure on the system board       |
| <b>3,1</b>                                       | CMOS battery failure                                 |
| <b>3,2</b>                                       | PCI of Video card/chip failure                       |
| <b>3,3</b>                                       | Recovery image not found                             |
| <b>3,4</b>                                       | Recovery image found but invalid                     |
| <b>3,5</b>                                       | EC power-rail error                                  |
| <b>3,6</b>                                       | Flash corruption detected by SBIOS                   |
| <b>3,7</b>                                       | Timeout waiting on ME to reply to HECI message       |
| <b>4,1</b>                                       | Memory DIMM power rail failure                       |
| <b>4,2</b>                                       | CPU Power cable connection issue                     |

## Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a stand-alone tool that is preinstalled on Dell computers running the Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, and restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into the primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at [Serviceability Tools at the Dell Support Site](#). Click **SupportAssist** and then click **SupportAssist OS Recovery**.

**NOTE:** Windows 11 IoT Enterprise LTSC 2024 and Dell ThinOS 10 do not support Dell SupportAssist. For more information about recovering ThinOS 10, see [Recovery mode using R-Key](#).

## Real-Time Clock—RTC reset

The Real-Time Clock (RTC) reset function allows you or the service technician to recover the recently launched model Dell Pro and Pro Max computers from **No POST/No Boot/No Power** situations. You can initiate the RTC reset on the computer from a power-off state only if it is connected to AC power. Press and hold the power button for 25 seconds. The system RTC reset occurs after you release the power button.

**NOTE:** If AC power is disconnected from the computer during the process or the power button is held longer than 40 seconds, the RTC reset process gets aborted.

The RTC reset will reset the BIOS to its default settings, disable Intel vPro, and reset the computer date and time. The following items are not affected by the RTC reset:

- Service Tag
- Asset Tag
- Ownership Tag
- Admin Password
- System Password
- Storage Password
- Key Databases
- System Logs

**NOTE:** The IT administrator's vPro account and password on the computer will be unprovisioned. The computer must go through the setup and configuration process again to reconnect it to the vPro server.

The below items may or may not be reset based on your custom BIOS setting selections:

- Boot List
- Enable Legacy Option ROMs
- Secure Boot Enable
- Allow BIOS Downgrade

## Backup media and recovery options

It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell provides multiple options for recovering the Windows operating system on your Dell computer. For more information, see [Dell Windows Backup Media and Recovery Options](#).

## Network power cycle

### About this task

If your computer is unable to access the Internet due to network connectivity issues, reset your network devices by performing the following steps:

### Steps

1. Turn off the computer.
2. Turn off the modem.

**NOTE:** Some Internet service providers (ISPs) provide a modem and router combo device.

3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on the computer.

# Getting help and contacting Dell

## Self-help resources

You can get information and help on Dell products and services using these self-help resources:

**Table 43. Self-help resources**

| Self-help resources  | Resource location   |
|--|---|
| Information about Dell products and services   | <a href="#">Dell Site</a>   |
| Tips   |    |
| Contact Support  | In Windows search, type <code>Contact Support</code> , and press Enter.   |
| Online help for operating system   | <a href="#">Windows Support Site</a><br><a href="#">Linux Support Site</a>  |
| Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents. | Your Dell computer is uniquely identified using a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at <a href="#">Dell Support Site</a> .<br><br>For more information about how to find the Service Tag for your computer, see <a href="#">Locate the Service Tag on your computer</a> . |
| Dell knowledge base articles   | <ol style="list-style-type: none"> <li>1. Go to <a href="#">Dell Support Site</a>.</li> <li>2. On the menu bar at the top of the Support page, select <b>Support &gt; Support Library</b>.</li> <li>3. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.</li> </ol>      |

## Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Contact Support at Dell Support Site](#).

 **NOTE:** Availability of the services may vary depending on the country or region, and product.

 **NOTE:** If you do not have an active Internet connection, you can find contact information in your purchase invoice, packing slip, bill, or Dell product catalog.

## Revision history

Tracks all updates that are made to the document. It typically includes the date of change, version number, and a brief description of the modification. This log helps maintain transparency, accountability, and a clear timeline of progress.

**Table 44. Revision history**

| Revision | Date       | Description  |
|----------|------------|--|
| A00      | March 2025 | Original publish date  |
| A01      | July 2025  | <ul style="list-style-type: none"><li>• Updated title of Views topic</li><li>• Added TMDS attribute for onboard HDMI ports</li><li>• Updated NOTES in SSD replacement topics</li></ul> |