 


MVC S98-C5U

 
Requirements

- A display connected to MCore 4 (not included).
- A Microsoft Teams Rooms account (not included).
- Wired network environment (not included).

Package Contents

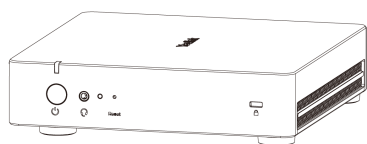


MCore 4 Package

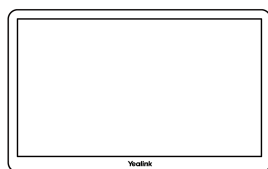

MTouch Plus Package



 
BYOD-Extender Package

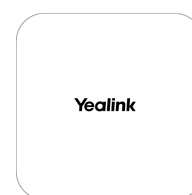

RCH40 E2 Package



 AVHub Package

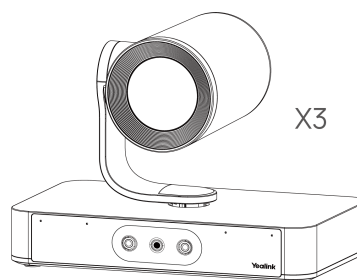

SmartVision 80 Package



RoomSensor Package

 
- MCore 4 package details see [MCore 4 Installation](#).
- MTouch Plus package details see [MTouch Plus Installation](#).
- BYOD-Extender package details see [BYOD-Extender Installation](#).
- RCH40 E2 package details are the same as RCH40, see [RCH40 Installation](#).
- AVHub package details see [AVHub Installation](#).
- SmartVision 80 package details see [SmartVision 80 Installation](#).
- RoomSensor package details see [RoomSensor Installation](#).

Install MVC S98-C5U

- **MCore 4** supports: mount on the wall, mount on the TV, put on a table.
- **MTouch Plus** supports: put on a table, paste on a table, fixed on a table, mount on the wall.
- **RCH40 E2** supports: put on the table, stick under the table, stick on the side of the table.
- **AVHub** supports: mount on the wall, stick under the table, put on the desk, mount on the rack.

- **SmartVision 80** supports: put on a flat surface, mount on top of a display, mount on the wall, mount on the ceiling, mount on the TV mount.
- **RoomSensor** supports: mount on the ceiling, mount on the wall.

Connect MVC S98-C5U

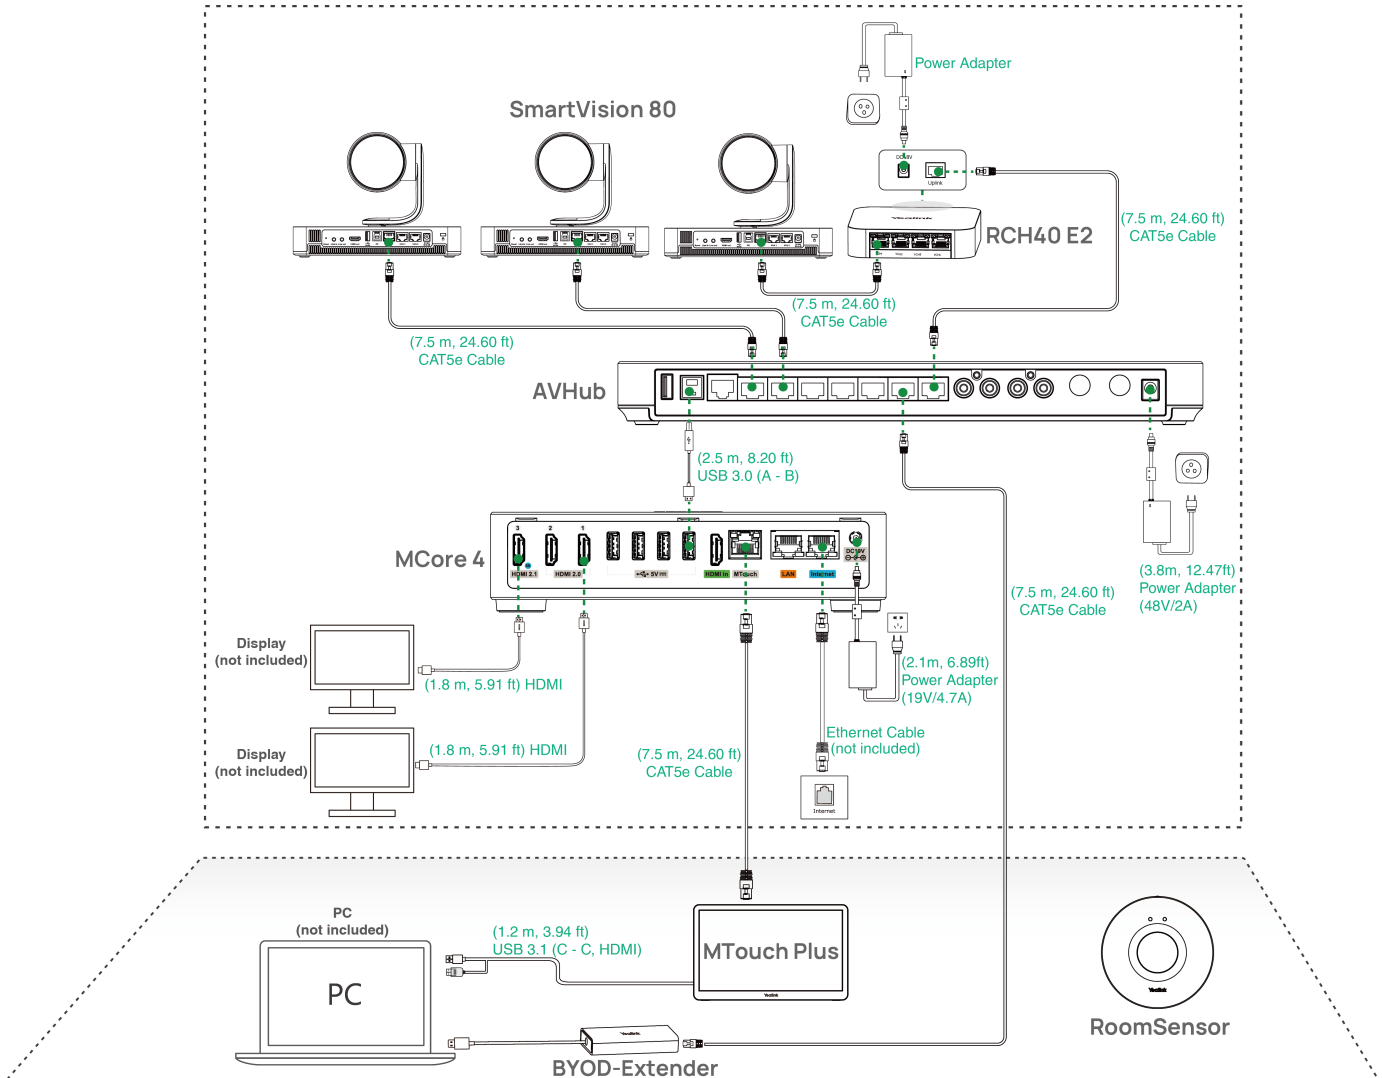

NOTE

- **SmartVision 80** connects to **AVHub** or **RCH40 E2** via the LAN port.
- When starting up the system for the first time, you need to connect a mouse to complete the initial configuration. We recommend using the wireless mouse and keyboard kit.
- Not included accessories requirements:
 - **Display:** Resolution of 1080p or higher and with an HDMI port.
 - **PC:** Equipped with HDMI or USB-C (support DP protocol) Port.
 - **PoE switch:** If you use PoE to connect speakers or cameras, you need to use PoE+.
 - **Ethernet cable:** CAT5e or higher Ethernet cable.

Supported Accessories

For the compatible devices and the maximum number of compatible devices, please refer to [Teams Room Accessories Compatibility Lists](#).

Initial Setup

When the hardware deployment and connections are completed, you need to set up your Microsoft Teams Room System (MVC) system. Please refer to [Quick Setup](#) for more details.

Features

Wireless Sharing

1. Connect the Wireless Presentation Pod to the USB port of the MTouch Plus. When pairing, the LED indicator of Wireless Presentation Pod is orange. When the pairing is successful, the LED indicator turns green breathing light.
2. Connect the paired Wireless Presentation Pod to the USB-A/USB-C port on your PC.
3. On the Wireless Presentation Pod, press the presentation button to share the full screen.

Pair with a RoomSensor

1. Switch the account from Microsoft Teams to Admin.
2. Open Yealink RoomConnect Software.
3. Go to **MTouch Plus > Device Status > Sensor**.
4. Select **Add** and follow the on-screen instructions to pair.

NOTE

- An MTouch Plus can be paired with only one RoomSensor.
- The distance between the MTouch Plus and RoomSensor must be within 20m.