



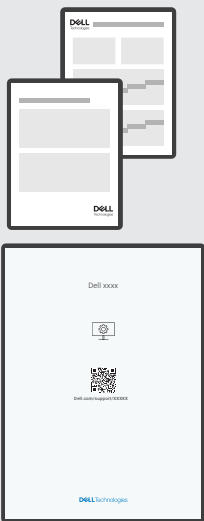
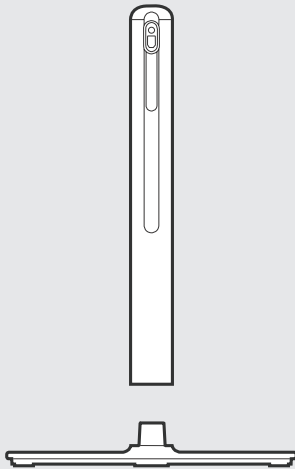


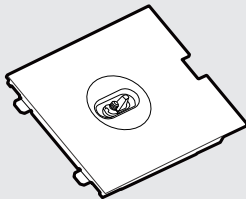



Moniteur Dell 24/27 Plus  
S2425HSM/S2725HSM  
Guide de démarrage rapide

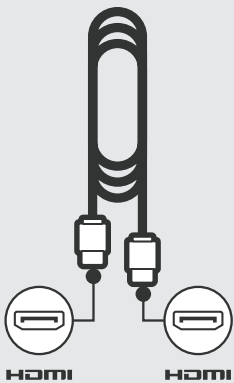


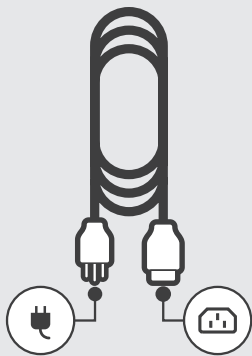


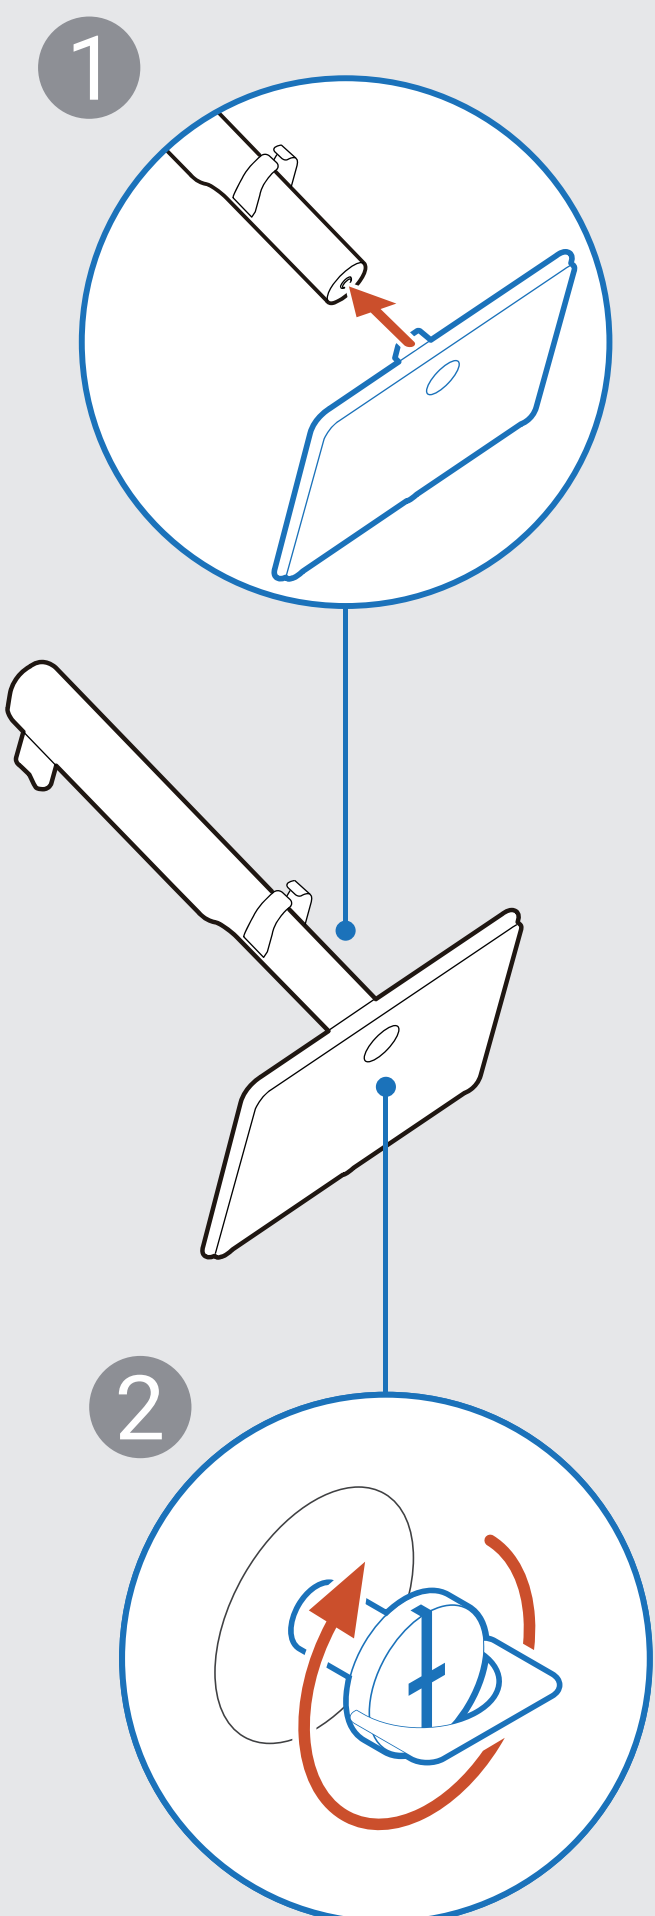


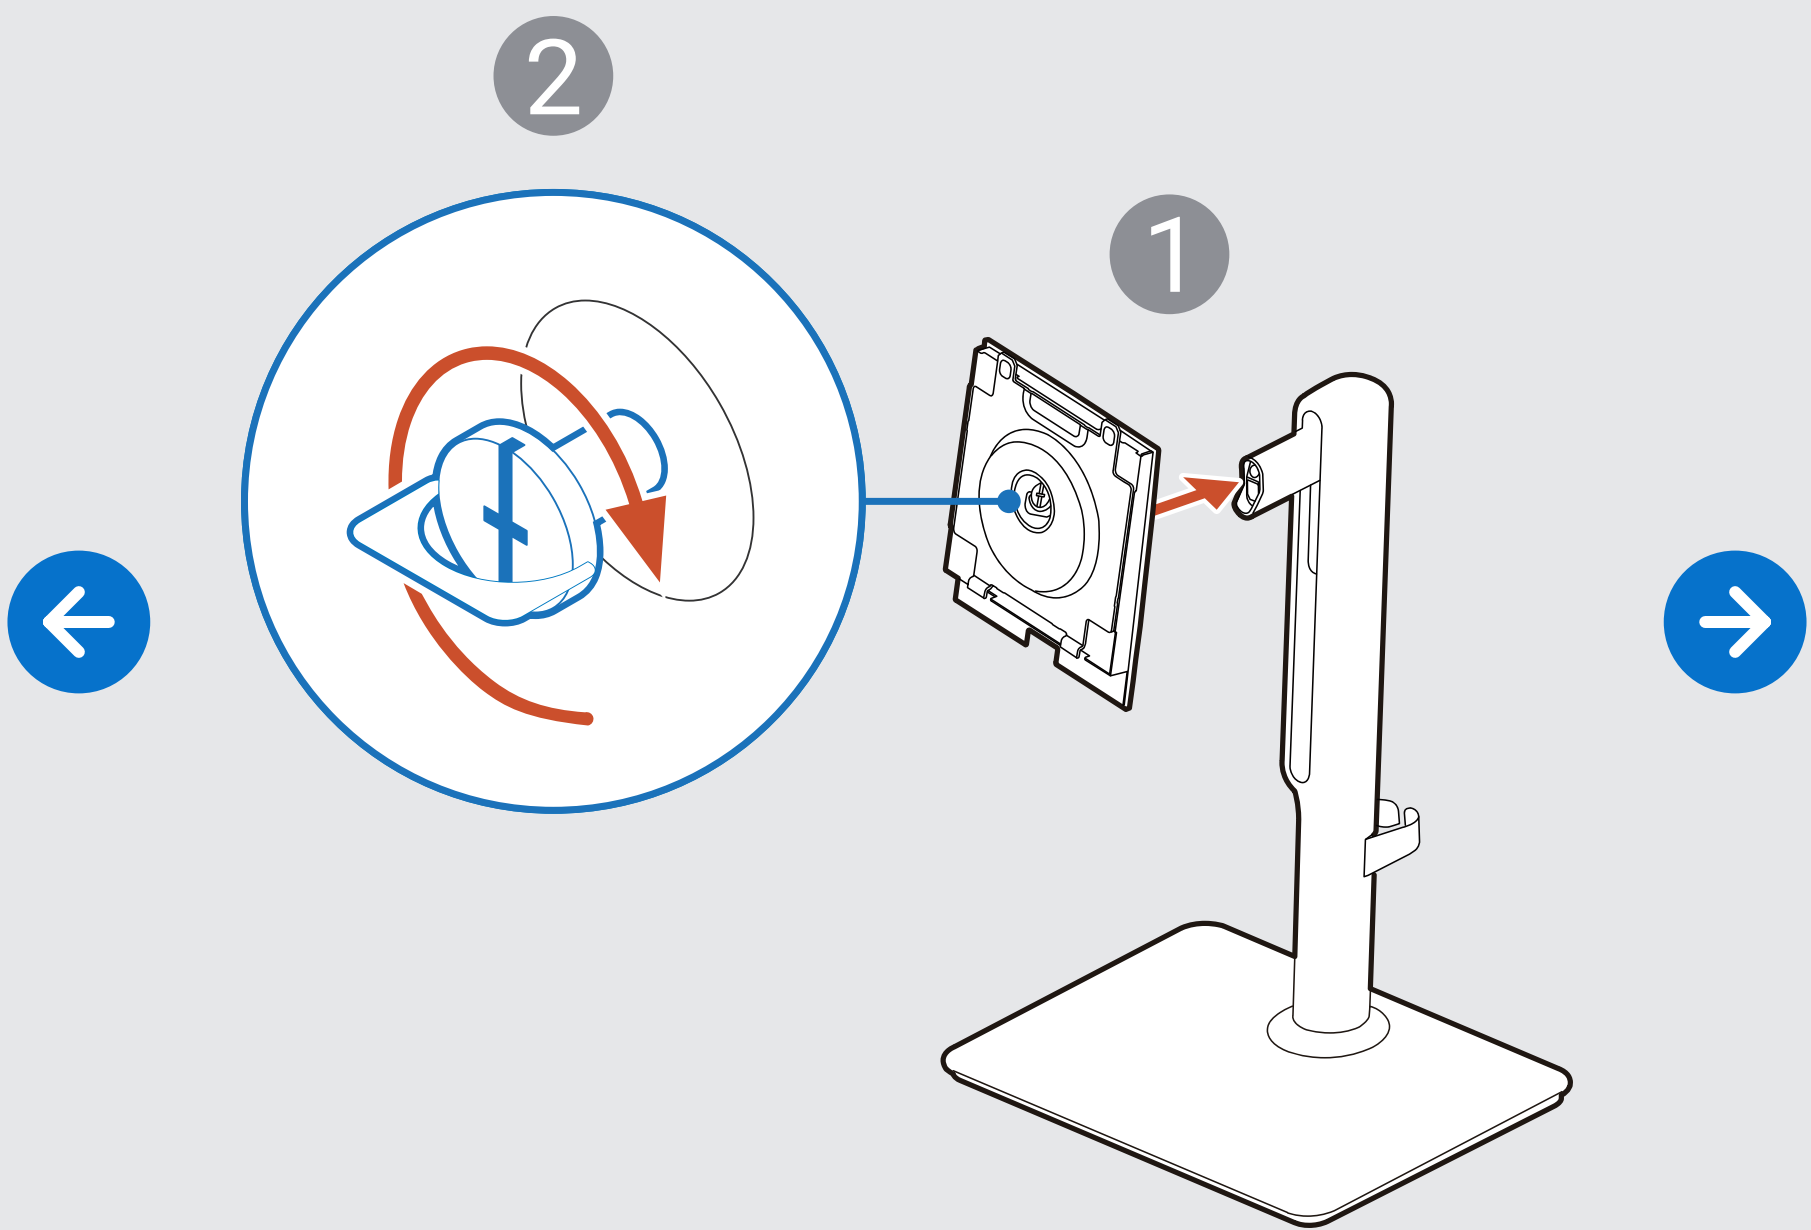


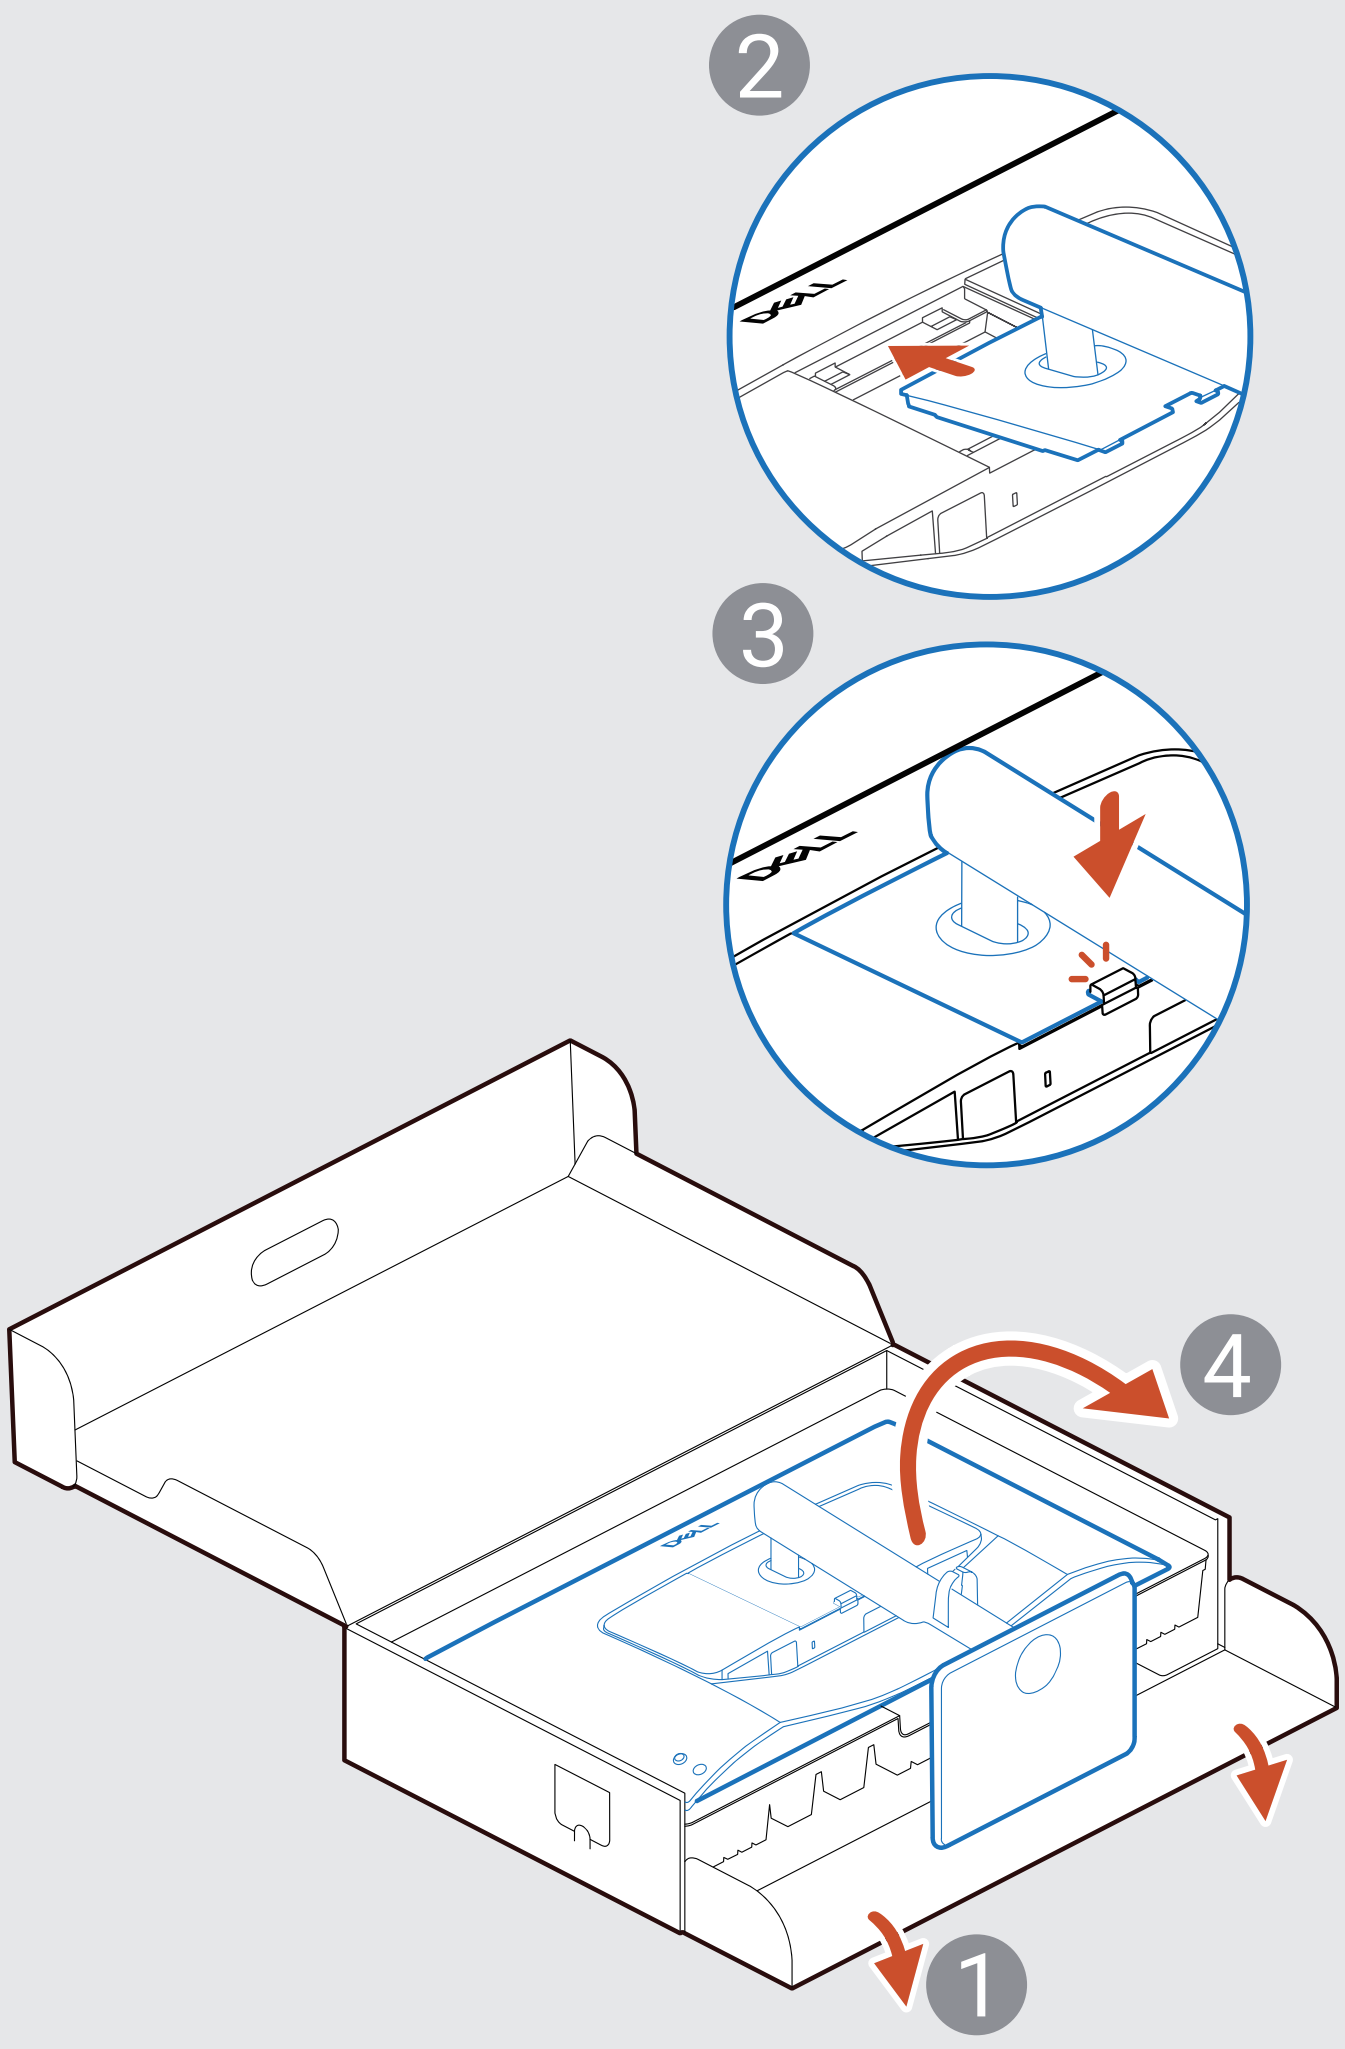


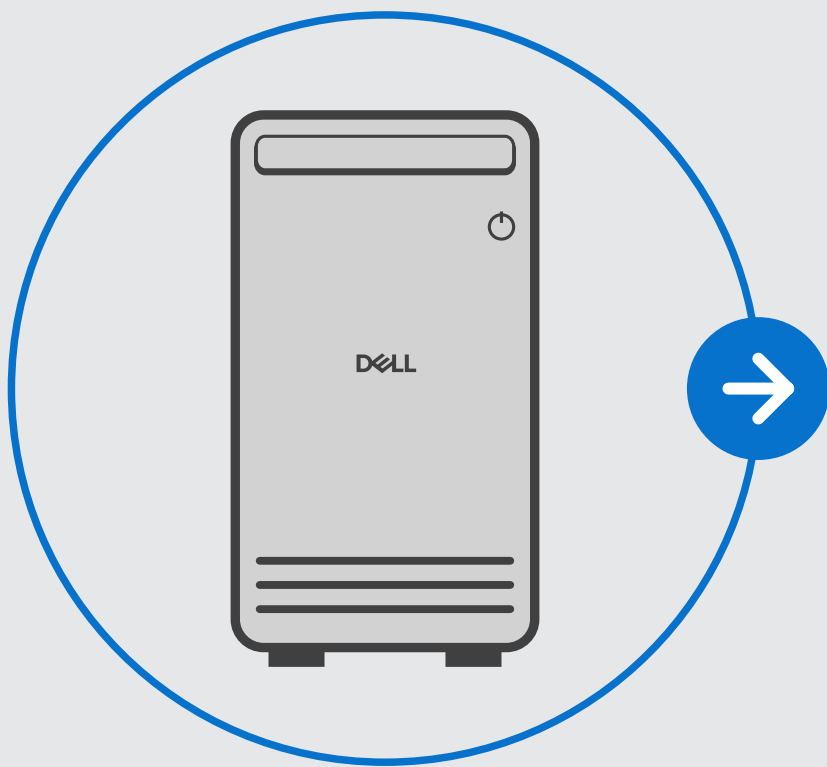

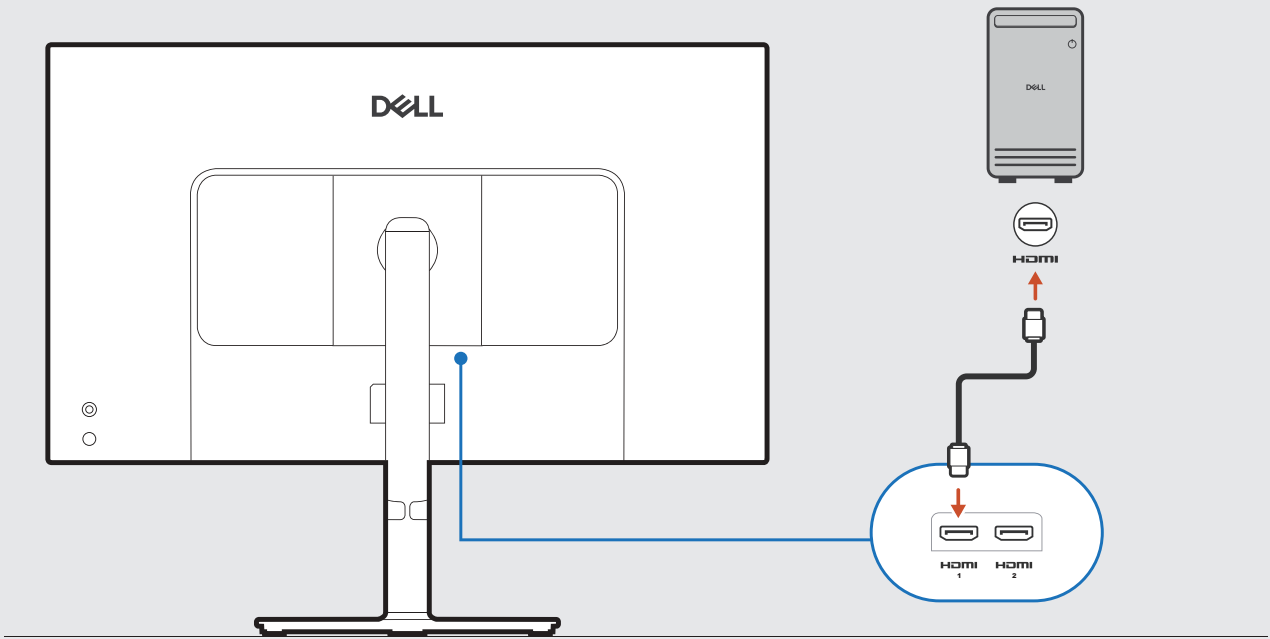


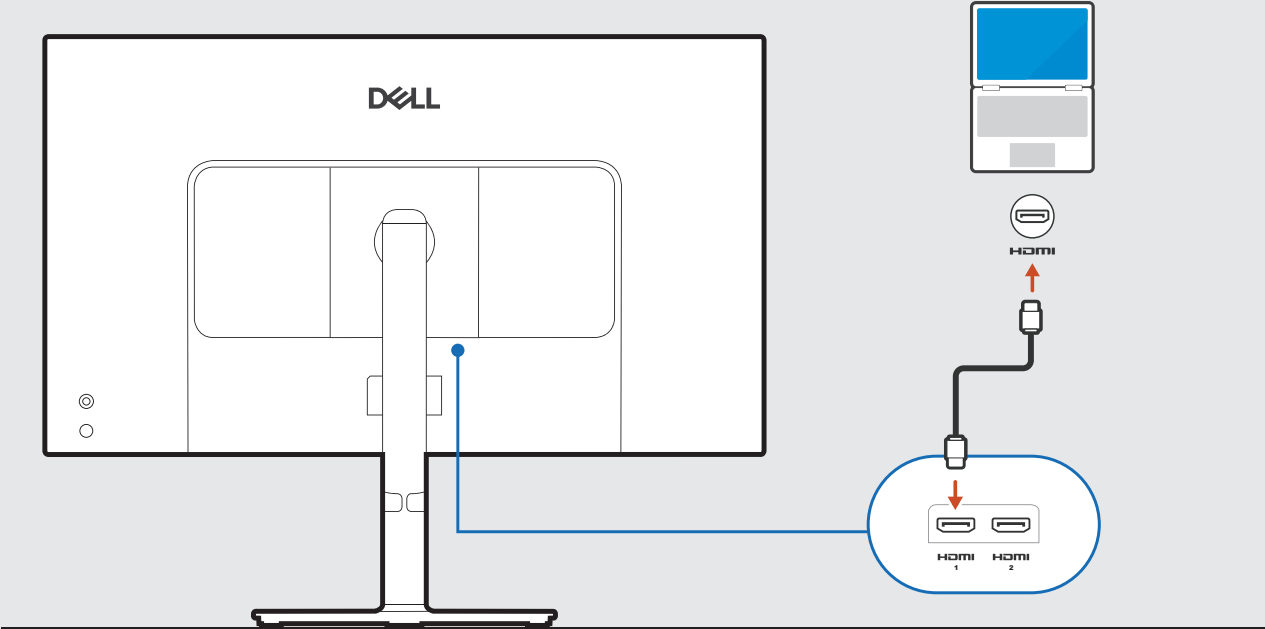

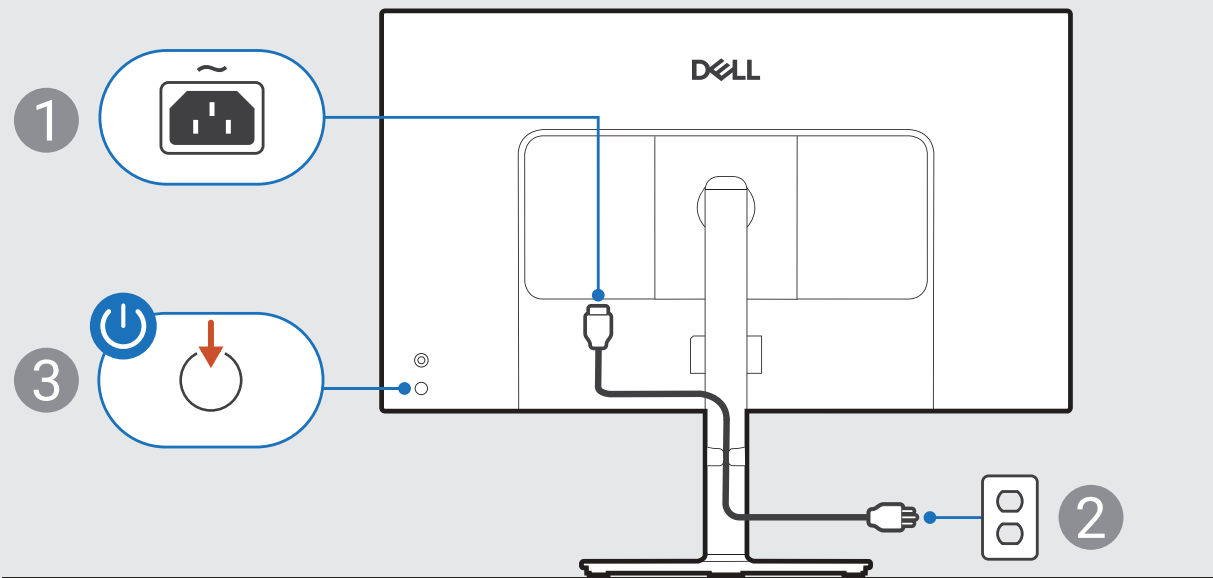


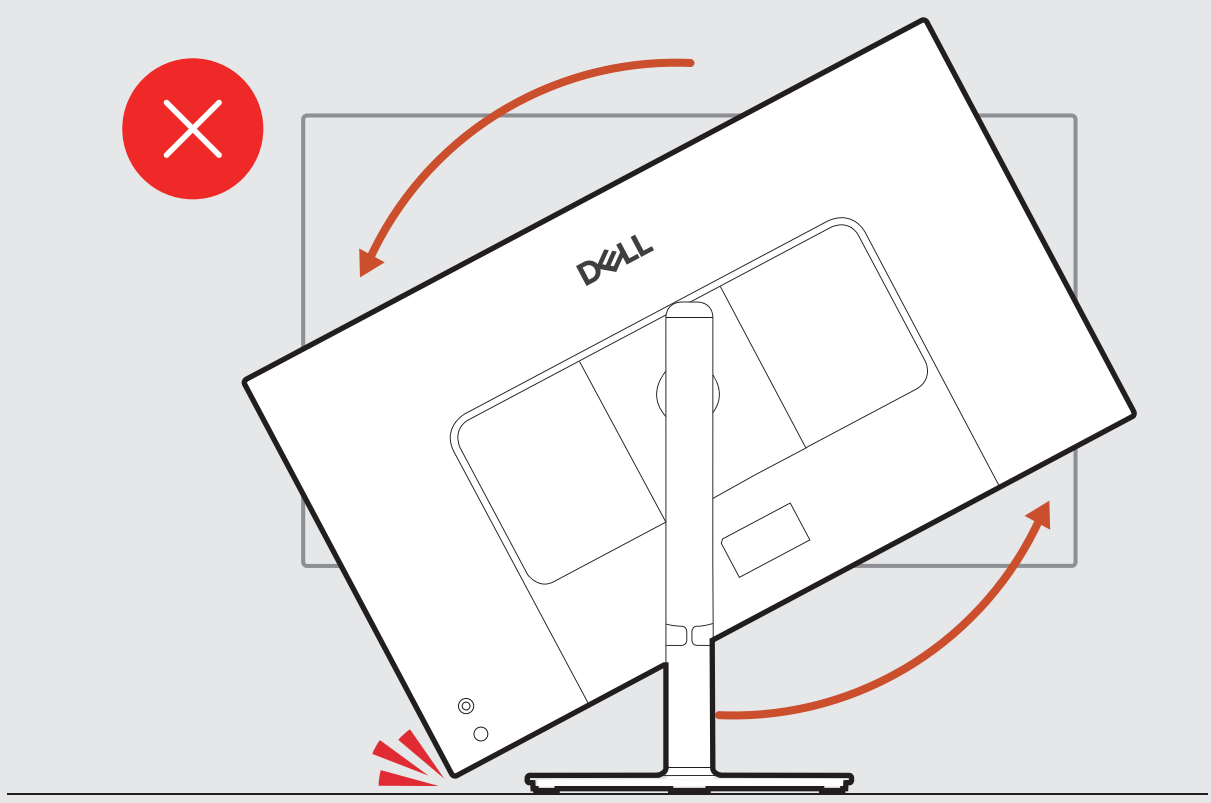


1

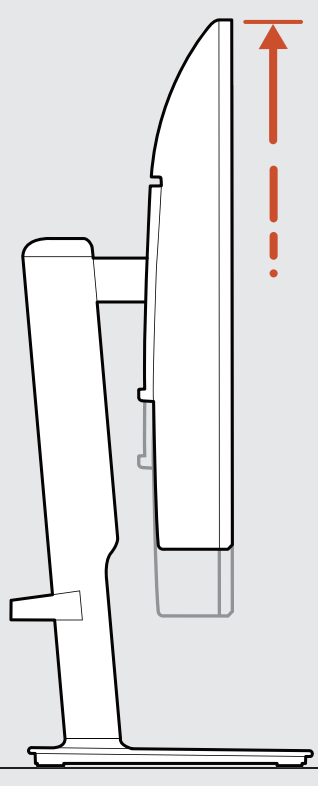


2

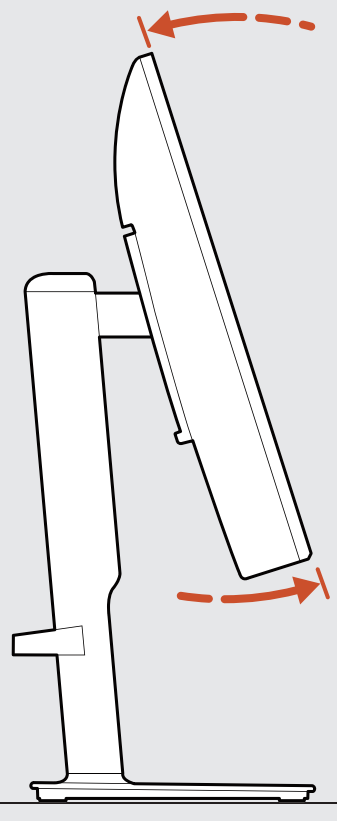


3

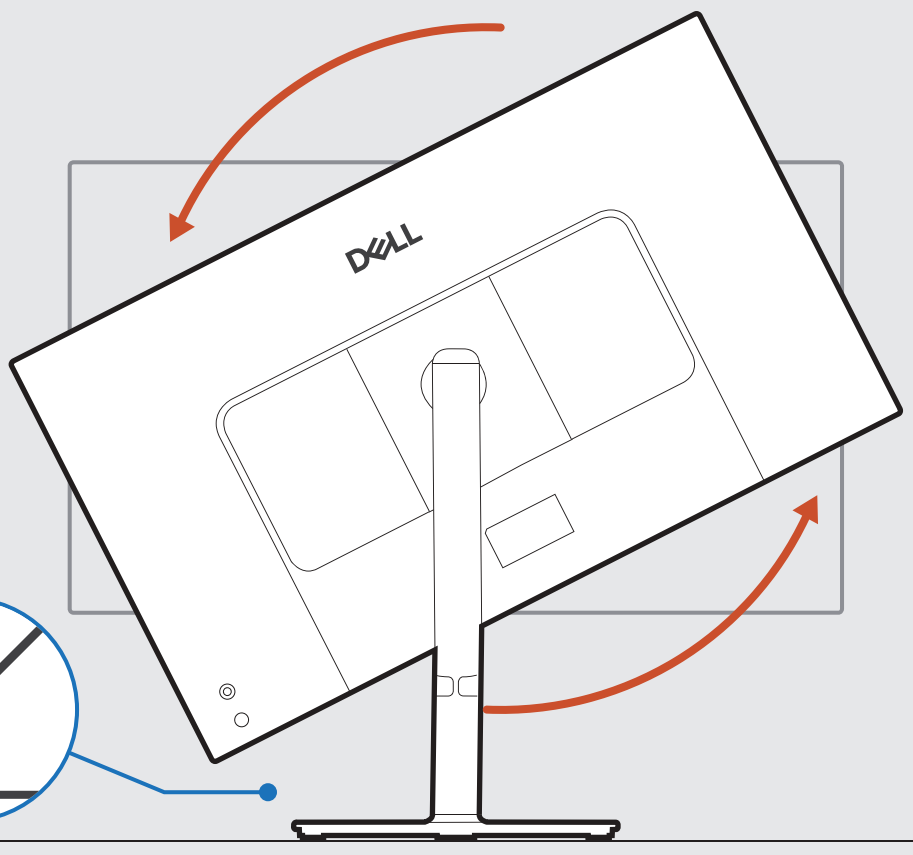

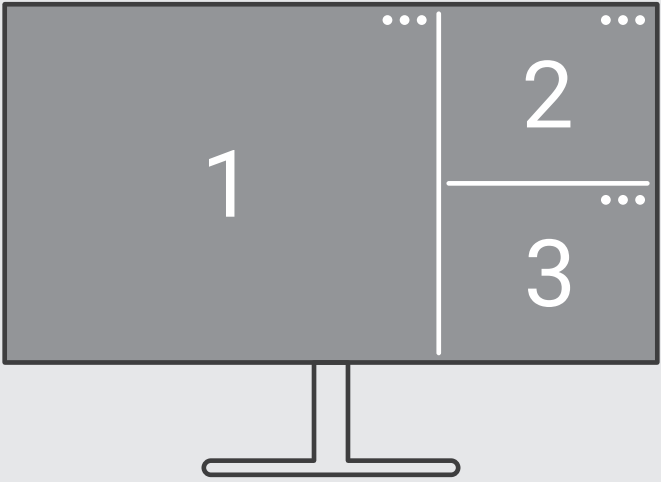

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://dell.com/support/ddpm)

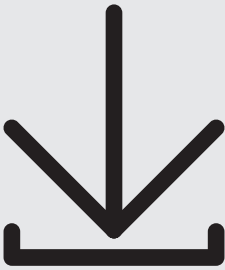

[Dell.com/support/S2425HSM](https://dell.com/support/S2425HSM)  
[Dell.com/support/S2725HSM](https://dell.com/support/S2725HSM)