



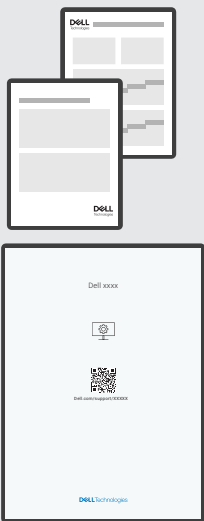
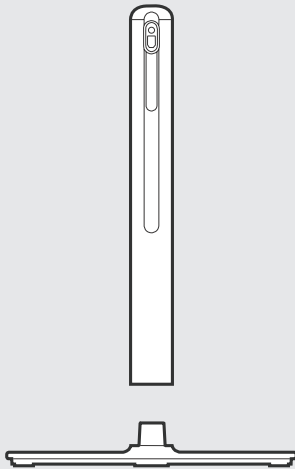


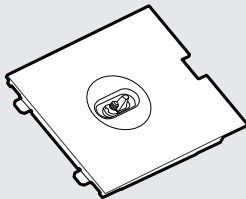



Moniteur Dell 24/27 Plus
S2425HSM/S2725HSM
Guide de démarrage rapide

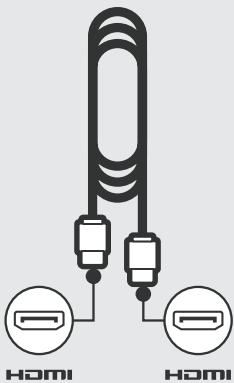


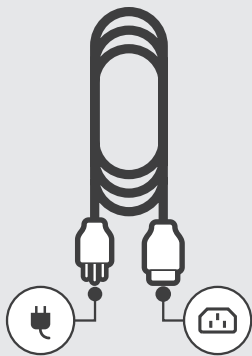


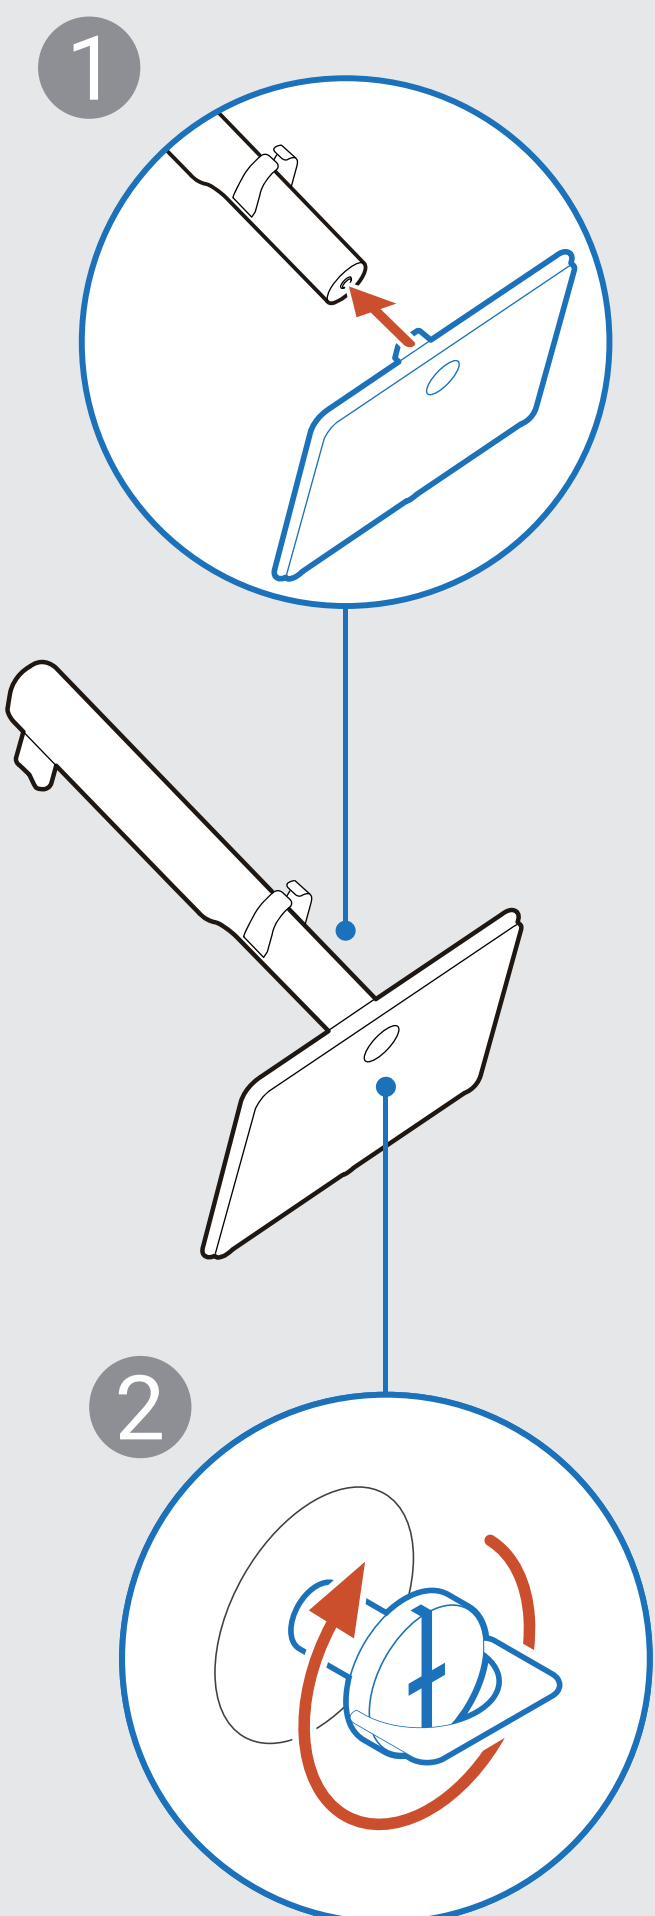


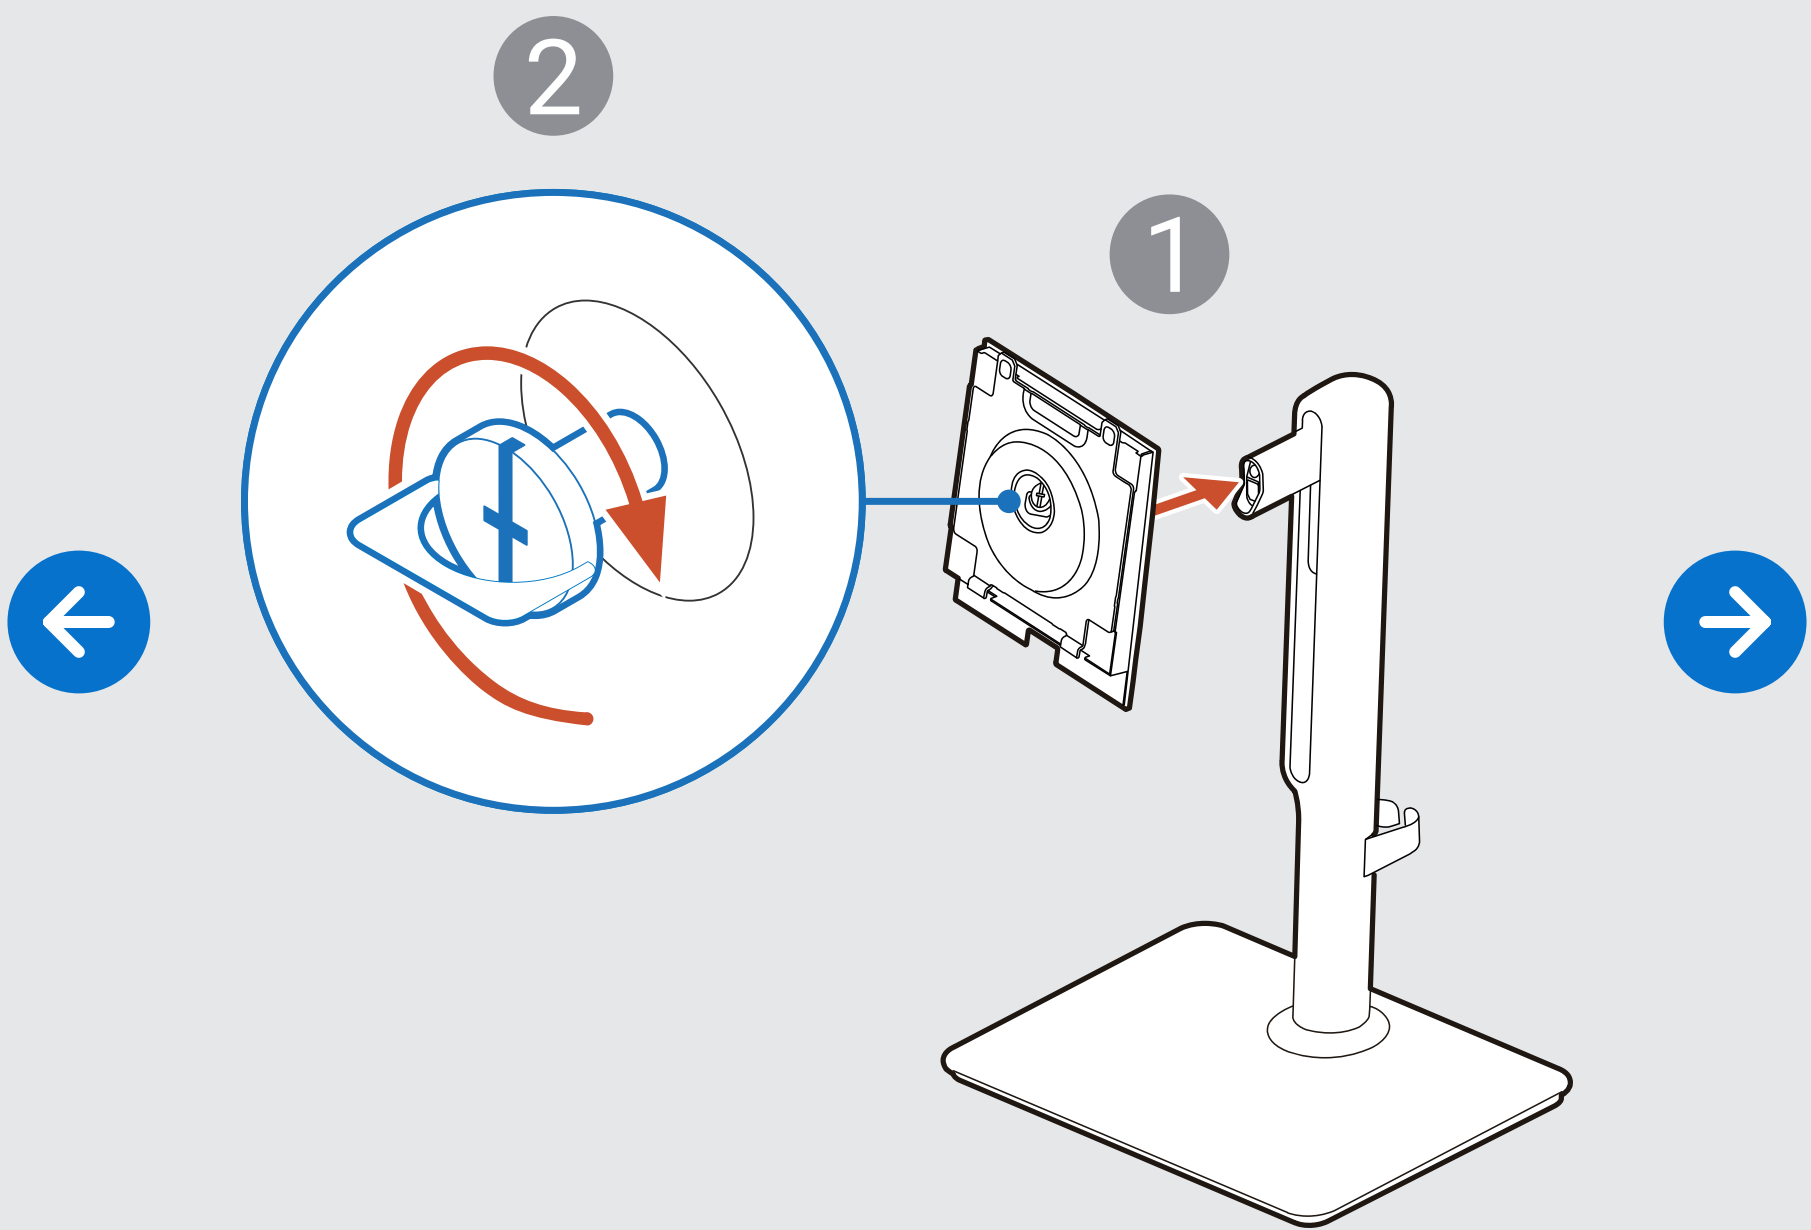


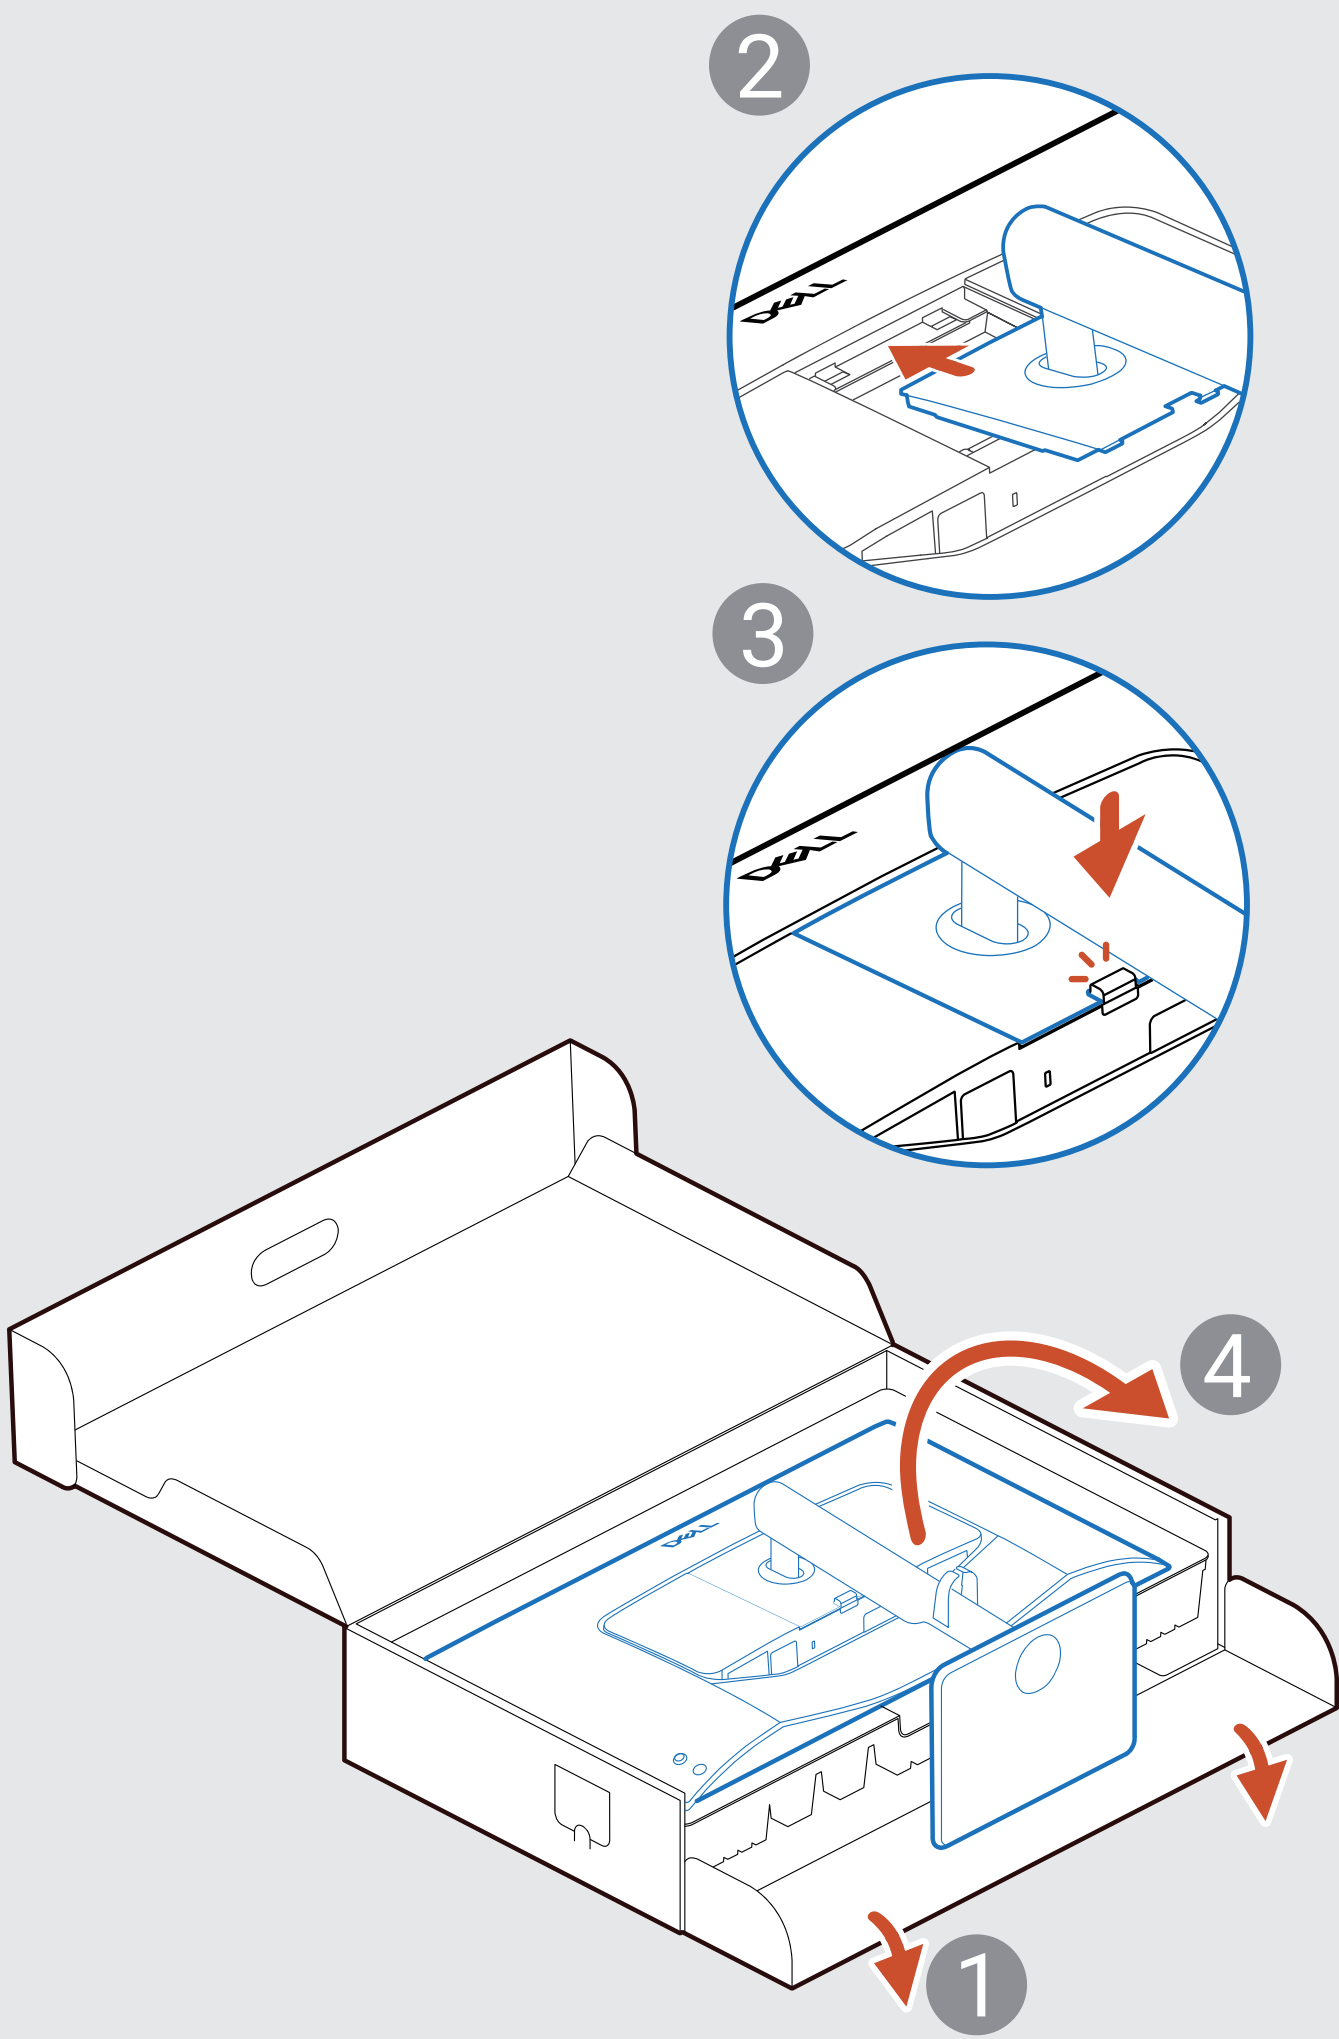


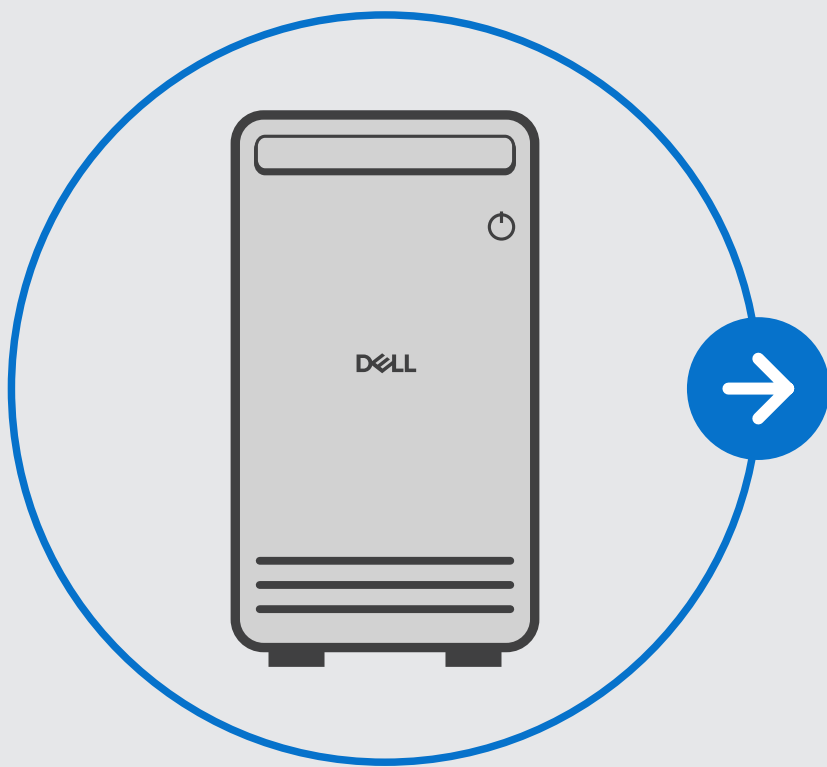

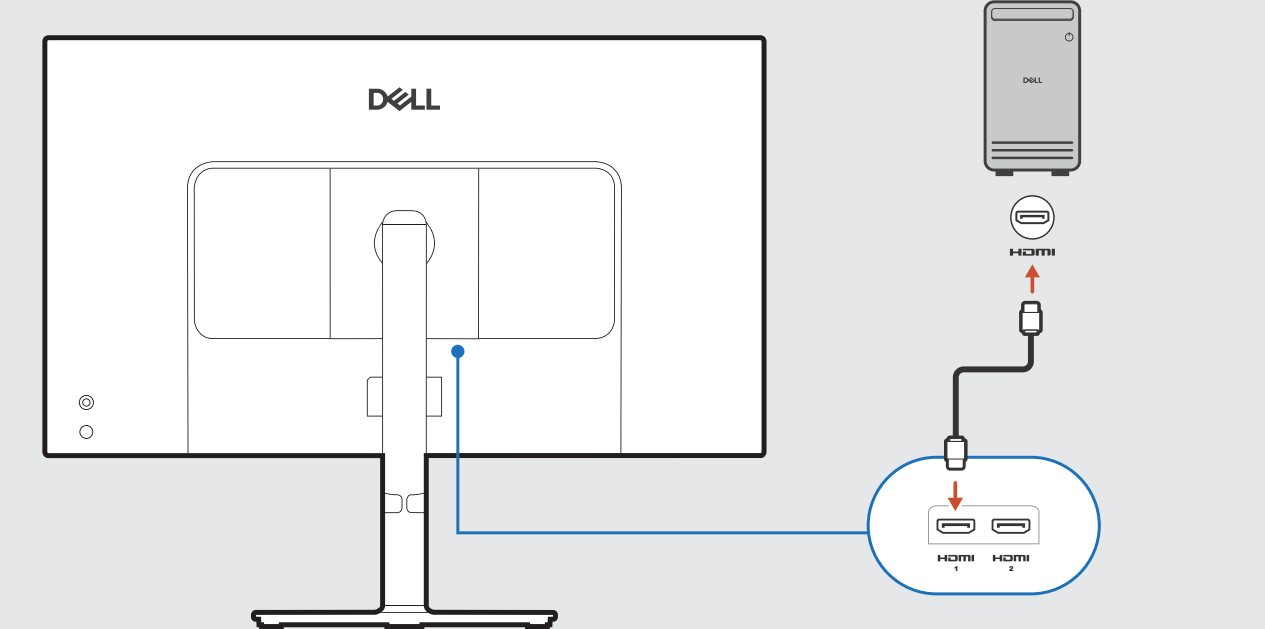


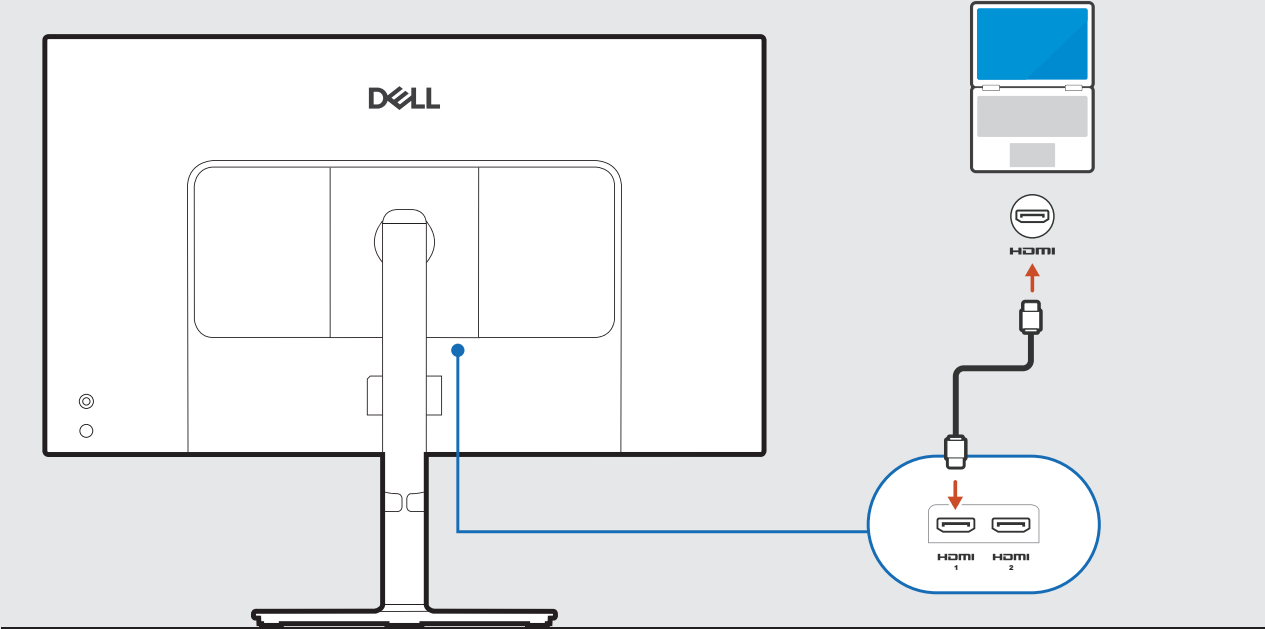

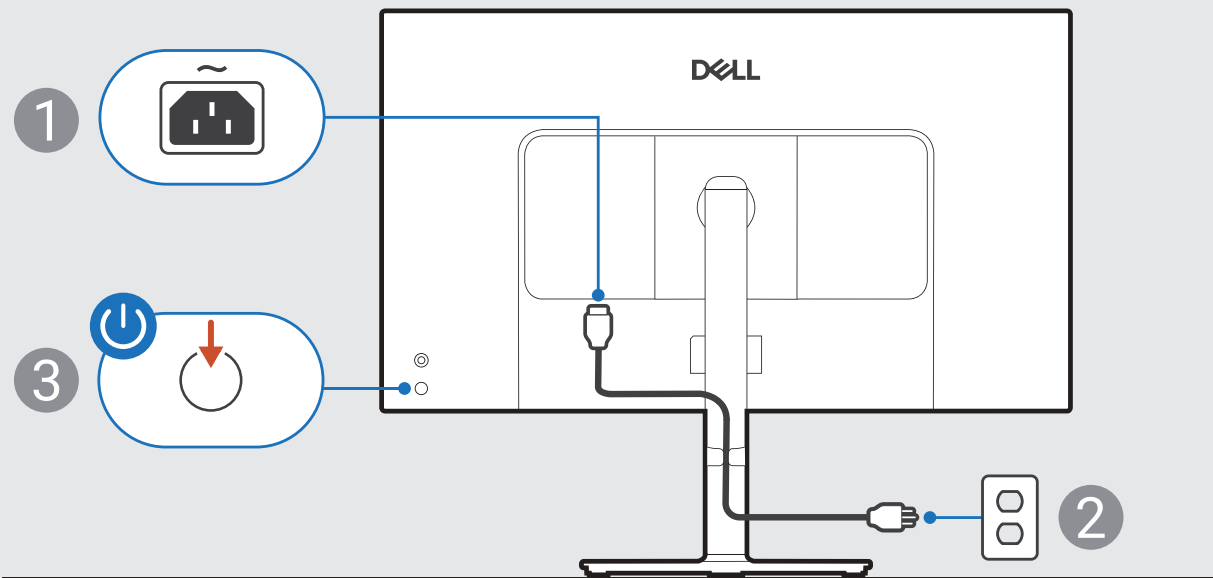


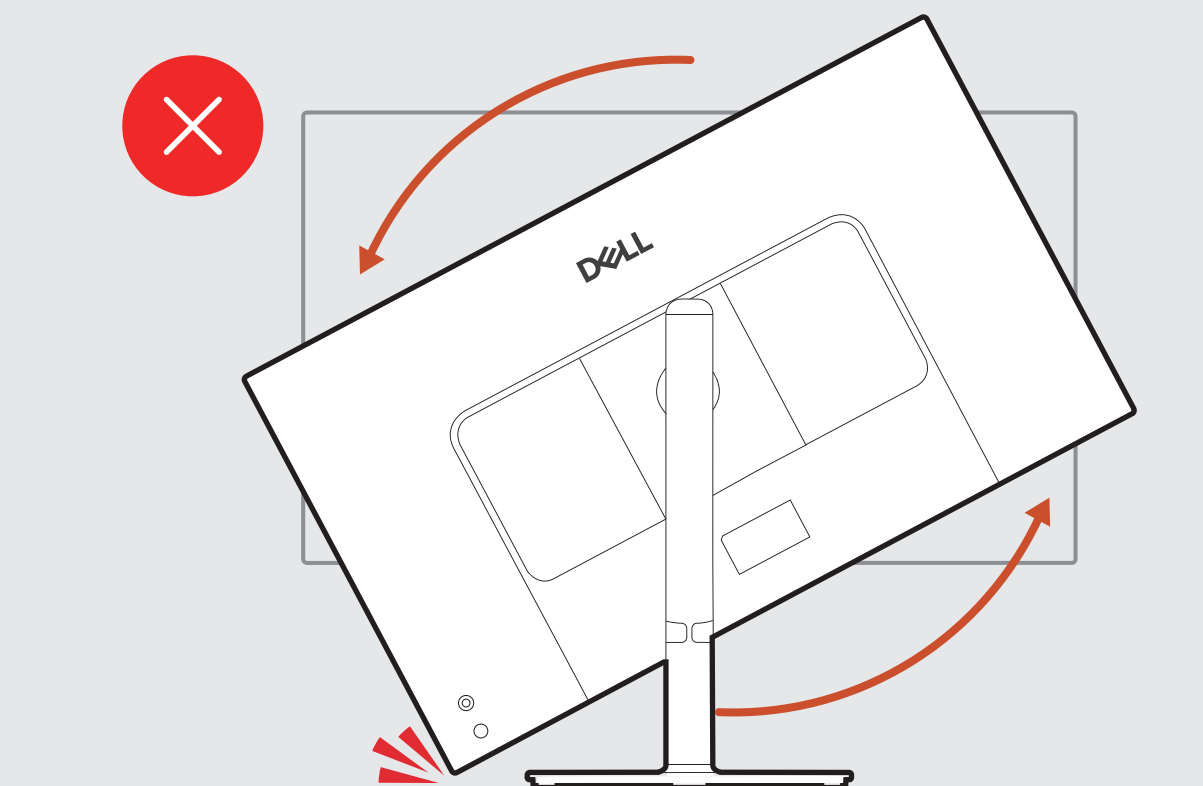



1

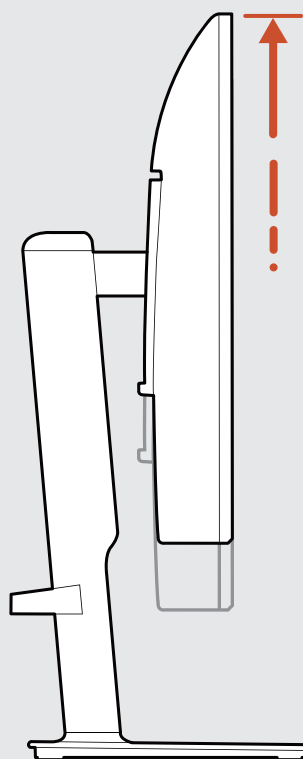


2

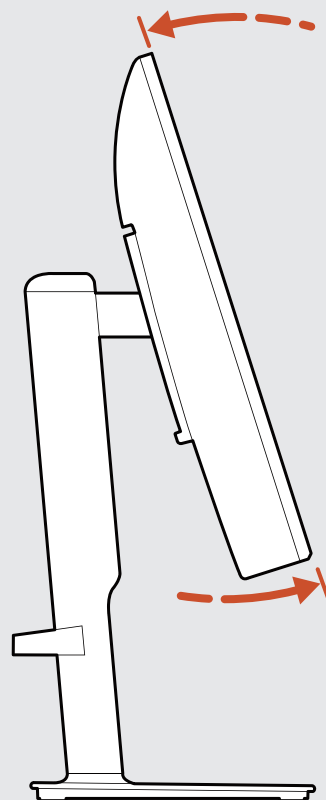


3

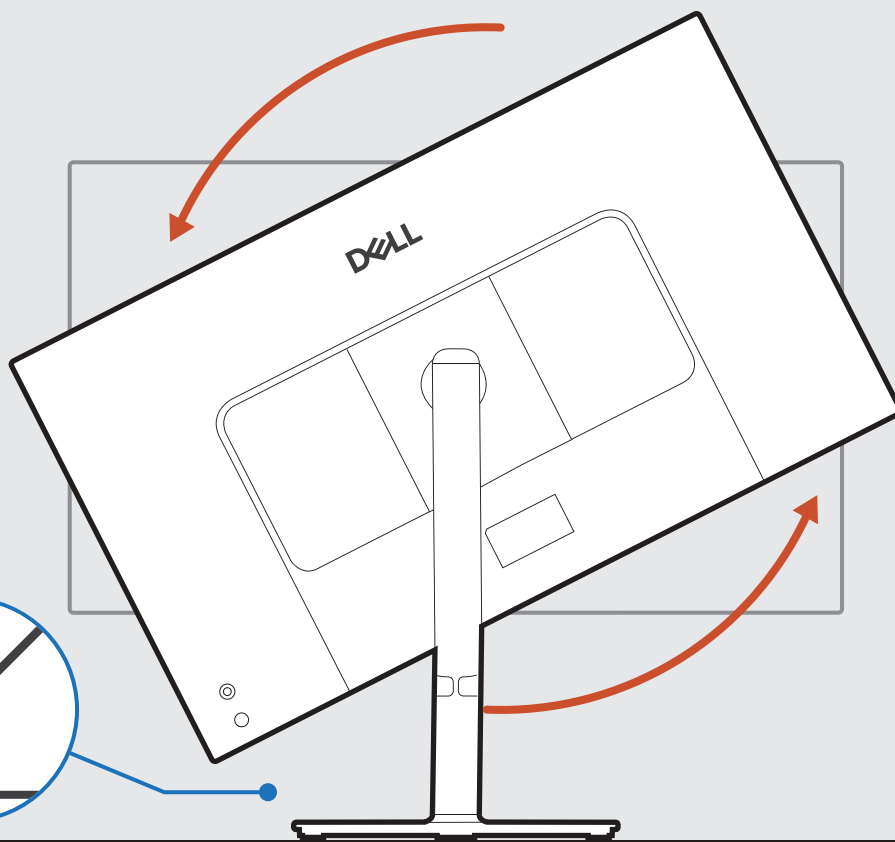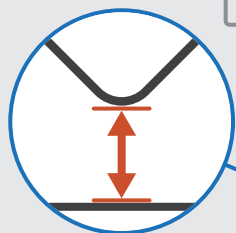

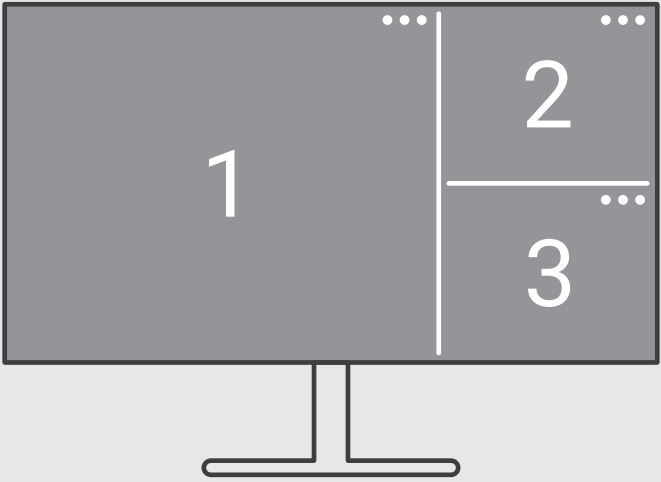

Dell Display and Peripheral Manager
[Dell.com/support/ddpm](https://dell.com/support/ddpm)

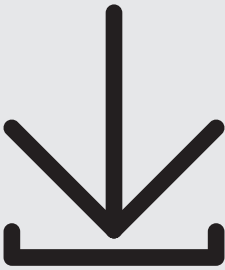

[Dell.com/support/S2425HSM](https://dell.com/support/S2425HSM)
[Dell.com/support/S2725HSM](https://dell.com/support/S2725HSM)