


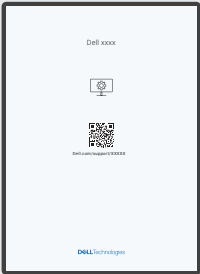
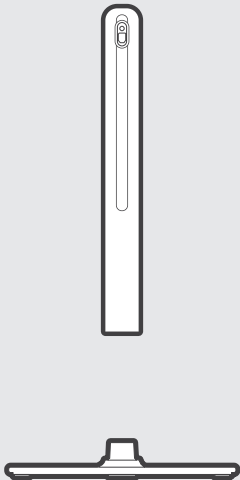


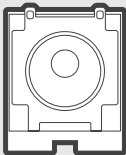


Écran Dell 27 Plus QHD USB-C
S2725DC

Guide de démarrage rapide

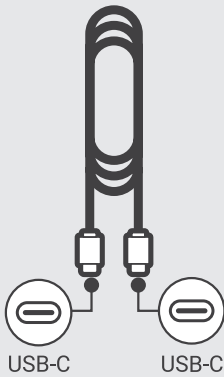


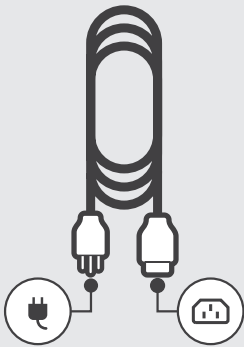


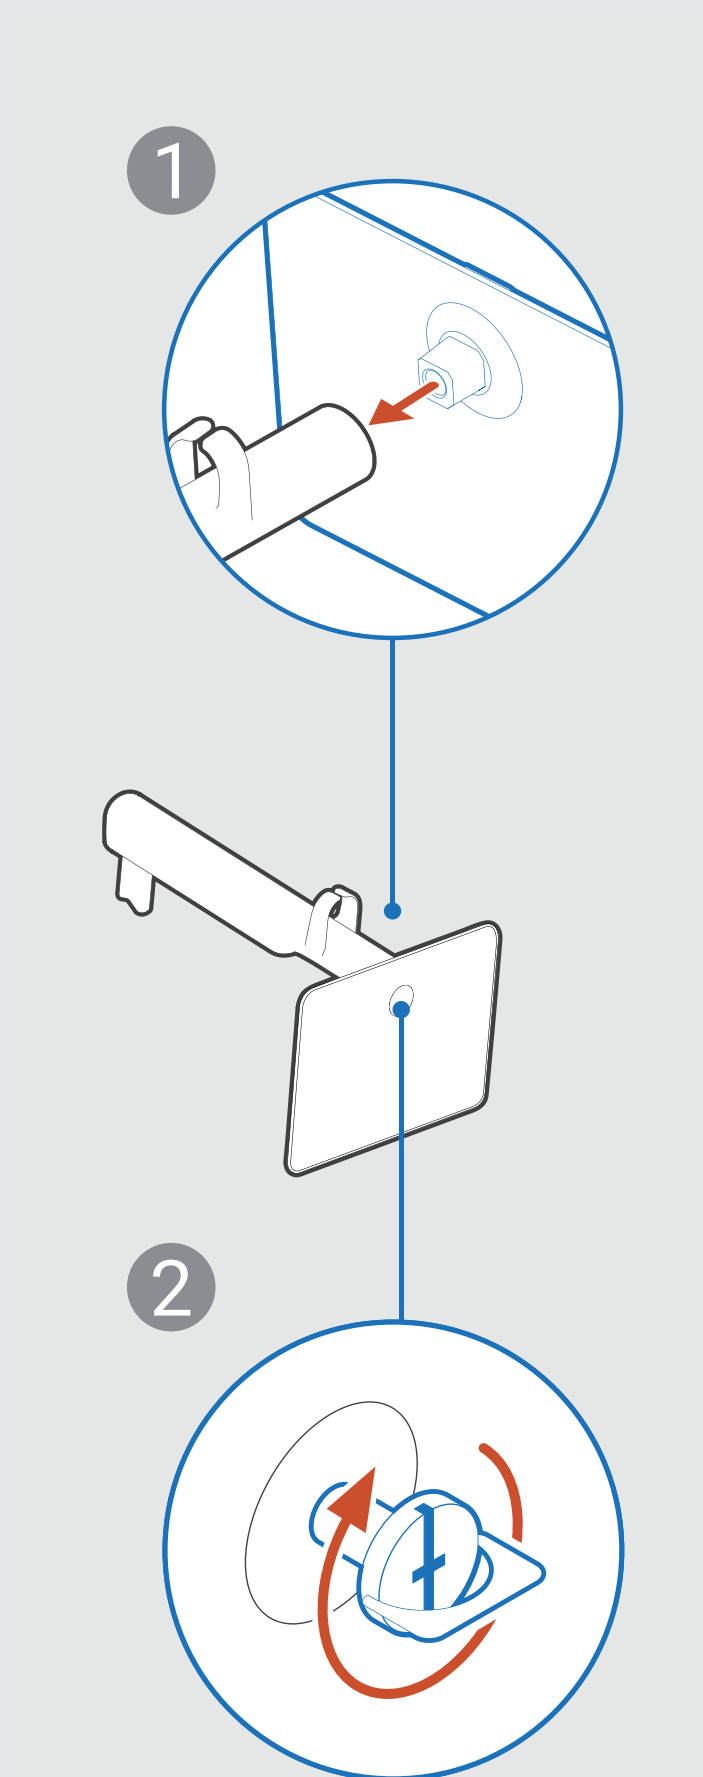







1

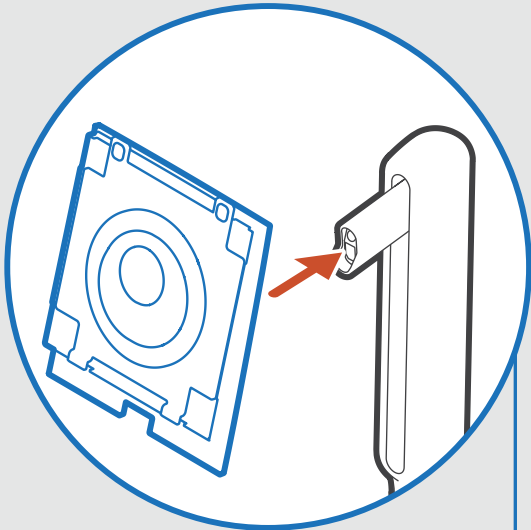



2

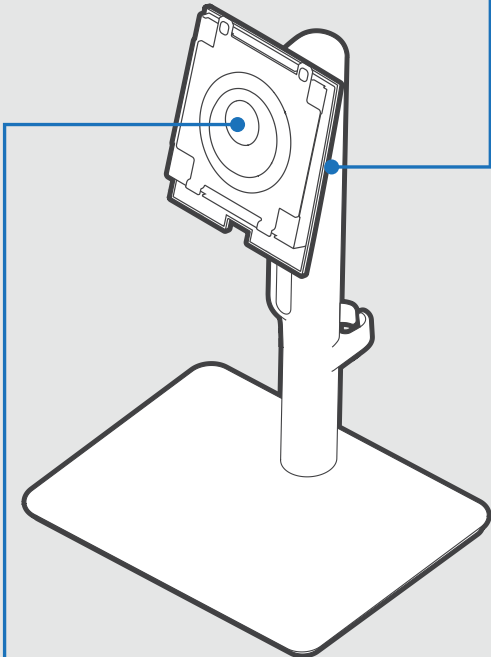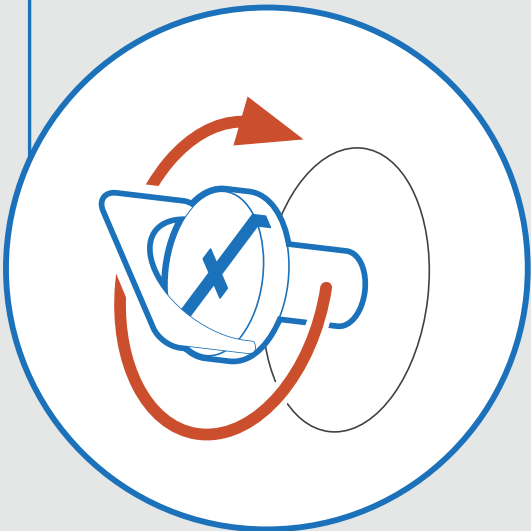


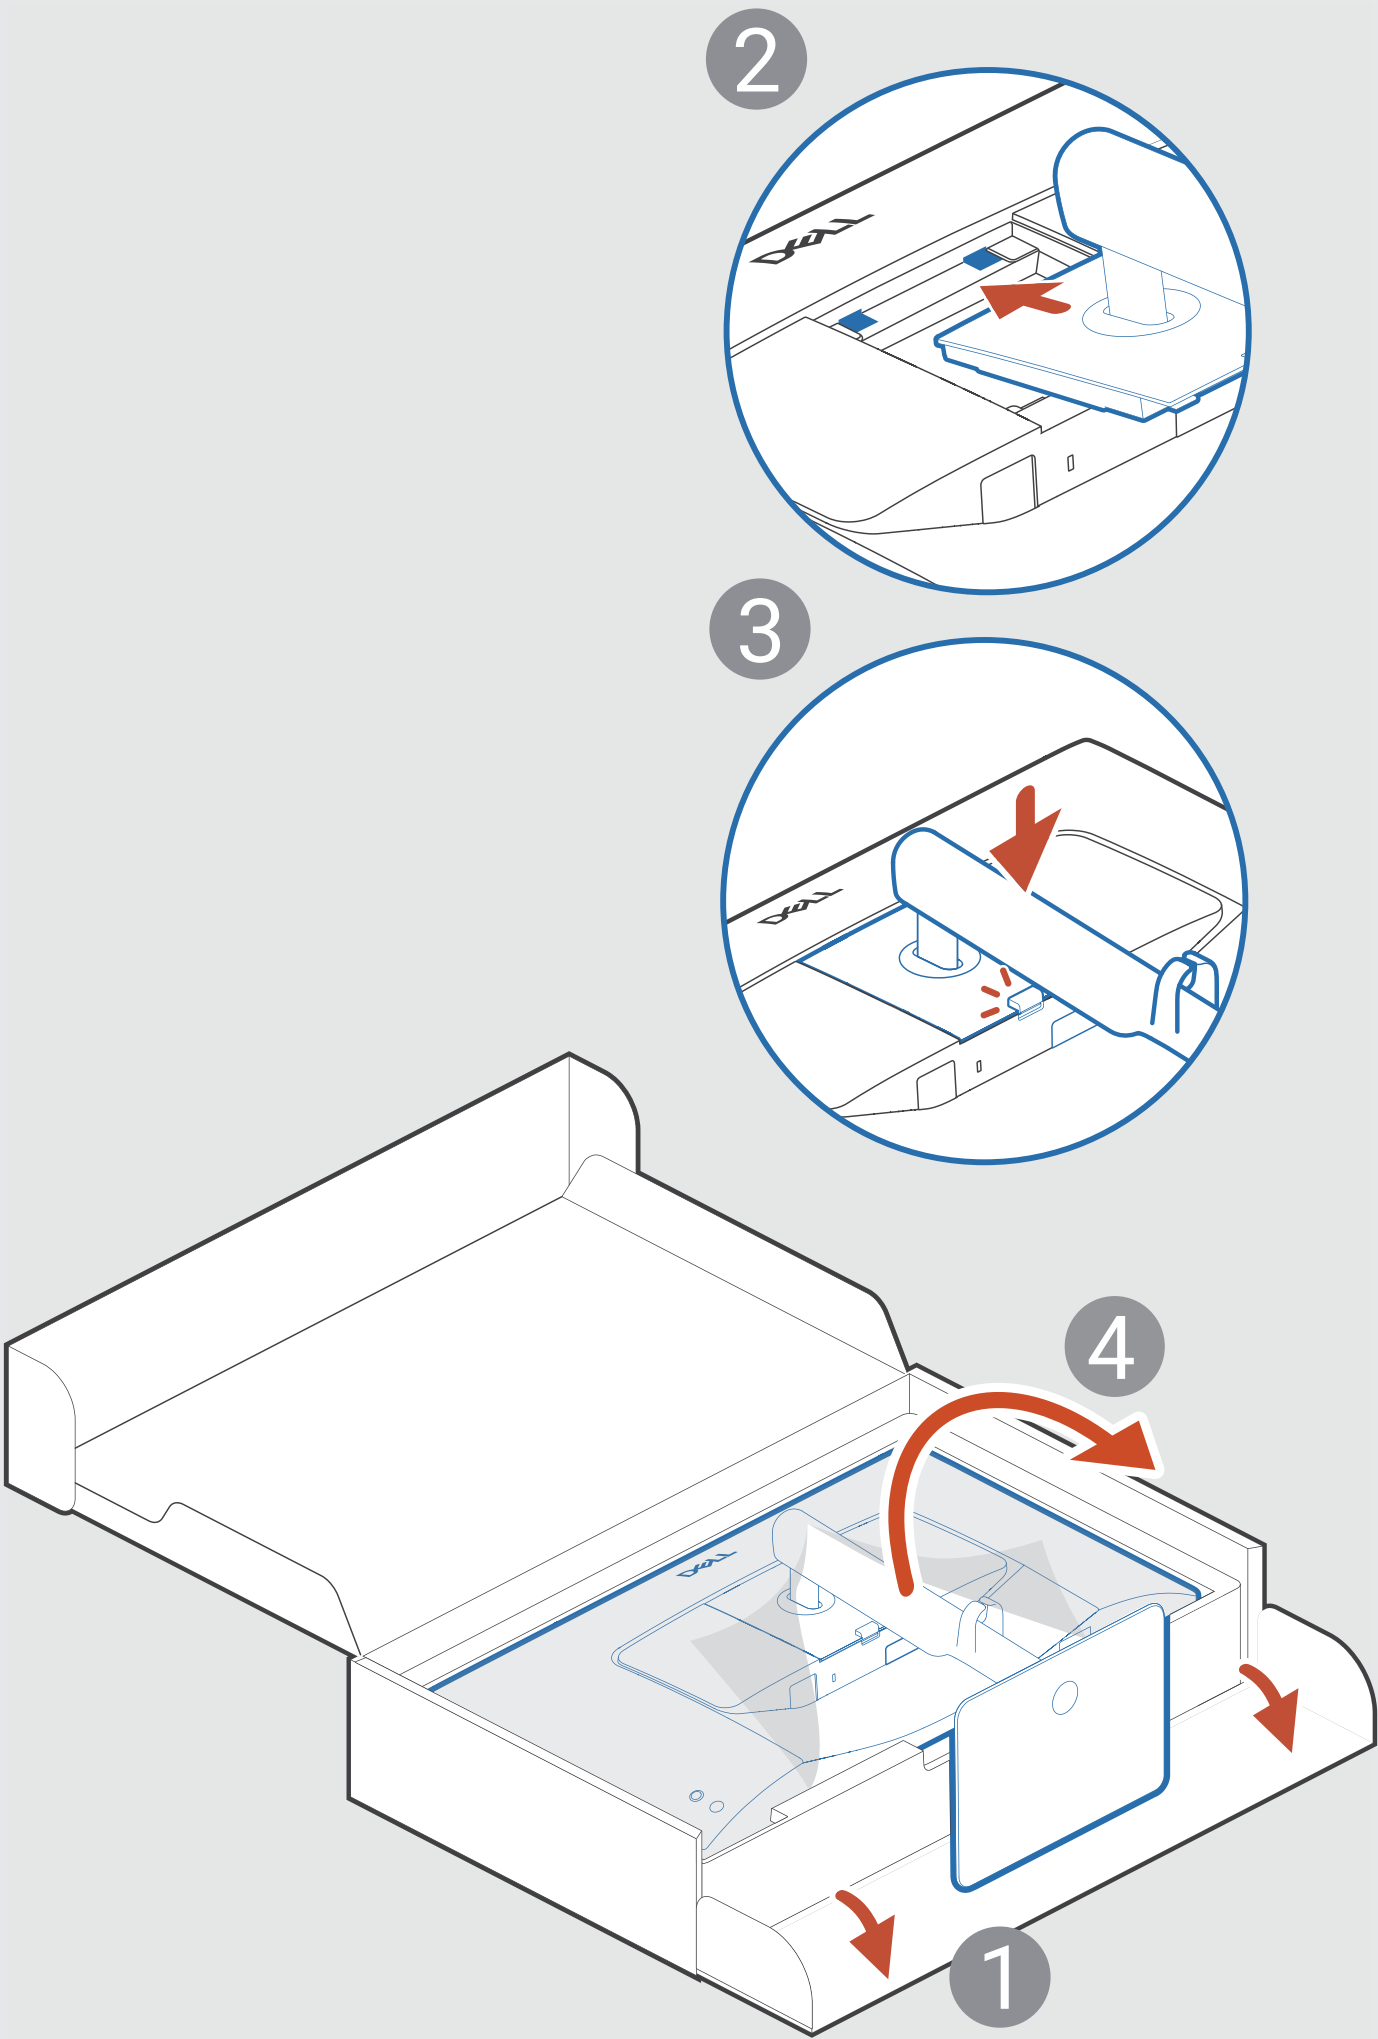


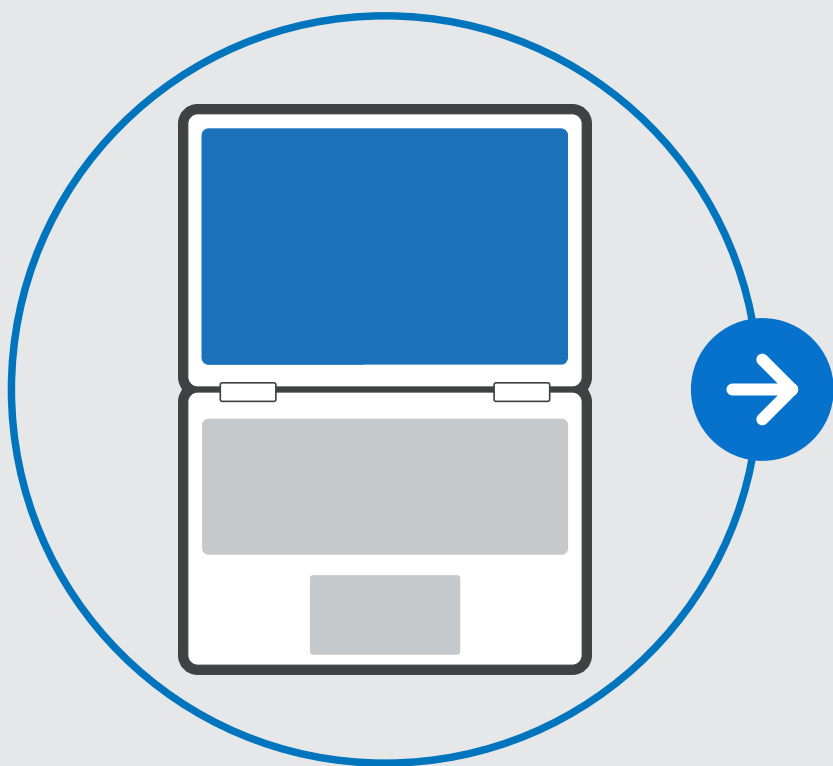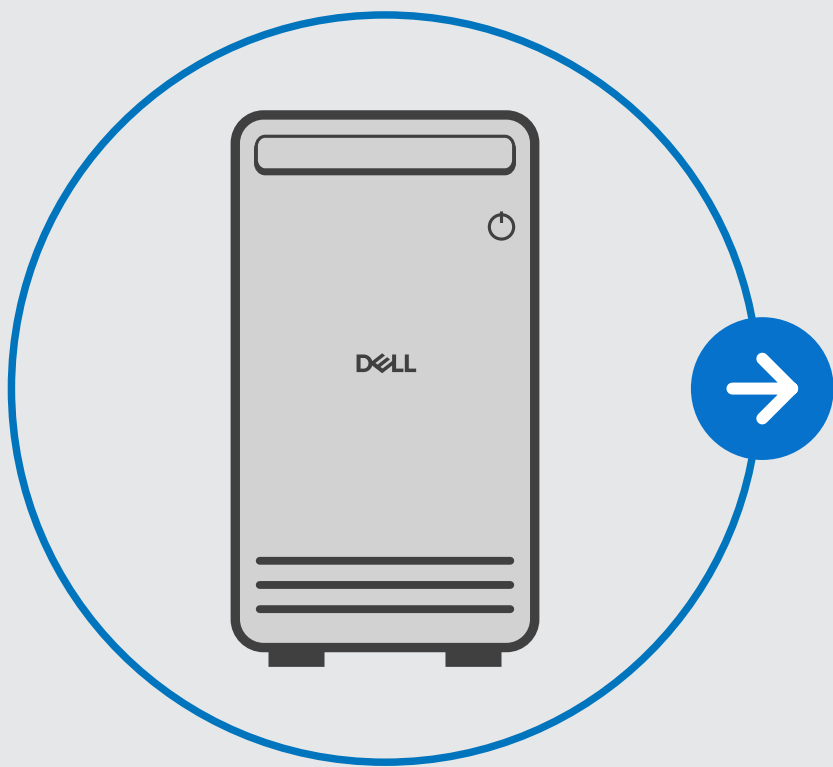


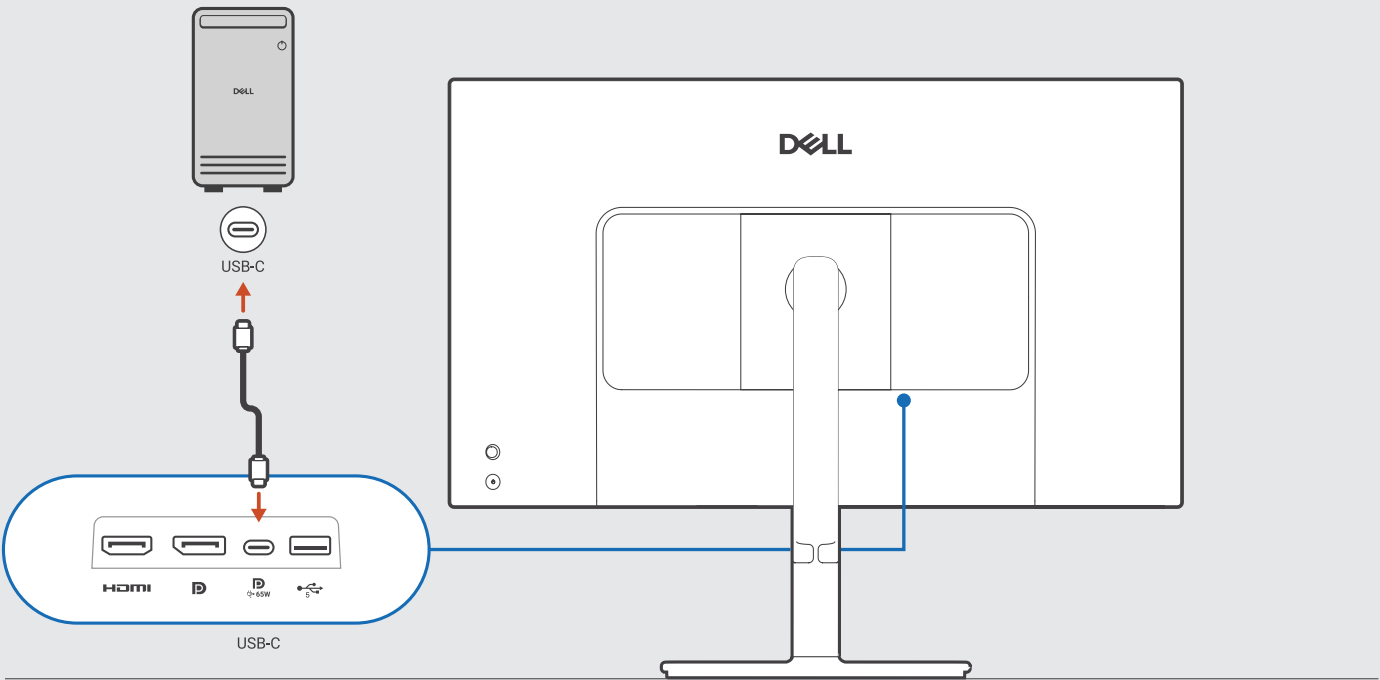

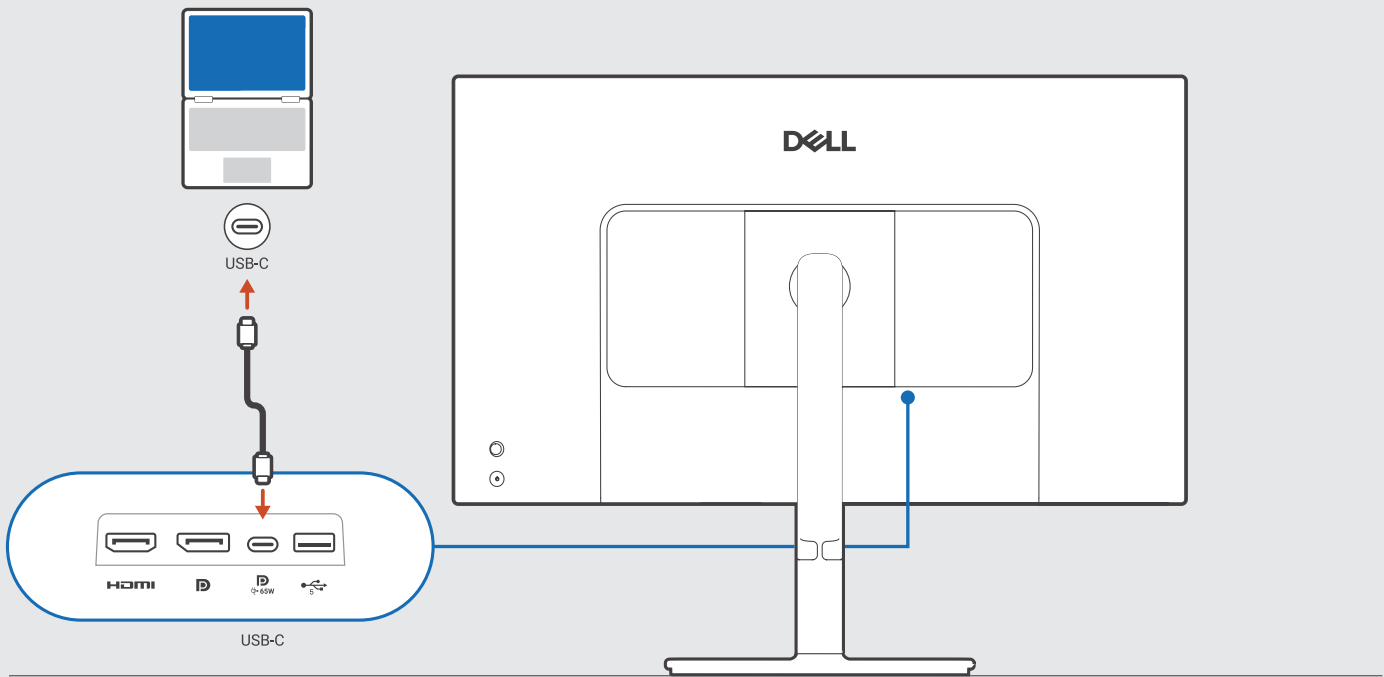


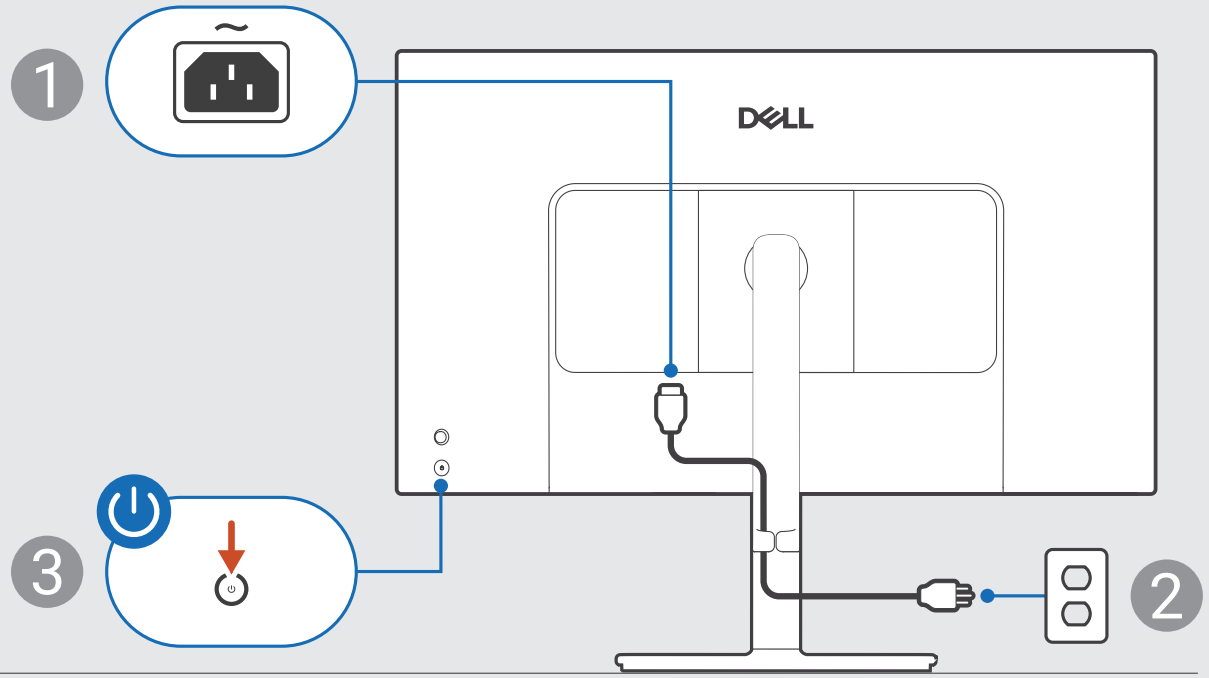

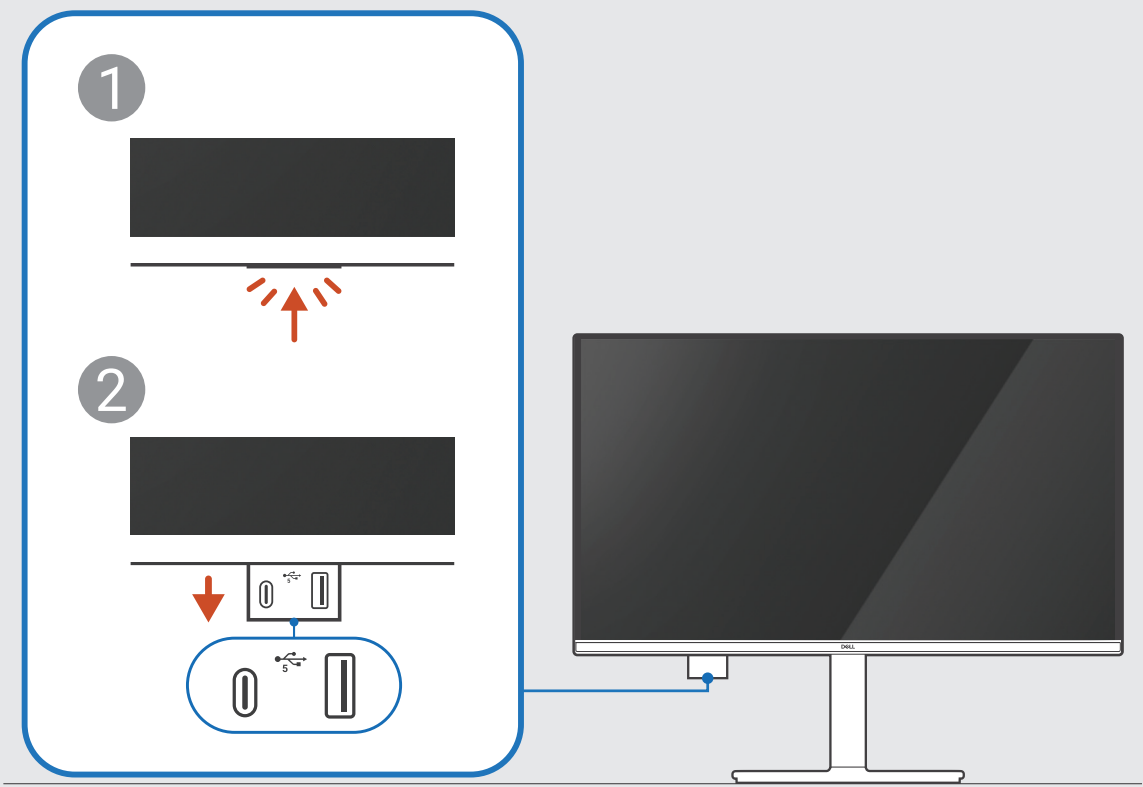


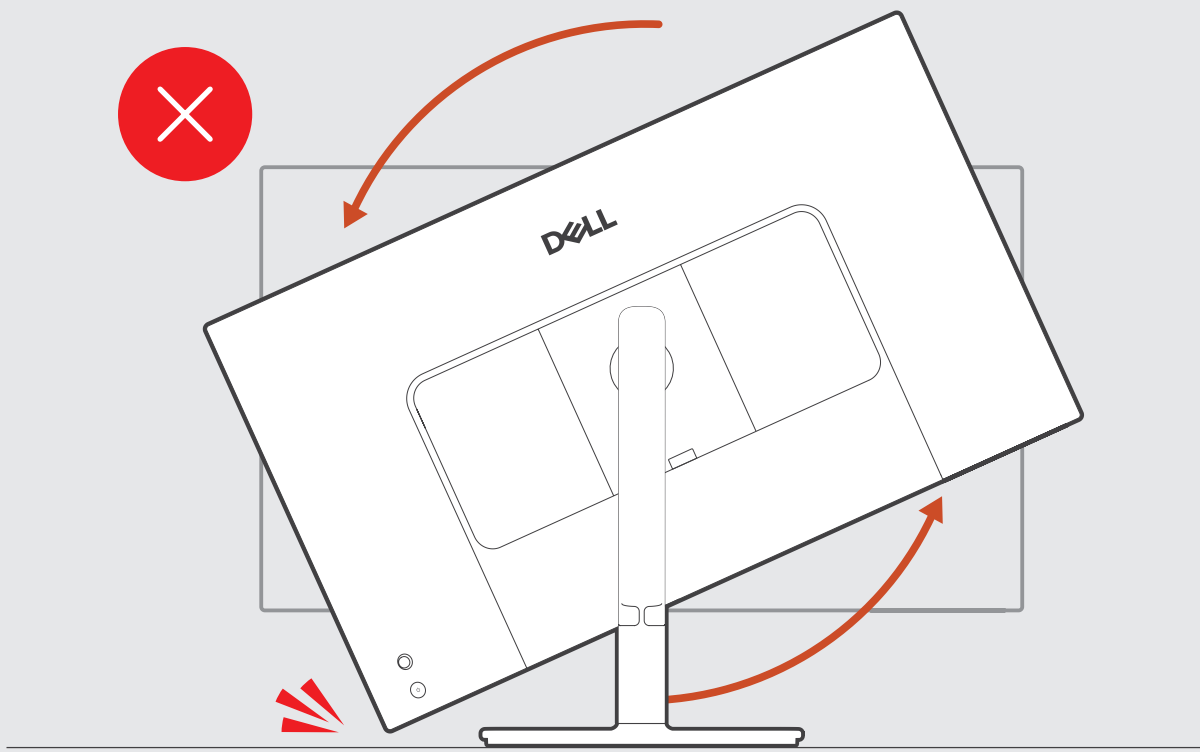



1

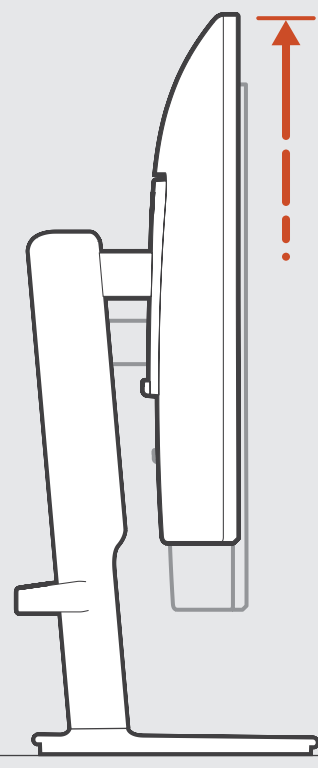


2

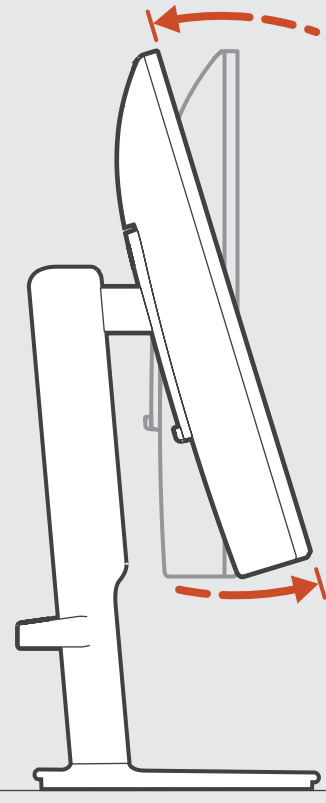


3

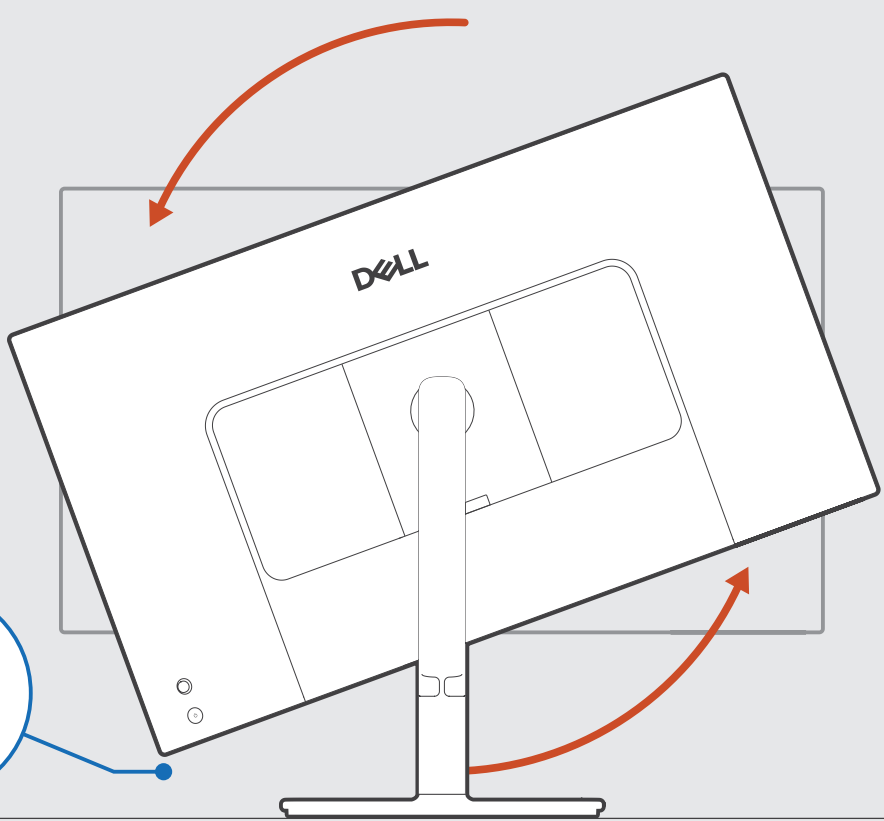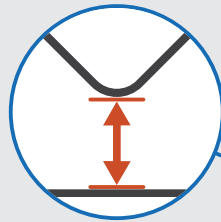

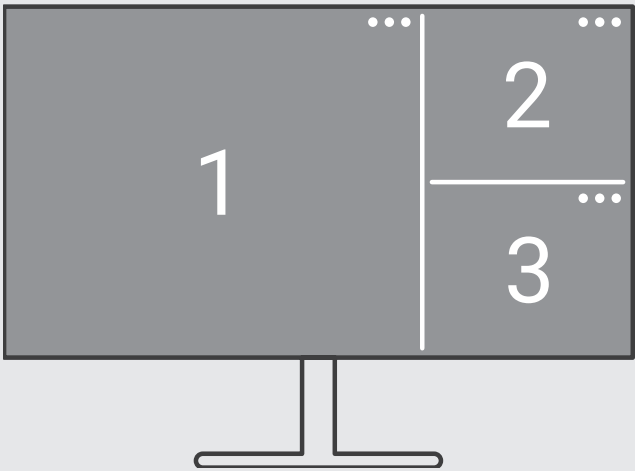

Dell Display and Peripheral Manager
[Dell.com/support/ddpm](https://dell.com/support/ddpm)

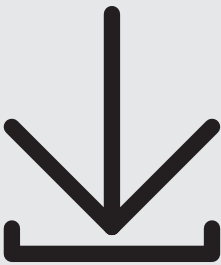

[Dell.com/support/S2725DC](https://dell.com/support/S2725DC)