

Contour

ROLLERMOUSE RED PLUS & BALANCE MID-SIZE KEYBOARD COMBO WIRED

Product manual

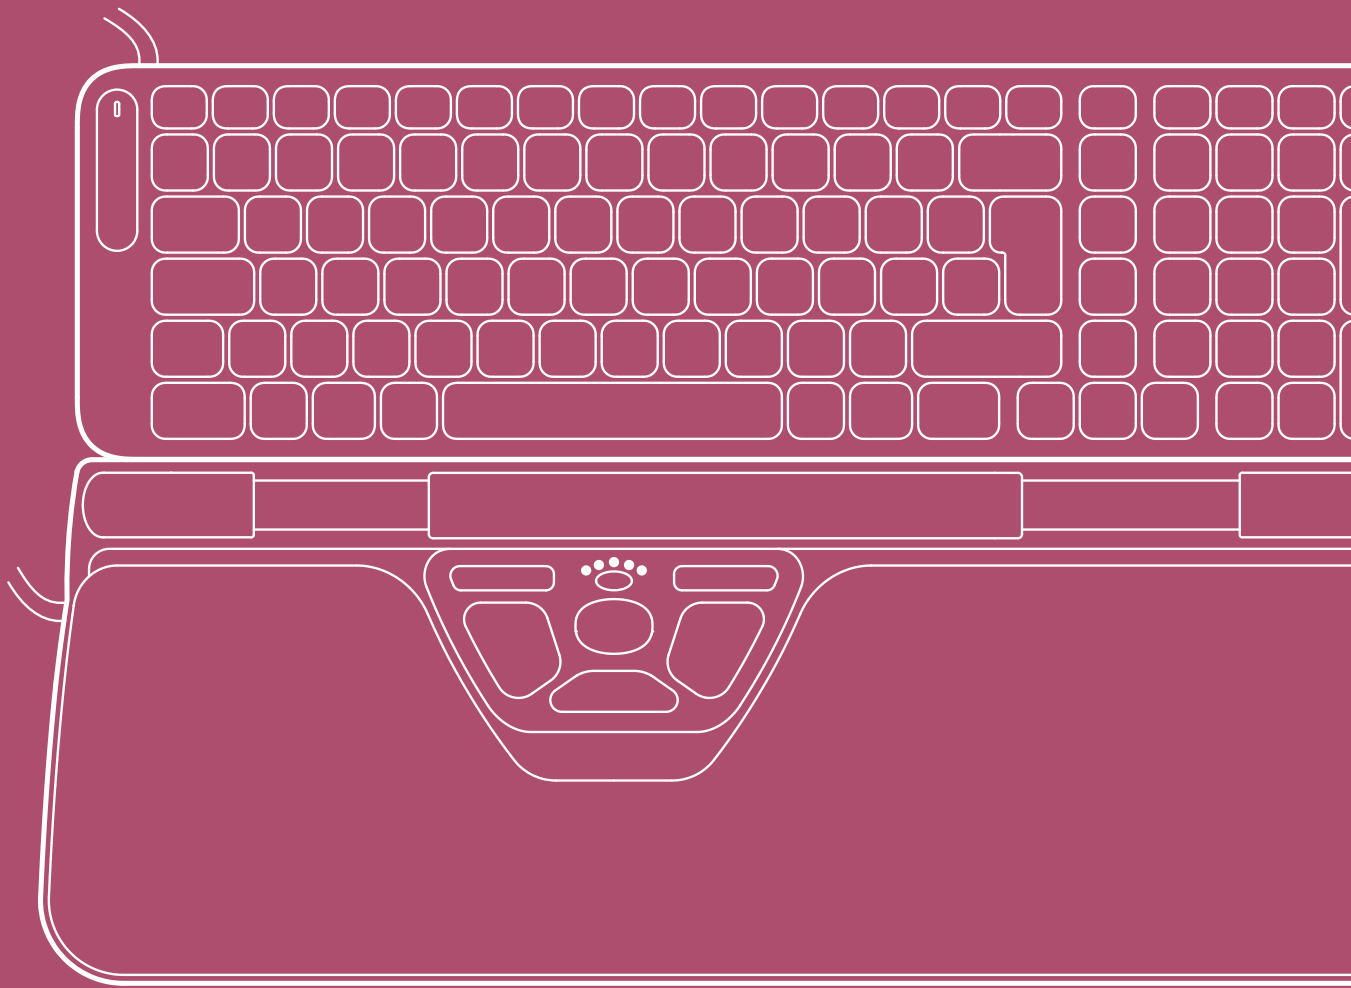 


TABLE OF CONTENTS.

What's in the box	1
Meet the combo	2
Quick connect guide	3
Get set up for comfort	3
Buttons & keys customization	6
Product details – Rollermouse Red	8
Product details – Balance Keyboard	10
Cleaning & maintenance	12
Safety, legal & warranty info	12

WHAT'S IN THE BOX.

You'll find everything you need for a seamless setup inside the box.



1. Balance Mid-Size Keyboard Wired
2. RollerMouse Red Plus Wired
3. 2x USB-C to USB-A adapters (attached to cables)
4. SnapLinks

MEET THE COMBO.

RollerMouse Red Plus



1. Wrist rest
2. Shortcut buttons
3. Cursor speed
4. Scroll wheel
5. Rollerbar
6. SnapLinks attachment
7. Wrist rest removal slot

Balance Mid-Size Keyboard

 


1. Power LED
2. Positive tilt legs
3. Negative tilt legs
4. SnapLink attachments

QUICK CONNECT GUIDE.

If you have the wired combo, just plug the USB cables into any available USB ports in your PC.

Your computer will connect to the keyboard and RollerMouse automatically. No extra steps needed.

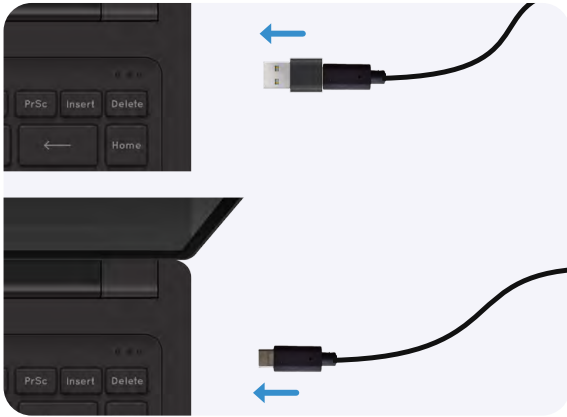

The cables come with a USB-A adapter pre-installed

Prefer USB-C? Just slide the adapter off and plug in the USB-C connector instead

GET SET UP FOR COMFORT.

Before you start working on your new devices, set yourself up for all-day comfort.

Relax your shoulders. Keep your elbows at 90 degrees, close to your body. Your forearms should be parallel to the floor, with wrists in a straight, neutral position.

 
Line up the H key on your keyboard and the scroll bar on your RollerMouse with the center of your monitor – and your body. This helps keep your posture natural and balanced.

Position the keyboard close to the rollerbar, and keep the RollerMouse far enough from the desk edge so your forearms are supported when resting.




Tilt options


When using RollerMouse Red with Balance Keyboard there are three tilt options to suit your posture needs and personal preference.

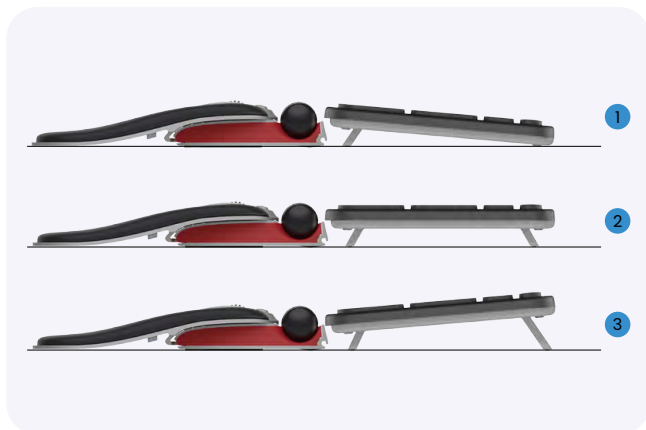

 1. Negative tilt – recommended ergonomic option
2. Neutral
3. Positive tilt

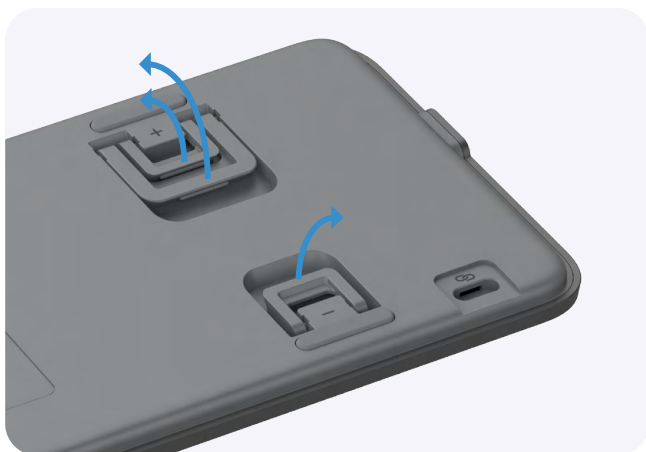

 The + and – symbols on the tilt legs show you if you are choosing **positive or negative tilt**

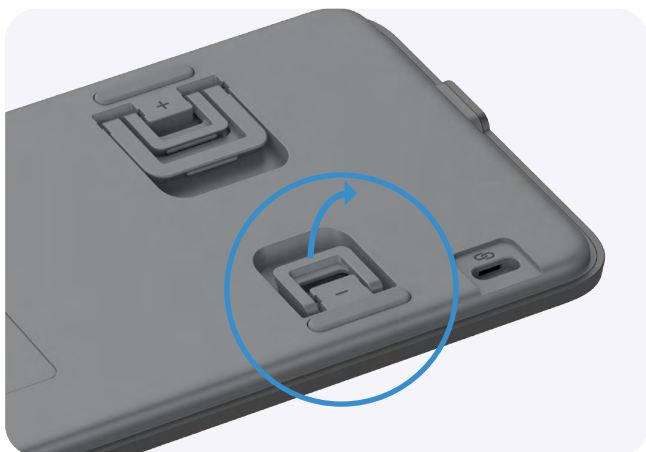

To work comfortably with your RollerMouse, raise the front edge of your keyboard

You can do this by flipping out the **negative tilt legs** – or **snapping on the SnapLinks**

We'll show you how in the next section

SnapLinks

Use the SnapLinks in the box to physically connect your RollerMouse Red and Balance Keyboard. Once they're clicked together, they stay in the perfect ergonomic position - no slipping, no drifting. Just steady, seamless comfort all day long.



Step 1: Find the groove on each side of your RollerMouse Red. Slide the SnapLinks into place - there's an "L" and "R" so you'll know which side goes where

Push them all the way in



Step 2: Line up your Balance Keyboard and press it down gently from above

You'll hear a click when it snaps into place. You're all set

And don't worry - even with the SnapLinks attached, you can still adjust the keyboard tilt to your preference

BUTTONS & KEYS CUSTOMIZATION.

RollerMouse Red buttons

RollerMouse Red comes with 7 preset buttons to get you going right away



Number	Default assignment
1	Left click (rollerbar)
2	Scroll wheel click
3	Copy
4	Left click
5	Double click
6	Right click
7	Paste

Balance Keyboard media keys

Balance Keyboard has 17 preset media keys to help you do more with less effort



Number	Default assignment
1	Mute/unmute sound
2	Volume down
3	Volume up
4	Mute/unmute microphone
5	Previous track
6	Play/pause
7	Next track
8	Brightness down
9	Brightness up
10	Open settings
11	Show desktop
12	Print screen / snipping tool
13	Open calculator
14	Clear entry
15	Negative number toggle
16	Lock computer
17	Open Copilot or other AI assistant

Contour software

Want to make it your own?

Download the Contour software to customize buttons and media keys based on your preferences and unlock the full potential of the combo.

[Visit cd.now/sw to get started](https://cd.now/sw)

PRODUCT DETAILS

– ROLLERMOUSE RED WIRED.

 
Cursor speed



Press the cursor speed button to cycle through 10 speed settings from slow (600 DPI) to fast (2800 DPI)

Out of the box, you're set to 1200 DPI

Each press moves you to the next speed, with five LEDs above the button showing your current setting

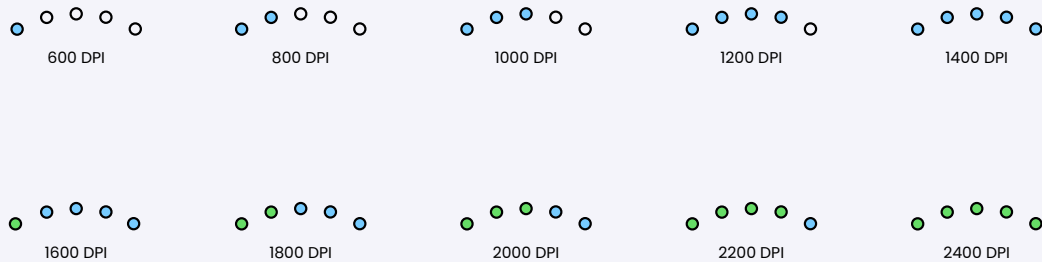


Rollerbar click adjustments

Click volume



If you're clicking with the rollerbar, you can fine-tune the click volume to match your preference:

 1. Press and hold both the cursor speed and right click buttons for 2 seconds. The LEDs will light up to show your current volume setting
2. Keep holding the right click button, but let go of the cursor speed button
3. Move the scroll wheel up or down to adjust the volume
4. When you've found the setting you like, just let go of the right click button to save it

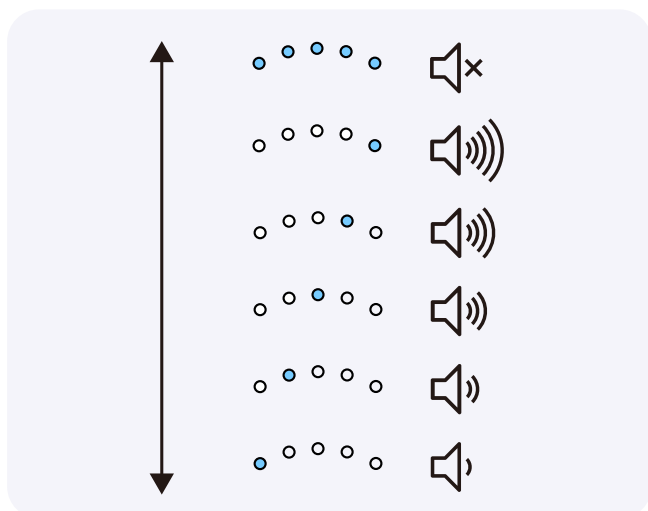


You'll see your selected click volume level on the LEDs.

Click force



Click force is the amount of resistance you feel when pressing the rollerbar. You can tweak it to match your comfort level:

 1. Press and hold both the cursor speed and left click buttons for 2 seconds. The LEDs will light up to show your current setting
2. Keep holding the left click button, but let go of the cursor speed button
3. Move the scroll wheel up or down to adjust the force
4. When it feels right, let go of the left click button to save it

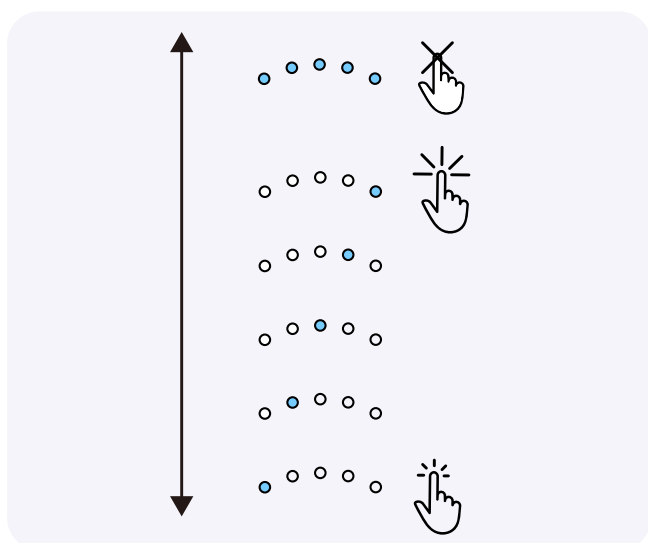

As you scroll, the LEDs show your current click force - more lights mean more tension. If all 5 LEDs are blue when you let go of the left click button, it means rollerbar click is fully disabled.

Disable & enable rollerbar click



By default, you can click by pressing down on the rollerbar. But if you'd rather not, you can turn it off:

1. Press and hold cursor speed and left click buttons for 2 seconds – the LEDs will light up
2. Keep holding the left click button, but let go of the cursor speed button
3. Move the scroll wheel up until all 5 LEDs turn blue – that means rollerbar click is off
4. Let go of the left click button to save your setting

Want to turn it back on? Just follow the same steps, but scroll down until only one of the LEDs is blue.

PRODUCT DETAILS – BALANCE KEYBOARD.

Function keys & fn lock

By default, the top row of your keyboard is set for media keys like volume, play/pause, and more. Need traditional F-keys instead? You've got options:



For one-time use

Hold down the fn key and short press any F-key



To switch modes

Want to make F-keys the default? Just hold down the fn key and short press the esc key

The fn lock LED will turn on

To switch back to media keys as default, hold down the fn key and short press the esc key again



Caps lock

Press the key once to turn caps lock on or off. When the LED on the key is lit, caps lock is on



Num lock

Press the key once to switch your numpad from numbers to navigation - or back again

CLEANING & MAINTENANCE.

RollerMouse Red and Balance Keyboard are designed to be easy to maintain – and yes, they can be safely disinfected.

Follow these steps to clean the devices safely and keep your warranty intact:

- Unplug any cables and make sure the devices are turned off before cleaning
- Use an alcohol-based solution (up to 70% concentration) for disinfection
- Never apply liquid directly to the devices. Instead, lightly dampen a soft, clean cloth with the solution and gently wipe down the surfaces
- Avoid soaking, dripping, or letting moisture pool. Too much liquid can harm sensitive components
- Once wiped, make sure everything is dry before using the devices again

SAFETY, LEGAL AND WARRANTY INFO.

Warranty

If there is a functional defect due to faulty manufacturing, we will replace the product. This warranty does not cover damage that results from misuse of the product.

Attention!

If you attempt to dismantle your product, you will invalidate your warranty.

Contour Design Nordic A/S

Nyropsgade 43, 1. floor
DK-1602 Copenhagen V, Denmark
Contact Support: cd.now/support

Contour Innovations LLC

10 Industrial Drive
Windham, New Hampshire 03087, USA
Contact Support: cd.now/support

For more information please visit:

www.contourdesign.com

Tested to comply with FCC and IC standards.

