



# INSTALLATION GUIDE

## NEXUS PLUS

### GAMING CHAIR




## Package Content

A		1	H		5
B		1	I		1
C		1	J		16
D		1	K		2
E		1	L		1
F		1	M		2
G		1	N		1


## Attention

- Clear a workspace for assembling the chair.
- Lay out all parts listed in the Parts List. A clear workspace helps you verify that all pieces are present.
- We suggest to place the protective foam or cardboard from the packaging on the floor while assembling to avoid accidental damage or scratches to both the floor and your new chair.
- Keep all packing materials until assembly is complete to avoid misplacing smaller parts or hardware.
- Keep small parts and pieces away from children and pets.
- Check and tighten all screws one more time on the chair before use.


## Installation

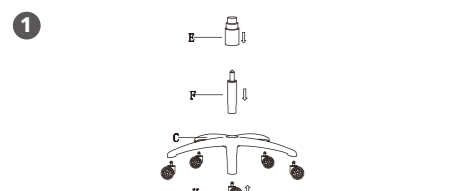


- Insert the 5 casters (H) into the star base (C) until they click into place.
  - Insert the gas lift (F) into the base (C) and attach the gas lift cover (E).

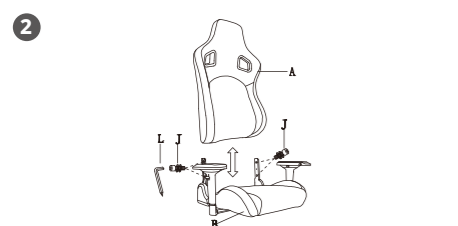


- Align the Back Cushion (A) with the Seat Cushion (B) and secure the side rails to the corresponding holes.
  - Use 4 M8\*25mm screws (J) and tighten with the Allen Key (L).

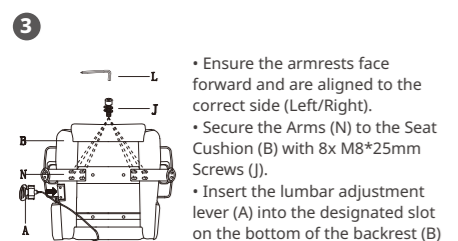


- Ensure the armrests face forward and are aligned to the correct side (Left/Right).
  - Secure the Arms (N) to the Seat Cushion (B) with 8x M8\*25mm Screws (J).
  - Insert the lumbar adjustment lever (A) into the designated slot on the bottom of the backrest (B) until it clicks into place.

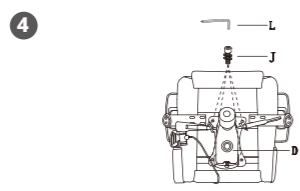

- Align the Seat Plate (D) with the 4 holes on the bottom of the Seat Cushion (B).
  - Ensure the "FRONT" marking faces forward, then secure it using 4x M8\*25mm screws (J) with the provided tool (L).

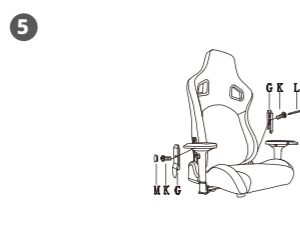

- Attach the Recliner Mechanism Cover (G) and secure it with an M5\*12 (K) screw on each side.
  - Snap on the Cover Studs (M) to conceal the screw holes.

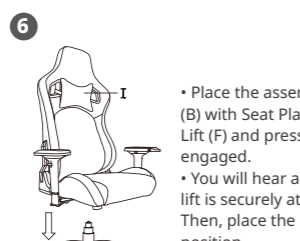

- Place the assembled Seat Cushion (B) with Seat Plate (D) onto the Gas Lift (F) and press down until fully engaged.
  - You will hear a "Click" when the gas lift is securely attached to the base. Then, place the Head Pillow (I) in position.

## Operating Instructions

### Dynamic Lumbar Support System

- **Extend Lumbar Support:** Pull the lever upward to extend the lumbar support cushion.


- **Adjust Support:** Lean back against the support to adjust its position while keeping the lever pulled.

Once extended, the lumbar support conforms closely to your back, moving naturally with each twist and turn, adapting to your spine's movements.



### Backrest Recline Adjustment


Pull the lever up and lean back to adjust the angle (90°-155°).

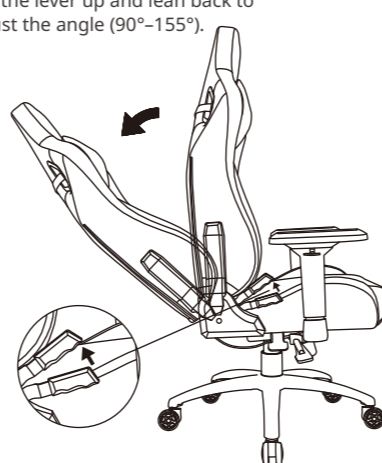

### Seat Height Adjustment

**Raise:** Lean forward, lift the right-side handle, and let the chair rise.


**Lower:** While seated, lift the handle and use your weight to lower the chair. Release to stop.

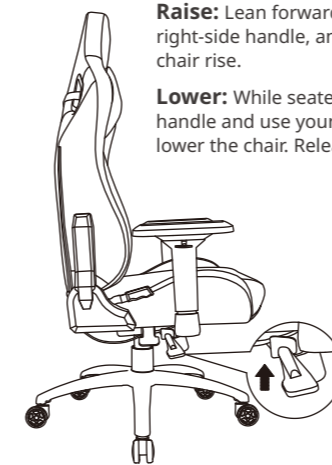

### Armrest Height Adjustment



**Locate Lever:** Find the lever on the outer side beneath each armrest.

**Adjust Height:** While pulling the lever upward, raise or lower the armrest to your preferred height. Release the lever to secure the position.

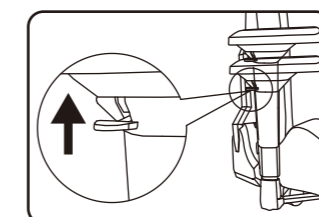


### Armrest Width Adjustment

**Adjust Width:** Press the button on the back inner side of the armrest to slide it inward or outward. Release the button to lock the position.

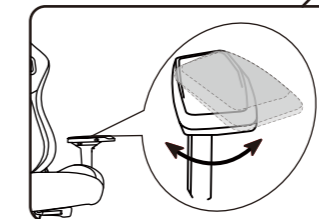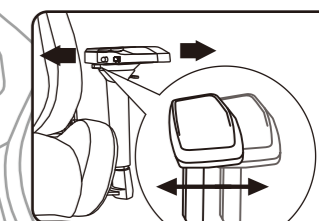

### Armrest Rotation Adjustment

Rotate the armrest left or right for optimal positioning.

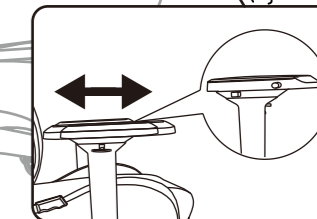

### Armrest Forward/Backward Adjustment

Press the front inner button to slide the armrest forward or backward.

