

HONOR MagicPad 3^(13.3)

User Guide

HONOR

Contents

Get Familiar

Commonly Used Gestures	1
Change Navigation Method	2
Migrate Data from the Old Device to the New Device	3
Learn about Lock Screen and Unlock	4
Connect to the Mobile Network	5
Connect to the Wi-Fi Network	5
Learn about the Home Screen	6
Learn about Common Icons	11
View and Disable Notifications	12
Adjust the Volume	13
Power On/Off and Restart	14
Charge Your Tablet	14

Honor Connect

Smart Collaboration	16
MagicRing	17
Connected Apps	18
Connected Call	20
Connected Notification	21
Connected Input	22
Connected Camera	23
Network sharing	24
Cross-device service use	25
Screen sharing	26
Earbuds Sharing	26
Printer Sharing	27
Screen Sharing between Honor Phone and Tablet	28
Easy Projection	29
Honor Print	30
Honor Share	31
Write and Draw with Stylus	34
Log in to Honor ID	37

Video Creation

Photography Basics	38
Take Photos	39
Shoot Videos	42
Edit Images	43
Edit Videos	46
View Images and Videos	49

Enjoy Smart Life

Magic Text	57
Honor Magic Portal	58
Magic Capsule	60
Audio Channel Switching with One Tap	61
Video Call Beauty	61

Tips

Smart Sensing	62
Enable Frequently Used Features of the App Fast	65
Screenshot and Screen Recording	66
Process Tasks in Multi-window Simultaneously	69
Floating window mode	73

Apps

Apps	75
Contacts	76
Calendar	77
Clock	80
Notepad	80
Honor Docs	85
Recorder	89
Email	90
Calculator	90
Flashlight	91
App Twin	91
System Manager	91
Device Clone	92
Tips	92

Settings

Wi-Fi	94
Bluetooth	94
Mobile Network	96
More Connections	96
Personalised home screen & more	100
Display and Brightness	105
Sounds	109
Notifications	110
Biometrics & Password	112
App	113
Battery	114
Storage	116
Security	117

Contents	
Privacy	120
Accessibility	123
Set Multi-User	132
System & Updates	132
About Tablet	136

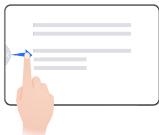
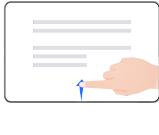
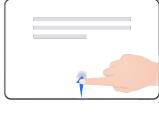
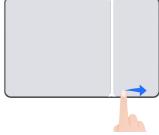
Get Familiar

Commonly Used Gestures

Basic Gestures and Shortcuts


Full screen navigation gestures




Go to **Settings > System & updates > System navigation** and make sure **Gestures** is selected.

	Return to the previous screen Swipe inward from the left or right edge of the screen.
	Return to the home screen Swipe up from the bottom edge of the screen.
	Access multitasking screen Swipe up from the bottom edge of the screen and hold.
	Switch apps <ul style="list-style-type: none">Swipe along the bottom edge of the screen. Before using this function, go to System navigation. Make sure Slide across bottom to switch apps is turned on.Swipe in an arc along the bottom edge of the screen.




Knuckle Gestures

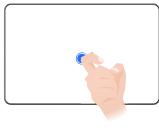Go to **Settings > Accessibility features > Shortcuts & gestures** to enable **Screenshot/Global Favourites, Record screen**.

	Screenshot Knock twice on the screen with a knuckle to take a screenshot.
	Scrollshot Knock and draw an "S" to take a scrolling screenshot.

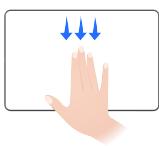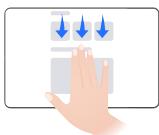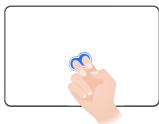	<p>Partial screenshot Knock and draw an enclosed area to capture part of the screen.</p>
	<p>Three-finger screenshot Swipe down with three fingers to take a screenshot.</p>
	<p>Three-finger Global Favourites Swipe with three fingers down as shown to activate Global Favourites.</p>
	<p>Record screen Knock twice on the screen with two knuckles to start or end a screen recording.</p>

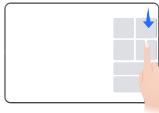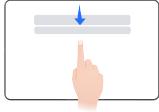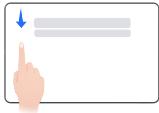More Gestures

	<p>Enter home screen editing mode Pinch with two fingers on the home screen</p>
	<p>Open Control Centre Swipe down from the top right of the screen</p>
	<p>Open Notification Centre Swipe down from the top middle or left of the screen</p>
	

Change Navigation Method

Use the Navigation Dock to Operate the Device

Go to **Settings > System & updates > System navigation**, and enable **Navigation Dock**.

After the Navigation dock button appears, you can:

- Drag the button to your desired position.
- Touch the button to go back.
- Touch and hold the button, then release it to go back to the home screen.
- Touch and hold the button, then swipe left or right to view recent tasks.

Change the System Navigation Mode

Use Gesture Navigation

Go to **Settings > System & updates > System navigation** and select **Gestures**.

You can:

- Return to the parent menu: Swipe inward from the left or right edge of the screen.
- Return to the Home screen: Swipe up from the middle of the bottom edge of the screen.
- Access multitasking: Swipe up from the bottom edge of the screen and pause.
- Close a task: In the multitasking interface, swipe up on a task card. Swipe down on a card to lock the task, locked tasks will not be cleared in batches by tapping  in the multitasking interface.
- Fast app switching: Swipe across the bottom of the screen in an arc to switch between apps; or turn on the **Slide across bottom to switch apps** switch, then swipe across the bottom of the screen.

Use Three-key Navigation

Go to **Settings > System & updates > System navigation** and select **Three keys**.

After you enable the Three-key Navigation, you can:

- Tap  to go back to previous page or quit an app.
- Tap  to return to Home screen.
- Tap  to enter “Recent tasks” page.

You can also have more operations based on your habits:

- Choose a combination of different navigation keys.
- Tap  (if you want the navigation combination to contain it), and open Control Centre.

Migrate Data from the Old Device to the New Device

Use Device Clone to Move Data to Your New Device

Device Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old tablet to your new tablet.

Migrate Data from a Device

- 1 On your new tablet, open the **Device Clone** app. Alternatively, go to **Settings > System & updates > Device Clone**, tap **This is the new device**, then select the corresponding old device type.
- 2 Follow the onscreen instructions to download and install **Device Clone** on your old device.
- 3 On your old device, open the **Device Clone** app and tap **This is the old device**. Follow the onscreen instructions to connect your old device with your new tablet by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then tap **Next > Transfer** to start cloning.

 **Device Clone** is only available on tablets running Android 7.0 or later, iOS 8.0 or later.

Learn about Lock Screen and Unlock

Lock and Unlock Your Screen

Lock Screen

If you do not operate the tablet for a period of time, the screen will be locked automatically.

You can also manually lock the screen by the following:

- Press the power button, or
- Pinch two fingers to enter the editing interface on the home screen, tap **Cards**, swipe up the screen until the bottom of the card list, tap **Classic widgets**, and tap **Screen Lock** to lock the screen.

Set the Screen Timeout Period

Go to **Settings > Display & brightness > Sleep** and select a screen timeout period.

Turn On the Screen

You can turn on the screen in any of the following ways:

- Press the Power button.
- Go to **Settings > Accessibility features > Shortcuts & gestures > Screen On/Off**, and enable **Raise to wake** or **Double-tap to wake**

Unlock the Screen with Password

Once the screen is turned on, swipe up from the middle of the screen to display the password input panel. Then, enter your lock screen password.

Use Face Unlock

Turn on the screen and align it with your face. Your device will unlock once your face is recognised.

Display Your Signature on the Lock Screen

Go to **Settings > Home screen & style**, touch **Lock screen signature**, then type text to display on the lock screen.

To remove the signature, touch **Lock screen signature** and delete the text.

Connect to the Mobile Network

Enable or Disable Airplane Mode

When taking a flight, you can enable Airplane mode if required to do so by the airline. In Airplane mode, your device will not be able to make calls, send or receive SMS messages, or use mobile data, but all other functions will be available.

You can enable or disable Airplane mode using either of the following methods:

- Swipe down from the status bar to open the notification panel, then swipe down again to display all shortcuts. Touch  to enable or disable **Aeroplane mode**.
- Go to **Settings > Mobile network**, and enable or disable **Aeroplane mode**.

When Airplane mode is enabled, Wi-Fi and Bluetooth will automatically be disabled. You can re-enable them if allowed to do so by the airline.

 . Data services are not supported on Wi-Fi only tablets.

- Calling services are not supported on Wi-Fi only tablets.
- SMS messaging services are not supported on Wi-Fi only tablets.

Connect to the Wi-Fi Network

Introduction to Wi-Fi

Connecting to the Internet over Wi-Fi is an effective way to save mobile data.

Connect to a Wi-Fi Network

 Be extra careful when connecting to a free public Wi-Fi hotspot to avoid security risks and economic loss resulting from the leakage of your personal data.

- 1 Go to **Settings > Wi-Fi**, and enable **Wi-Fi**.
- 2 Connect to a Wi-Fi network on the **Wi-Fi** screen using either of the following methods:

- Select a Wi-Fi network to connect to under **Available networks**. A password is required for encrypted networks.
- To manually add a Wi-Fi network, scroll down to the bottom of the screen, touch **Add network**, and enter the SSID and password as prompted to complete the connection.

The  icon displayed on the status bar indicates that the device is connected to Wi-Fi.

Transfer Data Using Wi-Fi Direct

You can use Wi-Fi Direct to transfer data between Honor devices. Wi-Fi Direct allows you to transfer large files to a nearby device more quickly than Bluetooth and without having to pair the devices.

- 1 On the receiving device, go to **Settings** > **Wi-Fi** and enable **Wi-Fi**.
- 2 Go to **More settings** > **Wi-Fi Direct** to start searching for nearby devices that have enabled Wi-Fi Direct.
- 3 On the sending device, touch and hold to select the files you want to share, touch , and select **Wi-Fi Direct**.
 These steps may be different if you are sharing files directly from an app.
- 4 Touch the icon of the receiving device to establish a connection, then share the files.
- 5 On the receiving device, accept the Wi-Fi Direct transfer request.

Learn about the Home Screen

Explore your home screen

On the home screen, you can:

- Check the status of your tablet or view notifications on the status bar at the top of screen.
- Swipe left and right to check apps, on-screen cards, and widgets.

You can pinch with two fingers on the home screen, and go to **Settings** to change the layout style.

Service cards

Keeping informed with important information and one touch to access frequently used features without opening apps. The multi-style cards distinguish your home screen from others.

Apps supporting service cards have an indicator bar by default at the bottom (go to **Settings** > **Home screen & style** > **Home screen settings** to enable or disable **Show card bar**).

Add service cards by editing the home screen

Pinch two fingers on the home screen to enter the edit screen, tap **Cards**, select **Gallery**, **Weather**, or others, swipe left and right to select your preferred style, tap **Add to Home screen**.

Swipe up app icons to add service cards

Swipe up app icons supporting service cards, unfold service cards (tap other areas to collapse), and tap  in the upper right corner of the card to pin it to the home screen.

Edit Service Cards

Using Notepad as an example, you can edit the cards in the following way:

Long press the Notepad card and select **Edit Card** in the pop-up list to select the category of Notepad.

Desktop Cards Stack

Drag a card to another one of the same size to create a stack. This feature supports stacking up to 10 cards. Drag a card to a card set containing cards of the same size. The stacked cards are automatically expanded, and you can set the stacking order for the cards. You can also:

- Switch cards: Swipe up or down the stacked cards to view all the cards.
- View cards: Tap a card to view the details.
- Expand cards: You can expand all the cards with a long slide up or down.
- Remove cards: Press and hold a card and then select to remove it.
- Remove a card set: Press and hold stacked cards and select to remove the card set.

Remove service cards

Long press the service card, select **Remove** in the pop-up list, then tap **Remove** in the confirmation box to remove the card.

Big folders

Store your apps in a big folder. You can access them without having to open the folder, making the home screen more efficient to interact with.

Switch to Large Folder

Press and hold a small folder and tap **Enlarge**.

 If there are more than 9 apps in the folder, a "more apps" icon will be displayed at the lower right corner.

Enable App in the Large Folder

Tap the app icon in the large folder to enable the app.

Tap the “more apps” at the lower right corner of the large folder to expand the large folder and view or open more apps.

More Operations for Large Folder

Rename large folders: Long press a large folder to rename it.

Add or remove apps: Open the large folder, tap , and follow the on-screen instructions to add or remove apps.

Switch to Small Folder

Long press the large folder and tap **Shrink** to switch it to a small folder.

App Suggestions

App Suggestions recommend apps that you need for your daily life. Based on your current needs, making it more efficient to access the apps and services.

Enable App Suggestions

App Suggestions card is pre-installed on the home screen by default.

Go to **Settings > Honor AI > AI Suggestions > App Suggestions**, make sure the switches of the apps supporting **App Suggestions** are turned on.

Add App Suggestions to the Home Screen

You can select the bigger **App Suggestions** card for more accurate recommendations and a better experience.

Pinch two fingers on the home screen to enter the edit screen, tap **Cards**, and select **AI Suggestions**. Swipe left and select the **2*4 App Suggestions** card style, then tap **Add to Home screen**. If there is no space on the home screen, **Cards** will be added to another screen.

Stop the app from being recommended

Go to the **AI Suggestions** card on the home screen, long press the **Settings** app until the dialog box appears, and tap **Not interested > OK**. The **Settings** app will not be recommended any more.

Personalise Your Home Screen

Tailor your Home screen to suit your needs and preferences. With customised shortcuts for apps and individual app features, access to a wide range of services is just a tap away. Whether it's office tools, video streaming, payment apps, or fitness routines, every scenario is within easy reach. You can also adjust the size of your folders to your liking and express your style.

Expand Quick Access to Atomic Services

- 1 Long press the desired app icon, then release it to enter edit mode .
- 2 Drag any corner  to expand quick access to atomic services, such as scanning or displaying payment codes.
- 3 Tap the desired services to access it instantly.

 Dragging can only be done towards empty areas on your screen. Please be aware that some apps may not support the feature.

Edit Quick Access to Atomic Services

When expanded, long press the card, then tap **Edit shortcuts** to access the following operations:

- Long press a quick access in the **Display** list to adjust its order.
- Drag a quick access from the **Hide** list to **Display** list, or vice versa, to change its visibility.

Personalise Folder Icon Sizes

Long press a folder icon to enter edit mode , then drag any corner of the icon to change its size and shape according to your preference.

 Dragging can only be done towards empty areas on your screen. If there's no empty space around the target folder, you won't be able to enlarge it.

Dock

- 1 Open **Settings**, search for **Global Taskbar**, and turn it on.
- 2 On your tablet or unfolded phone, swipe up from the bottom and hold briefly until the Dock appears. The Dock allows you to swiftly launch apps, access split screen, and use floating windows.

Launch Apps From Dock

Dock displays all your apps, including pinned apps and recently used apps.

Tap an app icon in Dock to access the app.

Access Split Screen From Dock

Press and hold an app icon in the Dock, then drag it to either the long edge to enter split screen.

Access Floating Windows From Dock

Press and hold an app icon in the Dock, then drag it to the centre screen to enter floating windows.

Boost Your Productivity with the Productivity Layout

Using the productivity layout, you can put your 10 most frequently used applications in the application bar at the bottom of the home screen and quickly open the most recently used applications, making it easy to select frequently used office software when working to improve your efficiency. The application bar in the productivity layout is divided into two parts: the left contains the permanent applications and the right the recent applications. You can drag the separating line between these two parts to expand the application bar and customize the number of applications shown for your convenience.

- **Customize the permanent application bar:** Up to 7 permanent apps can be displayed in either landscape or portrait orientation of the device. You can use the default apps or add/remove them according to your needs. You may remove all permanent apps from the left application bar but the bar itself cannot be disabled.
- **Customize the recent application bar:**
The device displays at least 3 recent apps in landscape and 1 in portrait. Drag the separating line to show more or hide recent apps.
- Hide the recent application bar: You can manually remove all apps from the recent application bar or go to **Settings > Home screen & style > Home screen settings** and turn off **Show recent apps**. After this, the right application bar will be disabled.

Control Centre

You can use the tablet's shortcut functions or make quick settings in the **Control Centre**. Swipe down from the top right of the screen to open the Control Centre. Swipe down from the top middle or left of the screen to open the Notification Centre. Swipe left or right on the blank space to switch between them.

Use shortcut switches

Tap the shortcut switch to enable or disable its function. Tap & hold on the shortcut switch to quickly enter the setting page of the function (if there is a setting page). For example, tap & hold on **Wi-Fi**, you can directly enter “**Settings > Wi-Fi**” setting page.

Slide down the bottom icon of the shortcut switch panel to show more shortcut switches.

Use smart recommended shortcut switches

Based on the smart capabilities of **AI Suggestions**, your tablet can intelligently perceive the usage frequency and scenarios of shortcut switches. At the right time, it will actively recommend commonly used shortcut functions that you may need, which can save your time.

With the increase of usage time, the recommendation becomes more and more accurate.

Customise Control Centre

- **Customise AI Suggestions panel and Switch panel:** Tap  > **Edit shortcut switch**, and tap & hold on the shortcut switch icon and drag it to sort, add or hide, and then tap **Done**.
- **Hide or show the device collaboration page of MagicRing:** tap  > **Hide MagicRing** (or **Show MagicRing**), to close or show the entrance of the device collaboration page of **MagicRing**.

Learn about Common Icons

Learn about Common Notification and Status Icons

 The network status icons may vary depending on your region or network service provider.

Different products support different functions. The following icons may not appear on your tablet. Please refer to the actual display of the tablet.

	Connected to 4G network		Connected to 3G network
	Connected to 2G network		Connected to HSPA+ network
	Connected to HSPA network		Roaming
	Full signal		No SIM card
	Data saver enabled		Connected to hotspot
	Hotspot enabled		Connected to both 2.4 GHz and 5 GHz Wi-Fi networks
	Connected to Wi-Fi network		Connected to Wi-Fi 6 network
	Automatic network switching through Wi-Fi+		Connected to both 2.4 GHz and 5 GHz Wi-Fi 6 networks
	No battery		Hotspot disconnected
	Charging		Battery low
	Super Charging		Quick charging
	Power Saving mode enabled		Bluetooth enabled

	Connected to Bluetooth device		Digital Balance enabled on the tablet
	More information		Bluetooth device battery
	Location service enabled		Connected to VPN network
	Connected to earbuds		Eye Comfort enabled
	Ongoing call		Unable to connect to the voice channel and answer or make calls.
	Missed call		VoLTE HD call enabled
	Mute		New messages
	NFC enabled		Vibration mode
	Syncing data		Do Not Disturb enabled
	Performance mode enabled		Data sync failed
	Receive Calendar reminder		Receive new emails
	Alarm enabled		Blocked calls or messages
	Aeroplane mode enabled		

View and Disable Notifications

View and Clear Notifications

View Notifications

When there is a notification reminder, you can unlock the screen and swipe down from the status bar to open the notification panel and view the notification.

Clear Notifications

- You can remove a notification by swiping right on it.
- You can touch  to clear all notifications.

- Some system notifications and notifications from apps running in the foreground cannot be cleared.

Do Not Show Notification

To not get disturbed by notifications, swipe left on the notification you want to process, and tap , you can select:

- Use gentle notifications
- Disable notifications
- More settings

- Some system notifications and notifications from foreground apps cannot be closed or delayed.
- Different apps may support different options.

Set display style of notification panel

Go to **Settings > Notifications & status bar** and set the display style of the notification panel in the **Lock screen** area.

Adjust the Volume

Adjust Sound Settings

Press a Volume Button to Adjust the Volume

Press the Volume up or down button to adjust the volume.

Set the Default Volume

Go to **Settings > Sound**, and you can then set the volume for the following items:

- Notifications
- Alarms
- Music, Videos, Games

- Calling services are not supported on Wi-Fi only tablets.

Press the Power Button to Mute Your Device When It Rings

When your device rings for an incoming call or alarm, you can press the Power button to mute it.

Look at the Screen to Reduce Volume

When you have an incoming call from your tablet, you can adjust the volume of the call by looking at the screen.

Before using this feature, go to **Settings > Honor AI > Smart Sensing**, and make sure that **Glance to reduce ringer volume** is enabled.

Set up More sound settings

Go to **Settings > Sound > More sound settings** and explore more ways to alert. Such as **Screen lock, Screenshot**.

 This feature may vary by device.

Power On/Off and Restart

Turn On and Off or Restart Your Device

Power Your Device On and Off

To power off your device, press and hold the Power and Volume up button, touch **Power off** and **Touch to power off**.

To power on your device, press and hold the Power button for a few seconds until your device displays the logo.

Restart Your Device

Restart your device on a regular basis to clear the cache and keep the device in an optimal state. A restart can sometimes resolve the issue when your device encounters a problem.

Just press and hold the Power and Volume up buttons, then touch **Restart** and **Touch to restart**.

Force restart your tablet

You can force restart your tablet if it is not working or turning off properly. Long-press the volume down and power buttons for more than 10 seconds to force restart your device.

Charge Your Tablet

Charge Your Device

Your device will alert you when it is running out of power. Please make sure to charge your device in time to prevent it from turning off automatically when the power runs out.

Precautions for Charging

- Charge your tablet using the standard adapter and USB cable that came with your device. Using other chargers or USB cables may cause repeated restarts, slow charging, overheating, or other undesirable effects.
- Your tablet will automatically run a safety check when a charger or other device is connected to the USB port. If moisture is detected in the USB port, your tablet will

automatically activate safety measures and limit charging. Disconnect your tablet from the USB port and wait until the USB port is dry.

- The time required to fully charge the battery depends on the ambient temperature and age of the battery.
- Batteries have a limited number of charge cycles. When the battery life becomes noticeably shorter, go to an authorised Honor Customer Service Centre to replace the battery.
- Do not cover your tablet or charger during charging.
- Your tablet may heat up when you have been using it for an extended period of time, especially in high temperatures. In this case, stop charging, disable some features, and move your tablet to a cool place.
- Please do not use your tablet while it is charging.
- If your tablet does not respond after you press and hold the Power button, the battery may have run out, charge for more than 30 minutes.

Using the Charger that Came with Your Device

- 1 Use the USB cable that came with your device to connect your device and the adapter.
- 2 Plug the adapter into a power socket.

Charging Your Tablet with a PC

- 1 Connect your tablet to a PC or other device using a USB cable.
- 2 When the **Use USB to** dialog box is displayed on your tablet, touch **Charge only**. If another option has been set previously, the dialog box will not pop up. Swipe down from the top right of the screen to open the Control Center, touch **Settings**, then select **Charge only**.

Overview of Battery Icons

You can check the battery level from the battery icon on the tablet screen.

Battery Icon	Battery Level
	Less than 10% battery remaining.
	10% to 20% battery remaining.
	Charging, 20% to 90% battery remaining.
	Charging, at least 90% battery remaining. If 100% is displayed next to the battery icon, or a charging complete message is displayed on the lock screen, the battery is fully charged.

Honor Connect

Smart Collaboration

Enjoy Smart Life with Honor Connect

Honor Connect, based on Honor-developed MagicRing technology, can make device collaboration more convenient and efficient.

Devices logged in with the same Honor ID can discover and automatically connect to each other, forming Magic Ring. Information and services can seamlessly transfer across the devices, which fully leverages each device's advantages and makes your life more convenient and efficient. Go to **Settings > Honor Connect** to learn about the functions supported by the device model and version.

- 1 Connected Apps:** You can start work on one device, then switch to another nearby device and pick up where you left off without any interruption. For example, a file being edited on your phone can be seamlessly transferred to a computer for further editing.
- 2 Connected Call:** You can receive or make phone calls on your tablet or PC so that you won't miss any important calls or stop your current task. For example, you can answer phone calls on your tablet.
- 3 Connected Notification:** You can handle or view phone notifications on your tablet or PC so that you can stay focused on your current work without missing important information. For example, you can close the phone alarm on your computer.

In addition, on **Honor Connect** Multi-Device Collaboration screen, you can see nearby devices with the same account in the Magic Ring. Drag a device to create collaboration and transfer tasks with ease.

- There is no need to install any additional software or plug-ins or incur additional communication service fees to use **Honor Connect**.
- Services of **Honor Connect** may vary with device models and versions.

Connect More Devices with Honor Connect

First, update all the devices to be connected to the latest version and make sure they all support **Honor Connect**.

- 1** Log in to the same Honor ID on your phone and the device to be connected.
- 2** Toggle on the Wi-Fi and Bluetooth on your phone and the device to be connected.
- 3** Go to **Honor Connect**, agree to the user agreement, and make sure the services of Honor Connect are enabled on your phone and the device to be connected.

On the setting page of **Honor Connect** on the phone, the device with “**Nearby**” displayed indicates that it has been connected. Tap its name and make sure the services of Honor Connect are enabled.

- To ensure a faster and more stable connection, it is recommended to connect devices to the same Wi-Fi.

Manage Honor Connect of your Phone/Tablet

Go to **Settings** > **Honor Connect** on the phone/tablet. On the list of **Services on this device**, you can enable or disable Honor Connect on the current device. For example, tap **Connected Apps**, turn off **Connected Apps**, then applications and services will no longer flow between this device and others.

Disable Honor Connect on Your Phone/Tablet

Go to **Settings** > **Honor Connect** >  > **About** on the phone/tablet, and tap **Disable service** to disable all Honor Connect services on the device. If you want to restore them, go to **Settings** > **Honor Connect** and **Agree** to the User Agreement again.

MagicRing

MagicRing

Honor Connect MagicRing has integrated various devices and services, all accessible and controllable directly from the MagicRing page. With MagicRing, phones, tablets, laptops and other devices linked to the same Honor ID will automatically appear on the MagicRing page. This enables seamless service transfer across all your MagicRing devices, all managed from a single device. You can also easily transfer apps and files, making the process convenient and efficient.

Enter MagicRing page

Swipe down from the top right of the screen to open the Control Centre and tap

MagicRing card. If the card of MagicRing in Control Centre is deleted, just tap  and select **Show MagicRing**.

MagicRing transfer services

On the MagicRing page, tap each device ball in the MagicRing to see the services provided by the device. Drag the service to another device ball to easily transfer the service. On any device (phone, tablet, computer) that supports the MagicRing page, you can control the transfer services of all devices in the MagicRing.

Get started

Log in to the same Honor Account on your tablet and nearby devices, turn on Wi-Fi and Bluetooth, and enable **Honor Connect** in **Settings**. Devices such as watches and headphones need to be paired and connected to other devices.

Transfer services

Through the MagicRing page, you can initiate screen sharing, network sharing, Connected Input, camera sharing across devices and other services.

- 1 On the MagicRing page, tap the device ball to automatically display the service names that the device can provide.
- 2 Tap/drag the service you want to transfer, and drag the service card to the device you want to transfer it to.

i The service may not support transfer to all devices in the MagicRing. When dragging the service card, if the colour of the device ball is gray, it means that the service does not support transfer to this device.

Disconnect service transfer

Tap the  on service card or drag the service card adsorbed on the device ball out of the adsorption area to disconnect.

Transfer apps via MagicRing

You can transfer apps across devices via MagicRing.

Getting started

Log in to the same Honor Account on your tablet and nearby devices, turn on Wi-Fi and Bluetooth, and enable **Honor Connect** in **Settings**.

Transfer apps

Swipe up with three fingers in the app to enter MagicRing page. A task card will form. Drag it to the target device, and the app will be transferred.

Means of transfer

The means of transfer depend on apps and target devices.

- If the app supports **Connected Apps**, it will be transferred via **Connected Apps**.
- If it does not support **Connected Apps**, how it will be transferred depends on the target device.
 - **From tablet to Vision:** The tablet screen will be projected to the Honor Vision. You can continue to enjoy the content of your tablet on the Vision.

Connected Apps

Connected Apps

When you edit a note or file, watch videos, or listen to music on your tablet, Connected Apps enables you to seamlessly transfer the current task to other nearby devices with the same Honor ID. For example, you can continue to edit the note on your PC without interruption.

Availability

Tablets, phones and PCs that support Honor Connect.

Supported system apps

Notes and Email

Notes Continuation

The Notes that is being edited on your tablet can be transferred to another device for more convenient operation.

Before use

- 1 Log in to the same Honor ID on the device, turn on Wi-Fi, and turn on Bluetooth.
- 2 Go to **Settings > Honor Connect**, and ensure the **Connected Apps** is enabled.
- 3 Click on the connected device (displayed as lit) and make sure the **Connected Apps** is toggled on.

Notes continuation

- 1 Edit your Notes on **Notes** of your tablet.
- 2 You will receive a connection prompt on:
 - **AI Suggestions** home screen cards or Recents (swipe up from the bottom edge of the screen and pause in Gestures mode or tap  in Three-key mode) if the connected device is a mobile phone.
 - Home screen recent tasks or Recents (swipe up from the bottom edge of the screen and pause in Gestures mode or tap  in Three-key mode) if the connected device is a tablet.
 - Taskbar if the connected device is a PC.
- 3 Click the prompt on the connected device, and the Notes that is being edited on your tablet will be seamlessly transferred to the current device, including its content and editing status.

Clipboard Continuation

After you copy a picture or text on your tablet, you can paste the content on another device nearby with the same ID. The opposite is also available. After you copy on another device **nearby with the same ID, you can paste it on your tablet.**

Before use

- 1 Log in to the same Honor ID on the device, turn on Wi-Fi, and turn on Bluetooth.
- 2 Go to **Settings > Honor Connect**, and ensure the **Connected Apps** is enabled.
- 3 Click on the connected device (displayed as lit) and make sure the **Connected Apps** is toggled on.

Clipboard continuation

- 1 Copy a link, text or image in an app on your **tablet**. For example, you can copy an image or text on a website.
- 2 Paste the content on a connected device. For example, you can paste the content into the Microsoft Word on your PC.
 - Some apps support pasting content across devices.
 - You need to connect both devices to the Internet when you paste the content.
 - The clipboard that can work across devices supports a maximum content of 20 MB.

Connected Call

Connected Call

It allows nearby devices including laptops and tablets to share the Call function of the phone. You can answer or make a call on these devices, or transfer your phone call to these devices. Switch calls seamlessly between devices.

Applicable devices

Phones, tablets, laptops which support Honor Connect.

Preparations

- 1 Log in to the same Honor ID on the phone and nearby devices, and toggle on Wi-Fi and Bluetooth.
- 2 Go to **Settings** > **Honor Connect** > **Connected Call** and ensure **Connected Call** is enabled.
- 3 On the setting page of **Honor Connect**, tap a device with “**Nearby**”, and make sure that the **Connected Call** is turned on.
 - This function will not generate extra call costs.
 - It only supports the carrier’s voice calls.
 - Sharing calls between phones is not supported. If you want to receive calls on another phone, go to **Phone** >  > **Settings**, tap **Call forwarding**, select a transfer mode and enter the target number (this function requires carrier service support, please consult the network operator for details).

Allow Nearby Devices to Answer/Make Calls

Phone calls will be automatically transferred to connected laptops and tablets. You can choose a device at will to answer or make a call.

 • Call notification will not show on the lock screen or sleep screen.

• The tablet can identify its owner. Go to **Settings > Honor Connect > :**  **> Additional services** and toggle on **Owner Identification**. If the device user is not its owner, it will not receive the call notification. When its owner uses it with other people, call notification with hidden caller name will show on the device.

Transfer Calls to Nearby Devices Manually

After you pick up a call, you can tap  on the call screen to transfer your call to another device, such as laptop.

Connected Notification

Connected Notification

Sync notifications (e.g., SMS, alarms, social media) from your phone to nearby devices in use (laptop, tablet, etc.). Check and manage notifications across devices conveniently.

Available devices

Phones, tablets, and laptops which support Honor Connect.

Preparations

- 1 Log in to the same Honor ID on your phone and nearby devices and turn on Wi-Fi and Bluetooth.
- 2 Go to **Settings > Honor Connect > Connected Notification**, make sure **Connected Notification** is enabled, and select apps whose notifications you want to sync.
- 3 On the settings page of **Honor Connect**, check **Nearby** devices, and make sure **Connected Notification** is enabled on these devices.

Manage Phone Notifications on Nearby Devices

Notifications will be automatically synced from your phone to connected devices (laptop, tablet, etc.). You can reply to SMS messages, turn off alarms, and process other notifications on any device. The notification status will be updated across devices.

- To protect your privacy, the notification synced to your laptop will hide its content and only display it when you move the mouse over the notification.
- Owner Identification is supported on tablets. You can go to **Settings > Honor Connect > ... > Additional services** and enable **Owner Identification**. Then, notifications won't be synced when another person is using your tablet.
- If your tablet has installed or your laptop is running the same third-party app as your phone, notifications of this app won't be synced to these devices. For example, if you have installed WeChat on your tablet or are running WeChat on your laptop, these devices won't receive WeChat notifications from your phone.

Manage App's Permissions for Connected Notification

Go to **Connected Notification**, and manage app-specific permissions for Connected Notification. When you grant permission for the app, its notifications will be transferred to nearby connected devices.

- Go to **Settings > Honor Connect > Connected Notification**.
- Toggle the switch on or off based on your preferences.

Connected Input

Share tablet's mouse and keyboard with phone

The phone can also use the tablet's keyboard and touchpad. The keyboard and mouse of the tablet can be used freely between devices so that you can drag and drop app windows between devices. You can also drag and drop images or files to transfer them across devices, giving full play to the advantages of each device, and making your work and study convenient and efficient.

Available devices

Phones and tablets running with MagicOS 7.2 or later and supporting Honor Connect. The tablet's keyboard and touchpad can be shared with one mobile phone.

Preparations

- 1 Log in to the same Honor ID on your phone and tablet, and toggle on Wi-Fi and Bluetooth.
- 2 Go to **Settings > Honor Connect > Connected Input** and make sure **Connected Input** is toggled on.
- 3 On the setting page of **Honor Connect**, tap a **Nearby** device, and make sure that the **Connected Input** is turned on.

Enable Connected Input

Place your phone beside your tablet. Make sure both devices are unlocked with the screen on.

Method 1: Move the cursor to touch the edge of the computer screen twice in a row to click on the corresponding device in the pop-up box at the edge to establish the connection. When the connection is established, the cursor can jump to the phone's screen.

Method 2:

- 1 Enter the MagicRing page of any MagicRing device, including phone, tablet and computer.
- 2 Tap the device ball of the tablet in MagicRing.
- 3 Just drag the Connected Input service of the tablet device ball to share service with phone.

Method 3: Go to **Settings > Honor Connect > Connected Input** on your tablet, and tap the device you want to connect in **Available devices**.

Once connected, the mouse cursor can jump across devices seamlessly. You can control your phone in the usual way.

Intelligently identify/adjust device arrangement

If both your tablet and phone support smart orientation function, your tablet can automatically sense your phone's direction. When you change their positions (such as moving your phone from the left side to the right side of the tablet), the mouse cursor orientation will be adjusted automatically to ensure it can jump to the phone screen in the correct direction.

- 1 To improve accuracy, please place your phone on a holder and within 50 cm of the tablet.
- 2 Go to **Settings > Honor Connect > Connected Input** on your tablet, and ensure **Auto Alignment** is enabled.

Stop Connected Input

You can click the X on Connected Input card on the MagicRing page of any phone, tablet or computer under the MagicRing, or drag the Connected Input card adsorbed on the device ball out of the adsorption area to disconnect.

Connected Camera

Connected Camera

With Connected Camera, you can use the front and rear camera of your tablet on your PC for real-time shooting. For example, when participating in a video conference on computer, you can use the camera of your tablet. The shooting angle is flexible, and the picture is clear and professional.

Conditions

Tablet and computer should all support this feature. The camera of tablet can be shared with computer.

Getting started

- 1 Log in to the same Honor Account on your tablet and nearby devices, and toggle on Wi-Fi and Bluetooth.
- 2 Go to **Settings > Honor Connect > Connected Camera** and make sure **Connected Camera** is enabled.
- 3 On computer, make sure **Connected Camera** is enabled.

Share the camera of Your tablet with your PC

When using video conferencing, video calling, live streaming and other apps that require a camera on the computer, you can choose to use the camera of your tablet or phone as needed since the picture is clearer and the camera is more flexible to move around.

 Please refer to the actual products for the supporting conditions and camera sharing steps.

Network sharing

Tethering

Without network, your tablet and computer can connect to the network of your phone without enabling the hotspot or entering the password, providing a stable network for you.

Availability

Phones, tablets and PCs supporting Honor Connect. You can share the phone's mobile network with the tablet and PC.

Preparations

- 1 Log in to the same Honor ID on your phone and nearby devices, and toggle on Wi-Fi and Bluetooth.
- 2 Go to **Settings > Honor Connect**, ensure the **Tethering** is enabled.

Sharing Mobile Network with Nearby Devices

Method 1: When a device without network access is not connected to the internet, and the phone has either mobile data or a Wi-Fi network connection, the device will automatically display a network connection prompt when it gets close to the phone. Simply tap **Use** to access the network.

Method 2:

- 1 Go to the MagicRing page on any phone, tablet, or computer within the MagicRing.
- 2 Tap on the phone (with network) device ball in the MagicRing, then drag the tethering service card to the tablet, computer, or other phone to share the network.

- Enable the notification panel by swiping down from the top centre or left of the phone screen, tap  on the right side of the tethering card, and tap **Stop sharing** to stop tethering. You can also tap the small blue ball attached to the device ball, then tap  to stop tethering, or drag the tethering service card attached to the device ball out of the attachment area to stop sharing.
- Tethering is only supported from the phone to other devices without a network in the MagicRing (such as tablets, computers, or other phones).

Cross-device service use

Connected Gadgets

You can freely choose the most suitable device to shoot photos by using other device's camera. For example, the photos taken by your phone can immediately show in your computer's file, making it easier to capture your inspiration and get more materials.

Availability

Phones, tablets and PCs running with MagicOS 7.2 or later and supporting Honor Connect. You can use the camera of your phone or tablet to take photos and videos and use them on your PC.

Supported system apps

Honor Notes and Honor Docs

Supported third-party apps

Ding Drive

- Please go to AppGallery or third-party official website to download and install the latest version of the third-party app. Please refer to the actual situation for the support conditions.

Preparations

- 1 Log in to the same Honor ID on your phone and nearby devices, and toggle on and Bluetooth.
- 2 Go to **Settings > Honor Connect** and make sure **Honor Connect** is toggled on.

Share Tablet's Camera with a Nearby Phone or Tablet

When using a document app on your tablet, you can use another tablet's camera or phone's camera to take photos, and insert them into the document.

For example, when you are using Honor Notes on your tablet, you can tap  on the editing screen, and use the camera of another phone or tablet to take photos, and then they will be seamlessly inserted into the note.

Screen sharing

Screen sharing

The screen can be shared with other MagicRing devices of the same account, making multi-screen work more focused and efficient.

Available devices

Phone, tablet, and PC that support Honor Connect.

Get started

- 1 Log in to the same Honor Account on your tablet and nearby devices, and toggle on Wi-Fi and Bluetooth.
- 2 Go to **Settings > Honor Connect** and make sure **Honor Connect** is toggled on.

Share computer screen

Your computer screen can be shared with other MagicRing tablet or foldable phone of the same account. You can use your tablet or foldable phone as the second screen of your computer to easily expand the screen. For example, you can easily compare documents on two screens, or use one screen for meetings and the other one to take notes. Multi-screen office can make you more focused and efficient while working. You can also mirror the computer screen to a tablet or foldable phone, and use the stylus of the tablet or foldable phone to easily complete handwriting and drawing.

- 1 Enter the MagicRing page of any MagicRing device, including phone, tablet and computer.
- 2 Tap the device ball of the computer in MagicRing.
- 3 Drag the screen sharing service of the computer's device ball to the tablet or foldable phone.
- 4 After the sharing is successful, you can switch the screen sharing mode to Mirror or Extend mode from the menu on the top of the tablet or foldable phone.

You can click the  on the MagicRing page of any MagicRing phone, tablet or computer, or drag the screen sharing service card adsorbed on the device ball out of the adsorption area to disconnect.

Earbuds Sharing

Earbuds Sharing

Enjoy seamless audio across all your **MagicRing** devices. Simply drag the device ball, and you can easily change audio source for an uninterrupted listening experience.

Conditions

Devices such as tablet, earbuds, phone must all support this feature.

Getting started

- 1 Log in to the same Honor ID on the devices and have both Wi-Fi and Bluetooth enabled.
- 2 Go to **Settings** and enable **Honor Connect**.
- 3 Make sure your earbuds are connected to any of your **MagicRing** devices via Bluetooth.

Share Earbuds Across Devices

- Swipe down from the top right corner of your tablet screen to open the Control Centre, then tap **MagicRing**.
- Tap the earbuds' device ball and drag the audio service to your tablet; the earbuds will then play audio from that device.
- To change the audio source while listening, simply tap the device ball and drag the audio service to the device you wish to use.

 This feature might not be available on some earbud models.

Printer Sharing

Printer Sharing

Add printers to **MagicRing** for hassle-free printing. Once you're set up, a quick swipe-up with three fingers on any **MagicRing** device lets you print documents swiftly, avoiding the need for additional printing plugin installations and configurations, and making your office work a breeze.

Conditions

The phone, tablet, and printer must all support this feature.

Getting started

To use this feature, make sure the printer is properly connected to your phone or tablet. You should be logged in to your devices using the same Honor ID, and have both Wi-Fi and Bluetooth turned on. Then, turn on **Honor Connect** in **Settings**.

Share Printer Across Devices

- To print, open the document you need, swipe up with three fingers to access **MagicRing**, and the document will pop up as a service capsule.
- Drag this capsule over to the printer icon to start printing instantly.
- On **MagicRing**, tap the printer icon and drag the **Global Print** to other devices, which enables seamless printing service transfers between your gadgets.

 . This feature might not be available on some printers.

• This feature is available for phones and tablets, but not for laptops.

Screen Sharing between Honor Phone and Tablet

Multi-screen Collaboration Between Your Phone and Tablet

Connect your phone and tablet to use Multi-screen Collaboration for cross-device operations, such as to display your phone screen on the tablet, use your phone apps on the tablet, drag files across the two devices, and edit a file from your phone on the tablet.

Connect Your Tablet and Phone

Connect your tablet and phone to enable Multi-screen Collaboration using any of the following methods:

Connect over Bluetooth:

- 1 Swipe down from the status bar on your tablet and enable **Multi-Screen Collaboration**.
- 2 On your phone, swipe down from the status bar to open the notification panel, and enable .
- 3 Hold your phone close to your tablet and follow the onscreen instructions to establish a connection.

Scan QR code to connect:

- 1 On your tablet, enable **Multi-Screen Collaboration**, on the **Multi-Screen Collaboration** screen, touch **Scan to connect**.
- 2 Ensure that your phone is connected to the Internet, and connect your phone and tablet as prompted.

Access Phone Apps and Files from Your Tablet

After connecting your phone with your tablet, you can operate your phone from your tablet, such as to operate phone apps and files, view phone notifications (such as SMS messages), and make or answer phone calls.

When your phone screen is unlocked, you can perform the following operations in the phone window on your tablet:

- Open **Phone** to make a call by dialing a number.
- Open **Messages** to view and reply to SMS messages.
- Open **Gallery** or **Files** to view photos, videos, and files, as well as to play video or audio files from your phone.
- Swipe down from the top right of the screen to open the Control Center on your phone, then touch **Switch audio/video to another device** or **Switch audio/video back to current device** to switch the audio output device.
- If your tablet is connected to an external keyboard or a stylus, you can use it to input text and control the phone window on your tablet.

Drag to Transfer Files Between Your Phone and Tablet

- 1 Open **Gallery** or **Files**, and touch and hold a picture, video, or document.
- 2 Select more files if needed, touch and hold any of the selected files, then drag them when an icon for dragging files appears.

For example, you can:

- Drag to transfer files in **Gallery** or **Files** between your phone and tablet.
- Drag a picture, text, or file from your phone to an open document on your tablet, such as a Microsoft Office document, memo, or email.

 This feature may vary by device.

Disconnect Your Phone from Your Tablet

After you have finished using your phone and tablet, you can disconnect them using the following methods:

- On the phone window displayed on the tablet, tap  to disconnect.
- On your phone, swipe down from the top middle or left of the screen to open the Notification Centre and tap **Disconnect**.

Easy Projection

Project Your Tablet Screen Wirelessly

You can project your tablet screen wirelessly to a large display (such as a TV).

- 1 Perform the following based on the model and functions of the large display:
 - **If the large display supports Miracast**, turn on its wireless projection switch.
 - **If the large display does not support Miracast**, connect a wireless HDMI adapter to it. Ensure that the wireless HDMI adapter is connected to a power supply.
- 2 On your tablet, swipe down from the top right of the screen to open the Control Center, and turn on .
- 3 Swipe down again to show all shortcuts and enable **Wireless Projection**. Your tablet will start searching for available display devices.
- 4 In the device list, touch the name corresponding to the large display or wireless HDMI adapter to complete the projection connection.

Alternatively, swipe down from the top middle or left of the screen to open the Notification Center, and touch **Disconnect**.

Honor Print

Print Images and Documents

Honor Print

Your tablet can discover printers for easy printing.

1 Turn on Wi-Fi on your tablet.

2 Go to **Settings > More connections > Print > Default Print Service**, tap **Add**, then follow the prompts on the screen to add a new printer.

Add a network-configured printer: Make sure your tablet and the printer are connected to the same Wi-Fi hotspot. Then the printer will be automatically added on the **Add printer** screen of your tablet.

3 On the **Print Assistant** screen, choose a method according to your need.

- **Print document**
- **Print images**
- **Scan**

On the **Print Assistant** screen, tapping  allows you to create a home screen shortcut for Honor Print, manage printing jobs, and delete added printers.

Connect Your Tablet to a Printer

1 Check the printer manual or consult with its manufacturer to verify that it is Mopria-certified.

If it is not, consult with its manufacturer to install the corresponding app or plug-in for it on your tablet.

2 Connect your tablet and the printer to the same Wi-Fi network using any of the following methods:

- Connect to a Wi-Fi router: Enable Wi-Fi on the printer and connect it to the Wi-Fi router. On your tablet, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the same Wi-Fi router, and follow the onscreen instructions to complete the settings.
- Connect with Wi-Fi Direct: If your printer supports Wi-Fi Direct, follow the instructions in the printer manual to enable this feature. On your tablet, go to **Settings > Wi-Fi**, enable **Wi-Fi**, go to **More settings > Wi-Fi Direct**, then touch the printer to establish the connection.
- Connect to your printer's hotspot: If your printer can double as a wireless hotspot, follow the instructions in the printer manual to enable the hotspot and set a password. On your tablet, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the printer's hotspot, then follow the onscreen instructions to complete the settings.

3 Go to **Settings > More connections > Print > Default Print Service**, and enable **Default Print Service**.

4 Click **Default Print Service** and follow the onscreen instructions to add the printer.

Print files

To print files under **Gallery** and **Notes**:

- Print pictures: If under **Gallery**, open the picture, tap  > **Print or export to PDF**, select the printer and follow onscreen instructions.
- Print notes: If under **Notes**, open the note, tap  > **Print**, select the printer and follow onscreen instructions.

Honor Share

Honor Share

Honor Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology uses Bluetooth to discover nearby devices that supports Honor Share and Wi-Fi Direct to transfer files without using mobile data.

Enable or Disable Honor Share

You can enable or disable Honor Share in either of the following ways:

- Swipe down from the top right of the screen to open the Control Center, then turn on or turn off **Honor Share**. You can also touch and hold **Honor Share** to access its settings screen.
- Go to **Settings** > **More connections** > **Honor Share** to enable or disable **Honor Share**.

Quickly Share Files Between Devices with Honor Share

You can use Honor Share to quickly share files between Honor devices. The recipient can preview the files before they are sent, then view the full content of the files once they have been received. For example, the recipient can view received pictures or videos in Gallery.

1 On the receiving device, enable **Honor Share**.

2 On the sending device, touch and hold to select a file or album you want to share, then touch . Touch **Honor Share**, then touch the icon of the receiving device to send the file.

 These steps may be different if you are sharing files directly from an app.

3 On the receiving device, touch **Accept** to accept the transfer.

To view the received files, open **Files**, touch the **Browse** tab, then go to **My tablet** > **Honor Share**.

You can also view the received images or videos by going to **Gallery** > **Albums** > **Honor Share**.

Share Files Between Your Tablet and Computer with Honor Share

You can use Honor Share to easily share files wirelessly and quickly between your tablet and a computer without a data cable.

Share files from your tablet to PC:

- 1 Enable Bluetooth and Wi-Fi on the PC.
- 2 Swipe down from the status bar on your tablet to access the notification panel (continue swiping for more content). Long press **Honor Share** to go to the Settings screen and turn on **Honor Share**.
- 3 Turn on **Honor PC Manager > Honor Share** on your PC and confirm **Allow discovery by other devices** is enabled.
- 4 Long press the file to be shared on your tablet, tap , and select **Honor Share**. After the receiving device is discovered, tap its name to share the file.

Share files from your PC to tablet :

- 1 Enable Bluetooth and Wi-Fi on the PC.
- 2 Turn on **Honor Share** on the tablet .
- 3 Select the file to be shared on your PC and right click **Display more options > Honor Share**. The PC will search for tablets that have the **Honor Share** function enabled. Select the tablet to receive the file.
- 4 Follow on-screen prompts to receive the file on the tablets .

 Only supports Honor notebooks with Honor PC Manager Version 15.0 and above. This feature may vary by product, please refer to the actual situation.

Cross-brand file transfer

Through **Honor Connect**, Honor tablets can quickly transfer images, videos, documents, and other files with non-Honor brand devices, and the transfer process does not require data usage.

Transfer files between a tablet and an iOS device

Preparations: The iOS device (phone or tablet only) needs to install the **Honor Connect** app.

Transfer files from the Honor tablet to the iOS device (phone or tablet only)

- 1 On the Honor tablet, select the file you want to transfer, and tap .
- 2 Open **Honor Connect** on the iOS device.
- 3 After the Honor tablet finds the receiving device, tap the device name icon.
- 4 At this time, follow the prompts on the iOS device, agree to establish a connection with the Honor tablet and transfer files.

Transfer files from the iOS device (phone or tablet only) to Honor tablet

- 1 On the Honor tablet, turn on the **Honor Share** switch.
- 2 Open **Honor Connect** on the iOS device, select the file to be transferred, and tap Share to bring up the sending interface.
- 3 At this time, the iOS device will search for the nearby Honor tablet. Once found, tap the device name icon of the corresponding device and establish a connection with it.
- 4 After successful establishment, receive the file on the Honor tablet.

Transfer files between a tablet and an MTA device

i Mutual Transfer Alliance (MTA) is an organisation jointly established by many manufacturers in the industry. Different brands of devices can easily transfer files quickly through mutual transfer without data usage. Currently, Lenovo, Xiaomi, OPPO, vivo, Nubia, Hisense, and other brands have joined the MTA. The specific situation is subject to actual conditions.

Transfer files from the Honor tablet to the MTA device

- 1 Turn on the mutual transfer switch on the MTA device.
- 2 On the Honor tablet, select the file to be sent and tap .
- 3 After finding the MTA device on the Honor tablet, tap the device name icon.
- 4 At this time, on the MTA device, follow the on-screen instructions to receive the file.

Transfer files from the MTA device to the Honor tablet

- 1 Turn on the **Honor Share** switch on the Honor tablet.
- 2 Select the file to be sent on the MTA device and tap Share according to the on-screen instructions to bring up the sending interface.
- 3 At this time, the MTA device will search for the nearby Honor tablet. Once found, tap the corresponding device name icon to establish a connection with it.
- 4 After successful establishment, receive the file on the Honor tablet.

Transfer files between a tablet and a non-MTA device (phone or tablet only)

Preparations: The non-Mutual Transfer Alliance (MTA) device (phone or tablet only) needs to install and open the **Honor Connect** app. The Honor tablet needs to enable **Honor Share**.

Transfer files from the Honor tablet to the non-MTA device (phone or tablet only)

- 1 On the Honor tablet, touch and hold the file to be transferred, and tap .
- 2 Turn on the Honor Connect switch on the non-MTA device.
- 3 After finding the non-MTA device on the Honor tablet, tap the device name icon.
- 4 At this time, tap to receive the file on the non-MTA device.

Transfer files from the non-MTA device (phone or tablet only) to the Honor tablet

- 1 Touch and hold the file to be transferred on the non-MTA device, and tap Share and select **Honor Share**.

- 2 Follow the on-screen instructions to discover and find the Honor tablet.
- 3 At this time, on the Honor tablet, select Accept to receive the file, and agree on the non-MTA device to establish a connection with the Honor tablet.

Transfer files between a tablet and a laptop

 The laptop here refers to laptops from other brands, including laptops running Mac and Windows systems.

Preparations: The laptop needs to install the **HONOR WorkStation** app, and both the laptop and Honor tablet must be connected to the same LAN.

Send files from the Honor tablet to the laptop

- 1 Open the **HONOR WorkStation** on the laptop.

- 2 On the Honor tablet, select the file to be transferred and tap .

- 3 When the Honor tablet discovers the laptop device, tap on the device name icon and send the file.

Send files from the laptop to the Honor tablet

- 1 Turn on the **Honor Share** switch on the Honor tablet.
- 2 Open **HONOR WorkStation > Honor Share** on the laptop and discover the Honor tablet as prompted.
- 3 On the laptop, select the file to be sent and drag it to the name icon of the tablet to send it.

Write and Draw with Stylus

Use a Stylus to Write Easily

The stylus for your tablet works just like your finger, but is far more accurate and flexible, offering a real writing experience. It also supports Instant Write, Global Handwriting, Free Mark, , etc. It can also be used with special applications to make writing more enjoyable.

Charge the Stylus

Attach the flat side of the stylus to the top of the tablet for pairing or charging. The attachment position may vary by model. You can move the stylus left or right until a prompt pops up on the tablet screen.

 If the stylus stays idle for a long time, its power will gradually drain until it enters the battery protection mode, which requires the stylus to be charged for 5 to 10 minutes before it can be used.

Enable the Stylus

When using the stylus for the first time, pair it with the tablet:

Attach the flat side of the stylus to the top of the tablet for pairing or charging. The attachment position may vary by model. You can move the stylus left or right until a prompt pops up on the tablet screen.

View the stylus battery level and details:

- Go to **Settings > Accessibility features > Stylus** to view the current battery level of the stylus.
- Go to **Settings > Accessibility features > Stylus > Device information** to view the details of the stylus or perform **Firmware update**.

i The stylus pen will go into a deep sleep state after being left idle for a period of time. To wake it up, please follow the above method.

Use a Stylus to Enable Instant Write

When the screen is off, tap the screen with a stylus to quickly open Notes for writing, and even resume the last unsaved content, allowing you to extend your inspiration and creativity anytime, anywhere. You can choose from a variety of stylus colours and use tools to erase, rotate, and scale text.

- 1 Enable Instant Write:** Go to **Settings > Accessibility features > Stylus > Instant Write** and make sure **Instant Write** is turned on.
- 2 Set up Instant Write:** In **Instant Write**, you can set your Instant Write preferences and the screen-off time limit to continue writing:
 - Tap **Continue writing your note** to save the note or continue writing.
 - Tap **Time limit** to reset the time limit to continue writing.

i When writing in **Notes**, tap the currently used brush in the toolbar to select the brush thickness. When the current writing tool is the eraser, tap the eraser again to select **Area eraser**, **Stroke eraser**, or **Clear handwritten content**.

Use a Stylus to Enable Global Handwriting

In any text box on the tablet, writing with a stylus can accurately convert your writing into text. You can also delete, select, and split the text by drawing wavy lines or horizontal lines. Even mixed Chinese and English texts can be recognized.

- 1 Enable Global Handwriting:** Go to **Settings > Accessibility features > Stylus > Global Handwriting**, and turn on **Global Handwriting**.
- 2 Use stylus gestures:** Edit the text in the search box or text box with the following stylus gestures:
 - **Delete:** Delete the text by drawing a wavy line or zigzag line on it.
 - **Select:** Select the text by drawing a horizontal line on it.
 - **Split:** Split the text by drawing a vertical line downwards.
 - **Combine:** Combine the text by drawing a vertical line upwards.

Use a Stylus to Pick Colours Across Apps

When you use a stylus to draw in **Notes**, you can easily pick colours from other apps.

Go to **Notes**, tap  > **Typed note** to create a new note, or open an existing **Typed note**.

Pick colours across apps:

- 1 In the multi-window mode, on the **Notes** page, tap  > **Handwrite** to enter the handwriting panel.
- 2 In the **handwriting kit** panel, tap  > 

Cross-device colour picking: Swipe down from the top right of the status bar to enable Control Centre, tap **Multi-Screen Collaboration**, and connect your tablet and phone by following the instructions, and then you can use the colour picking ring to select colours on your phone.

Edit Floating Menu

- 1 Go to **Settings** > **Accessibility features** > **Stylus** and confirm enabling **Floating menu**.
- 2 Tap **Edit floating menu**, choose the functions that you need in **Stylus**, and add them to **Floating menu**.

Use a Tablet with Stylus as Your PC's Writing Pad

You can use your tablet with a stylus as your PC's **Writing Pad** so that you can annotate or draw patterns easily.

On the tablet:

- 1 Connect the stylus to your tablet.
- 2 Use a USB cable to connect your tablet and PC, and tap **Open writing pad** on the notification that prompts on your tablet.
- 3 On the **Writing Pad**, tap  to learn each key's functions.



After switching to another app, you can tap  > **Writing Pad** on the floating window of the stylus to open **Writing Pad** again.

On the PC:

Open an app that supports **Writing Pad**, tap the drawing or brush-related features, then you can choose a proper pen and draw or write on the tablet.



You can access apps that support writing pad easily by tapping the stylus icon in the **taskbar** on PC and adjust more settings.

Only some computers running Windows 10 or later support this function. Please refer to the actual situation.

Log in to Honor ID

Easy Login to Honor ID

On the new device, go to **Settings** > **HONOR ID**. You can try the following:

- Account login: Enter the account name, tap **Log in**, and log in by password or SMS verification code following the on-screen instructions.
- Scan to log in: On the new device, tap the QR code icon above and a QR code will appear on the screen. On the device with Honor ID logged in, go to **Settings**, tap Honor ID, then tap , scan the QR code on the new device, and tap **Confirm**.

Video Creation

Photography Basics

Launch Camera

There are multiple ways to open the Camera app.

From the Home Screen

From the home screen, open **Camera**.

From the Lock Screen

When the screen is locked, turn on the screen, then swipe up on the camera icon in the lower right corner to open the camera.

Adjust Camera Settings

You can adjust the camera settings to take photos and videos more quickly.

 The following features may not be available in some camera modes.

Quick Access to Frequently Used Functions

To quickly access frequently used functions, go to the Camera screen that displays shooting modes (e.g., Portrait, Photo), and you can set your frequently used parameters in the quick operation area.

Take Photo mode as an example:

- 1 Go to **Camera** and select the **Photo** mode.
- 2 Tap , and expand the quick operation area.
- 3 You can quickly set **Ratio** of the photo, turn on **Flash**, and more. You can also tap  to set more parameters.

Enable Location Tag

Go to **Camera** > , enable **Location tag** to tag your location in photos and videos.

Use the Assistive Grid to Compose Your Photos

Use the assistive grid to help you line up the perfect shot.

- 1 Go to **Camera** > , enable **Gridline**. Grid lines will then appear in the viewfinder.
- 2 Place the subject of your photo at one of the intersecting points, then touch the shutter button.

Enable Mirror Reflection

When using the front camera, touch  to enable or disable **Mirror reflection**.

Mute the Shutter Sound

Enable **Mute** to mute the camera shutter sound.

 This feature is only available in some countries and regions.

Auto-capture Smiles

Tap **Camera** >  > **Smart Capture** to enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.

Use the Horizontal Level for Better Compositions

Go to **Camera** >  , enable **Level** to display a horizontal guiding line on the viewfinder.

When the dotted line overlaps with the solid line, it indicates that the camera is parallel with the horizontal level.

Customise the Camera Mode Layout

The camera mode layout can be customised. The frequently used modes can be moved to the main interface, and the order of modes can be adjusted to make the layout more in line with your usage habits.

- 1 Go to **Camera** > **More** and tap  or press and hold a mode icon to enter the editing screen.
- 2 Press and hold a mode icon to drag it to the location where you want to place it. You can also move the modes in **More** to the main interface, or move the modes in the main interface to **More**. Some deletable modes will display  icon. Tap  to delete the mode.

 **Portrait**, **Photo**, **Video** etc. modes cannot be moved to **More**. Please refer to the actual situation.
- 3 Tap  to save the layout.
 - To recover deleted modes, tap  in **Camera** > **More**, and then tap **Add** to recover the mode.
 - To recover the initial mode, tap  in **Camera** > **More**, and then tap **Restore defaults**.

Take Photos

Add Stickers to Photos

Add a sticker, such as time, weather, mood, or food, to spice up your photos.

1 Go to **Camera > More** and select **Stickers** mode.

If the **Stickers** option is not present, touch  , then download **Stickers**.

2 Touch  and select a sticker. The selected sticker will be displayed in the viewfinder.

3 Drag the sticker to change its position. You can also edit the text of some types of stickers.

4 Touch  to take a photo.

Try Portrait Mode

The Portrait mode can beautify faces, blur the background, and make your photo subject stand out.

1 Go to **Camera** and select the **Portrait** mode.

2 Focus the camera on a person. Make sure he/she is in the focus area.

To take a selfie, tap .

3 You can adjust the photo effect in the following ways:

- Enable beauty effect: Tap  to adjust the beauty effect.

Disable beauty effect: When you shoot with the rear camera, set the parameter to the lowest value. When you shoot with the front camera, tap  , and tap  again in the beauty effect settings.

- Flash: When you shoot with the front camera in a poorly lit environment, tap the flash icon on the top to lighten your face.

Tap the flash icon and select  (auto) or  (always on).

4 Tap  to shoot.

Taking Photos

1 Open **Camera**.

2 You can perform the following operations:

- Focus: tap in the screen where you want to highlight.

To separate the focus point and metering point, press and hold in the viewfinder frame, and when the focus frame and metering frame appear at the same time, drag them to the desired position separately.

- Adjust the brightness: Tap the screen and swipe up or down  next to the focus frame.
- Zoom in or out: Open/pinch both fingers on the screen or slide the zoom bar next to the screen to zoom in/out.
- Select camera mode: In the camera mode area, swipe left, right, or up, down to select a mode.
- Select a filter: Tap  to preview the filter effect.

 Not all modes support the above operation, please refer to each mode for details.

3 Tap the shutter to shoot.

Take Burst Photos

Use Burst mode to take a sequence of photos in quick succession so you can choose the best one.

- 1 Open **Camera**, select **Photo** mode, and make sure the rear camera is in use.
- 2 Touch and hold  or press and hold one of the Volume buttons to take a burst photo. When shooting, you'll see a counter, which indicates how many photos you've taken so far.
- 3 Lift your finger to stop shooting.

Select the Burst Photos You Want to Keep

- 1 Open **Gallery**. Touch a burst photo (which is tagged with ), then touch .
- 2 Swipe through the burst photos, select the ones you want to keep, then touch **SAVE AS** and follow the onscreen instructions.

To delete the whole burst photo, touch and hold to select the photo, then touch .

Set Camera Timer

To set a timer on the camera, set the frame, tap the shutter button, and then the camera will automatically shoot at the end of the countdown.

- 1 Open **Camera**, select a shooting mode, tap  > **Timer**, and select a timer length.
- 2 Go back to the shooting screen, tap the shutter button, and the tablet will automatically shoot at the end of the countdown.

Take photos using filters

- 1 Open **Camera** to select **Photo** mode.
- 2 Tap  to choose a filter and preview the effect.

- 3 Tap the shutter to shoot.

Take Professional-Looking Photos

AI Photography is a pre-installed camera feature that helps you take better photos by intelligently identifying objects and scenes (such as food, beaches, and text) and optimizing the colour and brightness settings accordingly.

- 1 Open **Camera** and select **Photo** mode.
- 2 Tap **AI camera** to turn on.
- 3 Frame the subject within the viewfinder. Once the camera identifies what you are shooting, it will automatically recommend a mode.
- 4 To disable the recommended mode, turn off .

Magic Text scan

Magic Text can scan your documents, PPTs of the meetings, etc. for electronic storage and sharing.

Use Scan Document

- 1 Go to **Camera** > **SCAN DOCUMENT**, and make sure  is enabled.
- 2 Place the whole document in the viewfinder of the camera and turn the pages. The device will automatically scan each page, remove shadows, and make adjustments. You can also tap  to scan manually.
- 3 After completing the scan,  > **Save** > **Next** and save the document in the format you want.
- 4 Go to **Files** to view the exported document.

Shoot Videos

Use Time-Lapse to Create a Short Video

You can use Time-lapse to capture images slowly over several minutes or even hours, then condense them into a short video. This allows you to capture the beauty of change – blooming flowers, drifting clouds, and more.

- 1 Go to **Camera** > **More** and select **Time-lapse** mode.
- 2 Place your device in position. To reduce camera shake, use a tripod to steady your device.
- 3 Touch  to start recording, then touch  to end the recording.

The recorded video is automatically saved to Gallery.

Shoot Videos

In the video mode, you can use auxiliary functions such as zoom, focus, and beauty, and you can also set the video resolution and frame rate.

1 Open **Camera** and select **Video** mode.

2 You can do any of the following to prepare for the shooting:

- Zoom in or out: Open/pinch both fingers on the screen or slide the zoom bar to zoom in or out.
- Focus: tap in the screen where you want to highlight. Press and hold in the screen to lock exposure and focus.

- Turn the flash on or off: Tap  to select the flash as  (Always on) or  (Off).

When recording with the front camera, you can select the flash to be  (Always on) in low light conditions. When turned on, the camera will ring fill in the light by boosting the screen brightness to enhance the brightness of faces.

- Turn on the beauty effect: Tap  and slide to adjust the beauty effect.
- Adjust the video resolution and frame rate: Go to  > **Specifications** and select the desired resolution. The higher the resolution, the clearer the video, and the larger the final generated video file, please choose according to your actual needs. You can also tap **Frame rate** to select the desired frame rate.

3 Tap  to start shooting.

When you are recording, spread/pinch two fingers on the screen or slide the zoom bar to zoom in or out the screen.

Tap  to capture the current frame.

4 Tap  to pause shooting, tap  to end shooting.

Edit Images

Edit Photos and Videos

Gallery offers a wide range of editing features for photos and videos.

Basic editing

1 Open **Gallery**, touch the thumbnail of the photo you want to edit, then touch  to access the editing features.

- Crop and rotate: Touch **Crop**, select a frame, then drag the grid or its corners to select which part you want to keep.

To rotate the photo, touch **Crop** and drag the angle wheel to the desired orientation.

To rotate the photo by 90 degrees, touch . To mirror the photo, touch .

- Add a filter effect: Touch **Filter** to select a filter.
- Adjust photo effects: Touch **Adjust** to adjust the brightness, contrast, saturation, and other aspects of the photo.
- Other: Edit the photo in other ways, such as by adding a colour splash, blur, doodle, or label.

2 Touch  or **Save** to save your edits.

Add stickers to photos

- 1 In Gallery, touch a photo, then go to  > **Sticker**.
- 2 Select the type of sticker you want to add, such as **Time**, **Weather**, or **Mood**.
- 3 Select a sticker and drag it to change its position. You can also edit the text of some types of stickers.
- 4 Touch  to save your edits and touch **Save** to save the photo.

Pixelate photos

- 1 In Gallery, touch a photo, then go to  > **Mosaic**.
- 2 Select a mosaic style and size to cover parts of the photo.
- 3 To remove the mosaic, touch **Eraser** and wipe it off the photo.
- 4 Touch **Save** to save the photo.

Rename Photos

- 1 In Gallery, touch the photo thumbnail you want to rename.
- 2 Go to  > **Rename** and enter a new name.
- 3 Touch **OK**.

Create Collage

You can use **Collage** to quickly stitch together multiple images from Gallery into one for sharing.

- 1 You can access Collage in any of the following ways.
 - Go to **Gallery** > **Create**, tap **Collage**, select multiple images, and tap **Create**.
- 2 Select a template. You can:
 - Adjust the position of the image: Long press on the image to be adjusted and drag it to the desired position to switch places.

- Adjust the display of the image: Tap the image you want to adjust and drag the image or zoom it in/out with two fingers to adjust the display part of the image.
- Rotate the image: Tap the image, and then tap **Rotate** or **Mirror** for rotation or mirror flip.
- Add or remove borders: By default, Collage displays borders between and around the outer edges of the images. If you don't need borders, tap **Frame** to remove.

3 Tap **Save** to save.

You can view the collages in **Albums > Collages**.

AI Eraser

- 1 Use the eraser feature in the gallery to easily identify pedestrians and erase them with one tap. You can also smartly or manually erase vehicles, debris, and other small objects from the image, creating a clean shot and making the picture more visually appealing. Go to **Gallery > Albums** and select an image to be edited.

- 2 Tap  > **Magic Retouch > AI Eraser**. You can select any of the following elimination methods as needed:

- **Circle to erase**: Draw a circle or line around objects, such as people, animals, plants, buildings, or vehicles, and the app will automatically identify and remove the objects within the selected area.
- **Brush to erase**: Brush over objects, such as text, watermarks, fine lines. Choose an appropriate brush size based on the object's dimensions, and apply in one go for more precise removal.

- 3 Tap  to save your edits; tap **Save** to save the image.

AI Outpainting

Editing images by AI Outpainting

Using AI multi-proportional free image outpainting can make up for composition defects such as insufficient space in portrait photos, short characters, and unclear layers. It can also intelligently fill in missing buildings and backgrounds, tilt the picture, change the picture ratio, etc. There are multiple options to expand the picture content and easily beautify the composition.

- 1 Go to **Gallery > Albums**, and select the photo you want to refine.

- 2 Tap  > **Magic Retouch**.

- 3 Tap **AI Outpainting** to view the generation effect.

- 4 Tap **Start outpainting** to view the generation effect.

- 5 Tap  to save the current edit.

AI Cutout

When you need to cut out the main content of an image (such as people, animals, or still life), you can use the AI Cutout feature, which allows you to quickly save and share the main content of the image.

- 1 In the gallery, select the image you want to cut out. Long press on the main subject of the image, and the system will automatically scan, recognising and extracting the subject from the background.
- 2 Once the scan is complete, release your finger:
 - Tap **Share** to share the cutout to others via **Honor Share**.
 - Tap **Save** to save the cutout to the **My Albums > Cutout** album.

i • This feature may vary by device.
 • To make the edges of the extracted subject more accurate and clear, it is recommended to use images where the subject and the background have a significant colour contrast. Only the main subject of the image can be cut out; pressing and holding non-subject areas will not trigger the AI cutout.

Edit Videos

Select images and videos to create a short film

In the gallery, you can select your favourite images and videos, use a variety of templates to create a short film, and enhance it with effects such as filters, transitions, text etc.

i • Please make sure your device has been updated to the latest system version.
 • This feature may vary by device.
 • This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.

- 1 Go to **Gallery**, you can access video creation in the following ways:
 - Go to **Create > Video Creation**, select the images or videos, and tap **Create**.
- 2 Your or tablet will generate a short film, and you can:
 - Choose a video theme: tap **Template** to select from a variety of theme templates.
 - Edit clips: to trim a video, or change the duration of an image, tap **Edit**, tap on the preview bar, and drag the sliders on both sides of the clip.
 - Select a filter: tap **Filters** to select classic, food, landscape and other filter effects. You can also tap **Adjust** to further adjust the brightness, contrast, etc.
 - Edit background music: tap **Music**, then tap **Add music** to add preset background music or local music. Or tap **Extract audio** to extract the audio from a video and attach it to your clip.

After adding the background music, you can go to **Edit**, and tap **Volume** to adjust the volume of the original sound or background music. Enable **Fade in** or **Fade out** to add a fade to the background music.

To trim the background music, add **Cut** before and after the desired part. Press and hold the music clip on the preview bar, and drag it to the location you want, or tap **Delete**.

- Add text: tap **Text** > **Add text** to add text in the video. After entering text in the text box, you can select templates, styles or stylised text below to finish adding. Then tap the text preview bar, and drag the sliders on both sides to customise the duration of the text.
- Add effects: tap **Effect** to add effects to the video.
- Adjust the frame size: tap **Frame** to select the frame size you want.
- Add background: tap **Background** to add background in a solid color or other styles. Or drag the slider on **Blur** page to blur the background. You can also tap **Gallery** to select an image from the album as the background.
- Adjust specifications: tap **Adjust** to adjust specifications such as video brightness, contrast, saturation, sharpness, etc.

3 When you finish editing, tap  for a preview. Tap **Set cover** to set a cover. You can also select the resolution and frame rate as needed. Then tap **Export** to export your video.

 Some materials require a VIP membership for full access.

Edit Videos

 • Please make sure your device has been updated to the latest system version.

• This feature may vary by device.

1 Go to **Gallery** > **Albums**, and touch the video you want to edit.

2 Tap  to display the video editing screen, where you can:

- Select a theme: Touch **Template** and select a preset theme.
- Edit the clips: Touch **Edit** then touch the timeline and drag the sliders at both ends to trim the video to the desired length.
- Select a filter: Tap **Filters** and select a filter effect. Slide the slider to adjust the filter effect.
- Edit background music: Touch **Music** and then touch **Add music** to choose from preset background music or your locally saved music. You can also touch **Extract audio** to extract audio from a video and attach it to your clip.

After the background music is added, in the **Edit**, you can tap **Volume** to adjust the volume of the original sound or background music. Enable **Fade in** or **Fade out** to fade in or fade out the added background music.

To take or delete a piece of background music, add **Cut** before and after the music to be taken and select the piece, long-press on the preview bar to drag it to the position you want, or tap **Delete**.

- Add text: Tap **Text** > **Add text** to add text to the video. After entering text in the text box, you can select templates, styles or stylised text below to finish adding. Then tap the text preview bar, and drag the sliders on both sides to customise the duration of the text.
- Add effects: Tap **Effect** to add effects to the video.
- Add Picture in Picture: Tap **PIP** to add the materials that you want. After adding successfully, the materials will show on the short video as a Picture in Picture.
- Adjust the frame size: Tap **Frame** to select the frame size you want.
- Add background: Tap **Background** to add background in a solid colour or other styles. Or drag the slider on **Blur** page to blur the background. You can also tap **Gallery** to select an image from the album as the background.
- Adjust specifications: Tap **Adjust** to adjust specifications such as video brightness, contrast, saturation, sharpness, etc.

3 When you are finished, touch  to preview and **Export** to save the video. When saving the video, you can specify the video resolution as required.

Instant Movie

After you select images and videos, Instant Movie can synthesise them into an easy-to-share short video with the template.

 This feature may vary by device.

1 You can use the feature by the following methods:

- Go to **Gallery** > **Create**, tap **Instant Movie**, and select images and videos.
- Go to **Gallery** > **Create** > **Cut**, and tap **Instant Movie** to select images and videos.
- Go to **Gallery** > **Albums**, long press a picture or video to enter the multiple-selection mode in an album, select multiple videos or images, and tap the **Instant Movie** that pops up.

2 Your tablet can automatically generate short videos, and you can:

>

- Change template: Tap **Templates** to select from a wide variety of theme templates.
- Change music: Tap **Music** to select from a variety of background music.
- Adjust the clips: Tap **Snippets** to select or change clips for the short video, or adjust their order.

- Edit more: Tap  to make more edits with Honor Clip, and then tap to export or save as draft.

3 After editing, you can tap  to save, or  to share easily.

 Some material can only be accessed by VIP.

View Images and Videos

Memories

Gallery automatically creates **Memories** albums from your best photos and videos based on time, location, and theme information when you take many photos and videos during holidays, birthdays and parties.

- tablet generate vlogs based on time and location of photos and videos. Before shooting, go to **Camera** > , and enable **Location tag**.
- When tablet is on the **Memories** while being charged with the screen off and connected to Wi-Fi, and the battery level is above 50% in the early morning or above 90% during the day, the system will automatically analyse photos and create **Memories** album. This process may take some time. Thank you for your patience.

Change the Highlights Album Cover

1 On the **Memories** tab, touch an album.

2 Go to  > **Custom cover**, select a photo, then touch .

Share Highlights Videos

You can share Highlights videos as photos or videos.

Share Highlights Videos as Videos

1 Go to **Gallery** > **Albums** > **Video Editor**, where you will find all your exported videos.

2 Touch and hold to select the videos you want to share, then touch .

Share Highlights Videos as Photos

Touch the Highlights album you want to share, then go to  > **Save collage**. Follow the onscreen instructions to share the created photo.

You can also share the photo under **Gallery** > **Albums** > **Collages**, where the photos created for Highlights videos are saved by default.

Add or Remove Photos and Videos from Highlights Albums

1 On the **Memories** tab, touch an album.

2 You can then:

- Add photos or videos: Touch  , select the items you want to add, then touch .
- Remove photos or videos: Touch and hold to select photos or videos you want to remove, touch  , then touch **Remove**.

Rename Highlights Albums

1 On the **Memories** tab, touch an album.

2 Go to  > **Rename** and enter a new name.

Delete Highlights Albums

1 On the **Memories** tab, touch an album.

2 Go to  > **Delete** and touch **Delete**.

View Photos and Videos

In Gallery, you can view, edit, and share your photos and videos.

View by Shooting Time

Open **Gallery**. On the **Photos** tab, pinch in on the screen to switch to the monthly view and pinch out to switch to the daily view.

You can also drag the track ball on the edge to view the time.

View by Album

You can view photos and videos by album on the **Albums** tab.

Some photos and videos are stored in default albums. For example, videos recorded with the camera are saved in the **Camera** album. Screenshots and screen recordings are saved in the **Screenshots** album.

View by Category

Gallery intelligently sorts photos into categories, allowing you to quickly sift through large albums by category.

Touch a category album on the **Albums** > **AI albums** tab (such as food, portrait, or scenery) to view photos in that album.

View Details About Photos and Videos

1 In Gallery, touch a photo or video to view it in Full screen mode. Touch the screen again to hide the menu.

2 When in Full screen mode, touch  to view details about the photo or video, such as the storage path, resolution, and size.

Organise Albums

Organise photos and videos into albums to easily sift through them.

Add Albums

- 1 Go to **Gallery > Albums**.
- 2 Touch  , name the album, then touch **OK**.
- 3 Select the photos or videos you want to add, and then move or copy them to the album.

Custom Album Cover

- 1 Go to **Gallery > Albums**.
- 2 Go to the album for which you want to customise the cover and touch  > **Custom cover**.
- 3 Select the image you want to set as the cover.

 To restore the default cover, go to this album and touch  > **Default cover**.

Sort Albums

- 1 Go to **Gallery > Albums** >  and touch **Sort albums**.
- 2 Drag  next to an album to the desired position. Touch **Reset** to reset the albums to the default order.

Hide Albums

If you have private pictures and videos that you do not want to show in the album, you can hide them.

In the **Albumstab**, tap to open a specific album, touch and hold the selected pictures or videos that you want to hide, then tap  > **Hide** > **OK**.

The selected pictures and videos will be hidden. You can:

- In the **Albumstab**, tap  > **Hidden items** to view the hidden pictures or videos.
- Touch and hold the selected pictures or videos in the **Hidden items**, then tap **Unhide**. After hiding is cancelled, the hidden pictures and videos will go back to their original albums.

 • To access **Hidden items**, you need to enter the correct password (which is the same as the lock screen password). Once unlocked, you can view the hidden content.

• The pictures and videos in the shared albums cannot be hidden. Please refer to the actual situation.

Move Photos and Videos

- 1 Open an album, then touch and hold to select the photos and videos you want to move.
- 2 Touch  > **Move** to select the desired album.
- 3 Once the items are moved, they will no longer be in their original album.

 The **All photos** and **Videos** albums show all photos and videos stored on your device. Moving items across albums will not affect the view in these albums.

Delete Photos and Videos

Touch and hold to select the items you want to delete, then go to **Delete** > **Delete**.

 Some preset albums, such as **All photos**, **My favourites**, **Videos**, and **Camera** albums, cannot be deleted.

Deleted photos and videos will be temporarily moved to the **Recently deleted** album before being permanently deleted after 30 days.

To permanently delete a photo or video manually, touch and hold its thumbnail in the **Recently deleted** album, then go to **Delete** > **Delete permanently**.

Recover Deleted Photos and Videos

In the **Recently deleted** album, touch and hold to select the items you want to recover, then touch  to restore them to their original albums.

If the original album has been deleted, a new one will be created.

Add Photos and Videos to Favorites

Open a photo or video, then touch .

The item will appear in both its original album and the **My favourites** album.

Share Images and Videos

Go to **Gallery** > **Albums**, you can share images and videos in the following ways:

- Share a single image or video: Tap an image or video and tap  to share.
- Share multiple images or videos: In an album, long press an image or video to enter multi-selection mode, select multiple images and videos and tap  to share.

Safe Photo Sharing

Safe Photo Sharing helps you remove information such as photo location and shooting data to avoid privacy leakage when sharing.

1 Go to **Gallery** > **Albums**.

2 Select one or more photos and tap .

3 Check the message on the top left of the sharing screen. If privacy protection is not enabled, tap **Privacy options**, **Privacy options** window will appear, follow the on-screen prompts to enable this feature to share photos safely.

Gallery Card on Home Screen

Embellish your home screen with a customized display of photos through the Gallery card.

Add the Gallery card:

- Pinch two fingers on the home screen to enter the edit screen, tap **Cards**, and select **Gallery** card. Swipe left and right to select the card style and tap **Add to Home screen**.
- Swipe up on the **Gallery** icon on the home screen, and tap  to add home screen cards.
- Touch and hold **Gallery** on the home screen, select the **Gallery** cards, swipe left and right to select the card style, and tap **Add to Home screen**.

Edit the Gallery card: Touch and hold the Gallery card, tap **Edit card**, and select the display content in the Gallery card.

- **Auto-select:** Display highlight photos selected from the albums by the phone.
- **Select album:** Display all photos in a specified album.
- **Choose a picture:** Display a specified photo.

Remove the Gallery card: Touch and hold the Gallery card, tap **Remove**, and remove the unwanted card.

Super Dynamic Vivid Display

HDR images feature a larger brightness range, better colour contrast, and more vivid light and shadow effect, creating a more immersive viewing experience.

- 1** Go to **Camera** to take HDR photos in scenes with sharp light and darkness contrast such as night scenes, sunset glow and shadows under sunshine.
- 2** Make sure that **Gallery** >  > **Settings** > **HDR display** is toggled on.
- 3** Go to **Gallery** to review your photos.

Multi-image comparison

Display multiple similar images on the same screen, with the ability to zoom in synchronously, making subtle differences clear at a glance, allowing for easy comparison and efficient image selection.

- 1 Go to **Gallery**, long press to select the images you want to compare.
- 2 Tap **Compare**, and your selected images will be displayed on the screen at the same time. Then, you can:
 - **Synchronously move and zoom multiple images:** The synchronous zoom feature is enabled by default. When you zoom or move one image, the comparison images will change synchronously. If you want to adjust a single image, you can tap  to disable synchronisation. After adjusting, you can re-enable the synchronisation feature to compare multiple images synchronously.
 - **Change comparison images:** Tap on the selected images in the comparison list at the bottom of the screen to cancel its comparison. Tap on an unselected image to add it to the comparison list.
 - **A maximum of 4 images can be compared at the same time.**
 - **Favourite images:** Tap  below the image you want to favourite.
 - **Delete images:** Tap  below the image you want to delete.
 - **Add comparison images:** Tap  in the comparison list at the bottom of the screen, select or de-select images, and then tap **Add**.

Cleanup suggestions

The smart cleanup function automatically identifies redundant images and videos in Gallery and deletes them to free up storage space and improve resource utilisation.

Clean up duplicate images

- 1 You can enter the Gallery cleanup interface in any of the following ways:
 - Go to **Gallery** > **Albums**, and tap **Cleanup suggestions**.
 - Go to **Gallery** > **Photos** or **Gallery** > **Albums**, and select  > **Cleanup suggestions**.
- 2 Tap **Duplicate images** and select the images you want to delete.
- **Enable the Keep only one item feature to quickly select duplicate images.**
- 3 Tap **Clean up**, and then tap **Delete**.

Clean up similar images

- 1 You can enter the Gallery cleanup interface in any of the following ways:

- Go to **Gallery > Albums**, and tap **Cleanup suggestions**.
- Go to **Gallery > Photos or Gallery > Albums**, and select  > **Cleanup suggestions**.

2 Tap **Similar images** to select the image you want to delete.

 • Enable the **Keep only the best image** feature to quickly select similar images.

- Select 2 to 30 images and tap the  icon to quickly compare the similar images.

3 Tap **Clean up**, and then tap **Delete**.

Clean up duplicate videos

1 You can enter the Gallery cleanup interface in any of the following ways:

- Go to **Gallery > Albums**, and tap **Cleanup suggestions**.
- Go to **Gallery > Photos or Gallery > Albums**, and select  > **Cleanup suggestions**.

2 Tap **Duplicate videos** to select the videos you want to delete.

 Enable the **Keep only one item** feature to quickly select duplicate videos.

3 Tap **Clean up**, and then tap **Delete**.

Clean up oversized videos

1 You can enter the Gallery cleanup interface in any of the following ways:

- Go to **Gallery > Albums**, and tap **Cleanup suggestions**.
- Go to **Gallery > Photos or Gallery > Albums**, and select  > **Cleanup suggestions**.

2 Tap **Oversized videos** to select the videos you want to delete.

 Enable the **Select all** feature to quickly select oversized videos.

3 Tap **Clean up**, and then tap **Delete**.

Intelligent Classification of the Gallery

The tablet automatically recognises pictures in the Gallery during screen-off charging and groups them by categories such as locations, objects (scenery, food, etc.) to help you organise and view them.

Go to **Gallery > AI albums** to view pictures by category.

To move a picture out of the album, long press to select the picture in the album and tap .

 Some pictures cannot be removed from the album.

View and Set People Albums

Once you have taken a sufficient number of photos, Gallery will automatically create People albums for individuals or groups by identifying faces in your photos. This will happen when your device is charging and the screen is off.

You can name these People albums and set the relationships of individuals with you.

Group photo albums require a specific number of photos containing 2 to 10 faces that have already been named in People albums.

1 Go to **Gallery > AI albums** and view the generated People albums.

2 Touch an album, go to  > **Edit**, then set the name and relationship (such as **Baby** or **Mum**).

Once you have finished, you can find a People album by entering the name or relationship in the search bar.

Group Album

A group album will be generated for photos containing identical people when the following conditions are met:

- 1** The photo shows 2-10 people.
- 2** Each person in the photo has been named in a personal album.
- 3** The number of photos of the same group of people is more than 5.

Enjoy Smart Life

Magic Text

Magic Text

Magic Text can extract text from images, and you copy, drag, or tap it to get related services.

 The feature availability varies by languages. More languages will be released gradually with the MagicOS version, please refer to the actual situation.

Enable Magic Text

Tap **Settings > Honor AI > Magic Text** and make sure that **Magic Text** is enabled.

Extract Text from Images

You can extract text from images in the following two ways:

Tap the  icon to extract text:

- 1 Open the image and turn on the  icon in the image. then tap **Magic Text**.
- 2 When the text is highlighted, you can tap the underlined text to view and select relevant services. For example, you can perform shortcut operations such as, sending text messages, or sharing with others.
- 3 Drag the cursor to select the recognised text, and in the pop-up menu, you can perform quick operations such as copy, select all, share, and search.
- 4 In the Split-screen mode, you can press and hold the selected text and drag it to elsewhere, such as Notes and chat boxes.

Long press the text on the image to extract text:

- 1 Open the image, and the  icon appears in the image. Long press on the text area with one finger.
- 2 Drag the cursor to select the recognised text, and in the pop-up menu, you can perform quick operations such as copy, select all, share, and search.
- 3 In the Split-screen mode, you can press and hold the selected text and drag it to elsewhere, such as Notes or chat boxes.

 Handwriting recognition is supported. The extraction results may vary with images.

Take Screenshots Using Your Knuckles

- 1 Tap the screen with your knuckles and draw a circle to capture the screen. In the editing screen, tap .

- When the text is highlighted, you can tap the underlined text to view and select relevant services. For example, you can perform shortcut operations such as, sending text messages, or sharing with others.
- Drag the cursor to select the recognized text, and in the pop-up menu, you can perform quick operations such as copy, select all, share, and search.

Use Camera to Scan Documents

You can directly use the camera to scan the documents.

- Go to **Camera** >  and turn on **AI camera** mode.
- Open **Camera**, point it to the document, make sure that the whole page is within the  frame until the  icon appears on the screen.
- Tap  to enter **Scan document**.
- Tap  to scan.

Honor Magic Portal

Magic Portal

Magic Portal, based on contextual intelligence, understands your intentions and intelligently recommends the services you need. By using a finger joint to circle the screen, you can quickly access functions such as price comparison, search and share, entertainment, bookmarking, printing, and more. You can also long-press on screen content and gently swipe towards the edges for instant access to convenient services.

-  If long-pressing content doesn't allow you to drag it, you can try using the finger joint circle gesture instead.
- The required duration for a long press may vary depending on the app or interface. In some cases, you may need to slightly increase the press time (around 1-3 seconds) until the content can be dragged or activated.
- Some apps or interfaces may restrict actions like screenshots or dragging, and **Magic Portal** is not supported. Please refer to the actual experience to confirm the functionality in each case.

Enable Magic Portal

Go to **Settings** > **Honor AI** > **Magic Portal**, and enable the **Magic Portal** switch.

Knuckle circle to open Magic Portal

How to use the Knuckle Circle:

- Before using this feature, please ensure the **Magic Portal** and **Knuckle Circle** are turned on.

2 On any interface of the Tablet, use a single knuckle to tap and draw a circle to select content. **Magic Portal** automatically opens and intelligently recommends related services, allowing you to reach them with just one click. For example, if you see a pair of shoes while watching a video, you can use your knuckle to circle the shoes. **Magic Portal** automatically open and think what you think, recommending multiple applications you might use. Click on social apps to share with friends, click on shopping apps to make purchases.

· **Solution for unrecommended related services after selection:** If no related services are recommended after selecting text with your knuckles (such as no navigation app recommended when selecting an address, no music or video app recommended when selecting music or movie names, etc.), you can resolve this issue using the following methods:

- If you want to automatically recognise the selected content, go to **Settings > Honor AI > Magic Portal**, enable **Auto-recognise image and text**.
- You can also click on the interface you want to select **Extract text**, switch the image to text mode to recommend services related to the recognised text.

· **How to disable the Knuckle Circle**

If you want to disable **Knuckle Circle**, go to **Settings > Honor AI > Magic Portal**, disable **Knuckle Circle**, Only use the knuckle partial screenshot.

Long press on the text to trigger Magic Portal

Select the text on the screen, then long press the selected text and drag it to the left or right edge of the screen to open the **Magic Portal**. Once you release your finger, you'll be taken directly to the desired service.

Long press on the image to trigger Magic Portal

Long press on the image on the screen, then drag it to the left or right edge to open **Magic Portal**, and once you release your hand, you'll be taken directly to the desired service.

Long press on the file to trigger Magic Portal

Long press on the file, then drag it to the left or right edge to open **Magic Portal**, and once you release your hand, you'll be taken directly to the desired service. For example: Long press on the meeting minutes in the file list, then drag to forward it to a colleague.

Enable Magic Portal via Screenshots

For screens where content cannot be selected or dragged, you can use any of the following methods to trigger the **Magic Portal**:

- **Drag the entire screen content:** After a successful screenshot, long press and drag the screenshot thumbnail.
- **Drag custom content:** After a successful screenshot, tap on the thumbnail to edit. Once editing is complete, long press and drag the screenshot.

Personalise Magic Portal

Go to **Settings > Honor AI > Magic Portal**, tap **Custom services** to add **Recommendation** to side list. When opening Magic Portal, these services or apps will appear first.

Magic Capsule

Magic Capsule

The Magic Capsule is located at the top of the screen, displayed in the form of a “capsule”, and presents ongoing tasks, making it easy to view real-time status, perform quick operations, or quickly enter applications.

The Capsule can shrink into a “little ball” and expand into a capsule again after a certain period of time until the end of the task. The Magic Capsule can expand into a larger form to display dynamic notifications. The display timing, duration, and interaction methods of Magic Capsule may vary depending on specific tasks.

Only some preset functions support Magic Capsule.

Trigger Magic Capsule

You can Trigger Magic Capsule by actions like initiating real-time tasks and completing specific operations. For example:

- Start recording in **Recorder** and back to the home screen.
- Start timing in **Clock** and back to the home screen.

View Status and Perform Quick Operations via Magic Capsule

The Capsule would shrink into a “little ball” after displaying for some time and expand into a capsule again after a certain period of time until the end of the task. You can track the current task status via Magic Capsule:

Tap Magic Capsule or the “little ball” to expand it and check detailed status or perform quick operations.

Quickly Access Apps via Magic Capsule

You can quickly launch apps via Magic Capsule:

When Magic Capsule is expanded, tap anywhere on the expanded area.

 This feature does not apply to apps where Magic Capsule does not work in the background.

Disable Magic Capsule

- Go to **Settings > Notifications & status bar > Magic Capsule**, turn off the **Magic Capsule** switch for the system service application.

Audio Channel Switching with One Tap

Switch to a Different Output Device During Playback

When playing music or videos through your earphones, you can quickly switch playback to another device without having to unplug your wired earphones or disconnect your Bluetooth earphones.

- 1 Enable Bluetooth on your device and connect it to wired earphones or a Bluetooth audio device (such as Bluetooth earphones, a Bluetooth speaker, or a vehicle-mounted device).
- 2 After pairing is successful, you will see the **Current audio output device** or **Current audio input/output device** card if you swipe down the notification panel on your device.

Touch  on the card to display the audio output devices that are currently available. Select the device you want to switch the audio to.

i If your device supports wired earphones with a non-Type-C port, the audio output channel of your device will be switched from **This device** to the wired earphones by default.

Video Call Beauty

Beauty Effect During Video Calls

- 1 Go to **Settings > Accessibility features > Call enhancement > Beauty filter for video call**, and enable **Beauty filter for video call**.
- 2 During a video call, swipe down from the top middle or left side of the screen to open the Notification Centre. In the notification of **Beauty filter for video call**, tap **Beauty intensity** to adjust beauty effect. Beauty effect is disabled when **None** is selected.

i

- Not all video call and video conference apps support this feature. Please refer to the actual situation.
- Beauty mode is disabled in **Ultra Power Saving mode**.

Tips

Smart Sensing

Air Scroll

When both hands are occupied and cannot touch the screen, you can use air gestures to scroll the screen, which is convenient for browsing and turning the page.

 Some apps or interfaces do not support Air scroll. Please refer to the actual situation.

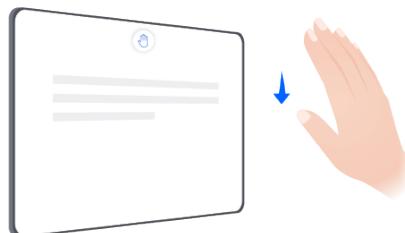
Enable Air Scroll

Go to **Settings > Honor AI > Air Gestures > Air scroll** and enable **Air scroll**.

Use Air scroll


Air scroll down

Close all five fingers together, hold your palm towards the front camera and keep it about 40-60cm away. Wave your hand down when  appears on the screen.



Air scroll up

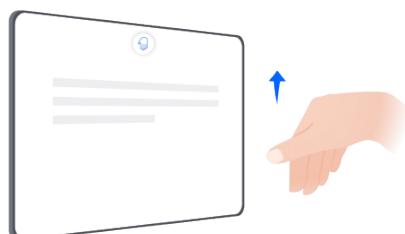Close all five fingers together, hold the back of your hand towards the front camera and keep it about 40-60cm away. Wave your hand up when  appears on the screen.



Air scroll left

Close all five fingers together, hold your palm towards the front camera and keep it about

40-60cm away. Wave your hand left when  appears on the screen.

Air scroll right

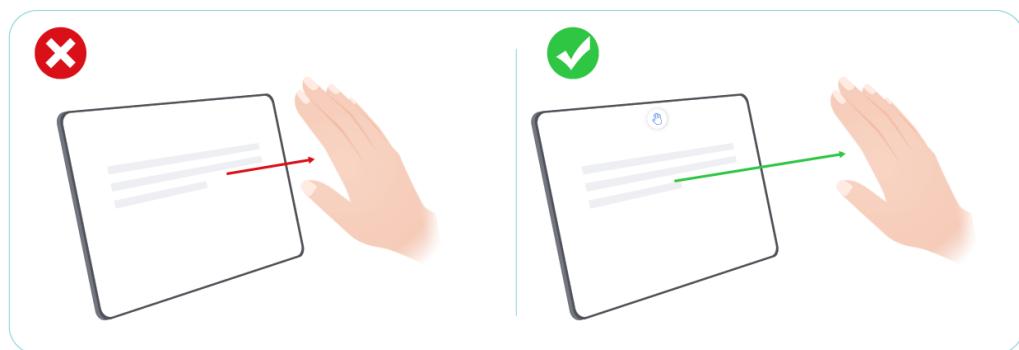
Close all five fingers together, hold the back of your hand towards the front camera and

keep it about 40-60cm away. Wave your hand right when  appears on the screen.


 Air scroll left and right gestures are only available in **Gallery** and some e-book apps.

Improve the Success Rate of Air Scroll

1 Don't keep your hands too close to the front camera, please keep a distance of about 40-60cm.



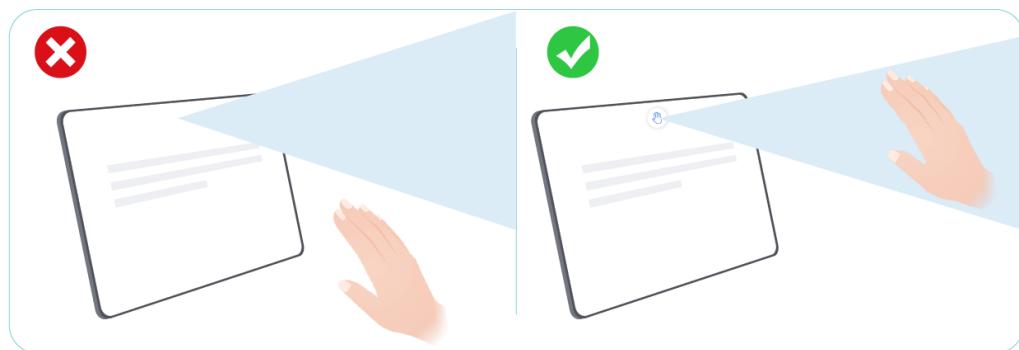
2 Do not hold your hand at an angle to the screen, please keep it straight up directly above the front camera.



3 To scroll up, hold the back of your hand towards the screen with your fingers closed together and extended, and then wave your hand up when  icon stably appears on the screen.



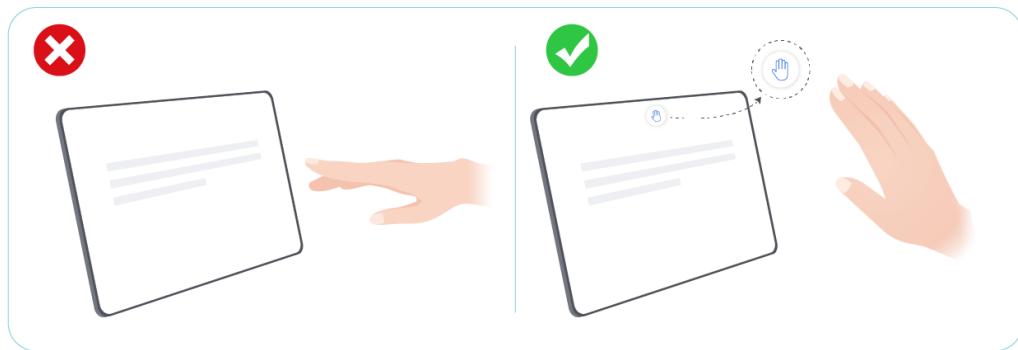4 To scroll down, hold your palm towards the front camera with your fingers closed together and extended, and then wave your hand down when  icon stably appears on the screen.



5 Wave up and down slowly and gently.

Air Back

You can use Air Gestures to return to the previous page when both hands are occupied and cannot touch the screen.

 Some apps or interfaces do not support Air Gestures. Please refer to the actual situation.

Enable Air Back

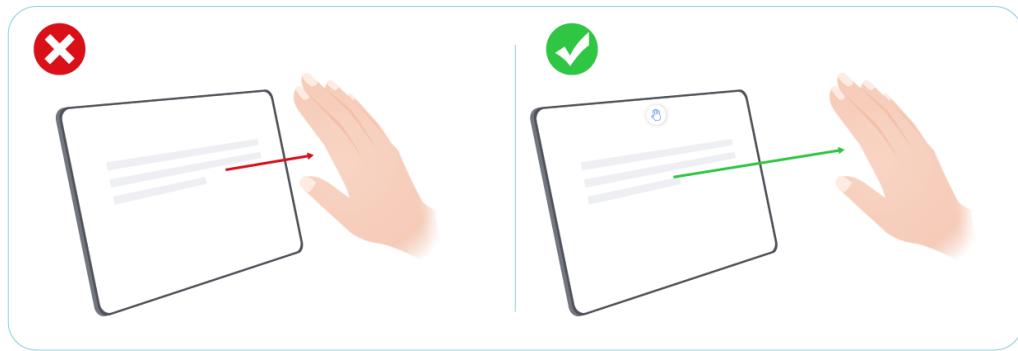
Go to **Settings > Honor AI > Air Gestures > Air back** to enable **Air back**.

Apply Air Back

Close all five fingers together, hold your palm towards the front camera and keep it about 40-60cm away with fingertips upward. Flip your palm 180 degrees when  appears on the screen.

Improve the Success Rate of Air Back

1 Don't keep your hands too close to the top of the front camera, please keep a distance of about 40-60cm.



2 Do not hold your hand at an angle to the screen, please keep it straight up directly above the front camera.



3 Please flip your palm when  icon appears.

4 Please make sure to turn your palm 180 degrees.

Enable Frequently Used Features of the App Fast

Access Frequently Used App Features from the Home Screen

You can access frequently used features of certain apps from app icons on the home screen, and even add shortcuts for these features to the home screen.

Quickly Access Frequently Used App Features

Touch and hold an app icon until a pop-up menu is displayed, then touch a frequently used feature to access it.

For example, touch and hold the  icon, then touch a shooting mode, such as Selfie or Video, from the pop-up menu to access it.

 If no pop-up menu is displayed after you touch and hold an app icon, it indicates that the app does not support this feature.

Add Frequently Used App Features to the Home Screen

Touch and hold an app icon on your home screen to bring up the pop-up menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut.

Screenshot and Screen Recording

Record screen

You can record operations on the screen as a video and share it with your friends and family.

Use a Shortcut to Start Screen Recording

- 1 Swipe down from the top right of the screen to open the Control Center.
- 2 Touch **Screen Recorder** to start screen recording.
- 3 To stop the recording, touch the timer at the top of the screen.
- 4 The recording will be saved to **Gallery**.

Use Two Knuckles to Start Screen Recording

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Record screen**, and ensure that **Record screen** is enabled.
- 2 Knock the screen twice in quick succession with two knuckles to start screen recording. To stop recording, knock twice again.

Record Your Voice During Screen Recording

You can enable the microphone to record your voice while recording the screen.

After starting a screen recording, touch the microphone icon and ensure that it is displayed as . You can now record your voice.

Take a Screenshot

Use Your Knuckle to Take a Screenshot

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Screenshot/Global Favourites**, and ensure that **Knuckle screenshots** is enabled.
- 2 Knock the screen twice in quick succession with one knuckle to take a screenshot.

Use a Key Combination to Take a Screenshot

Press and hold the Power and Volume down buttons simultaneously to take a screenshot.

Take screenshots with the shortcut button

Swipe down from the top right of the screen to open the Control Center. Tap  to take the full screenshot.

Share and Edit a Screenshot or Switch to Scrollshot

After you take a screenshot, a thumbnail will be displayed in the lower left corner of the screen. You can then:

- Swipe down on the thumbnail to take a scrolling screenshot.
-  This is not supported in Landscape mode.
- Swipe up on the thumbnail to select a way to share the screenshot with your friends.
- Touch the thumbnail to edit or delete it. You can also touch **Scrollshot** to take a scrolling screenshot.

Screenshots are saved to **Gallery** by default.

Take scrolling screenshots with knuckle gestures

- 1 Tap the screen with one knuckle and keep your knuckle on the screen, apply a little force to draw an "S" shape, and the screen will automatically scroll down to take a screenshot.
 When using this function for the first time, please follow the system instructions to enable **Scrollshot**.
- 2 During scrolling, tap on the scrolling area to stop taking the screenshot.

Swipe Down Using Three Fingers to Take a Screenshot

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Screenshot/Global Favourites**, and ensure that **Three-finger swipe down** is enabled.
- 2 Swipe down from the middle of the screen with three fingers to take a screenshot.

Precautions for Using Knuckle Screenshots

- Please double knock the screen consecutively at the same place and at an appropriate speed.
- Keep your knuckle vertical to the screen.
- If you want to take more than one screenshot, wait 2 seconds before knocking on the screen again.
- If there is a screen protector on the screen, knock the screen harder or remove the screen protector and try again.

Take a Screenshot by Air Gestures

When it is inconvenient for you to touch the screen, you can take a screenshot by air gestures.

-  This feature is not supported in landscape orientation.

Enable Grabshot

Go to **Settings > Honor AI > Air Gestures > Grabshot** and enable **Grabshot**.

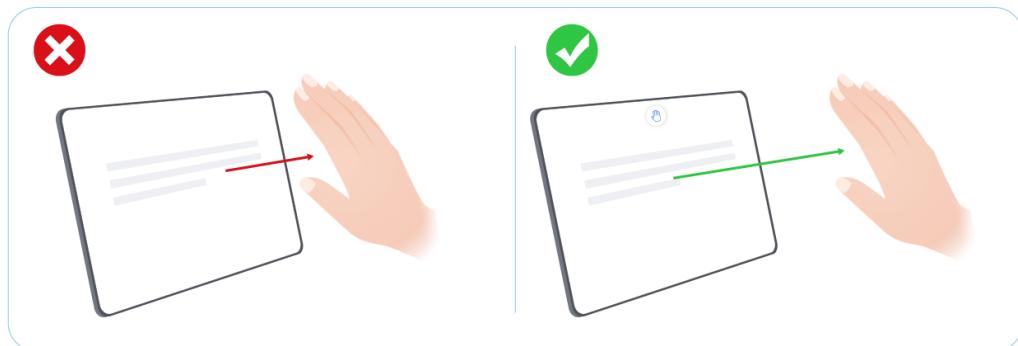
Use Grabshot

Close all five fingers together, hold your palm towards the front camera and keep it about 40-60cm away. Grab and make a fist when  appears on the screen.




Improve the success rate of Grabshot

- 1 Don't keep your hands too close to the front camera, please keep a distance of about 40-60cm.



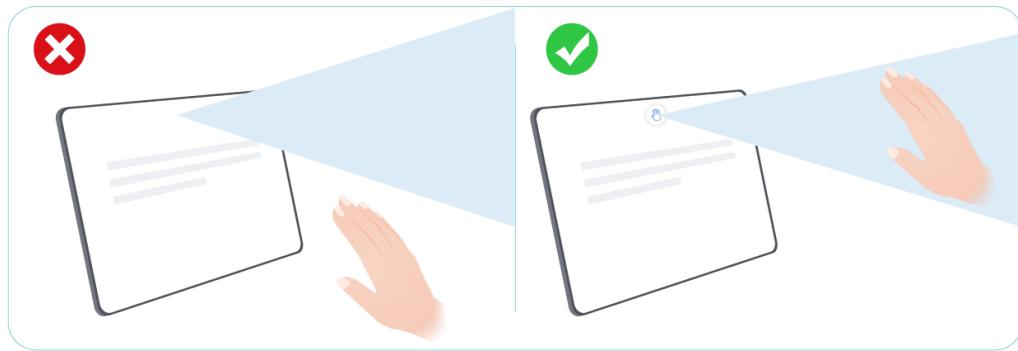- 2 Do not hold your hand at an angle to the screen, please keep it straight up directly above the front camera.



3 Please grab and make a fist when the  icon appears.

Process Tasks in Multi-window Simultaneously

Multi-Window

Browsing apps in a floating window or split screen makes multi-tasking easier, more flexible and efficient.

- Floating window: You can view an app on the full screen in the floating window.
- Mini window: It is the smallest display form of a floating window. It can shrink an app display to a minimal form and bring it back when you need it.
- Split screen: Two apps can be used at the same time in the screen.
- Dual-window: You can use two of the same app at the same time in a split screen.

 Apps that support **Multi-Window** may vary by device model and version.

Floating windows make switching tasks easier

Use communication apps without leaving the game? All it requires is to enable floating windows. Before using, go to **Settings > Accessibility features > Multi-Window** and ensure **Multi-Window dock** is turned on.

Open a floating window

Swipe inwards from either side of the screen and hold to open **Multi-Window dock**. Tap an app to open the floating window.

Adjust the size

Slide the bottom two corners of the floating window.

Move the floating window

Drag the  on top of the floating window.

Minimize the floating window

Try out the following methods:

- Quickly drag the  on top of the floating window to either side of the screen to minimise it to an assistive ball.
- Tap  >  on top of the floating window to minimise it to an assistive ball.

Close the floating window

Try out the following methods:

- Swipe up the  on the bottom of the floating window to close it. Swipe it down to switch to full screen.
- Tap  >  on top of the floating window to close it.

 A tablet can display 2 floating windows at a time.

 • Some apps do not support floating window feature.

- Up to 10 floating windows (including mini windows) can be included in the assistive ball.

Multi-tasks in floating windows

You can find and switch floating windows quickly with the floating window task manager.

- 1 Multiple floating window tasks have been opened and minimised to the assistive ball.
- 2 Tap the assistive ball to unfold the floating window task manager.
 - Find a floating window: Scroll up or down to find the one you need.
 - Switch to another floating window: Tap the floating window card that needs to be restored to open it.
 - Close a floating window: Tap  on the floating window to close it.

Mini window

As the minimum presentation form of floating windows, mini windows save space and boost efficiency with multi-tasking. You can activate a mini window from either full-screen or floating window mode:

From full-screen mode:

While using an app in full screen, swipe up from the bottom edge to the  position and release to activate a mini window.

From floating window mode:

- Drag the  at the top of the floating window to the upper left or upper right corner and release to activate a mini window.
- Swipe inward from both bottom corners of the floating window to minimise it and release to activate a mini window.

- Swipe the  at the bottom of the floating window to minimise it and release to activate a mini window.
-  Tap a mini window once to switch to a floating window; tap it twice to switch to full-screen mode.

Open an attachment in a floating window

You can open a link or attachment within specific apps (such as Email or Notes) in a floating window.

-  This feature is unavailable in some apps.

- 1 Open the Email app.
- 2 Touch a link or attachment in the Email app to open it in the floating window.
 - **Open a link:** Touch a link in the Email app to display it in a floating window.
 - **Open an attachment:** Touch an attachment (such as a document, image, or video) in the Email app to display it in a floating window.

Split-Screen for Effortless Multi-Tasking

Use two apps simultaneously on a split screen. Before diving into split-screen, ensure the **Multi-Window dock** switch is toggled on by going to **Settings > Accessibility features > Multi-Window**.

Activate the split-screen mode on full screen with one tap

While using apps in full screen mode, swipe up from the bottom edge to the  or  position and release to enter the half split-screen mode. The app will minimise to the edge of your screen, either to the left side or the top, and display the home screen. Tap another app that supports split-screen to initiate split-screen mode.

-  To exit half split-screen mode and go back to using apps in full-screen, simply tap the Back button or tap on the minimised app at the edge of the screen.

Activate the split-screen mode via Multi-Window dock

While using an app on full-screen, swipe inwards from both long edges of the screen and pause until **Multi-Window dock** appears. Then, press and drag the app onto the screen and release to enter the split-screen mode.

You can also:

- **Change app display position:** To switch app positions, tap  at the top of apps and drag it to the opposite side of the screen. Alternatively, you can exchange app positions by tapping the app divider  and then selecting  or .
- **Save app pairs:** Tap the app divider, then choose , to add the current pair of apps in the split-screen mode to the home screen.

- **Adjust window size:** Drag the app divider  to adjust the window size.
- **Exit the split-screen mode:** Slide the app divider  to the top or bottom edge of the screen.
 -  Some apps do not support split-screen displays.
 - The split-screen mode supports two apps only at one time.
 - When you uninstall an app, any app pairs linked to it will be deleted subsequently.

Drag and drop between apps with Multi-Window

Use the Multi-Window feature to easily drag and drop images, text, and documents between apps.

- Drag and drop an image: When taking notes with **Notes**, open **Files**, select the photo you want to add, and drag it into the **Notes** editor.
- Drag and drop text: When sending an SMS message, open **Notes**, touch and hold the text you want to send, and drag it into the message text input box.
- Drag and drop a document: When writing an email, open **Files**, select the document you want to attach, and drag it into the email editor.

 Not all apps fully support drag-and-drop with Multi-Window.

Add, move, or remove an app from the Multi-Window dock

- Add an app: In the Multi-Window dock, touch  > , touch the app you want to add, then touch **Done**.
- Move an app: In the Multi-Window dock, touch  > , drag the desired app to any location in the dock, then touch **Done**.
- Remove an app: In the Multi-Window dock, touch  > , touch  on the upper right corner of the icon of the app you want to remove, then touch **Done**.

Switch between the split-screen display and the floating window display

Switch from split-screen view to floating windows

Drag  on top of the app to either side of the screen and lift your hand.

Switch from a floating window to split-screen view

Try out the following methods:

For an opened app that supports split screen, touch and hold the  on top of its floating window to the bottom or top of the screen and release.

Multi-Window view for a single app

You can create two task windows for the same app (such as Email and Notes), and drag images, text, or documents between them.

 This feature is unavailable in some apps.

1 Enter the split-screen view within an app.

- Open the Email app.
- Swipe inward from the left or right edge of your /tablet and hold to bring up the Multi-Window dock.
- Touch and hold the Email icon, and drag it to the screen to enter split-screen view.

2 Drag images, text, or documents between the split-screen windows.

- **Drag an image:** Select an image from one split-screen window and drag it to the other window.
- **Drag text:** Touch and hold the text and select the desired part from one split-screen window, then touch and hold the text again and drag it to the other window.
- **Drag a document:** Select a document from one split-screen window and drag it to the other window.

Disable Multi-Window dock

Multi-Window dock is enabled by default. To disable it, go to **Settings > Accessibility features > Multi-Window**, then disable **Multi-Window dock**.

Floating window mode

Floating window mode

Open **Floating window mode**, the app will be displayed in floating window mode, eliminating the need to frequently switch between tasks. You can also easily adjust the window layout, arrange and resize the window freely, making multitasking more efficient and improving both work and life productivity.

Enter floating window mode

- 1 Enter **Settings > Large-screen features > Multi-Flex**, open the **Floating window mode** switch.
- 2 Once enabled, you can tap  in the global taskbar on the home screen to enter **Floating window mode**.

Open multiple apps simultaneously

After entering **Floating window mode**, open the app you need to use, and it will be displayed in floating window mode.

- Long press and drag  at the top of the floating window to change its position and adjust the layout. Swipe the bottom corners of the floating window to resize the window.
- Quickly drag  at the top of the floating window to the edges of the screen to scale it down to a mini window. You can instantly bring it up and use it whenever needed.
- Tap  at the top of the floating window to hide it as a floating ball; tap  to close the floating window; tap  at the top of the floating window to display the app in full screen.

 Currently, a maximum of 3 app windows are supported on the screen at the same time. Any apps exceeding 3 will automatically be hidden as floating balls.

Quick Layout and Group Switching

In **Floating window mode**, you can use Quick Layout and Group Switching:

- **Quick Layout:** tap  and select a layout template to instantly arrange the current app windows. You can also choose a layout template first, then click or drag to add apps.
- **Group Switching:** Swipe up from the bottom edge of the screen and pause, and your current window arrangement will automatically stay in the background multitask view. You can switch to other window groups at any time without needing to rearrange them.

Exit Floating Window Mode

Tap  in the global taskbar on the home screen to exit **Floating window mode**.

Apps

Apps

App Basics

Uninstall an App

You can uninstall an app using any of the following methods:

- When using the **Standard** style home screen, touch and hold the app icon on the home screen, then touch **Uninstall** and follow the instructions.
- When using the **Drawer** style home screen, touch and hold the app icon in the drawer, then touch **Uninstall** and follow the instructions.
- Go to **Settings > Apps > Manage apps**, touch the app, then touch **Uninstall**.

 Some pre-installed system apps can't be uninstalled, as uninstalling them may cause system errors.

Manage Background Apps

- Access the recent tasks screen using either of the following methods, depending on the navigation method you are using:
 - Gestures:** Swipe up from the bottom of the screen and hold.
 - Three keys:** Touch .
- On the recent tasks screen, you can:
 - Swipe across to view app previews.
 - Touch an app preview to access an app.
 - Swipe up on an app preview to close an app.
 - Swipe down on an app preview to lock it.  will appear at the top of the app preview. Touching  will not close this app.
 - Swipe down again to unlock it.  will disappear.
 - Touch  to close all apps (except for those you have locked).

Clear the Cache of an App

Delete app cache files to free up storage space.

Go to **Settings > Apps > Manage apps**, select the app for which you want to clear the cache, then go to **Storage > Clear cache**.

Contacts

Add and manage contacts

You can open **Contacts** on the home screen (or open **Phone** and go to the **Contacts** interface) and add, share, or delete contacts.

Manually create contacts

On the **Contacts** screen, tap , go to the **New contact** interface, enter name, phone number, and other information, and tap  to save.

Merge duplicate contacts

On the **Contacts** interface, go to  > **Settings** > **Organise contacts** > **Merge duplicate contacts**.

Search contacts

You can search contacts in the following ways:

- Open the **Contacts** interface and enter the keywords you want to query (e.g., initials of contact's last name, phone number, email) in the **Search** input box at the top.
- Swipe down in the middle of the home screen to bring up the search box and enter the keywords you want to query.

 You can also enter multiple keywords at once for a more precise search, such as "John Beijing".

Share contacts

- 1 On the **Contacts** interface, long press the contacts to be shared, and tap **Share contact**. Or tap the contacts to be shared, tap **More** > **Share contact**
- 2 Select a method to share and follow the on-screen instructions.

Delete contacts

You can delete (or bulk delete) contacts in the following ways:

On the **Contacts** interface,

- long press the contacts to be deleted and tap **Delete**.
- Tap the contacts to be deleted and tap **More** > **Delete contact** at the bottom.
- Go to  > **Settings** > **Organise contacts** > **Delete contacts**, select the contacts to be deleted, and tap **Delete** at the bottom.



To restore contacts deleted by accident, open the **Contacts** interface, go to > **Settings** > **Organise contacts** > **Recently deleted**, long press to select the contacts to restore, and tap **Restore**.

Add personal information

You can create business cards with personal information to share with others. You can also add emergency personal information for getting help in case of emergency.

Create business cards

- 1 Open **Contacts** or **Phone** and select the **Contacts** tab.
- 2 Tap **My card** and set your profile picture, name, phone number, and other information.
- 3 Tap to create a business card with a QR code.

You can also share your card using QR codes.

Calendar

Use Events

Events help you schedule activities in your daily and work life, such as attending company meetings, arranging social get-togethers, and making credit card repayments. You can add events and set reminders to help you arrange your schedule in advance.

Add Schedules

- 1 Go to **Calendar**, then tap
- 2 Enter details such as title, location, start and end time of the schedule.
- 3 Tap **Add reminder** to set a reminder for the schedule.
- 4 Tap to save the schedule.

Import Meeting Reminders

- 1 Go to **Calendar** > > **Manage accounts**.
- 2 Touch , then follow the onscreen instructions to add your work emails (from your Exchange account) to the calendar to view meeting reminders.

Search for an Event

- 1 On the **Events** screen, touch .
- 2 Enter keywords of your event in the search box, such as the title and location.

Share an Event

- 1 Open **Events**, then touch an event on a calendar screen or under the schedule tab.
- 2 Touch  > **Share** to share the event however you prefer when prompted.

Delete Schedules

On the **Events** screen, tap the schedule you want to delete, then tap  > **Delete**.

Set a Calendar Notification

Set the calendar notification type according to your requirements. You can set status bar notifications, banner notifications, and ringtone notifications. After setting the default reminder time, your tablet will send a notification at the specified time.

Tap **Calendar** >  > .

- Tap **Default reminder time** and **Reminder time for all-day events** to set a reminder time.
- Tap **Notifications** and enable **Allow notifications**. Then follow the onscreen instructions to set a notification type.

Customise Calendar View Settings

You can customise calendar view settings, such as by specifying the first day of the week, and whether to show week numbers.

1 Tap **Calendar** >  > .

2 You can set whether to display week numbers, the first day of the week, and other options in the calendar.

Set Alternate Calendars

According to your needs, set up to display other calendars in the calendar, such as the Chinese lunar calendar, Buddhist calendar, etc.

Go to **Calendar** >  >  > **Alternate calendars**, and select a calendar you want to use.

Important Events

Add priority to events to differentiate and highlight them so that you can focus on important events, and handle them efficiently.

Add Important Events

Enable **Calendar**, tap , and tap **Priority** to set the event as **Important** in the interface of details. Enter details such as title, location, start and end time of the event, etc. and tap  to save them.

Create To-Do List

Create a to-do list to track your tasks efficiently, from your shopping needs and work tasks to household chores and beyond.

Create To-Dos

Schedule your activities and tasks into **Calendar > To-dos** and get reminders at specific time .

For tasks marked as important, you'll receive a full-screen notification on your lock screen.

- 1 Go to **Calendar > To-dos** and select .
- 2 Enter your task.
- 3 Tap , choose the time for your reminder, and select **OK**.
- 4 Tap  to set the task's priority level.
- 5 Use  to categorise your task.
- 6 Tap .
- 7 In the to-do list, tap any task to edit its details or add images as needed.

 This feature may vary by device.

Set Repeated Reminder for To-Dos

When you have set a reminder time for your to-do task, you can also establish repeated reminders. Your tablet will alert you at each cycle you've specified.

My events today

Your tablet smartly gathers your to-do and event data from your text messages, apps, and other sources, and organises them into your **Calendar > My events today**, allowing you to view your daily events easily at a glance and never miss important events.

- 1 Go to **Calendar**, and tap **My events today** in the menu bar.
- 2 Your current day's events will be displayed. In addition, you can scroll up from the bottom to view your next day's events, or tap  to view the events on a specific day.

View National/Regional Holidays

Enable National/Regional Holidays to stay informed about local holiday schedules in advance, helping you plan your travel better.

- 1 Go to **Calendar >  >  > National/Regional holidays**.
- 2 Turn on the switch of a country/region, and your tablet will automatically download holiday information for that country/region and display it in Calendar.

Clock

Set Alarms

You can set alarms to play a sound or vibrate at specific times.

Add an Alarm

- 1 Go to **Clock** > **Alarm**, tap  to add an alarm.
- 2 Follow the prompts to set the ringtone, repeating interval, etc.
- 3 Tap  to save the settings.

Modify or Delete an Alarm

Touch an existing alarm to modify or delete it.

Snooze an Alarm

If you don't want to get up when an alarm rings, simply touch the snooze button or press the Power button.

The snooze length is set when creating the alarm.

Turn Off an Alarm

When an alarm rings, swipe left or right on the button that appears at the bottom of the screen to turn it off.

Use the Timer or Stopwatch

You can use the timer to count down from a specified time. You can also use the stopwatch to measure the duration of an event.

Timer

Go to **Clock** > **Timer**, set the duration of time, and touch  to start the timer. To pause the timer, press . To cancel counting, press . To stop the timer, press stop on the notification that appears when the time is up.

Stopwatch

Go to **Clock** > **Stopwatch**, and touch  to start the stopwatch. To stop it, touch .

Notepad

Create a Note

Create a typed note

- 1 Go to **Notes**, and tap .
- 2 Enter the title and content for the note. You can also do the followings as needed:
 - Tap  to add a checklist.
 - Tap  to change the font type, paragraph alignment or background.
 - Tap  to insert images, tables, or links, import documents, or scan documents, etc.
 - If you want the notes to be classified more clearly and easy to view, tap **No category** after editing to add a tag to the note.
- 3 Tap  to save the note.

Scan document by camera and create note

- 1 Open **Notes**, tap .
- 2 Tap  > **Scan document**.
- 3 Choose the images or documents that you need to scan, and tap  for scanning the single page or multiple pages continuously.

Manage Your Notepad

You can sort your Notepad items by category and put them into different folders, delete unwanted items, and share items with other people.

When viewing a list of items or an individual item in Notepad, touch the status bar at the top of the screen to quickly return to the first item or the beginning of the item you are viewing.

Set Password for Notes

Lock Notes: Go to **Settings > Security & privacy > Device & data protection > App Lock**, follow the on-screen instructions to enter your lock screen password or customise the app lock password, and turn on the switch next to your notes.

Share notes

You have multiple options to share your notes:

- Share a single note: On the page of **All notes** list, open the note to be shared, tap  and share it by following the prompts.

Notes can be shared via **Image, Text and Document**.

- Share multiple notes: On the page of **All notes** list, press and hold a note to be shared, check multiple notes to be shared, and then tap  and share them by following the prompts.

Print Notepad Items

- 1 On the **All notes** screen, open the item you want to print.
- 2 Go to  > **Print**, then select a printer and configure printing settings as prompted.

Delete Notes

Long-press the note you want to delete, check the box or swipe along the checkbox to

select multiple notes, and then tap  to delete it.

If you want to recover accidentally deleted notes, go to the **All notes** list interface and tap

 > , and select the records you wish to keep from the **Recently deleted** folder, and tap



Global Favourites

Three-finger Global Favourites can help you quickly save images, text, web pages or documents into **Notes** or **Favourites Space**. You can easily check and review them at any time.

 Go to **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Screenshot/Global Favourites** > **Three-finger swipe down**, if you select **Screenshot**, Three-finger screenshot is enabled.

Save web pages

Swipe down with three fingers to save web articles to **Notes** or **Favourites Space** with ads being filtered automatically. You can check and edit the article even if the original URL is invalid.

- 1 Go to **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Screenshot/Global Favourites** > **Three-finger swipe down**, and select **Global Favorites**.
- 2 Swipe down with three fingers when you are browsing a web page. A message will pop up at the bottom of the screen to notify you that the web page is saved.
- 3 You can choose where to save by going to **Settings** > **Accessibility features** > **Favourites Space** > **Storage/display settings** > **Web pages**.

 Not all web pages support this feature. The interface and functions may vary by device model.

Please refer to the actual situation.

Document collection

On the page of an open document, swipe down with three fingers to quickly save documents into **Files**. This allows for easy and efficient access at a later time.

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Screenshot/Global Favourites > Three-finger swipe down**, and select **Global Favorites**.
- 2 On the page of an open document, swipe down with three fingers. A message will pop up at the bottom to notify you that the document is saved. You can check it by going to **Files**.

Save images

Tap an image on a web page or in a social app and swipe down with three fingers to quickly save it into **Gallery** or **Favourites Space**.

- 1 Go to **Settings > Accessibility features > Shortcuts & gestures > Screenshot/Global Favourites > Three-finger swipe down**, and select **Global Favorites**.
- 2 Tap to open the image, swipe down with three fingers to the bottom of the screen until it prompts that the image has been saved successfully.
- 3 You can choose where to save by going to **Settings > Accessibility features > Favourites Space > Storage/display settings > Favoured images**.

Sync Notes

Sync your local notes data to other phones for easy viewing via Exchange Mail or Honor Cloud.

Stay in Sync

Enabling Stay in Sync allows you sync local notes to the cloud. You can also log into your Honor account on other tablet to view your notes anytime, anywhere.

Go to **Notes** >  >  > **Sync notes to the cloud**, and follow the on-screen instructions to enable Stay in Sync for your notes.

- Once Stay in Sync is enabled, if you delete note data from your tablet, the data will also be deleted from the cloud and any other devices logged into the same Honor account.

Old Notes Transfer

You can migrate your notes in the **Notes** from your old phone to your new phone through different ways such as Honor ID sync, Device Clone, data backup, and Honor Share.

- **Honor ID sync:** Log in to your Honor ID on your old phone and sync the Notes data from your old phone to the cloud. Log in to the same Honor ID on your new phone to sync the **Notes** data.
- **Device Clone:**
You can use Device Clone to migrate **Notes** and other data from your old phone to your new one.

- **Data backup:** By backing up via an external storage device, you can back up data to an external memory card or USB storage device and restore it in the phone's external storage after the backup is complete.
- **Honor Share:** Select the notes you need to share and quickly migrate them to your new phone via Honor Share.

AI Notes

AI Notes can intelligently analyse the notes' content and generate summaries, meeting minutes, etc.

AI Summary

- 1 Open the note you wish to summarise.
- 2 Tap  , and open **AI Notes**.
- 3 Tap **AI Summary**, a summary of the notes will be generated in a conversational format based on the current text content.

 Your text must be at least 200 words to utilise this feature.

AI minutes

- 1 During the meeting, you can record audio notes. After the meeting, tap  in the notes, and open **AI Notes**.
- 2 Tap **AI Minutes**, and select the type of meeting minutes to automatically generate the minutes.
- 3 Once the minutes are generated, you can insert the original text. Tapping  allows you to save as a new note, like, dislike, and more.
- 4 Tap  to save your notes and meeting minutes.

 Your text must be at least 200 words to utilise this feature.

AI Format

- 1 In the All notes interface, open the note you want to format.
- 2 Tap  , and open **AI Notes**.
- 3 Tap **AI Format**, select **Summarise and format** or **Format original**, AI Format will make typographic decisions based on the current text content, improving readability with one tap.
- 4 The formatted notes can be copied, shared, and adjusted to different formatting styles.
- 5 Tap **Replace text** to replace the previous note, then tap  to save.

 The minimum content length is 20 words.

AI correction

- 1 In the All notes interface, open the note you want to correct.
- 2 Tap  to open **AI Notes**.
- 3 Tap **AI correction** and the note assistant will correct errors based on the current content, optimise the note content and quality, and improve the accuracy of the note content.
- 4 The corrected note can be copied, shared, or saved to a new note. By tapping  , you can also regenerate it, give it a thumbs-up, or thumbs-down.
- 5 Tap **Replace text** to overwrite the previous note, then tap  to save the note.

Honor Docs

Honor Docs

Honor Docs can automatically bring together documents saved in various applications, and also enable you to create new documents, convert formats, edit, save, print and share documents to experience easy creation and efficient office work on the mobile.

Create New Doc

- 1 Open **Honor Docs**, tap  to enter the creation page.
- 2 On the creation page, the tablet provides various common functions for you to use. Such as **creating new doc**, **creating new sheet** and **creating new folder**.
- 3 Take “**Creating new sheet**” as an example:
 - a Tap “**New sheet**” and edit the content.
 - b Tap  in the upper right corner to save it, you can enter name, location, and tap  to save it.
 - c Tap  to mark the document, tap  to share the document.
- 4 You can view and further edit the newly created document in **Recent documents** or the file location.

 Tap  > **Default location** to edit the default saving location of the documents.

Format conversion

- 1 On the creating screen of **Honor Docs**, you can choose to convert images, sheets or docs into PDF as needed.
- 2 Take **Sheet to PDF** as an example:
 - a Tap **Sheet to PDF**, select the sheet for conversion, and tap **Start converting**.

- b** Select storage location and tap .
- c** After conversion, you can share, add tags or insert annotations to the converted PDF as needed.

Manage Docs

- In the document list, you can long press a document or a file to share, tags, move or delete it. You can also tap  to rename the document.
- On the main page of Honor Docs, you can tap  to quickly find the document that you want based on name or type.
- On the main page of Honor Docs, you can tap  to sort the documents based on name, time, size, type tags, etc.

Collect Docs

- 1** On the document list, you can press and hold a document or a folder, and then tap  in the lower right corner, select **Favourite** to collect it.
- 2** After long pressing a document, you can tap  to select all and collect them.
- 3** You can quickly find the collected documents or folders in **Favourites**.

Add tag to Doc

- 1** In the document list, you can long press a document or file and tap  to add tag.
- 2** After long pressing a document, you can tap  to select all tags together.
- 3** After the tag is added, you can quickly find the document in the Tag list on the left.

Share Docs

- 1** In the document list, you can long press a document or file and tap  to share it.
- 2** After long pressing a document, you can tap  to select all and share them together.

Rename Docs

In the document list, tap  > **Rename** to rename the document or folder.

Delete Docs

- 1** In the document list, you can long press a document or file and tap  to delete it.
- 2** After long pressing a document, you can also tap  on the upper right corner to select all and delete them together.

Efficiently Edit Documents with a Stylus

When editing documents with a stylus, handwritten text can be automatically converted into text. You can use the tip of the stylus instead of a finger to accurately handwrite formulas and flowcharts, easily annotate documents and highlight key points, making your mobile work and study more convenient.

Convert Handwritten content to Text

- 1 In a document that is being edited, you can tap  > **Handwriting to Text** to convert the handwritten content by the stylus into typed text.
- 2 Tap  to save.

Handwritten Formulas to Typed ones

When editing a document, if you encounter a mathematical or physical formula that contains a variety of symbols and is difficult to type with the input method, you can directly convert and generate the formula by handwriting.

- 1 In the document that is being edited, tap , handwrite the formula in the area of **Handwrite an equation here**, and the handwritten formula will be converted into a typed one.
- 2 If you need to modify the formula during the handwriting process, you can tap  to erase the content, and tap  again to re-write.
- 3 Tap  to save.

Draw Pictures by Hand

When editing a document, you can insert hand-drawn flow charts, pictures, and more to timely take down your inspirations.

- 1 In the doc, sheet or slide that is being edited, tap  > **Hand drawn**, choose the style and colour of the stylus, and draw the pictures in the blank area.
- 2 Tap  to save.

Annotate By Hand

When you edit or read a document, you can annotate by hand to easily sign a document, or highlight key points.

- 1 In the doc, sheet or slide that is being edited, tap  > **Handwrite an annotation**, choose the style and colour of the stylus, and annotate or highlight key points in the area as needed.
- 2 Tap  to save.

Global AI writing

When you post on social media or write reviews on e-commerce platforms, **AI writing** can intelligently create personalised copywriting with one tap. It can also polish and rewrite, adjust length, summarise, and translate, easily meeting various writing needs.

 Before using **AI writing**, please go to **Settings > Honor AI > AI writing** and make sure that the **AI writing** switch is turned on.

Smart content creation

- 1 When posting or commenting, touch and hold the input box, then tap **AI writing**.
- 2 Enter the topic and tap  to get AI-generated content.
- 3 Tap  to regenerate the content. Tap  to copy the content. Tap  to share the content, tap  to like or dislike the content, and more.
- 4 Tap **Input** to insert the generated content into the input box.

 You can also use Smart content creation for your input content when posting or commenting. After selecting all the input content, tap **AI writing** and choose **Compose**. The phone will then generate content based on the selected text as the topic.

Rewrite

- 1 When posting or commenting, select all the entered content, tap **AI writing**, and select **Rewrite** to rewrite the selected content.
- 2 After the content is rewritten, you can tap **Change style** to select various tone styles for rewriting, such as formal, humorous, and casual.
- 3 Tap  to copy this created content. Tap  to share, like, or dislike this created content, and more.
- 4 Tap **Replace** to replace the rewritten content.

Summary

- 1 Select all the input content, tap **AI writing**, select **Summary**, and the phone will automatically extract the text information and generate a summary.
- 2 Tap  to regenerate this content. Tap  to copy this content. Tap  to share this content. Tap  to like or dislike this content, and more.
- 3 Tap **Replace** to replace the extracted summary content.

 The selected summary content must be at least 100 words.

Adjust length

- 1 Select all the entered content, tap **AI writing** > **Adjust length**, and select **Text expansion** or **Text contraction** as needed to adjust the length of the content.
- 2 After the content is generated, you can tap **Change style** to rewrite it in various tones, such as formal, humorous, and casual.
- 3 Tap  to copy this content. Tap  to share, like, or dislike it.
- 4 Tap **Replace** to replace the adjusted content.

Recorder

Recorder

The recorder helps you to save the audio so that you can listen to it at any time.

Audio Recording

- 1 Open **Recorder** in the **Tools** folder. Tap  to start recording.
- 2 You can tap  to mark key points during the recording.
- 3 You can also tap . Turning to  indicates **Vocal Enhancement** has enabled. When recording, ambient noise is reduced, making the human voice clearer.
- 4 Tap  to end the recording.
- 5 You can long press the recording file to share, rename, or delete.

You can also enter **Files** > **My tablet** > **Sounds** to view recorded files.

Play the audio recording

The recording files will be displayed as a list on the home page of **Recorder** and can be played by tapping.

On the player screen, you can:

- Tap  > **Skip silences** to automatically skip the sections with no sound.
- Tap  > **Playback speed** to change the playback speed.
- Tap  to mark key points.
- Tap on the name of a mark to rename it.

Edit audio recording files

- 1 Go to the home page of **Recorder**. Tap the recording file.

2 Tap  > **Edit** to enter the editing interface.

3 Drag the start and end time sliders of the recording to select a section. You can also zoom the waveform area with two fingers to adjust area and then select the section.

4 Select  or  , tap  to save.

Share audio recording files

Go to the home page of **Recorder**. You can share audio recording files by any of the following methods:

- Long press the recording file to enter multi-selection mode, check the single or multiple recording files you want to share, tap **Share**, and then select a sharing method.
- Tap on one of the recording files you want to share to enter the playback interface, then tap  > **Share** and choose a sharing method.

Email

Set Email Notifications

Set a notification mode for your emails as needed.

1 Go to **Email** >  > **Settings** > **General** > **Notifications**, and enable **Allow notifications**.

2 Select the email account you want to set notifications for, turn on the **Allow notifications** switch, then select a notification mode.

Calculator

Calculator

Use the calculator on your device to perform basic mathematical calculations and for calculating exponential, logarithmic, and trigonometric functions.

Copy, Delete, or Clear Numbers

- Copy a calculation result: Touch and hold the calculation result, touch **Copy**, then paste the result somewhere else, such as in a note or message.
- Delete the last digit: Touch .
- Clear the display: Touch  . You can also touch  to clear the display after touching  to complete the calculation.

Flashlight

Torch

You can use the torch in any of the following ways:

- **Control Centre:** Swipe down from the top right corner of the screen to bring out the **Control Centre**, and then tap **Torch** to turn the torch on/off.
- **Lock screen:** Swipe up on  in the bottom left corner of the lock screen to turn the torch on/off.
- **On the Lock screen:** pinch with two fingers to access the **My style** interface (after unlocking the device). Select any template to go to **Lock screen**, tap , select  to add to the lock screen.
- **Physical button:** Go to **Settings > Accessibility features > Shortcuts & gestures > Double press volume down button with the screen off**, and select **Turn on/off torch**. When the device screen is off or locked, and is not in audio playback state, double-press the volume down button to turn the torch on/off.

After turning on the torch, a notification will appear on the lock screen indicating that the torch is on. Tap  to turn off the torch.

 The feature availability varies by device.

App Twin

Enable App Twin

Log in to two WhatsApp or Facebook accounts at the same time to separate work from personal life.

 Only certain apps support **App Twin**.

If the tablet has enabled PrivateSpace or added multiple users, App Twin is only available in MainSpace or for the device owner.

Go to **Settings > Apps > App Twin** and toggle on the switch of an app. The twin of that app will be displayed on the home screen.

System Manager

Free up Tablet Storage

The **Cleanup** of **System Manager** will scan the storage for redundant files and large files, such as application residues, redundant installation packages, and provide cleaning suggestions to help you free up space.

- 1 Go to **System Manager** and tap **Cleanup**.
- 2 When the scan is completed, tap **Clean up** or **Clean up** behind the item to be cleaned and follow the instructions to delete redundant files.

i Swipe down from the top of the screen and the tablet will rescan the Storage.

Clean Up Duplicate Files

System Manager can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files (groups)**, then select unwanted files to delete them.

Device Clone

Use Device Clone to Move Data to Your New Device

Device Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old tablet to your new tablet.

Migrate Data from a Device

- 1 On your new tablet, open the **Device Clone** app. Alternatively, go to **Settings > System & updates > Device Clone**, tap **This is the new device**, then select the corresponding old device type.
- 2 Follow the onscreen instructions to download and install **Device Clone** on your old device.
- 3 On your old device, open the **Device Clone** app and tap **This is the old device**. Follow the onscreen instructions to connect your old device with your new tablet by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then tap **Next > Transfer** to start cloning.

i **Device Clone** is only available on tablets running Android 7.0 or later, iOS 8.0 or later.

Tips

Tips

Tips has a selection of tips and tricks to help you quickly learn how to use your tablet. It also provides a full version of the user manual for easy reference at any time.

Tips Section introduction:

- Illustrated tips: A small video or a picture with clear and concise text to help you master an operation. The cards are categorized by scenario, making it easy for you to choose the section of interest.
- Detailed tips: Easy-to-access and easy-to-understand instructions on the advanced features of the tablet.

Tips Main functions:

- Search: Enter a keyword to retrieve all the related content in **Tips**, giving you quick access to the information you need. It also offers hot information for your reference.
- Like and comment: You can review the information and give feedback.
- Try it out: Provide the **Try now** button for key or complicated functions. Tap to go straight to the interface of the function.



- The feature availability varies by device.

Settings

Wi-Fi

Introduction to Wi-Fi

Connecting to the Internet over Wi-Fi is an effective way to save mobile data.

Connect to a Wi-Fi Network

 Be extra careful when connecting to a free public Wi-Fi hotspot to avoid security risks and economic loss resulting from the leakage of your personal data.

- 1 Go to **Settings** > **Wi-Fi**, and enable **Wi-Fi**.
- 2 Connect to a Wi-Fi network on the **Wi-Fi** screen using either of the following methods:
 - Select a Wi-Fi network to connect to under **Available networks**. A password is required for encrypted networks.
 - To manually add a Wi-Fi network, scroll down to the bottom of the screen, touch **Add network**, and enter the SSID and password as prompted to complete the connection.

The  icon displayed on the status bar indicates that the device is connected to Wi-Fi.

Transfer Data Using Wi-Fi Direct

You can use Wi-Fi Direct to transfer data between Honor devices. Wi-Fi Direct allows you to transfer large files to a nearby device more quickly than Bluetooth and without having to pair the devices.

- 1 On the receiving device, go to **Settings** > **Wi-Fi** and enable **Wi-Fi**.
- 2 Go to **More settings** > **Wi-Fi Direct** to start searching for nearby devices that have enabled Wi-Fi Direct.
- 3 On the sending device, touch and hold to select the files you want to share, touch  , and select **Wi-Fi Direct**.

 These steps may be different if you are sharing files directly from an app.
- 4 Touch the icon of the receiving device to establish a connection, then share the files.
- 5 On the receiving device, accept the Wi-Fi Direct transfer request.

Bluetooth

Tablet Bluetooth basic

You can connect your tablet to Bluetooth earbuds, speakers, car entertainment systems, or share data from your tablet to other devices via Bluetooth.

We will introduce the following Bluetooth functions of your tablet: ① turn on or turn off Bluetooth; ② edit Bluetooth device's name; ③ pair Bluetooth devices; ④ transfer files via Bluetooth; ⑤ unpair devices.

The effective distance of Bluetooth is 10 meters. Please use Bluetooth functions within the effective range.

Turning Bluetooth on or off

- Swipe down from the top right of the screen to open the Control Center and enable or disable **Bluetooth**. Long press **Bluetooth** to enter the settings screen.
- Go to **Settings** > **Bluetooth**, turn on or off the **Bluetooth** switch.

Edit Bluetooth device's name

- 1 Go to the settings screen for **Bluetooth** and enable **Bluetooth**.
- 2 Tap **Device name**, enter the new name, and tap **OK**.

Pair with a Bluetooth Device

- 1 Enable Bluetooth on the target device and set it to discoverable. For detailed instructions, refer to the device's user guide.
- 2 From your device, access the **Bluetooth** settings screen, and enable **Bluetooth** to have your device automatically search for nearby Bluetooth devices.
- 3 From the list of **Available devices**, select the one you want to pair your device with, and follow the onscreen instructions to complete pairing.

On the **Bluetooth** settings screen, touch  to view tips for connecting various Bluetooth devices.

Transfer Files via Bluetooth

You can use Bluetooth to transfer videos, pictures, contacts, and more to another device provided that both devices are within the effective Bluetooth range.

- 1 Pair the sending and recipient devices via Bluetooth.
- 2 On the sending device, touch and hold a file, select the files you want to share, touch , and select **Bluetooth**.

 Operations may vary if you are sharing files from apps directly.
- 3 Touch the Bluetooth name of the recipient device to start sharing.
- 4 On the recipient device, accept the Bluetooth transfer request.

Connect Hearing Aids via Bluetooth

Within the effective transmission distance, hearing aids that support the Bluetooth function can be connected to mobile phones for phone calls, music playback, etc. Hearing aids can be connected in any of the following ways:

- **Quick connect via Control Center:** Swipe down from the top right of the screen to open the Control Center, tap **Hearing aid** (If not found, tap the edit icon above, tap **Edit shortcut switch**, and add **Hearing aid** to Control Center in the more switches area below), and choose a hearing aid you want to pair with.
- **Connect in Accessibility Settings:** Go to **Settings > Accessibility features > Accessibility > Hearing aid**, enable **Bluetooth**, and choose a hearing aid you want to pair with.

During calls and music playback, you can quickly switch to other Bluetooth devices.

Unpair a Bluetooth Device

- 1 On the **Bluetooth** settings screen, enable the **Bluetooth** switch.
- 2 In the list of **Paired devices**, touch  next to the name of the device you wish to unpair, then touch **Unpair**.

Mobile Network

Enable or Disable Airplane Mode

When taking a flight, you can enable Airplane mode if required to do so by the airline. In Airplane mode, your device will not be able to make calls, send or receive SMS messages, or use mobile data, but all other functions will be available.

You can enable or disable Airplane mode using either of the following methods:

- Swipe down from the status bar to open the notification panel, then swipe down again to display all shortcuts. Touch  to enable or disable **Aeroplane mode**.
- Go to **Settings > Mobile network**, and enable or disable **Aeroplane mode**.

When Airplane mode is enabled, Wi-Fi and Bluetooth will automatically be disabled. You can re-enable them if allowed to do so by the airline.

 • Data services are not supported on Wi-Fi only tablets.

- Calling services are not supported on Wi-Fi only tablets.
- SMS messaging services are not supported on Wi-Fi only tablets.

More Connections

Transfer Data Between Your Tablet and Computer with a USB Cable

- 1 Connect your tablet to a computer with a USB cable. After the driver is automatically installed on the computer, the drive name corresponding to your tablet will be displayed.
- 2 On your tablet, swipe down from the top middle or left of the screen to open the Notification Centre, go to **Touch for more options**, and select a USB connection mode to transfer data.
 - **Transfer photos:** Use the Picture Transfer Protocol (PTP) to transfer photos between your tablet and computer. In the new drive displayed on the computer, you can view photos stored on your tablet, or copy and paste photos between the device and computer.
 - **Transfer files / Android Auto:** Use the Media Transfer Protocol (MTP) to transfer files between your tablet and computer. In the new drive displayed on the computer, you can view files stored on your tablet, or copy and paste files between the device and computer.
 - **i** Install Windows Media Player 11 or later on your computer to view media files on your tablet.
 - **Input MIDI:** Use your tablet as the audio input device of the Musical Instrument Digital Interface (MIDI) and play music on your computer.

Honor Share

Honor Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology uses Bluetooth to discover nearby devices that supports Honor Share and Wi-Fi Direct to transfer files without using mobile data.

Enable or Disable Honor Share

You can enable or disable Honor Share in either of the following ways:

- Swipe down from the top right of the screen to open the Control Center, then turn on or turn off **Honor Share**. You can also touch and hold **Honor Share** to access its settings screen.
- Go to **Settings > More connections > Honor Share** to enable or disable **Honor Share**.

Quickly Share Files Between Devices with Honor Share

You can use Honor Share to quickly share files between Honor devices. The recipient can preview the files before they are sent, then view the full content of the files once they have been received. For example, the recipient can view received pictures or videos in Gallery.

- 1 On the receiving device, enable **Honor Share**.

- 2 On the sending device, touch and hold to select a file or album you want to share, then touch  . Touch **Honor Share**, then touch the icon of the receiving device to send the file.

 These steps may be different if you are sharing files directly from an app.

- 3 On the receiving device, touch **Accept** to accept the transfer.

To view the received files, open **Files**, touch the **Browse** tab, then go to **My tablet > Honor Share**.

You can also view the received images or videos by going to **Gallery > Albums > Honor Share**.

Share Files Between Your Tablet and Computer with Honor Share

You can use Honor Share to easily share files wirelessly and quickly between your tablet and a computer without a data cable.

Share files from your tablet to PC:

- 1 Enable Bluetooth and Wi-Fi on the PC.
- 2 Swipe down from the status bar on your tablet to access the notification panel (continue swiping for more content). Long press **Honor Share** to go to the Settings screen and turn on **Honor Share**.
- 3 Turn on **Honor PC Manager > Honor Share** on your PC and confirm **Allow discovery by other devices** is enabled.
- 4 Long press the file to be shared on your tablet , tap  , and select **Honor Share**. After the receiving device is discovered, tap its name to share the file.

Share files from your PC to tablet :

- 1 Enable Bluetooth and Wi-Fi on the PC.
- 2 Turn on **Honor Share** on the tablet .
- 3 Select the file to be shared on your PC and right click **Display more options > Honor Share**. The PC will search for tablets that have the **Honor Share** function enabled. Select the tablet to receive the file.
- 4 Follow on-screen prompts to receive the file on the tablets .

 Only supports Honor notebooks with Honor PC Manager Version 15.0 and above. This feature may vary by product, please refer to the actual situation.

Print Images and Documents

Honor Print

Your tablet can discover printers for easy printing.

- 1 Turn on Wi-Fi on your tablet.

2 Go to **Settings > More connections > Print > Default Print Service**, tap **Add**, then follow the prompts on the screen to add a new printer.

Add a network-configured printer: Make sure your tablet and the printer are connected to the same Wi-Fi hotspot. Then the printer will be automatically added on the **Add printer** screen of your tablet.

3 On the **Print Assistant** screen, choose a method according to your need.

- **Print document**
- **Print images**
- **Scan**

On the **Print Assistant** screen, tapping  allows you to create a home screen shortcut for Honor Print, manage printing jobs, and delete added printers.

Connect Your Tablet to a Printer

1 Check the printer manual or consult with its manufacturer to verify that it is Mopria-certified.
If it is not, consult with its manufacturer to install the corresponding app or plug-in for it on your tablet.

2 Connect your tablet and the printer to the same Wi-Fi network using any of the following methods:

- Connect to a Wi-Fi router: Enable Wi-Fi on the printer and connect it to the Wi-Fi router. On your tablet, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the same Wi-Fi router, and follow the onscreen instructions to complete the settings.
- Connect with Wi-Fi Direct: If your printer supports Wi-Fi Direct, follow the instructions in the printer manual to enable this feature. On your tablet, go to **Settings > Wi-Fi**, enable **Wi-Fi**, go to **More settings > Wi-Fi Direct**, then touch the printer to establish the connection.
- Connect to your printer's hotspot: If your printer can double as a wireless hotspot, follow the instructions in the printer manual to enable the hotspot and set a password. On your tablet, go to **Settings > Wi-Fi**, enable **Wi-Fi**, touch the printer's hotspot, then follow the onscreen instructions to complete the settings.

3 Go to **Settings > More connections > Print > Default Print Service**, and enable **Default Print Service**.

4 Click **Default Print Service** and follow the onscreen instructions to add the printer.

Print files

To print files under **Gallery** and **Notes**:

- Print pictures: If under **Gallery**, open the picture, tap  > **Print or export to PDF**, select the printer and follow onscreen instructions.

- Print notes: If under **Notes**, open the note, tap  > **Print**, select the printer and follow onscreen instructions.

Project Your Tablet Screen Wirelessly

You can project your tablet screen wirelessly to a large display (such as a TV).

- 1 Perform the following based on the model and functions of the large display:
 - **If the large display supports Miracast**, turn on its wireless projection switch.
 - **If the large display does not support Miracast**, connect a wireless HDMI adapter to it. Ensure that the wireless HDMI adapter is connected to a power supply.
- 2 On your tablet, swipe down from the top right of the screen to open the Control Center, and turn on .
- 3 Swipe down again to show all shortcuts and enable **Wireless Projection**. Your tablet will start searching for available display devices.
- 4 In the device list, touch the name corresponding to the large display or wireless HDMI adapter to complete the projection connection.

Alternatively, swipe down from the top middle or left of the screen to open the Notification Center, and touch **Disconnect**.

Personalised home screen & more

Magic Avatar

Magic Avatar can bring different surprise interactions every time you unlock the screen based on your personal status, usage scenarios, etc. With a wealth of preset avatars and custom resources, you can easily create a fashionable and exclusive digital avatar to bring you companionship and healing.

Magic Avatar lock screen

- 1 Enter the **Lock screen** settings page using the following method:
 - Pinch with two fingers on the lock screen page (after unlocking the device) to enter the **Lock screen** settings page.
 - Pinch with two fingers on the main screen, tap **Wallpaper and style**, scroll to **Lock screen**, and tap **Lock screen style**.
- 2 In the **3D Avatar** bar, you can choose from the preset **3D Avatar**, or tap **Create** to customise your own magic avatar by setting gender, adjusting facial features, and changing outfits.

- 3 In the lock screen page, if you are unsatisfied with the current **3D Avatar** lock screen effect, you can tap **Change** to choose another **3D Avatar**, or tap  to modify. Tap **Apply** when you're finished.
- 4 Tap **Done** in the lock screen preview page.

Manage the Home screen layout

You can customise the Home screen layout to suit your tablet usage habits.

You can view the Home screen-related settings supported by the current model in any of the following ways:

- Pinch on the Home screen with two fingers and tap **Settings**.
- Go to **Settings** > **Home screen & style** > **Home screen settings**.

Set icon style

Pinch on the main screen with two fingers and tap to enter **Wallpaper and style** > **Icon style**.

- Tap **Colour**: select the **Icon colour** you want to customise.
- Tap **Size**: drag the slider and set the icon size.
- Tap **Rounded corners**: drag the slider and adjust the icon's corner radius effect.
- Tap **More**: explore more icon styles in **Themes** and choose freely.

Set up home screen layout

- 1 Pinch on the main screen with two fingers and tap to enter **Wallpaper and style** > **Layout**.
- 2 Select the arrangement method in **Layout template**.
- 3 Tap  to further customise the effects based on screen prompts. You can:
 - Edit **Display screen layout**.
 - Turn on or turn off the **Use text widget** switch.
- 4 After finishing the settings, tap **Apply**.

Save the current layout

In **Layout** tap **Save this layout** to save it in **History layout** as a template.

View historical layouts

In **Layout** tap **History layout** to see **Original** previously set home screen layouts.

Set transition effects

- 1 Pinch on the main screen with two fingers and tap to enter **Wallpaper and style** > **Change effect**.
- 2 Select the **Change effect** you want to customise.

Quickly set theme templates

- 1 Pinch on the screen with two fingers, and tap to enter **Wallpaper and style > Themes**.
- 2 Tap **My themes** to view the current theme.
- 3 Tap **Recommended** to select the theme you want to set, and follow the prompts to purchase or **Downloads** the application.

Rearrange Icons on the Home Screen

Touch and hold an icon until it enlarges, then drag it to the desired position on the home screen.

Keep Home Screen Icons Aligned

Pinch two fingers together on the home screen to access **Home screen settings** mode, then enable **Auto-align**. With this feature enabled, empty spaces will automatically be filled when apps are removed.

Lock Home Screen Icon Positions

Pinch two fingers together on the home screen to access **Home screen settings** mode, then enable **Lock layout**.

Select the Home Screen Layout Pattern

Pinch two fingers together on the home screen, go to **Home screen settings > Layout**, then select a layout pattern you prefer.

Turning on Search Button on Home Screen

You can use either of the following methods to turn on or turn off the search button on home screen:

- Pinch two fingers on the home screen, and tap **Home screen settings** to turn on or turn off **Search button on home screen**.
- Go to **Settings > Home screen & style > Home screen settings** to turn on or turn off **Search button on home screen**.

Set Your Wallpaper

Use the original wallpapers

- 1 Go to **Settings > Home screen & style > Select wallpaper**.
- 2 Select an image.
- 3 You can choose:
 - **Blur**: Gives the wallpaper a blurred, bokeh effect. Adjust the bokeh effect with the slider.
- 4 Tap **Done**.

Set an Image from Gallery as Your Wallpaper

- 1 Open **Gallery**, and open the image you want to set as your wallpaper.
- 2 Go to  > **Set as** > **Wallpaper**, then follow the onscreen instructions to complete the setting.

Use App Drawer to Store Apps

You can put your apps in a drawer and display only frequently used apps on your home screen to streamline your home screen.

Enable App Drawer

Go to **Settings** > **Home screen & style** > **Home screen style**, and select **Drawer**.

Once enabled, you can swipe up on the home screen to access all of your apps in the drawer.

Create Shortcuts on the Home Screen

In the Drawer mode, swipe up on the home screen to display the drawer, touch and hold an app until it enlarges, then drag it to the desired position on the home screen.

Move Apps Back to the Drawer

Touch and hold an app icon until your device vibrates, then touch **Remove**. This operation will only remove the app icon from your home screen but will not uninstall it.

You can still find it in the app drawer.

Disable the Drawer Style

To switch back to the standard home screen, go to **Settings** > **Home screen & style** > **Home screen style** and select **Standard**.

Magic Wallpaper

Personalised and adaptable lock screen wallpaper, allowing free display of various elements. You can customise lock screen wallpaper, such as adding depth effect. The moment the screen is on brings you a huge visual impact. You can create your own wonderful lock screen.

 Some products do not support depth effect. Please refer to the actual situation.

Access Lock Screen Editing

You can access the **Lock screen** settings page using any of the following methods:

- Pinch with two fingers on the **Lock screen** screen (after unlocking the device) to enter the **Lock screen** settings page.
- Go to **Settings** > **Home screen & style**, then tap **Lock screen style** or **Select wallpaper**, and swipe left or right to switch to the **Lock screen** settings page.

Customise the Lock Screen Style

In the **Lock screen** settings, you can:

- Tap **Lock screen style**:

- Select the official pre-installed wallpaper.
- Select an image from **Gallery** as your wallpaper.
- Tap **More** to open the **Themes** app and choose from more free or paid wallpapers.

i The pre-installed lock screen wallpapers may vary depending on the model and version.

Please refer to the actual device.

- Tap **Change image**:

Choose any image you like from **Gallery** to replace the people, pets, or scenery on the current lock screen wallpaper. Pinch to zoom in or out on the image to adjust its size; use two fingers to move the image and adjust its display area.

After confirming, tap **Done**.

i

- Changing the image is only supported by some lock screen wallpapers. Please refer to the actual device.
- In the **Lock screen** settings, tap on a blank area to enter full-screen adjustment for better previewing of the lock screen effect.

Set personalised wallpaper

On the **Lock screen** settings screen, set the wallpaper you want, tap **Decoration**, you can:

- Swap the wallpaper **Pattern**.
- Swap the wallpaper **Template colour**.
- Select your favourite image to replace the main body of the current lock screen wallpaper.

You can also tap the clock on the lock screen preview interface, or customise text styles, such as font and colour.

i Not all lock screen wallpapers support **Decoration**. Please refer to the actual situation.

Set depth effect

With depth effect, the lock screen wallpaper has more distinct sense of depth, the main body of the wallpaper is more prominent, and the three-dimensional visual sense brings you immersive experience.

On the **Lock screen** settings screen, tap **Depth effect**, you can:

- Turn on **Depth effect** to experience the lock screen wallpaper with depth effect.
- Drag the **Blur background** control block to blur the wallpaper background to make the main body more prominent.

- When **Depth effect** is enabled, the display area of clock may be partially blocked. You can tap the lock screen preview, then drag it to the appropriate position, and tap  after confirmation.
- Not all lock screen wallpapers support **Depth effect** and **Blur background**. Please refer to the actual situation.

Display and Brightness

Adjust the Screen Brightness, Colour Mode, and Colour Temperature

You can set the screen brightness, colour mode, and colour temperature according to your preferences.

Automatically Adjust the Screen Brightness

Your tablet will automatically adjust the screen brightness according to the ambient lighting conditions. You can do this in any of the following ways:

- Go to **Settings > Display & brightness**, and enable **Automatic**.
- Swipe down from the top right of the screen to open the **Control Centre**, Tap  in the screen brightness adjustment area.

Manually Adjust Screen Brightness

You can manually adjust the screen brightness by either of the following methods:

- Swipe down from the top right of the screen to open Control Center. Drag the slider to adjust the screen brightness in the  area.
- Go to **Settings > Display & brightness** and drag the slider to adjust the screen brightness in the  area.

Adjust the Color Mode

Go to **Settings > Display & brightness > Colour mode & temperature**, and select the colour mode that you prefer. **Normal** mode will be easier on your eyes and is therefore recommended.

- **Normal**: natural colour tones
- **Vivid**: vivid color tones

Adjust the Colour Temperature

Go to **Settings > Display & brightness > Colour mode & temperature**, and select the colour temperature that you prefer. **Default** and **Warm** will be easier on your eyes and are therefore recommended.

- **Default**: a natural tint
- **Warm**: a yellowish tint
- **Cool**: a whitish tint
- You can touch anywhere on the colour circle or drag the spot to adjust the colour temperature.

Dark mode

Softens screen brightness to bring you an immersive visual experience, and can turn on and off automatically with sunset and sunrise, saving power and trouble.

Enable Dark Mode

Enable the Dark mode for the screen background to protect your eyes by reducing the brightness and irritation.

You can enable or disable Dark mode using any of the following methods:

- Swipe down from the top right of the screen to open Control Center, and turn on or off **Dark mode**. Touch and hold it to enter the **Dark mode** settings page.
- Go to **Settings > Display & brightness**, tap **Dark** to enter **Dark mode**, and tap **Light** to quit **Dark mode**.

Turn On and Off Dark Mode Automatically

Go to **Settings > Display & brightness**, turn on **Auto-switch**, and tap **Schedule**. If **From sunset to sunrise** is selected, the system will determine the time of night based on your geographic location and clock. You can also tap **Custom time** to set the automatic switching time of the Dark mode according to your use habit.

More Settings of the Dark Mode

Go to **Settings > Display & brightness**, make sure **Dark** is toggled on, tap **Dark mode settings**, and you can choose whether to enable functions like **Darken the wallpaper in Dark mode**.

When **Darken the wallpaper in Dark mode** is enabled, the wallpaper's brightness will change with the environment.

Screen resolution adjustment

Smart screen resolution adjustment

Go to **Settings > Display & brightness** and turn on **Smart Resolution**. The system will adjust the screen resolution up or down according to the apps being run.

Dynamic Vivid Display

Enhance the colour and clarity of full-screen videos for a vivid viewing experience.

Go to **Settings > Display & brightness > Video enhancer** and enable **Vivid Display**.

 In the list of **Supported apps**, you can view the apps supporting this function.

Adjust Screen Refresh Rate

Go to **Settings > Display & brightness > Screen refresh rate**, and select the refresh rate based on your needs:

- **Dynamic**: Save power and improve screen smoothness.
- **High**: Improve screen smoothness but increase power consumption.
- **Medium**: Improve screen smoothness but slightly increase power consumption.
- **Standard**: Save power.

Adjust font

Adjust font style

 • This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.

- Some Fonts need to be purchased.

1 Go to **Settings > Display & brightness > Fonts**.

2 Download or purchase a font that you like.

Adjust font size and boldness

Go to **Settings > Display & brightness > Font settings** and you can adjust the following by dragging the controller:

- **Text size**: Text size on the screen.
- **Text and icon boldness**: The boldness of text and icons on the screen.

Adjust display size

Go to **Settings > Display & brightness > Display size**, and you can adjust the size of pictures or other elements on the screen by dragging the controller.

Honor Eye Comfort Display

The Honor Eye Comfort Display is specifically crafted to protect your eyes across various scenarios, whether you're using your device for leisure and entertainment purposes, working in the office, or winding down for sleep.

 • This feature is not a substitute for professional eye care. Please monitor your screen time and develop healthy device habits.

- The compatibility of this feature may vary depending on your device model and the version you are using.

Turn on or off Eye Comfort

- Swipe down from the top right of the screen to open the Control Center and turn on or off **Eye Comfort**. Touch and hold **Eye Comfort** to enter the settings page.
- Go to **Settings > Honor Eye Comfort Display > Eye Comfort** and turn on or off **Enable all day**.

After it's turned on, the status bar will show the icon . Since certain blue light is filtered out, the screen will have a warmer tone.

Set Effective Period for Eye Comfort

Go to **Settings > Honor Eye Comfort Display > Eye Comfort**, turn on **Scheduled** and set the **Start** and **End** for the Eye Comfort as needed.

Customise Eye Comfort Mode

Go to **Settings > Honor Eye Comfort Display > Eye Comfort**, enable **Enable all day** or set up **Scheduled**, and adjust the slider under **Filter level** to customise how much blue light you would like to be filtered.

Turn on Night display

Go to **Settings > Honor Eye Comfort Display**, turn on or off the **Circadian Night Display** switch.

After it's turned on, the device will match your body rhythm and your screen will have a warmer tone at night automatically.

Defocus Eyecare

Harnessing the power of defocus optical theory, Defocus Eyecare will automatically adjust your tablet display to match your screen time during activities like video watching or ebook reading. It refines display details and add a gentle blue-yellow tint to text edges. This feature also utilises AI to stimulate the benefits of defocus glasses, creating the illusion that content is positioned further away. This innovative approach significantly lessens eye strain.

Go to **Honor Eye Comfort Display**, toggle on **Defocus Eyecare**, then the tablet automatically adjusts images to create distant viewing experience, improving oxygen supply to the retina.

- Some apps don't yet support this feature.
- Turning on this feature may increase power consumption and device temperature.

Natural Tone

Your tablet automatically adjusts colour temperature based on ambient lighting for a paper-like viewing experience that helps relieve eye fatigue.

Go to **Honor Eye Comfort Display** and turn on **Natural Tone**.

Apply E-book mode

After E-book mode is enabled, your tablet screen will become black and white to reduce your eye fatigue.

You can enable or disable the mode using any of the following methods:

- Swipe down from the top right of the screen to open the Control Centre. Turn on or off **eBook mode** (If there is no **eBook mode** quick switch showed on the panel, tap  > **Edit shortcut switch**, and you can find **eBook mode** switch on the panel below).
- Go to **Settings > Display & brightness** and toggle on or off **eBook mode**.

 • If you enable **eBook mode** and **Eye Comfort** at the same time, only **eBook mode** works.

- If you enable **eBook mode** and **Dark mode** at the same time, the screen background will become dark and the text will become white.

Sounds

Set Do Not Disturb Mode

Do Not Disturb helps you prevent interruptions when you need to focus. When this mode is enabled, calls and messages will be muted and banner notifications will not be displayed.

Enable or Disable Do Not Disturb

You can enable or disable Do Not Disturb using any of the following methods:

- Swipe down from the top right of the screen to open Control Center, and turn on or off **Do Not Disturb**. Touch and hold it to enter the **Do Not Disturb** settings page.
- Go to **Settings > Sound > Do Not Disturb** and turn on or off **Do Not Disturb**.

When Do Not Disturb is enabled, a moon icon  appears on the status bar. Open Notification Center by swiping down from the top middle or left of the screen to view Do

Not Disturb notifications. Swipe the notification to the left and tap  to set a reminder.

When there are incoming calls, notifications, and messages, the tablet will not turn on the screen or display banner notifications and will be muted.

Set a Schedule for Do Not Disturb

- 1 Go to **Settings > Sound > Do Not Disturb**, and disable **Do Not Disturb**.
- 2 Enable **Scheduled**. Your tablet will enter Do Not Disturb mode at the specified time on Saturdays and Sundays by default.
- 3 Touch **Scheduled** to set the time frame and repeat cycle.

4 You can also touch **Add** to set multiple start times.

Adjust Sound Settings

Press a Volume Button to Adjust the Volume

Press the Volume up or down button to adjust the volume.

Set the Default Volume

Go to **Settings** > **Sound**, and you can then set the volume for the following items:

- **Notifications**
- **Alarms**
- **Music, Videos, Games**

 Calling services are not supported on Wi-Fi only tablets.

Press the Power Button to Mute Your Device When It Rings

When your device rings for an incoming call or alarm, you can press the Power button to mute it.

Look at the Screen to Reduce Volume

When you have an incoming call from your tablet, you can adjust the volume of the call by looking at the screen.

Before using this feature, go to **Settings** > **Honor AI** > **Smart Sensing**, and make sure that **Glance to reduce ringer volume** is enabled.

Set up More sound settings

Go to **Settings** > **Sound** > **More sound settings** and explore more ways to alert. Such as **Screen lock**, **Screenshot**.

 This feature may vary by device.

Notifications

App Badges

When new notifications arrive for an app, a numbered badge will appear on the app icon. You can also set a dot as the badge, or hide the badge for some or all apps.

Turn Off App Badges

- 1 Go to **Settings** > **Notifications & status bar**, and touch **App icon badges**.
- 2 Turn off the switch for some or all apps.

Change the Badge Display Mode

On the **App icon badges** screen, touch **Badge display mode**, and select **Numbers** or **Dots** according to your preference.

Hide Content of Notifications on the Lock Screen

Stop the content of notifications from being seen by others by hiding it from the lock screen.

Go to **Settings > Notifications & status bar > Previews on lock screen**, and enable **Hide**.

More App Notification Settings

Pure Mode of Status Bar

Go to **Settings > Notifications & status bar > Status bar**, and enable **Pure mode**. When **Pure mode** is turned on, the status bar only shows the time, Wi-Fi, and battery level.

Set Reminding Method for App Notifications

Go to **Settings > Notifications & status bar**. Select an app to set the reminding method for the app notifications.

- Enable **Allow notifications**: You will be reminded when new notifications are available for the app.
- Once the app has generated notifications, you can also set up more reminding ways. For example, Once the **Calendar** has generated notifications, you can also set **Event alarm reminder**, **Event notification (remind later)**, or **Default event notification**.

 The reminding methods supported by each app may be different.

Notifications Turn on Screen

Go to **Settings > Notifications & status bar**, and enable **Wake screen**. Your device will then automatically turn on the lock screen when it receives a notification.

Show Notification Icons in the Status Bar

Go to **Settings > Notifications & status bar > Status bar**, and enable **Show notification icon**.

Disable App Notifications

Disable Notifications from a Specific App

If you do not want to be disturbed by notifications from an app, perform either of the following:

- After you receive a notification from the app, swipe left on it in the notification panel, and go to  > **Disable notifications**.

- Go to **Settings > Notifications & status bar**, locate and touch the app for which you want to disable notifications, then disable **Allow notifications**.

 This feature is unavailable in some apps.

Disable Notifications from Apps in Batches

To disable notifications from multiple apps at a time, go to **Settings > Notifications & status bar > Manage all**, and turn off the switch next to each app.

Biometrics & Password

Face Recognition

Face Recognition allows you to unlock your device or access locked apps with your facial data.

Enrol Facial Data

- 1 Go to **Settings > Biometrics & password > Face Recognition**, and enter your lock screen password.
- 2 Touch **Add facial profile** and follow the onscreen instructions to enrol your facial data.
- 3 Select **Enable raise to wake**.

Add More Facial Profiles

You can add a maximum of five facial profiles for your device so that it can be shared with your beloved ones securely.

On the **Face Recognition** screen, touch **Add facial profile**, and follow the onscreen instructions to add facial data.

Enable Face unlock

On the **Face Recognition** screen, enable **Unlock** and **Enter Home screen after unlock** for even faster unlocking.

 If you have enabled PrivateSpace on or added multiple users to your tablet , you can use Face unlock only in MainSpace or with the Owner account.

Access App Lock with Face Recognition

On the **Face Recognition** screen, enable **Access App Lock**, and follow the onscreen instructions to add your facial data to App lock.

You can then touch a locked app on your home screen and use face recognition to access the app.

Smart Lock Screen Notifications

On lock screen, the details of banner notifications from WeChat, QQ and Weibo will be automatically hid and only be shown after your face is recognized. This helps avoid message leakage and protect privacy when others use the device or when you are surrounded by others.

- 1 Go to **Settings > Biometrics & password > Face Recognition**, fill in the lock screen password to enter **Face Recognition**, and toggle on the **Show notifications**.
- 2 Tap **Unlock** and select unlock method of **Slide to unlock**.

i To delete facial data, toggle off **Show notifications**. After ensuring that the lock screen password has been enrolled, turn on **Show but hide contents** to hide the lock screen notification details.

Disable or Delete Facial Data

On the **Face Recognition** screen, you can do the following:

- Disable facial data for certain features: Disable **Unlock**, or **Access App Lock** as required. This will not delete your facial data.
- Delete facial data: Touch **Delete** and follow the onscreen instructions to delete your facial data.

Lock Screen Password

You can set a numeric, pattern, or hybrid password as your lock screen password.

Set the Lock Screen Password

- 1 Go to **Settings > Biometrics & password** and touch **Lock screen password**.
- 2 Enter a password containing 6 digits.
- 3 Alternatively, touch **Select unlock method** and select a password type, then follow the onscreen instructions to input a new password.

Change the lock screen password

- 1 Go to **Settings > Biometrics & password**, tap **Change lock screen password**.
- 2 Enter the current lock screen password.
- 3 Enter a new password, or tap **Select unlock method** to select and enter a new password.

Turn off the lock screen password

Go to **Settings > Biometrics & password** and tap **Disable lock screen password**.

App

View or Change App Settings

Go to **Settings > Apps > Manage apps** and touch an app. You can force stop it, uninstall it, view and change the app permissions, set notification modes, and more.

 Some apps cannot be uninstalled.

Enable App Twin

Log in to two WhatsApp or Facebook accounts at the same time to separate work from personal life.

 Only certain apps support **App Twin**.

If the tablet has enabled PrivateSpace or added multiple users, App Twin is only available in MainSpace or for the device owner.

Go to **Settings > Apps > App Twin** and toggle on the switch of an app. The twin of that app will be displayed on the home screen.

Battery

Power Management

On the **Battery** screen, you can check the estimated battery time remaining, and enable a power saving mode to extend the battery life of your device.

Enable Power Saving Mode

If **Power Saving mode** is enabled on your device and the battery level is higher than 10%, some functions will be disabled, background apps will be restricted, and visual effects will be weakened to reduce power consumption. When the battery level is lower than or equal to 10%, stricter power saving measures are taken to ensure the longest standby time. It is recommended that you enable **Power Saving mode** when the battery level is lower than or equal to 20%.

To do so, go to **Settings > Battery** (or **System Manager > Battery**), and enable **Power Saving mode**. A  icon will then be displayed in the status bar.

Enable Ultra Power Saving mode

After enabling **Ultra Power Saving mode**, the screen display would go into **Dark mode**. This would disable most features and apps that may consume power and limit the performance of the tablet, with only basic features like Call and Messages retained to extend the standby time. You may also add frequently used apps for emergency operations.

Try out the following methods to enable **Ultra Power Saving mode**:

- Go to **Settings > Battery** (or go to **System Manager > Battery**), and enable **Ultra Power Saving mode**.
- When the remaining battery is lower than 10%, tap **Enable Ultra power saving mode** on the notification banner on the top of the screen.

In **Ultra Power Saving mode**, tap **Exit** on the upper right corner to exit **Ultra Power Saving mode**.

 • Calling services are not supported on Wi-Fi only tablets.

- SMS messaging services are not supported on Wi-Fi only tablets.

Battery optimization

Battery optimisation: The system will provide multi-dimensional power-saving recommendations based on your usage habits and frequency. You can optimise battery usage with one tap to extend your device's runtime.

You can optimise in the following ways:

- **Manual optimisation:**
 - 1 Go to **Settings > Battery > Battery optimisation** (or go to **System Manager > Battery > Battery optimisation**).
 - 2 Confirm by selecting **Battery-draining features** and **Seldom used functions**, then choose the specific optimisation suggestions under **Power saving tips** based on the actual situation, and tap **Optimize**.

Enable Performance Mode

Performance mode adjusts the power settings of your tablet to deliver maximum performance. This will cause the battery to drain more quickly, especially when graphic-intensive apps are used.

When the battery has sufficient power, go to **Settings > Battery** (or **System Manager > Battery**) and enable **Performance mode**.

A  icon will then be displayed in the status bar.

 **Performance mode** is available on selected devices only. If the **Performance mode** option is not displayed in **Battery**, it indicates that your device does not support the feature.

Customise Battery Settings

You can also set whether to display the battery percentage in the status bar, and whether to maintain a network connection when the device screen is turned off.

Display Battery Percentage on the Status Bar

Go to **Settings > Battery** (or **System Manager > Battery**), touch **Battery percentage**, and choose to display the battery percentage, either inside or outside of the battery icon on the status bar.

Stay Connected while Your Device is Sleeping

If you would like your device to continue to receive messages or download data while it is in sleep mode, set to keep your device connected when it sleeps. Please note that this may increase power consumption.

On the **Battery** screen, touch **More battery settings**, then enable or disable **Stay connected while asleep** as required.

Enable Smart Charge

Smart Charge learns from your charging habits and manages the charging process intelligently. This feature reduces the battery wear level and prolongs the battery life by reducing the time your device spends fully charged. It is advised that you keep this feature enabled.

For example, if you are used to charging your devices overnight or for an extended period of time, Smart Charge will pause the charging when the battery capacity reaches a certain level. Before you get up in the morning, Smart Charge will resume charging until your device is fully charged. This reduces the time your device spends fully charged to slow down battery wear and prolong the battery life.

-  Data about your charging habits will only be used on your device and will not be backed up or uploaded to the cloud.

To enable this feature, go to **Settings > Battery > More battery settings**, and enable **Smart charging**.

Enable Smart Battery Capacity

Smart Battery Capacity intelligently adjusts the maximum available battery capacity based on the current battery state to slow down battery wear and prolong the battery lifespan. It is advised that you keep this feature enabled.

To enable this feature, go to **Settings > Battery > More battery settings**, and enable **Smart Battery Capacity**.

Storage

Check Storage Usage

Go to **Settings > Storage** to check storage usage and optimise it when you feel necessary.

Free up Tablet Storage

The **Cleanup** of **System Manager** will scan the storage for redundant files and large files, such as application residues, redundant installation packages, and provide cleaning suggestions to help you free up space.

- 1 Go to **System Manager** and tap **Cleanup**.

2 When the scan is completed, tap **Clean up** or **Clean up** behind the item to be cleaned and follow the instructions to delete redundant files.

 Swipe down from the top of the screen and the tablet will rescan the Storage.

Clean Up Duplicate Files

System Manager can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files (groups)**, then select unwanted files to delete them.

Security

Use the Password Vault to Automatically Fill in the Password

Password Vault saves your usernames and passwords and autofills them for you each time you log in to an app. This data is hardware encrypted and stored only on your device.

Honor does not have access to it, and will not upload it to the network or server.

 . Before using Password Vault, set a lock screen password for your device.

- Password Vault is only compatible with certain apps.

Autofill Usernames and Passwords

- 1 Go to **Settings > Security & privacy > Device & data protection > Password and passkey > Password Vault**, and enable **Automatically save and fill in usernames and passwords**.
- 2 Enter usernames and passwords when logging into the app for the first time. When logging in, tablet will automatically remind you of storing.
 - If you want to store the username and password locally only, please tap **Save on the device only** in the pop-up.
 - If you want to sync your username and password to other devices that are logged into your Honor ID, go to **Settings > Security & privacy > Device & data protection > Password and passkey > Password Vault**, tap **Sync Password Vault data**, or tap **Sync to other devices** in the pop-up to store password.
- 3 When you log in again, pass the lock screen authentication to autofill the username and password.

Through **Device Clone**, the data in Password Vault can be transferred to Honor tablet when changing a new device. You can quickly log in the new tablet.

View or Delete Stored Usernames and Passwords

You can view or delete the usernames and passwords stored in Password Vault at any time.

Go to **Settings > Security & privacy > Device & data protection > Password and passkey > Password Vault > ACCOUNTS** to view or delete the stored usernames and passwords.

Disable Password Vault

Go to **Settings > Security & privacy > Device & data protection > Password and passkey > Password Vault**, and disable **Automatically save and fill in usernames and passwords**.

Parallel Space

Parallel Space is a separate safe space focused on protecting your tablet's data, which is independent of the MainSpace and can be used at the same time. You can save your important data and apps to **Parallel Space** to make them more independent, secure, and safe.

Enable Parallel Space

- 1 Go to **Settings > Security & privacy > Device & data protection > Parallel Space** and tap **Enable**.
- 2 After enabling, set or enter the password and password protection question, and create **Parallel Space**. After that, a shortcut of **Parallel Space** will also be created on the home screen.

i Some tablets do not support fingerprint. Please refer to the actual situation.

Drag Files into or out of Parallel Space

Go to **Parallel Space**, and you can:

- Tap **Move files in** to migrate important data such as images, videos, audios and docs to **Parallel Space**.
- Tap **Move files out** to move important data such as images, videos, audios and docs out of **Parallel Space**.

You can also drag files from the MainSpace to **Parallel Space** in the split-screen mode or floating window mode.

Manage Apps in Parallel Space

You can add apps that you need to **Parallel Space**. You can also use the same app in the MainSpace and **Parallel Space** with different accounts and the app will run in the MainSpace and **Parallel Space** independently.

Add apps to **Parallel Space**:

Go to **Parallel Space**, and tap **Add app**, and follow the instructions to add MainSpace apps to **Parallel Space**.

Remove apps from **Parallel Space**:

Go to **Parallel Space**, long press the app and then tap **Uninstall**. Removing an app from **Parallel Space** will not affect its use in the MainSpace.

Use Apps Simultaneously in Dual Spaces

With **Parallel Space**, you can use apps simultaneously in the MainSpace and **Parallel Space**, with only one screen. The two spaces are running independently. For example, you can browse your work files on one side and watch short videos on the other, or you can play a same game on two sides at the same time.

- 1** Enter the homepage of **Parallel Space**.
- 2** Swipe inwards from both long edges of the screen and pause until **Multi-Window dock** appears. Then, press and drag the app onto the screen and release to enter the split-screen mode.
- 3** Open an app in **Parallel Space**.
- 4** In the MainSpace on the other side, open the same or a different app as needed **Parallel Space**.

i • This feature is limited to apps that support split screen.
• For apps that support landscape orientation, it will automatically enter horizontal split mode when running the two spaces at the same time.
• When running two games at the same time in split screen, it needs to use more system resources and may cause lagging and heating up.

AI Face Swap Detection

With AI Face Swap Detection, the system automatically checks for AI face-swapping during video calls to protect you from potential fraud.

Go to **Settings > Security & privacy > Device & data protection > AI Deepfake Detection**, enable the **AI Deepfake Detection** switch.

Automatic face-swapping detection during video calls

During video calls or video conferences, the system will pop up a notification. Tap **Start detection**, and after the detection is completed, the results will be displayed.

Manual face swap detection during video calls

During video calls, **Honor SecurityMagic Capsule** will pop up. Tap **Start detection**. Upon completion, the detection result will be displayed.

Use App Lock to Protect Your Privacy

You can lock apps containing private data, such as chat and payment apps, to prevent unauthorised access.

Enable App Lock

Go to **Settings > Security & privacy > Device & data protection > App Lock > Enable**, then follow the onscreen instructions to set the App Lock password and select the apps to lock.

If you have enabled face or fingerprint unlock, you can link App Lock with a face ID or fingerprint ID as prompted.

 This feature may vary by device.

Change the App Lock Password or Security Questions

Enter the **App Lock** settings screen, go to  > **Password type**, and select **Lock screen password** or **Custom PIN** as the App Lock password.

If you select **Custom PIN**, you can go on to set a new password and security questions.

Cancel or Disable App Lock

On the **App Lock** settings screen, do the following:

- Cancel App Lock: On the locked app list, toggle off the switches beside the apps for which you want to cancel the lock.
- Reset App Lock: Go to  > **Disable App Lock** > **DISABLE**. This will cancel all locks, and clear all app lock settings.

Privacy

Use Location Services

Some apps need to obtain your location information to provide better services. You can enable or disable location services, and grant or deny the permission to access location information for particular apps as required.

Enable or Disable Location Services

You can enable or disable location services in either of the following ways:

- Swipe down from the top right of the screen to open the Control Center, and enable or disable .
- Alternatively, go to **Settings** > **Location**, and enable or disable **Use location**.

After location services are disabled, your tablet will prevent all apps and services from collecting and using location information, with the exception of some built-in apps. When these apps or services need to use location information, your tablet will remind you to enable location services again.

Increase the Accuracy of Location Services

You can improve the positioning accuracy of your tablet by allowing apps and services to scan for nearby Wi-Fi networks and Bluetooth devices or access supplementary data from global navigation satellite systems (GNSS).

 The feature availability varies by device.

Go to **Settings > Location > Advanced settings**, then set the options as required.

Allow or Forbid Apps to Obtain Location Information

You can allow or forbid an app to access location information, including granting one-time or permanent access, or denying access to location information during use of the app.

- 1 Go to **Settings > Apps > Permission manager**, touch **Location**, and check which apps have been granted access to location information.
- 2 Touch the app for which you want to change settings and follow the onscreen instructions to grant or deny permissions.

Permission Management

Apps may require certain permissions, such as the Location permission, in order to provide you with corresponding services.

However, some apps may obtain excessive permissions, posing potential risks to your information privacy and security. You can check the permissions granted to each app and deny those you deem unnecessary.

Review Privacy Access Logs

You can check and manage privacy access logs as needed to remove unjustified permissions for better services.

On the **Permission manager** screen, select a permission to enable or disable it.

Manage the Location Permission

After granting the Location permission to an app, it can obtain your location information at any time. For example, if a map app is granted the Location permission, it can provide you with location and navigation services. You can revoke the permission if you do not need these services.

- 1 Go to **Settings > Apps > Permission manager**.
- 2 On the **Permission manager** screen, touch **Location**, touch the icon of the corresponding app, then select one of the access permission options.

Create a PrivateSpace for Your Private Data

Create your PrivateSpace that is completely separate of the MainSpace (the original space) on your tablet and make it accessible only by your fingerprint or password.

 Not all devices support fingerprint features.

You can move private photos, videos, and other files to the PrivateSpace to prevent unauthorized access. You can also move your payment and gaming apps to the PrivateSpace to prevent them from being accessed by your child.

Enable and Access the PrivateSpace

- 1 Go to **Settings > Security & privacy > Device & data protection > PrivateSpace > Enable** and follow on-screen instructions to create the PrivateSpace.
- 2 You can enter your PrivateSpace using either of the following methods:
 - From the lock screen, access the PrivateSpace using the corresponding fingerprint or password.
 - In the MainSpace, go to **Settings > Security & privacy > Device & data protection > PrivateSpace** and tap **Log in**.

i If you restart your tablet, you have to enter the password to access the MainSpace first, then switch to the PrivateSpace.

Hide or Unhide the Entrance to PrivateSpace

You can hide the entrance to PrivateSpace in the MainSpace settings, so that you can only access PrivateSpace using the fingerprint or password set for the space.

- To hide the entrance to PrivateSpace: In PrivateSpace, go to **Settings > Security & privacy > Device & data protection > PrivateSpace**, and enable **Hide PrivateSpace**.

Transfer Files Between MainSpace and PrivateSpace

- 1 In PrivateSpace, go to **Settings > Security & privacy > Device & data protection > PrivateSpace**, and touch **MainSpace to PrivateSpace** or **PrivateSpace to MainSpace**.
- 2 Select the files (such as photos, videos, and audio files) you want to transfer, touch **Move**, and follow the onscreen instructions to transfer the files.

In the target space, go to **Gallery > Albums > Others > SharedImages**, or **Gallery > Albums > Others > SharedVideos** to view photos and videos.

Transfer Data in PrivateSpace to Your New Device

You can quickly transfer your PrivateSpace data, such as contacts, photos, and files, from the old device to the new one.

- 1 On your new device, create and enter your PrivateSpace, go to **Settings > Security & privacy > Device & data protection > PrivateSpace > Device Clone**, and select **This is the new device**.
- 2 In your old device, enter your PrivateSpace, go to **Settings > Security & privacy > Device & data protection > PrivateSpace > Device Clone**, and select **This is the old device**.
- 3 Follow the onscreen instructions to scan the QR code or manually connect the old device to the new one.
- 4 On your old device, select the data to be transferred. You can cancel the data transfer during the process, and then continue it once you have connected your old device with the new one again.

Delete the PrivateSpace

If you delete the PrivateSpace, all apps and data stored in the space will be deleted and cannot be restored. Please exercise caution for this operation.

You can delete the PrivateSpace in either of the following ways:

- In the MainSpace, go to **Settings > Security & privacy > Device & data protection > PrivateSpace** and tap  > **Stop and delete PrivateSpace**.
- In the PrivateSpace, go to **Settings > Security & privacy > Device & data protection > PrivateSpace**, and tap **Delete**.

Accessibility

Favourites Space

With Favourites Space, you can quickly collect graphics, web pages, videos, documents and other materials in one place to easily review and organise them, and also synchronise to MagicRing devices to share collected content across devices.

Drag favoured content

- Go to **Settings > Accessibility features > Favourites Space**, and ensure that all the functions are enabled.
- Go to **Settings > Honor AI > Magic Portal** and make sure **Magic Portal** is enabled.

- 1 Drag content into Favourites: Press and hold images, videos, text, or documents until they float, then drag them to the screen edge **Favourites Space** and release them, and then the content will be saved into **Favourites Space**.
- 2 Drag content out of Favourites: Tap from the edge of the screen to expand **Favourites Space**. Press and hold the favourites to drag them out to other apps.

 Whether the collected content can be dragged out to other apps depends on the collected content and apps. Please refer to the actual situation.

Drag Favoured Content

- Go to **Settings > Accessibility features > Favourites Space**, and ensure that all the functions are enabled.

- 1 Drag content into Favourites: Press and hold images, videos, text, or documents until they float, then drag them to the screen edge **Favourites Space** and release them, and then the content will be saved into **Favourites Space**.
- 2 Drag content out of Favourites: Tap from the edge of the screen to expand **Favourites Space**. Press and hold the favourites to drag them out to other apps.

 Whether you can drag collected content to other apps depends on the type of content and the apps themselves. Please check the actual compatibility.

Manage Favourites Space

Tap to expand **Favourites Space** from the edge of the screen, you can search, filter, share and export the collected contents.

- Tap to expand **Favourites Space** from the edge of the screen, tap the upper right corner   > **Full screen**, tap  and enter keywords to search for collected contents, and then tap  to filter contents by type.
- In **Favourites Space**, tap the upper right corner  > **Select**, you can choose one or more collected contents, which can be shared, exported, moved and deleted.
- Tap the upper right corner  > **Clipboard**, you can view and search only copied and cut text in Favourites.
- Tap the upper right corner  > **Add to home screen** to create a home screen shortcut.

Share Favourites Space across devices

The content in Favourites Space can be freely transferred to phones, tablets, computers and other MagicRing devices of the same account, and can be shared and used by multiple devices.

Go to **Settings > Accessibility features > Favourites Space**, and make sure **Share across devices** is enabled.

Set Scheduled Power On/Off

Use the **Scheduled power on/off** feature to power your device on and off at set times, to save power and prevent interruptions while resting.

- 1 Go to **Settings > Accessibility features > Scheduled power on/off**, and enable **Scheduled power on/off**.
- 2 Set the power on and off times, as well as the repeat cycle. Your device will power on and off automatically at the specified times.

To stop using this feature, disable **Scheduled power on/off**.

Accessible use of a tablet

With accessibility features, your tablet can be easily used by everyone, including people with disabilities, ensuring that everyone can equally enjoy the convenience brought by technology. The accessibility features include the following categories:

- **Vision**: assisting individuals with low vision or blindness in using the tablet, such as **Colour correction**.
- **Hearing**: assisting individuals with hearing impairments or deafness in using the tablet, such as **Captions** and **Flash for Alerts**.

- **INTERACTION CONTROL:** assisting individuals with limited hand functionality or cognitive impairments in using the tablet, such as **Accessibility shortcut**.

Go to **Settings > Accessibility features > Accessibility** to view the accessibility features supported by this tablet. On the **Accessibility** settings screen, tap  > **Restore defaults** to reset the current accessibility settings at any time.

Customise Text-to-speech (TTS)

Text-to-speech (TTS) allows the text on the tablet to be read out in voice, and can be used in conjunction with **TalkBack**.

Go to **Settings > Accessibility features > Accessibility > Text-to-speech**, and you can:

- **Set engine:** Under **Preferred engine**, tap the icon  besides the engine name, you can customise the language and more.
- **Adjust Speech rate:** Slide the **Speech rate** control bar, you can adjust the reading speed.
- **Adjust Pitch:** Slide the **Pitch** control bar, you can adjust the pitch of the reading.
- **Reset speech rate:** Tap **Reset speech rate**, you can reset the text speaking speed to the default value.
- **Reset speech pitch:** Tap **Reset speech pitch**, you can reset the reading tone of text to the default value.
- During the customisation process, you can tap **Listen to an example** at any time to consider whether the current voice is satisfactory.

Magnification

By enabling the **Magnification** feature, you can zoom in on specific areas of the screen, making it easier to read small text.

Go to **Settings > Accessibility features > Accessibility > Magnification**, and turn on the **Magnification** switch. You can:

- **Partial Zoom Display:** tap the screen three times quickly with one finger to zoom in on the touched area (tap three times again to return to the previous view).
- **Pan the Screen:** while in partial zoom mode, drag two fingers on the screen.
- **Adjust Zoom Level:** while in partial zoom mode, pinch or spread two fingers on the screen.
- **Temporary Zoom:** quickly tap the screen three times with one finger, then press and hold the screen (i.e., double-tap quickly followed by a long press). This will temporarily zoom in on the touched area. You can drag your finger to view any part of the screen, and release your finger to return to the previous view.

- After enabling this feature, the response speed of applications such as **Phone**, **Calculator** may slow down. Please refer to actual performance.
- When playing games or using applications that require multiple consecutive taps on a tablet, it is recommended to enable this feature with caution to avoid conflicts between the **Magnification** and in-app operations.

Enable Large mouse pointer

When a tablet is connected to a mouse, the mouse pointer will enlarge to make navigation easier.

Go to **Settings** > **Accessibility features** > **Accessibility**, and turn on the **Large mouse pointer** switch.

- If your tablet is not connected to a mouse, enabling this feature will have no effect.

Colour correction

By adjusting the colour display settings on your tablet, it can help individuals with colour vision deficiency to distinguish colours and use the screen more easily.

Go to **Settings** > **Accessibility features** > **Accessibility** > **Colour correction**, turn on the **Colour correction** switch, and then choose the appropriate colour display mode according to your needs.

Enable Colour inversion

Reversing the screen colours can help individuals with visual impairments better distinguish screen content and improve readability.

Go to **Settings** > **Accessibility features** > **Accessibility**, and turn on the **Colour inversion** switch.

- Enabling this feature may impact performance.

Enable High contrast text

By darkening the font colour and creating contrast with the background, it helps individuals with impaired vision see more clearly.

Go to **Settings** > **Accessibility features** > **Accessibility**, and turn on the **High contrast text** switch.

- When **High contrast text** is enabled, it will default to **Light** mode and turn off the **Auto-switch**.

Connect Hearing aid

You need to turn on **Bluetooth** first, then connect the **Hearing aid**.

1 Go to **Settings** > **Accessibility features** > **Accessibility** > **Hearing aid**, and turn on the **Bluetooth**.

- 2 Under **Available devices**, select the **Hearing aid** you want to pair and follow the on-screen instructions to complete the pairing.
- 3 You can also go to **Settings > Bluetooth > Available devices**, and look for the device with the  icon to pair.
 - Please make sure the **Hearing aid** has sufficient battery and is within **Bluetooth** range (approximately 10 meters).

Enable Mono audio

Mono audio is designed for individuals with hearing impairment in one ear. When enabled, audio channels will be merged during playback to provide a clearer and more focused sound experience.

Go to **Settings > Accessibility features > Accessibility**, and turn on **Mono audio**.

Adjust Audio balance

You can adjust the balance of **Mono audio** to increase the volume of the left or right channel.

Go to **Settings > Accessibility features > Accessibility**, slide the control block under **Audio balance** to adjust the audio direction. For example, if you have difficulty hearing in your left ear, slide the control block to the left.

Enable Captions

Turning on **Captions** will convert spoken audio into text, making it easier for individuals with hearing impairments to understand the content.

Go to **Settings > Accessibility features > Accessibility > Captions**, and turn on **Captions**. You can further customise **Language**, **Font size** and **Caption style** according to your personal needs.

Flash for Alerts

When a call comes in, a notification is received, or the alarm goes off, the camera flash and the screen will blink to prevent you from missing any alerts.

Go to **Settings > Accessibility features > Accessibility > Flash for Alerts**, you can:

- Turn on **Camera flash**.
- Turn on **Screen flash**, and customise the blinking colour.

Set up Accessibility shortcut

You can set up the volume buttons to quickly launch an accessibility feature or service.

- 1 Go to **Settings > Accessibility features > Accessibility > Accessibility shortcut**.
- 2 Turn on the **Accessibility shortcut** switch.
- 3 Tap **Select feature** and select the feature you want to launch via the shortcut.

Once enabled, press and hold both the volume up and down buttons for 3 seconds to launch the accessibility shortcut.

- Note that only certain accessibility features or services can be accessed through this shortcut. Please refer to the actual settings for availability.

Adjust Touch Response Time

You can adjust the response time for both tapping and long pressing the screen according to your needs.

Go to **Settings > Accessibility features > Accessibility > Touch**, you can:

- Select **Tap duration**: adjust the length of time the tap needs to be held.
- Select **Long press duration**: adjust the length of time the long press needs to be held.
- Enable **Ignore repeated touches**: multiple taps within the set time will be treated as a single tap. Once enabled, you can further adjust the time interval.

Click when cursor stops

When a tablet is connected to a mouse, you can set it to automatically click after the cursor pauses for a certain amount of time, making it easier for users with limited hand functionality to operate the device.

Go to **Settings > Accessibility features > Accessibility > Click when cursor stops**, turn on **Click when cursor stops**, and slide the control block under **Click when cursor stops** to adjust the cursor pause duration.

- If your tablet is not connected to a mouse, enabling this feature will have no effect.

Shortcuts and Gestures

You can easily access common features using shortcuts and gestures. You can go to **Settings > Accessibility features > Shortcuts & gestures** to view the features supported by this device model.

Triggering Common Functions Through Three-Finger Swipe Down

You can customise the features triggered by Three-finger swipe down.

Go to **Settings > Accessibility features > Shortcuts & gestures**, tap **Screenshot/Global Favourites** and then **Three-finger swipe down**. Then, select the features to be triggered through Three-finger swipe down or turn off **Three-finger swipe down**.

Quick Start to Record Screen

Knock twice on the screen with a knuckle to rapidly start recording the screen.

Go to **Settings > Accessibility features > Shortcuts & gestures**, and tap **Record screen** to turn on **Record screen**.

Quick Wake-Up

Raise your device or double tap on the screen to quickly wake your device.

Go to **Settings > Accessibility features > Shortcuts & gestures** and tap **Screen On/Off** to turn on **Raise to wake** and **Double-tap to wake**.

Motion Sickness Relief

You can enable **Motion Sickness Relief** through any of the following methods:

- Navigate to **Settings** and enable **Motion Sickness Relief**.
- Swipe down from the top right corner of the screen to access Control Centre, continue to swipe down, and tap to illuminate  (touch and hold the icon to enter the **Motion Sickness Relief** settings page).

Once **Motion Sickness Relief** is enabled, dots will appear on both sides of the screen for different motion state of the vehicle, such as acceleration, deceleration, turning, lane changing, bumps, shaking, etc., to help alleviate motion sickness. You can also slide the control bar of **Sensitivity** according to your own feelings to adjust the motion of the dots.

 • Motion sickness symptoms are related to factors such as air circulation, temperature and humidity, odours, and noise in the environment. Base your experience on actual conditions.

• Motion sickness symptoms are also related to the user's motion sensitivity, motion adaptation ability, physical condition, psychology, and diseases. Base your experience on actual conditions.

• During use, try to hold the device steadily and ensure that the eyes and the phone remain relatively still to enhance the effect of motion sickness relief.

• If continuous use of this feature does not alleviate motion sickness, it is not recommended to repeatedly attempt to use it.

Use a Stylus to Write Easily

The stylus for your tablet works just like your finger, but is far more accurate and flexible, offering a real writing experience. It also supports Instant Write, Global Handwriting, Free Mark, , etc. It can also be used with special applications to make writing more enjoyable.

Charge the Stylus

Attach the flat side of the stylus to the top of the tablet for pairing or charging. The attachment position may vary by model. You can move the stylus left or right until a prompt pops up on the tablet screen.

 If the stylus stays idle for a long time, its power will gradually drain until it enters the battery protection mode, which requires the stylus to be charged for 5 to 10 minutes before it can be used.

Enable the Stylus

When using the stylus for the first time, pair it with the tablet:

Attach the flat side of the stylus to the top of the tablet for pairing or charging. The attachment position may vary by model. You can move the stylus left or right until a prompt pops up on the tablet screen.

View the stylus battery level and details:

- Go to **Settings > Accessibility features > Stylus** to view the current battery level of the stylus.
- Go to **Settings > Accessibility features > Stylus > Device information** to view the details of the stylus or perform **Firmware update**.

i The stylus pen will go into a deep sleep state after being left idle for a period of time. To wake it up, please follow the above method.

Use a Stylus to Enable Instant Write

When the screen is off, tap the screen with a stylus to quickly open Notes for writing, and even resume the last unsaved content, allowing you to extend your inspiration and creativity anytime, anywhere. You can choose from a variety of stylus colours and use tools to erase, rotate, and scale text.

1 Enable Instant Write: Go to **Settings > Accessibility features > Stylus > Instant Write** and make sure **Instant Write** is turned on.

2 Set up Instant Write: In **Instant Write**, you can set your Instant Write preferences and the screen-off time limit to continue writing:

- Tap **Continue writing your note** to save the note or continue writing.
- Tap **Time limit** to reset the time limit to continue writing.

i When writing in **Notes**, tap the currently used brush in the toolbar to select the brush thickness. When the current writing tool is the eraser, tap the eraser again to select **Area eraser**, **Stroke eraser**, or **Clear handwritten content**.

Use a Stylus to Enable Global Handwriting

In any text box on the tablet, writing with a stylus can accurately convert your writing into text. You can also delete, select, and split the text by drawing wavy lines or horizontal lines. Even mixed Chinese and English texts can be recognized.

1 Enable Global Handwriting: Go to **Settings > Accessibility features > Stylus > Global Handwriting**, and turn on **Global Handwriting**.

2 Use stylus gestures: Edit the text in the search box or text box with the following stylus gestures:

- **Delete:** Delete the text by drawing a wavy line or zigzag line on it.
- **Select:** Select the text by drawing a horizontal line on it.

- **Split:** Split the text by drawing a vertical line downwards.
- **Combine:** Combine the text by drawing a vertical line upwards.

Use a Stylus to Pick Colours Across Apps

When you use a stylus to draw in **Notes**, you can easily pick colours from other apps.

Go to **Notes**, tap  > **Typed note** to create a new note, or open an existing **Typed note**.

Pick colours across apps:

- 1 In the multi-window mode, on the **Notes** page, tap  > **Handwrite** to enter the handwriting panel.
- 2 In the **handwriting kit** panel, tap  >  , tap or drag the colour picking ring at the target location to pick a colour.

Cross-device colour picking: Swipe down from the top right of the status bar to enable Control Centre, tap **Multi-Screen Collaboration**, and connect your tablet and phone by following the instructions, and then you can use the colour picking ring to select colours on your phone.

Edit Floating Menu

- 1 Go to **Settings** > **Accessibility features** > **Stylus** and confirm enabling **Floating menu**.
- 2 Tap **Edit floating menu**, choose the functions that you need in **Stylus**, and add them to **Floating menu**.

Use a Tablet with Stylus as Your PC's Writing Pad

You can use your tablet with a stylus as your PC's **Writing Pad** so that you can annotate or draw patterns easily.

On the tablet:

- 1 Connect the stylus to your tablet.
- 2 Use a USB cable to connect your tablet and PC, and tap **Open writing pad** on the notification that prompts on your tablet.
- 3 On the **Writing Pad**, tap  to learn each key's functions.



After switching to another app, you can tap  > **Writing Pad** on the floating window of the stylus to open **Writing Pad** again.

On the PC:

Open an app that supports **Writing Pad**, tap the drawing or brush-related features, then you can choose a proper pen and draw or write on the tablet.

i You can access apps that support writing pad easily by tapping the stylus icon in the **taskbar** on PC and adjust more settings.

Only some computers running Windows 10 or later support this function. Please refer to the actual situation.

Set Multi-User

Add a User or Guest Account

- 1 Go to **Settings > Users & accounts > Current user**, touch **Add user** or **Add guest**, then follow the onscreen instructions to add an account.
- 2 Touch **Switch** to switch to the user or guest account. Configure the settings for the new account as prompted.
- 3 Install apps as needed. Note that if a newer version of an app has been installed by another user, the app installation will fail.

A maximum of three user and one guest accounts can be added.

Authorise a User or Guest Account to Make Calls and Send Messages

You can set whether to allow a user or guest account to make calls, send SMS messages, and more.

i Calling services are not supported on Wi-Fi only tablets.

- 1 After accessing your device as the owner, go to **Settings > Users & accounts > Users**.
- 2 Touch the related account, and select the permissions you want to authorise.

Switch Between the Owner, User, and Guest

Go to **Settings > Users & accounts > Users > Current user**, and touch the name of the account you wish to switch to, then tap **Switch user**.

Delete a User or Guest Account

Deleting a user or guest account will delete all its related data. Please exercise caution.

After accessing your tablet as the owner, use either of the following methods to delete a user or guest account:

- Go to **Settings > Users & accounts > Users > Current user**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.
- Swipe down from the top right of the screen to open the Control Center, touch  > **More settings**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.

System & Updates

Change system language and region

- 1 Go to **Settings > System & updates > Language & input > Language and region** and select a language.
- 2 If the language you want to use is not in the list, tap **Add language**, search and add it to the language list, and then select the language.
 - i** The system support many languages, but not all. You might not find the language you want.
- 3 Tap **Region** to select your country/region. The system interface will be adjusted according to the cultural habits of your chosen country or region.

Set the System Date and Time

Your device is able to sync to the local date, time, and time zone over a mobile network. You can also manually set the date, time, and time zone for your device.

Go to **Settings > System & updates > Date & time**, then set the options according to your requirements.

Set the Date and Time Automatically or Manually

- Enable **Automatic date & time**, and your device will sync to the local date and time over a mobile network.
- To manually set the date and time, disable **Automatic date & time**.

Change the Time Format

- Enable **24-hour time** and your device will display time in the 24-hour format.
- Disable **24-hour time** and your device will display time in the 12-hour format.

Back Up with an External Storage Device

Back up data to USB storage devices

When the tablet is low on storage space, you should regularly back up large files or important data to a USB storage device (e.g., USB flash drive, card reader).

- 1 Connect the tablet to the USB storage device with a USB OTG cable.
- 2 Go to tablet **Settings > System & updates > Backup & restore > Data backup > External storage** and select **USB storage** on the **External storage** screen.
- 3 Tap **BACK UP**, check the data you want to back up, and tap **Back up**.
- 4 When backing up for the first time, follow the on-screen instructions to set the password and password hint. The data will be encrypted when backing up. Please remember the backup password: After the backup password is set, you do not need to enter the password for later backups, but you need to enter it for verification to recover files.
 - i** The reset password is valid only for subsequent backups, not for previous backups.

Recover backup data from USB storage devices

- 1 Connect the tablet to the USB storage device with a USB OTG cable.
- 2 Go to tablet **Settings** > **System & updates** > **Backup & restore** > **Data backup** > **External storage** and select **USB storage** on the **External storage** screen.
- 3 Select the appropriate backup record entry in the **RESTORE FROM BACKUP** list and open it.
- 4 Select the data you need to recover, tap **Restore**, follow the prompts to enter the password, and then recover the data.

Restore Your Tablet to Default Settings or Factory Settings

Reset Network Settings

This operation will reset your Wi-Fi, mobile data network, and Bluetooth settings. It will not change any other settings on your device or delete any data.

Go to **Settings** > **System & updates** > **Reset**, touch **Reset network settings**, then follow the onscreen instructions to reset network settings.

 Data services are not supported on Wi-Fi only tablets.

Reset All Settings

This will restore network settings, lock screen passwords and home screen layout. If the tablet supports fingerprint or face recognition, it will also restore fingerprint and face IDs, but will not delete other types of data or files. Other settings, including , user account, device administrator will not be restored.

 If you have set both a password and Fingerprint or Face ID in the app (such as Safe), the Fingerprint or Face ID will be removed after restoring the settings, but the password will remain. Please ensure you back up your data before restoring the settings.

If Stay in Sync is enabled and the data sync switch is turned on, the Wi-Fi data records on your tablet , and other Honor devices (logged in with the same Honor account), and in the cloud will all be restored simultaneously.

Go to **Settings** > **System & updates** > **Reset**, tap **Reset all settings**, and follow the on-screen prompts to restore.

Restore Factory Settings

This operation will erase data on your device, including your accounts, app data and system settings, installed apps, music, images, all files in the internal storage, security chip contents, and locally-stored system, app, and personal data related to Honor IDs. Make sure to back up your data before restoring your device to its factory settings.

Go to **Settings** > **System & updates** > **Reset** > **Reset tablet**, touch **Reset tablet**, and follow the onscreen instructions to restore factory settings.

Use Another Input Method

You can download a third-party input method and set it as the default input method.

- 1 Download the input method from an official app market.
- 2 Follow the onscreen instructions to set it as the default input method, or go to **Settings > System & updates > Language & input > Default keyboard** and select the input method.

Use Device Clone to Move Data to Your New Device

Device Clone lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old tablet to your new tablet.

Migrate Data from a Device

- 1 On your new tablet, open the **Device Clone** app. Alternatively, go to **Settings > System & updates > Device Clone**, tap **This is the new device**, then select the corresponding old device type.
- 2 Follow the onscreen instructions to download and install **Device Clone** on your old device.
- 3 On your old device, open the **Device Clone** app and tap **This is the old device**. Follow the onscreen instructions to connect your old device with your new tablet by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then tap **Next > Transfer** to start cloning.

i **Device Clone** is only available on tablets running Android 7.0 or later, iOS 8.0 or later.

Update Your Device System Online

When an update is available, your device will prompt you to download and install the update package.

i

- Before updating, make sure your device is running an official system version. Otherwise, the update may fail and your device may experience unknown issues.
- Back up your user data before the update.
- After an update, third-party apps that aren't compatible with the new system version may become unavailable. In some cases, it may take some time for a compatible app version to be released.
- During the update, do not power off or restart your device, remove the memory card, or insert a memory card.

- 1 Go to **Settings > System & updates > Software update**, and touch **Check for updates**.
- 2 When an update is available, you can either manually download and install the update package, or update your device automatically overnight.

- Download and install the update package: Go to **New version > Download and install**. To avoid data usage, connect your device to a Wi-Fi network when downloading the update package.
Your device will automatically restart once the update is complete.
- Update overnight: Touch  > **Device settings**, and enable **Auto-download over Wi-Fi** and **Update overnight**.
Your device will automatically update and restart between 02:00 – 04:00.
To ensure a successful overnight update, make sure that your device is powered on, the screen is locked, there are no alarms set for this period of time, and the battery level remains higher than 35%. Connect your device to a charger if necessary.

To disable automatic updates, touch  on the **Device settings** screen, then disable **Auto-download over Wi-Fi**.

About Tablet

Legal Notice

Copyright © Honor Device Co., Ltd. 2025. All rights reserved.

This guide is for your reference only. The actual product, including but not limited to the colour, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Model: CGA-W00

MagicOS 9.0_01