

Hub Core, Hub Pro

ClickShare



User guide

Barco NV
Beneluxpark 21, 8500 Kortrijk, Belgium
www.barco.com

Manufacturer: Barco NV
President Kennedypark 35, 8500 Kortrijk, Belgium

Copyright ©

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of Barco.

Trademarks

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.

Changes

Barco provides this manual 'as is' without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

The latest edition of Barco manuals can be downloaded from the Barco website <https://www.barco.com>.

Patent protection

This product is covered by patents and/or pending patent applications. For more info: <https://www.barco.com/en/about-barco/legal/patents>.

Product Security Incident Response

As a global technology leader, Barco is committed to deliver secure solutions and services to our customers, while protecting Barco's intellectual property. When product security concerns are received, the product security incident response process will be triggered immediately. To address specific security concerns or to report security issues with Barco products, please inform us via contact details mentioned on <https://www.barco.com/psirt>. To protect our customers, Barco does not publicly disclose or confirm security vulnerabilities until Barco has conducted an analysis of the product and issued fixes and/or mitigations.

Disclaimer on screenshot images used in this manual

The screenshot images used in this manual are example illustrations and should be treated as such. While the name of the product displayed in the images may be different from the product model currently used, the menu lay-out and functionality is identical.

Software License Agreement

Carefully read the following terms and conditions before using this software. Any use of this software indicates the acceptance of this license agreement and warranty.

Terms and Conditions:

1. No redistribution of the software is allowed.
2. Reverse-Engineering. This software product may not be reverse engineered, decompiled, disassembled or altered.

Disclaimer of Warranty:

This software and the accompanying files are sold "as is" and without warranties as to performance or merchantability or any other warranties whether expressed or implied. In no event shall Barco be liable for damage of any kind, loss of data, loss of profits, business interruption or other pecuniary loss arising directly or indirectly. Any liability of the seller will be exclusively limited to replacement of the product or refund of purchase price.

Table of contents

1	Introduction	7
1.1	The Base Unit	9
1.2	The ClickShare Button	10
1.3	The Control Panel	11
2	Preparing the hardware	13
2.1	Waking the Base Unit	14
2.2	Pairing the Button(s)	14
3	ClickShare software	17
3.1	ClickShare settings	18
3.1.1	Introduction	18
3.1.2	Accessibility	20
3.1.2.1	High contrast mode	20
3.1.2.2	Color correction	21
3.1.2.3	Text size	22
3.1.2.4	Narrator	22
3.1.3	System	23
3.1.3.1	ClickShare Control Panel settings	23
3.1.3.2	Restart	24
3.1.4	About	25
3.1.4.1	Viewing info	25
3.1.4.2	Additional info	25
3.1.5	Admin login	25
A	Specifications	27
A.1	Base Unit specifications	28
A.2	Button specifications	30
A.3	Control Panel specifications	30
B	Regulatory	33
B.1	Product and contact references	34
B.2	International safety standards	34
B.3	Product compliance EU	34
B.4	Product compliance UK	36
B.5	Product compliance Turkey	36
B.6	Product compliance US	37

B.7	Product compliance Canada	38
B.8	Product compliance Brazil	39
B.9	Product compliance Mexico	40
B.10	Product compliance Taiwan	40
B.11	Product compliance China	42
B.12	Product compliance India	44
B.13	Product privacy statement	44
B.14	Trademark notice	45
C	License information	47
C.1	End user license	48
C.2	ClickShare product end user license	52
C.3	Open source software	53
	Index	55

Introduction

1

1.1	The Base Unit	9
1.2	The ClickShare Button	10
1.3	The Control Panel.....	11

About this document

This user guide provides an overview of a ClickShare system with the Hub Core, Hub Pro at its core. For installation instructions of the ClickShare system, see the [Hub Core, Hub Pro](#) installation manual.

About introduction

Details about the ClickShare hardware will be explored in this chapter. Common terminology required to follow the rest of the manual is also explained.

Clarification of the term “Base Unit” used in this document

When referring in this document to the term “Base Unit” means that the content is applicable for following Barco products:

- Hub Core
- Hub Pro

Clarification of the term “Button” used in this document

When referring in this document to the term “Button” means that the content is applicable for following Barco products:

- 5th gen Button

Clarification of the term “Control Panel” used in this document

When referring in this document to the term “Control Panel” means that the content is applicable for following Barco products:

- ClickShare Control Panel

Model certification names

- **Base Unit:** C-100RS, C-300RS
- **Button:** CSBTN005
- **Control Panel:** CSTUC001

1.1 The Base Unit

About the Base Unit

The Hub Core, Hub Pro is the Base Unit of a ClickShare installation. It is responsible for enabling the ClickShare functionalities and managing or controlling the connected devices.



The Hub Core, Hub Pro is only compatible with 5th gen Buttons. For more information about the Button, see “The ClickShare Button”, page 10.

Countries and peripherals

The Base Unit and peripherals are regionalized. An up to date list of the certified countries and applicable peripherals can be found on the product support page. For more information, see <https://www.barco.com/en/support>.



The Base Unit is region locked and cannot be used outside its original region.

Components

Front view:

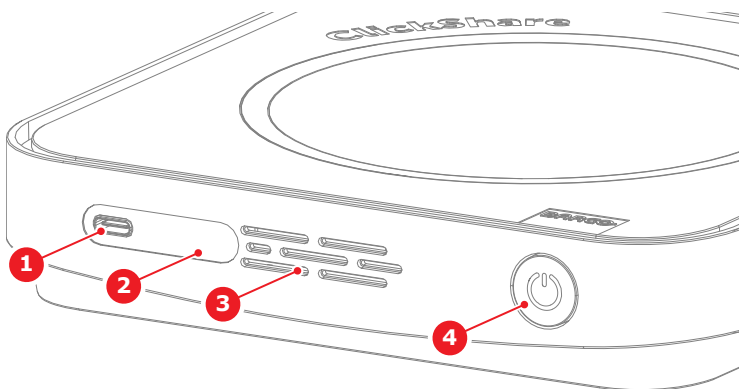


Image 1–1

- 1 Front USB-C™ port
- 2 Device name label
- 3 Ultrasonic speaker
- 4 Standby button

Hub Core back view:

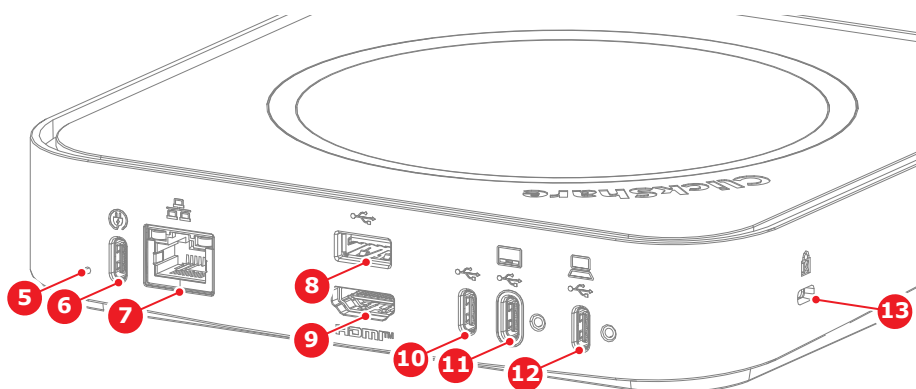


Image 1–2

- 5 Reset button
- 6 Power USB-C™ port
- 7 LAN port
- 8 General purpose USB-A port
- 9 HDMI™ out port
- 10 General purpose USB-C™ port
- 11 Control Panel USB-C™ port
- 12 Wired video input USB-C™ port
- 13 Kensington™ lock

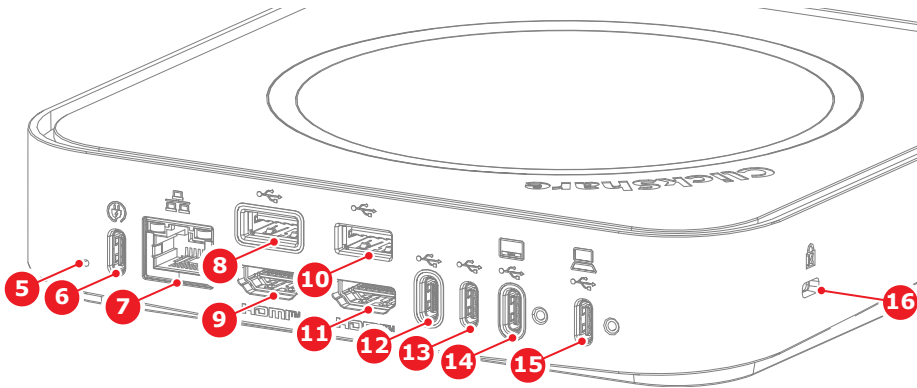
Hub Pro back view:

Image 1–3

- | | |
|--|---|
| 5 Reset button | 11 HDMI™ out 1 port |
| 6 Power USB-C™ port | 12 General purpose USB-C™ 2 port |
| 7 LAN port | 13 General purpose USB-C™ 1 port |
| 8 General purpose USB-A 2 port | 14 Control Panel USB-C™ port |
| 9 HDMI™ out 2 port | 15 Wired sharing USB-C™ port |
| 10 General purpose USB-A 1 port | 16 Kensington™ lock |

LED ring

There is an LED ring around the standby button of the Base Unit. The color and animation of the LED ring shows the current state of the Base Unit and its peripherals. For more information on the possible states, see the following table:

LED status	Meaning
Steady white	Device powered on
Blinking white	Device starting Device updating
Breathing white	ECO mode active
Steady red	Sharing
Blinking red	Pairing failed Update failed

1.2 The ClickShare Button**About the ClickShare Button**

The ClickShare Button is a 'USB' powered wireless device. The Button consists out of two buttons. One which manages sharing content and the other opens the ClickShare App that is embedded into the Button or installed on the device. The embedded ClickShare App is called the "Button App".

5th gen Button overview

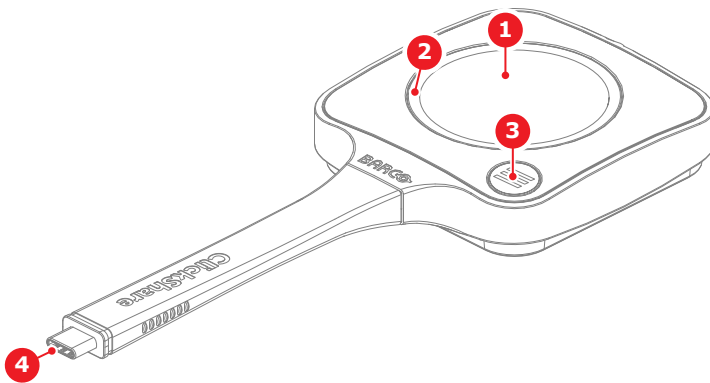


Image 1–4

- 1 Share button
- 2 LED ring
- 3 ClickShare App button with LED
- 4 USB-C™ connector

Button functionality

There are two physical buttons on the Button. For more information on their functionality, see the following table:

Action	Function
Press on the share button	Start sharing
Press on the ClickShare App button	Pops up or minimizes the ClickShare App

Button LEDs

There is an LED ring around the share button and an LED in the ClickShare App button. The color and animation of the LEDs show the current state of the Button. For more information on the possible states, see the following tables:

LED share ring state	Meaning
White fill	Setting up the connection
Steady white	Connected and ready to be used
Fast spinning white	Near connection timeout
Steady red	Sharing
Blinking red	Error
Steady green	Button pairing successful

LED ClickShare App state	Meaning
Steady white	ClickShare App ready to use or in use
Off	ClickShare App disabled or not allowed

1.3 The Control Panel

About the Control Panel

The optional Control Panel allows the user to interact with the ClickShare unit from one central touch enabled display. If no Control Panel is available, then the interactions must be done on a touch enabled display connected to the Base Unit or a mouse connected to the Base Unit or the display.

Control Panel overview

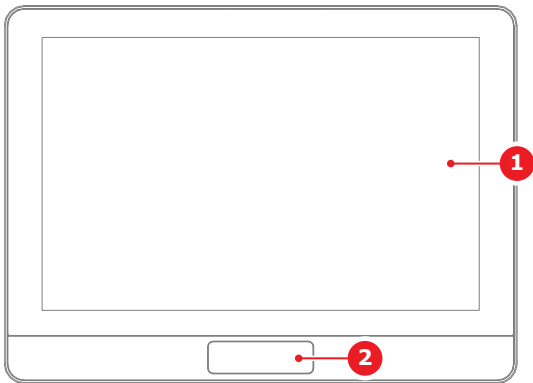


Image 1-5

- 1 Touch panel
- 2 Motion sensor

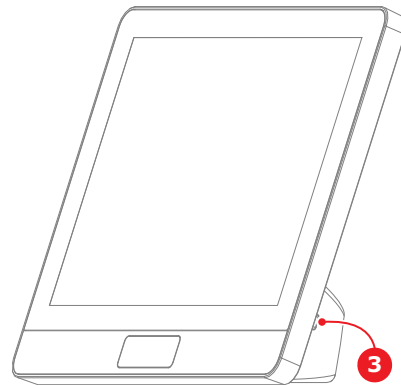


Image 1-6

- 3 Kensington™ lock

Preparing the hardware

2

2.1	Waking the Base Unit.....	14
2.2	Pairing the Button(s).....	14

About preparing the hardware

Some hardware preparations are required before the ClickShare system can be used. Depending on the setup of the meeting room and the ClickShare configuration, the amount of preparations can vary. See the following chapters for the possible preparations.

2.1 Waking the Base Unit

About waking

Functionalities of the Base Unit are shut down when the device is in sleep mode. The Base Unit has multiple possible ways of waking up automatically. These depend on the configuration of the Base Unit and/or any connected peripherals. The following procedure explains how to manually wake the Base Unit.

How to wake

1. Press the standby button (reference 1) at the front of the Base Unit.

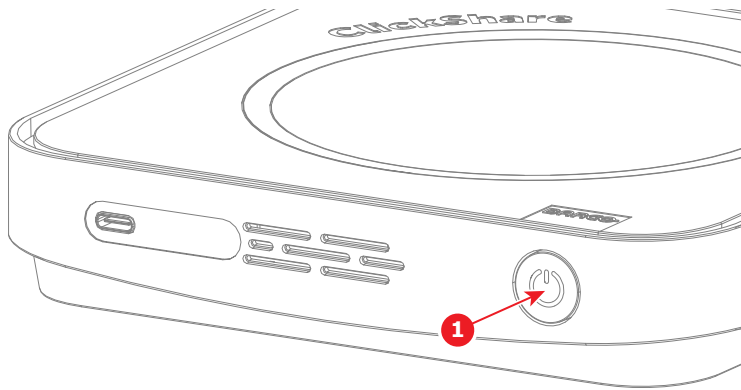


Image 2-1

2. Wait until the standby button LED turns solid white.
The Base Unit and the connected Control Panel wake up.

2.2 Pairing the Button(s)

About the pairing

Button(s) must be paired with a Base Unit before they will work. An unpaired Button will not be able to share content nor connect to ClickShare.



It is not possible to pair a Button with multiple Base Units.
Pairing a Button to a different Base Unit will overwrite the link to the previous Base Unit.

Prerequisites

The Base Unit must be awake before a Button can be paired. For more information, see [“Waking the Base Unit”, page 14](#).

How to pair

1. Connect the Button to any free ‘USB-C’ port (reference 1 to 4) of the Base Unit.



Note: The Hub Core, Hub Pro is only compatible with 5th gen Buttons. For more information about the Button, see [“The ClickShare Button”, page 10](#).



Tip: The front ‘USB-C’ port (reference 1) is recommended.

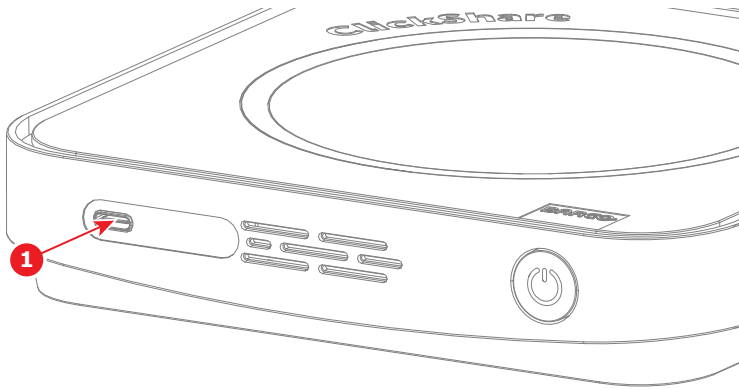


Image 2-2

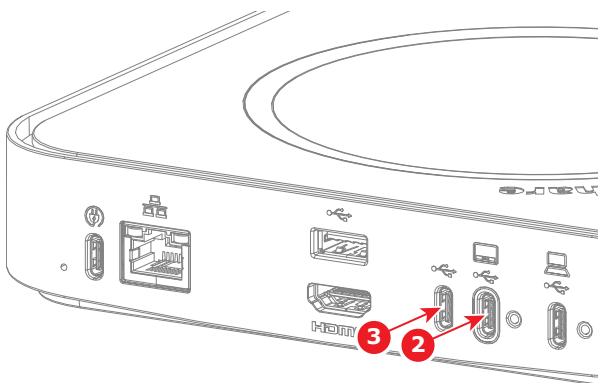


Image 2-3 For Hub Core

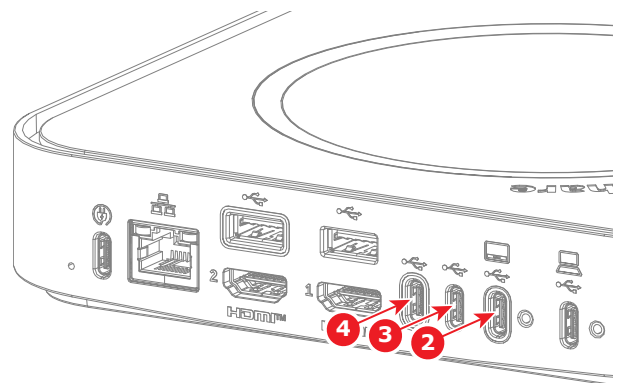


Image 2-4 For Hub Pro

2. Wait until the LED ring of the Button turns solid green.
 3. Remove the Button from the Base Unit.
- The Button is ready to be used.

ClickShare software

3

3.1	ClickShare settings	18
-----	---------------------------	----

About software

ClickShare uses various software to interact with or control the ClickShare system. The following chapters will explore the available software solutions.

3.1 ClickShare settings

About ClickShare settings

ClickShare settings affect the meeting room control user interface, the meeting room provider and the ClickShare system. Each menu will be explained in the following chapters.

3.1.1 Introduction

Introduction of the user interface

The user interface is built up out of two distinct sections:

- The meeting room provider user interface
- The ClickShare settings app

Microsoft Teams user interface overview

The Microsoft Teams user interface is the home screen for the ClickShare system. How the interface looks depends on the configuration of the meeting hardware. This interface is intended to be used by the meeting attendees or host to control the meeting. For more information about the functionality of the user interface, see the documentation of Microsoft Teams.

The following screenshots show some examples of how the Microsoft Teams user interface looks:

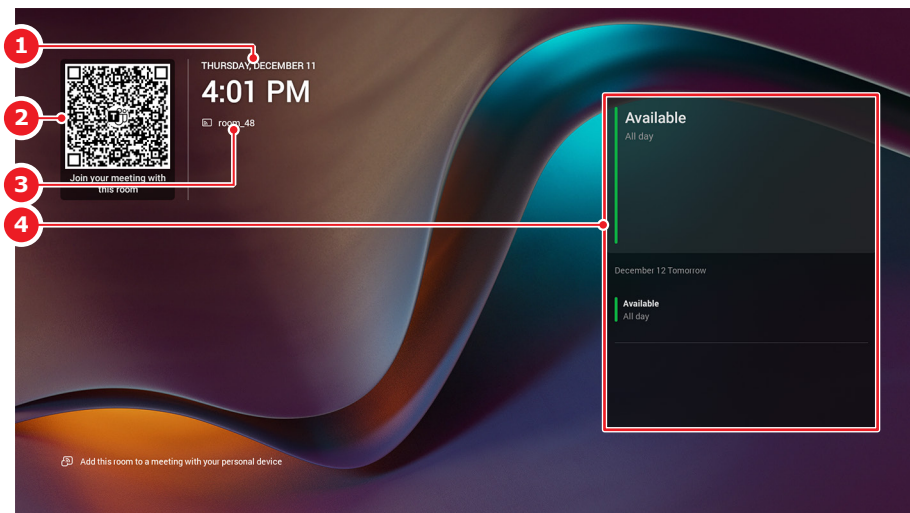


Image 3–1 Main display home screen for Microsoft Teams room

- 1 ClickShare system time
- 2 Meeting room QR code
- 3 Meeting room name
- 4 Room availability calendar

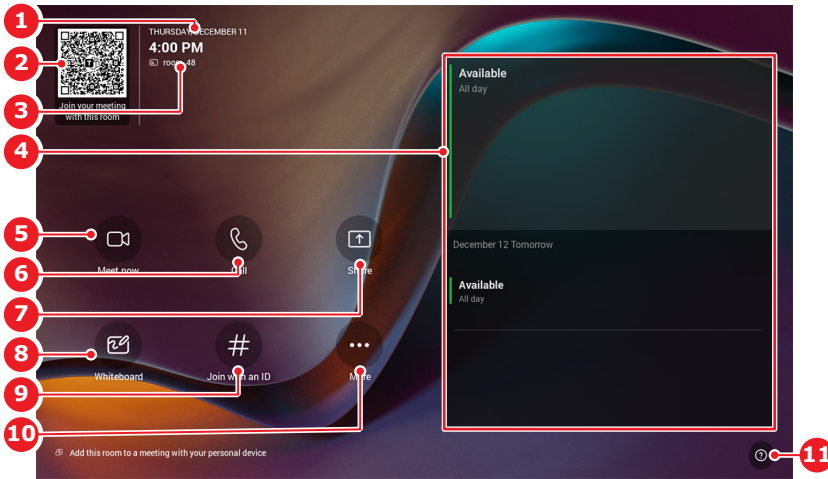


Image 3–2 Control Panel home screen for Microsoft Teams room

- | | |
|------------------------------|---|
| 1 ClickShare system time | 7 Share button |
| 2 Meeting room QR code | 8 Start whiteboard |
| 3 Meeting room name | 9 Add meeting room to existing meeting ID |
| 4 Room availability calendar | 10 More options |
| 5 Start video call | 11 Microsoft Teams feedback button |
| 6 Start audio call | |

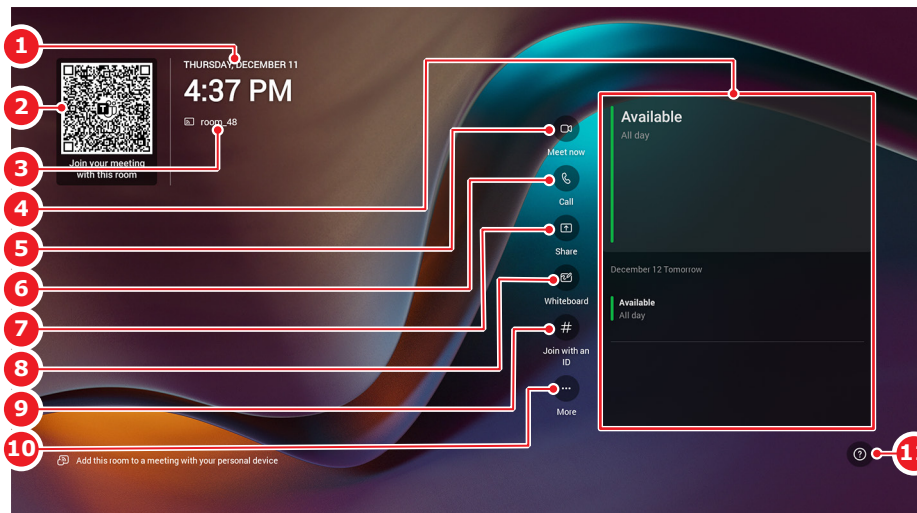


Image 3–3 Main display home screen without Control Panel for Microsoft Teams room

- | | |
|------------------------------|---|
| 1 ClickShare system time | 7 Share button |
| 2 Meeting room QR code | 8 Start whiteboard |
| 3 Meeting room name | 9 Add meeting room to existing meeting ID |
| 4 Room availability calendar | 10 More options |
| 5 Start video call | 11 Microsoft Teams feedback button |
| 6 Start audio call | |

ClickShare settings app overview

The ClickShare settings app controls the settings of the entire ClickShare system, any connected peripherals and the meeting room provider. The main purpose of the ClickShare settings app is to allow installers or IT professionals to configure and manage the meeting room. Some user settings are also available.

The user interface is built up out of the following sections:

All ClickShare settings are under the *More* section in the Microsoft Teams user interface.

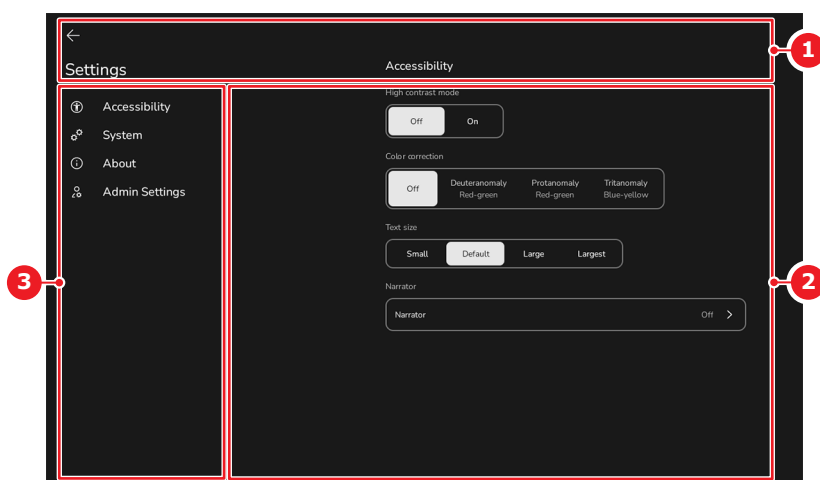


Image 3–4

- 1 Header
- 2 Work area
- 3 Navigation bar

ClickShare settings accounts

The ClickShare settings app has two built in accounts:

- User account (**default logged in**)¹
- Admin account²

Different settings and options will be available depending on the account that is logged in.

Admin menu vs user menu

Settings appear in different categories depending on the account that is currently logged in. These settings have the same functionality regardless of category. See the following table for an overview of settings that are in different locations.

Setting	User account category ¹	Admin account category ²
Control Panel settings	System	Peripherals
Restart	System	Troubleshooting and diagnosis

3.1.2 Accessibility

About accessibility

Accessibility manages the look of the settings app. Ensuring everyone can clearly see or hear the information needed to hold the meeting. How to adjust the accessibility will be explained in the following chapters.

3.1.2.1 High contrast mode

Location & availability

- **Menu:** *More > Settings > Device settings > Accessibility*
- **Access level:** all

About high contrast mode

Menu items across the ClickShare settings app are white letters on black backgrounds or black letters on white backgrounds. This can be difficult to read depending on the room situation and the user. High contrast mode will increase the clarity between what is the background and what is the actual text. Making it easier to find and read the text.

1. Described in the user guide.
 2. Described in the installation manual.

How to toggle

1. Tap the desired mode after *High contrast mode* (reference 1).
 - ▶ *On*
 - ▶ *Off (default)*

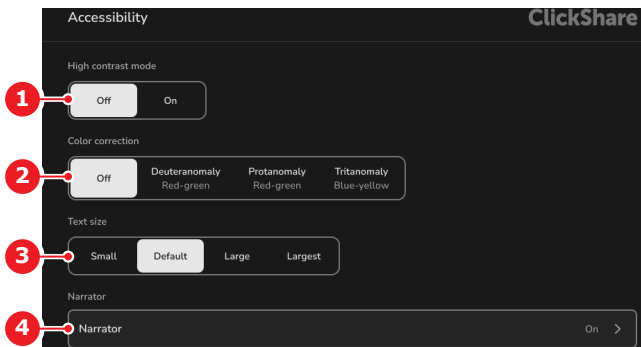


Image 3–5

- 1 High contrast status
- 2 Color correction options
- 3 Text size options
- 4 Narrator menu

The selected option has a white background and the text across the entire ClickShare app is changed.

3.1.2.2 Color correction

Location & availability

- **Menu:** *More > Settings > Device settings > Accessibility*
- **Access level:** all

About color correction

Color correction will adjust how colors are displayed on the connected screen(s). This color correction will make certain images more visible to colorblind users or displays that have a bad color representation.

How to adjust

1. Tap the desired color correction after *Color correction* (reference 2).
 - ▶ For **no color** correction, tap *Off. (default)*
 - ▶ For a **green-shift** correction, tap *Deuteranomaly*.
 - ▶ For a **red-dim** correction, tap *Protanomaly*.
 - ▶ For a **blue-shift** correction, tap *Tritanomaly*.

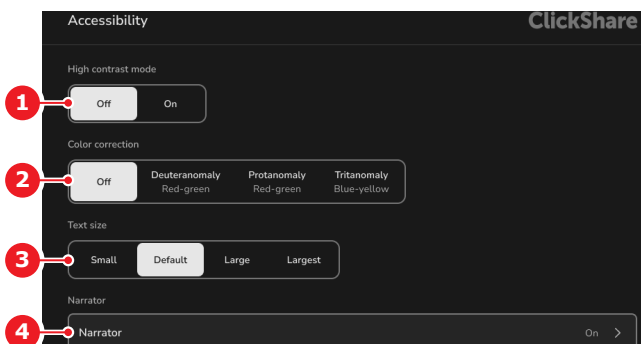


Image 3–6

- 1 High contrast status
- 2 Color correction options
- 3 Text size options
- 4 Narrator menu

The selected option has a white background and the colors across the entire ClickShare system are adjusted.

3.1.2.3 Text size

Location & availability

- **Menu:** *More > Settings > Device settings > Accessibility*
- **Access level:** all

About text size

Text size adjusts the size of the text, the user interface elements, menus and the size of the icons.

How to adjust

1. Tap the desired size after *Text size* (reference 3).
 - ▶ *Small*
 - ▶ *Default (default)*
 - ▶ *Large*
 - ▶ *Largest*

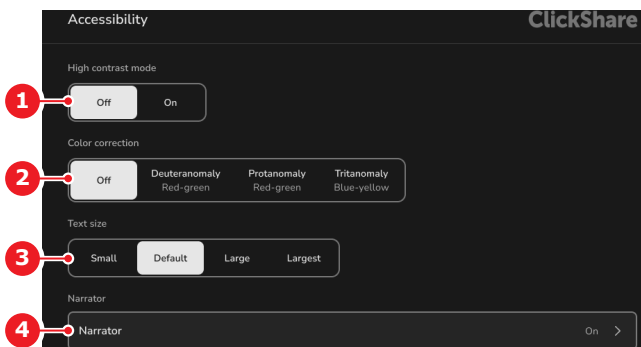


Image 3–7

- 1 High contrast status
- 2 Color correction options
- 3 Text size options
- 4 Narrator menu

The selected option has a white background and the user interface across the entire ClickShare app is resized.

3.1.2.4 Narrator

Location & availability

- **Menu:** *More > Settings > Device settings > Accessibility > Narrator*
- **Access level:** all

About narrator

A narrator will read any text or context clues in the user interface. This helps navigate and explain where the user is without the need to clearly see the screen.

How to configure

1. Tap the *On* mode after *Narrator* (reference 1).



Note: The narrator will start narrating every part of the user interface the moment the *On* is tapped.



Tip: The first tap makes the narrator read what was pressed. The second tap confirms the action.

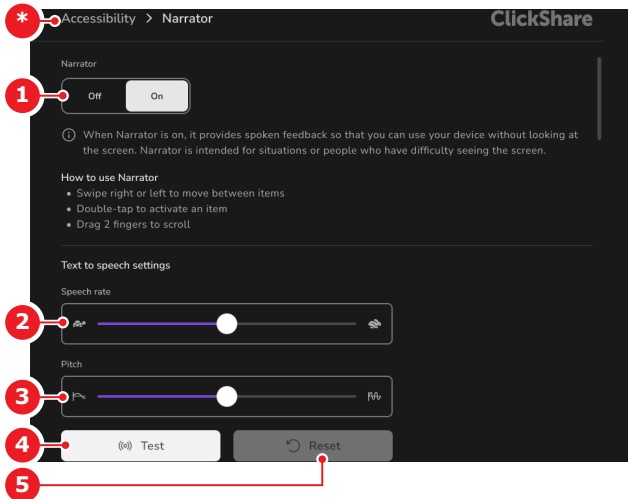


Image 3–8

- | | |
|--|---|
| <ul style="list-style-type: none"> 1 Narrator status 2 Narrator speaking speed 3 Narrator voice pitch | <ul style="list-style-type: none"> 4 Audio test 5 Reset button * Return button |
|--|---|

The narrator tutorial is shown.

2. Follow or skip the narrator tutorial.

The *On* option has a white background and the narrator is enabled.

3. Drag the dot across the slider after *Speech rate* (reference 2, [Image 3–8](#)) to change the speed of the narration. (**optional**)
4. Drag the dot across the slider after *Pitch* (reference 3, [Image 3–8](#)) to change the pitch of the narration. (**optional**)
5. Tap *Test* (reference 4, [Image 3–8](#)) to hear the new settings of the voice. (**optional**)
6. Are the modifications an improvement over the default voice? (**optional**)
 - ▶ If **yes**, go to next step.
 - ▶ If **no**, tap *Reset* (reference 5, [Image 3–8](#)) and go to step 3.
7. Tap on any aspect of the user interface.

The pressed section receives a green outline and the narrator reads the text.
8. Use gestures to decide what must happen to the selected aspect.
 - ▶ **Double tap on the element** to select or activate the selected option.
 - ▶ **Swipe right** to move to the next section.
 - ▶ **Swipe left** to move to the previous section.

3.1.3 System

About system

System holds settings that affect the entire ClickShare and room system. How to adjust the system settings will be explained in the following chapters.

3.1.3.1 ClickShare Control Panel settings

Location & availability

- **Menu:** *More > Settings > System > ClickShare Control Panel*
- **Access level:** all

About Control Panel settings

The ClickShare Control Panel has additional settings that only affect the device.

How to adjust

1. Select the installation orientation of the Control Panel after *Orientation* (reference 1).
 - ▶ Select *Upright mode* if the Control Panel is standing.
 - ▶ Select *Flat mode* if the Control Panel is laying down.



Note: The text of the return button (reference *) will change depending on which account is logged in. For the admin account it will be *Peripherals* and for the user account it will be *System*.

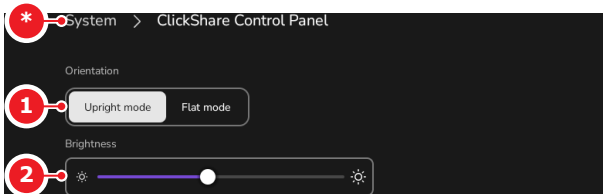


Image 3–9 Example from the user menu

- 1 Orientation options
- 2 Brightness slider
- * Return button

The user interface rotates based on the selected orientation.

2. Drag the slider after *Brightness* (reference 2, [Image 3–9](#)) to adjust the brightness.

The brightness of the screen changes.

3.1.3.2 Restart

Location & availability

- **Menu:** *More > Settings > System*
- **Access level:** all

About restart

Restarting powers down and starts up each device connected to the ClickShare system. This allows the caches of the devices to be cleared and can help improve the performance of the system. Barco recommends to regularly restart the entire ClickShare system.

How to restart

1. Tap *Restart system* (reference 2).

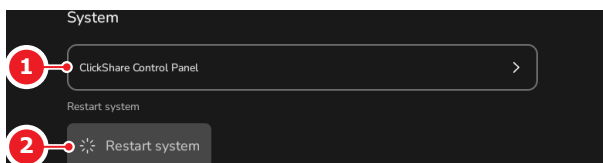


Image 3–10

- 1 ClickShare Control Panel menu
- 2 Restart button

A confirmation pop-up is shown.

2. Can the ClickShare system be inaccessible for a couple of minutes?
 - ▶ If **yes**, tap *Restart* (reference 4). The ClickShare system and all connected devices will restart.
 - ▶ If **no**, tap *Cancel* (reference 3) or outside the pop-up window. Repeat the procedure at another time.

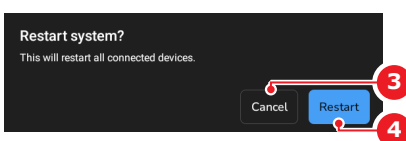


Image 3–11

- 3 Cancel button
- 4 Confirmation button

3.1.4 About

About this chapter

An overview of the hardware is given in this menu. How to view more details about the connected hardware will be explained in the following chapters.

3.1.4.1 Viewing info

Overview

The overview is separated in sections that can have the following information:

- Base Unit information
- Software information
- Peripheral information

Some of these entries have additional sub menus. For more information, see the following chapter.

3.1.4.2 Additional info

Location & availability

- **Menu:** *More > Settings > Device settings > About*
- **Access level:** all

About additional info

Some entries have additional info that is not shown in the *About* overview. This info can contain more details about the device or link to a web page with more information.

How to check

1. Tap on the desired entry in the overview.
If additional info is available, then a new window is shown.

3.1.5 Admin login

Location & availability

- **Menu:** *More > Settings > Device settings > Admin Settings*
- **Access level:** user

About login

By default, the settings app will open as a user account. This user account prompts an admin login screen when tapping on the *Admin Settings* menu. When the admin account is active, *Admin Settings* will show settings and options related to the admin account.



The admin account will automatically log out after 5 minutes of inactivity.

About admin account

Most settings and options of the ClickShare system and the room system are locked behind a password protected admin account. This account is configured during the initial startup of the Base Unit.


Admin settings

Admin settings and options have impact on the entire ClickShare system and room system. These settings are intended for IT professionals or staff responsible for the meeting room. Meeting room users do not need to

login to the admin account. For more information on the admin menus, see the [Hub Core, Hub Pro](#) installation manual.

How to login

1. Enter the name of the account in the input field labelled *Admin name* (reference 1).

 *Tip:* The default account name is 'admin'.

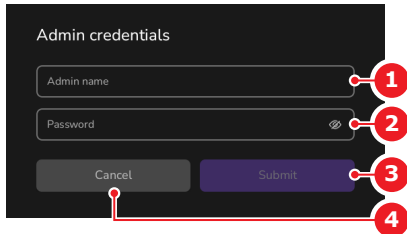




Image 3–12

- 1 Account name
- 2 Account password
- 3 Confirmation button
- 4 Return button

2. Enter the password of the account in the input field labelled *Password* (reference 2, [Image 3–12](#)).

 *Tip:* Tap the eye icon () in the input field to see the entered password.

3. Tap *Submit* (reference 3, [Image 3–12](#)).

If the credentials are correct, the admin account is logged in and the user account is logged out.

Specifications

A

A.1	Base Unit specifications	28
A.2	Button specifications	30
A.3	Control Panel specifications	30

A.1 Base Unit specifications

Hub Core specifications:

Operating system	Windows 10 or higher macOS 14 (Sonoma) and 15 (Sequoia)
System requirements	Minimum: Intel Core i3 or AMD Ryzen 5, 8GB RAM, Windows 10 20HS; Intel Core i3 or Apple Silicon M1, 8GB RAM, macOS 11 Big Sur Recommended: Intel Core i5/Ultra 5 or AMD Ryzen 7, 8GB RAM, Windows 11 latest build; Apple Silicon M3, 8GB RAM, macOS latest build
Video outputs	HDMI: UW5K WUHD (5120*2160) @30Hz HDMI 2.0 eDP (Control Panel): HD (1280*800) @60Hz DP 1.4
Video inputs	4K UHD (3840*2160) @30Hz HDMI 2.0
Audio output	USB-A 2.0/3.0 USB-C 2.0/3.0 HDMI 2.0
ClickShare Buttons	1 * ClickShare Button 5th Generation
ClickShare App	Desktop
Maximum sources simultaneously on screen	1
Noise Level	Maximum 25 dBA @ <30°C Maximum 30 dBA @ >30°C
Wireless transmission protocol	IEEE 802.11 a/b/g/n/ac/ax/be and IEEE 802.15.1 BT 5.3
Reach	Max. 30m (100ft) between ClickShare Button and ClickShare Base Unit
Frequency band	2.4GHZ, 5GHz and 6GHz DBS/HBS (DFS channels supported in select number of countries)
Connections	Back: 1x Ethernet LAN 1Gbit 1x USB-C Power delivery 3.1 EPR (for power adapter) 1x HDMI 2.0 output 1x USB-A 2.0/3.0 1x USB-C 2.0/3.0 1x USB-C 2.0/3.0 Device + USB-C DisplayPort™ output 1x USB-C 2.0 + USB-C DisplayPort™ output Front: 1x USB-C 2.0/3.0
Temperature range	Operating: 0°C + 40°C (+32°F to +104°F) Max 35°C (95°F) at 3000m Storage: -20°C to +60°C (-4°F to + 140°F)
Humidity	Storage: 0 to 90% relative humidity, non-condensing Operation: 0 to 85% relative humidity, non-condensing
Anti-theft system	Kensington lock
Certifications	FCC/CE
Network connection	LAN
Management and reporting	Yes, XMS Cloud
Warranty	3 years standard
Dimensions (HxWxD)	37 * 180 * 180 (mm)
Power consumption	Operational: 140W (max) Standby: <7W (ECO mode), <0.5W (Deep Sleep mode)
Power supply	External USB-C charger 100W (PD3.0 SPR), 180W (PD3.1 EPR)
Weight	720gr
Box content	ClickShare Hub Core Base Unit, 1 ClickShare Hub Button 5th Gen, Mounting disc, Safety manual, Quick setup guide

Hub Pro specifications:

Operating system	Windows 10 or higher macOS 14 (Sonoma) and 15 (Sequoia)
System requirements	Minimum: Intel Core i3 or AMD Ryzen 5, 8GB RAM, Windows 10 20H2; Intel Core i3 or Apple Silicon M1, 8GB RAM, macOS 11 Big Sur Recommended: Intel Core i5/Ultra 5 or AMD Ryzen 7, 8GB RAM, Windows 11 latest build; Apple Silicon M3, 8GB RAM, macOS latest build
Video outputs	HDMI-1: UW5K WUHD (5120*2160) @30Hz HDMI 2.0 HDMI-2: 4K UHD (3840*2160) @30Hz HDMI 2.0 eDP (Control Panel): HD (1280*800) @60Hz DP 1.4
Video inputs	4K UHD (3840*2160) @30Hz HDMI 2.0
Audio output	USB-A 2.0/3.0 USB-C 2.0/3.0 HDMI 2.0
ClickShare Buttons	2 * ClickShare Button 5th Generation
ClickShare App	Desktop
Maximum sources simultaneously on screen	1
Noise Level	Maximum 25 dBA @ <30°C Maximum 30 dBA @ >30°C
Wireless transmission protocol	IEEE 802.11 a/b/g/n/ac/ax/be and IEEE 802.15.1 BT 5.3
Reach	Max. 30m (100ft) between ClickShare Button and ClickShare Base Unit
Frequency band	2.4GHZ, 5GHz and 6GHz DBS/HBS (DFS channels supported in select number of countries)
Connections	Back: 1x Ethernet LAN 1Gbit 1x USB-C Power delivery 3.1 EPR (for power adapter) 2x HDMI 2.0 output 2x USB-C 2.0/3.0 1x USB-A 2.0/3.0 1x USB-C 2.0/3.0 Device + USB-C DisplayPort™ output 1x USB-C 2.0 + USB-C DisplayPort™ output Front: 1x USB-C 2.0/3.0
Temperature range	Operating: 0°C + 40°C (+32°F to +104°F) Max 35°C (95°F) at 3000m Storage: -20°C to +60°C (-4°F to + 140°F)
Humidity	Storage: 0 to 90% relative humidity, non-condensing Operation: 0 to 85% relative humidity, non-condensing
Anti-theft system	Kensington lock
Certifications	FCC/CE
Network connection	LAN
Management and reporting	Yes, XMS Cloud
Warranty	3 years standard
Dimensions (HxWxD)	37 * 180 * 180 (mm)
Power consumption	Operational: 160W (max) Standby: <7W (ECO mode), <0.5W (Deep Sleep mode)
Power supply	External USB-C charger 100W (PD3.0 SPR), 180W (PD3.1 EPR)
Weight	720gr
Box content	ClickShare Hub Pro Base Unit, 2 ClickShare Hub Button 5th Gen, Mounting disc, Safety manual, Quick setup guide

A.2 Button specifications

5th gen Button specifications

Video outputs	Up to 4K (3840x2160) 30fps
Connectors	USB Type-C 3.1 Gen1, supports USB-C DisplayPort™ Mode
Authentication protocol	WPA3-SAE in stand alone mode
Wireless transmission protocol	IEEE 802.11 a/b/g/n/ac/ax
Reach	Max. 30m (100ft) between ClickShare Button and ClickShare Base Unit
Frequency band	2.4GHz, 5GHz and 6GHz
Temperature range	Operating: 0°C + 40°C (+32°F to +104°F) Storage: -20°C to +60°C (-4°F to + 140°F)
Humidity	Storage: 0 to 95% relative humidity, non-condensing Operation: 0 to 85% relative humidity, non-condensing
Dimensions (HxWxD)	16 x 63 x 161.3 (mm)
Power consumption	Powered over USB 5V DC 600mA Typical 900mA Maximum
Weight	88gr

A.3 Control Panel specifications

Control Panel specifications

Touchscreen	10.1-inch projected capacitive touchscreen with anti-fingerprint and anti-glare coatings, supporting up to 4 touch points for enhanced visibility and durability
Resolution	1280*800 @60Hz
Brightness	300 nits
Contrast Ratio	1000:1
Viewing angle	80° (Up/Down/Left/Right)
Human detection sensor	Automatically detects in-room human movement within a 2-meter range and 90° field of view to wake the system.
Connections	USB Type-C 2.0, DisplayPort Alt Mode, PD3.0 Recommend using the included ClickShare 10M USB-C AOC cable for optimal performance
Temperature range	Operating: 0°C + 40°C (+32°F to +104°F) Storage: -20°C to +60°C (-4°F to + 140°F)
Humidity	Storage: 0 to 90% relative humidity, non-condensing Operation: 0 to 85% relative humidity, non-condensing
Anti-theft system	Kensington lock
Dimensions (HxWxD)	254.5 x 187.9 x 76.9 (mm)
Power consumption	Powered over USB from connected Base Unit Operational: 7.3W (max) Standby: <0.5W

Weight	820gr
Box content	ClickShare Control Panel, ClickShare 10M 20W USB-C AOC cable, L-Shape mounting plate, Round base, Screw pack, Safety manual, Quick setup guide
Cable Length / Diameter	10M / 6mm
Interface	USB Type-C 3.2 Gen1, DP 1.4
Power Delivery	20W
Bend Radius	60mm/30mm (Fixed/Temporarily) While a minimum bend of 30mm is acceptable during handling or routing, it must not be maintained as a permanent fixture.
Temperature range	Operating: -10°C + 60°C (+14°F to +140°F) Storage: -20°C to +70°C (-4°F to + 158°F)
Humidity	Storage/Operation: 0 to 85% relative humidity, non-condensing
Flame rated	VW-1
Box content	ClickShare 10M 20W USB-C AOC cable, USB-C cable lock kit

Regulatory

B

B.1	Product and contact references	34
B.2	International safety standards	34
B.3	Product compliance EU	34
B.4	Product compliance UK	36
B.5	Product compliance Turkey	36
B.6	Product compliance US	37
B.7	Product compliance Canada	38
B.8	Product compliance Brazil	39
B.9	Product compliance Mexico	40
B.10	Product compliance Taiwan	40
B.11	Product compliance China	42
B.12	Product compliance India	44
B.13	Product privacy statement	44
B.14	Trademark notice	45

B.1 Product and contact references

Made in information

The made in country is indicated on the product ID label on the product itself.

Production date

The month and year of production is indicated on the product ID label on the product itself.

Manufacturer address

Refer to the cover page of this manual for the manufacturer address.

Importers contact information

To find your local importer, contact Barco directly or one of Barco's regional offices via the contact information given on Barco's web site, <https://www.barco.com>.

B.2 International safety standards

Standards overview

This equipment is built in accordance with the requirements of the international safety standards (IEC62368-1, EN62368-1, UL62368-1, CAN/CSA C22.2 No.62368-1), which are the safety standards of information technology equipment including electrical business equipment. These safety standards impose important requirements on the use of safety critical components, materials and insulation, in order to protect the user or operator against risk of electric shock and energy hazard and having access to live parts. Safety standards also impose limits to the internal and external temperature rises, radiation levels, mechanical stability and strength, enclosure construction and protection against the risk of fire. Simulated single fault condition testing ensures the safety of the equipment to the user even when the equipment's normal operation fails.

B.3 Product compliance EU

EN55032-CISPR32 Class B ITE (Information Technology Equipment)

This is a class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

If this equipment does cause interference to radio or television reception, the user may try to correct the interference by one or more of the following measures :

- Re-orientation of the receiving antenna for the radio or television.
- Relocate the equipment with respect to the receiver.
- Plug the equipment into a different outlet so that the equipment and receiver are on different branch circuits.
- Fasten cables connectors to the equipment by mounting screws.

European Union



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

Disposal Information



Waste Electrical and Electronic Equipment (WEEE)

This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service. For details, please visit the Barco website at: <https://www.barco.com/about/sustainability/waste-of-electronic-equipment-customers>

Disposal of batteries in the product



This product contains batteries covered by the Directive 2006/66/EC which must be collected and disposed of separately from municipal waste.

If the battery contains more than the specified values of lead (Pb), mercury (Hg) or cadmium (Cd), these chemical symbols will appear below the crossed-out wheeled bin symbol.

By participating in separate collection of batteries, you will help to ensure proper disposal and to prevent potential negative effects on the environment and human health.

CE certification



AT	BE	BG	CH	CY	
CZ	DK	DE	EE	IE	
EL	ES	FI	FR	HR	
HU	IS	IT	LI	LV	
LT	LU	NL	NO	PL	
PT	RO	SE	SI	SK	
TR	UK				

C-100RS, C-300RS (R9861711EUB1; R9861710EUB2) are fit for use in all European Union countries, EFTA and Turkey.

The C-100RS, C-300RS is restricted to indoor use only when operating in the 5150 to 5350 MHz and frequency range.

Devices operating in Low Power Indoor (LPI) mode within the 5945 MHz to 6425 MHz (UNII-5) are restricted to indoor use only.

Hereby, Barco NV declares that the radio equipment type C-100RS, C-300RS is in compliance with the Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.barco.com/en/support/docs/TDE13557> (Base Unit)

For 2.4 GHz band:

- 2402 MHz - 2482 MHz
- Max EIRP: 18.28 dBm

For 5 GHz band:

- 5150 MHz - 5350 MHz
- 5470 MHz - 5725 MHz
- Max EIRP: 19.4 dBm

For 6 GHz band:

- 5945 MHz - 6425 MHz
- Max EIRP: 17.31 dBm

For Bluetooth®:

- 2402 MHz - 2480 MHz
- Max EIRP: 14.78 dBm

<https://www.barco.com/en/support/docs/TDE13558> (Button)

The ClickShare Button has been tested and meets the EU RF exposure standards. The maximum SAR value reported is 0.453 W/kg.

For 2.4 GHz band:

- 2402 MHz - 2482 MHz
- Max EIRP: 20 dBm

For 5 GHz band:


- 5150 MHz - 5350 MHz
- 5470 MHz - 5850 MHz
- Max EIRP: 23 dBm

For 6 GHz band:

- 5945 MHz - 6425 MHz
- Max EIRP: 23 dBm

B.4 Product compliance UK

UK Compliance

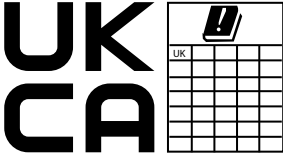

C-100RS, C-300RS (R9861711EUB1; R9861710EUB2) are fit for use in the UK.

The C-100RS, C-300RS is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

Hereby, Barco NV declares that the radio equipment type C-100RS, C-300RS is in compliance with the Radio Equipment Regulations 2017: Great Britain. The full text of the UK declaration of conformity is available at the following internet address:

<https://www.barco.com/en/support/docs/TDE13559> (Base Unit)

For 2.4 GHz band:

- 2402 MHz - 2482 MHz
- Max EIRP: 18.28 dBm

For 5 GHz band:

- 5150 MHz - 5350 MHz
- 5470 MHz - 5725 MHz
- Max EIRP: 19.4 dBm

For 6 GHz band:

- 5945 MHz - 6425 MHz
- Max EIRP: 17.31 dBm

For Bluetooth®:

- 2402 MHz - 2480 MHz
- Max EIRP: 14.78 dBm

<https://www.barco.com/en/support/docs/TDE13560> (Button)

For 2.4 GHz band:

- 2402 MHz - 2482 MHz
- Max EIRP: 20 dBm

For 5 GHz band:

- 5150 MHz - 5350 MHz
- 5470 MHz - 5850 MHz
- Max EIRP: 23 dBm

For 6 GHz band:

- 5945 MHz - 6425 MHz
- Max EIRP: 23 dBm

Authorised Representative: Barco UK Ltd

Address: Building 329, Doncastle Road
Bracknell RG12 8PE, Berkshire, United Kingdom

Importer:

- Midwich Ltd, Vince's Rd, Diss IP98 6BB
- Exertis UK Ltd, Chineham Park, Crockford Ln, Chineham, Basingstoke RG24 8EH

B.5 Product compliance Turkey

Turkey RoHS compliance



Türkiye Cumhuriyeti: AEEE Yönetmeliğine Uygundur.
[Republic of Turkey: In conformity with the WEEE Regulation]

B.6 Product compliance US

Federal Communication Commission Interference Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You may also find helpful the following booklet, prepared by the FCC: "How to Identify and Resolve Radio-TV Interference Problems.". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402.

Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commissions rules.

In order to maintain compliance with FCC regulations shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio & television reception.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement: This device is capable of operating in 802.11a mode. For 802.11a devices operating in the frequency range of 5.15 - 5.25 GHz, they are restricted for indoor operations to reduce any potential harmful interference for Mobile Satellite Services (MSS) in the US. WIFI Access Points that are capable of allowing your device to operate in 802.11a mode (5.15 - 5.25 GHz band) are optimized for indoor use only. If your WIFI network is capable of operating in this mode, please restrict your WIFI use indoors to not violate federal regulations to protect Mobile Satellite Services.

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Base Unit contains FCC ID: PPQ-WCBN816A

Button FCC ID (model CSBTN004): 2AAED-CSBTN005

ClickShare Button 2AAED-CSBTN005 has been tested and meets the FCC RF exposure guidelines. The maximum SAR value reported is 1.2 W/kg.

ClickShare Button 2AAED-CSBTN005 should be installed and operated with a minimum distance of 5 mm between the radiator and your body.

FCC responsible: Barco Inc., 3059 Premiere Parkway Suite 400, 30097 Duluth GA, United States, Tel: +1 678 475 8000

For country code selection usage (WLAN devices):

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

California, USA

The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit: <https://dtsc.ca.gov/perchlorate/>

B.7 Product compliance Canada

Canada, Industry Canada (IC) Notices

This device complies with Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radio Frequency (RF) Exposure Information

The radiated output power of the Barco Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Barco Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

Caution: Exposure to Radio Frequency Radiation.

1. To comply with the Canadian RF exposure compliance requirements, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
2. To comply with RSS 102 RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.

Base Unit contains FCC ID: 4491A-WCBN816A

Button IC (model CSBTN004): 21559-CSBTN005

ClickShare Button 21559-CSBTN005 has been tested and meets the IC RF exposure guidelines. The maximum SAR value reported is 1.2 W/kg.

ClickShare Button 21559-CSBTN005 should be installed and operated with a minimum distance of 5 mm between the radiator and your body.

IC Antenna statement

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter 4491A-WCBN816A has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Indoor use only warning

Operation in the band 5150 MHz - 5250 MHz, 5925 MHz - 6425 MHz, 6425 MHz - 6525 MHz, 6525 MHz - 6875 MHz and 6875 MHz - 7125 MHz are only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Certification information (SAR)

This device is also designed to meet the requirements for exposure to radio waves established by the Industry Canada.

The SAR limit adopted by Canada is 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported to the IC for this device type complies with this limit.

The highest SAR value reported to the IC for this device type when using in portable exposure conditions is 1.6 W/kg.

Canada, avis d'Industry Canada (IC)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Informations concernant l'exposition aux fréquences radio (RF)

La puissance de sortie émise par l'appareil de sans fil Barco est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Utilisez l'appareil de sans fil Barco de façon à minimiser les contacts humains lors du fonctionnement normal.

Avertissement: L'exposition aux rayonnements fréquences radio

1. Pour se conformer aux exigences de conformité RF canadienne l'exposition, cet appareil et son antenne ne doivent pas être co-localisés ou fonctionnant en conjonction avec une autre antenne ou transmetteur.
2. Pour se conformer aux exigences de conformité CNR 102 RF exposition, une distance de séparation d'au moins 20 cm doit être maintenue entre l'antenne de cet appareil et toutes les personnes.

Base Unit contient FCC ID: 4491A-WCBN816A

IC Button (modèle CSBTN004): 21559-CSBTN005

ClickShare Button 21559-CSBTN005 a été testé et répond aux directives d'exposition RF de la IC. La valeur SAR maximale rapportée est de 1.2 W/kg.

ClickShare Button 21559-CSBTN005 devrait être installé et utilisé avec une distance minimale de 5 mm entre le radiateur et votre corps.

Déclaration d'antenne d'Industrie Canada (IC)

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio 4491A-WCBN816A a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Utilisation à l'intérieur seulement

La bande 5150 MHz - 5250 MHz, 5925 MHz - 6425 MHz, 6425 MHz - 6525 MHz, 6525 MHz - 6875 MHz and 6875 MHz - 7125 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

Informations de certification (DAS)

Cet appareil est également conçu pour satisfaire aux exigences concernant l'exposition aux ondes radioélectriques établies par Industrie Canada.

Le seuil du DAS adopté par le Canada est de 1.6 W/kg pour 1g de tissu. La plus grande valeur de DAS signalée à IC pour ce type d'appareil ne dépasse pas ce seuil.

La valeur maximale de DAS signalée à IC pour ce type d'appareil lors du test dans des conditions d'exposition portative est de 1.6 W/kg.

B.8 Product compliance Brazil

Visão geral da conformidade ANATEL

Este equipamento não (C-100RS, C-300RS; CSBTN005) tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. O uso deste equipamento

é restrito a ambientes fechados e é proibido em plataformas petrolíferas, veículos automotores, trens, embarcações e no interior de aeronaves abaixo de 3.048 metros (10.000 pés).

Este equipamento não possui direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para mais informações, consulte o site da ANATEL: www.gov.br/anatel

B.9 Product compliance Mexico

Cumplimiento

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOM certification



IFETEL ID: RCPBACxxx-xxxx

B.10 Product compliance Taiwan

NCC warning statement

根據 NCC LP0002 低功率射頻器材技術規範_章節 3.8.2:

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規定作業之無線電通信。

低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

警告

應避免影響附近雷達系統之操作。

高增益指向性天線只得應用於固定式點對點系統。

電磁波曝露量 MPE 標準值 1mW/cm²，送測產品實測值為：0.082 mW/cm²，建議使用時至少距離人體 20 公分

Taiwan



For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

廢電池請回收

限用物質含有情況標示聲明書 (Declaration of the Presence Condition of the Restricted Substances Marking) – Taiwan RoHS compliance

設備名稱：無線視頻會議一體機，型號 (型式)：C-100RS, C-300RS Equipment name: wireless room system, Type designation: C-100RS, C-300RS						
限用物質及其化學符號 Restricted substances and its chemical symbols						
單元 Unit	鉛 Lead	汞 Mercury	鎘 Cadmium	六價鉻 Hexavalent	多溴聯苯	多溴二苯醚

	(Pb)	(Hg)	(Cd)	chromium (Cr6+)	Poly-brominated biphenylid (PBB)	Poly-brominated diphenyl ethers (PBDE)
電路板 Printed Circuit Assemblies	—	○	○	○	○	○
電(線)纜 Cables	—	○	○	○	○	○
機箱 Chassis	○	○	○	○	○	○
電源供應器 Power Supply Unit	—	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. “—”係指該項限用物質為排除項目。
Note 3: The “—” indicates that the restricted substance corresponds to the exemption.

限用物質含有情況標示聲明書 (Declaration of the Presence Condition of the Restricted Substances Marking) – Taiwan RoHS compliance

設備名稱：無線視頻會議一體機，型號(型式)：CSTUC001 Equipment name: ClickShare Control Panel, Type designation: CSTUC001						
	限用物質及其化學符號 Restricted substances and its chemical symbols					
單元 Unit	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr6+)	多溴聯苯 Poly-brominated biphenylid (PBB)	多溴二苯醚 Poly-brominated diphenyl ethers (PBDE)
電路板 Printed Circuit Assemblies	—	○	○	○	○	○
電(線)纜 Cables	○	○	○	○	○	○
機箱 Chassis	—	○	○	○	○	○
傳感器 Sensor	—	○	○	○	○	○
面板組件 LCD Module	—	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. “—”係指該項限用物質為排除項目。
Note 3: The “—” indicates that the restricted substance corresponds to the exemption.

限用物質含有情況標示聲明書 (Declaration of the Presence Condition of the Restricted Substances Marking) – Taiwan RoHS compliance

設備名稱：無線視頻會議一體機， 型號 (型式)： CSBTN005 Equipment name: ClickShare Button, Type designation: CSBTN005						
限用物質及其化學符號 Restricted substances and its chemical symbols						
單元 Unit	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr6+)	多溴聯苯 Poly- brominated biphenyl (PBB)	多溴二苯醚 Poly- brominated diphenyl ethers (PBDE)
電路板 Printed Circuit Assemblies	—	○	○	○	○	○
電 (線) 纜 Cables	○	○	○	○	○	○
機箱 Chassis	○	○	○	○	○	○
無線網組件 WLAN Module	—	○	○	○	○	○
備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. 備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. 備考3. “—” 係指該項限用物質為排除項目。 Note 3: The “—” indicates that the restricted substance corresponds to the exemption.						

B.11 Product compliance China

SRRC certification

型号核准代码以实物铭牌显示

产品中有害物质的名称及含有信息表 (China RoHS compliance)

根据中华人民共和国《电器电子产品有害物质限制使用管理办法》规定，以下部分列出了Barco产品中可能包含的有毒和/或有害物质的名称和含量。

C-100RS, C-300RS

部件名称 Component name	有害物质 Hazardous Substances or Elements									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	邻苯二甲酸二正丁酯 (DBP)	邻苯二甲酸二异丁酯 (DIBP)	邻苯二甲酸丁基苄酯 (BBP)	邻苯二甲酸二(2-乙基)己酯 (DEHP)
印制电路配件 Printed Circuit Assemblies	X	○	○	○	○	○	○	○	○	○
电(线)缆 Cables	X	○	○	○	○	○	○	○	○	○

部件名称 Component name	有害物质 Hazardous Substances or Elements									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ⁶⁺)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	邻苯二甲酸二正丁酯 (DBP)	邻苯二甲酸二异丁酯 (DIBP)	邻苯二甲酸丁基苄酯 (BBP)	邻苯二甲酸(2-乙基)己酯 (DEHP)
底架 Chassis	○	○	○	○	○	○	○	○	○	○
电源供应器 Power Supply Unit	X	○	○	○	○	○	○	○	○	○
文件说明书 Paper Manuals	○	○	○	○	○	○	○	○	○	○
注1: ○: 表示该有害物质在该部件所有均质材料中的含量均不超出电器电子产品有害物质限制使用国家标准要求。 X: 表示该有害物质至少在该部件的某一均质材料中含量超出电器电子产品有害物质限制使用国家标准要求。 注2: 以上未列出的部件, 表明其有害物质含量均不超出电器电子产品有害物质限制使用国家标准要求。										

CSTUC001

部件名称 Component name	有害物质 Hazardous Substances or Elements									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ⁶⁺)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	邻苯二甲酸二正丁酯 (DBP)	邻苯二甲酸二异丁酯 (DIBP)	邻苯二甲酸丁基苄酯 (BBP)	邻苯二甲酸(2-乙基)己酯 (DEHP)
印制电路配件 Printed Circuit Assemblies	X	○	○	○	○	○	○	○	○	○
电(线)缆 Cables	○	○	○	○	○	○	○	○	○	○
底架 Chassis	X	○	○	○	○	○	○	○	○	○
传感器 Sensor	X	○	○	○	○	○	○	○	○	○
显示面板组件 LCD Module	X	○	○	○	○	○	○	○	○	○
注1: ○: 表示该有害物质在该部件所有均质材料中的含量均不超出电器电子产品有害物质限制使用国家标准要求。 X: 表示该有害物质至少在该部件的某一均质材料中含量超出电器电子产品有害物质限制使用国家标准要求。 注2: 以上未列出的部件, 表明其有害物质含量均不超出电器电子产品有害物质限制使用国家标准要求。										

CSBTN005

部件名称 Component name	有害物质 Hazardous Substances or Elements									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ⁶⁺)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	邻苯二甲酸二正丁酯 (DBP)	邻苯二甲酸二异丁酯 (DIBP)	邻苯二甲酸丁基苄酯 (BBP)	邻苯二甲酸二(2-乙基)己酯 (DEHP)
印制电路配件 Printed Circuit Assemblies	X	○	○	○	○	○	○	○	○	○
电(线)缆 Cables	○	○	○	○	○	○	○	○	○	○
底架 Chassis	○	○	○	○	○	○	○	○	○	○
无线网组件 WLAN Module	X	○	○	○	○	○	○	○	○	○

注1:
○: 表示该有害物质在该部件所有均质材料中的含量均不超出电器电子产品有害物质限制使用国家标准要求。
X: 表示该有害物质至少在该部件的某一均质材料中含量超出电器电子产品有害物质限制使用国家标准要求。

注2:
以上未列出的部件, 表明其有害物质含量均不超出电器电子产品有害物质限制使用国家标准要求。



B.12 Product compliance India

Plastic waste management

- **Importer EPR Regn. No.:** IM-05-000-12-ADPPA7994P-23 (under India PWM, 2016 as amended)
- **Thickness:** ≥0.05 mm
- **Category:** 04
- **Company:** CEECO Technologies Pvt Ltd, Inflow Technologies Pvt Ltd

B.13 Product privacy statement

About

Learn more about Barco's Product Privacy Statement:

<https://www.barco.com/en/about/trust-center/product-privacy-statement>.

Which data is captured and why

Following data³ is captured for general secure operation of the product.

- IP addresses
- User ID information
- Date and time information
- Mobile network information

3. Only if applicable for the product type and model.

- Network configuration information
- Device identification information
- Device operational conditions
- Device environmental conditions
- Device performance metric
- Device configuration information
 - Resolution
 - Brightness
- Device input configuration
 - Active inputs
 - Input resolution

Data retention mechanism

An administrator should modify or delete a user (upon user request, or when the user does not work for the company anymore), either via the Users feature, or via a factory reset executed as administrator.

Logs may contain user names and IP addresses and are subject to the retention policy, but cannot be deleted by the user. The user can send a request to dataprotection@barco.com.

B.14 Trademark notice

HDMI™

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

USB Type-C™

USB Type-C and USB-C are a registered trademarks of USB Implementers Forum

Bluetooth™

Bluetooth®, the Bluetooth word mark and logos are registered trademarks of Bluetooth SIG, Inc.

Kensington™

The Kensington logo is a registered trademark of ACCO Brands Corporation.



All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

License information

C

C.1	End user license	48
C.2	ClickShare product end user license	52
C.3	Open source software	53

C.1 End user license

Barco end user license agreement

By accepting these terms (through tick box or other mechanism designed to acknowledge agreement to the terms of an electronic copy of this License Agreement), or by installing, downloading, accessing, or otherwise copying or using all or any portion of the Software (as defined below), (i) you accept this License Agreement on behalf of the entity for which you are authorized to act (e.g., your employer) and you agree to act in a manner consistent with this License Agreement (or, if there is no such entity for which you are authorized to act, you accept this License Agreement on behalf of yourself as an individual and acknowledge that you are legally bound by this Agreement), and (ii) you represent and warrant that you are duly empowered by the end user in case you act on behalf of such entity.

These terms apply to your use of the Software as of and for the original Term of your license. When you renew or purchase an additional license, the then current version of this License Agreement shall apply and will remain unchanged during the term of that license and/or in respect of such changed elements. The other contract documents (Product Specific EULA; Maintenance and Support Agreement, if and when provided alongside with this document) applies in addition to these terms and constitute the entire License Agreement. You acknowledge that an electronic copy of this Agreement shall have the same proving value as a hard copy signed by the parties.

If you are unwilling to accept this License Agreement on these terms, or you do not have the right, power and authority to act on behalf of and bind such entity (or yourself as an individual if there is no such entity), DO NOT SELECT THE "I ACCEPT" BUTTON OR OTHERWISE CLICK ON ANY BUTTON OR OTHER MECHANISM DESIGNED TO ACKNOWLEDGE AGREEMENT, AND DO NOT INSTALL, DOWNLOAD, ACCESS, OR OTHERWISE COPY OR USE ALL OR ANY PORTION OF THE SOFTWARE.

1. Definitions

- **Affiliate:** means any corporation or other entity directly or indirectly, controlling, controlled by or under common control with such corporation or entity. For the purpose of the above, "control" shall mean (i) the ownership or control, directly or indirectly, of fifty percent (50%) or more of the equity capital or the shares or voting rights in the corporation or other entity in question or (ii) the control of the composition of the board of directors of the corporation or other entity in question.
- **Barco:** means Barco NV (company number 0473.191.041) with company address at Beneluxpark 21, 8500 Kortrijk, Belgium, or its designated Affiliate licensing to you the proprietary software which is the subject matter of this Agreement.
- **Documentation:** means all technical, reference and installation manuals, user guides, published performance specifications and other written documentation provided by Barco generally to its licensees with respect to the Software, along with any modifications and updates thereto.
- **DRM:** means Barco's digital rights management platform used to provide access to and access conditions of the Software.
- **License agreement:** means this Barco End User License Agreement (EULA), incorporating the terms of the Product Specific EULA, and any modifications thereof as set out herein.
- **Software:** means the Barco proprietary software which is being licensed hereunder, released in object code only.
- **Term:** means the period set out in article 9.1 hereof.
- **Product specific EULA:** means the supplemental software terms applicable.
- **You:** means the entity on behalf of which these terms are accepted, and any of its representatives having access to the Software.

2. License grant

1. **License scope:** Subject to compliance with all license terms and payment of applicable fees, Barco grants you a limited, non-exclusive, non-assignable, non-transferable user license (without the right to grant sublicenses). Save for the Product Specific EULA or any broader license terms confirmed through the DRM tool, (i) the license under this License Agreement applies to one (1) copy of the Software to be used on one single computing device and (ii) installation on a computing device that may be concurrently accessed by more than one user shall not constitute a permitted use and a separate license is required for each active user connected to a computing device on which the Software is being used
2. **License type:** The applicable license type, and your rights in time, deployment and usage, are further detailed in the Product Specific EULA (in the absence of which the scope shall be as set in article 1 hereof).

3. License restrictions:

- **Intended use:** You agree to use the Software solely as permitted by this License Agreement (and any Product Specific EULA made part of it) and in a manner consistent with its design and Documentation.
 - **No transfer (license agreement):** You agree not to transfer, assign or sublicense your license rights to any other person or entity, unless Barco's prior written consent is obtained (which consent shall be reasonably given, but may come with a fee).
 - **No transfer (software):** If you deactivate or uninstall the Software from the computer device on which it was originally installed, this will terminate this License Agreement unless otherwise and specifically approved by Barco. You agree not to use the Software in association with other hardware or software that allows to pool connections, reroute information, reduce the number of devices or users that directly access or use the Software, or reduce the number of devices or users the Software directly manages (sometimes referred to as "multiplexing" or "pooling") or otherwise attempt to reduce the number of licenses of any type that you need.
 - **Authorized users:** The use of the Software is restricted to persons within your organization, or any third party representatives operating under your responsibility and control, provided any such persons have accepted the terms of this License Agreement. You agree not to use or permit the Software to be used to perform services for third parties, whether on a service bureau or time sharing basis or otherwise, without the prior written authorization of Barco. You shall not lease, rent, or otherwise transfer or grant a security or other interest in the Software.
 - **No modifications:** You shall not make error corrections to or otherwise modify or adapt the Software or create derivative works based upon the Software, or permit third parties to do the same.
 - **No reverse engineering:** You agree not to reverse engineer or decompile, decrypt, disassemble or otherwise reduce the Software to human-readable form, except to the extent otherwise expressly permitted under applicable law notwithstanding this restriction, or except to the extent Barco is legally required to permit such specific activity pursuant to any applicable open source license.
 - **Code required to ensure interoperability:** To the extent required by law, and at your written request, Barco shall provide you with the interface information needed to achieve interoperability between the Software and another independently created program used by you, on payment of Barco's applicable fee (if any). You shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with terms and conditions which Barco makes applicable.
 - **No unbundling:** The Software may include various applications and components, may support multiple platforms and languages, and may be provided on multiple media or in multiple copies. Nonetheless, the Software is designed and provided to you as a single product to be used as a single product on devices as permitted herein. You agree not to unbundle the component parts of the Software for use on different computer devices.
 - **Territory:** You agree to use the Software solely in the territory or region where you obtained the Software from Barco or its authorized reseller or as otherwise stated in the Documentation. Any export if permitted shall comply with any applicable (export) laws and regulations.
4. **Your infrastructure:** You remain responsible to procure and maintain hardware, operating system, network and other infrastructure (the "Infrastructure") required to operate the Software and to keep such Infrastructure functioning and virus-free. You acknowledge that the Software is a complex computer software application, and that the performance thereof may vary depending hardware platform, software interactions and configuration. You acknowledge that the Software is not designed and produced specifically to meet your specific requirements and expectations and the selection of the Software by you is entirely your own choice and decision.

3. Ownership and intellectual property rights

1. **Ownership:** Any Software is licensed, not sold to you, on a non-exclusive basis for use only under the terms of this License Agreement, and Barco and its suppliers reserve all rights not expressly granted to you. You may own the carrier on which the Software is provided, but the Software is owned and copyrighted by Barco or by third party suppliers. Your license confers no title or ownership and is not a sale of any rights in the Software or its Documentation.
2. **Third party materials:** The Software may contain or require the use of certain third party technology (whether proprietary or open source software), identified by Barco in the Documentation, readme file, third-party click-accept, on www.barco.com or elsewhere (the "Identified Components"). Identified Components may be subject to additional and/ or different terms and you agree that the Identified Components are licensed under the terms, disclaimers and warranties of their respective licenses which in the forthcoming case shall override the provisions of this License Agreement.
3. **Source code access:** To the extent required under third party (open source) license terms, and for a period of 36 months following your acceptance of this License Agreement, Barco shall provide access to the source code controlled by a third party (open source) license, via email or download link. If the relevant

license terms require so, you may require Barco (attn. its legal department, at the address stated above) to obtain such code on tangible medium against payment of the cost of media, shipping and handling.

4. **Copyright:** The Software is protected by national and international laws and treaty provisions. Copyright on the Software components belongs to the respective initial copyright holder, each additional contributor and/or their respective assignee(s), as may be identified in the Software Documentation, source code, README file, or otherwise. You shall not remove or obscure or otherwise alter the respective copyrights.
5. **Trademarks:** Brand and product names mentioned in relation to the Software may be trademarks, registered trademarks or copyrights of their respective (third party) holders. All such brand and product names mentioned in relation to the Software serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.
6. **Trade Secrets:** You agree not to disclose, provide or otherwise make available trade secrets contained within the Software and Documentation in any form to any third party without the prior written consent of Barco. You shall implement reasonable security measures to protect such trade secrets.

4. Support

1. **Principle:** Barco is under no obligation to provide support in respect of the Software, except as included in a Product Specific EULA and/or the extent you have entered into a separate maintenance agreement. Any unauthorized use of the Software may prohibit Barco from providing such support.
2. **Support policy:** Barco may provide to you maintenance releases to address bugs or security issues in the Software and you agree to install the same. Any other updates or upgrades can be obtained under the terms of a separate software maintenance which is being offered to you. You may have a right to downgrade your licensed Software application to (only) such earlier version of the same Software application as agreed by Barco in the forthcoming case.

Additional functionality may be licensed to you with and subject to additional or different terms.

5. Warranty

EXCEPT FOR THE LIMITED WARRANTY THAT MAY APPLY AS PER THE PRODUCT SPECIFIC EULA, YOU UNDERSTAND THAT THE SOFTWARE IS BEING PROVIDED TO YOU "AS IS". BARCO DOES NOT MAKE NOR INTENDS TO MAKE ANY WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED AND SPECIFICALLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF INTELLECTUAL PROPERTY AND DOES NOT WARRANT THAT THE SOFTWARE WILL BE FREE FROM ERRORS OR THAT YOU WILL BE ABLE TO OPERATE THE SOFTWARE WITHOUT INTERRUPTIONS OR THAT SUCH ERRORS WILL BE CORRECTED BY BARCO. EXCEPT FOR ANY MAINTENANCE AND SUPPORT OBLIGATIONS SEPARATELY AGREED, YOU ARE SOLELY RESPONSIBLE FOR ALL COSTS AND EXPENSES ASSOCIATED WITH RECTIFICATION, REPAIR OR DAMAGE CAUSED BY SUCH ERRORS. IN THE FORTHCOMING CASE, THE WARRANTY DISCLAIMER FOUND IN APPLICABLE OPEN SOURCE LICENSES SHALL OVERRIDE THE PROVISIONS OF THIS LICENSE AGREEMENT.

6. Compliance and enforcement

1. **Reporting and audit:** In addition to good practice record-keeping obligations, you agree to report the use of the Software and relating billing metrics in the DRM or otherwise as agreed. You grant to Barco and its designated auditors, at Barco's expenses, the right to verify your Software deployments and to examine your books, records and accounts during your normal business hours so as to verify your compliance with the License Agreement. In the event such audit discloses non-compliance with your payment obligations hereunder, you shall promptly pay to Barco the appropriate license fees plus the reasonable cost of conducting the audit.
2. **Enforcement:** Barco shall notify the then known user through the DRM (failing of which, otherwise in writing) of a substantial non-compliance, based on the triggers as per the Product Specific EULA. The non-compliance may result in an immediate or graduate denial of service (i.e. termination of the rights granted under the License Agreement), in part or in full, all based on the level of severity of the non-compliance [as per the Product Specific EULA].
3. **Indemnification:** YOU HEREBY AGREE TO INDEMNIFY, DEFEND AND HOLD HARMLESS BARCO AND BARCO'S AFFILIATES FROM AND AGAINST ANY AND ALL ACTIONS, PROCEEDINGS, LIABILITY, LOSS, DAMAGES, FEES AND COSTS (INCLUDING ATTORNEY FEES), AND OTHER EXPENSES INCURRED OR SUFFERED BY BARCO ARISING OUT OF OR IN CONNECTION WITH ANY BREACH BY YOU OF THE TERMS OF THIS SOFTWARE LICENSE.

7. Limitation of liability

TO THE MAXIMUM EXTENT PERMITTED BY LAW, BARCO ACCEPTS NO LIABILITY FOR ANY DAMAGES, LOSSES OR CLAIMS YOU OR ANY THIRD PARTY MAY SUFFER AS A RESULT OF YOUR USE OF THE SOFTWARE. IN JURISDICTIONS WHERE BARCO'S LIABILITY CANNOT BE EXCLUDED, BARCO'S LIABILITY FOR DIRECT DAMAGES SHALL BE LIMITED TO AN AMOUNT OF 250 EURO IN THE AGREGATE (OR TO THE MAXIMUM EXTENT PERMITTED BY LAW WHERE NO FURTHER EXCLUSION IS LEGALLY ALLOWED).

TO THE MAXIMUM EXTENT PERMITTED BY LAW, IN NO EVENT WILL BARCO BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL LOSS OR DAMAGES OF ANY KIND WHICH MAY ARISE OUT OF OR IN CONNECTION WITH THE SOFTWARE, THIS SOFTWARE LICENSE OR THE PERFORMANCE OR PURPORTED PERFORMANCE OF OR FAILURE IN THE PERFORMANCE OF BARCO'S OBLIGATIONS UNDER THIS SOFTWARE LICENSE OR FOR ANY ECONOMIC LOSS, LOSS OF BUSINESS, CONTRACTS, DATA, GOODWILL, PROFITS, TURNOVER, REVENUE, REPUTATION OR ANY LOSS ARISING FROM WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION OF THE SOFTWARE AND ANY AND ALL OTHER COMMERCIAL DAMAGES OR LOSSES WHICH MAY ARISE IN RESPECT OF USE OF THE SOFTWARE, EVEN IF BARCO HAS BEEN ADVISED OF THE POSSIBILITY OF THEIR OCCURRENCE.

8. Confidentiality

1. **Confidential Information:** You will be receiving information which is proprietary and confidential to Barco during the negotiation and Term of this License Agreement. "Confidential Information" shall include (i) the underlying logic, source code and concepts of the Software or other trade secrets (the access to which is strictly limited as expressly set out herein), (ii) any information designated as confidential by Barco or which has the necessary quality of confidence about it and (iii) any license key provided by Barco to you hereunder.
2. **Non-Disclosure:** You agree not to divulge any Confidential Information to any persons without Barco's prior written consent provided that this article 8 shall not extend to information which was rightfully in your possession prior to the commencement of the negotiations leading to this License Agreement, which is already public knowledge or becomes so at a future date (otherwise than as a result of a breach of this article 8), to the extent it is required to be disclosed by law or which is trivial or obvious. You agree not to use any Confidential Information except for the authorized purpose hereunder. The foregoing obligations as to confidentiality shall survive the Term of this License Agreement.

9. Term and termination

1. **Term:** The duration of this License Agreement will be from the date of your acceptance (as set forth above) of the Software (whereby you acknowledge that use of the Software implies acceptance), until you deactivate the Software, discontinue the use of the device on which the Software was first installed for its intended use or the expiration of the limited time period set out in the Product Specific EULA, whichever comes first.
2. **Termination:** You may terminate this License Agreement at any time by destroying all copies of the Software then in your possession and returning all Documentation and associated materials, to Barco or the appointed Barco reseller that sold or provided these to you. Barco may terminate this License Agreement, immediately or gradually in accordance with article 6 hereof, by informing you at any time if any user is in breach of any of the License Agreement's terms.
3. **Consequences of termination:** All rights associated with the use of the Software and the acquisition of updates and upgrades cease once the contract is terminated or expires. Cancelling your license will stop recurring fees going forward, but will not retroactively refund current or past payments.

10. Other relevant terms

1. **Data Protection:** Barco may, without restriction, save, process, use and reuse any data obtained in connection with the sales or supply of the Services. Barco shall take suitable technical and organizational measures to protect personal data received against loss and unlawful processing.
2. **Functional Information:** Via the Software, Barco may gather technical, aggregated and/or statistical information about (i) the functioning and the functionality of the products which are connected through the Software, and/or (ii) as provided by You or generated by Your use of the Software ("Functional Information"). Barco and its service providers may process and use such Functional Information for analytics purposes, for developing and improving products and services, offering products and services to Your organization, all based on the legitimate interest of Barco of evaluating the market, assessing and

improving its products and conducting research and development. This Section shall survive the term of this Agreement.

3. **Return of data:** Upon Your request made within 60 days after the termination or expiration of this Agreement, Barco will make User Data available to You for export or download as provided in the Documentation. After such 60-day period, Barco shall have no obligation to maintain or provide any User Data, and as provided in the Documentation will thereafter delete or destroy all copies of User Data in Barco's systems or otherwise in Barco's possession or control, unless legally prohibited.

11. Final Clauses

1. **Entire agreement:** This License Agreement is the only understanding and agreement between you and Barco for use of the Software. This License Agreement supersedes all other communications, understandings or agreements we had prior to this License Agreement (with the exception of any continuing confidentiality agreement).
2. **Notices:** Notices can be validly delivered to the parties' last known address.
3. **Severability:** This License Agreement shall not be altered, amended or varied. If any provision of this License Agreement is determined to be illegal, void or unenforceable, or if any court of competent jurisdiction in any final decision so determines, this License Agreement shall continue in full force save that such provision shall be deemed to be deleted with effect from the date of such decision, or such earlier date, and shall be replaced by a provision which is acceptable by law and which embodies the intention of this License Agreement as close as possible.
4. **Export:** You acknowledge that this Software may be subject to U.S. or other governments Export Jurisdiction. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end-user, end-use, and destination restrictions issued by the U.S. or other governments.
5. **Survival:** The provisions of articles 3, 5, 6, 7 and 8 will survive the termination of this License Agreement, howsoever caused, but this will not imply or create any continued right to use the Software after termination of this License Agreement.
6. **Assignment:** Barco shall be entitled to sub-contract all or any of Barco's obligations hereunder to a third party and/or any of Barco's Affiliates.
7. **Law and Jurisdiction:** The construction, validity and performance of this License Agreement shall be governed in all respects by the laws of Belgium, without recourse to its conflict of law principles. All disputes arising in any way out of or affecting this License Agreement shall be subject to the exclusive jurisdiction of the courts of Kortrijk, without prejudice to enforcement of any judgment or order thereof in any other jurisdiction. The United Nations Convention on Contracts for the International Sale of Goods (the "Convention") shall not apply to this License Agreement, however, if the Convention is deemed by a court of competent jurisdiction to apply to this License Agreement, Barco shall not be liable for any claimed non-conformance of the Software under Article 35(2) of the Convention.

YOU HEREBY ACKNOWLEDGE TO HAVE READ, UNDERSTOOD AND ACCEPTED TO BE BOUND BY ALL THE TERMS AND CONDITIONS OF THIS LICENCE AGREEMENT AS INDICATED ABOVE

C.2 ClickShare product end user license

Barco ClickShare Product Specific End User License Agreement⁴

THIS PRODUCT SPECIFIC USER LICENSE AGREEMENT (EULA) TOGETHER WITH THE BARCO GENERAL EULA ATTACHED HERETO SET OUT THE TERMS OF USE OF THE SOFTWARE.

PLEASE READ THIS DOCUMENT CAREFULLY BEFORE OPENING OR DOWNLOADING AND USING THE SOFTWARE.

DO NOT ACCEPT THE LICENSE, AND DO NOT INSTALL, DOWNLOAD, ACCESS, OR OTHERWISE COPY OR USE ALL OR ANY PORTION OF THE SOFTWARE UNLESS YOU CAN AGREE WITH ITS TERMS AS SET OUT IN THIS LICENSE AGREEMENT.

1. Entitlement

Barco ClickShare (the "Software") offered as a wireless presentation solution that includes the respective software components as further detailed in the applicable Documentation.

4. In the event of any differences or inconsistencies between translations of the EULA and the English text of the EULA, the English text will prevail.

The Software can be used upon purchase from, and subject to payment of the relating purchase price to, a Barco authorized distributor or reseller of the ClickShare base unit and button or download of the authorized ClickShare applications (each a “Barco ClickShare Product”).

- **Term**
The Software can be used under the terms of this EULA from the date of first use of the Barco ClickShare Product, for as long as you operate such Barco ClickShare Product.
- **Deployment and Use**
The Software shall be used solely in association with a Barco ClickShare Product in accordance with the Documentation issued by Barco for such Product.

2. Support

The Software is subject to the warranty conditions outlined in the Barco warranty rider. Maintenance, including the provision of upgrades and updates to the Software, and helpdesk support are available at your option on the terms of Barco’s then current warranty rider.

Higher maintenance and support levels can be obtained at the moment of product sale or during the Barco ClickShare Product and/or Software warranty term.

Higher maintenance and support levels may be included in the initial transaction if ordered and paid for additionally. It is strongly suggested to maintain the maintenance and support agreement without interruption. Barco reserves the right not to restart maintenance following an interruption by the customer.

3. Terms of use

The Software can be used as set out in the Barco EULA attached hereto.

The provisions of this Product Specific EULA override the Barco generic EULA in case of conflicts or inconsistencies.

In case of (inadvertent or other) non-compliance (e.g. where the actual use overshoots the use authorized hereunder), Barco shall have the option to suspend access to the Software until the non-compliance is remedied, failing of which Barco may terminate the License Agreement as set out herein.

4. Privacy

You are controller for personal data which are being processed via the Software. Therefore, you remain solely responsible for complying with all applicable data protection laws and for implementing and maintaining privacy protection and security measures (especially for components that you provide or control). Barco disclaims any liability in this regard.

Barco created a specific privacy policy for the ClickShare software application for mobile devices, which describes the processing of personal data via this application (<http://www.barco.com/en/about-barco/legal/privacy-policy/clickshare-app>).

5. Other terms

- **Open source components:**
The Software contains software components released under an Open Source license.
A list of the third party components used is available in the Software’s README files, through the “My Barco” section of the Barco website or through other (online) means. The applicable license terms, copyright notices and, as relevant, source code access conditions apply as set out in the Barco EULA attached hereto.
- **Retention of data:**
Barco right to use and retain Functional Information (section 10.2 of the EULA) shall survive the term of this EULA.

C.3 Open source software

Open Source Software provisions

This product contains software components released under an Open Source license. A copy of the source code is available on request by contacting your Barco customer support representative.

EACH SEPARATE OPEN SOURCE SOFTWARE COMPONENT AND ANY RELATED DOCUMENTATION ARE PROVIDED "AS IS" WITHOUT EXPRESS OR IMPLIED WARRANTY INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR ANY OTHER CONTRIBUTOR BE LIABLE FOR DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS OPEN SOURCE SOFTWARE. MORE INFORMATION/ DETAILS IS TO BE FOUND IN EACH SPECIFIC OPEN SOURCE LICENSE.

Copyright on each Open Source Software component belongs to the respective initial copyright holder, each additional contributor and/or their respective assignee (s), as may be identified in the respective documentation, source code, README file, or otherwise. You shall not remove or obscure or otherwise alter the respective copyrights.

You acknowledge living up to the conditions of each separate Open Source Software license.

The list of Open Source Software components used in the development of the Software can be downloaded from the Barco website via the following URL: <https://www.barco.com/en/support/docs/R5917185>

Index

A

Address
 Production 34

B

Base Unit 9
 Wake 14
Base Unit specifications 28
Base Unit specs 28
Battery
 Disposal 35
Button 10, 14
Button specifications 30
Button specs 30
Buttons 14

C

Certification 33
ClickShare Button 10
ClickShare settings
 UI 18
 User interface 18
Compliance Canada 38
Compliance EU 34
Compliance India 44
Compliance US 37
Conformidade Anatel 39
Control Panel 11
Control Panel specifications 30
Control Panel specs 30
Cumplimiento México 40

D

Disposal 35
 Battery 35

E

End user 48
EULA 48

H

Hardware 13
Hub Core specifications 28
Hub Core specs 28
Hub Pro specifications 28
Hub Pro specs 28

I

Importer 34
International safety standards 34
Introduction 7

L

LED ring 7
License 47
Licenses 47

N

NCC statement
 Warning 40

O

Open source 53

P

Pair
 Button 14
 Buttons 14

Pairing 14
Privacy 44
product license 52

R

Regulatory 33
RoHS 36, 42
China 42

S

Safety standards 34
Settings
About 25
Additional info 25
Details 25
Extra info 25
Info 25
View 25
Accessibility 20
Color correction 21
High contrast 20
Narrator 22
Text size 22
Admin settings
Log in 25
Software 17
Settings 18
Specifications 27
Specs 27
SRRC 42
System 23
Peripherals
Control Panel 23
Touch panel 23
Reboot 24
Restart 24

T

Trademarks 45
Turkey RoHS 36

U

UK Compliance 36

W

WEEE 35–36



R5918649 /01 | 2026-01-21

www.barco.com