



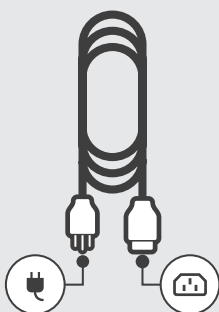
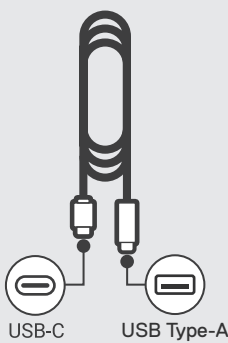
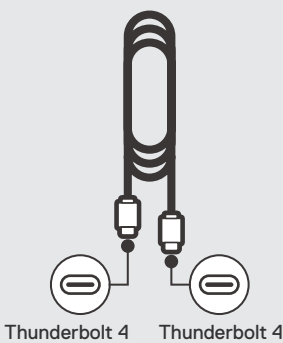
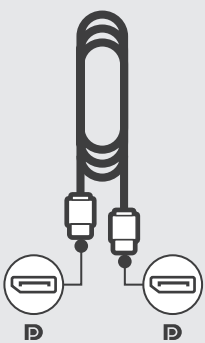





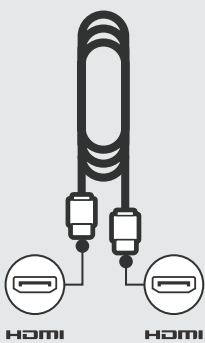





Moniteur Dell UltraSharp 52 Thunderbolt Hub
U5226KW/U5226KW WOST
Guide de démarrage rapide

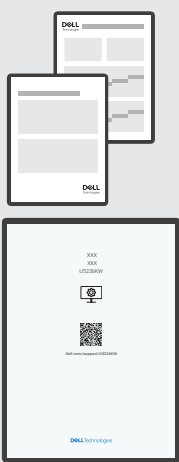


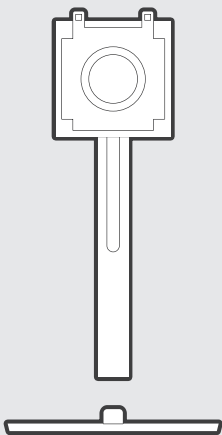


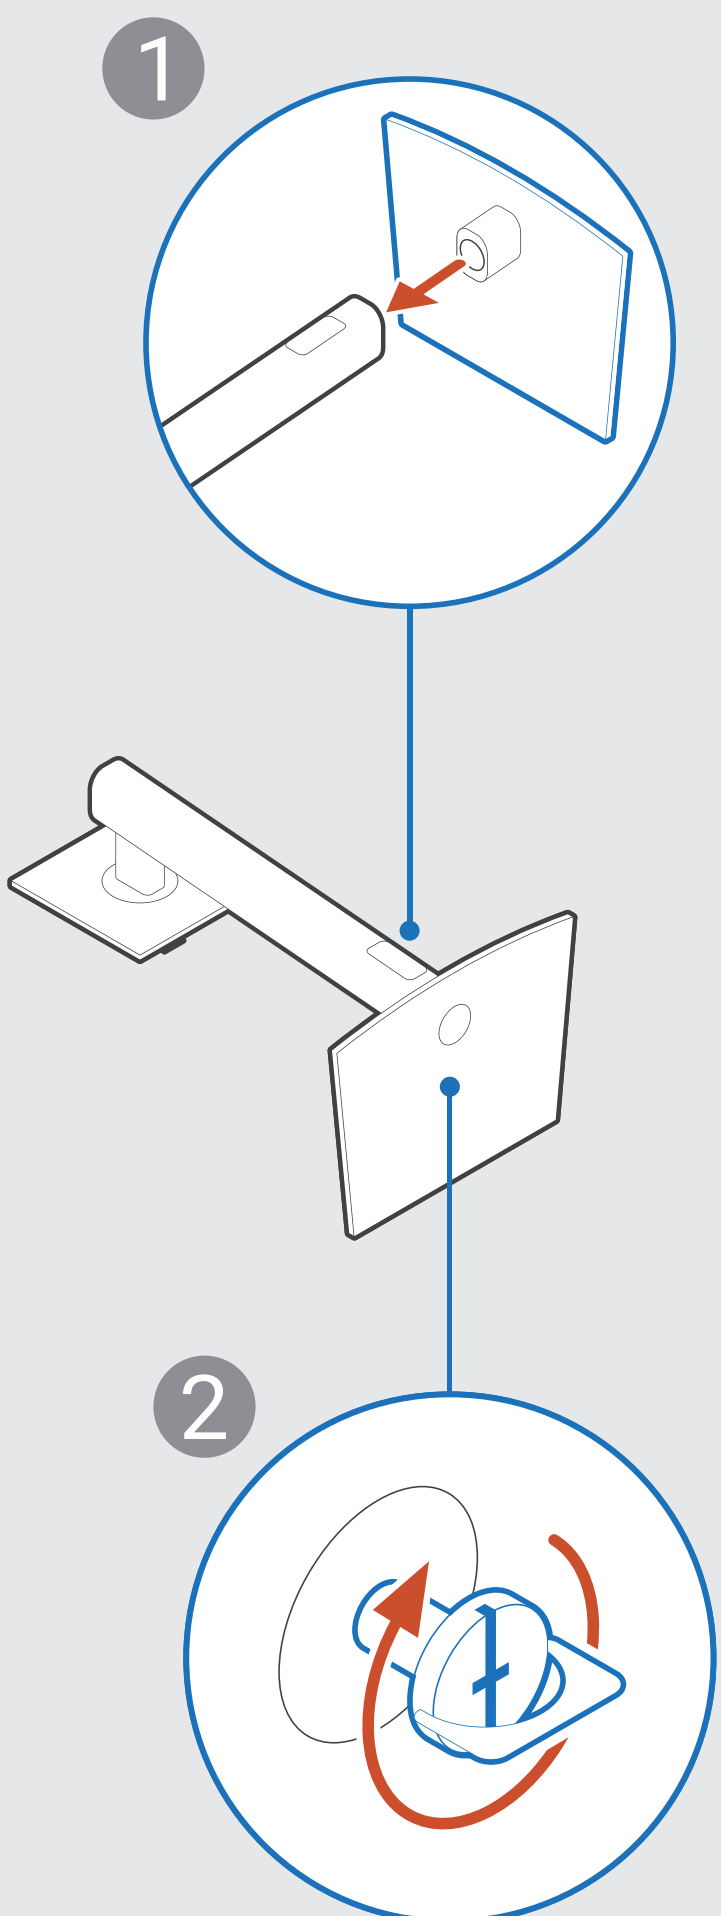


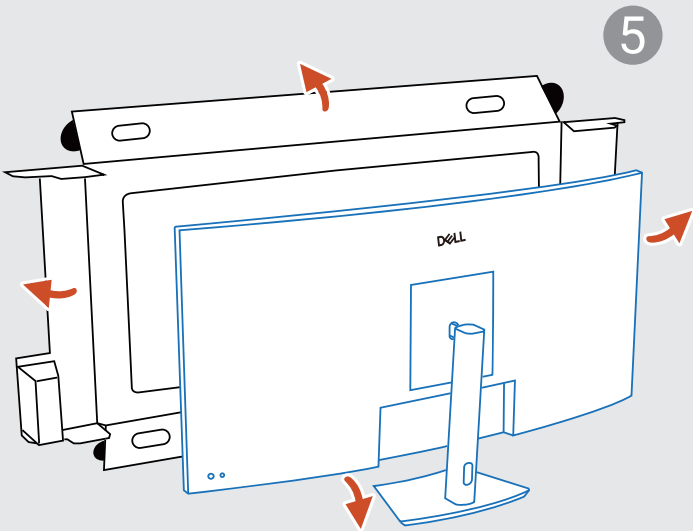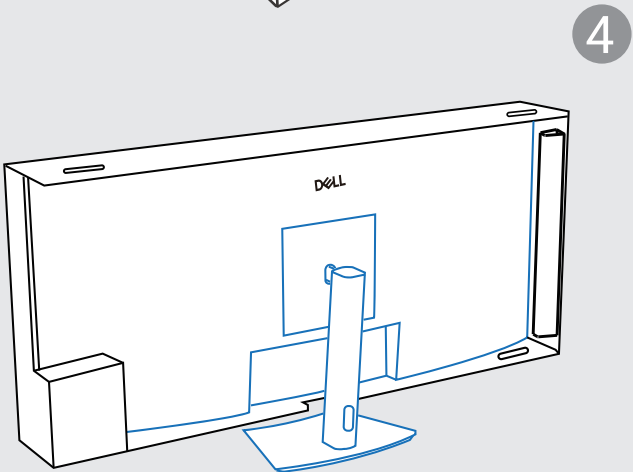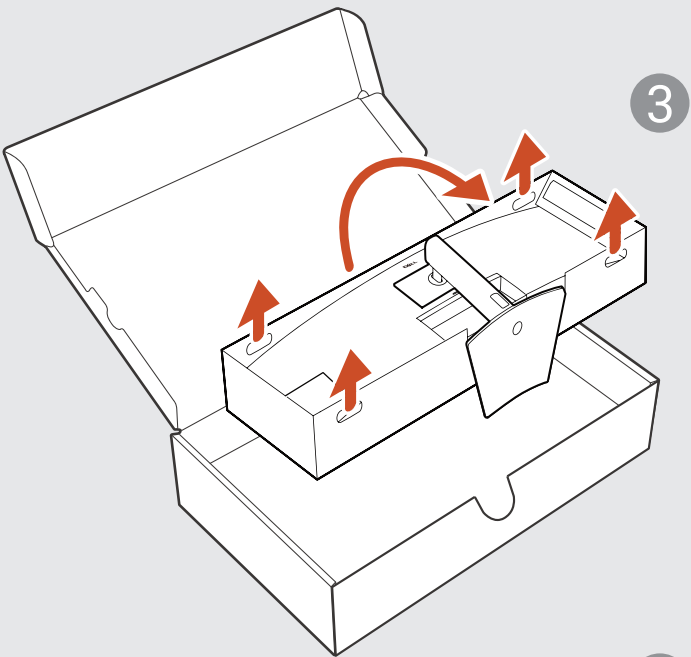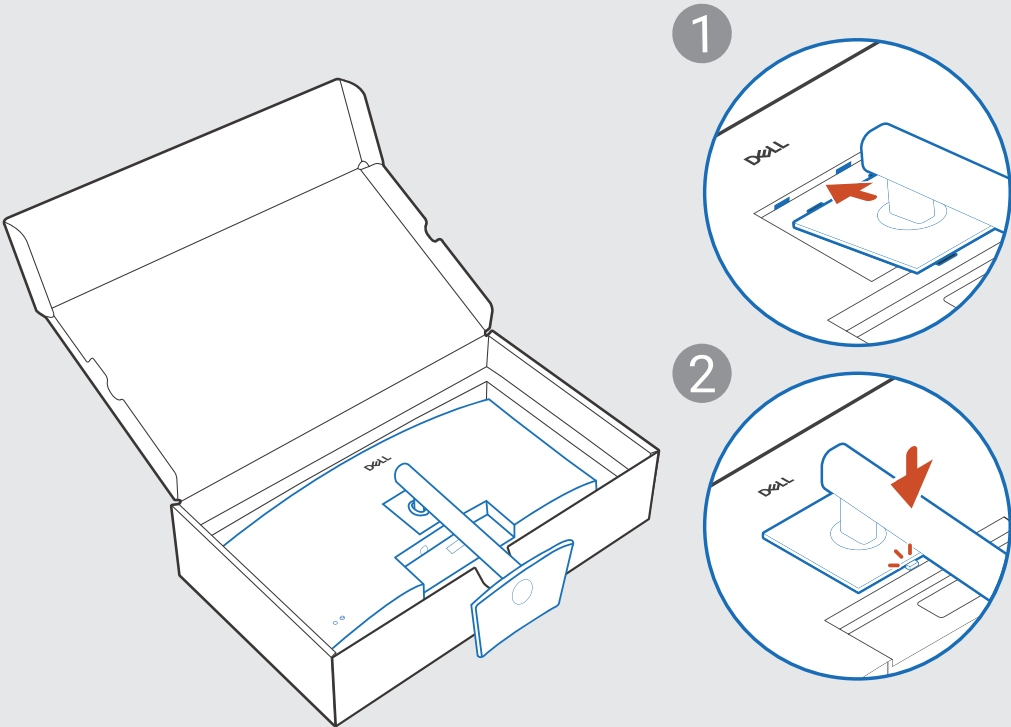


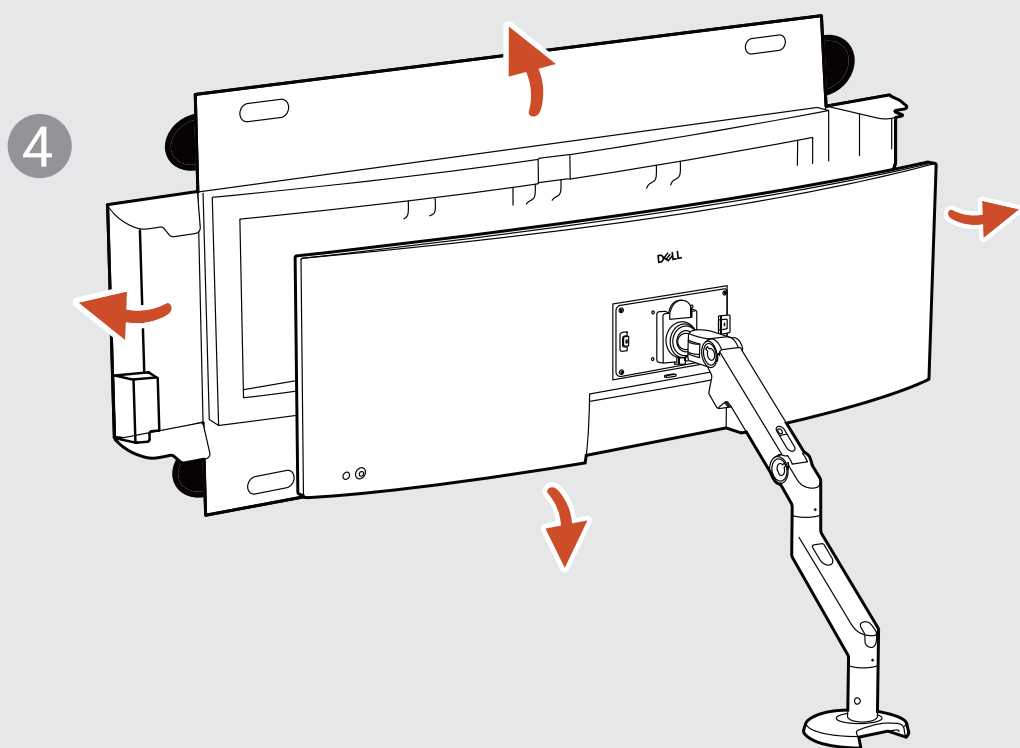
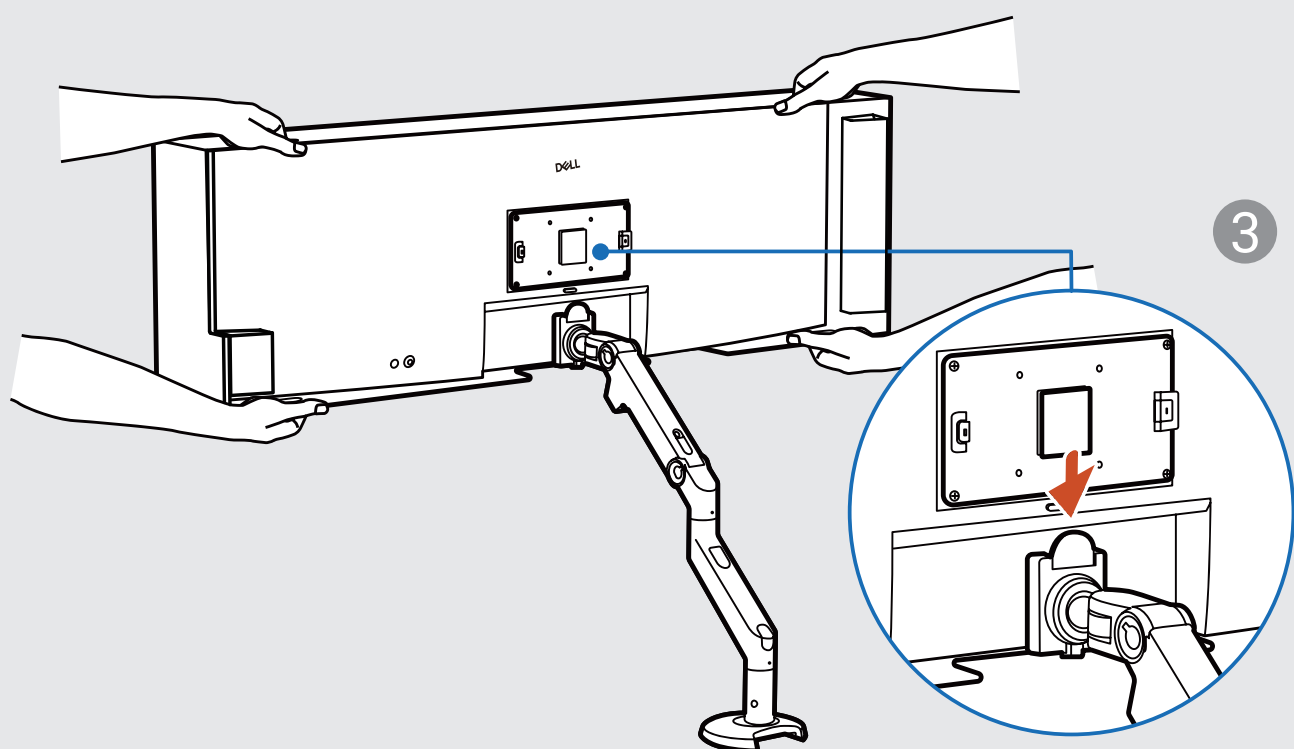
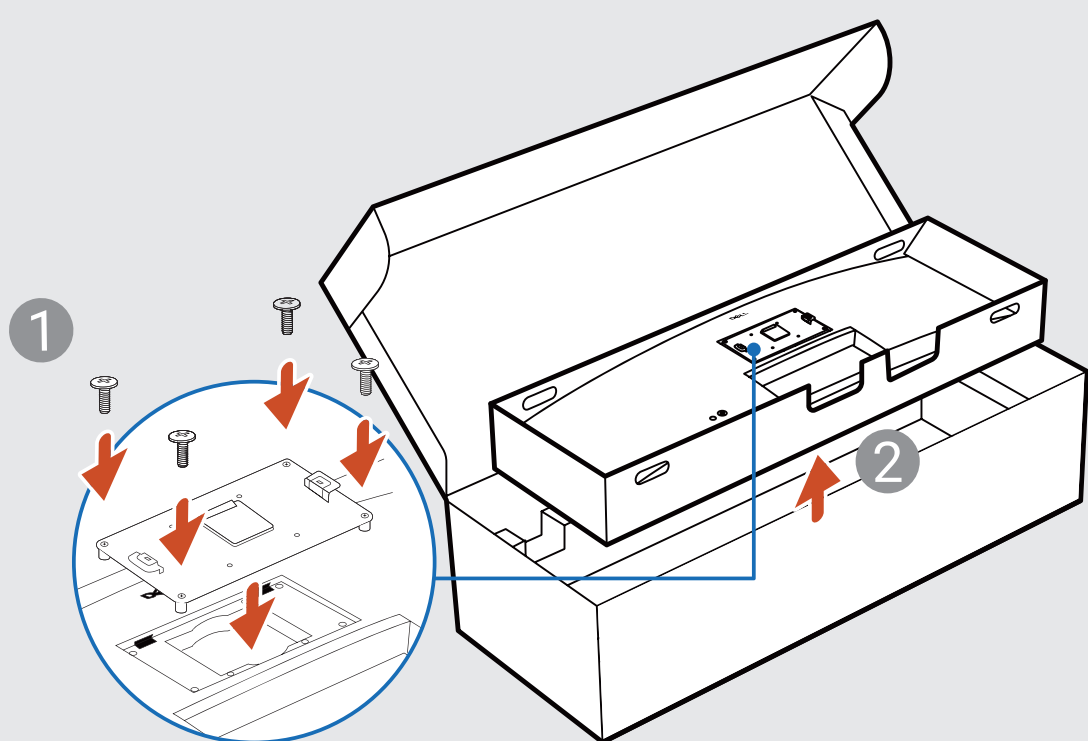



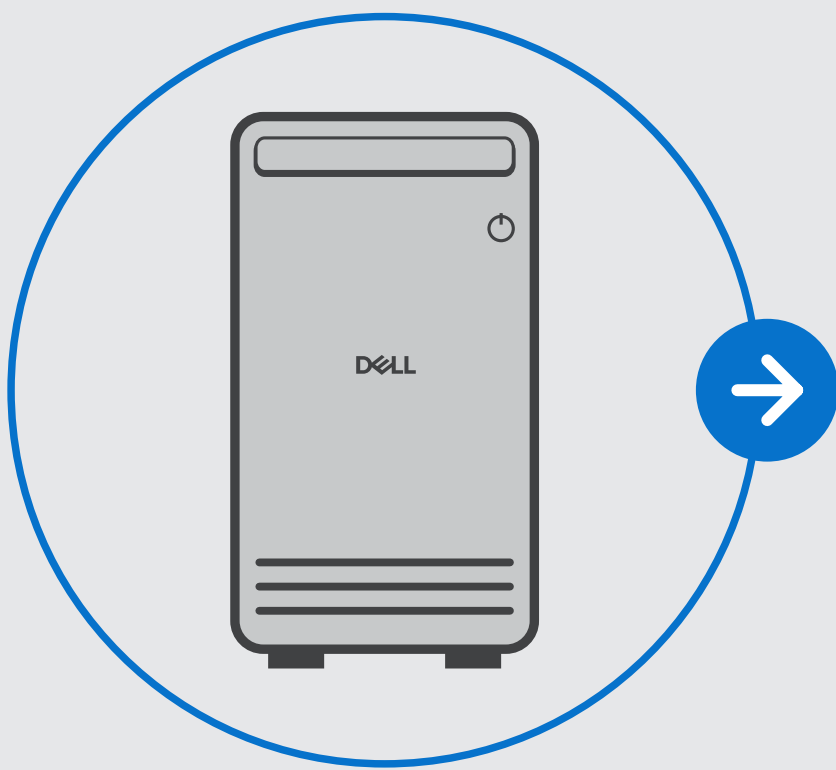


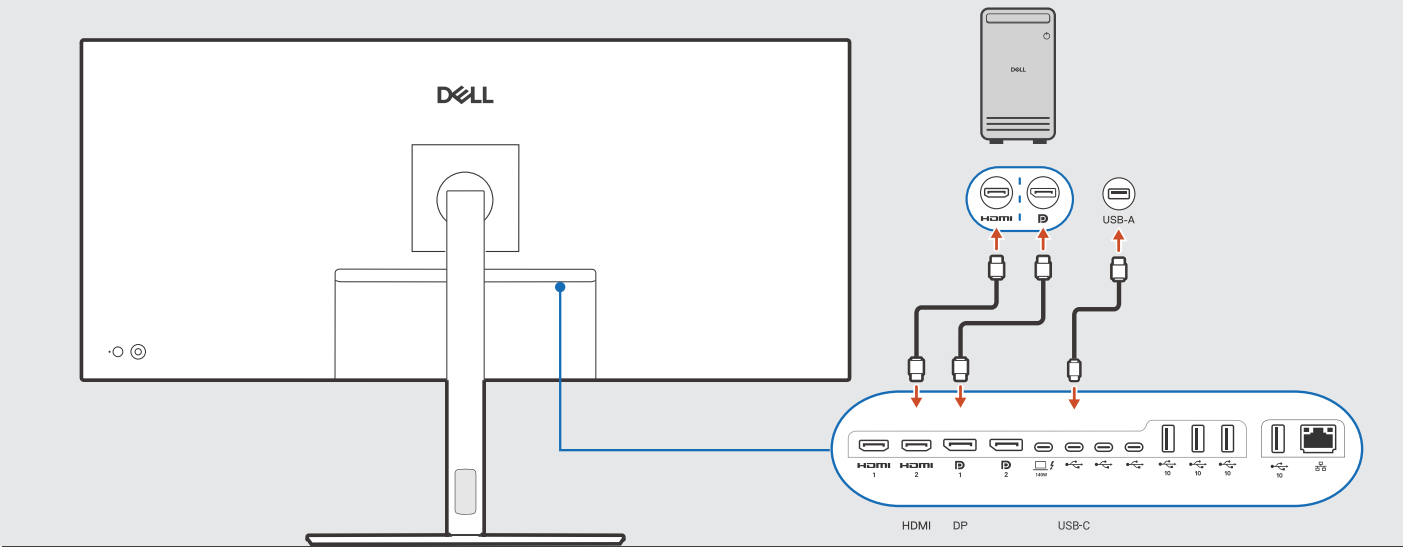


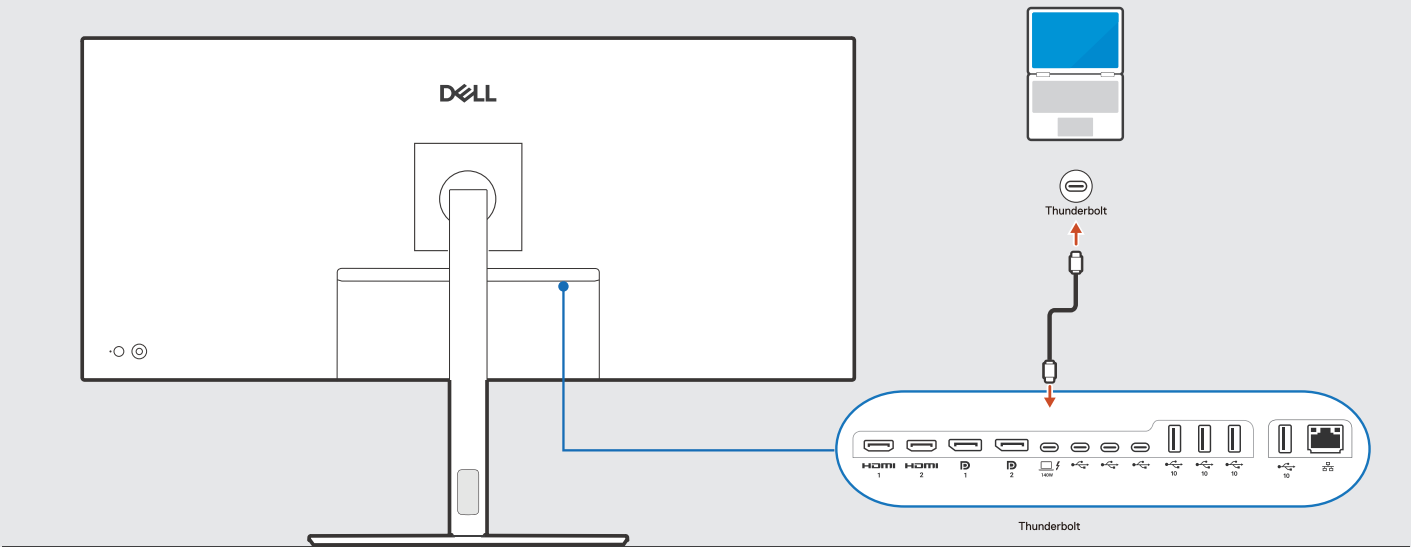

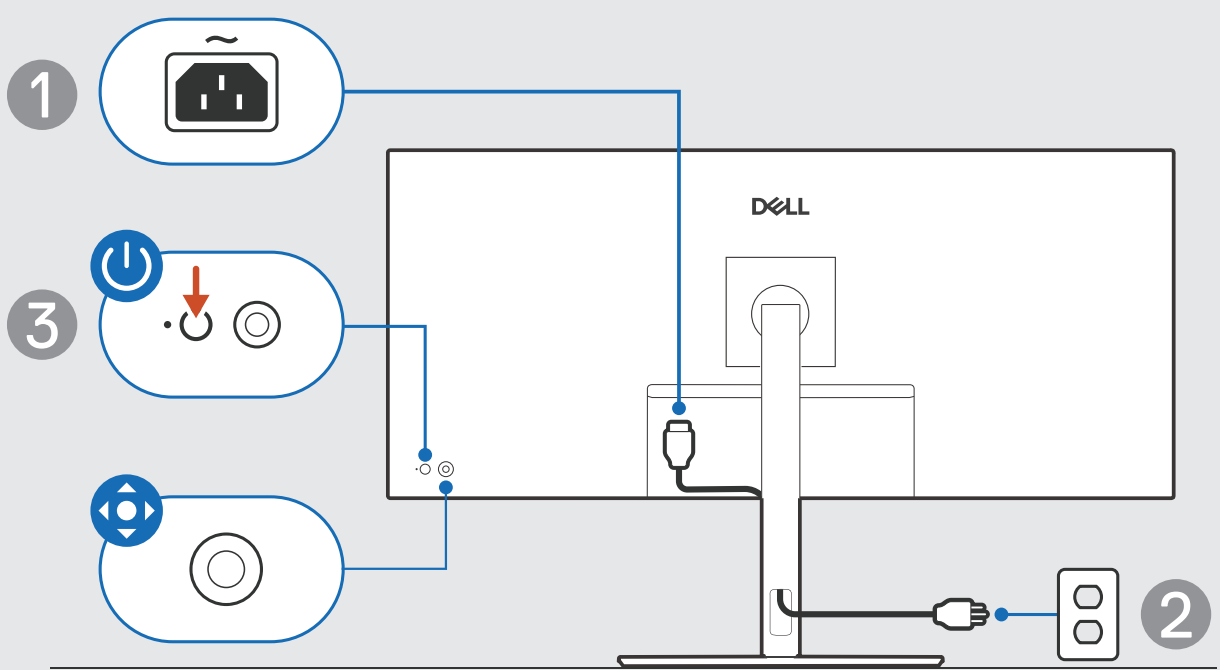


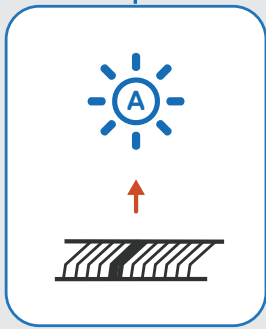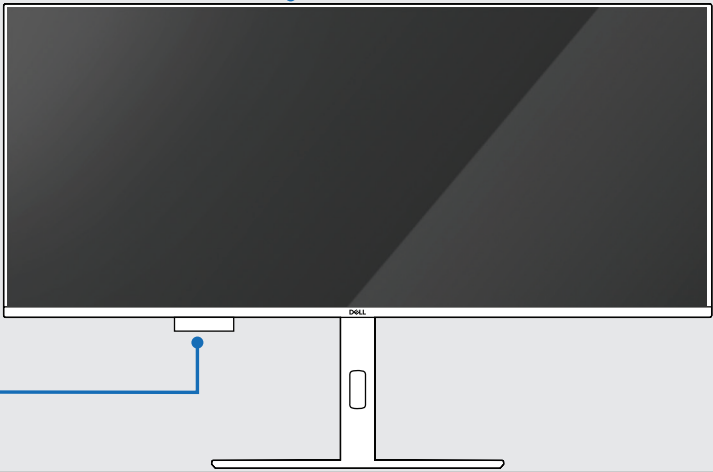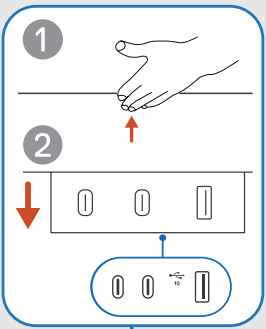

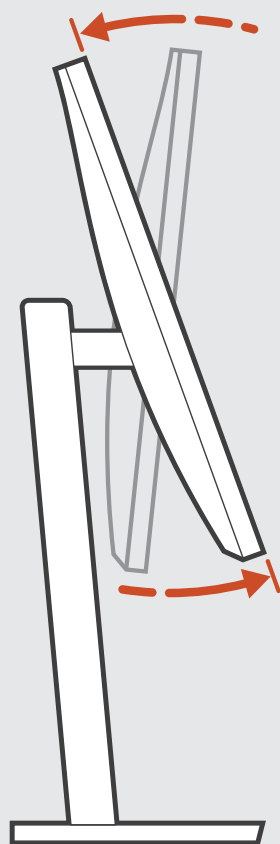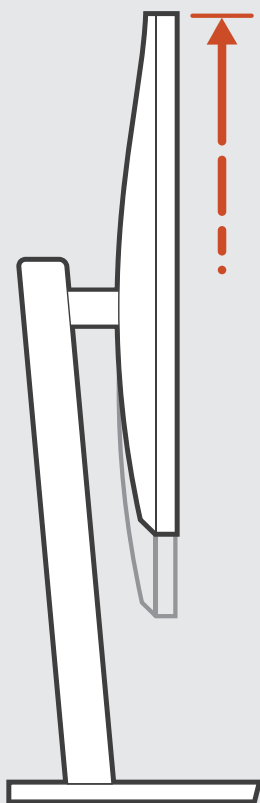


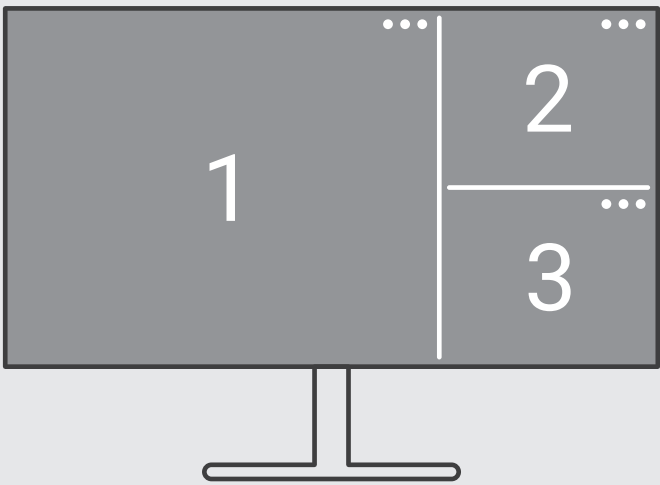

Dell Display and Peripheral Manager :
Dell.com/support/ddpm

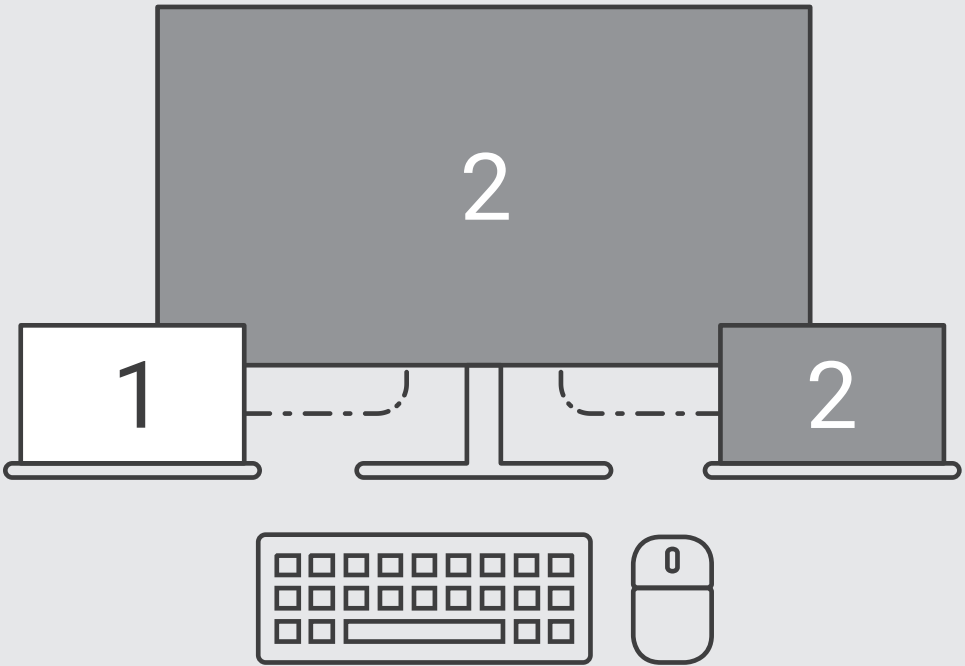

Clavier-vidéo-souris (KVM)

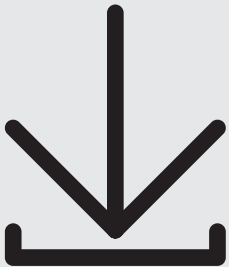

Dell.com/support/U5226KW