


# INSTALLATION INSTRUCTIONS

## FL Racks Floor Levelers

The FL floor levelers are designed for use with Chief® racks. See the specific installation instructions provided with the rack for additional installation information.

### TOOLS REQUIRED / PARTS INCLUDED

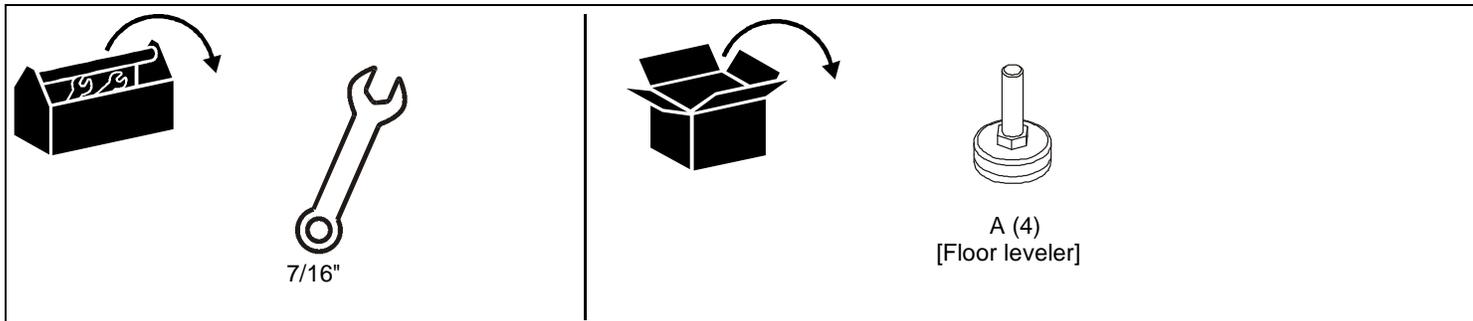

**⚠ WARNING: FAILURE TO READ, THOROUGHLY UNDERSTAND, AND FOLLOW ALL INSTRUCTIONS CAN RESULT IN SERIOUS PERSONAL INJURY, DAMAGE TO EQUIPMENT, OR VOIDING OF FACTORY WARRANTY!** It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

### INSTALLATION INSTRUCTIONS

1. Thread floor levelers (A) into each corner at the bottom of the rack. (See Figure 1)

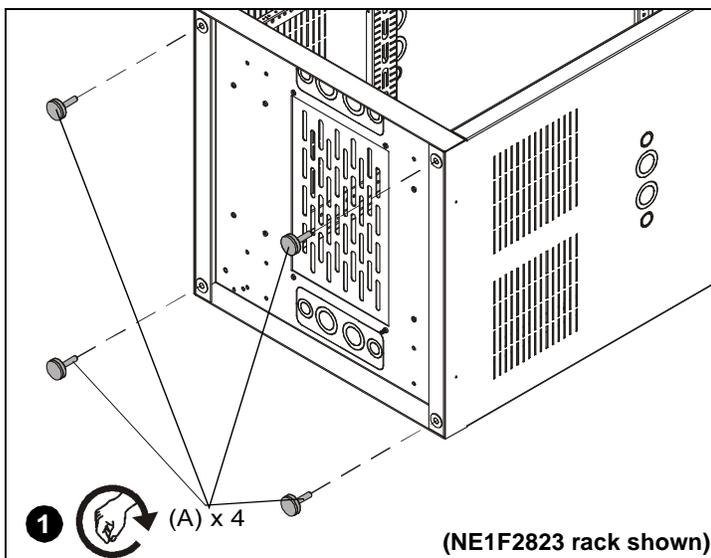


Figure 1

2. Place the rack upright onto the levelers and adjust the levelers with a wrench, as necessary. (See Figure 2)

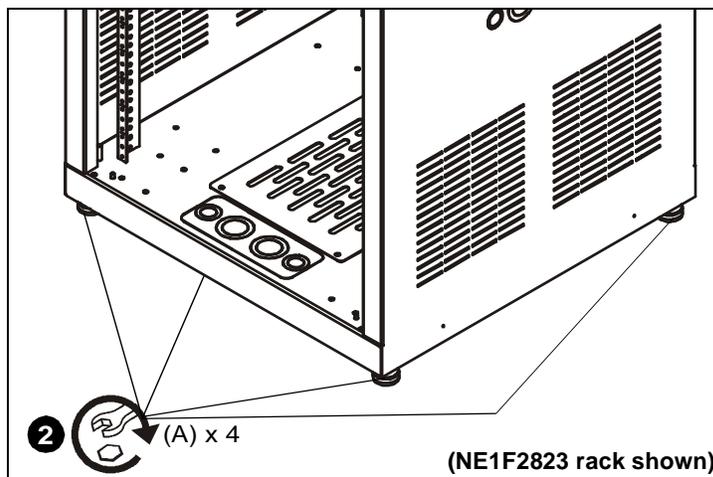


Figure 2

**IMPORTANT !** : If also installing optional casters, leave levelers installed and adjust them so they are as close to the floor as possible, yet still allow movement of the rack on the casters.

©Chief is a registered trademark of Milestone AV Technologies. All rights reserved.



Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.