

USER MANUAL

ProLite

LCD Monitor

ENGLISH

ProLite X4373UHSU

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at <https://iiyama.com>

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

- | model number *
- | purchase receipt and serial number *
- | name and address for collection
- | telephone/fax number, for availability during the day
- | convenient collection date (date, time)
- | short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

Feedback on health and safety issues

If you have any health and safety concerns or questions about the product (including when using the product), please contact iiyama support through our website. You can also contact us by calling +31 204460404. After receiving your feedback, we will ask the responsible unit to handle it as soon as possible and a dedicated person will get back to you. Your feedback will also be recorded and incorporated into our evaluation for improvements

* see the identification plate on the back of the case.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Taurusavenue 187, 2132 LS Hoofddorp, The Netherlands

Model No. : PL4373UH

⚠ WARNING

THIS PRODUCT CONTAINS two AAA Alkaline Batteries.



- Do not heat batteries.
- Do not deform battery.
- Do not recharge battery.
- Do not dispose of battery in fire.
- Keep battery away from direct sunlight and heat sources, do not storage in high temperature and humidity environment.
- Do not ingest battery, Chemical Burn Hazard.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Battery Model : LR03

Battery Voltage / Typical Capacity : 1.5 V, 1200 mAh

Battery Manufacturer : TP Vision Europe B.V.

Prins Bernhardplein 200, 1097 JB Amsterdam,
The Netherlands



Please familiarize yourself with the local regulations regarding the separate collection of electrical and electronic products. It is important to follow these guidelines and avoid disposing of old products with regular household waste. Proper disposal helps prevent potential negative impacts on the environment and human health.

This product contains batteries that are subject to the European Regulation (EU) 2023/1542, which prohibits disposal with regular household waste. For more information, please visit our recycling page at
https://iiyama.com/gl_en/support/#recycling



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address:
<https://iiyama.com>



You can access the Web page of different countries from there.

TABLE OF CONTENTS

FOR YOUR SAFETY	1
SAFETY PRECAUTIONS	1
SPECIAL NOTES ON LCD MONITORS	3
CUSTOMER SERVICE	3
CLEANING	4
BEFORE YOU OPERATE THE MONITOR	5
FEATURES	5
CHECKING THE CONTENTS OF THE PACKAGE	5
INSTALLATION	6
FITTING AND REMOVAL OF BASE	7
CONTROLS AND CONNECTORS	8
FUNCTIONS OF THE REMOTE CONTROL	9
PREPARING THE REMOTE CONTROL	10
BASIC OPERATION	11
CONNECTING YOUR MONITOR	14
COMPUTER SETTING	16
ADJUSTING THE VIEWING ANGLE	16
OPERATING THE MONITOR	17
MENU CONTENTS	19
STANDBY FEATURE	31
TROUBLE SHOOTING	32
RECYCLING INFORMATION	33
APPENDIX	34
SPECIFICATIONS : ProLite X4373UHSU-B2	34
DIMENSIONS	35
COMPLIANT TIMING	35

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- Eprel registration number X4373UHSU-B2 : 2518811

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

CAUTION

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10cm (or 4 inches) from any walls. When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

Be careful not to hurt your fingers or hands when you change the angle.

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

FOR SINGLE USERS

This product is primarily intended for close viewing by a single user.

DO NOT USE ALCOHOL OR DISINFECTANTS ON THE MONITOR

Do not spray alcohol or disinfectants directly onto the monitor or use them near the monitor. Also, do not wipe the monitor with a cloth or sheet that contains alcohol or disinfectants. These may cause discoloration, deterioration, or cracking of the cabinet, damage to the surface treatment of the LCD panel, and deterioration of components.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

NOTE

- When you first turn on the LCD monitor, the picture may not fit in the monitor area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE

NOTE

If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

WARNING

- If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.
- For safety reasons, turn off the power switch and unplug the monitor before you clean it.

CAUTION

- Do not spray alcohol or disinfectants directly onto the monitor or use them near the monitor. Also, do not wipe the monitor with a cloth or sheet that contains alcohol or disinfectants. These may cause discoloration, deterioration, or cracking of the cabinet, damage to the surface treatment of the LCD panel, and deterioration of components.
- To avoid potential damage on the monitor (LCD panel / cabinet / connector terminals) or accessories, never use the following strong solvents or cleaning sheets. These may cause discoloration, deterioration, or cracking of the cabinet, damage to the surface treatment of the LCD panel, and deterioration of components.

Benzine	Hypochlorous acid water
Thinner	Acidic or alkaline solvents
Alcohol	Wax
Bleach	Abrasives
Peroxide	Office equipment cleaner
Acetone	Glass cleaner
Methylene chloride	Tissue paper
Toluene	Wet tissue
Ammonia	Chemical cloth
Sodium hypochlorite solution (Chlorine bleach)	Cleaning paper etc.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Do not leave the LCD panel wet. If water droplets or the like get on it, immediately wipe it off with a dry, soft cloth. Leaving it on may cause discoloration or stains on the LCD panel. In addition, if moisture gets inside the monitor, it may cause damage.
- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

Regular care Gently wipe the cabinet with a soft, dry and clean cloth. If your monitor is particularly dirty, soak the cloth in a mild detergent thoroughly diluted with water, wring it out tightly, and then wipe the dirt off. Then immediately wipe it with a soft, dry cloth.

Alcohol disinfection Alcohol disinfection may cause discoloration, deterioration, or cracking of the cabinet, damage to the surface treatment of the LCD panel, and deterioration of components. Instead, we recommend disinfecting your hands away from the monitor before and after use.

If you absolutely must disinfect the monitor with alcohol, please understand above warnings and cautions in advance. Also, avoid frequent alcohol disinfection.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- ◆ Supports Resolutions up to 3840 × 2160
- ◆ High Contrast 4000:1 (Typical), Adv. Contrast Function Available, Brightness 450cd/m² (Typical), Quick Respons Time 3ms (Gray to Gray)
- ◆ Dual Mode for 120Hz High Refresh Rate
- ◆ Flicker Free
- ◆ Blue Light Reducer
- ◆ Digital Character Smoothing
- ◆ USB Type-C Connectors
- ◆ USB Power Delivery supports up to 95W
- ◆ 2 × 7W Stereo Speakers
- ◆ Standby Feature
- ◆ VESA Mounting Standard (200mm×100mm) Compliant
- ◆ Keyhole for Security Lock

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

■ Power Cable *	■ HDMI Cable	■ DisplayPort Cable
■ USB Cable (Type-C-C)	■ USB Cable (Type-A-B)	■ Remote Control
■ Batteries (2pcs)	■ Headphone Hook	■ Stand-Base with a screw
■ Safety Guide	■ Quick Start Guide	

CAUTION * All guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.
An approved power cable greater or equal to H05VV-F, 3G, 0.75mm² must be used.

INSTALLATION


CAUTION

- Before installation, make sure the wall, ceiling or desktop arm is strong enough to hold the necessary weight of the monitor and the mount.
- Do not tilt the monitor too far downwards or upwards. The monitor may fall due to imbalance.
- Regularly check the tightness of the screws. If the screws are not tight enough, the monitor may come off and cause injury or damage.

< WALL MOUNTING >


CAUTION

When using a display arm or desk arm stand, consider the thickness of the VESA mounting bracket and use four M4×12mm screws to secure it to the monitor. Ensure all screws are tightened and secured properly. Using screws longer than this may cause electric shock or damage by contacting the electrical parts inside the monitor. For this product, the thickness of the VESA mounting bracket is assumed to be approx. 2.5mm.

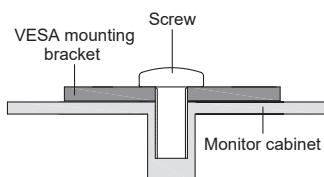

< LANDSCAPE MODE >

This monitor can only be used in landscape. Do not rotate or operate the monitor in any other orientation than landscape.

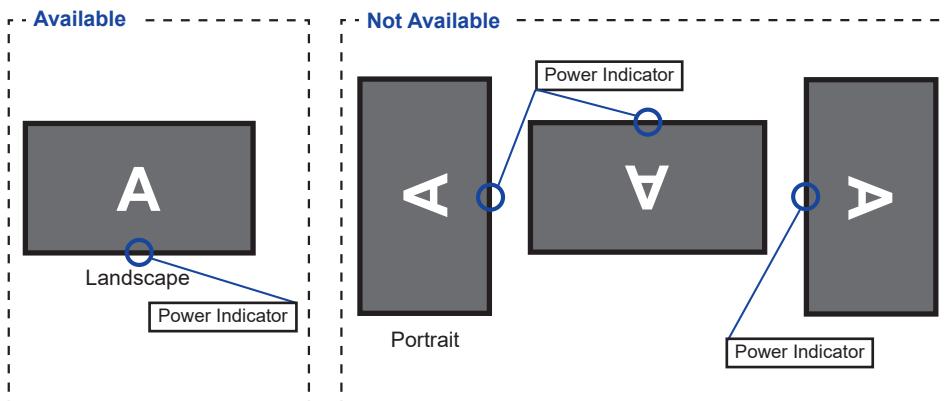


FITTING AND REMOVAL OF BASE

CAUTION

- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched.
Lay the monitor flat on a table with front face down.
- ② Install the Stand-Base as shown on below picture.
- ③ Tighten the thumb screw to secure the Stand-Base to the monitor.

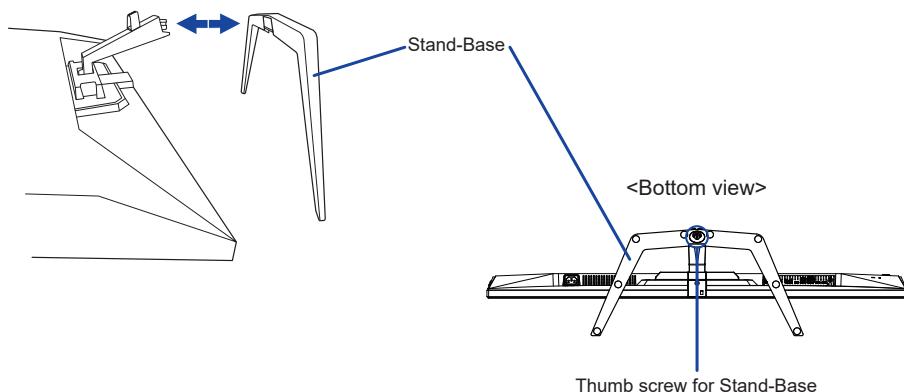


<Removal>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched.
Lay the monitor flat on a table with front face down.
- ② Loosen the thumb screw to remove the Stand-Base from the monitor.

CONTROLS AND CONNECTORS

ENGLISH

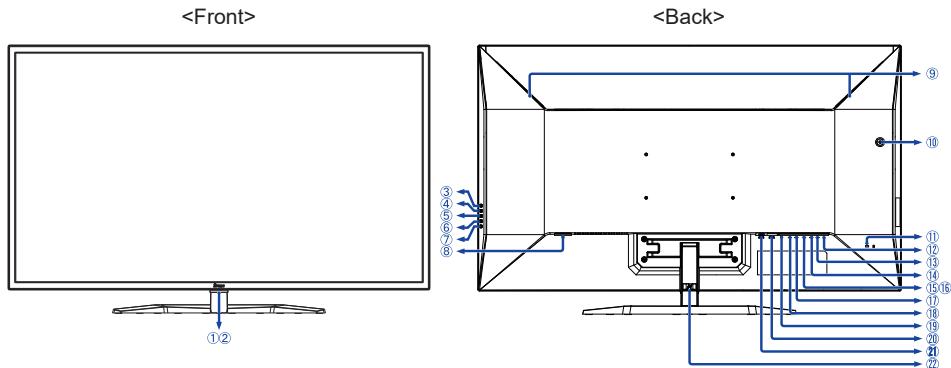

① Power Indicator

NOTE Blue: Normal operation
Orange: Standby mode

② Remote Sensor

③ Input Select Button (INPUT) **Direct**

④ + / Volume Button (+) **Direct**

⑤ - / Shortcut Button (-) **Shortcut**

⑥ Menu Button (MENU)

⑦ Power Button (⊖)

⑧ AC Connector (~ : Alternating current)

⑨ Speakers

⑩ Headphone Hook *

⑪ Keyhole for Security Lock (▲)

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.

⑫ Headphone Connector (Ω)

NOTE Proper operation of connected external devices other than headphones is not guaranteed.

⑬ USB Type-C Downstream Connector
(\sim USB3.2 Gen 1: 5Gbps, 5V, 1.0A)

⑭ USB Type-C Downstream Connector
(\sim USB3.2 Gen 1: 5Gbps, 5V, 1.0A)

⑮⑯ USB Type-A Downstream Connector
(\sim USB3.2 Gen 1: 5Gbps, 5V, 900mA)

⑰ USB Type-B Upstream Connector (\sim)

⑱ USB Type-C Upstream Connector
(\sim USB3.2 Gen 1: 5Gbps, 20V, 4.75A)

⑲ DisplayPort Connector (DP)


⑳ HDMI Connector (HDMI2)

㉑ HDMI Connector (HDMI1)

㉒ Cable Holder

* If necessary, attach the included Headphone Hook and turn to secure it.

FUNCTIONS OF THE REMOTE CONTROL

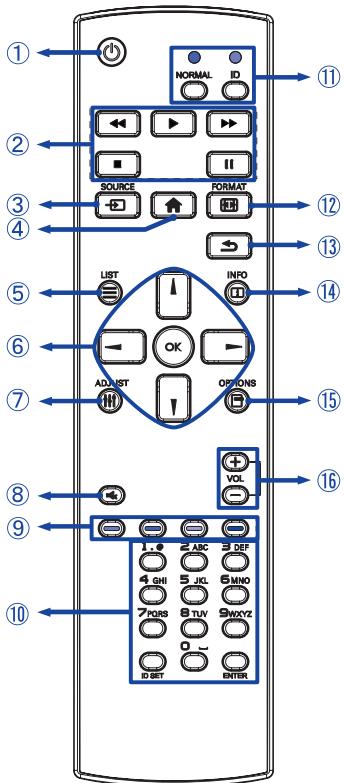

①	[POWER]	Turns the monitor ON and OFF.
②	[PLAY]	Not available on this model.
③	SOURCE	Selects the source. Press or to select from HDMI1, HDMI2, DP or USB-C. Press [OK] to confirm and exit.
④	[HOME]	Opens the monitor's on-screen menu systems.
⑤	LIST	Not available on this model.
⑥	[ADJUST]	Navigates through submenus and settings. : Up : Down : Left / Shortcut : Right / Volume
⑦	OK	Confirms your selection or save changes.
⑧	[MUTE]	Not available on this model.
⑨	[NUMBER] / ID SET / ENTER	Not available on this model.
⑩	NORMAL / ID	Not available on this model.
⑪	FORMAT	Open the Video Mode Adjust.
⑫	[BACK]	Returns to a previous menu or closes the OSD Menu.
⑬	INFO	Provides resolution information.
⑭	OPTIONS	Not available on this model.
⑮	VOL + / -	+ : Increases the sound volume. - : Decreases the sound volume.


PREPARING THE REMOTE CONTROL

To use the remote control, insert the two dry batteries.


CAUTION

Do not use any other batteries other than those specified in this manual for the Remote Control. Do not insert old and new batteries together in the Remote Control. Make sure that the terminals match the "+" and "-" indications in the battery compartment. Remove dead batteries immediately to prevent them from leaking into the battery compartment. Burst batteries or the electrolyte from these batteries may cause stains, fire or injury.


① Press and then slide the battery cover to open it.

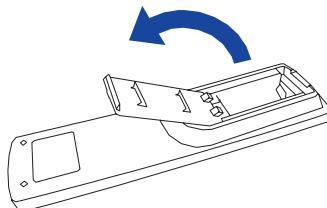

② Align and insert two AAA batteries according to their plus and minus ports (as indicated in the remote control).

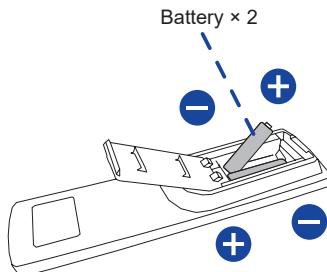

③ Replace the battery cover.

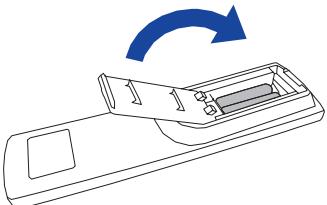

NOTE

- Refer to the above instructions when taking out the batteries.
- Replace with new batteries when the Remote Control does not work close to the monitor. Use AAA dry batteries. Risk of explosion if battery is replaced by an incorrect type.
- Operate the Remote Control by pointing it toward the Remote Sensor on the monitor.
- Other manufacturers remote control will not work with this monitor. Use the provided Remote Control ONLY.
- Used batteries needed to follow the local rules to be discarded. (Suggestion: to dispose of used batteries please follow correct policy as per your local regulations.)
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- If you do not intend to use the remote control for a long period, remove the batteries.


BASIC OPERATION

■ Turning the monitor ON


The monitor is turned On and the Power Indicator turns to Blue when you press the \odot Button on the remote control or the monitor. The monitor is turned Off and the Power Indicator turns to Orange when you press the \odot Button on the remote control or the monitor. Press again to turn On the monitor.

NOTE

Even when using the standby mode or turning Off the \odot Button, the monitor will consume a small amount of electricity. Disconnect the Power Cable from the power supply whenever the monitor is not in use or during the night, to avoid unnecessary power consumption.

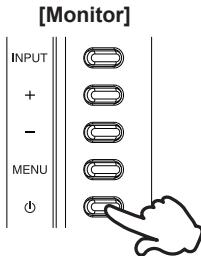


[Remote Control]

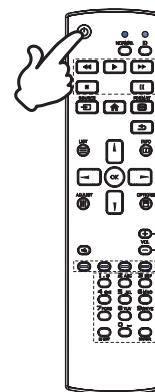


■ Display the adjustment menu page

The menu page appears on the screen when you press the \blacktriangle Button on the remote control or the MENU Button on the monitor.

The menu page disappears when you press the \blackleftarrow / \blacktriangleright Button on the remote control or the INPUT Button on the monitor.

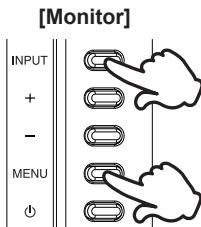


[Remote Control]

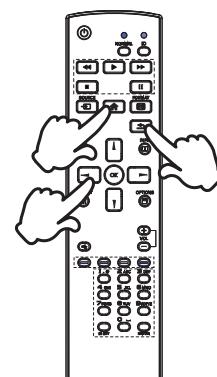


■ Move the cursor vertically

Select adjustment by pressing the **↑ / ↓** Buttons on the remote control or the **+** / **-** Buttons on the monitor while the menu page is displayed on the screen.

[Monitor]

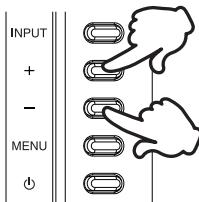


[Remote Control]

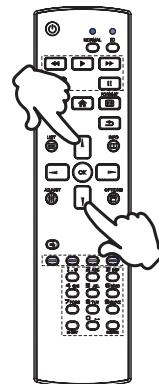


■ Move the cursor horizontally

Select menu or setting, or perform the adjustment by pressing the **← / →** Buttons on the remote control or the **+** / **-** Buttons on the monitor while the menu page is displayed on the screen.

[Monitor]

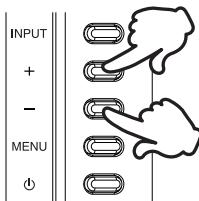


[Remote Control]

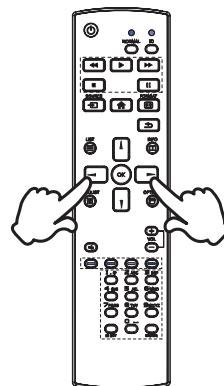


■ Adjust the volume of sound

Press the VOL+ / VOL- or ▶ Button on the remote control, or the + Button on the monitor to display the volume adjustment screen when the menu page is not displayed on the screen. Then adjust the volume using the VOL+ / VOL- or ▶ / ▶ Buttons on the remote control, or the + / - Buttons on the monitor.

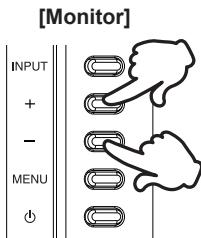


[Remote Control]

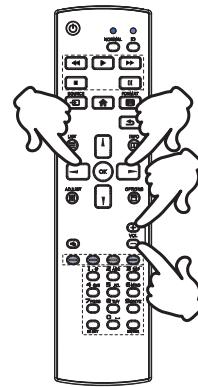


■ Switch the input signal

Press the SOURCE Button on the remote control or the INPUT Button on the Monitor when the menu is not displayed, it shows Input Select menu.

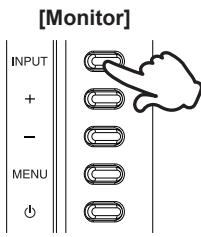

[Remote Control]

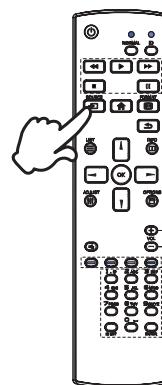

CONNECTING YOUR MONITOR

- ① Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Cable (Type-A-B).
- ④ Connect the computer to the monitor with the USB Cable (Type-C-C) when viewing images on your monitor through the USB Type-C Connector or when using the monitor's USB hub function.*
- ⑤ Connect the Power Cable to the monitor first and then to the power source.
- ⑥ Turn on your monitor and computer.


* ● When charging connected device via USB Type-C Upstream Connector, check if the device is equipped with a USB Type-C Connector that supports charging function via USB PD (=Power Delivery).

- Turn on the "USB Charge" function to allow connected device to be charged even when the monitor is in standby mode. See page 26 for USB Battery Charge (USB Charge) function.
- The USB PD is up to 95W. If the connected device required more than 95W for operation or for boot up (when the battery is drained), use the original power adapter that came with the device.
- If a separately purchased USB cable (Type-C-C) is used, make sure the cable is certified by USB-IF and is full-featured with power delivery and video / audio / data transfer functions.
- If the monitor is in standby mode, it will not display a picture automatically in the following situations:
 1. First boot of the PC
 2. When the PC is resuming from standby modeTo display a picture, press the INPUT Button. This behaviour is normal. To prevent this behaviour, please access the OSD menu and set "USB Charge" to "On".
- USB cable (Type-A-C) is not included with the monitor. If you use a USB cable (Type-A-C), please note that you can only transfer data.
- Compatibility with all connected devices is not guaranteed due to different user environments.

NOTE


- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]

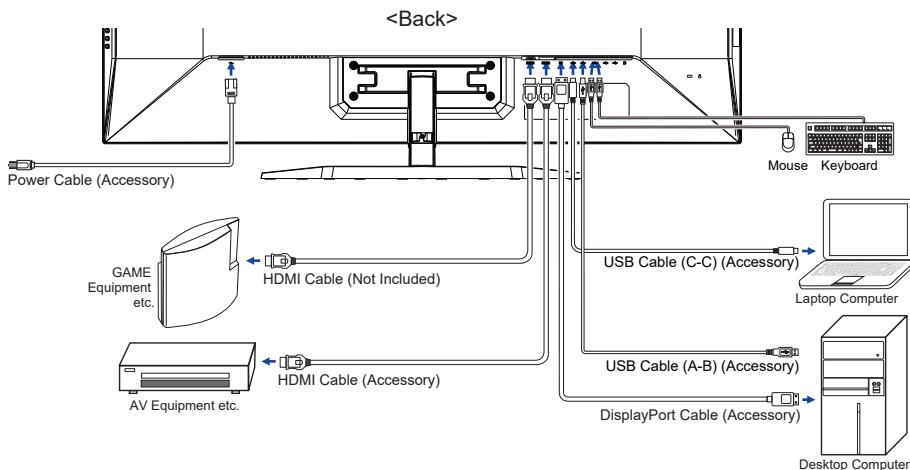

[Collect Cables]

Put the cables through the Cable Holder to bundle them.

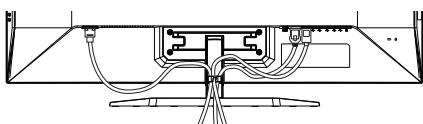

COMPUTER SETTING

■ Signal Timing


Change to the desired signal timing listed on page 35: COMPLIANT TIMING.

ADJUSTING THE VIEWING ANGLE

- For optimal viewing it is recommended to look at the full face of the monitor.
- Hold the stand so that the monitor does not topple when you change the monitor's angle.
- You are able to adjust the monitor's angle up to 10° upward, 2° downward.

NOTE

- Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
- Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the angle.

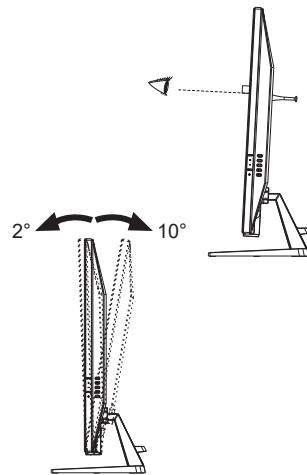

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 35. You are also able to adjust the picture by following the operation shown below.


- ① Press the **Home / OK** Button on the remote control or the **MENU** Button on the monitor to start the On Screen Display (OSD) feature. There are additional menu items which can be switched by using the **← / →** Buttons on the remote control or the **+/ -** Buttons on the monitor.



- ② Select the main menu icon related to your desired adjustment or setting. Press the **OK** Button on the remote control or the **MENU** Button on the monitor. Then, use the **↑ / ↓** Buttons on the remote control or the **+/ -** Buttons on the monitor to highlight the desired sub-menu.
- ③ Press the **OK** Button on the remote control or the **MENU** Button on the monitor again. Use the **← / →** Buttons on the remote control or the **+/ -** Buttons on the monitor to make the appropriate adjustment or setting.
- ④ Press the **OK** Button on the remote control or the **MENU** Button on the monitor, then the **← / →** Button on the remote control or the **INPUT** Button on the monitor to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for OSD vertical position, select **OSD** in the main menu and press the **OK** Button on the remote control or the **MENU** Button on the monitor. Then, select **OSD Vertical Position** by using the **↑ / ↓** Buttons on the remote control or the **+/ -** Buttons on the monitor.

An adjustment scale becomes active after you press the **OK** Button on the remote control or the **MENU** Button on the monitor. Then, use the **← / →** Buttons on the remote control or the **+/ -** Buttons on the monitor to change the OSD vertical position settings. The OSD vertical position should be changing accordingly while you are doing this.

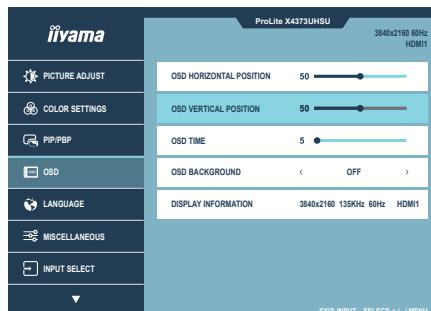


Press the **OK** Button on the remote control or the **MENU** Button on the monitor and press the **← / →** Button on the remote control or the **INPUT** Button on the monitor lastly, it ends, all changes are saved in the memory.

NOTE

- When Button operations are aborted during adjustment, On-Screen Display disappears when the time set for the **OSD Time** has passed. Also, the **◀ / ▶** Button on the remote control or the **INPUT** Button on the monitor can be used to return previous menu and turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.

MENU CONTENTS

Please understand in advance that changing some menu items may affect other adjustments or settings.

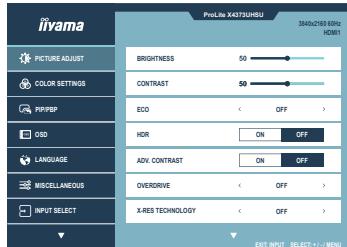
Picture Adjust		 Iiyama  PICTURE ADJUST  COLOR SETTINGS  PIPER  OSD  LANGUAGE  MISCELLANEOUS  INPUT SELECT				
Sub-menu	Problem / Option			Button to press		
Brightness * 	Too dark			 RC Monitor +		
	Too bright			 RC Monitor -		
Contrast	Too dull			 RC Monitor +		
	Too intense			 RC Monitor -		
ECO 	Off	Normal				
	Mode 1	Brightness of back-light is reduced.				
	Mode 2	Brightness of back-light is reduced more than Mode 1.				
	Mode 3	Brightness of back-light is reduced more than Mode 2.				
HDR	On	For HDR (High Dynamic Range) signal				
	Off	For normal signal				
Adv. Contrast	On	Increased contrast ratio				
	Off	Typical Contrast Ratio				
Overdrive 	Off / 1 / 2 / 3 / 4 / 5		 RC +			
	Improve the gray level response time of the LCD panel. A higher level results in a faster response time.		 RC -			
X-Res Technology	Off	Normal				
	Soft	Enhances the picture edge.				
	Middle	Enhances the picture edge more than the Soft option.				
	Hard	Enhances the picture edge more than the Middle option.				
Black Tuner	From -5 to +5 You can adjust dark shades.		 RC +			

* Adjust the brightness when you are using the monitor in a dark room and feel the screen is too bright.

Shortcut


You can shortcut to the specific menu by the following operations.

Press the **←** Button on the remote control or the **–** Button on the monitor with no menu displayed and select the desired menu.

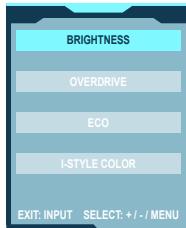



Color Settings

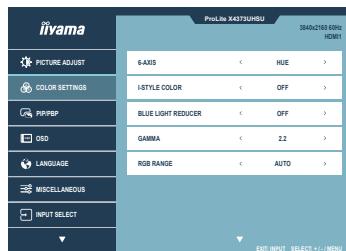

Sub-menu	Problem / Option		Button to press
6-Axis	Hue	Red	
		Yellow	
		Green	Too weak
		Cyan	Too strong
		Blue	
		Magenta	
	Saturat.	Red	
		Yellow	
		Green	Too weak
		Cyan	Too strong
		Blue	
		Magenta	
i-Style Color	Off	Returns to a state set by color adjustment except i-Style Color.	
	Standard	For general windows environment and monitor default setting	
	Game	For PC game environment	
	Cinema	For movie and video environment	
	Scenery	For displaying outdoor scenery images	
	Text	For text editing and viewing in a word processing environment	
Blue Light Reducer	Off	Normal	
	Mode 1	Blue light is reduced.	
	Mode 2	Blue light is reduced more than Mode 1.	
	Mode 3	Blue light is reduced more than Mode 2.	
Gamma	1.8	High contrast	
	2.2	Normal	
	2.6	Dark	
RGB Range	Auto	Automatically selects color scale signal.	
	Full	For full-range color scale signal	
	Limited	For limited color scale signal	



Color Settings

Sub-menu	Problem / Option		Button to press
Color Temperature	9300K	Cool color	
	6500K	Normal color	
	5000K	Warm color	
User Preset	Red	Too weak	
	Green	Too strong	
	Blue		

Shortcut


You can shortcut to the specific menu by the following operations.

Press the Button on the remote control or the Button on the monitor with no menu displayed and select the desired menu.






PIP/PBP

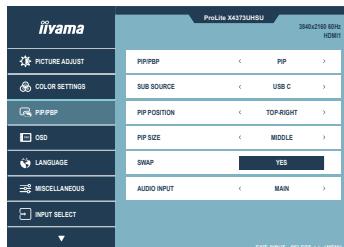

Sub-menu	Option	
PIP/PBP ^{*1}	Off	PIP/PBP function is turned off.
	PIP	Displays the sub screen in the main screen.
	PBP	Displays the main screen on the left and the sub screen on the right.
Sub Source	HDMI1	Selects the HDMI1 input for the sub screen.
	HDMI2	Selects the HDMI2 input for the sub screen.
	DisplayPort	Selects the DisplayPort input for the sub screen.
	USB C	Selects the USB Type-C input for the sub screen.
PIP Position ^{*2}	Top-Right	Moves the sub screen to the top right corner.
	Bottom-Right	Moves the sub screen to the bottom right corner.
	Top-Left	Moves the sub screen to the top left corner.
	Bottom-Left	Moves the sub screen to the bottom left corner.
PIP Size ^{*2}	Small	Reduces the size of the Sub screen.
	Middle	Normal size of the Sub screen
	Large	Increases the size of the Sub screen.
Swap	Yes	Swaps the main and sub screens instantly.
Audio Input	Main	Enables audio input from the main screen.
	Sub	Enables audio input from the sub screen.

*1 PIP = Picture in Picture, PBP = Picture by Picture


*2 Available only in **PIP** mode.

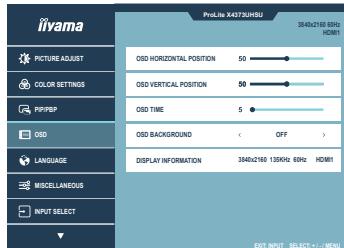 OSD


Sub-menu	Problem / Option	Button to press
OSD Horizontal Position	OSD is too left OSD is too right	 +  -
OSD Vertical Position	OSD is too low OSD is too high	 +  -
OSD Time	You can set the OSD display duration from 5 to 60 seconds.	 +  -
OSD Background	Makes the OSD background transparent. Off / 1 / 2 / 3 / 4	 +  -
Display Information	Displays the information regarding the current input signal coming from the graphic card in your computer.	
	NOTE See your graphics card user guide for more information about changing the resolution and refresh.	



Language

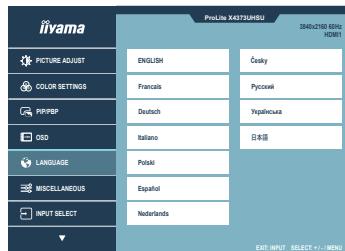


Option

English	English	Nederlands	Dutch
Français	French	Česky	Czech
Deutsch	German	Русский	Russian
Italiano	Italian	Українська	Ukrainian
Polski	Polish	日本語	Japanese
Español	Spanish		



Miscellaneous

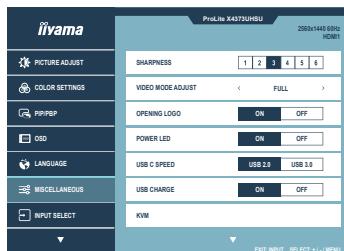

Sub-menu	Option		Button to press
Sharpness	1 / 2 / 3 / 4 / 5 / 6	You can change the picture quality from 1 to 6 (sharp to soft). Press the – / + Button to change the picture quality in numerical order. Press the – / – Button to change the picture quality in reverse numerical order.	
Video Mode Adjust *1	Full	Full screen display	
	Aspect *2	Expansion display of Aspect	
	Dot by Dot	Displays the picture dot by dot.	
Opening Logo	On	iiyama Logo is displayed when the monitor is turned on.	
	Off	iiyama Logo is not displayed when the monitor is turned on.	
Power LED	On	The Power Indicator is turned On.	
	Off	The Power Indicator is turned Off.	

NOTE Turn Off the Power Indicator when you are bothered by the light.

USB C Speed	USB 2.0	Selects the data transfer speed when connecting via USB Type-C.
	USB 3.0	
USB Charge	On	USB devices can be charged even when the monitor is in the standby mode.
	Off	USB devices can not be charged when the monitor is in the standby mode.

NOTE When the monitor is turned off, USB devices cannot be charged even if the USB Charge function is On.

KVM	HDMI1	USB-B	Two computers connected to one monitor's USB Upstream Connectors can share the keyboard and mouse connected to that monitor. USB-B: Links the input source with USB Type-B Upstream Connector. USB-C: Links the input source with USB Type-C Upstream Connector.
		USB-C	
	HDMI2	USB-B	
		USB-C	
	DisplayPort	USB-B	
		USB-C	
	USB C	USB-B	
		USB-C	


*¹ Effective only when the display resolution is less than 3840 × 2160.

*² Effective when the display resolution is 4:3, 5:4 or 16:10.



Miscellaneous

Sub-menu	Option	
DDC/CI Control	On	Enables the computer to control the monitor using DDC/CI-compatible software.
	Off	Disables DDC/CI Control.
Dual Mode	On	Achieves FHD 120Hz high refresh rate.
	Off	Dual Mode is disabled, enabling selection of UHD 60Hz native resolution.

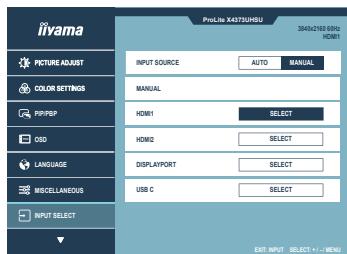Input Select		 ProLite X4373UHSU 3840x2160 60Hz HDMI1	
Direct		 INPUT SOURCE: AUTO, MANUAL MANUAL HDMI1: SELECT HDMI2: SELECT DISPLAYPORT: SELECT USB C: SELECT EXIT: INPUT SELECT: + / - / MENU	
Sub-menu		Option	
Input Source	Auto	Search for an available input source and select automatically.	
	Manual	HDMI1	Select the HDMI1 input.
		HDMI2	Select the HDMI2 input.
		DisplayPort	Select the DisplayPort input.
		USB C	Select the USB Type-C input.

NOTE Auto option enables automatic selection of the input sources available. The input source from the computer in standby mode can not be selected. If you manually select one of the input sources, the other source is not automatically selected.


Direct

- Input Select: Pressing the  SOURCE Button on the remote control or the INPUT Button on the monitor with no menu displayed will directly show the Input Select screen.






Audio Settings

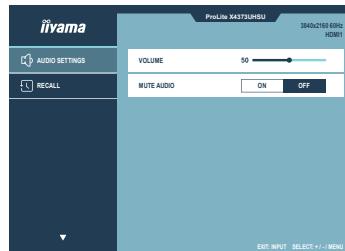


Sub-menu	Problem / Option		Button to press
Volume	Direct	Too soft	
		Too loud	
Mute Audio	On	Turn off the sound temporarily.	
	Off	Return the sound volume to the previous level.	

Direct

- Volume: Pressing the or VOL + / - Button on the remote control or the + Button on the monitor with no menu displayed will directly show the Volume adjustment screen.

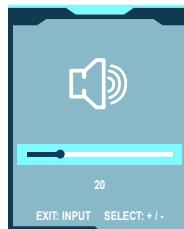

Recall

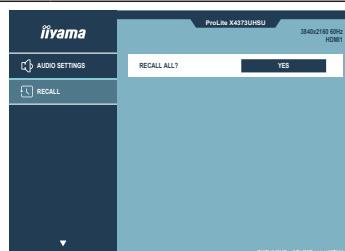

Sub-menu	Option	
Recall All?	Yes	Factory-preset data is restored.

■ Lock Mode

< OSD >

The OSD can be locked to avoid an accidental setting change.

When the monitor is off, turning it on while pressing the MENU button on the monitor will lock or unlock the OSD.

< Power Button / OSD >

The Power Button and the OSD can be locked simultaneously to avoid an accidental power operation or setting change.

When the menu is not displayed, keep pressing the MENU Button on the monitor for 10 seconds will lock or unlock the Power Button and the OSD.


STANDBY FEATURE

This product features the standby function. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

■ Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

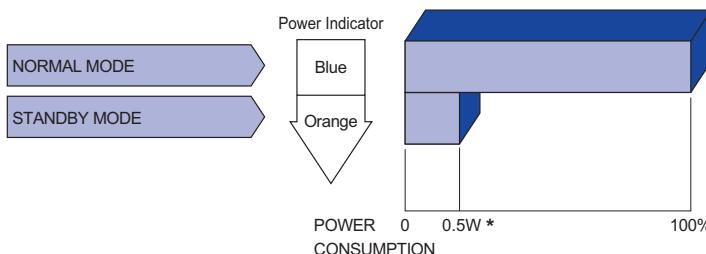

* When the USB devices are not connected.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem	Check
① The picture does not appear.	
(Power indicator does not light up.)	<input type="checkbox"/> The Power Cable is firmly seated in the socket. <input type="checkbox"/> The Power Button is turned ON. <input type="checkbox"/> The AC socket is live. Please check with another piece of equipment.
(Power indicator is blue.)	<input type="checkbox"/> If the blank screen saver is in active mode, touch the keyboard or the mouse. <input type="checkbox"/> Increase the Contrast and/or Brightness. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
(Power indicator is orange.)	<input type="checkbox"/> If the monitor is in standby mode, touch the keyboard or the mouse. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
② The screen is not synchronized.	<input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
③ The screen position is not in the center.	<input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
④ The screen is too bright or too dark.	<input type="checkbox"/> The video output level of the computer is within the specification of the monitor.
⑤ The screen is shaking.	<input type="checkbox"/> The power voltage is within the specification of the monitor. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
⑥ No sound.	<input type="checkbox"/> The audio equipment (computer etc.) is ON. <input type="checkbox"/> The Volume is turned up. <input type="checkbox"/> The Mute is OFF. <input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.
⑦ The sound is too loud or too quiet.	<input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor.
Please visit our web site: <https://iiyama.com> for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : ProLite X4373UHSU-B2


Size Category	43"
LCD Panel	Panel technology
	Size
	Pixel pitch
	Brightness
	Contrast ratio
	Viewable angle
	Response time ^{*1}
Display Colors	Approx. 1.07 Billion
Sync Frequency	Horizontal: 30.0-135.0kHz, Vertical: 30-75Hz (Dual Mode – Horizontal: 30.0-140.0kHz, Vertical: 30-120Hz)
Native Resolution	3840 × 2160, 8.2 MegaPixels
Support max. resolution	HDMI: 3840 × 2160 60Hz (Dual Mode – 1920 × 1080 120Hz) DisplayPort: 3840 × 2160 60Hz (Dual Mode – 1920 × 1080 120Hz) USB Type-C: DP Alt mode 3840 × 2160 60Hz (Dual Mode – 1920 × 1080 120Hz)
Input Connector	HDMI × 2, DisplayPort × 1, USB Type-B × 1, USB Type-C × 1
Input Video Signal	HDMI, DisplayPort, USB Type-C (DP Alt mode)
USB Standard	USB3.2 Gen 1 (5Gbps)
Number of USB Ports	2 Upstream: Type-B, Type-C
Connector shape	4 Downstream: Type-A (DC5V, 900mA) × 2, Type-C (DC5V, 1.0A) × 2
Headphone Connector ^{*2}	ø 3.5mm mini jack (Stereo)
Speakers	7W × 2 (Stereo speakers)
Maximum Screen Size	941.18mm W × 529.42mm H / 37.1" W × 20.8" H
Power Source	100-240VAC, 50/60Hz, 2.5A
Power Consumption ^{*3}	41W (Default / Energy Saving) Standby mode: 0.5W maximum, Off mode: 0.3W maximum
Dimensions	977.5 × 621.5 × 253.5mm / 38.5 × 24.5 × 10.0" (W×H×D)
Net Weight	14.7kg / 32.4lbs
Tilt Angle	Upward: 10°, Downward: 2°
Environmental Considerations	Operating: Temperature 5 to 35°C / 41 to 95°F Humidity 10 to 80% (No condensation)
	Storage: Temperature -20 to 60°C / -4 to 140°F Humidity 10 to 90% (No condensation)
Approvals	CE, UKCA, TÜV-Bauart, EAC, VCCI

^{*1} When **Overdrive** is set to 5.

^{*2} Proper operation of connected external devices other than headphones is not guaranteed.

^{*3} When the USB devices are not connected.

DIMENSIONS

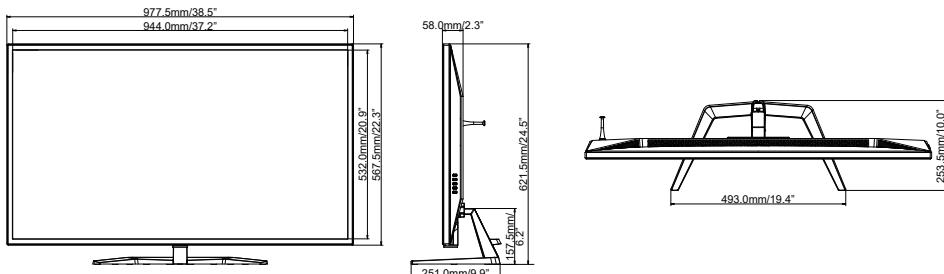

ENGLISH

COMPLIANT TIMING

Video Mode	Horizontal Frequency	Vertical Frequency	Dot Clock	Default	PBP On	Dual Mode On
800 × 600	37.879kHz	60.317Hz	40.000MHz	✓	✓	✓
	46.875kHz	75.000Hz	49.500MHz	✓	—	✓
1024 × 768	48.363kHz	60.004Hz	65.000MHz	✓	✓	✓
	60.023kHz	75.029Hz	78.750MHz	✓	—	✓
1280 × 1024	63.981kHz	60.020Hz	108.000MHz	✓	✓	✓
	79.976kHz	75.025Hz	135.000MHz	✓	—	✓
1680 × 1050	65.290kHz	60.000Hz	146.250MHz	✓	✓	✓
	66.590kHz	59.930Hz	138.500MHz	✓	✓	✓
1920 × 1080	87.894kHz	74.995Hz	182.820MHz	—	—	✓
	137.260kHz	119.982Hz	285.500MHz	—	—	✓
2560 × 1440	88.787kHz	59.951Hz	241.500MHz	✓	✓	—
1920 × 2160	133.318kHz	59.999Hz	293.300MHz	—	✓	—
3840 × 2160	65.688kHz	29.981Hz	262.750MHz	✓	—	—
	133.313kHz	59.997Hz	533.250MHz	✓	✓	—