



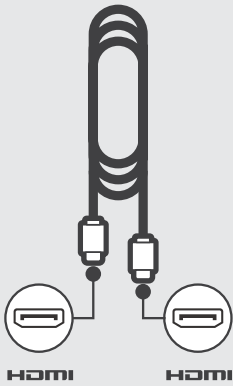


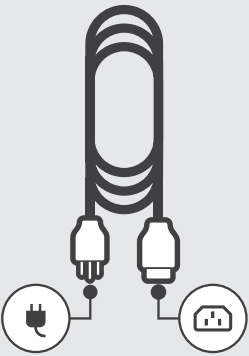




Moniteur Dell Pro 27
E2726DS/E2726HS
Guide de démarrage rapide

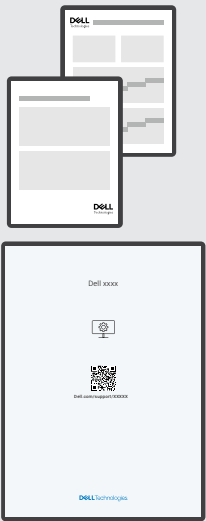


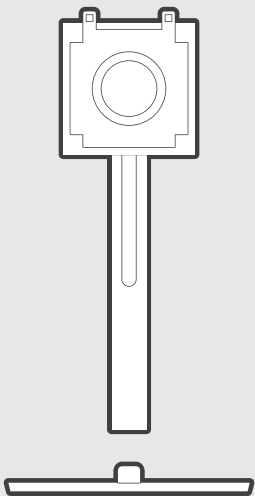


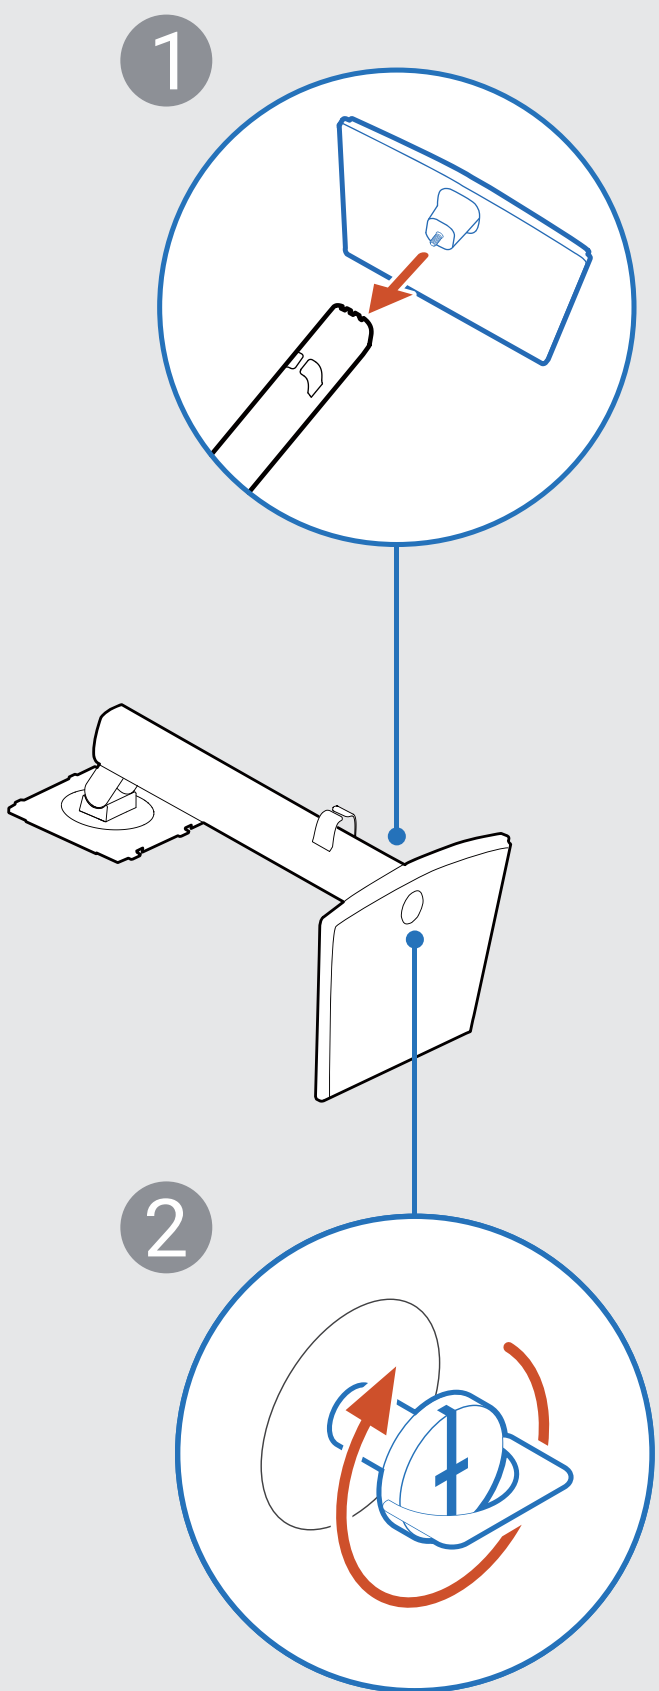


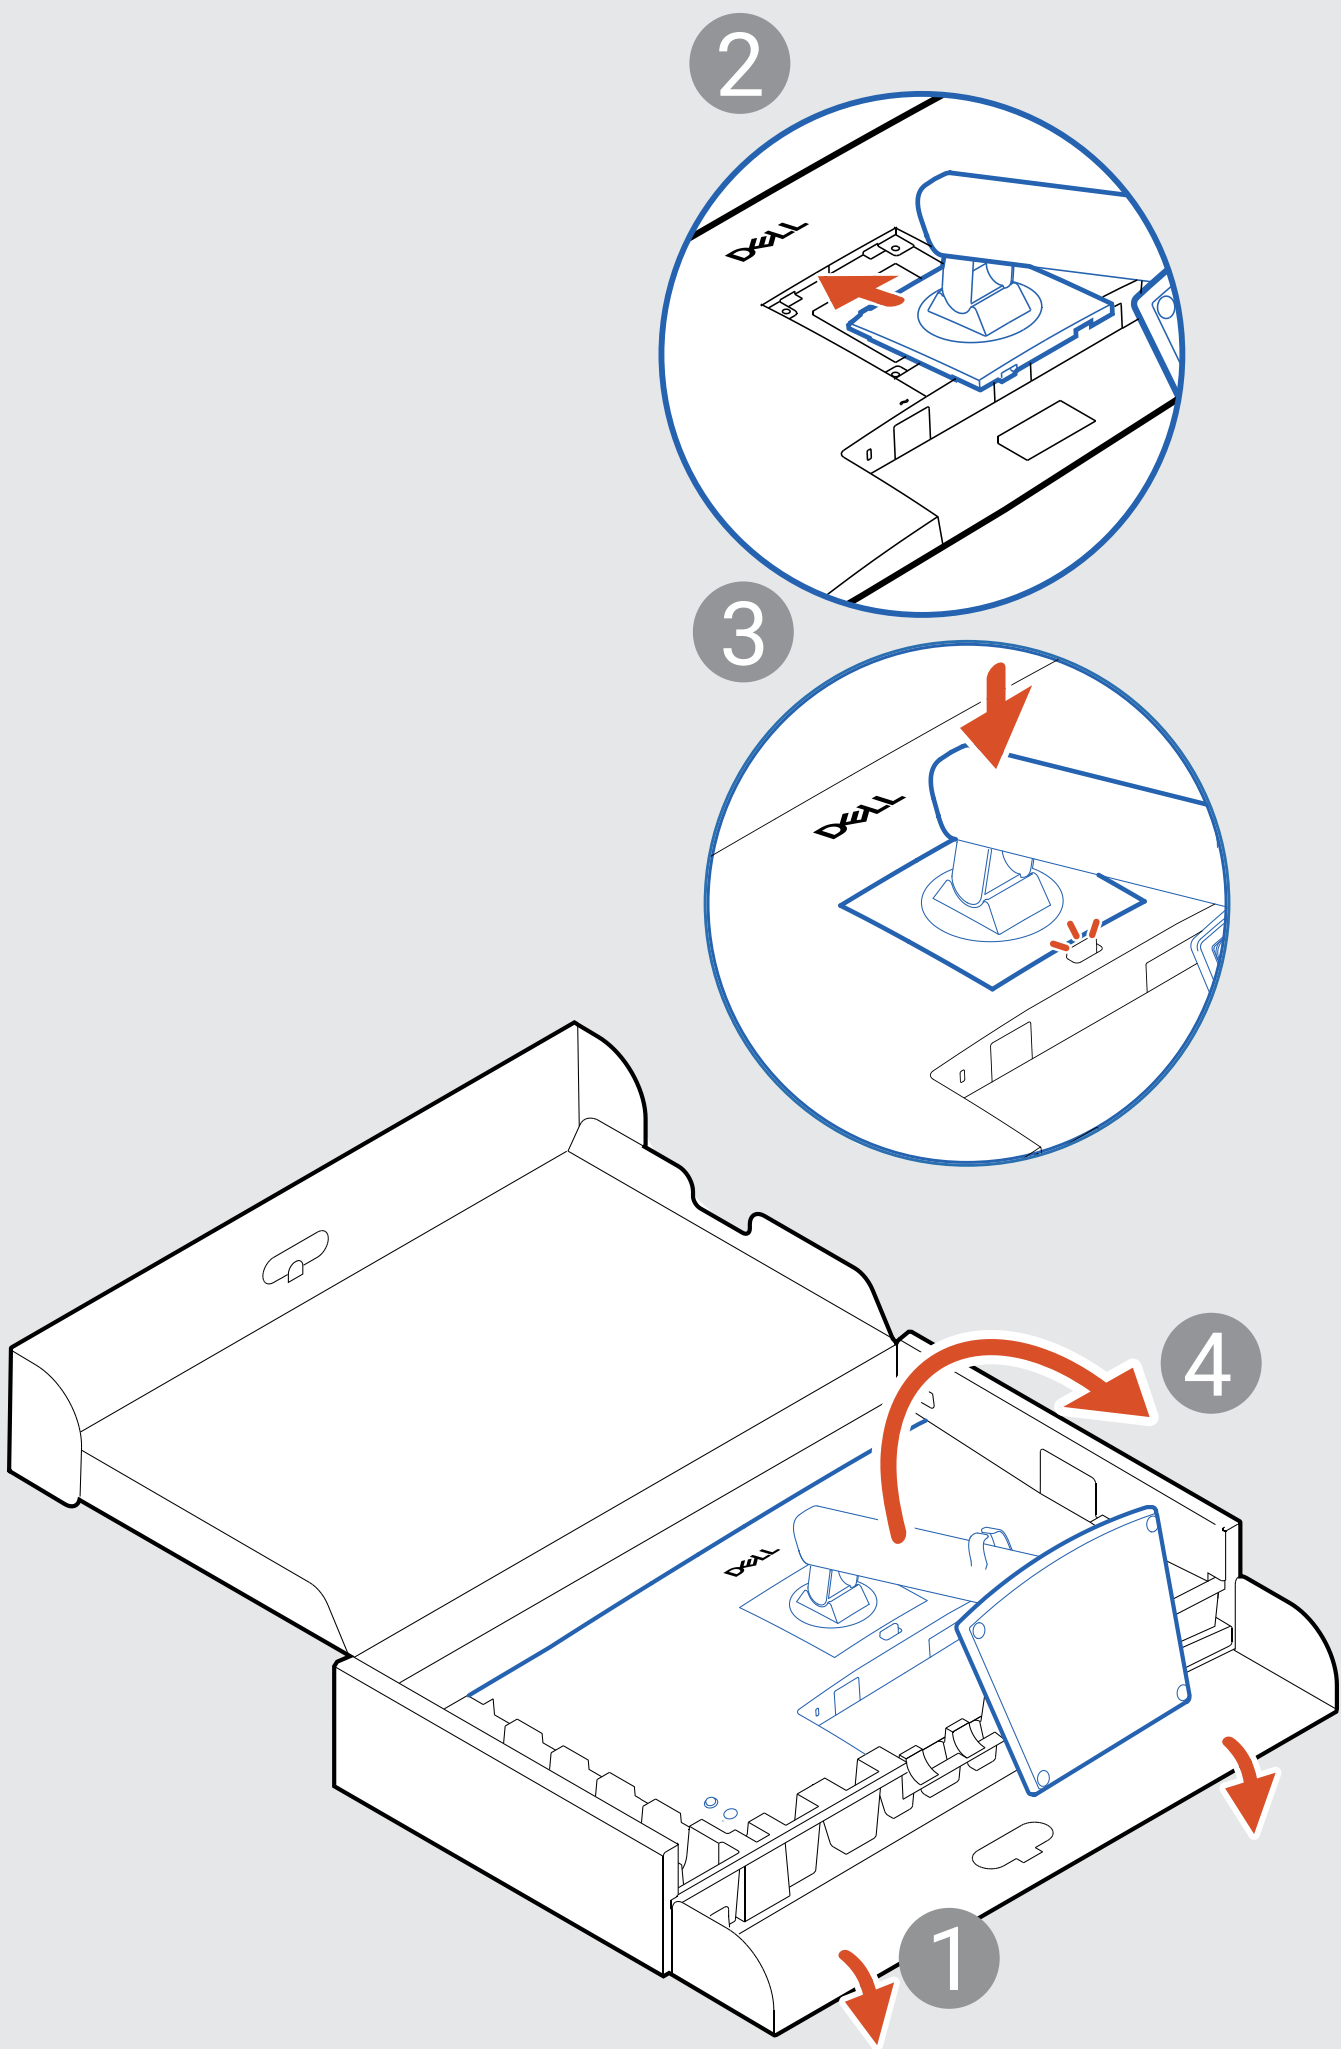


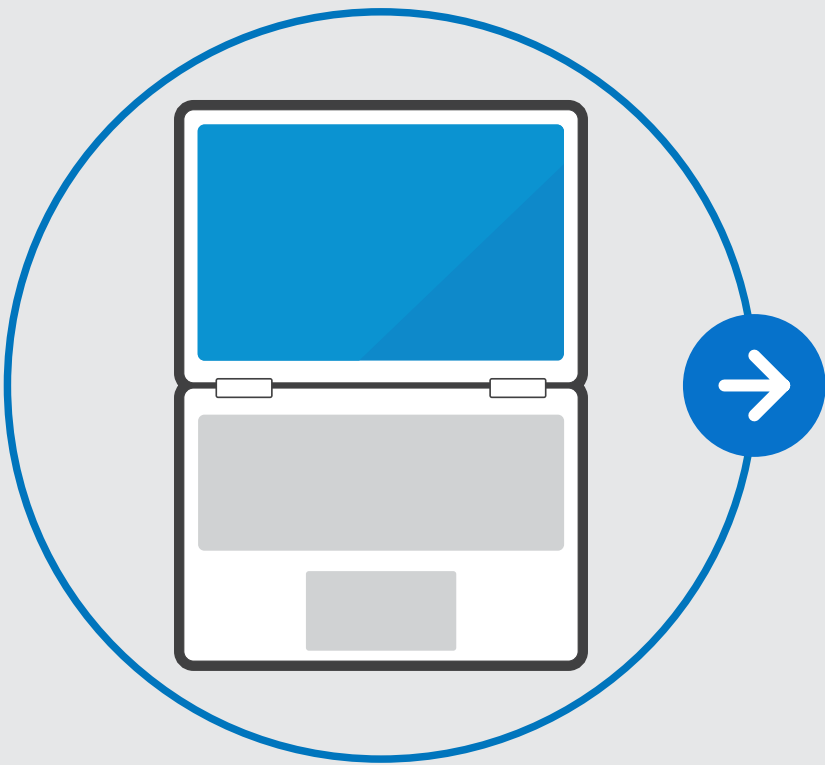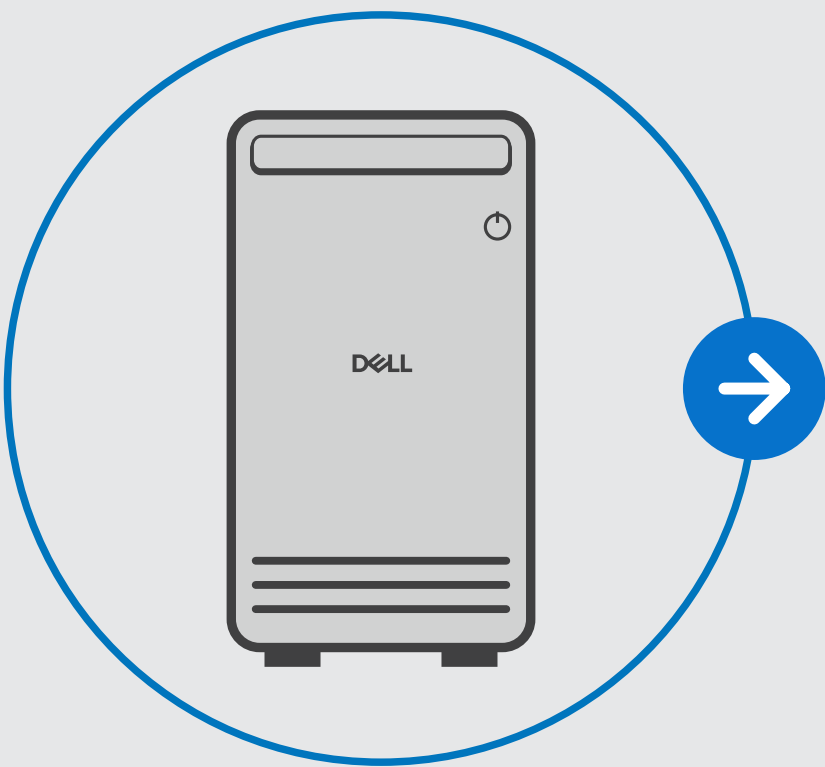

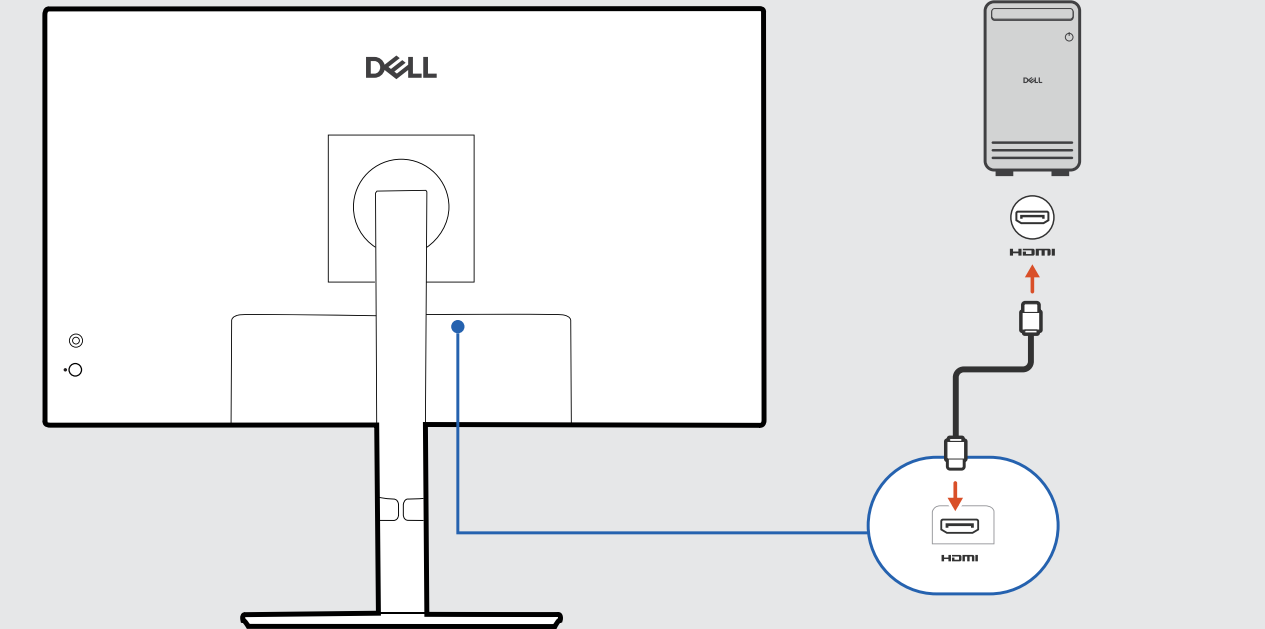


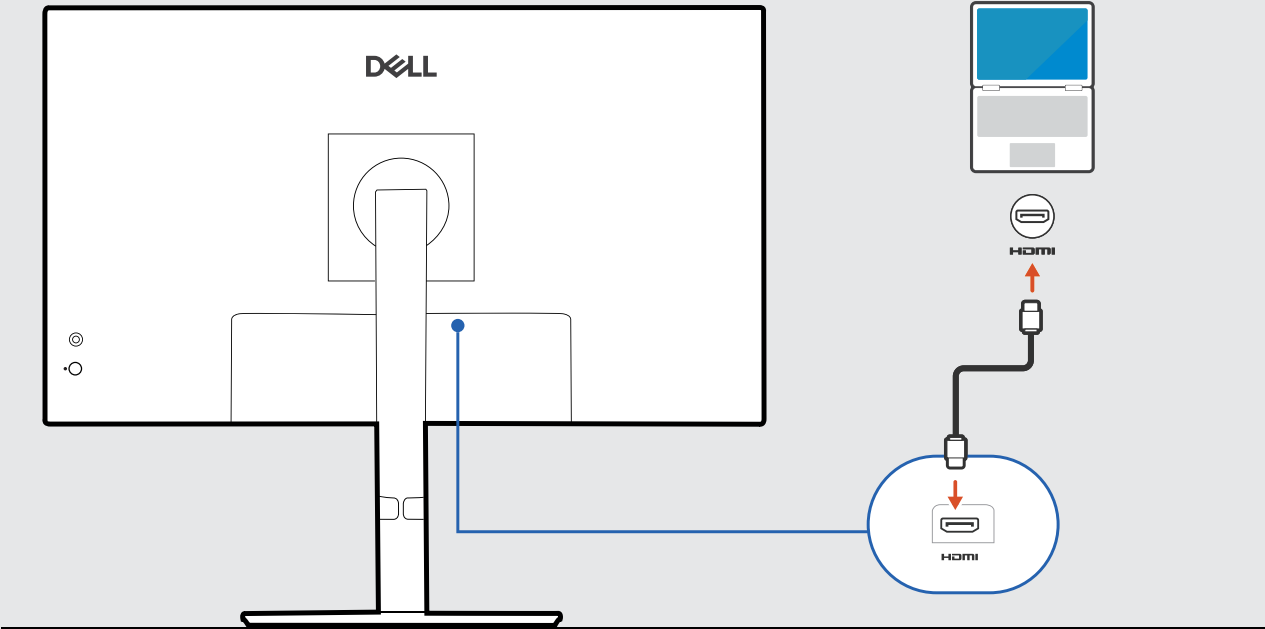

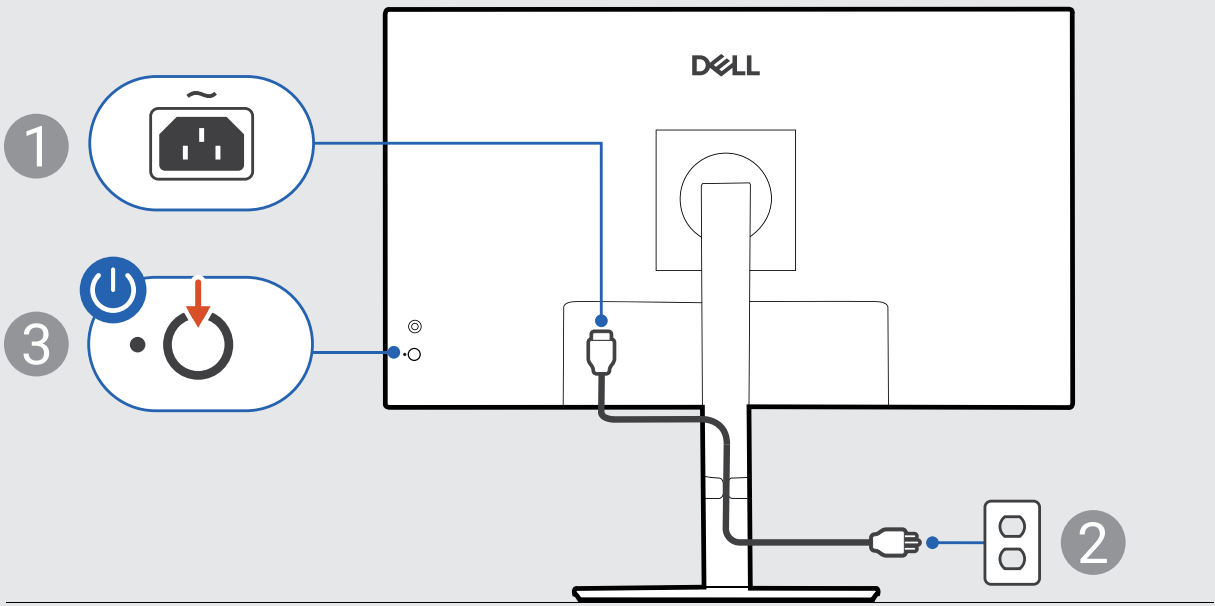


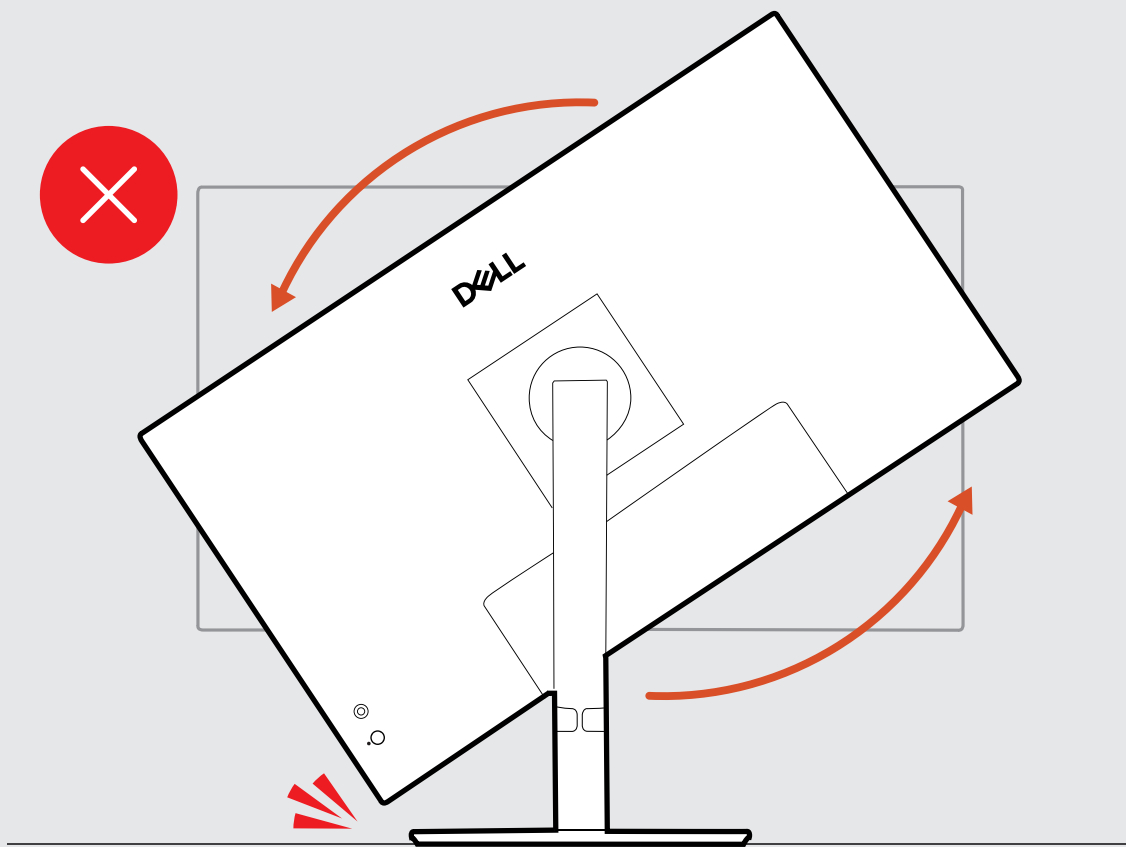



1

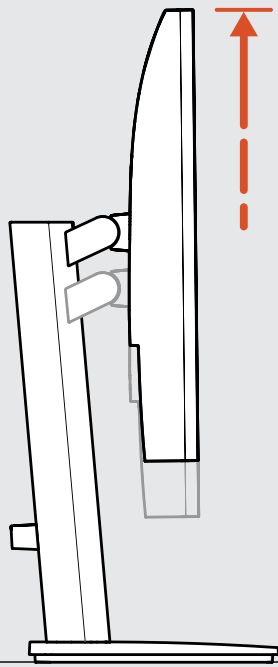


2

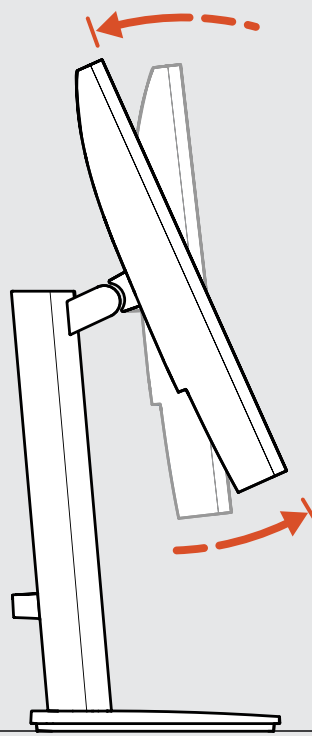


3

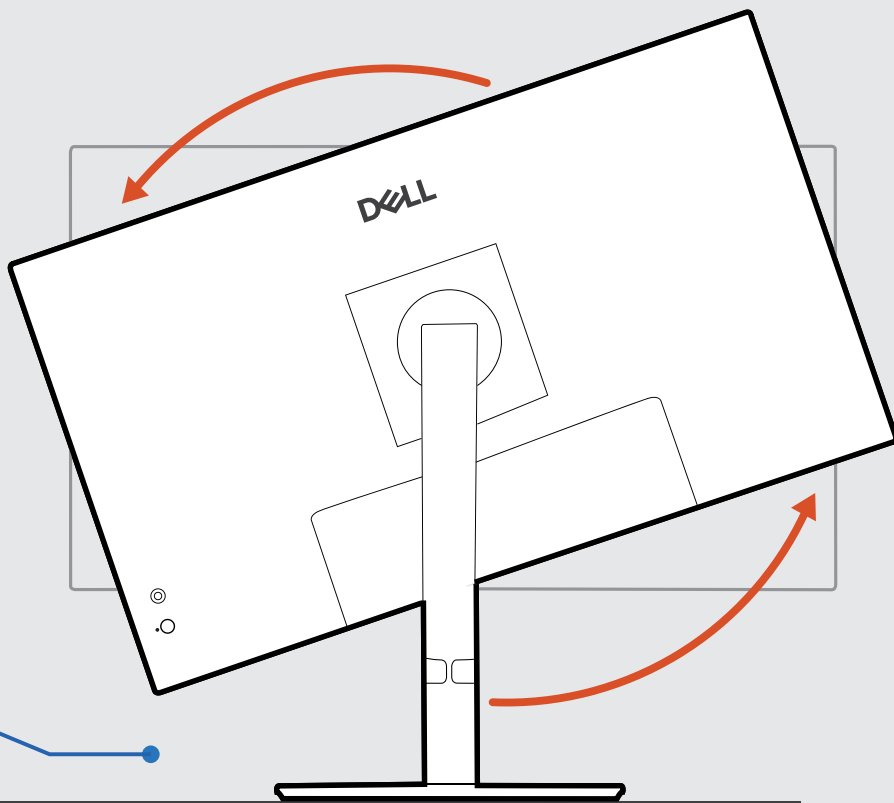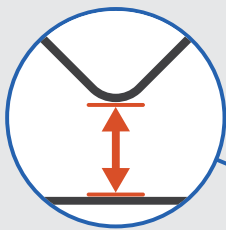

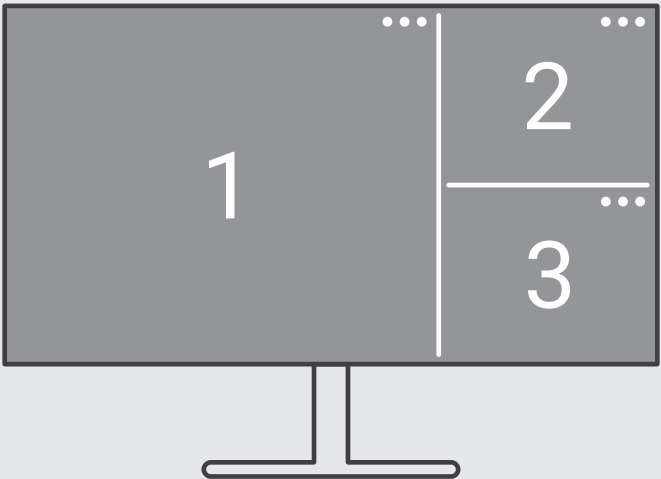

Dell Display and Peripheral Manager
Dell.com/support/ddpm

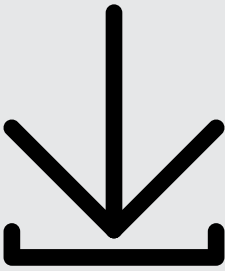

Dell.com/support/E2726DS
Dell.com/support/E2726HS