


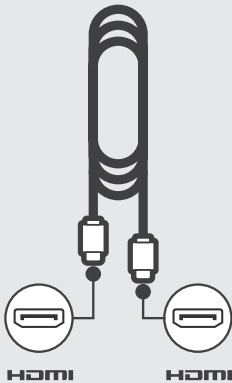


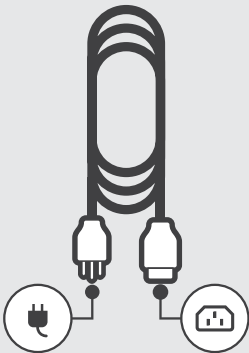



Monitor Dell Pro 27
E2726DS/E2726HS



Guía de inicio rápido

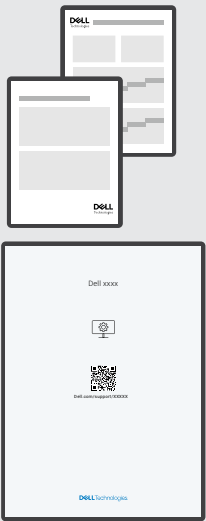


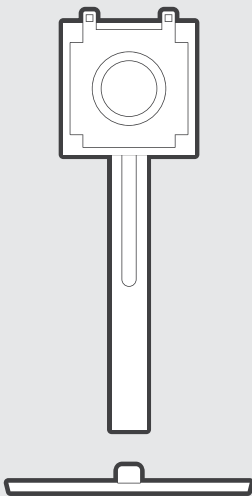

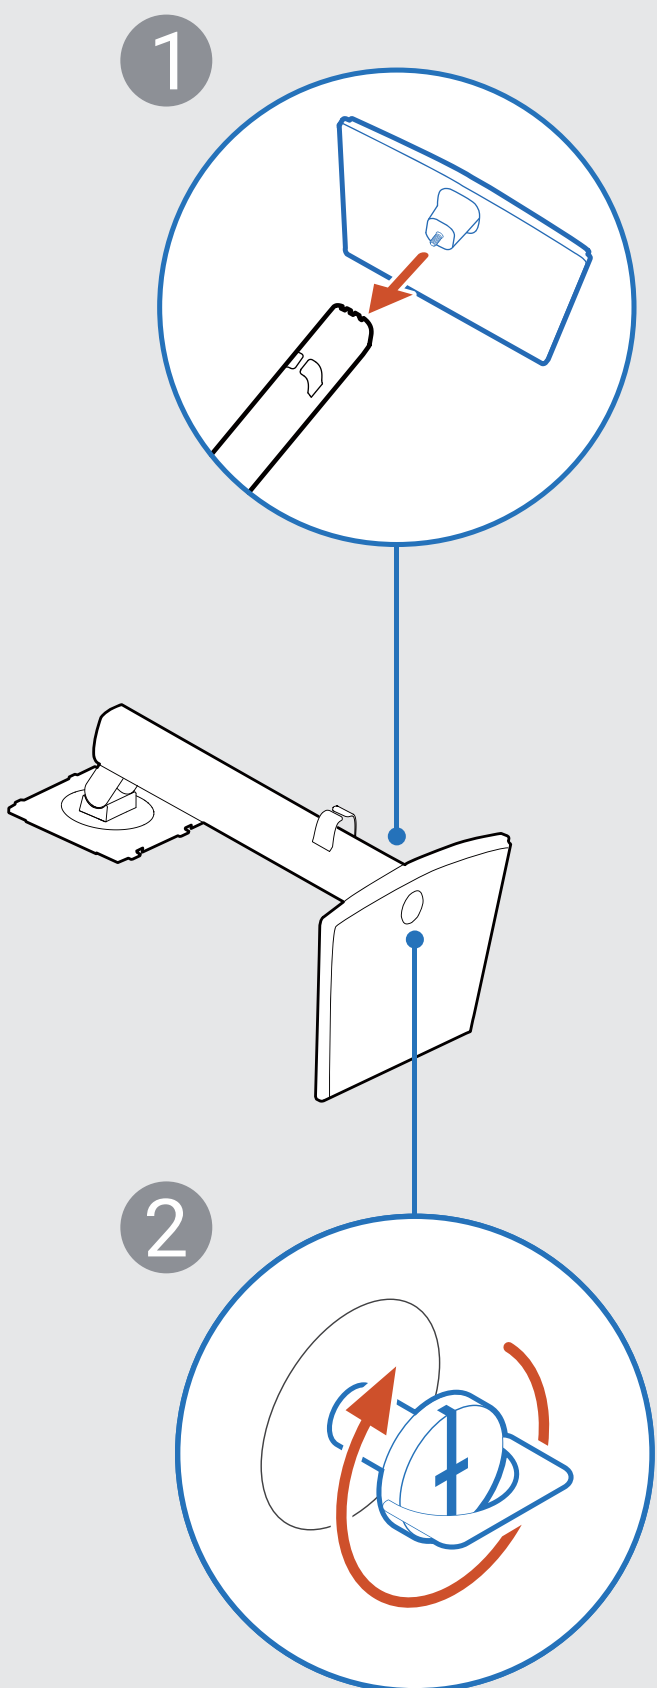


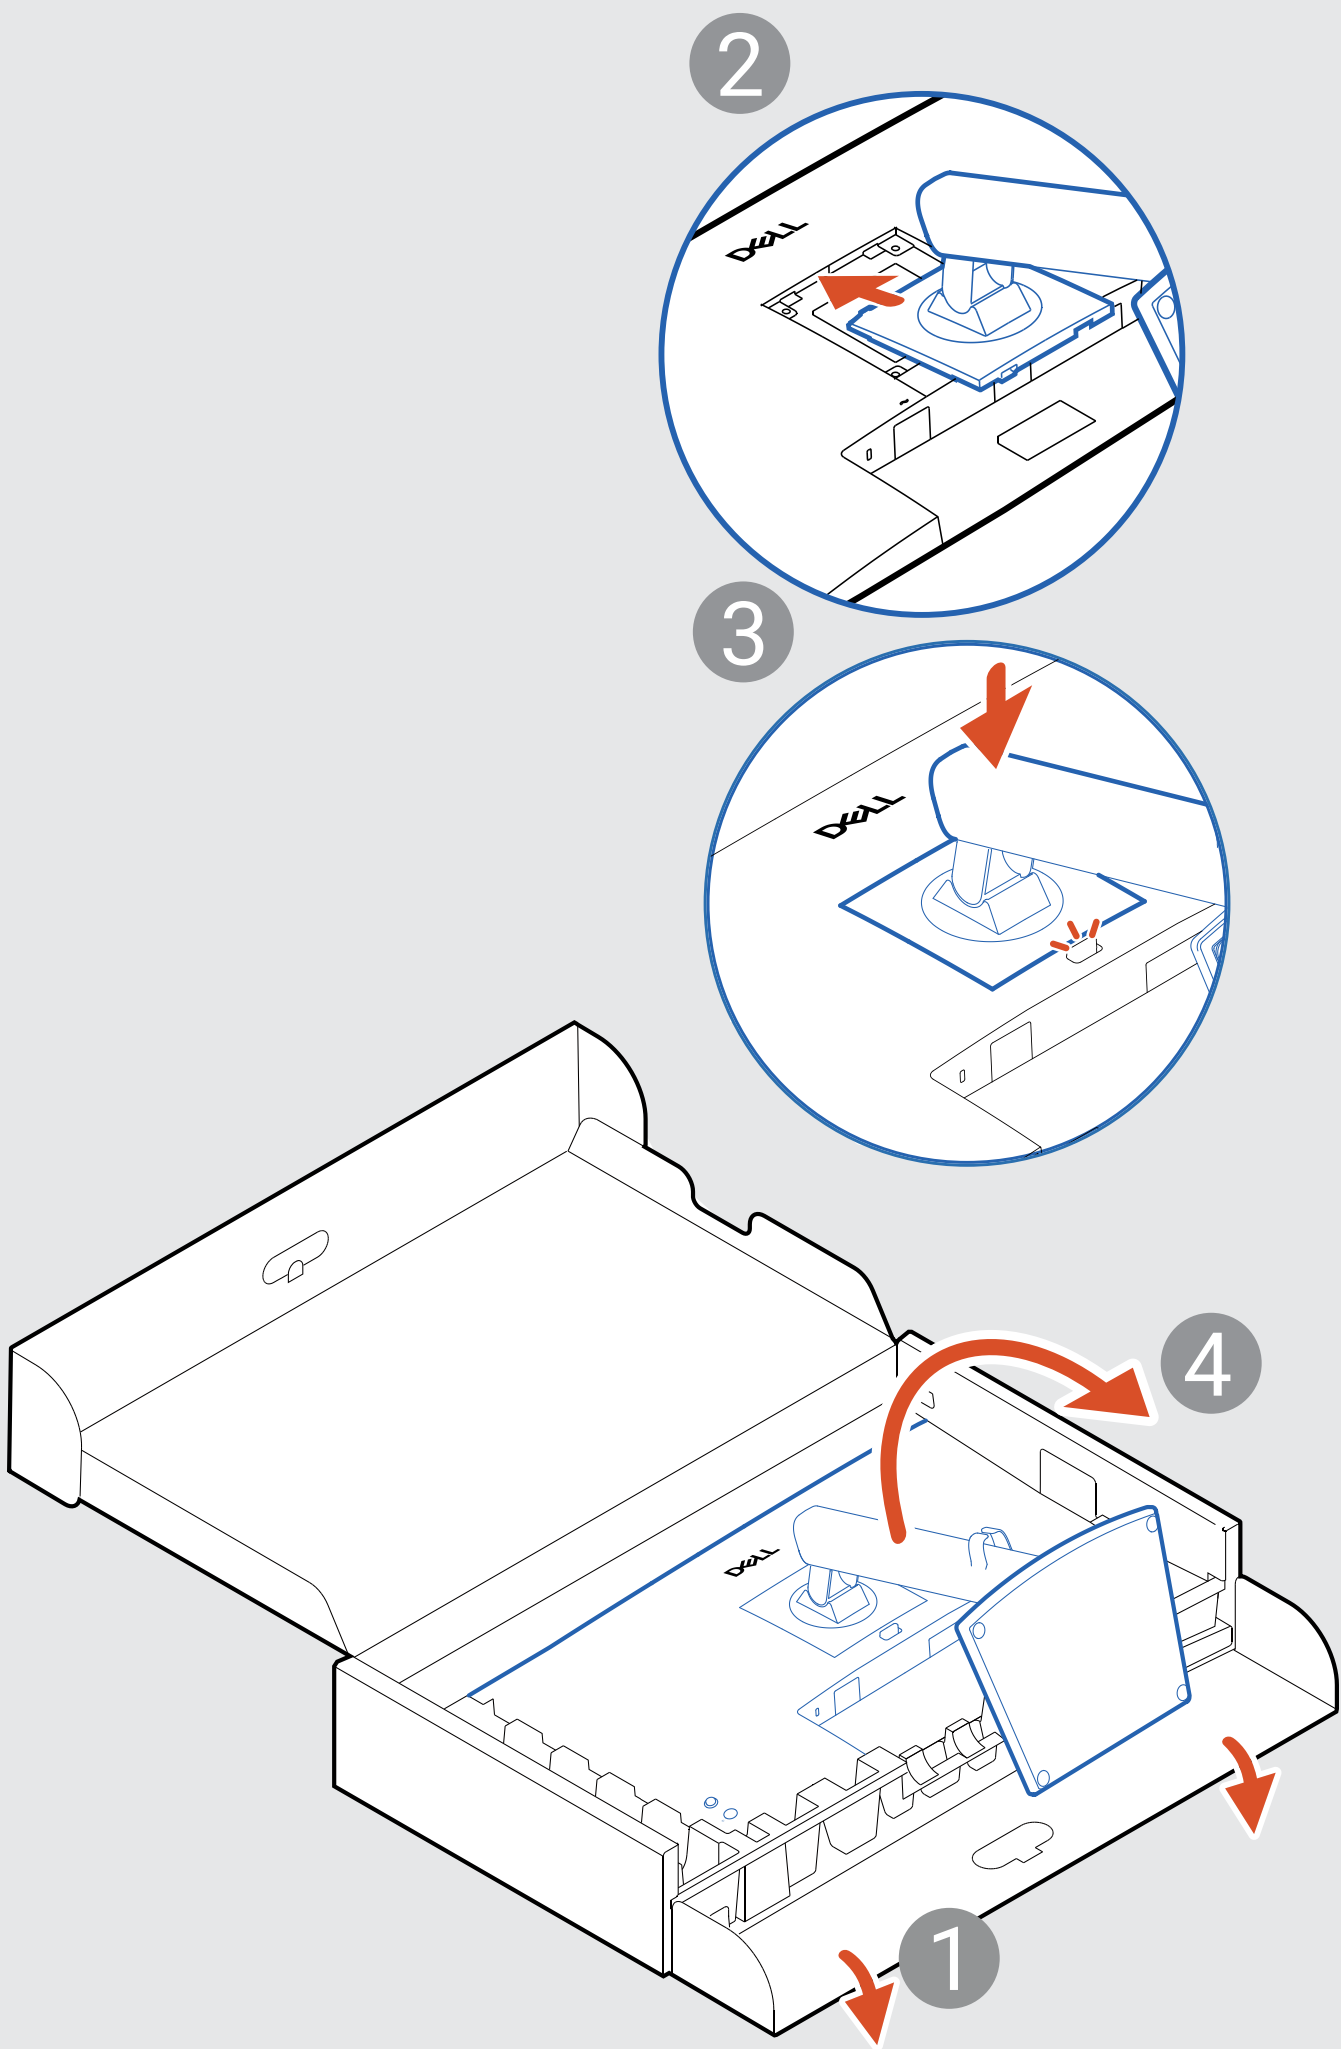


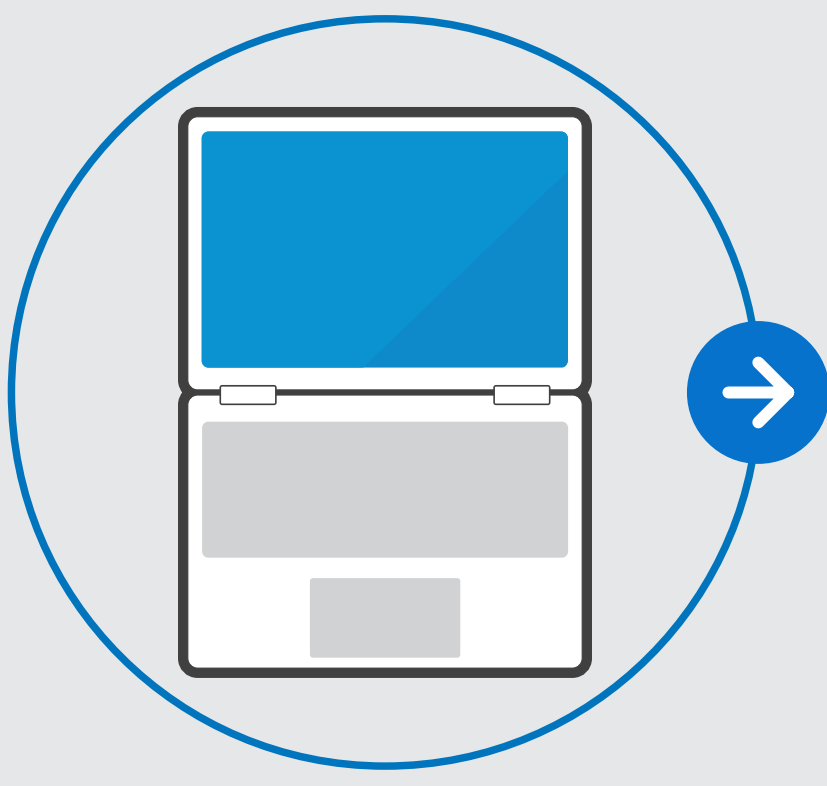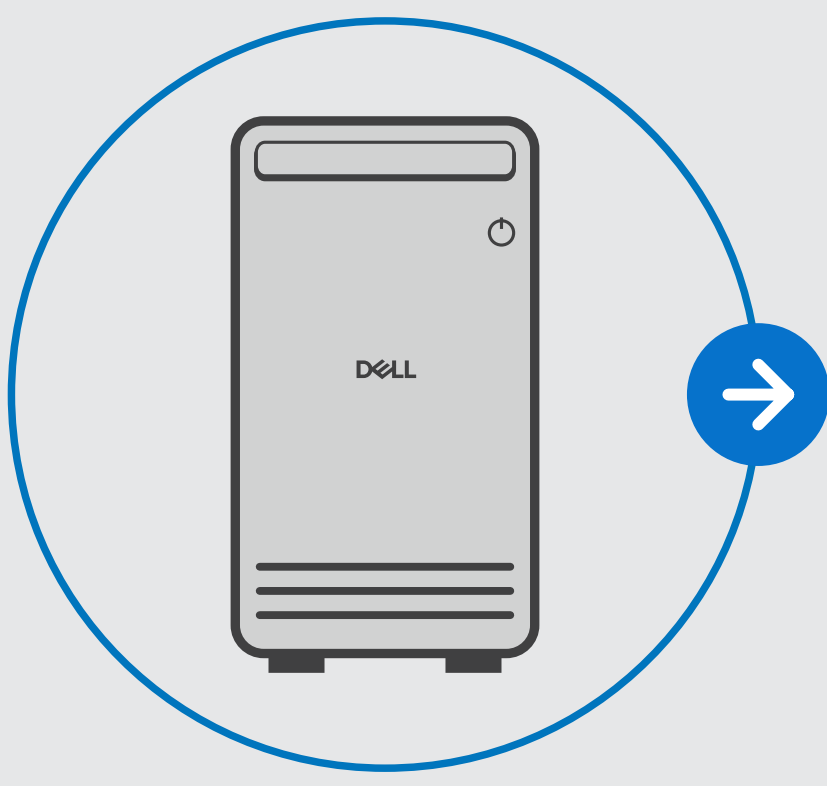

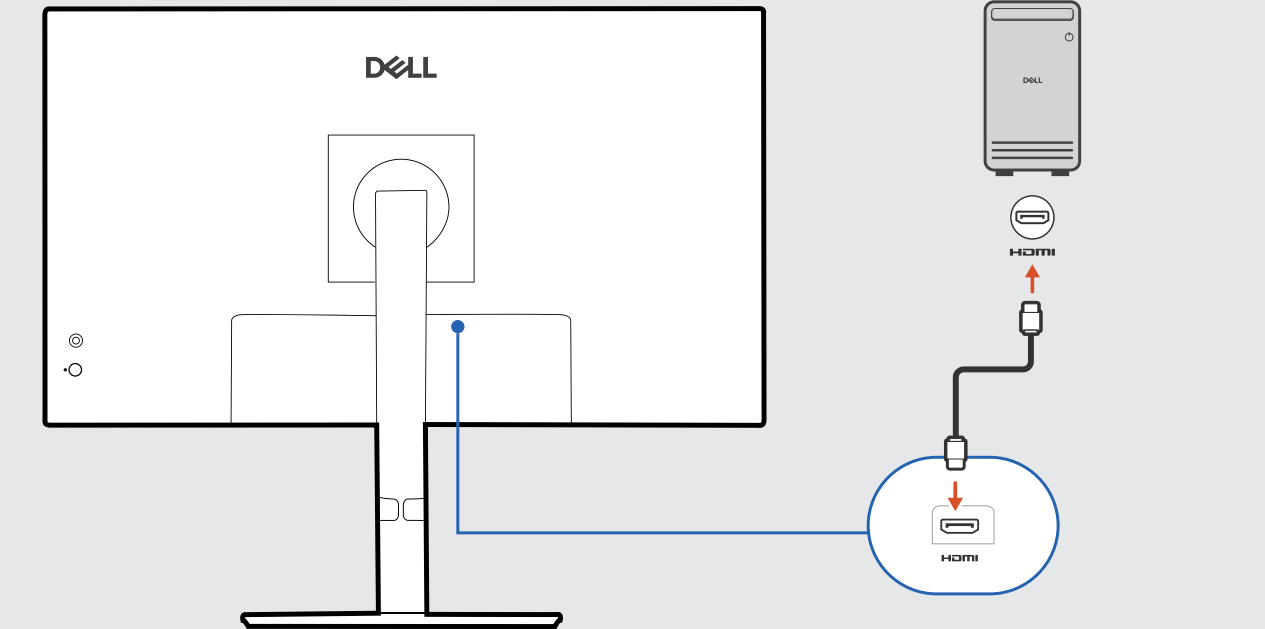




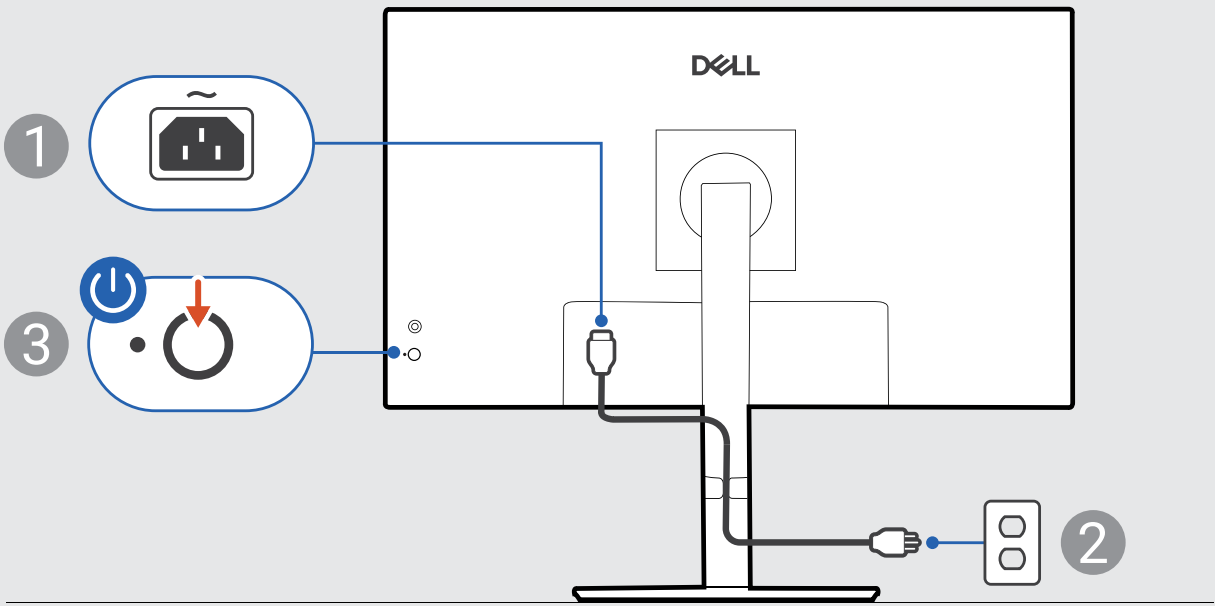


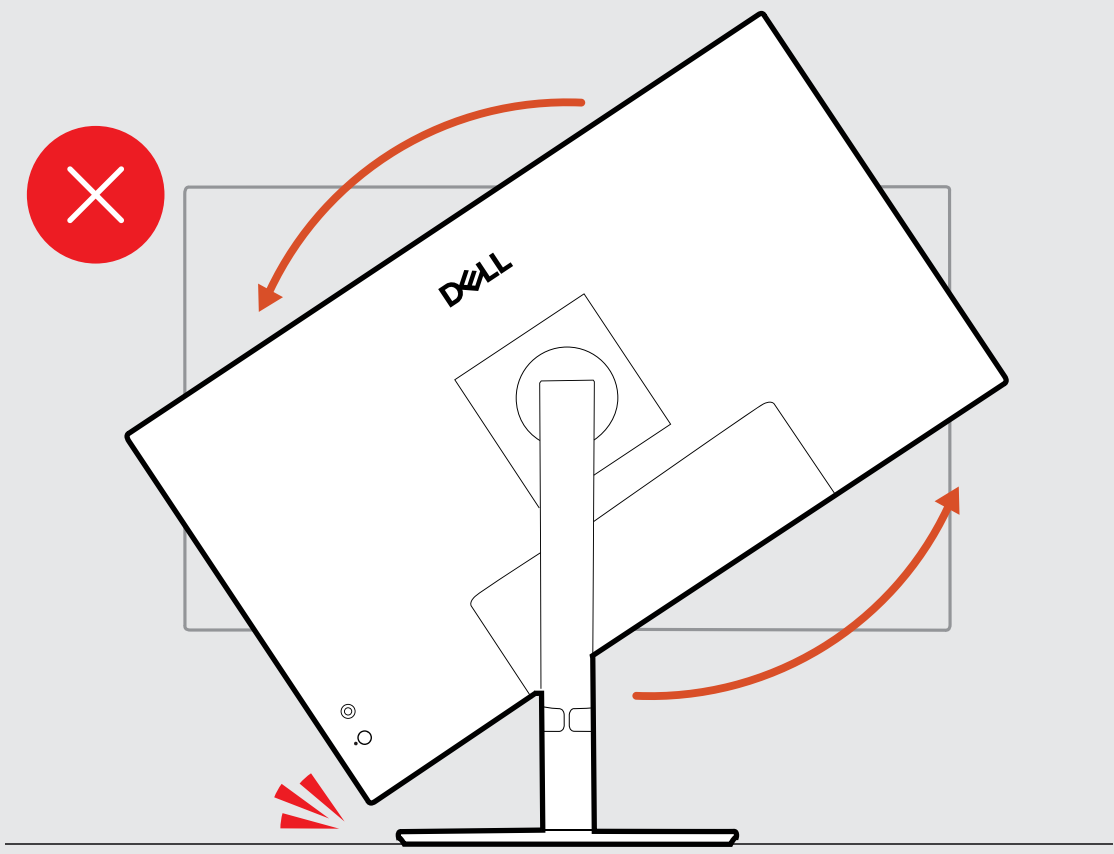



1

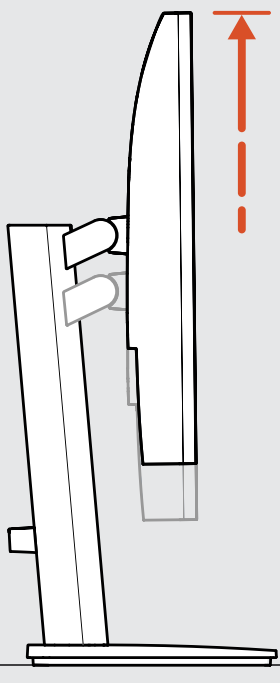


2

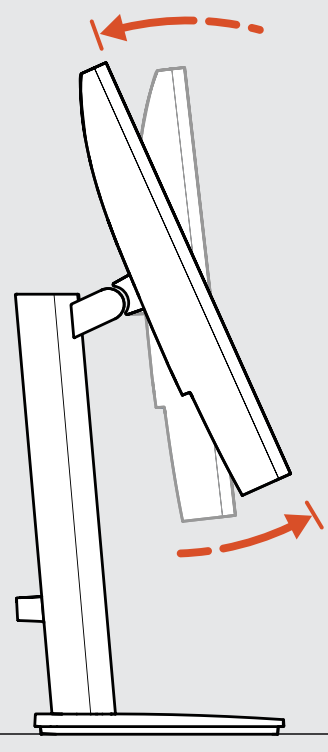


3

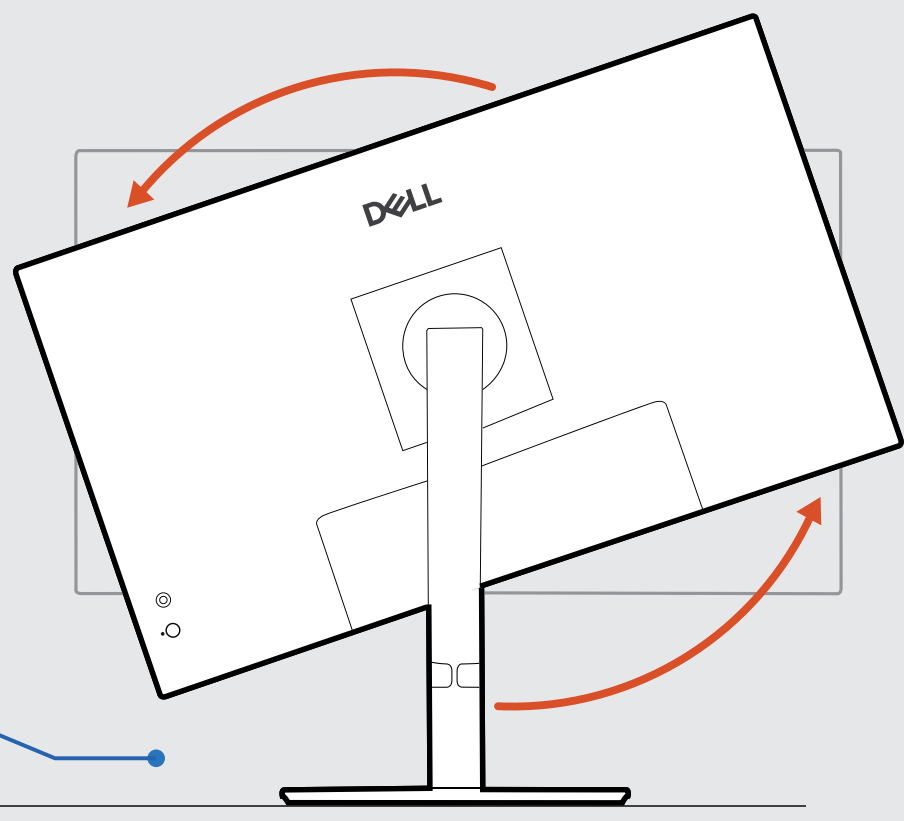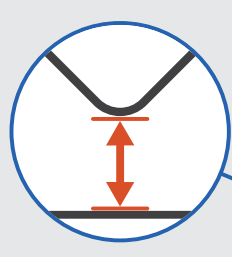

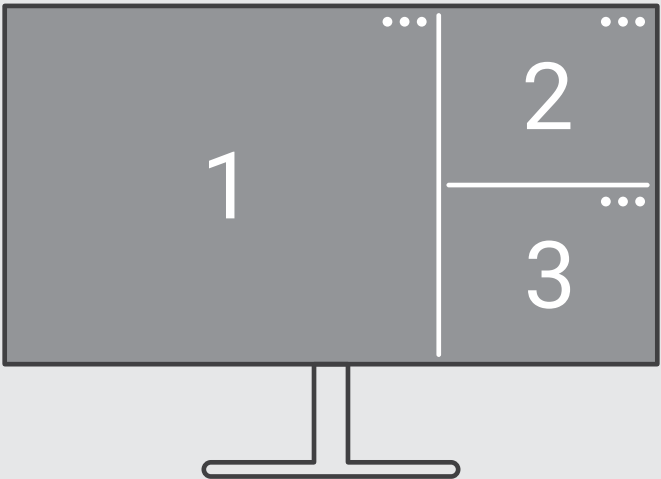

Gestor de pantallas y periféricos de Dell
Dell.com/support/ddpm

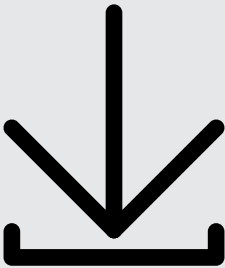

Dell.com/support/E2726DS
Dell.com/support/E2726HS