


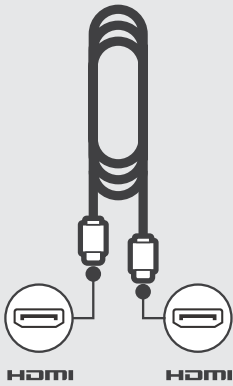


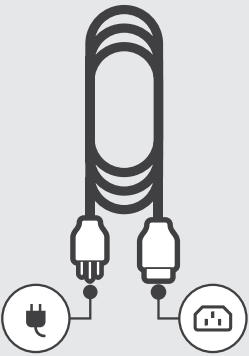



Monitor Dell Pro 27
E2726DS/E2726HS



Guia de início rápido

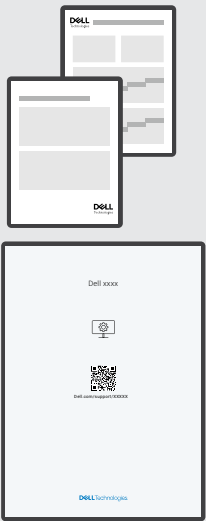


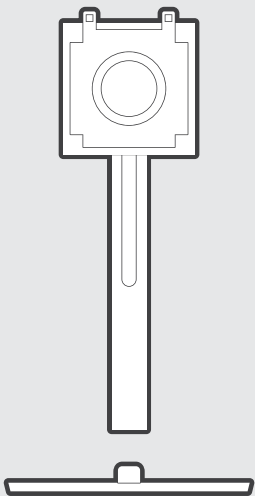


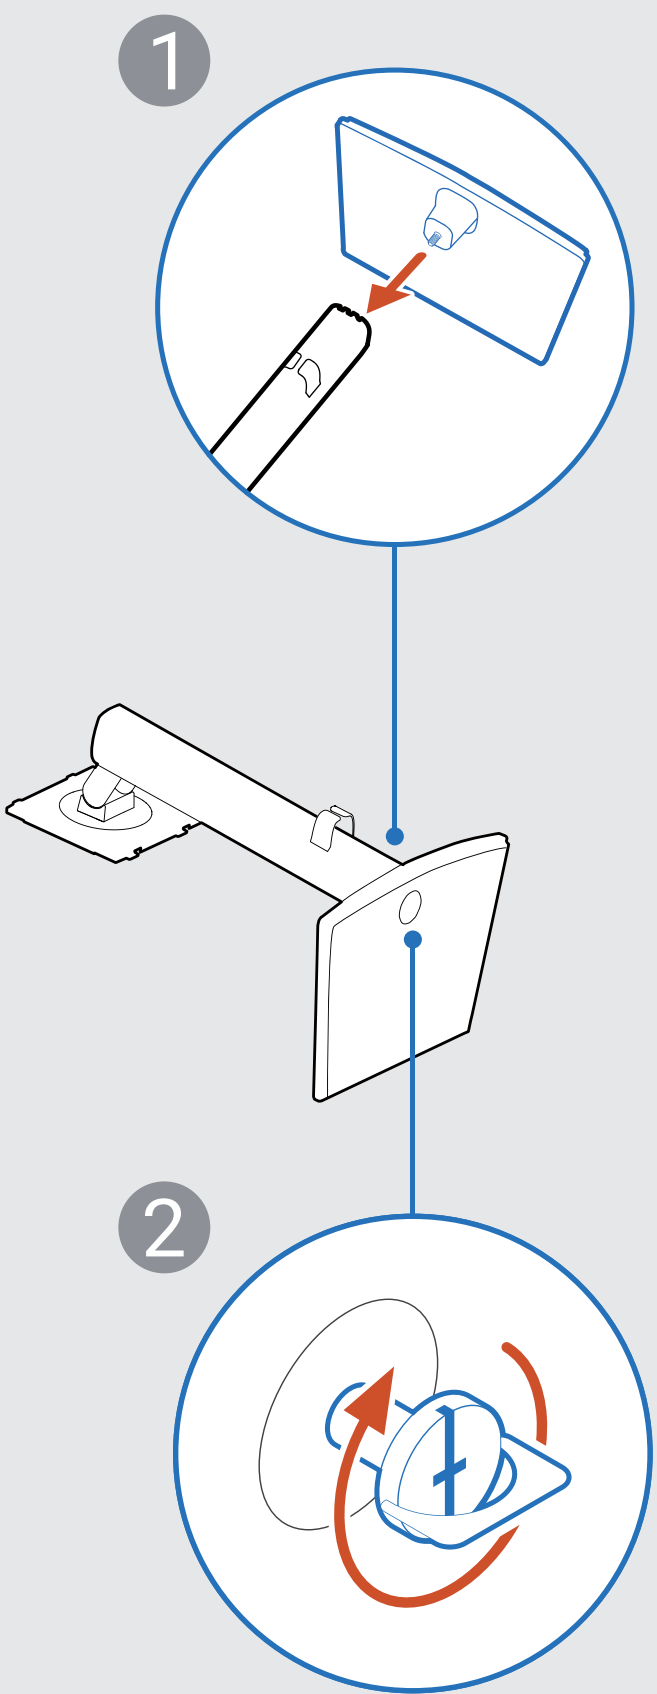


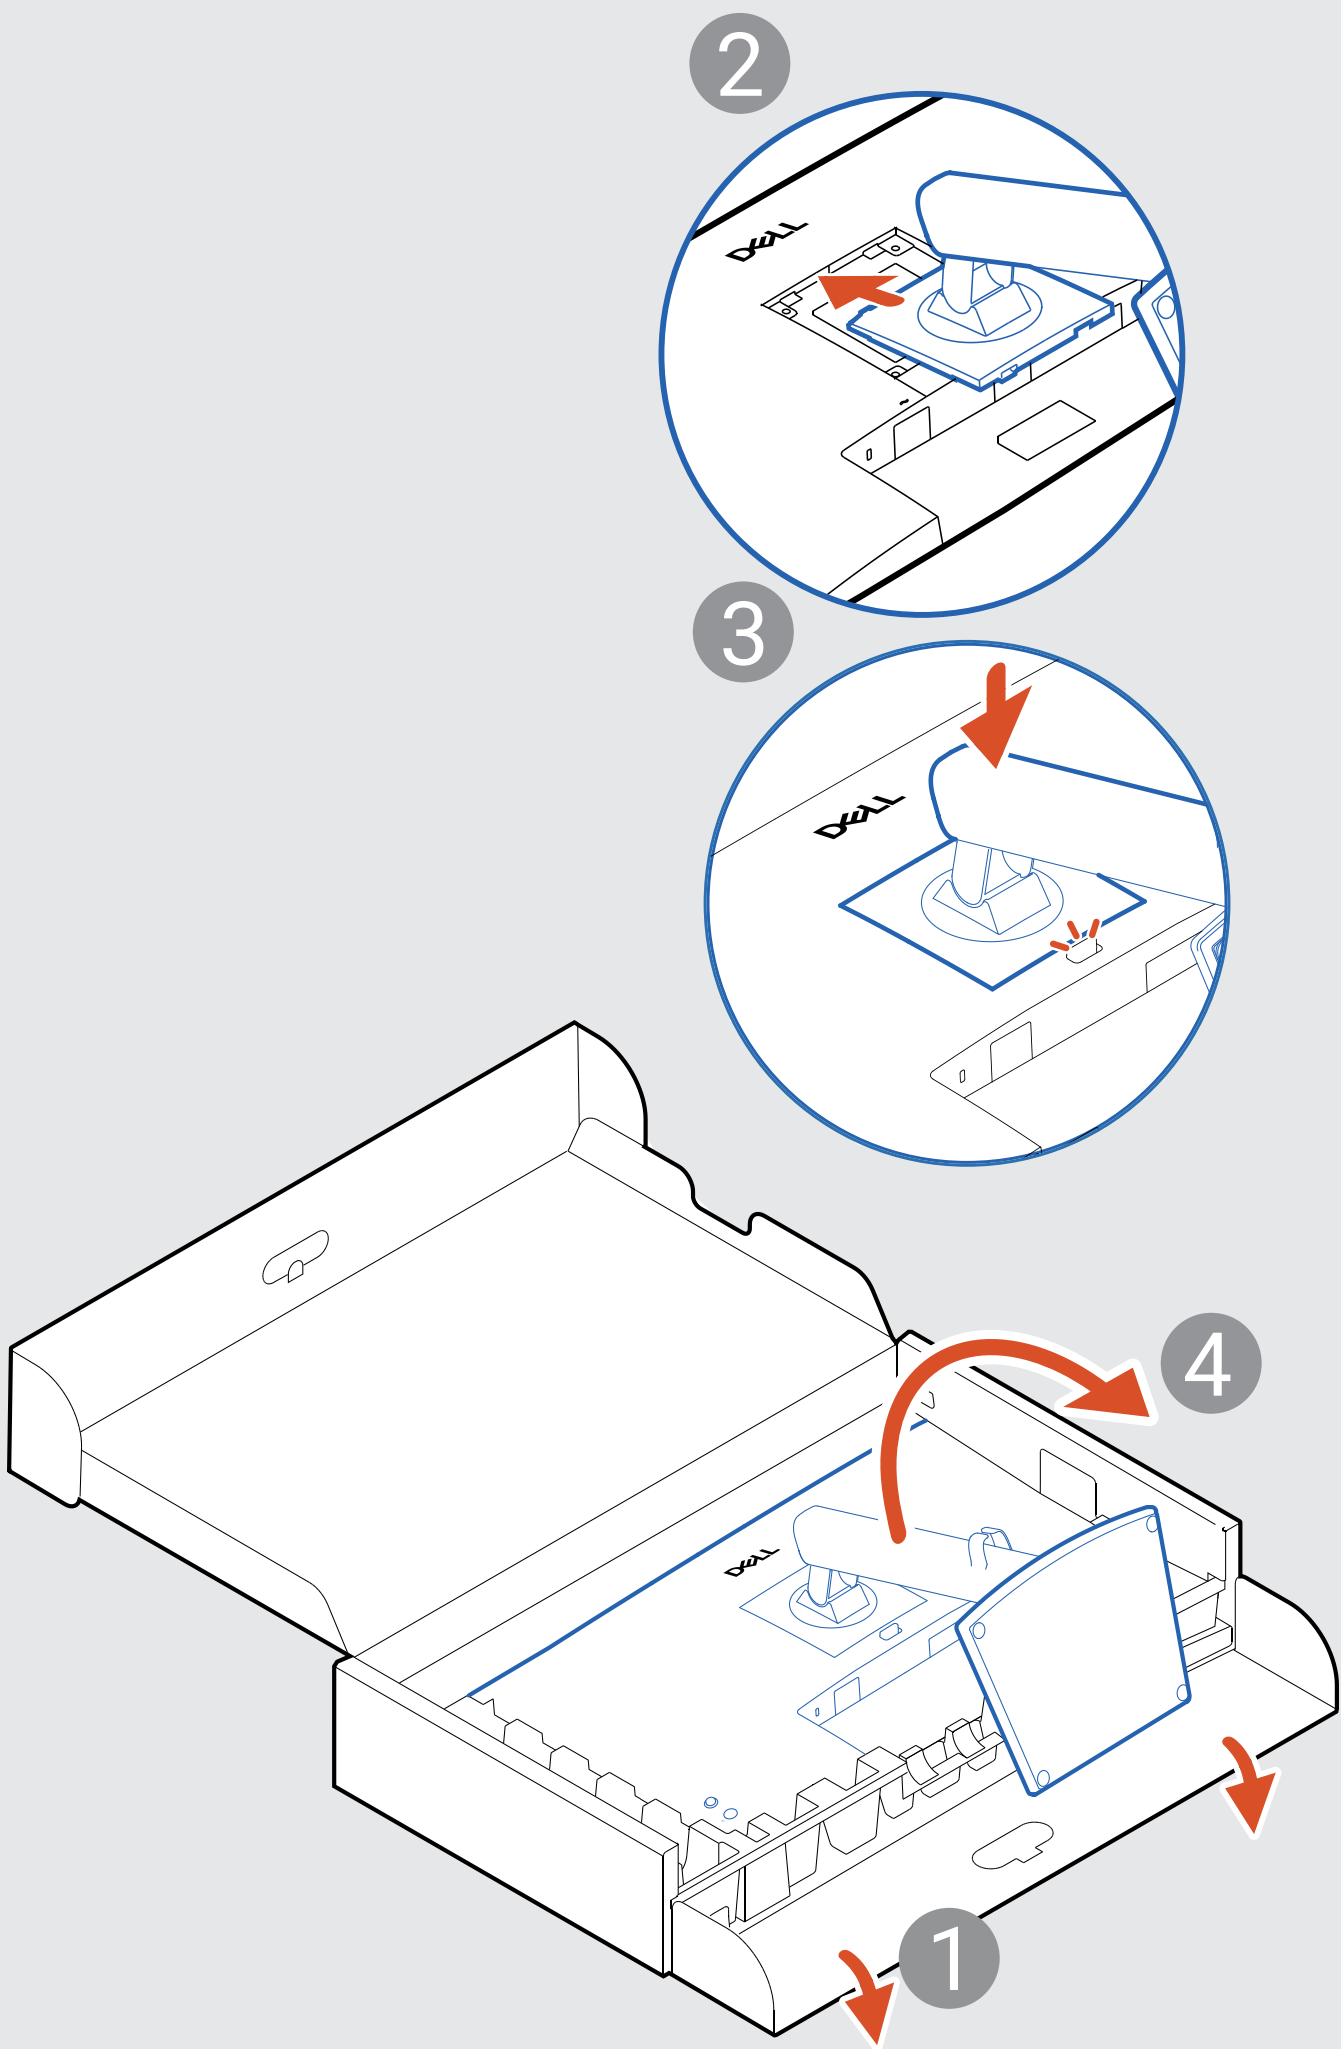


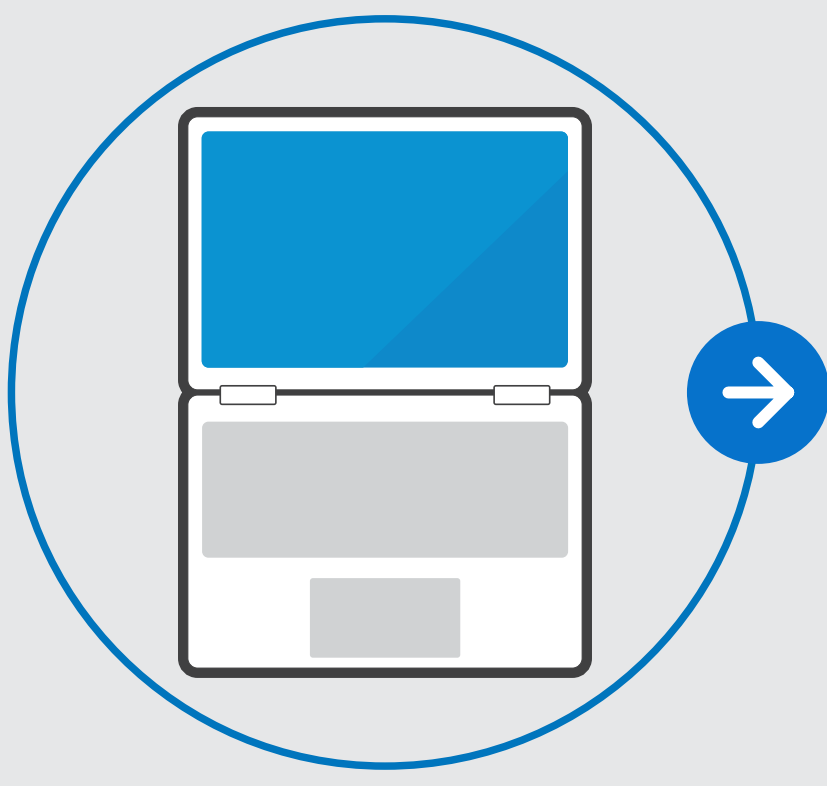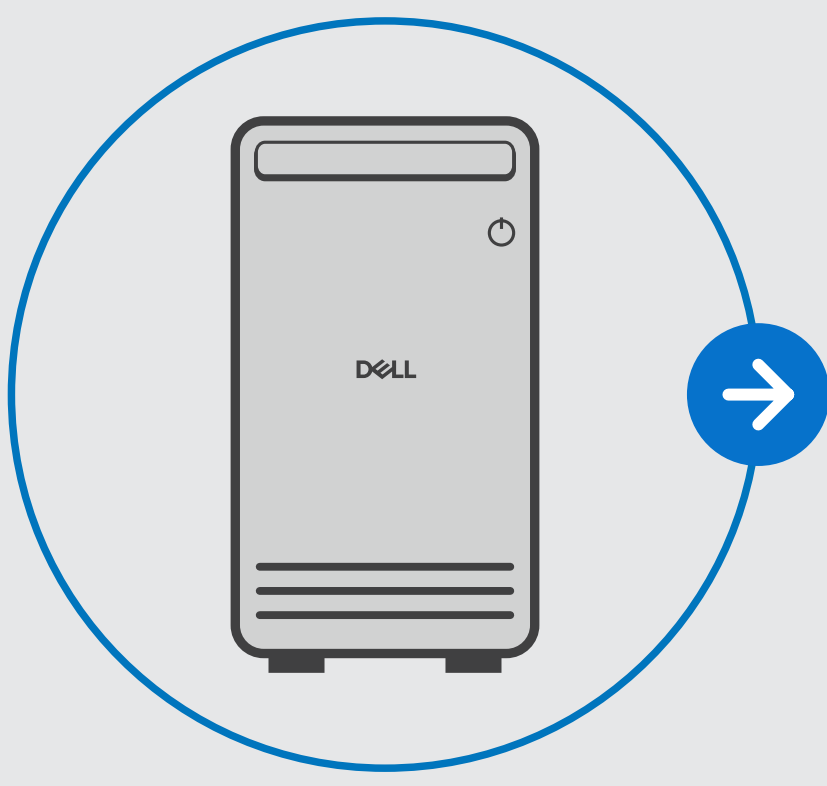

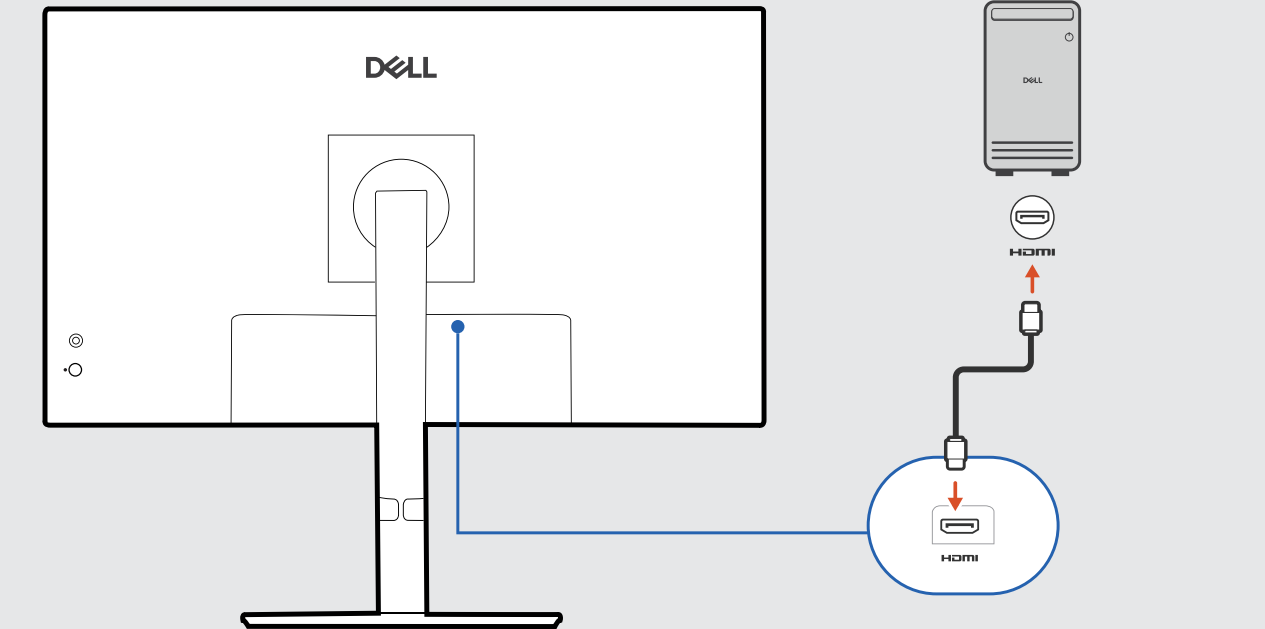


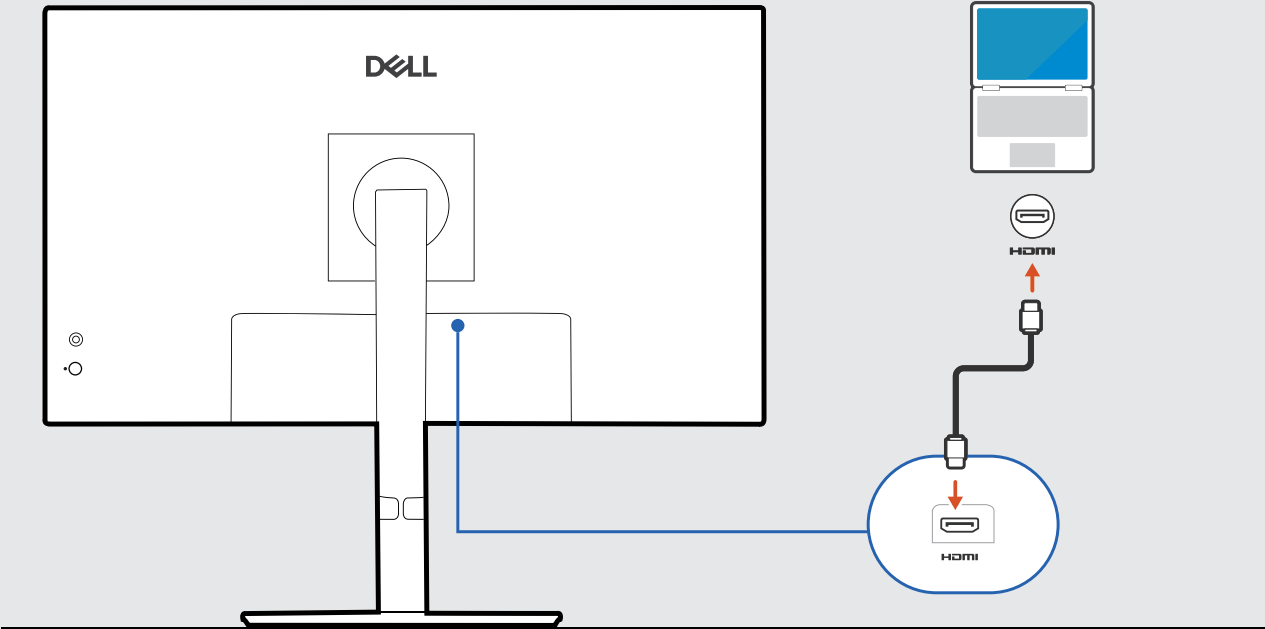

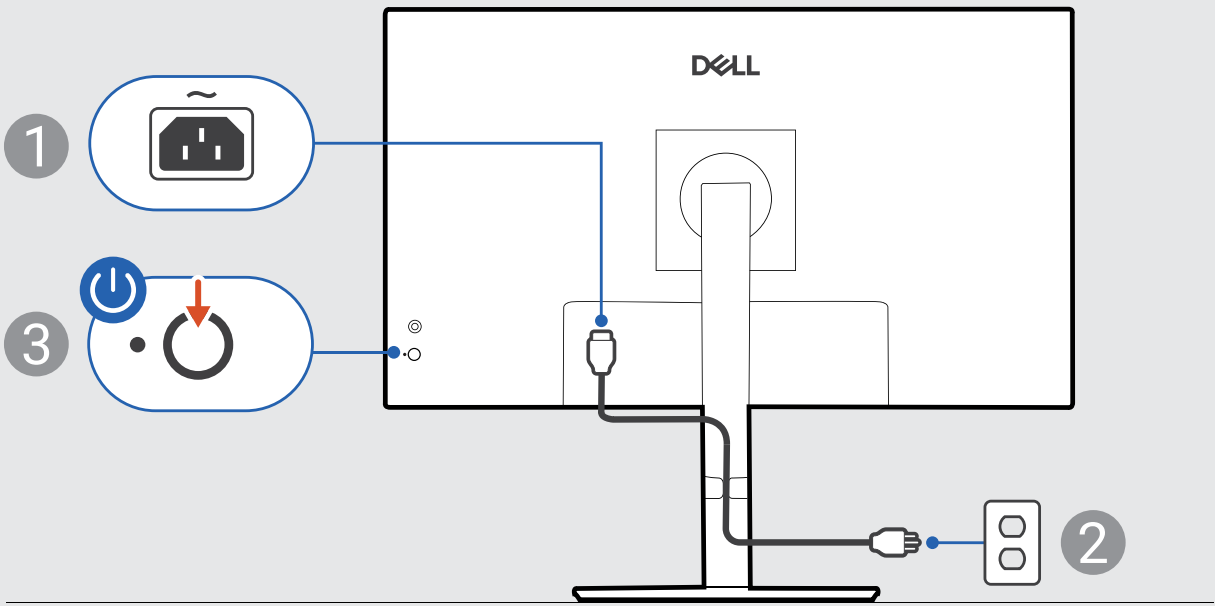


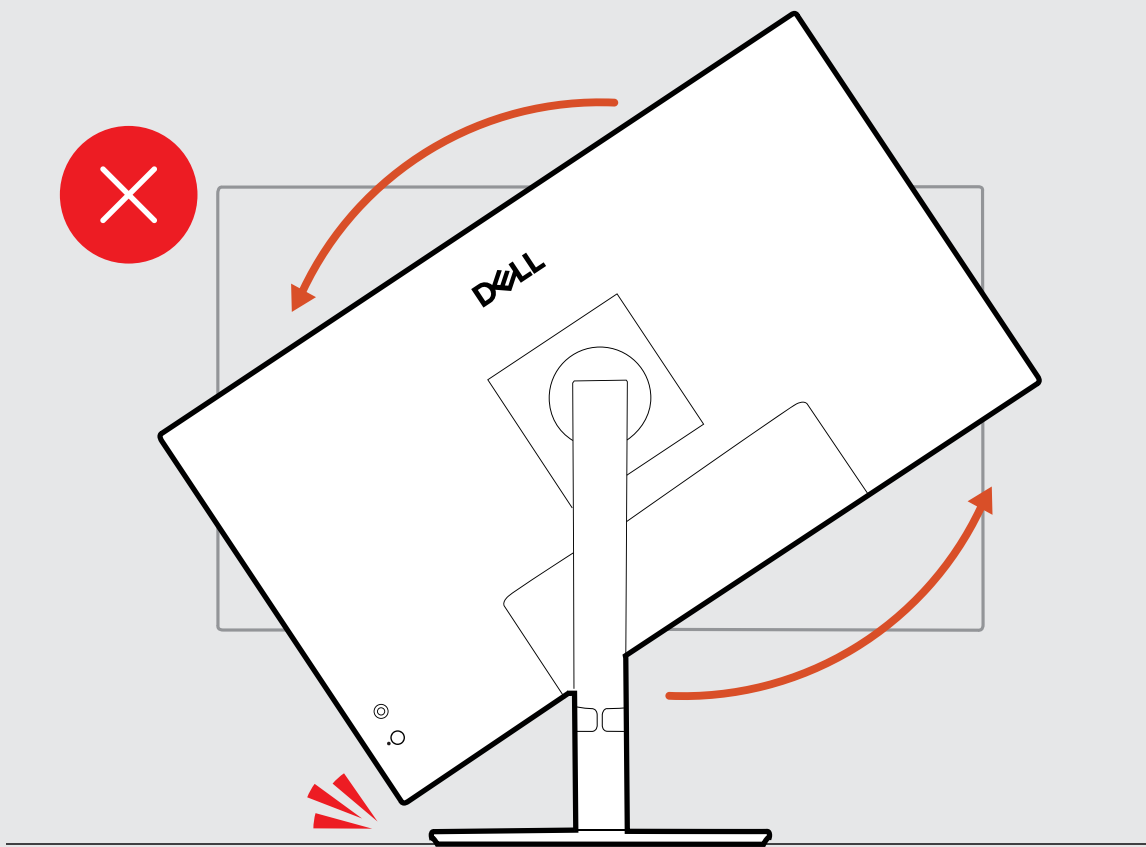



1

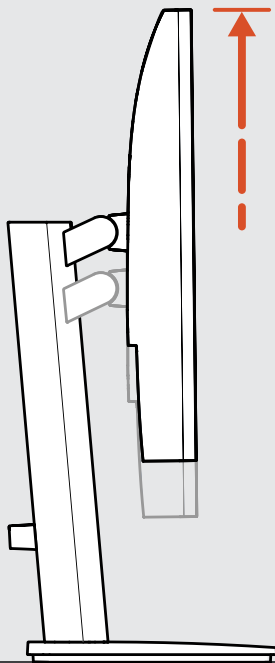


2

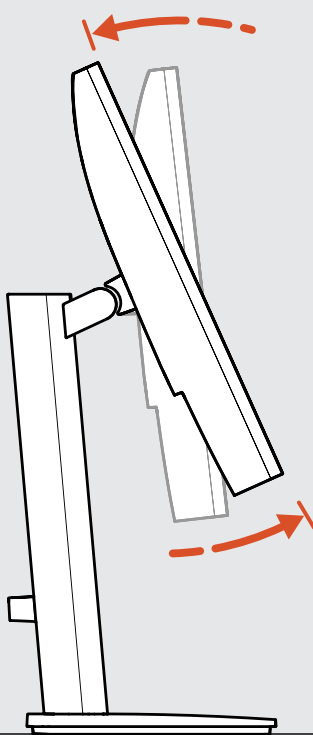


3

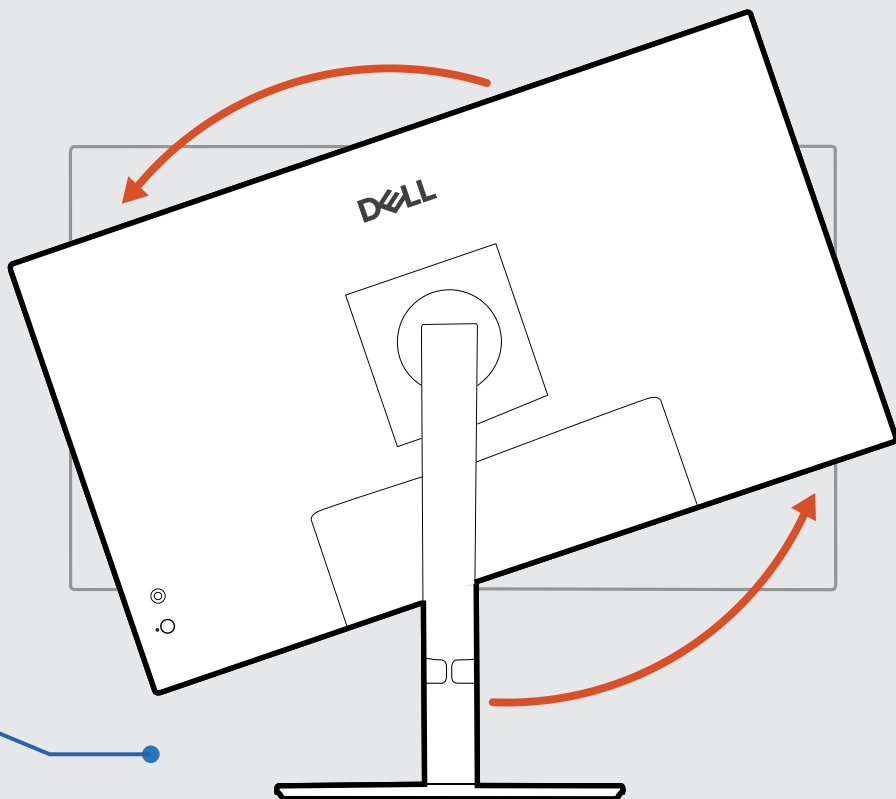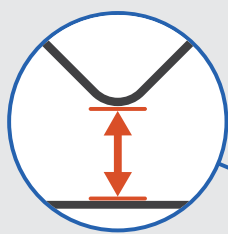

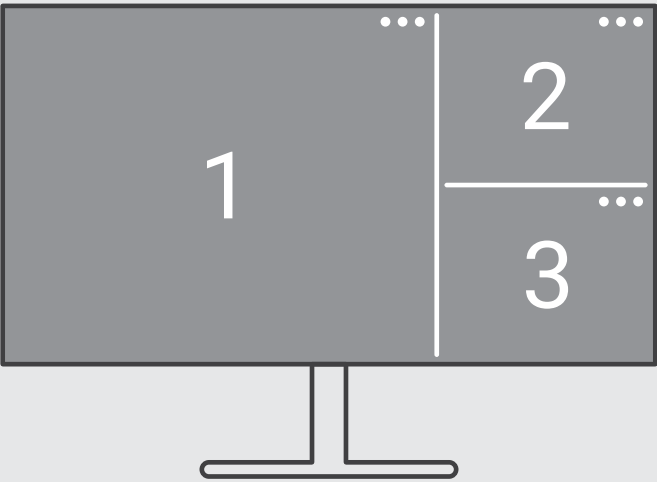

Gestor de ecrãs e periféricos Dell
Dell.com/support/ddpm

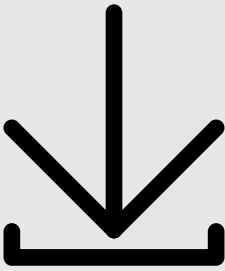

Dell.com/support/E2726DS
Dell.com/support/E2726HS